














STORAGE CABINET

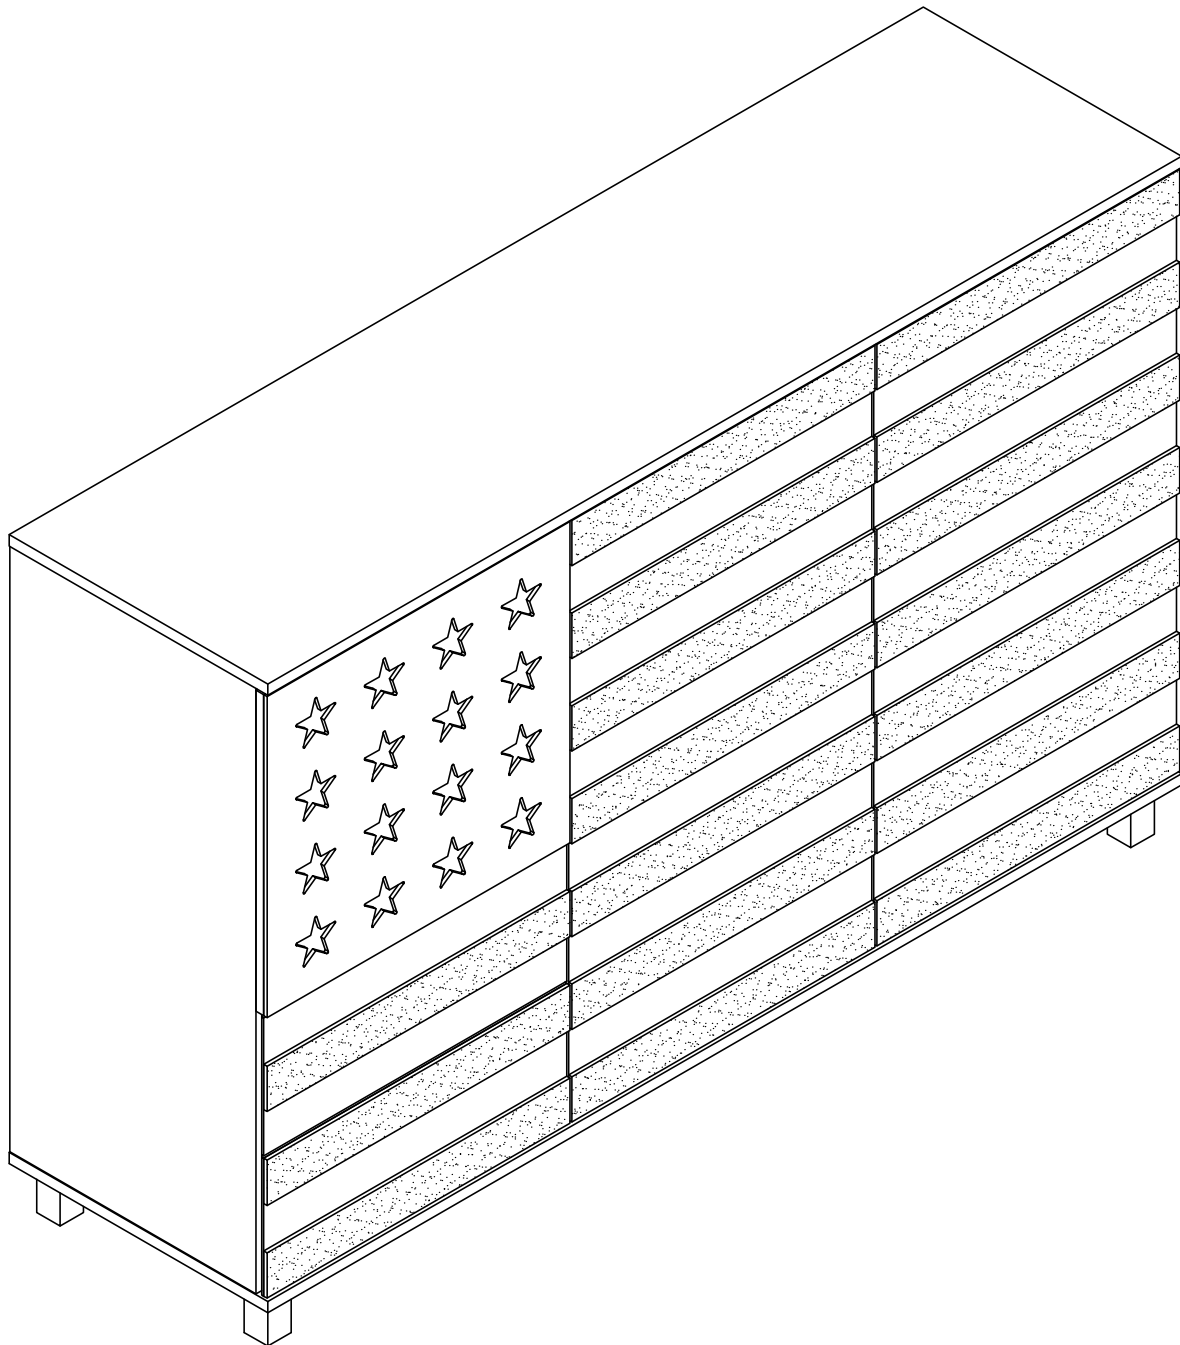


ASSEMBLY INSTRUCTIONS

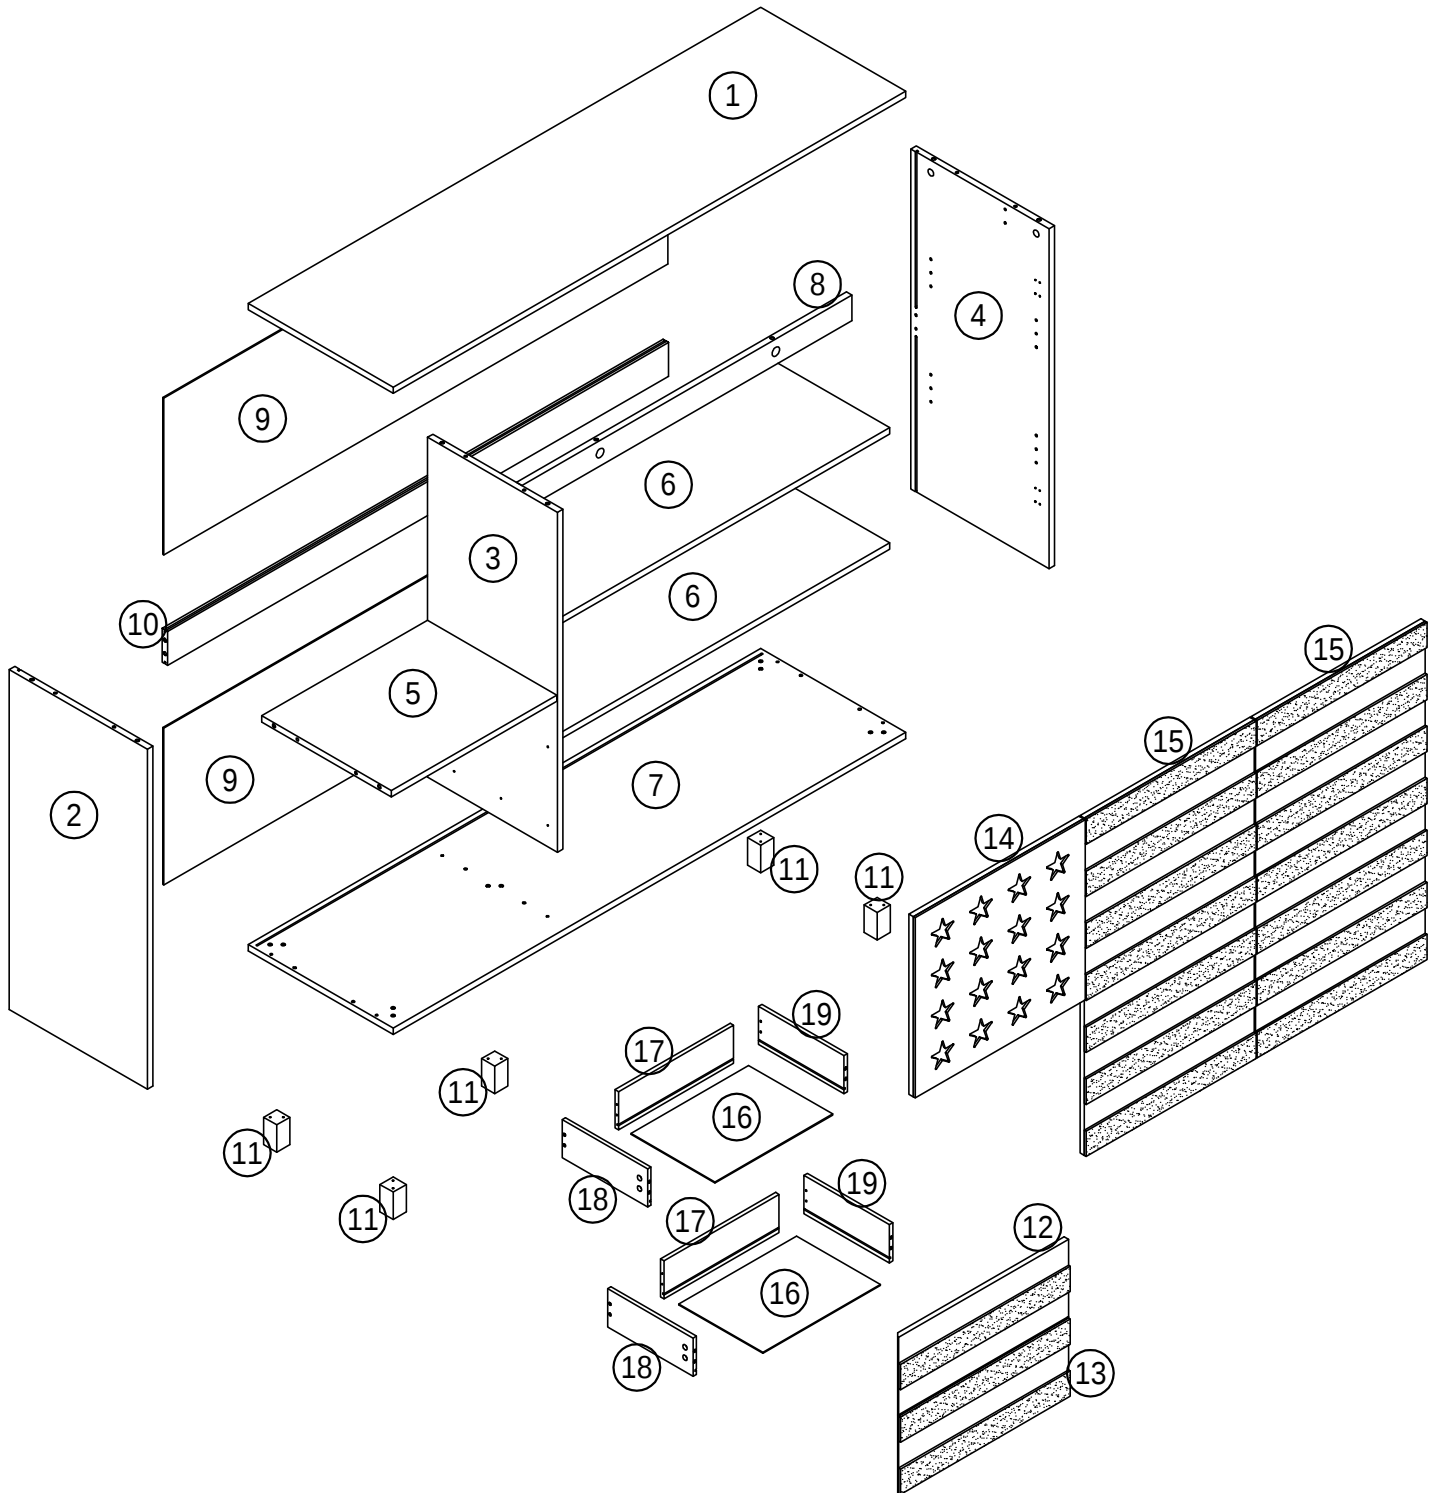

ASSEMBLY INSTRUCTIONS

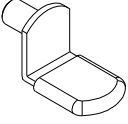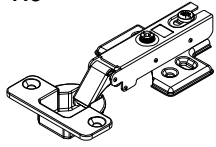
A x16  ø6x30mm spare:3	B x28  ø6x35mm spare:2	C x28  ø15x10mm spare:2	D x25  ø5x38mm spare:2	E x12 ø6x3x16mm  spare:1
F x29  ø6xø3x12mm spare:4	G x8  spare:1	H x2  spare:2	I x6  spare:2	J L=300mm CR DR DL CL 2 sets 
K x3  spare:3	L x36  ø3.5x14mm spare:3	M x28  ø20mm spare:2		

ASSEMBLY INSTRUCTIONS

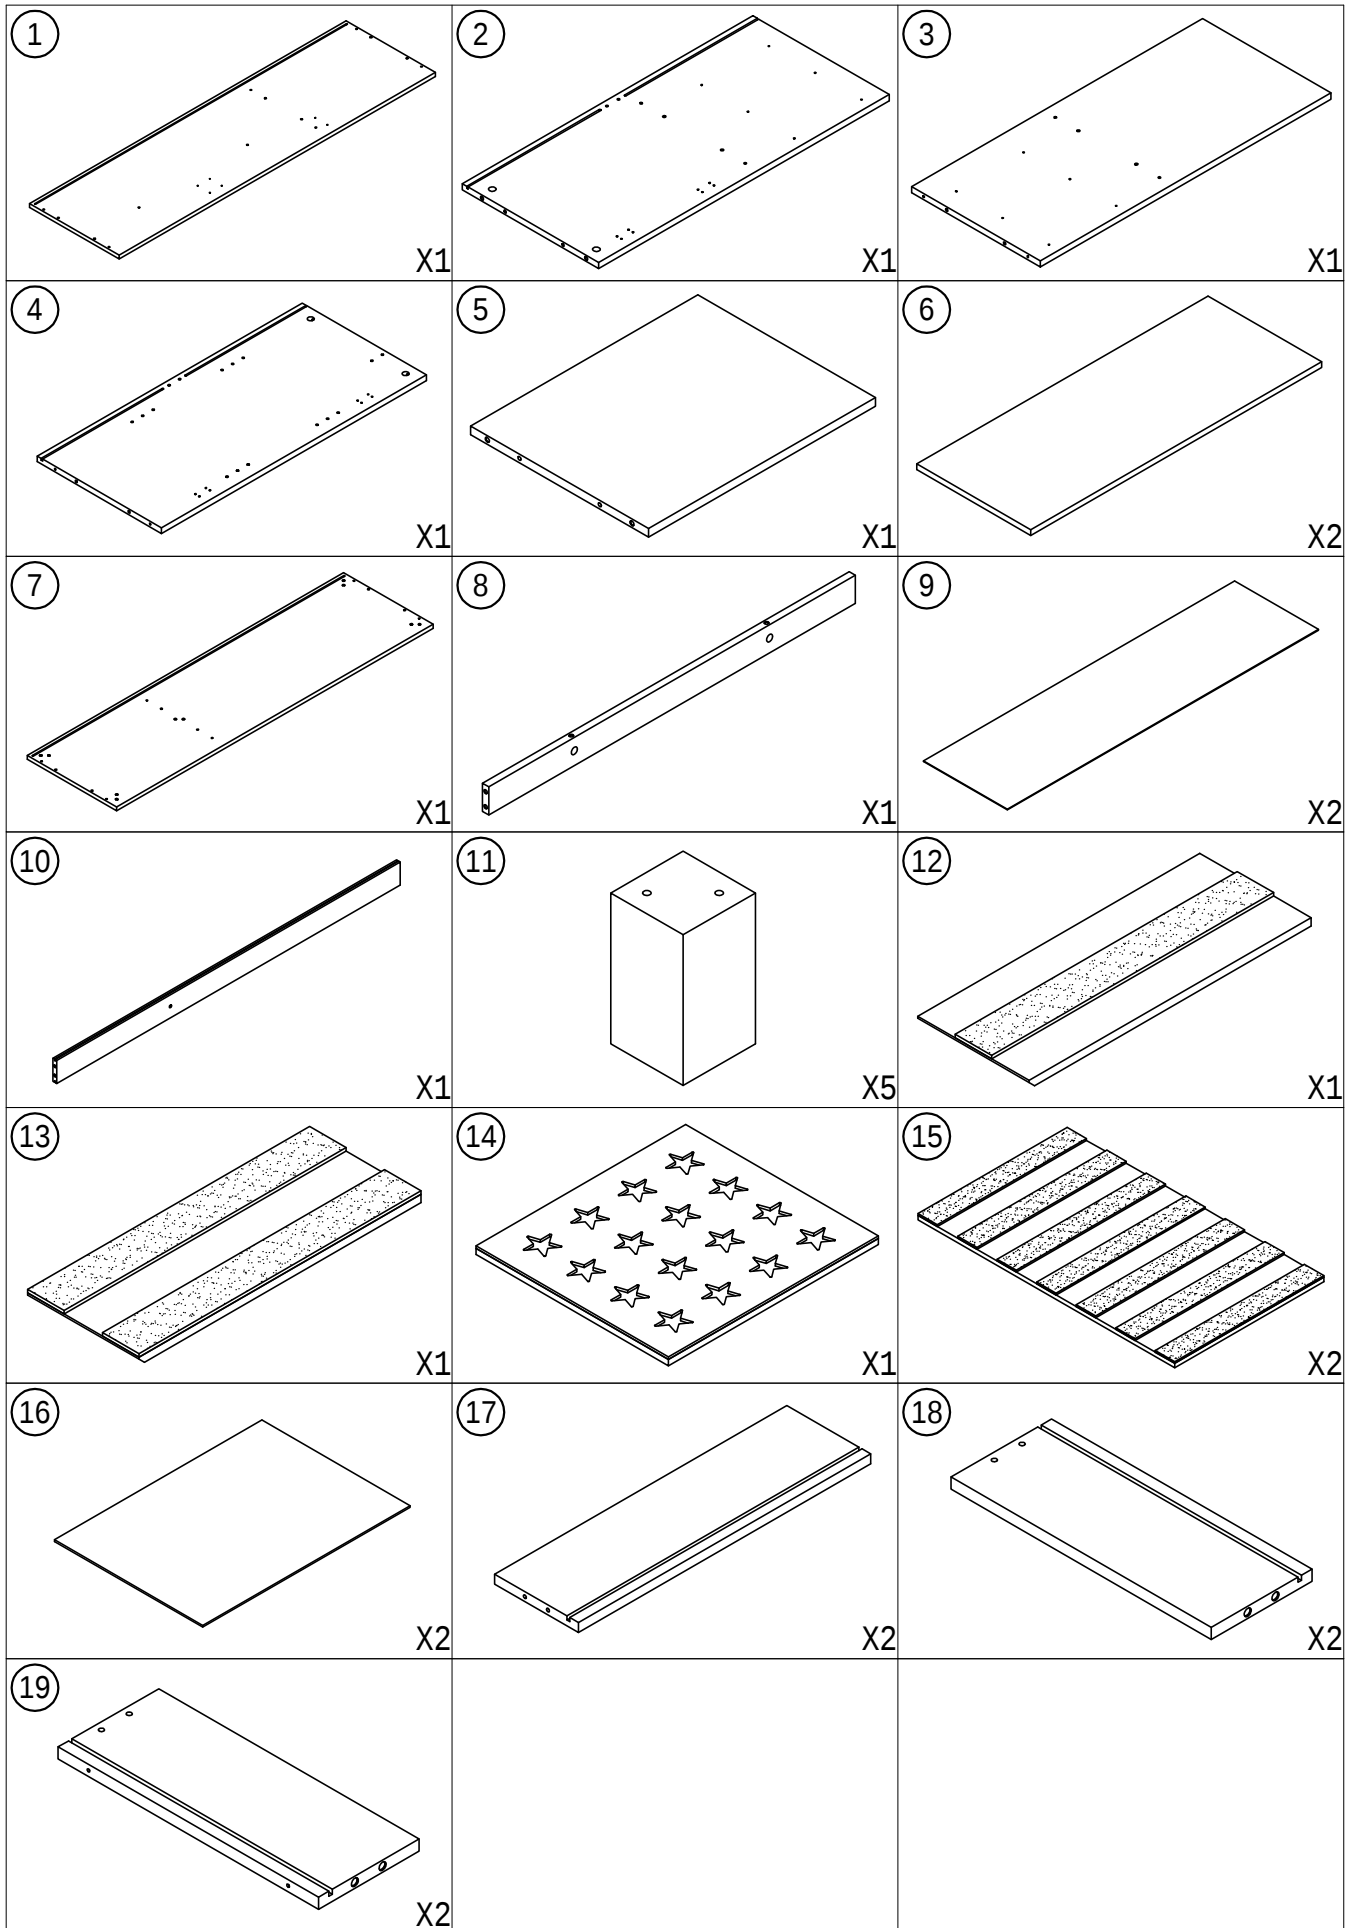

INSTALLATION


STEP 1

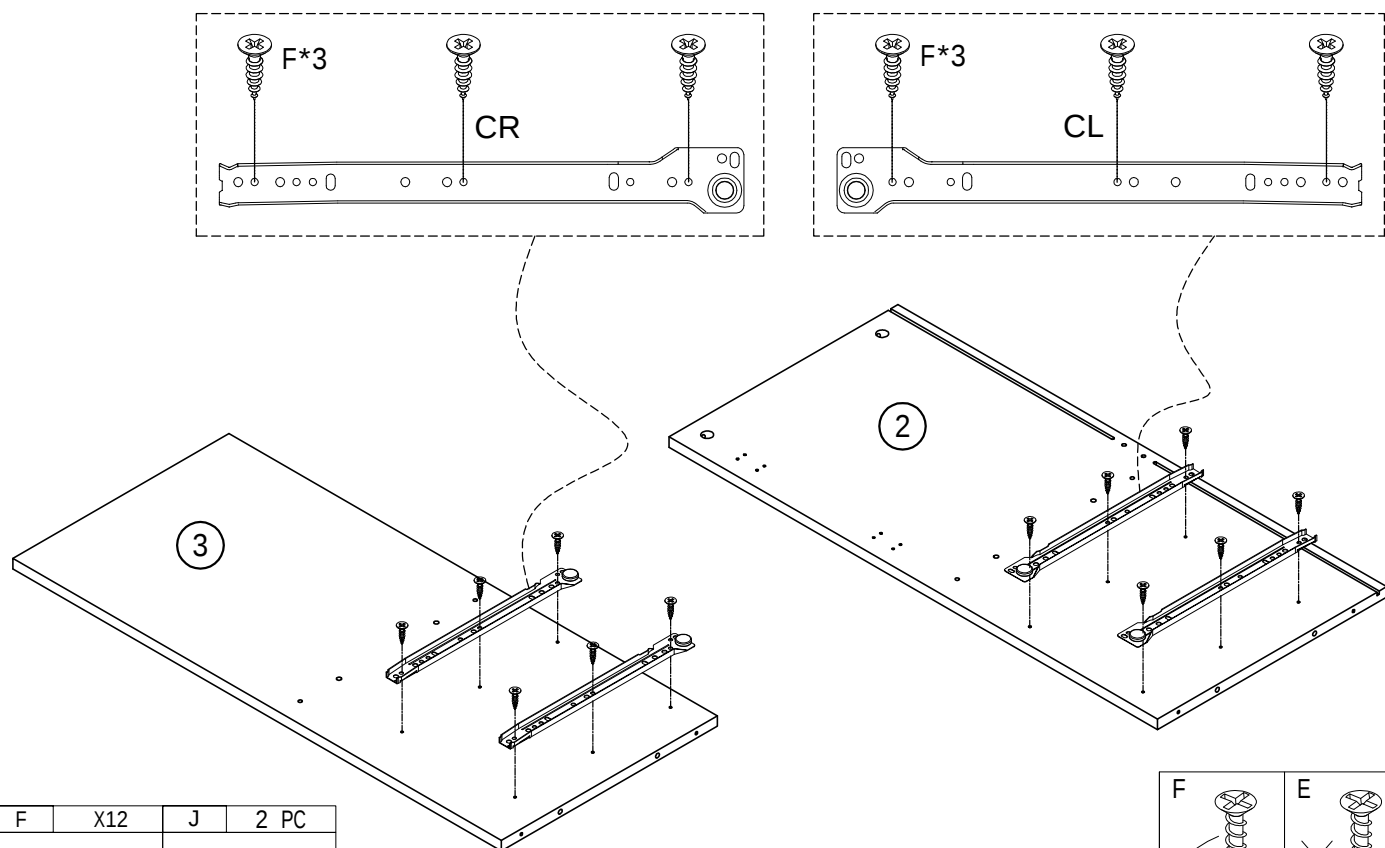


F	X12	J	2 PC
			CR
			CL

F		E	
	✓		✗
	Ø6xφ3x12		Ø6xφ3x16

STEP 2

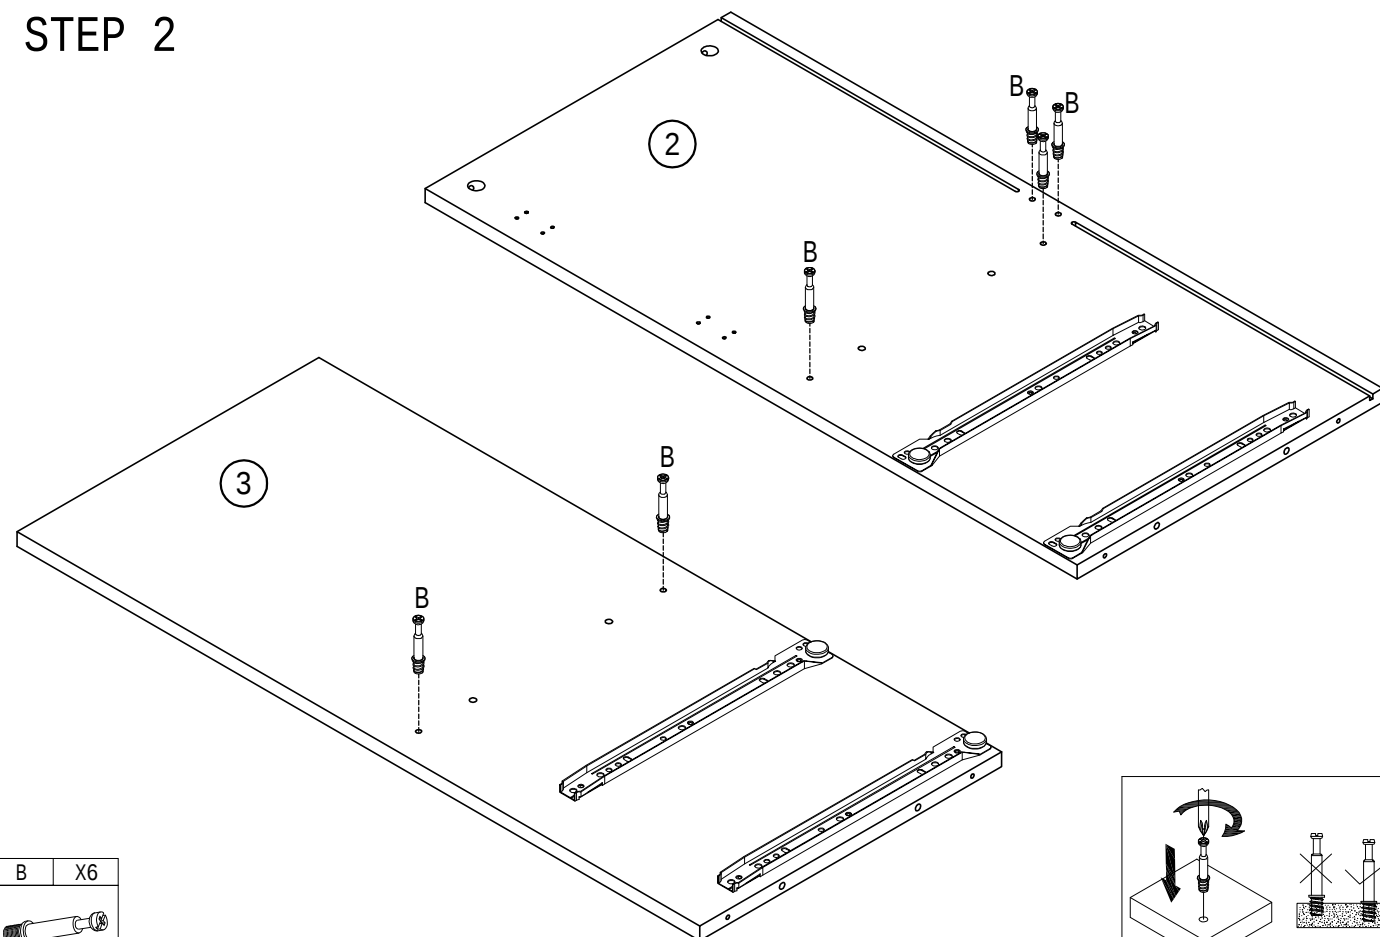


B	X6

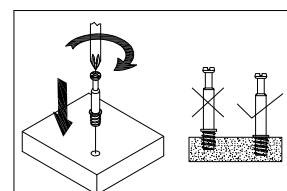


INSTALLATION


STEP 3

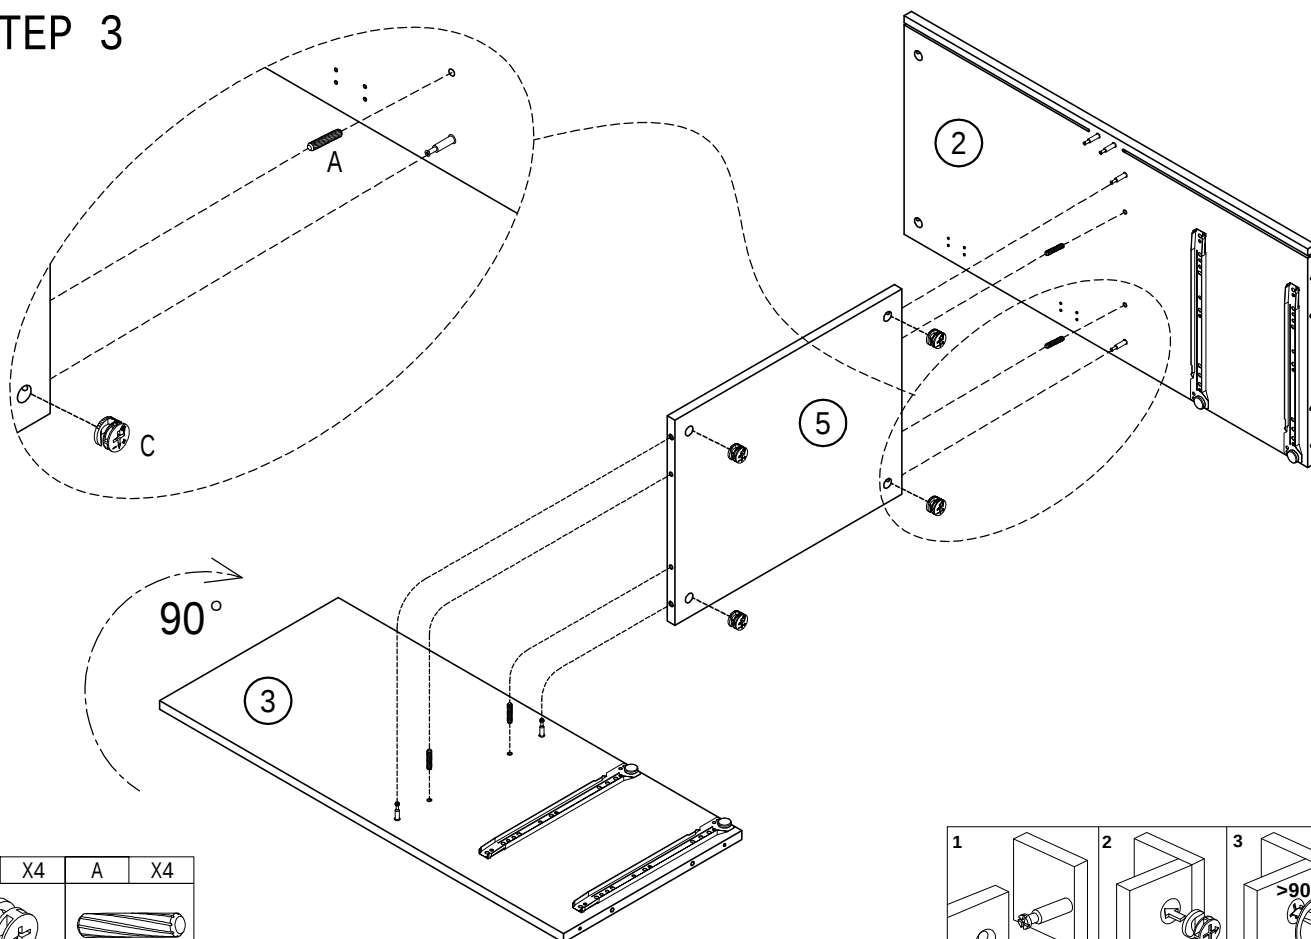


C	X4	A	X4

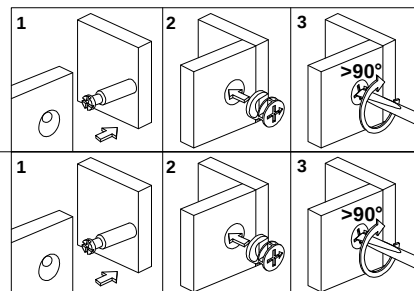

STEP 4



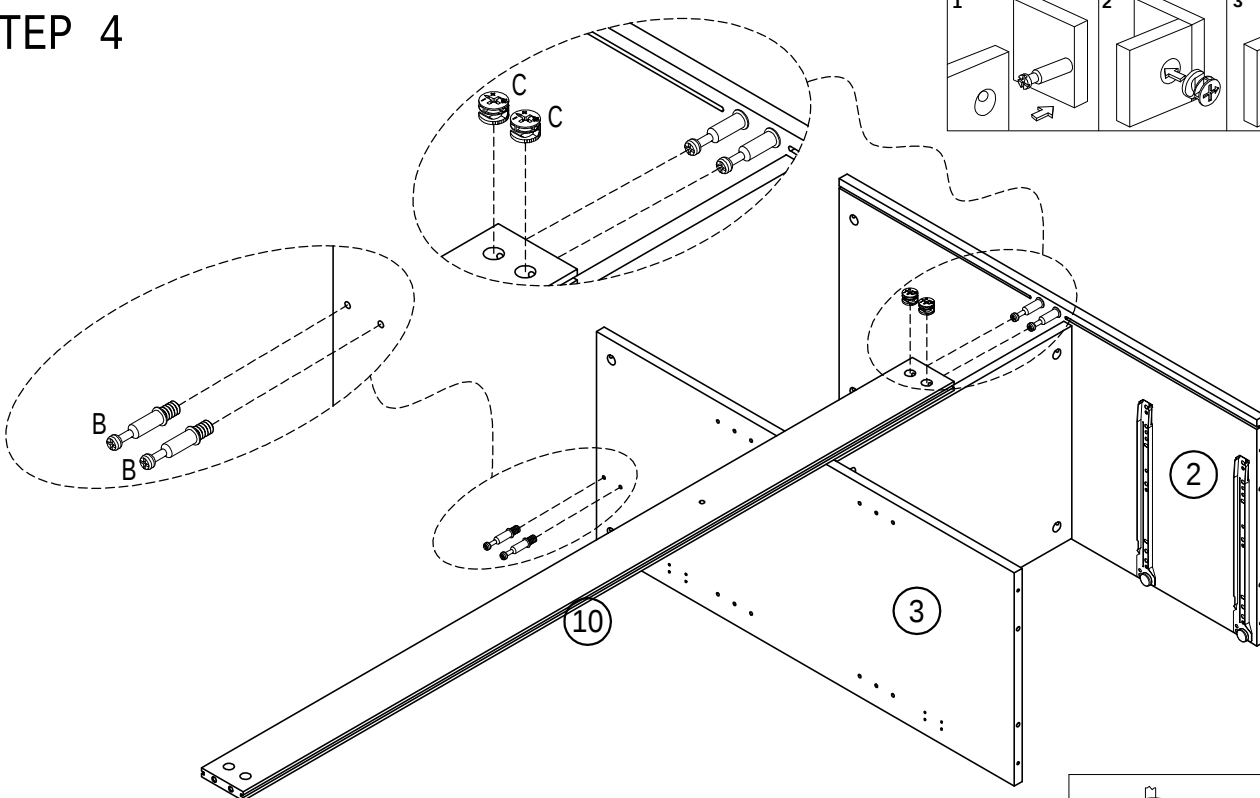


C	X2	B	X2



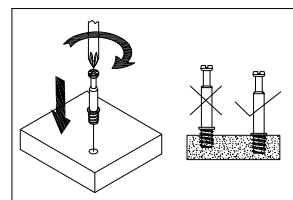


INSTALLATION

STEP 5

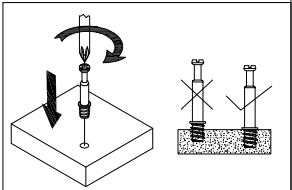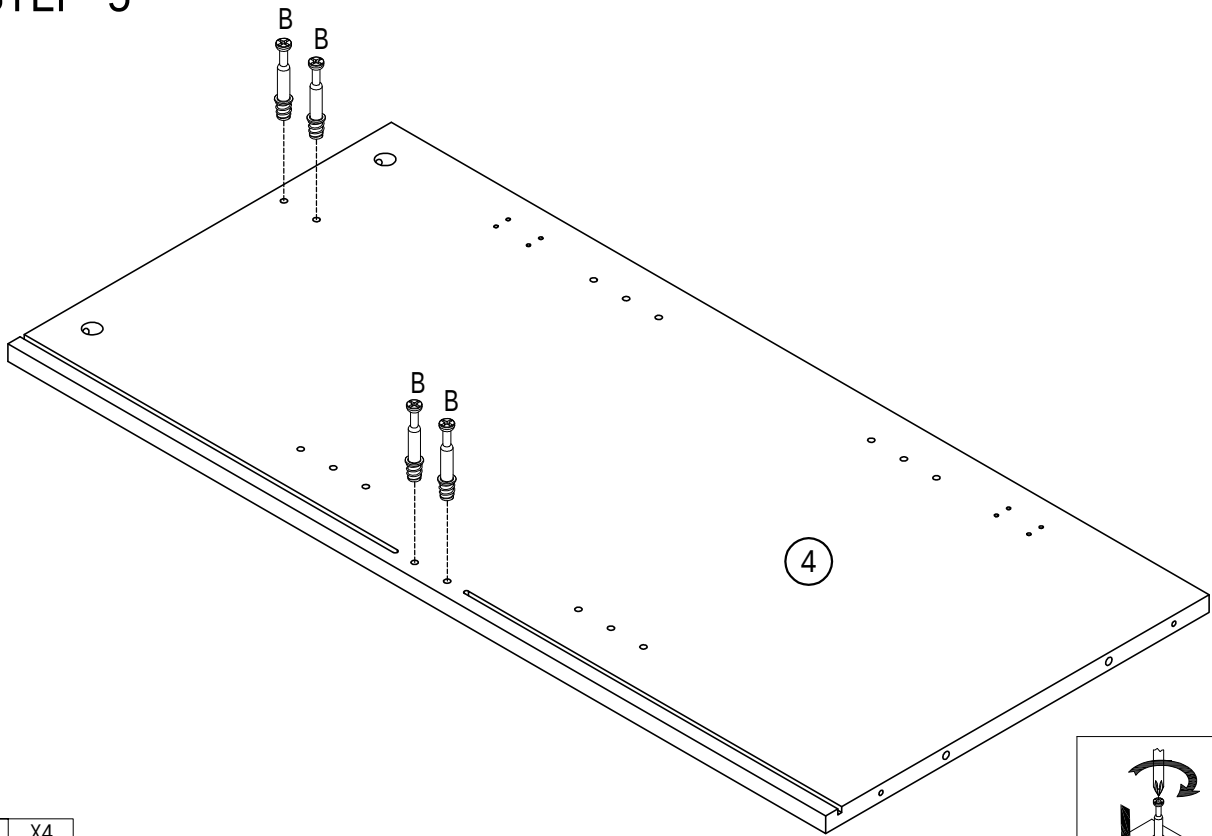

STEP 6

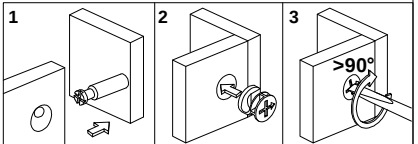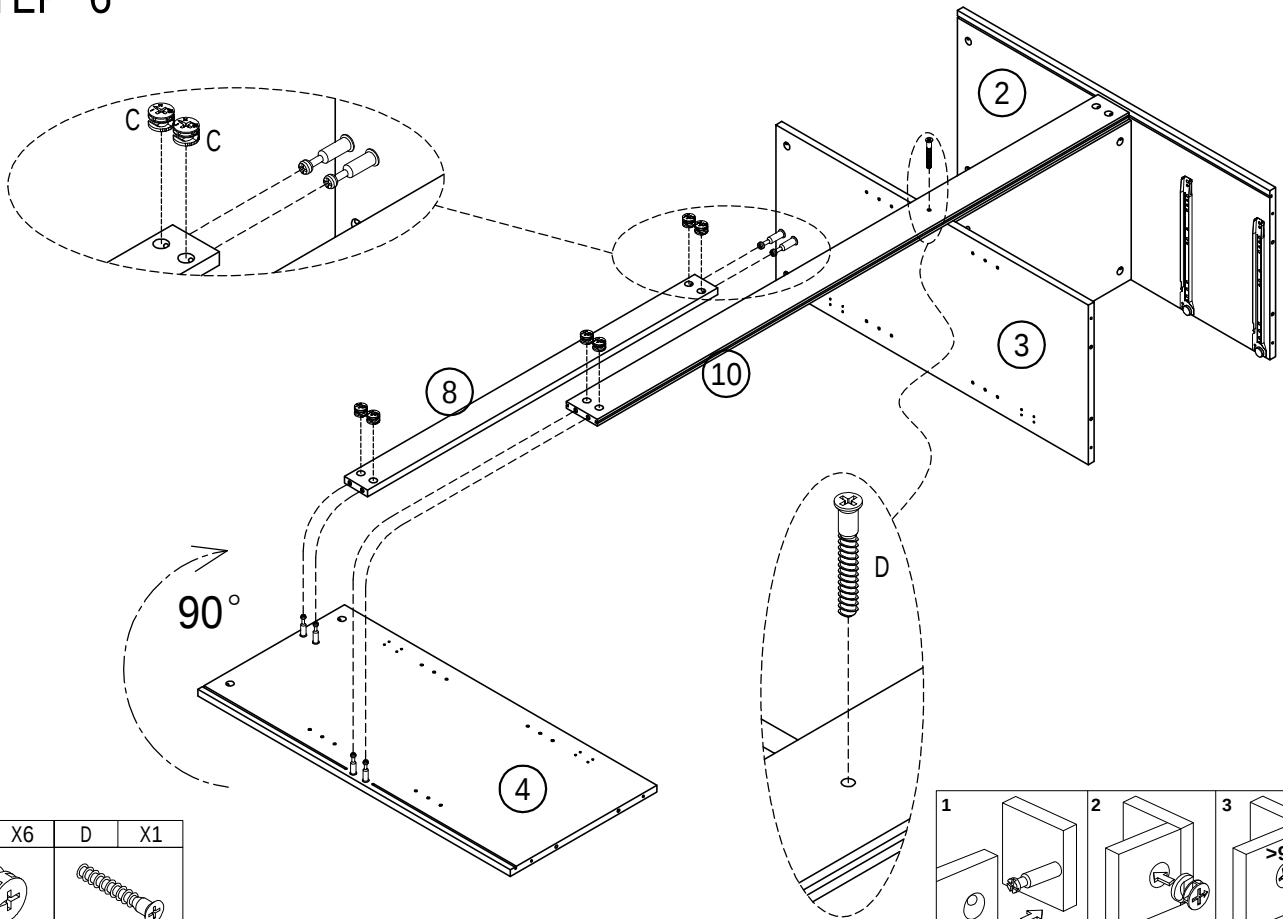

STEP 7

STEP 8

STEP 9

STEP 10

STEP 11

STEP 12

STEP 13

STEP 14

STEP 15

STEP 16

STEP 17

STEP 18

STEP 19

STEP 20

STEP 21

STEP 22

STEP 23

STEP 24

STEP 25

STEP 26

STEP 27

STEP 28

STEP 29

STEP 30

STEP 31

STEP 32

STEP 33

STEP 34

STEP 35

STEP 36

STEP 37



STEP 38

STEP 39

STEP 40

STEP 41


STEP 8

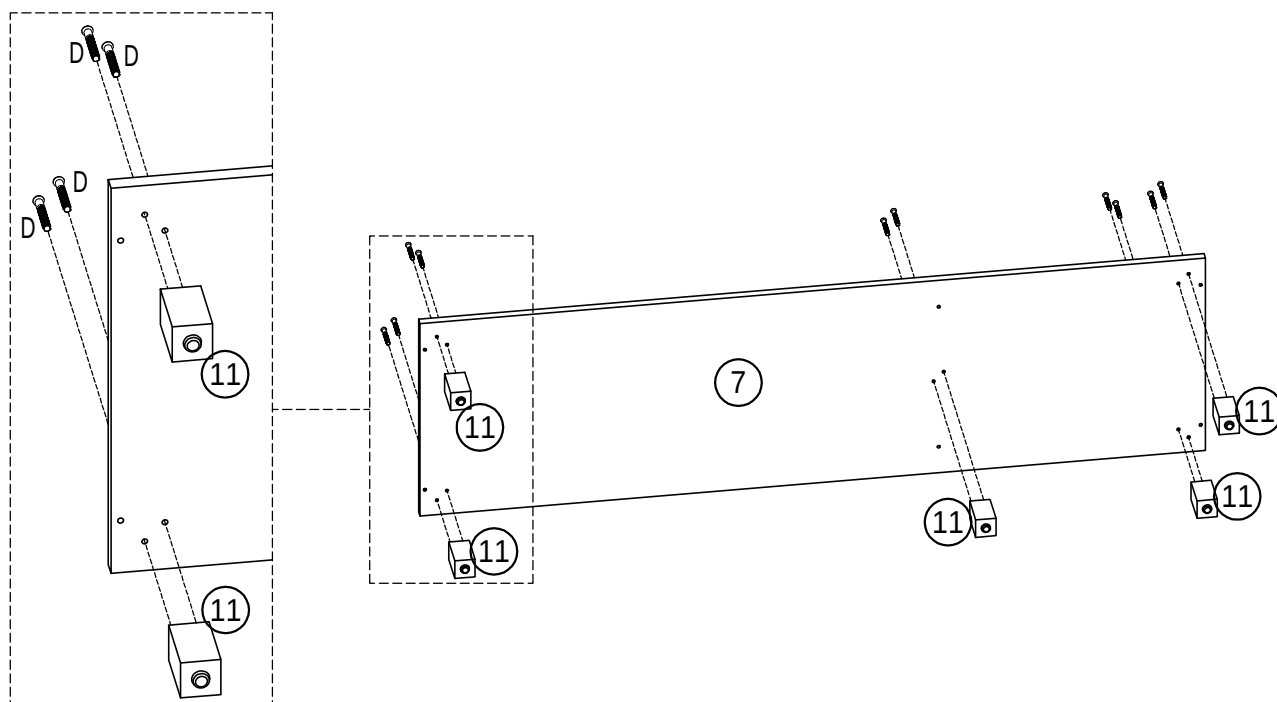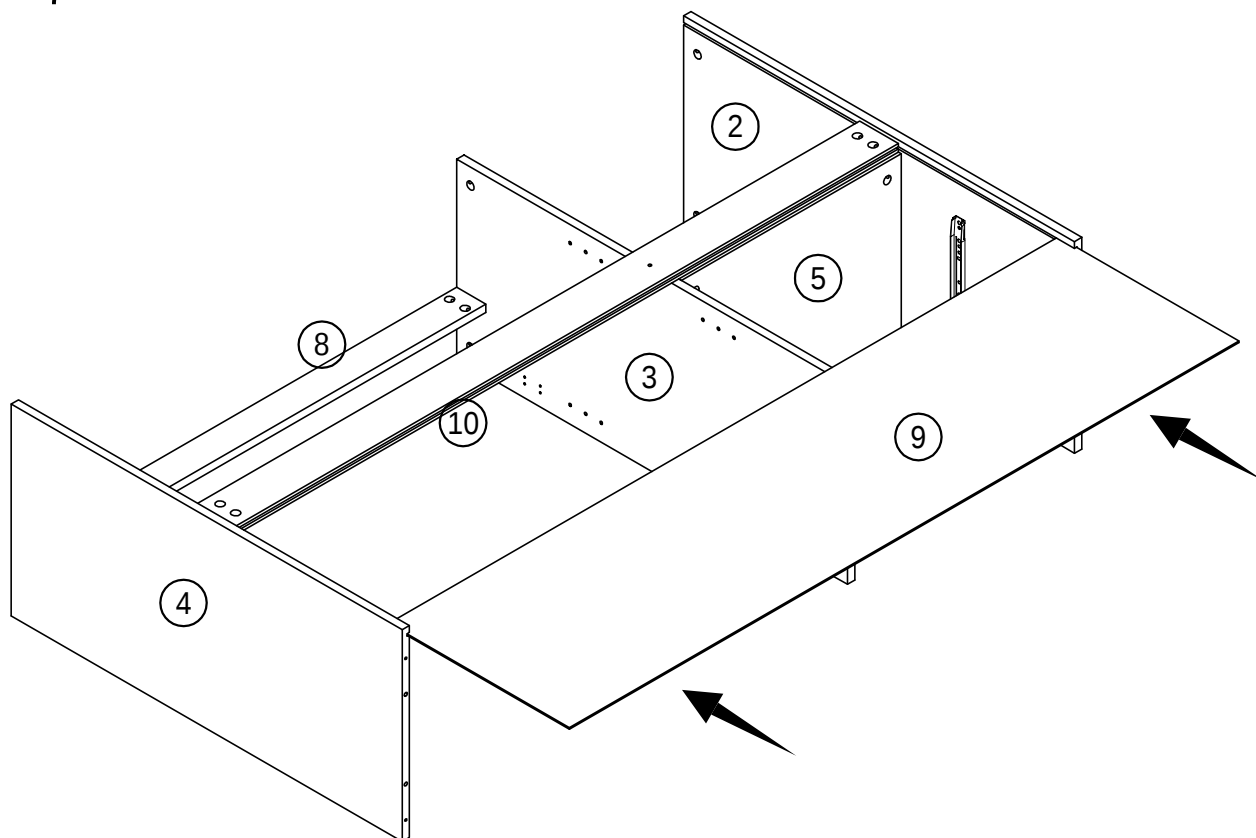


D	X10
	


INSTALLATION

STEP 9

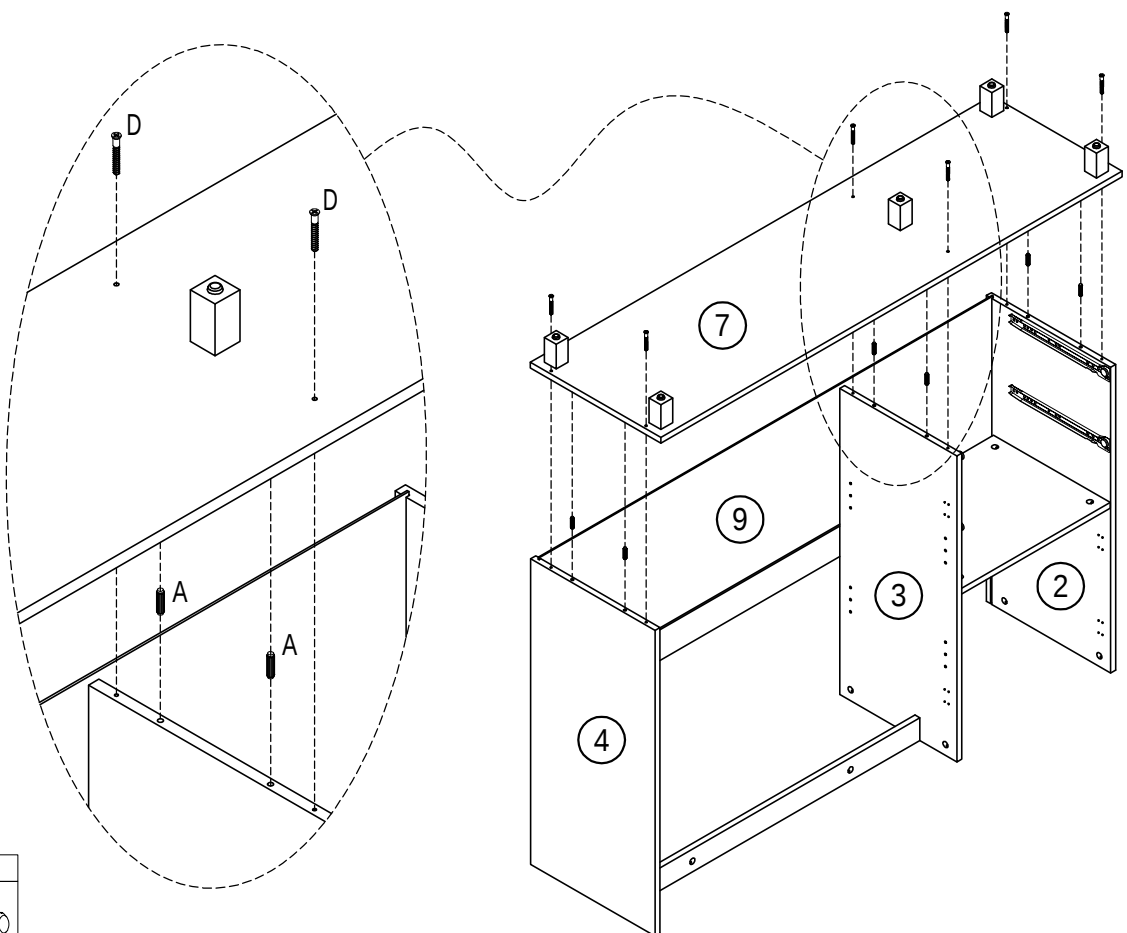


D	X6	A	X6
			

STEP 10



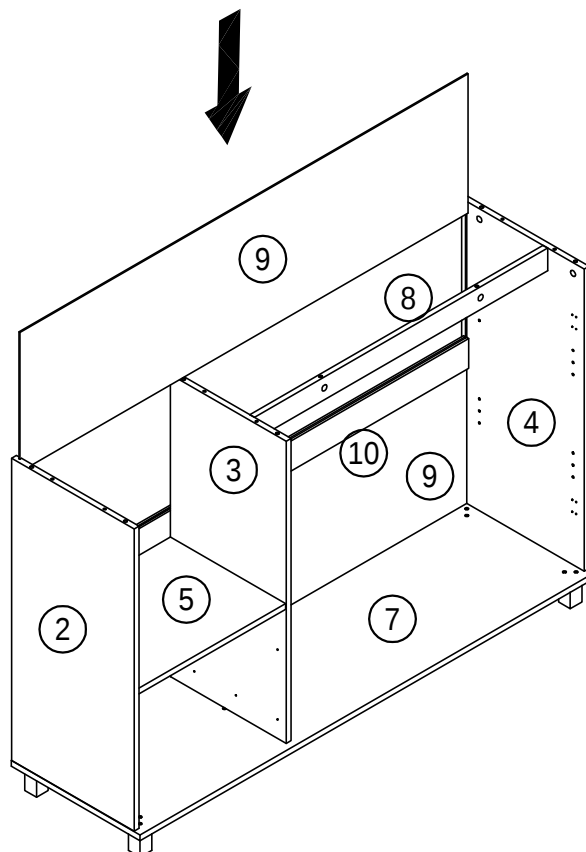


INSTALLATION

STEP 11

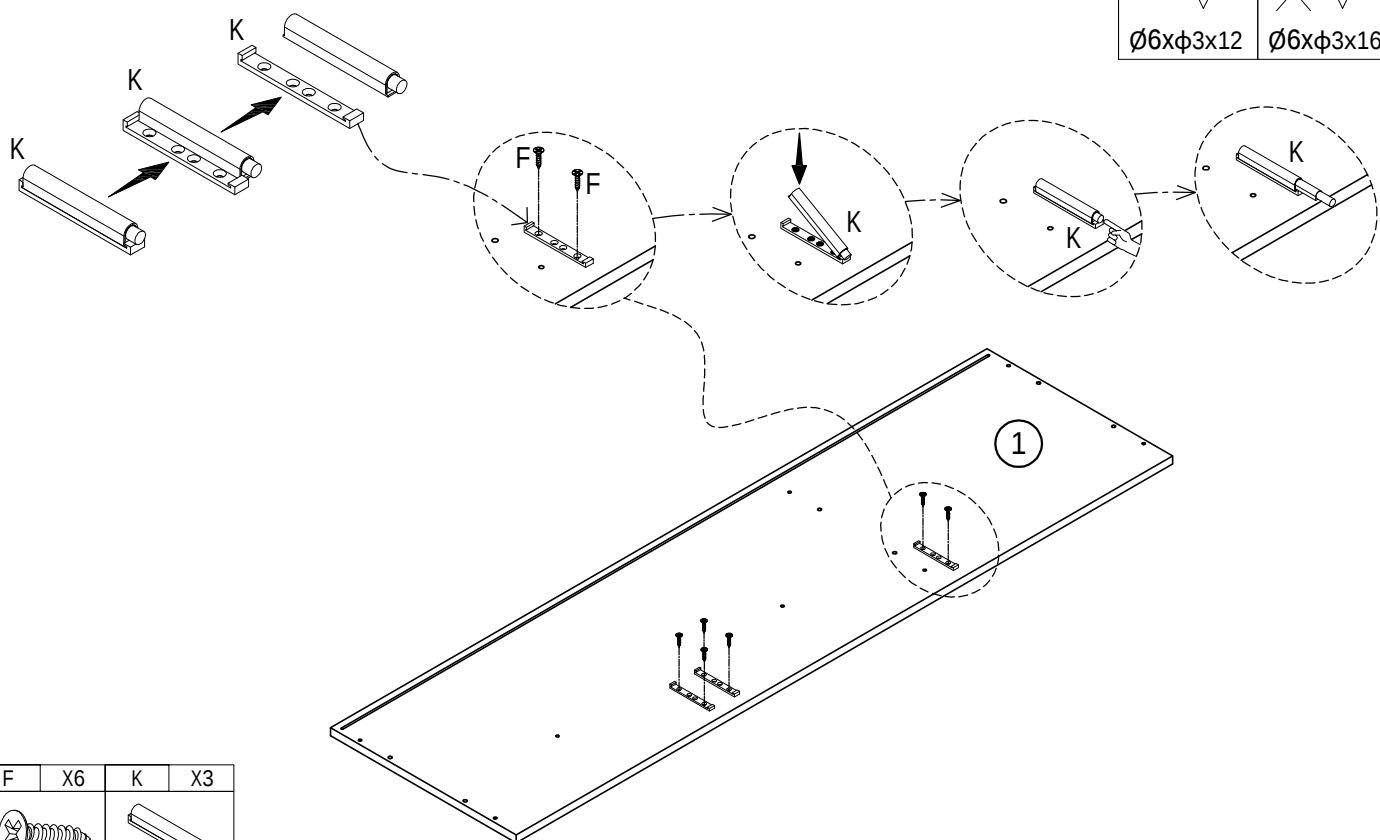


STEP 12

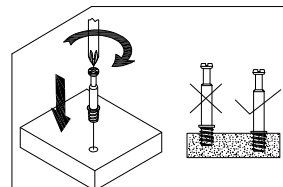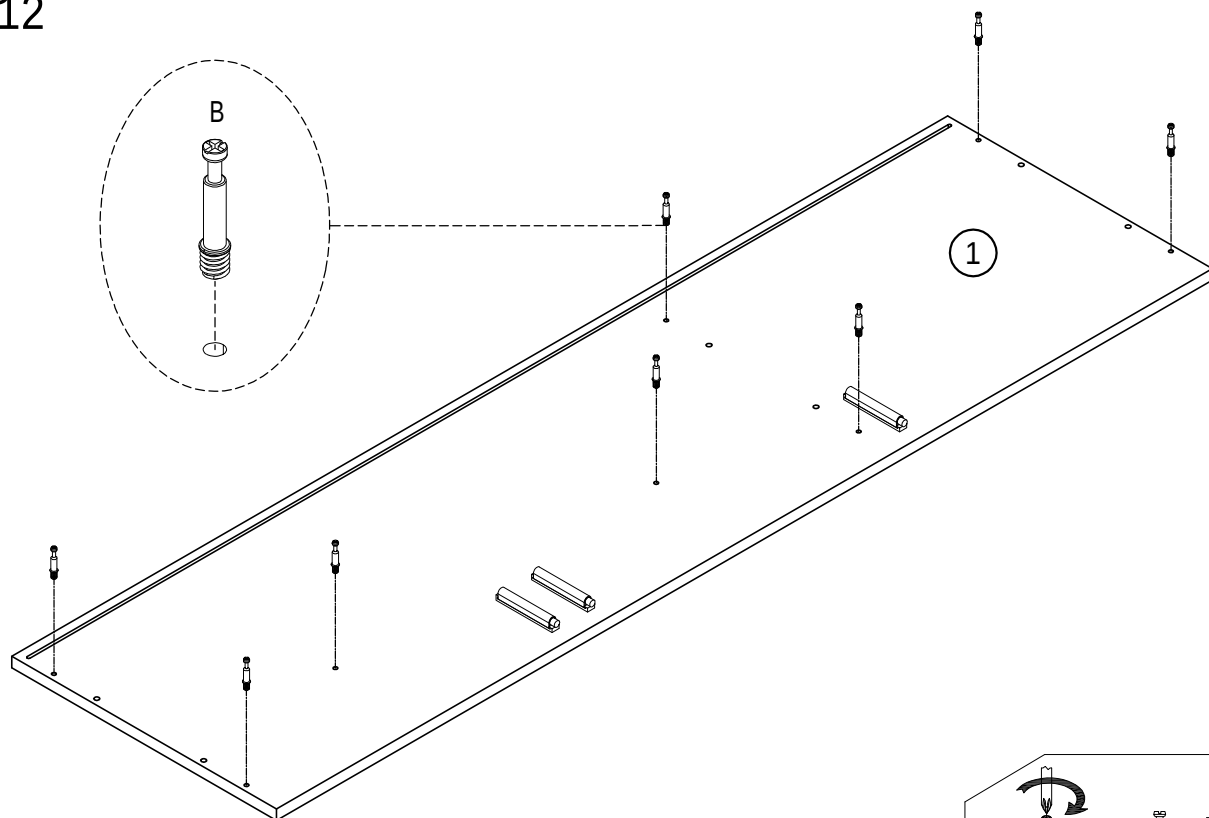


INSTALLATION

STEP 13

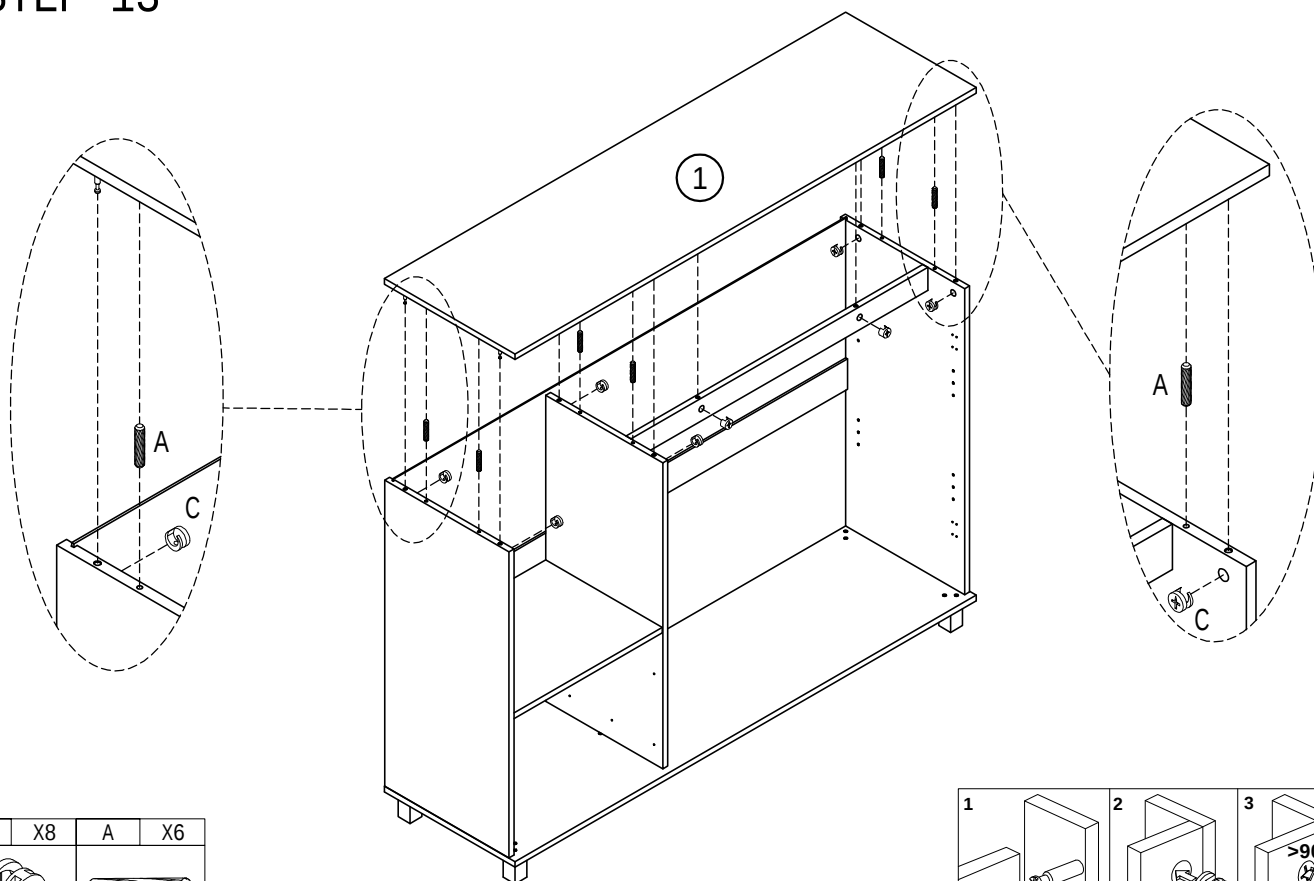


STEP 14

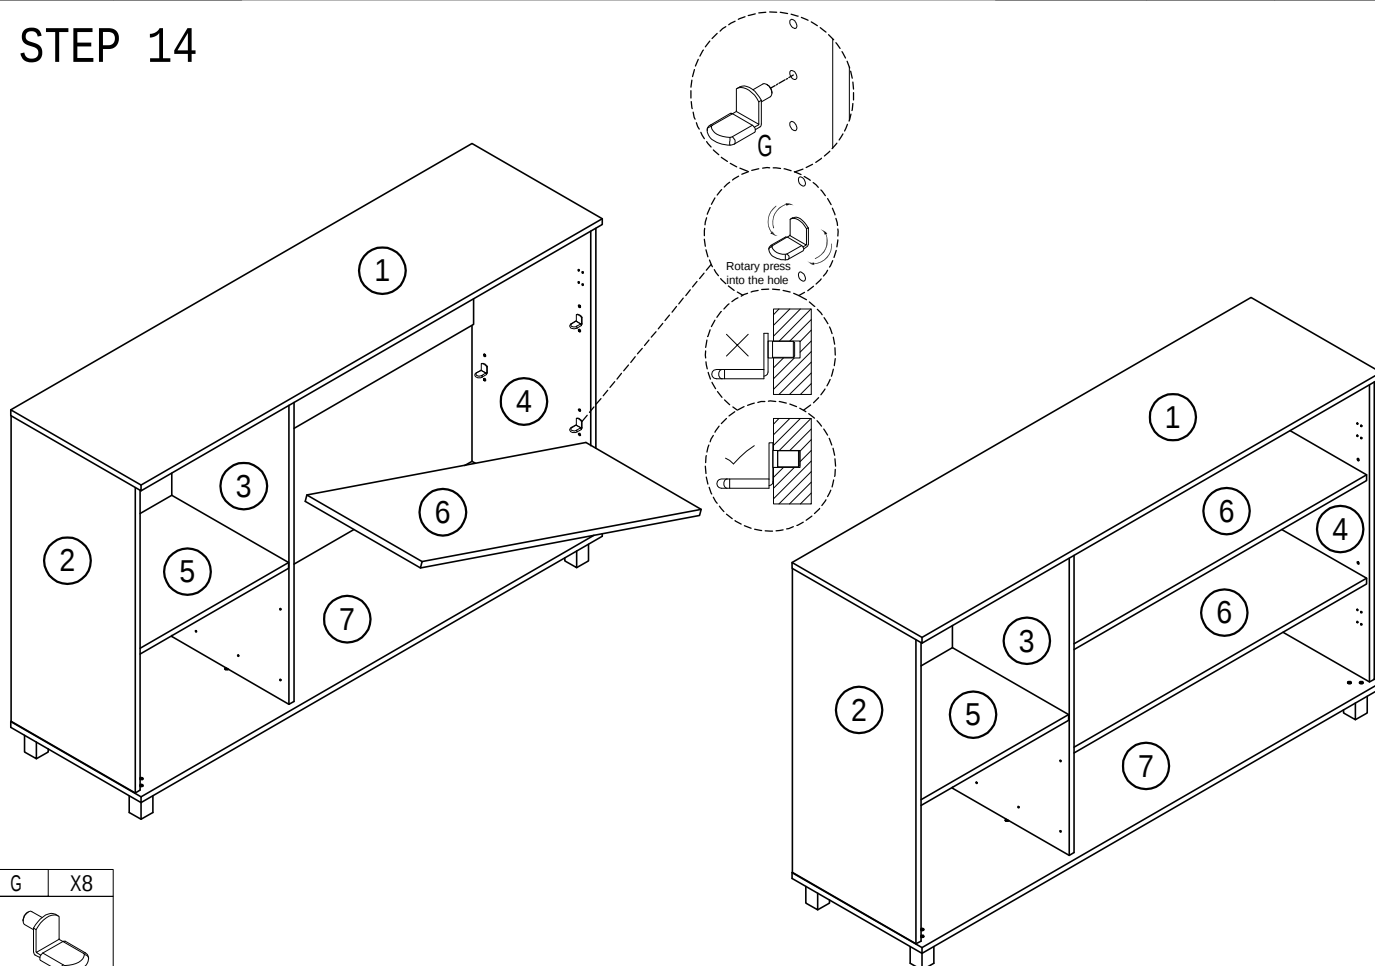

INSTALLATION


STEP 15

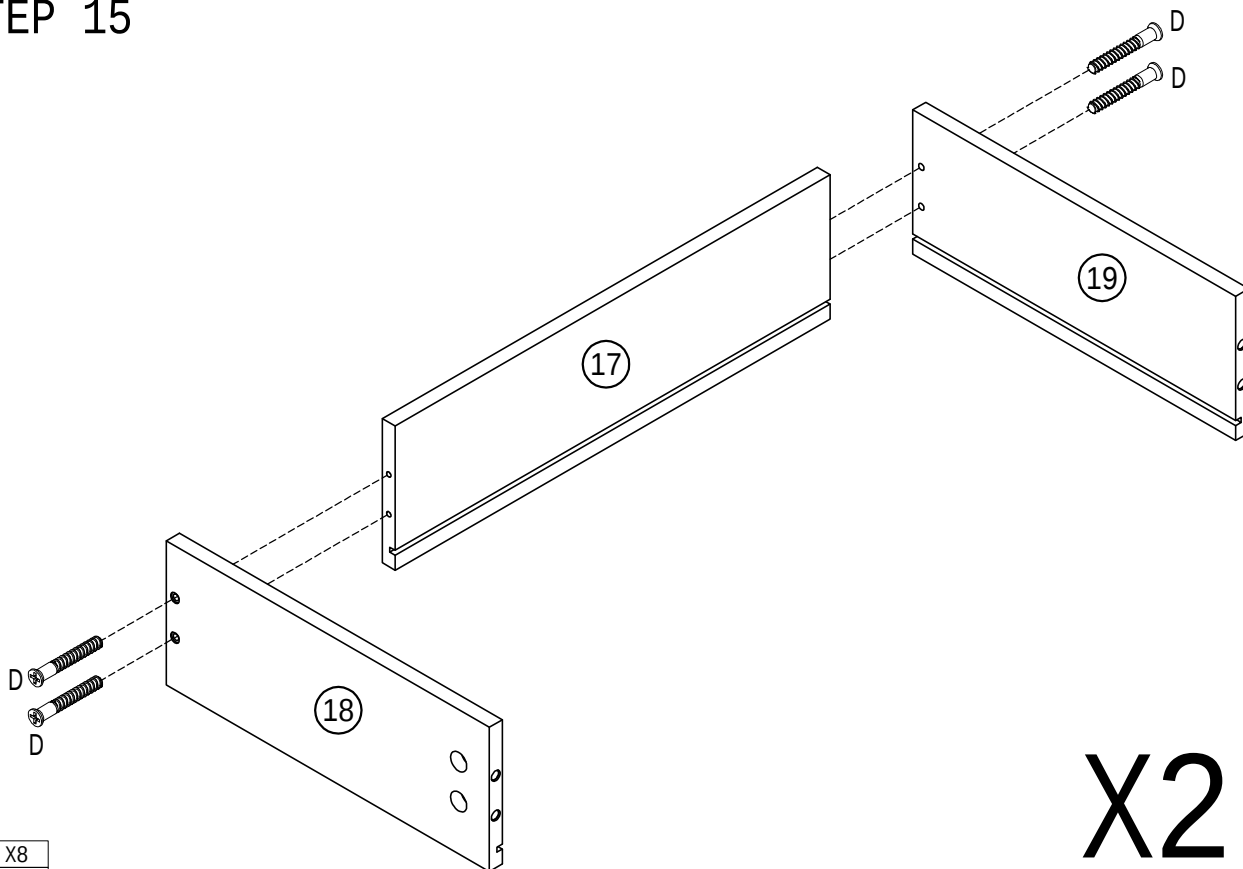

X2

D	X8
	




STEP 16

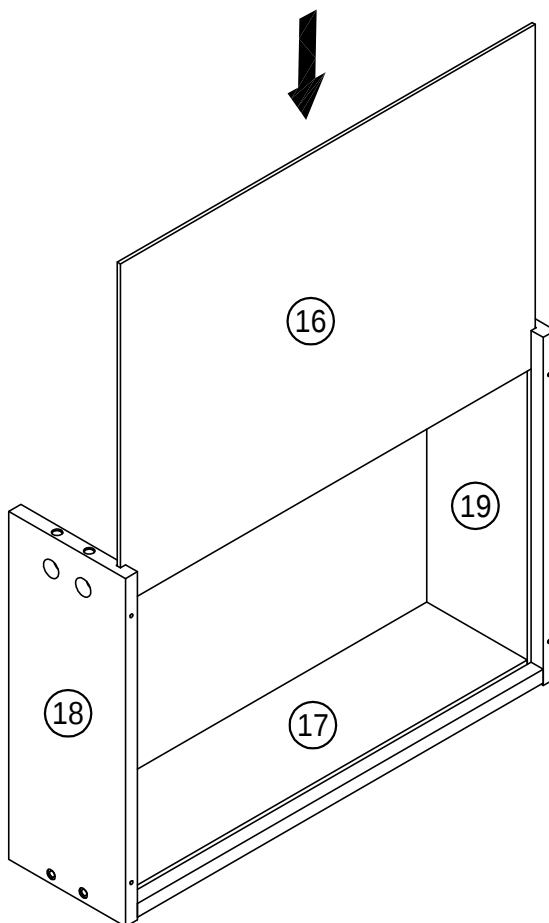




X2

INSTALLATION

STEP 17

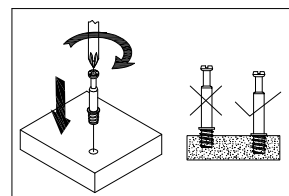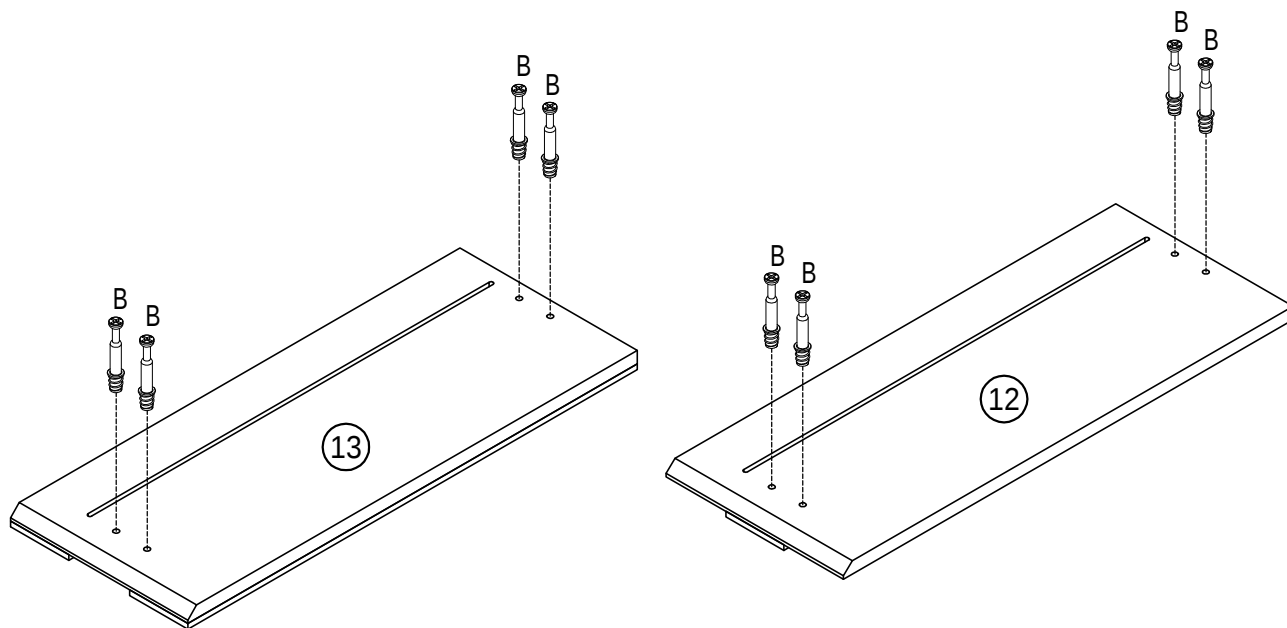


STEP 18

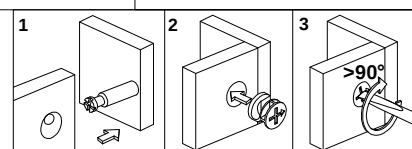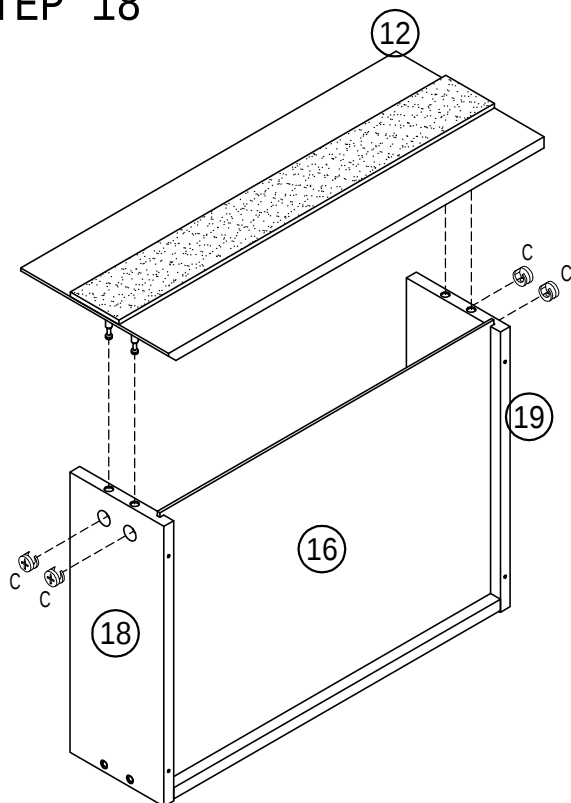

INSTALLATION




STEP 19

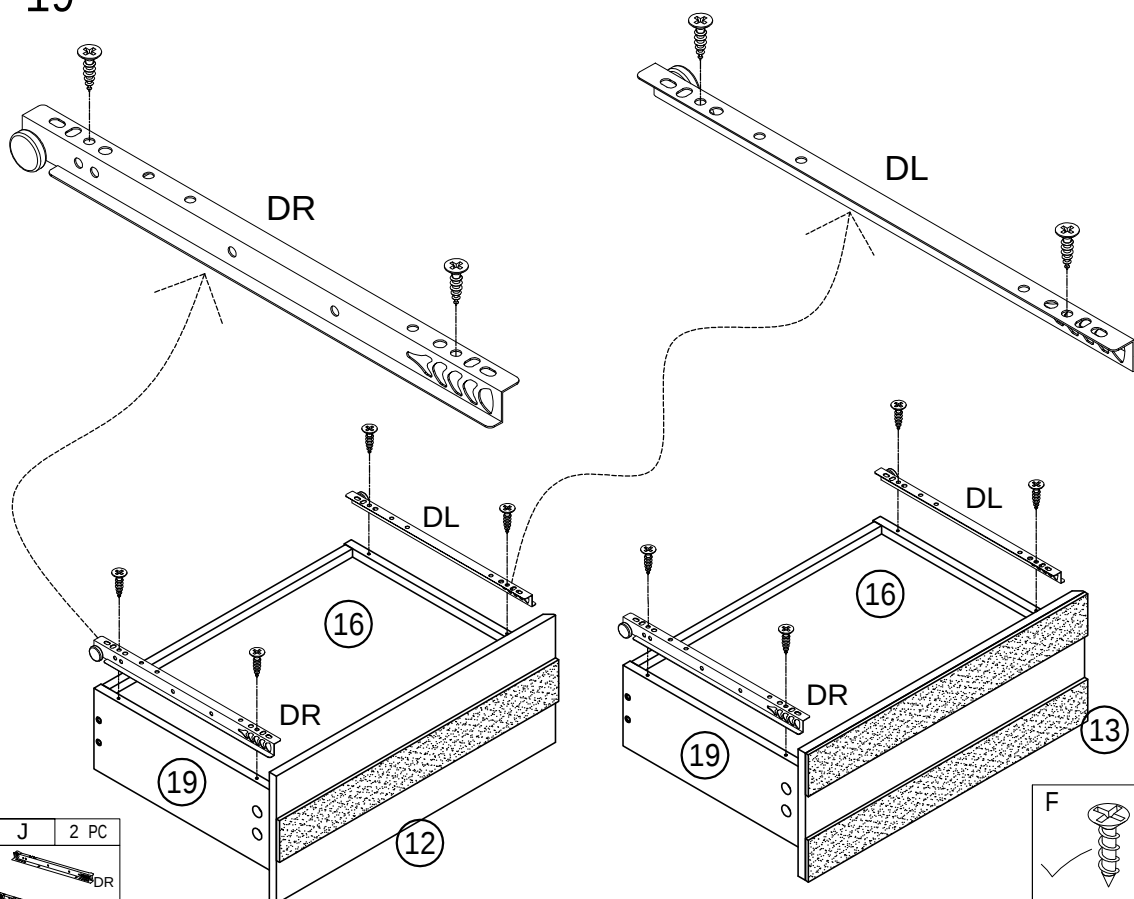

F	X8	J	2 PC



F	E
Ø6xφ3x12	Ø6xφ3x16

STEP 20

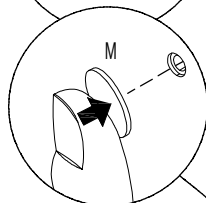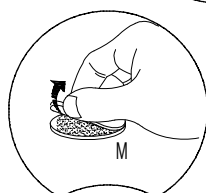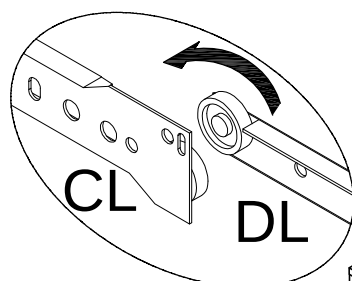


Cover the visible hole with a cap

M	X20

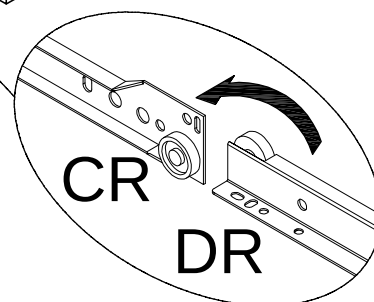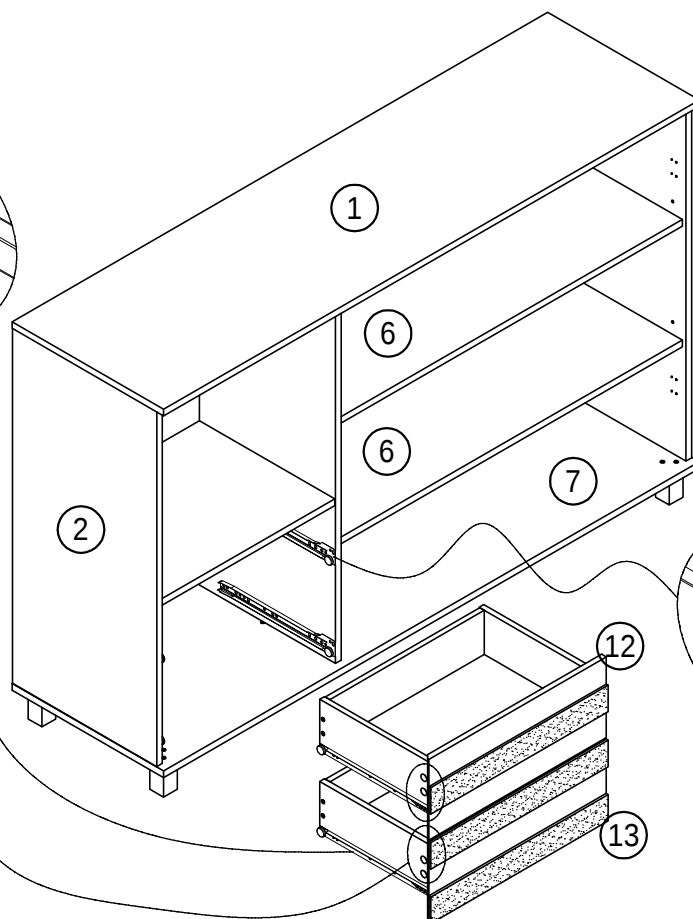


INSTALLATION

STEP 21

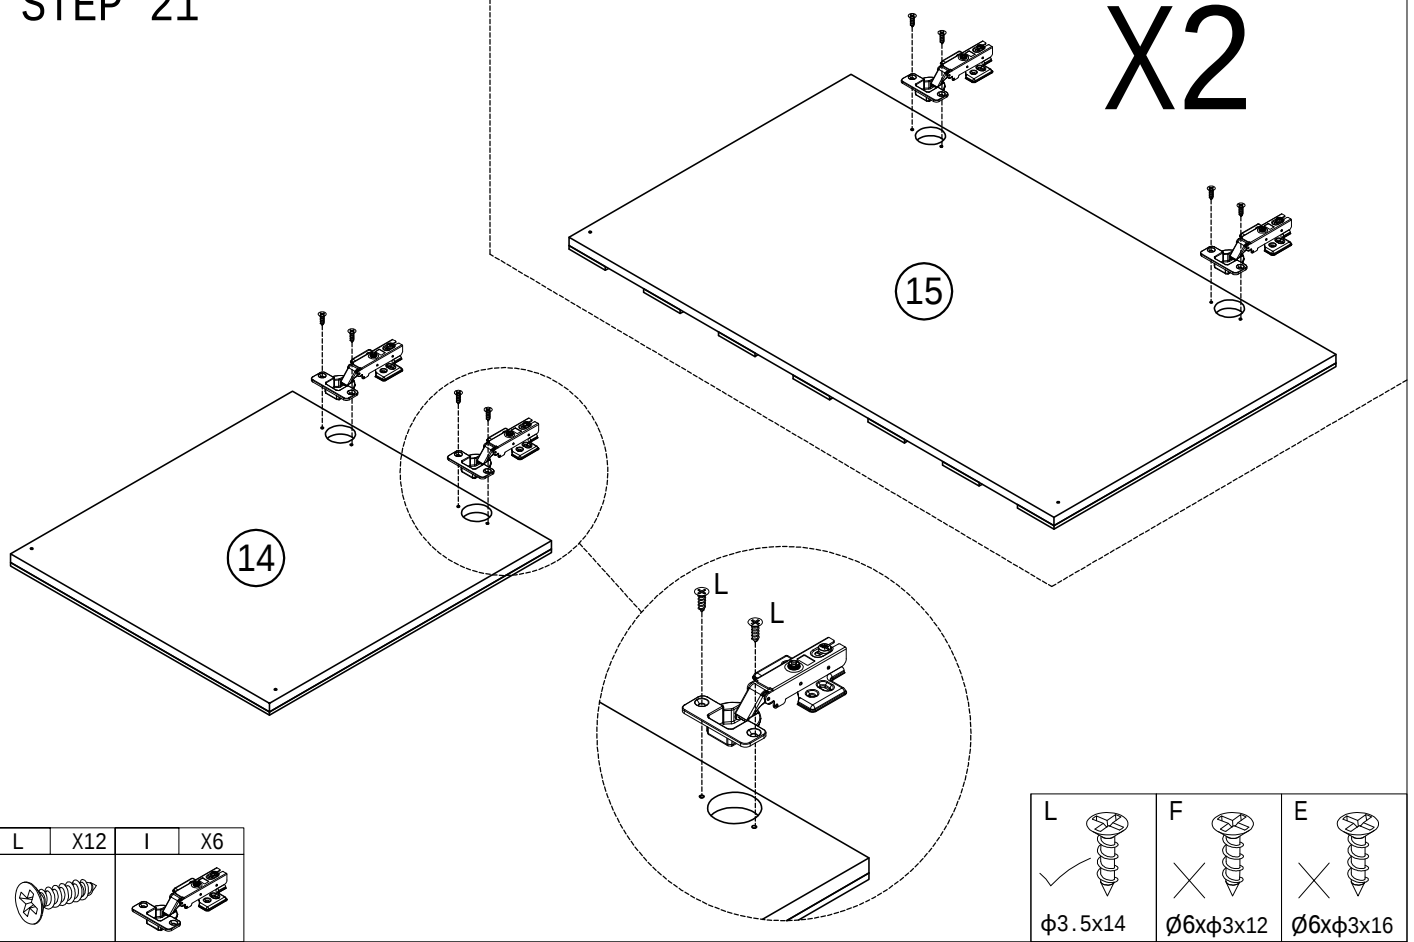


STEP 22

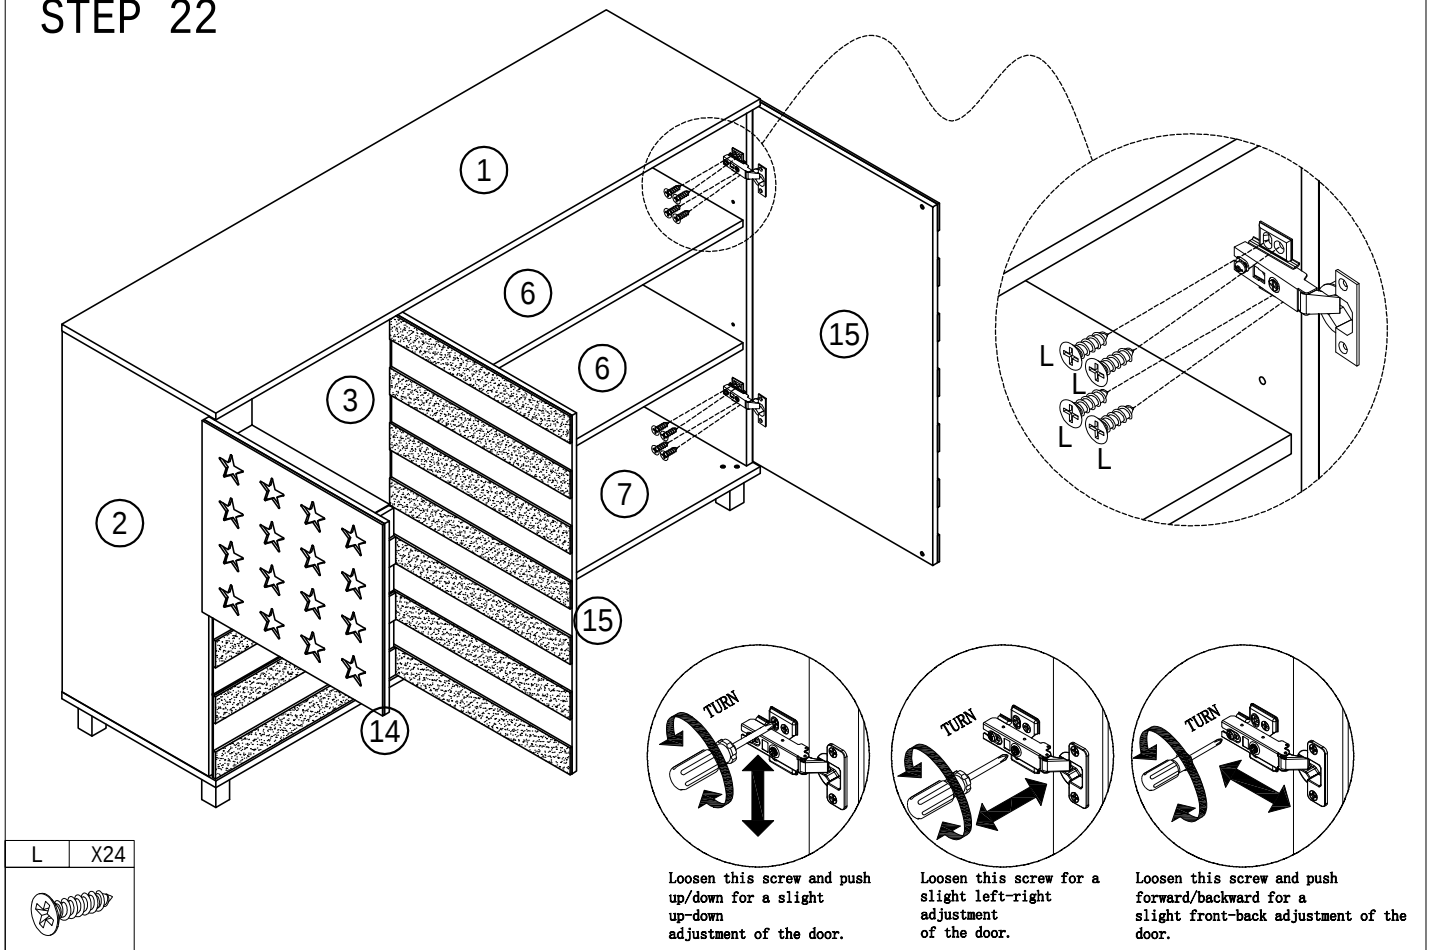

INSTALLATION

STEP 23


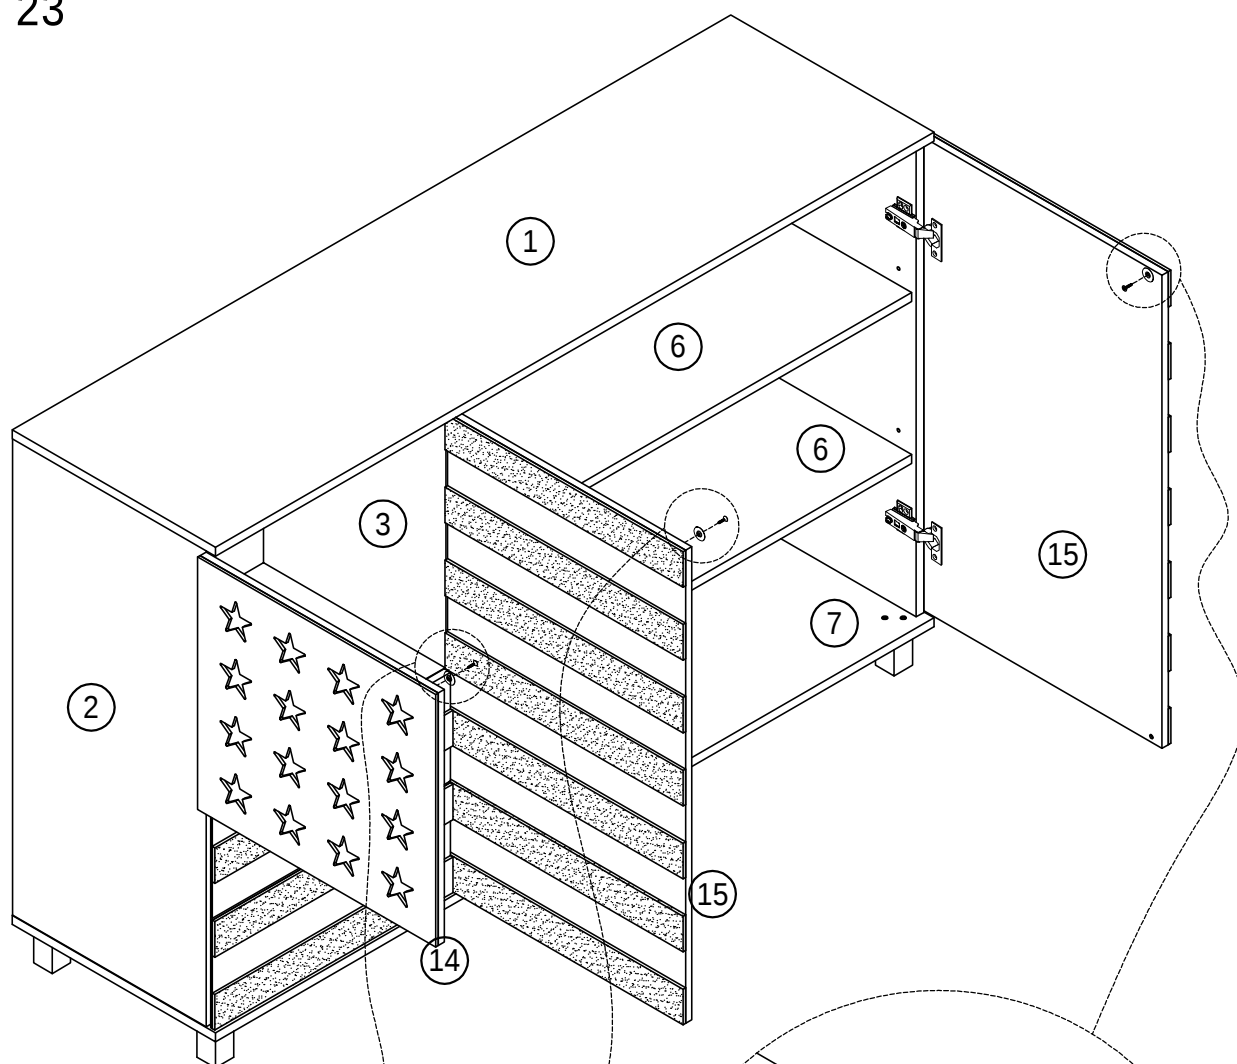


K	X3	F	X3
			



F		E	
			
	Ø6xφ3x12		Ø6xφ3x16

INSTALLATION

STEP 24

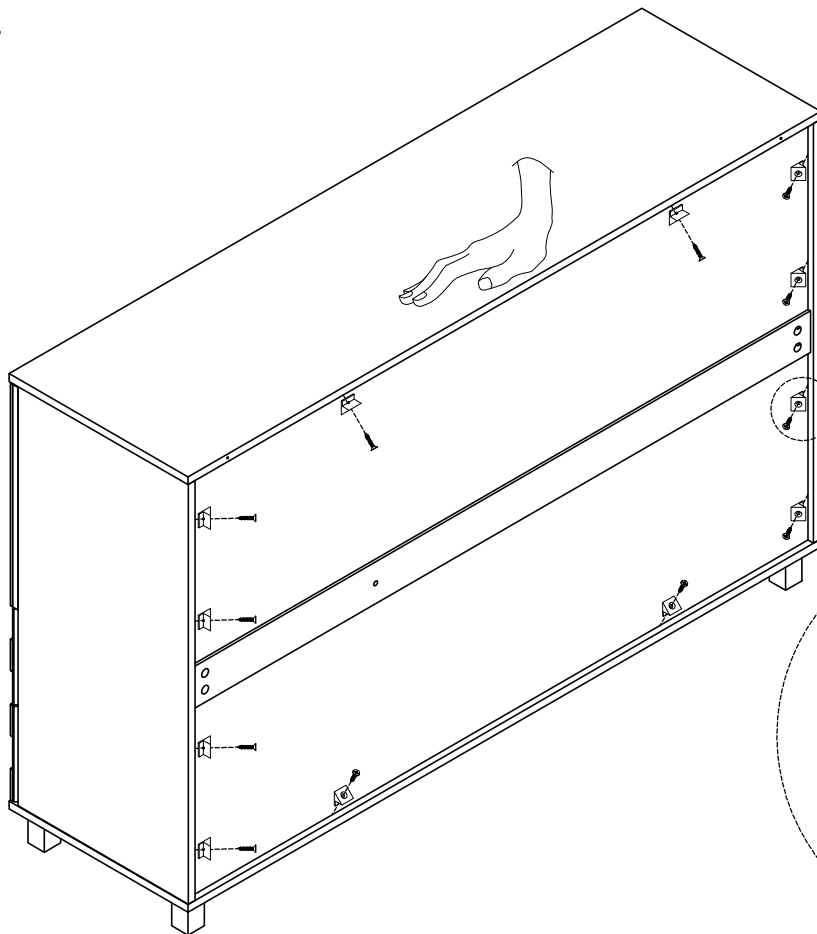

STEP 25

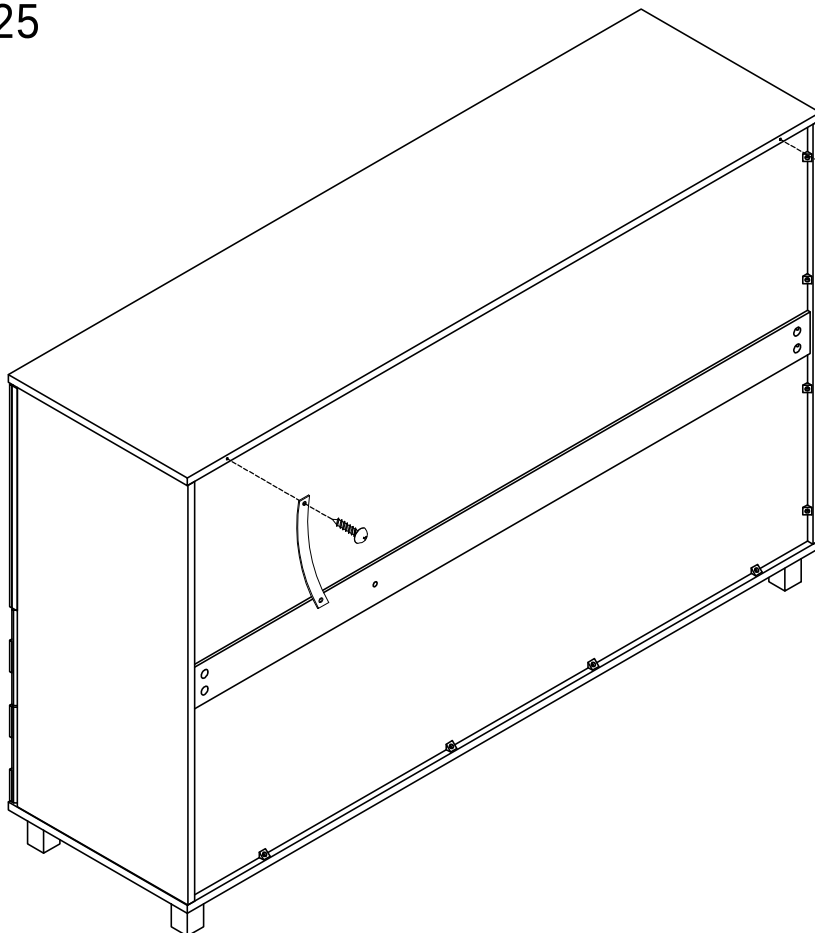

INSTALLATION

STEP 26

The cabinet must be permanently fixed to the wall
Equipped with an anti-tipping device to prevent
cabinet don't tip over



Mark the position of the drill on the wall with a
pencil.

Drill holes at the marked locations with a drill
bit.

Insert the wall anchor (H) gently into the hole
Knock in this wall anchor (H).

Lock the strips to the wall

Equipped with screws (H).

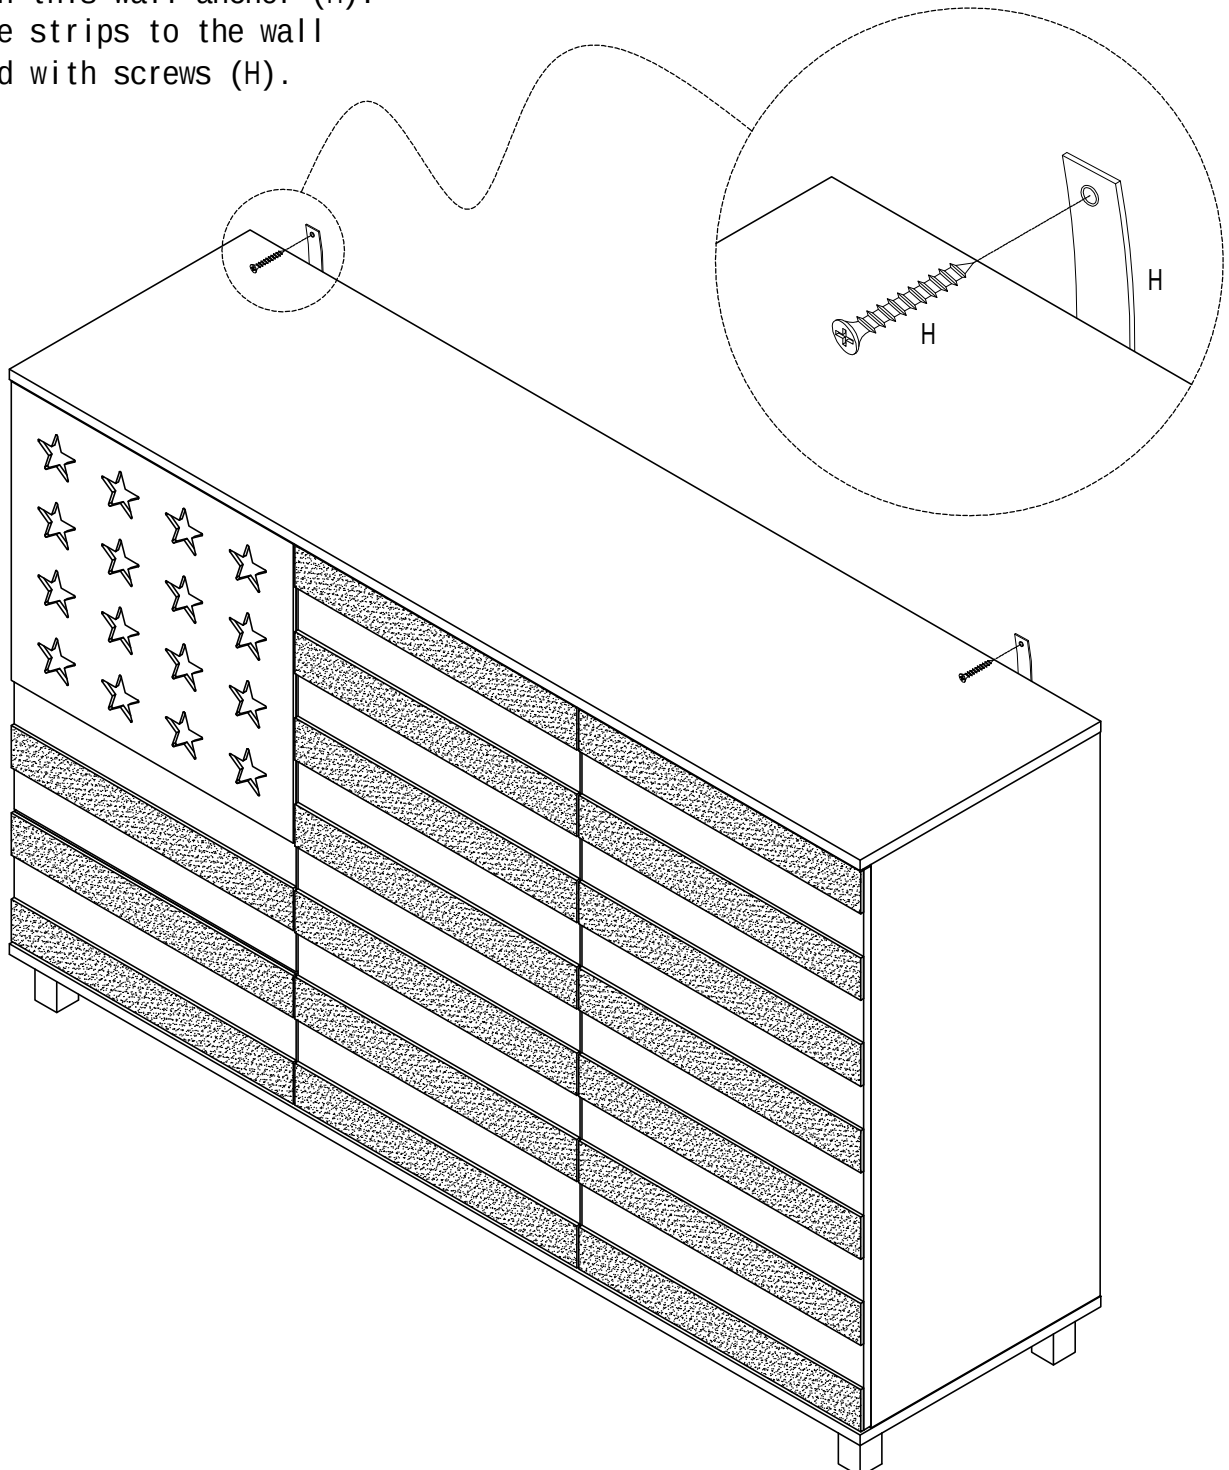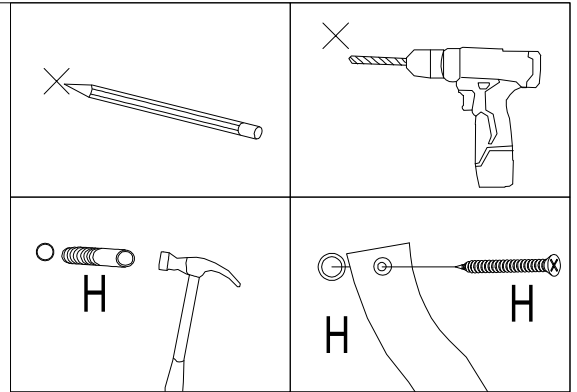

H	X2