
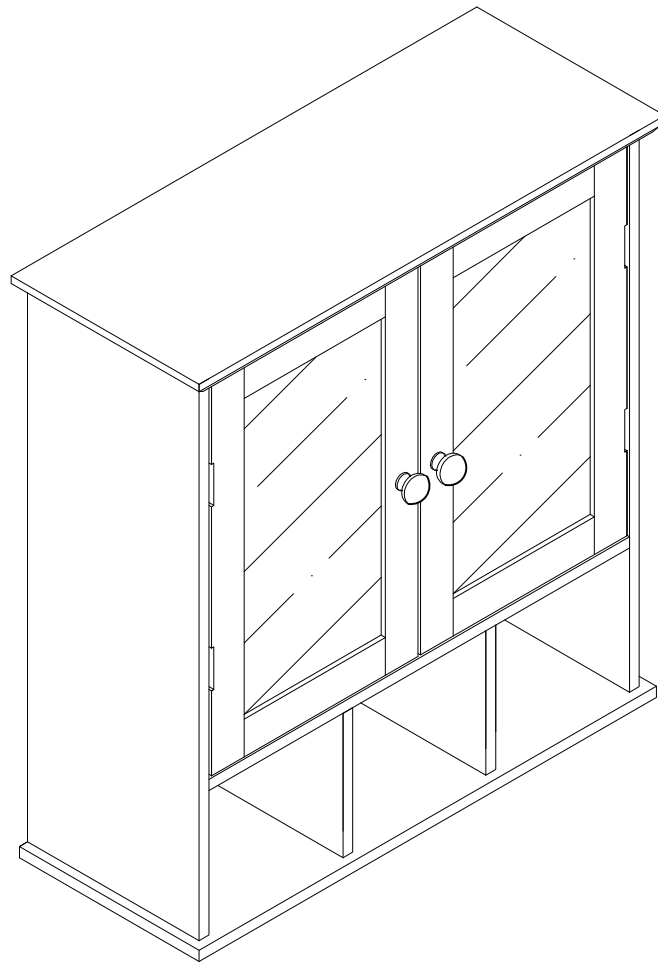















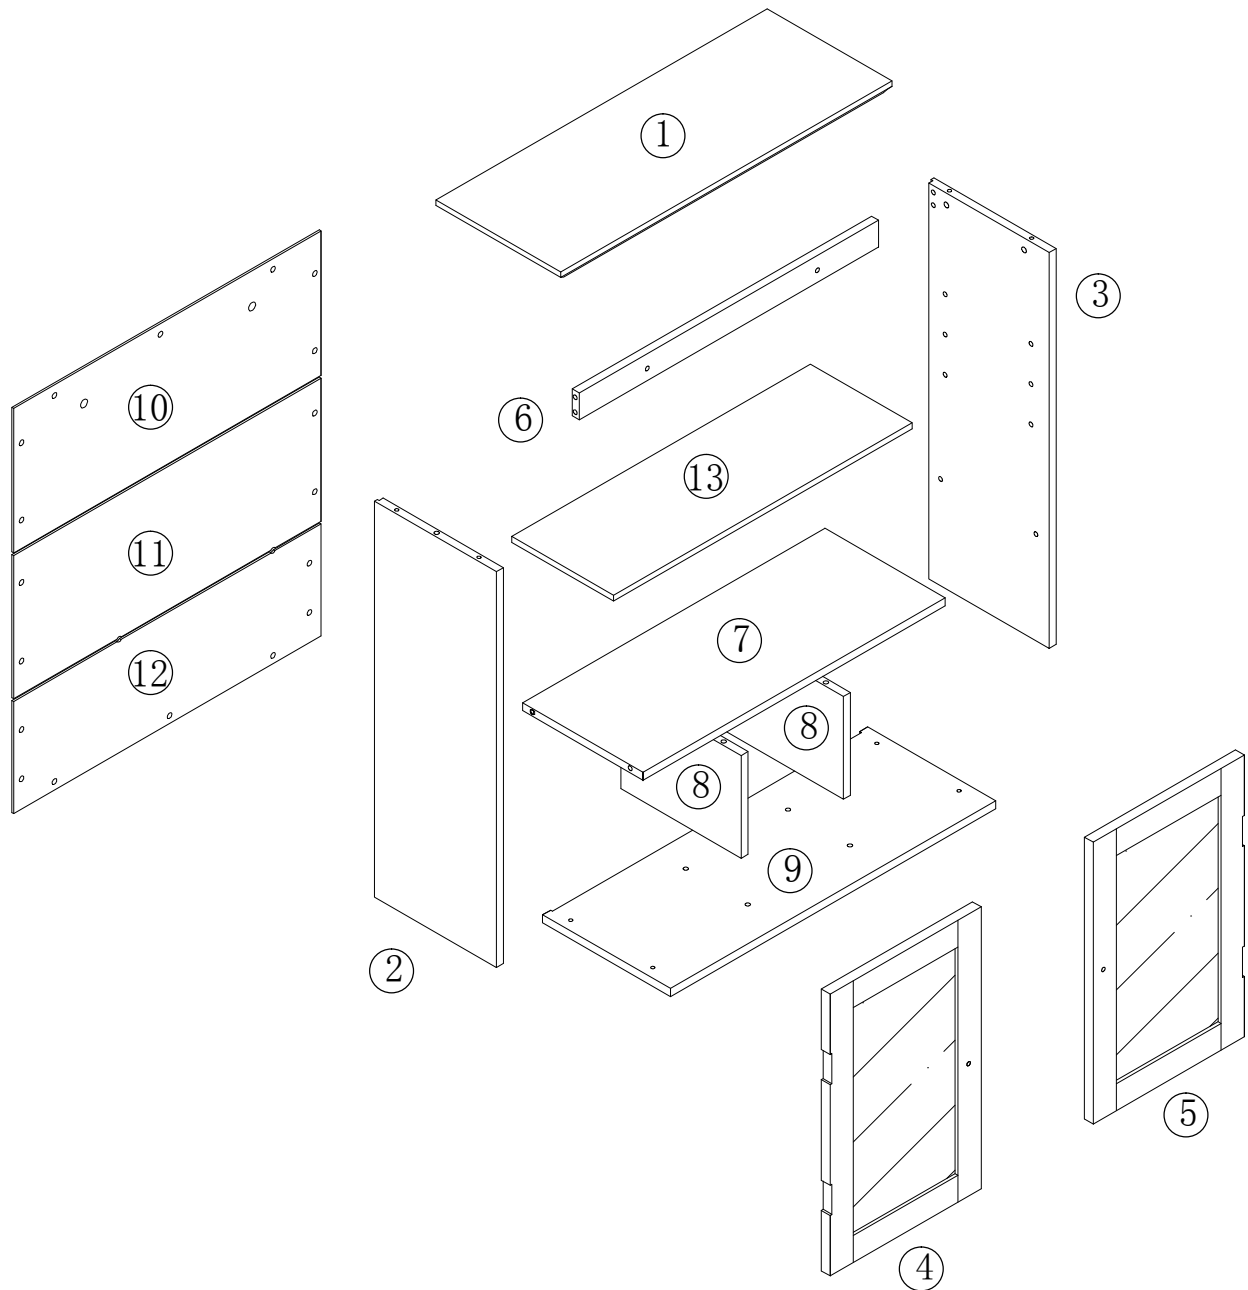


**MILANO MIRRORED BATHROOM WALL CABINET
ASSEMBLY INSTRUCTIONS**






#	Pieza	Cantidad	#	Pieza	Cantidad	#	Pieza	Cantidad
A		12PCS	F		18PCS	K		4PCS
B		8PCS	G		4PCS	L		22PCS
C		8PCS	H		2PCS	M		2PCS
D		2PCS	I		2PCS	N		2PCS
E		1PC	J		2PCS	O		4PCS


STEP 1

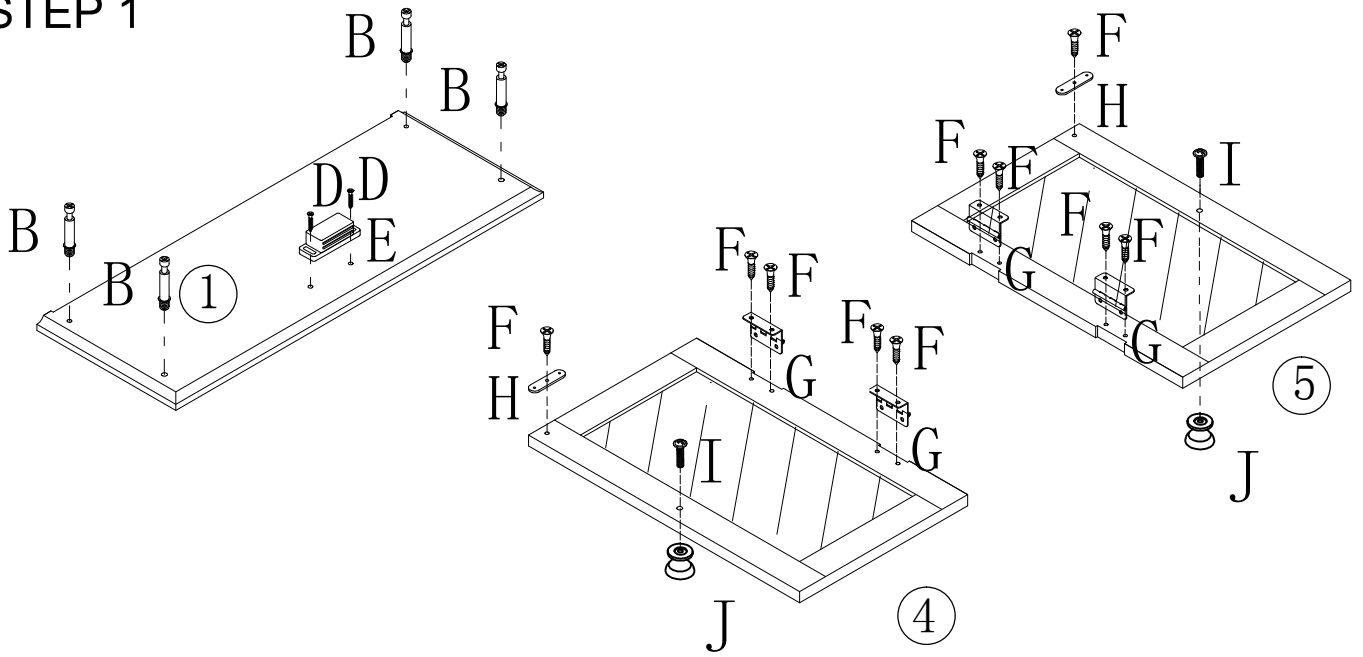


STEP 2

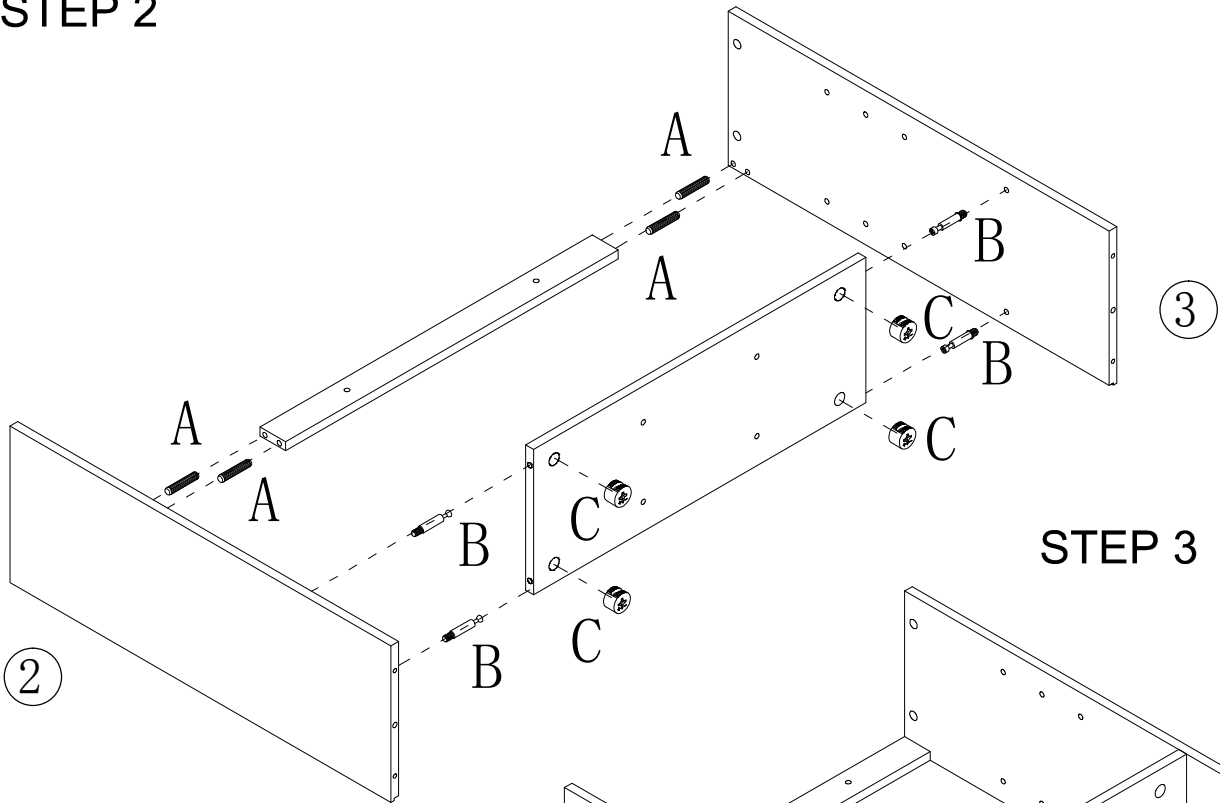


STEP 3

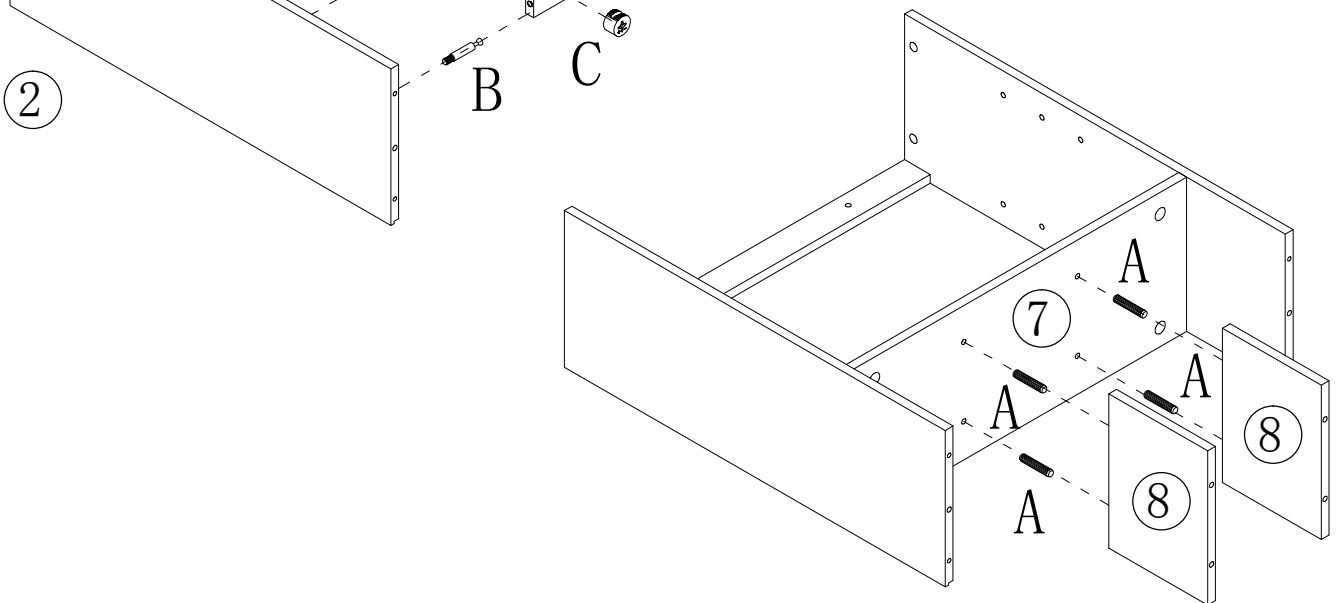


STEP 4

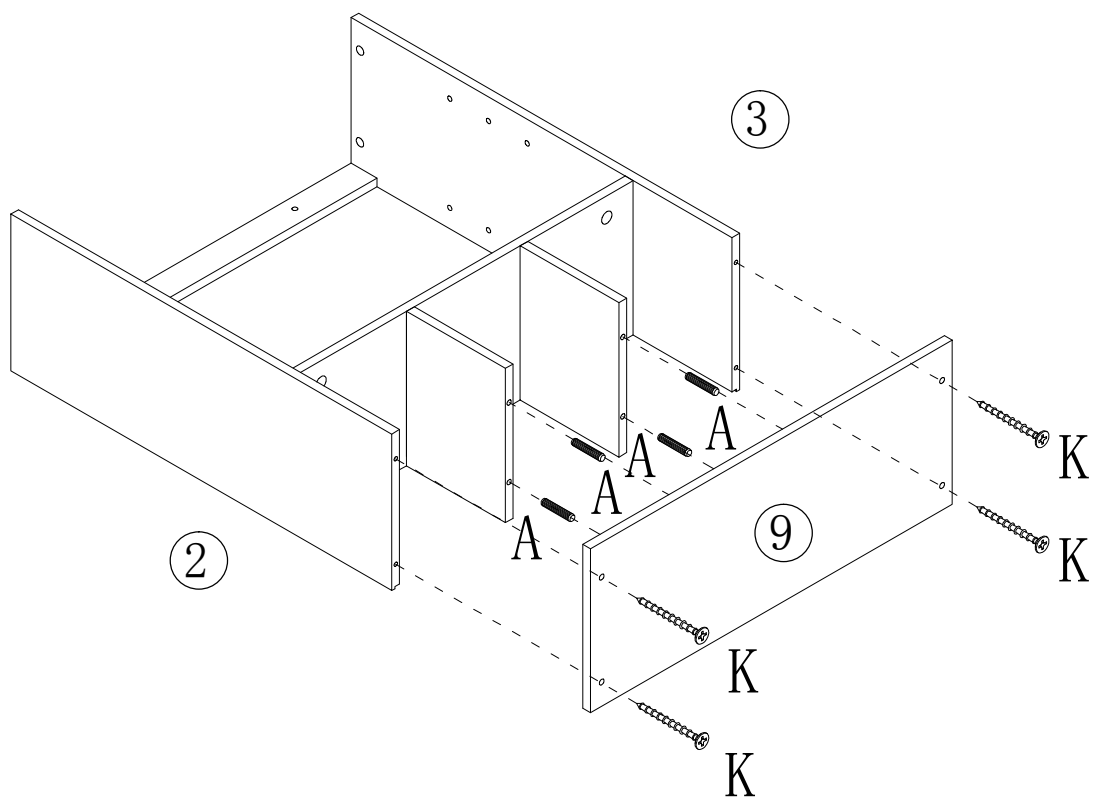


STEP 5

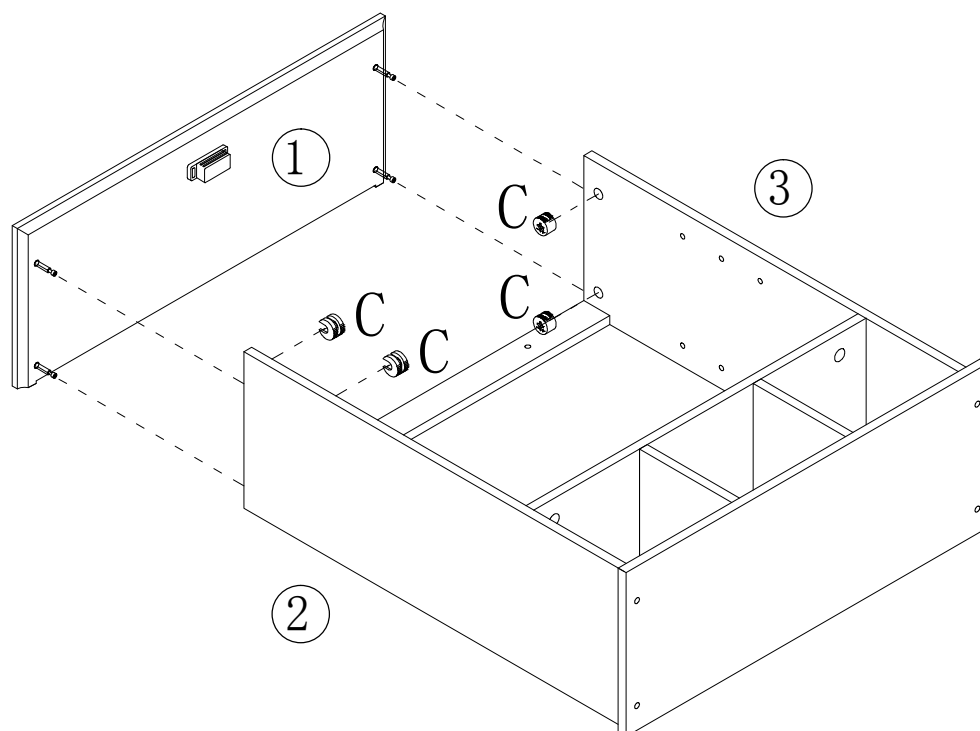


STEP 6

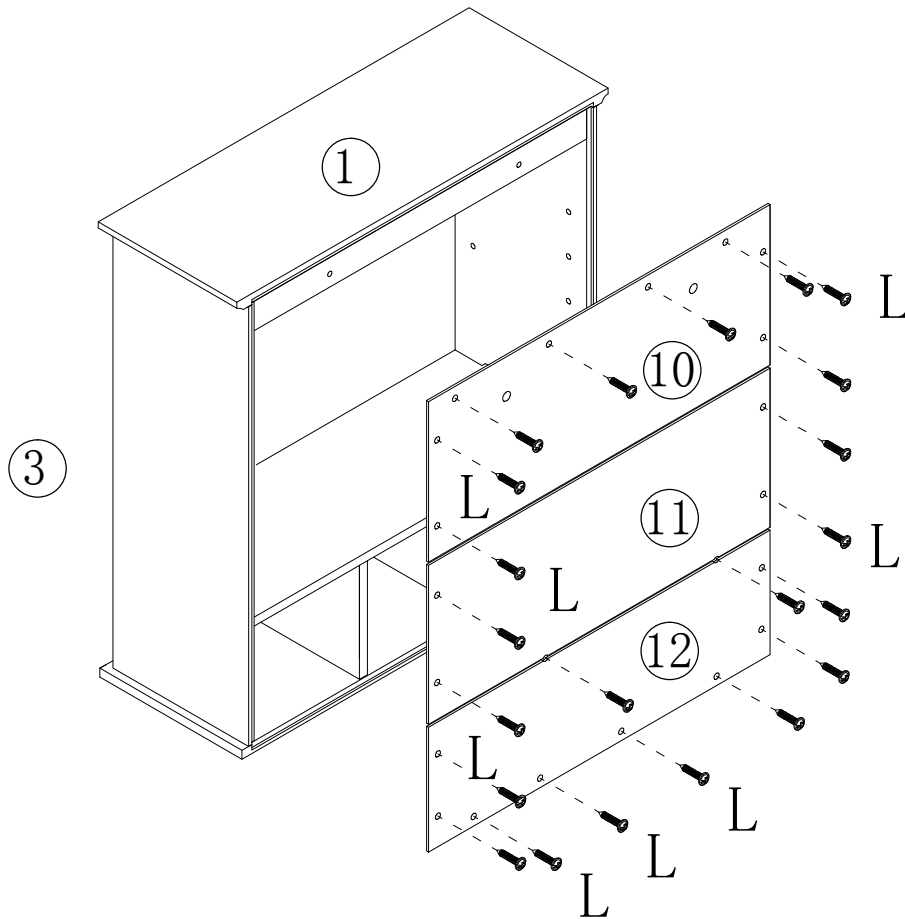

STEP 7

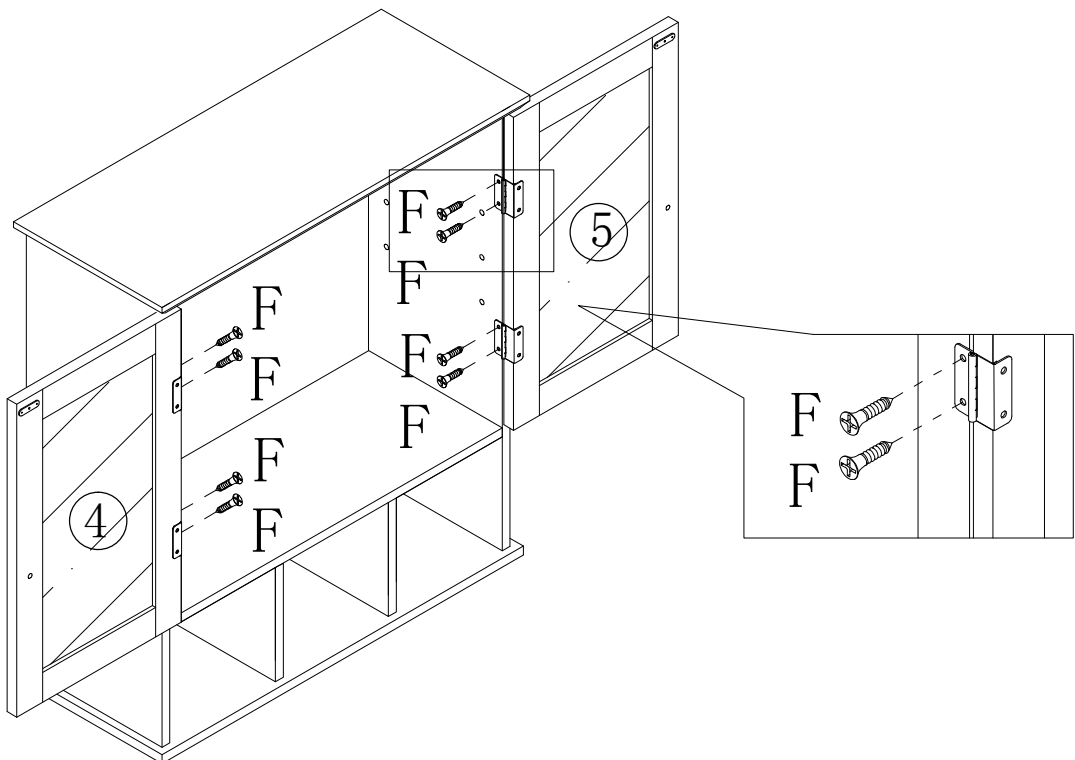

STEP 8

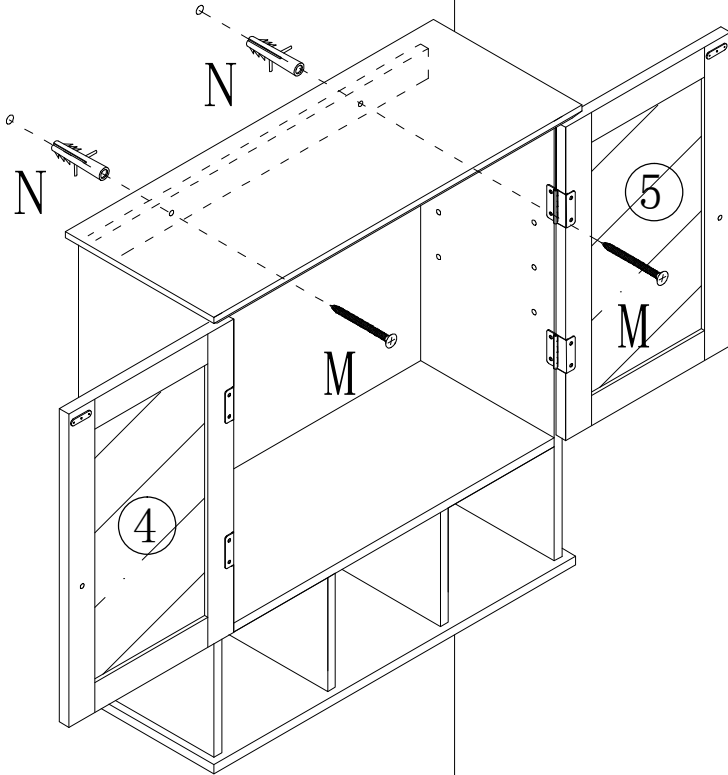

STEP 9

