

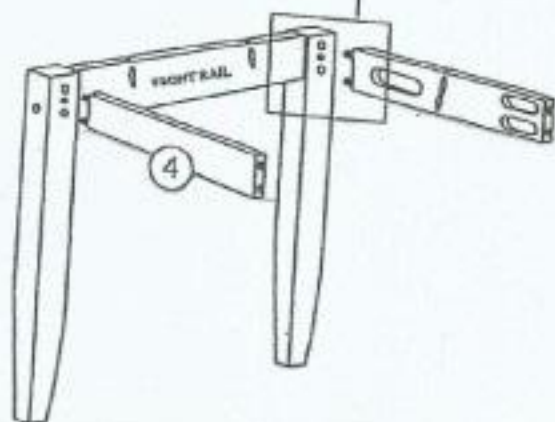
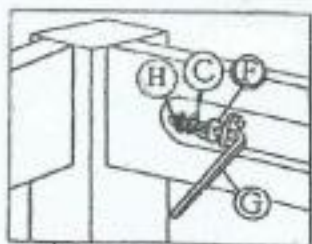


# ASSEMBLY INSTRUCTION DINING CHAIR

STEP 6

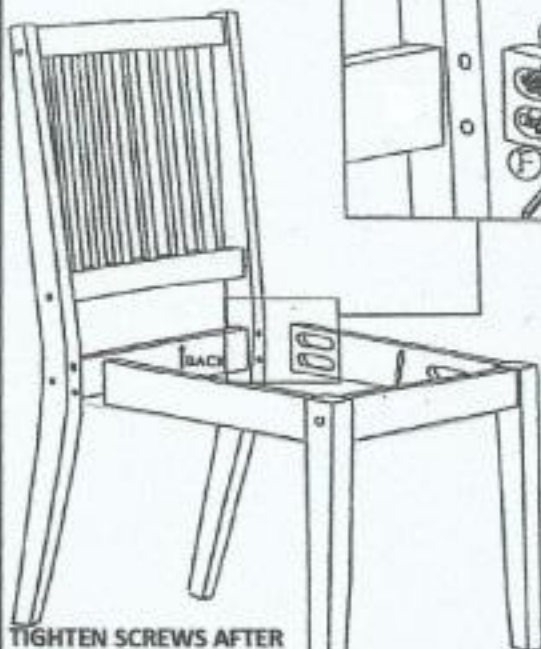


STEP 7

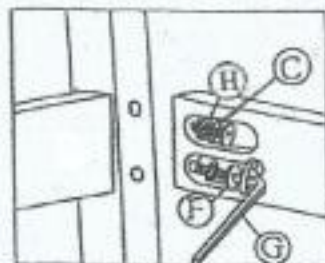

TIGHTEN SCREWS AFTER  
COMPLETING THIS STEP 7.  
DO NOT USE POWER TOOL

STEP 8

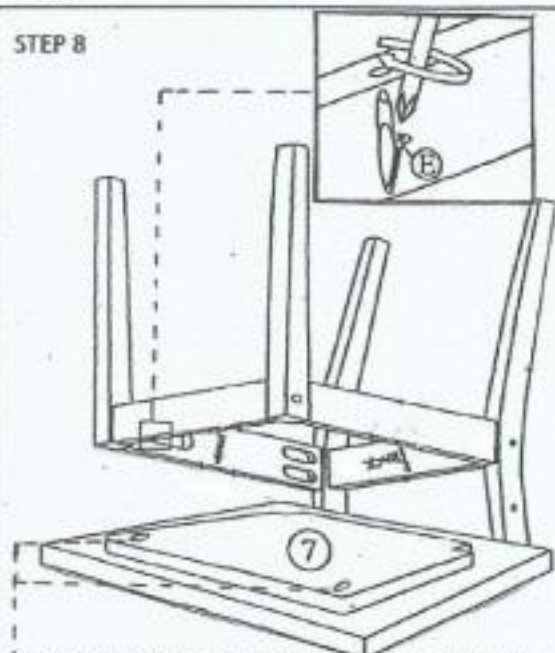

DISREGARD THE TWO HOLES, THEY ARE NOT PART OF  
THE ASSEMBLY (FOR MANUFACTURER'S USE ONLY)

HOLES ON SEAT ARE NOT PRE-DRILLED. TAP THE END OF THE  
SCREW DRIVER WITH A HAMMER TO MAKE STARTING  
HOLES AT 4 PLACES. 2 IN FRONT AND 1 ON EACH SIDE

STEP 9



FULLY SET UP