

Installation Instructions



1. Pull the panel open with both hands




2. Remove the accessory pack



3. Position it with the holes facing upwards



4. Find the accessory pack

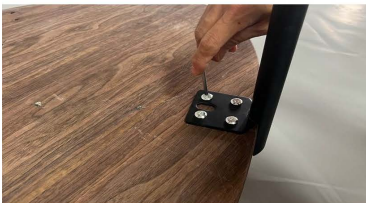

5. Align the holes and fit the feet



6. Installation complete