

ASSEMBLY GUIDE
URBAN 4-DOOR WARDROBE


Compliant with Federal Law STURDY Act (Stop Tip-overs of Unstable, Risky Dressers on Youth). Passed 16 CFR 1262, ASTM F2057-23 Tests.

SKU 7141D - Raised Panel Doors / SKU 7141M - Mirrored Doors - White
SKU 7145D - Raised Panel Doors / SKU 7145M - Mirrored Doors - Gray
SKU 7147D - Raised Panel Doors / SKU 7147M - Mirrored Doors - Black

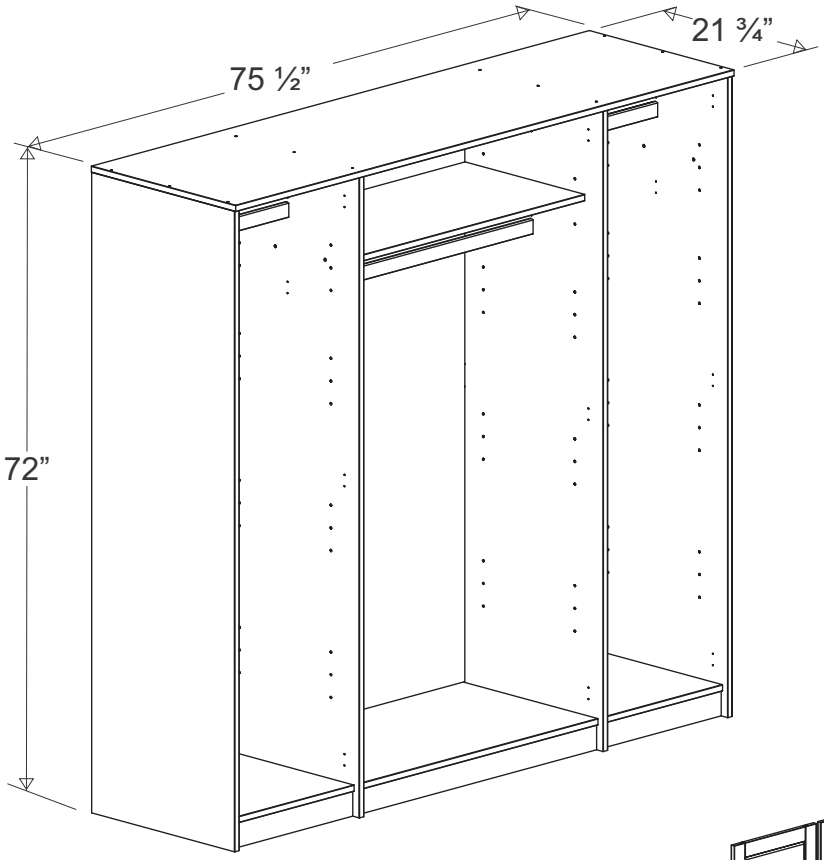


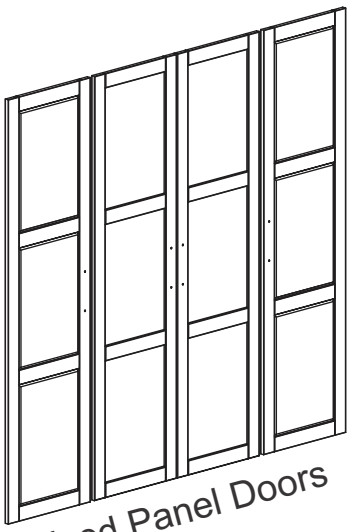



Raised Panel Doors

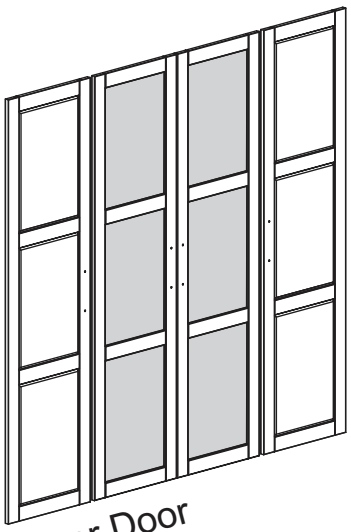

Mirror Door

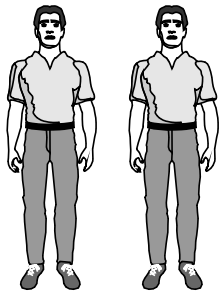

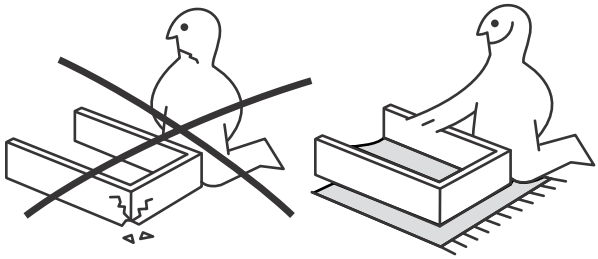

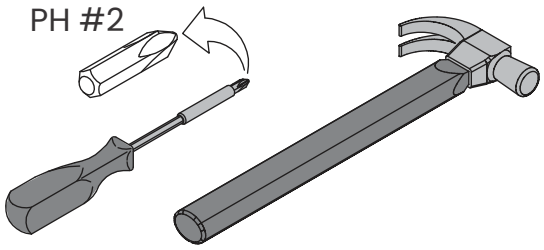


Before You Begin Assembly


- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us at info@palaceimportsinc.com for assistance.

Assembly Tips

- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
  Keep all small items out of reach of young children.













PARTS LAYOUT

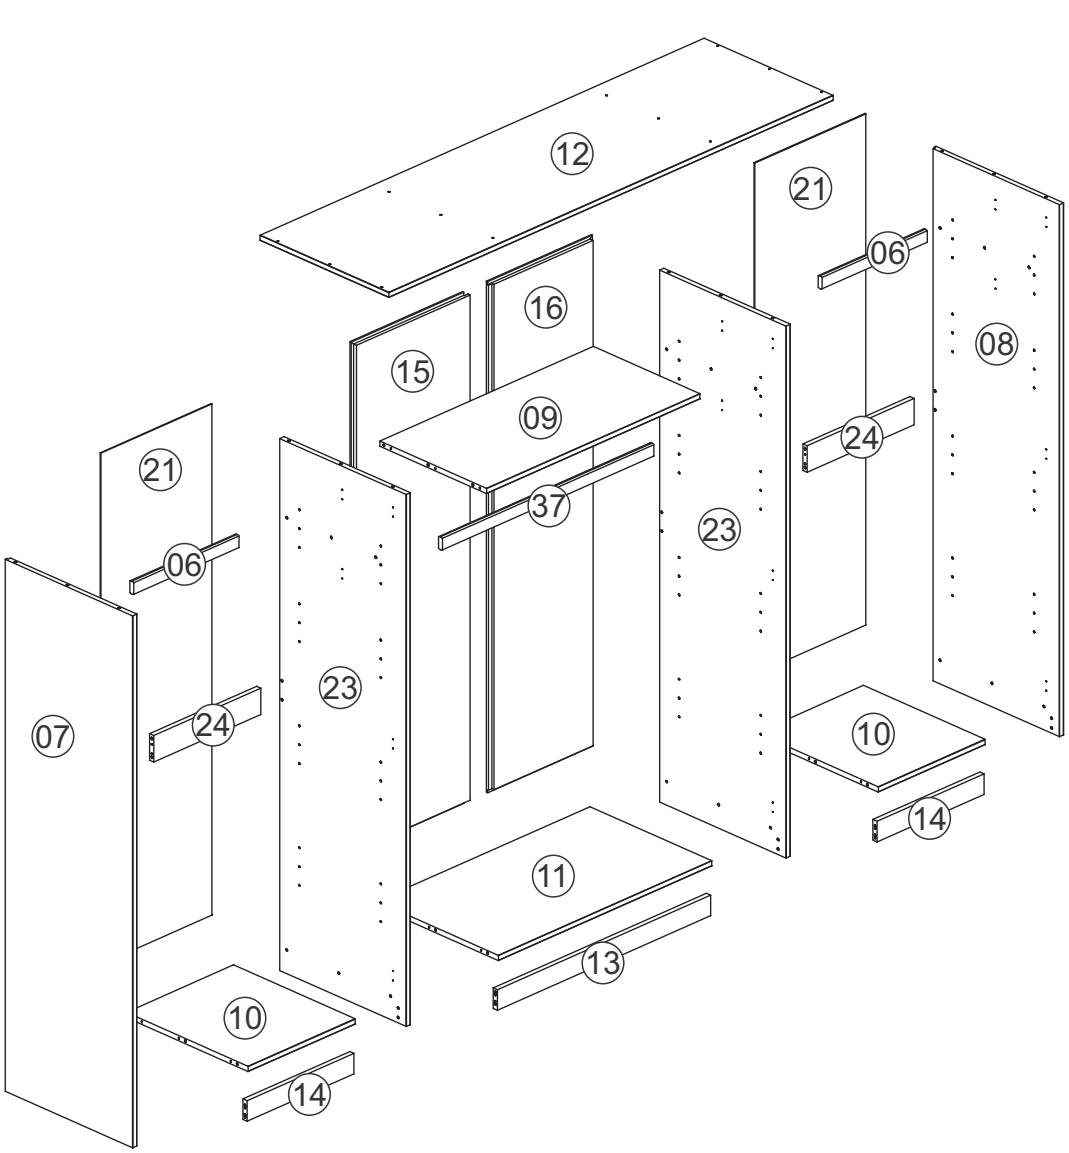


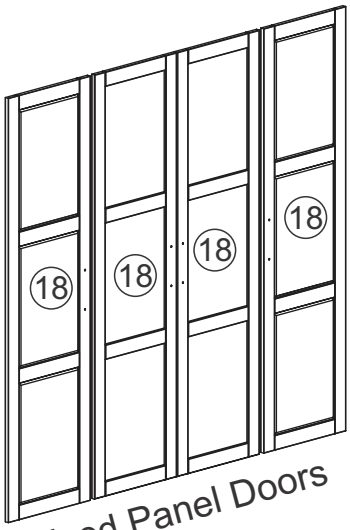



Screws Are Illustrated at Actual Size for Accurate Reference

A1	 4,0x30	45+3
A16	 4,0x40	12+1
A25	 M4x25	08+1
A44	 3,5x14	74+4
C2	 8,0x25	56+3
D3	 45x27x12	03
D10		06
D27		10+1
D35	 50x13x1,2	02
F16		12
G1	 10x10	70
H12		04

TIPOVER RESTRAINT KIT		
A47	 3,0x20	02+1
F8	 47x20x9	02
F15	 300mm	01

WARNING:
CHOKING HAZARD


Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.

WARNING:

Important Safety Notice:


This furniture includes tip-over prevention hardware, which MUST be securely attached to the wall as outlined in the assembly instructions. Failure to do so may result in serious injury or death.


01)

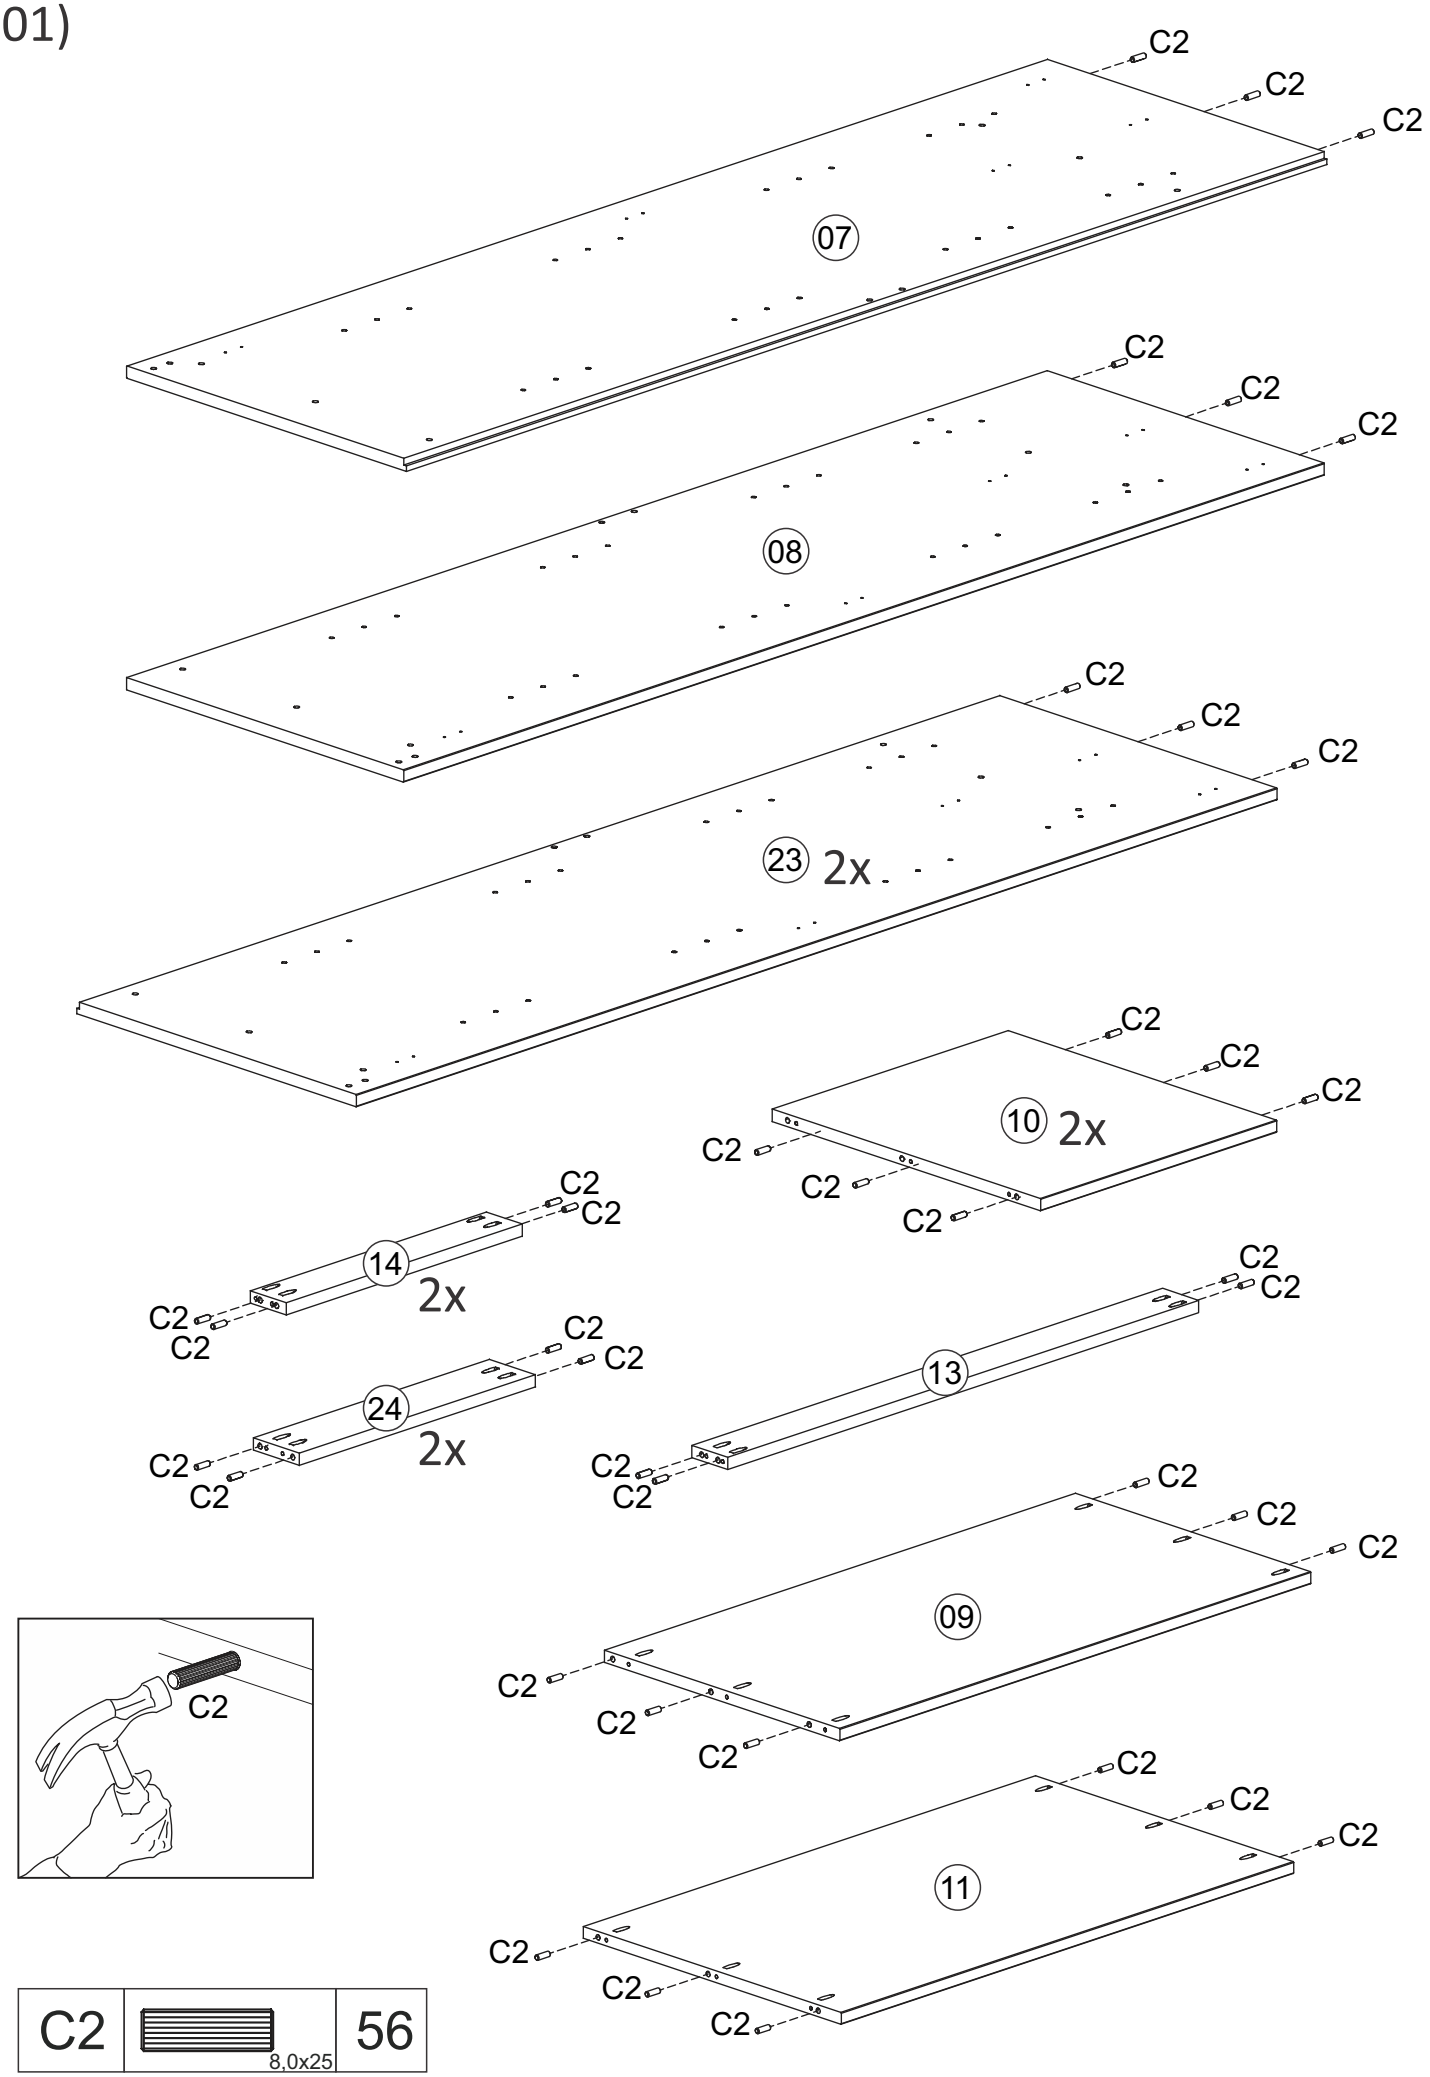


C2	8,0x25	56


02)

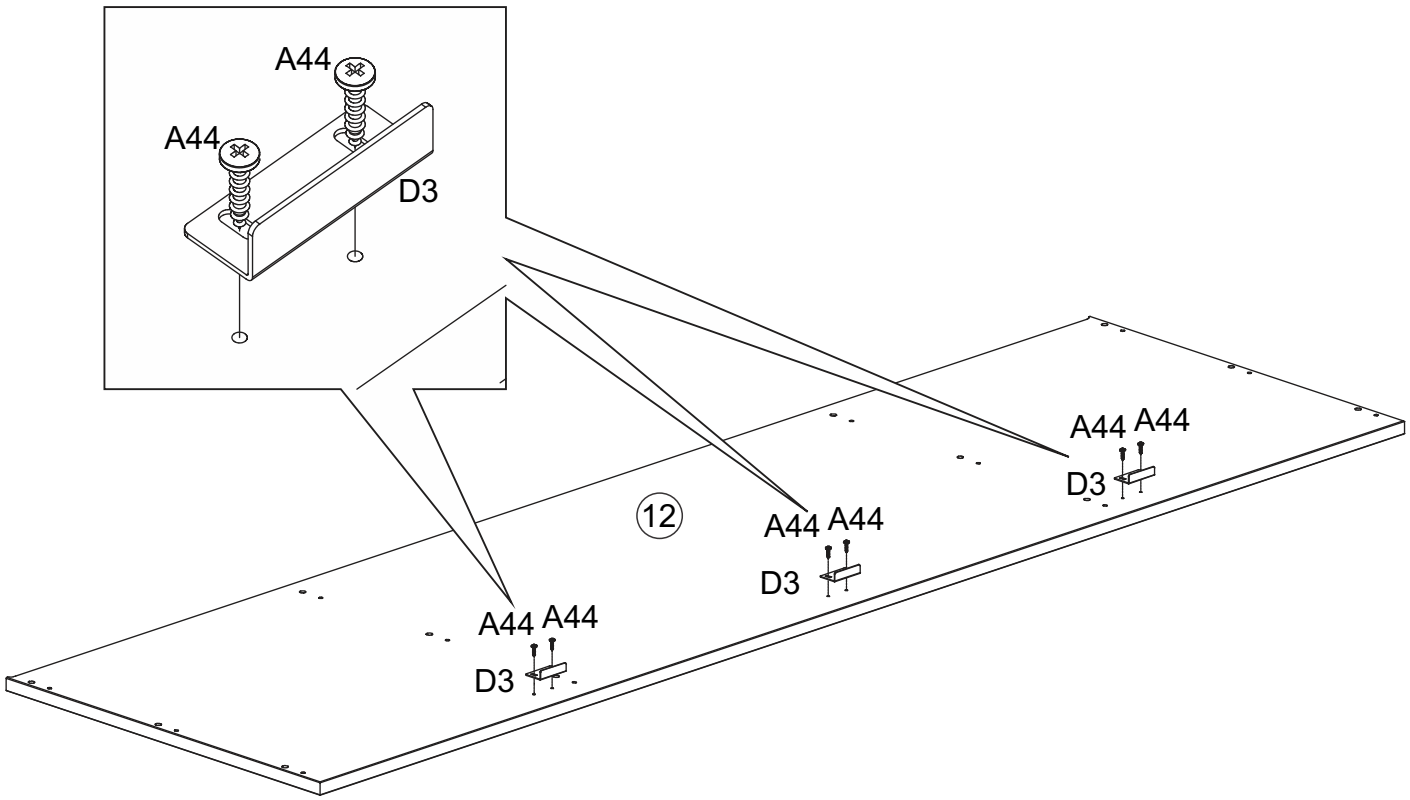

A44	 3,5x14	06


D3		03

03)

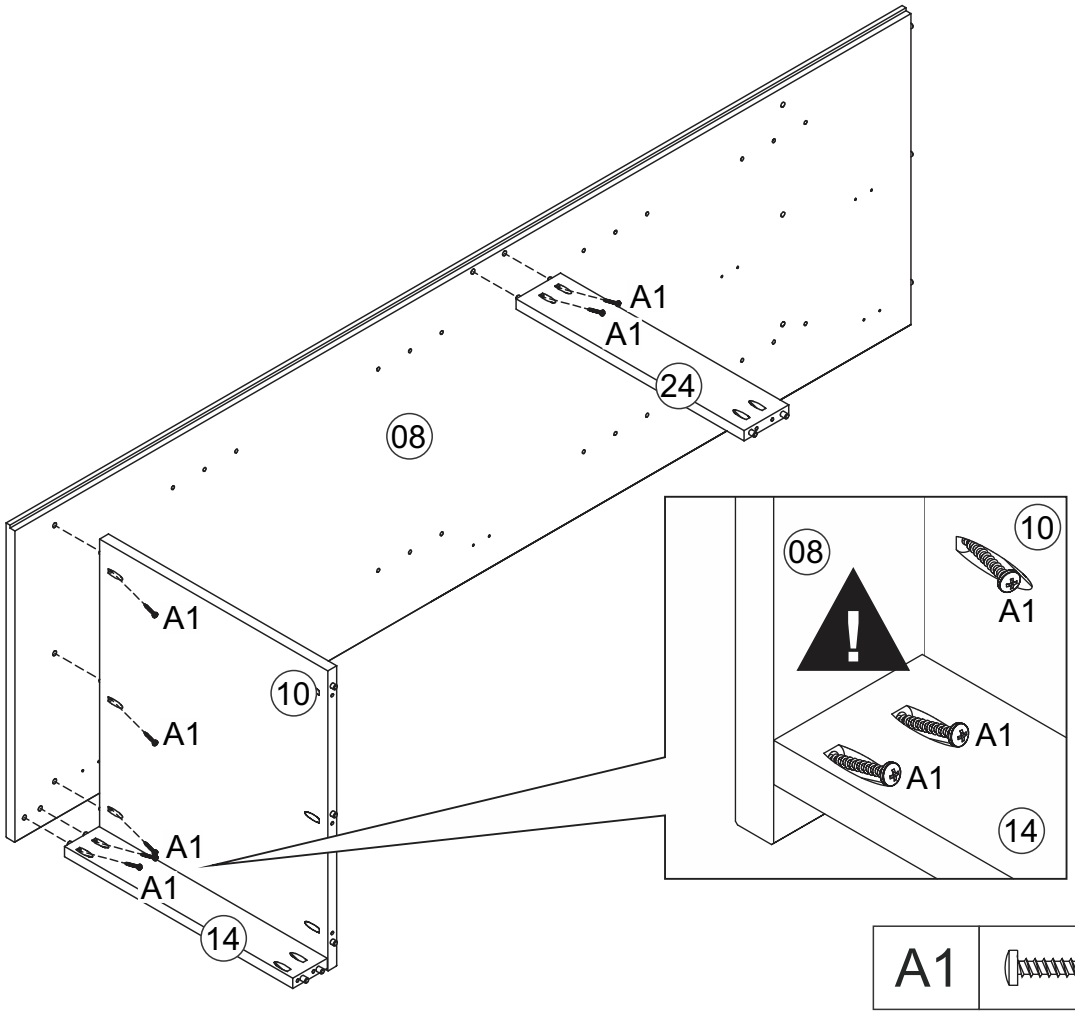


A1	 4,0x30	07

04)

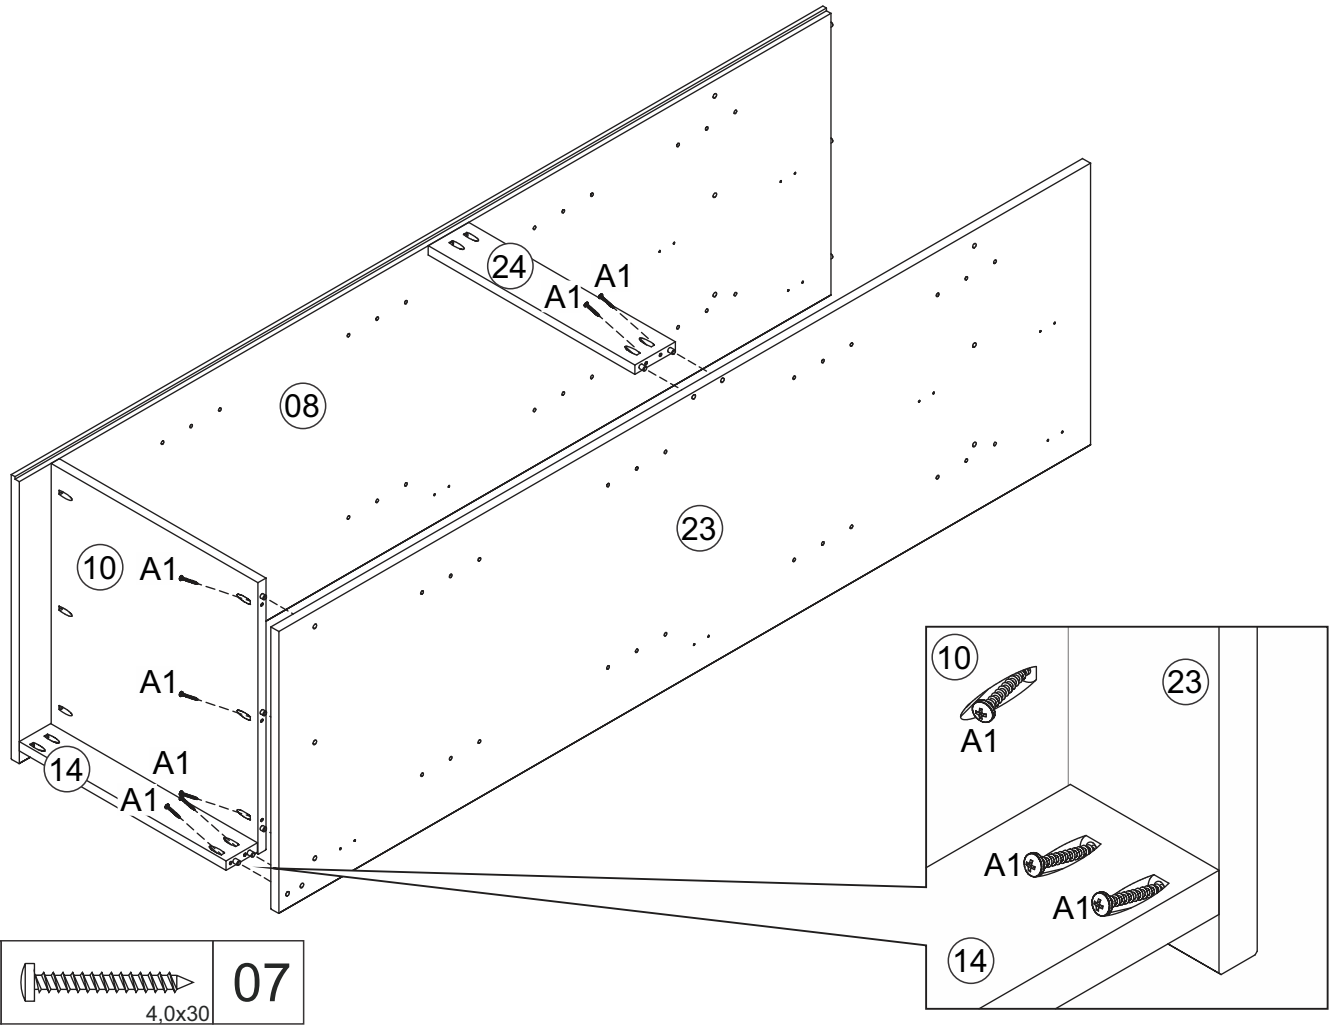


A1	4,0x30	07

05)

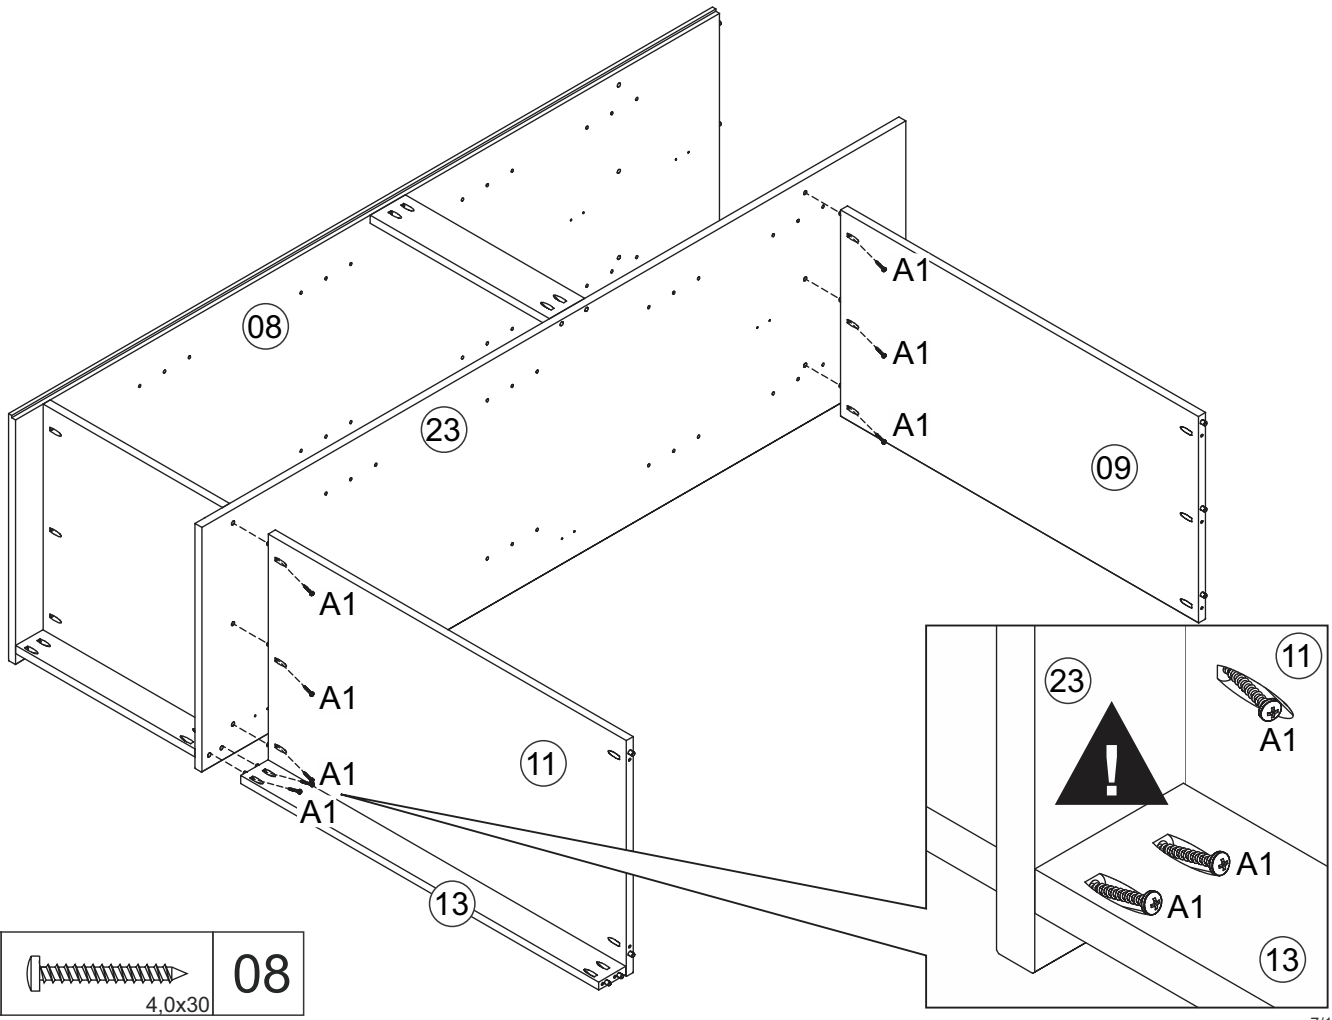


A1	4,0x30	08

06)

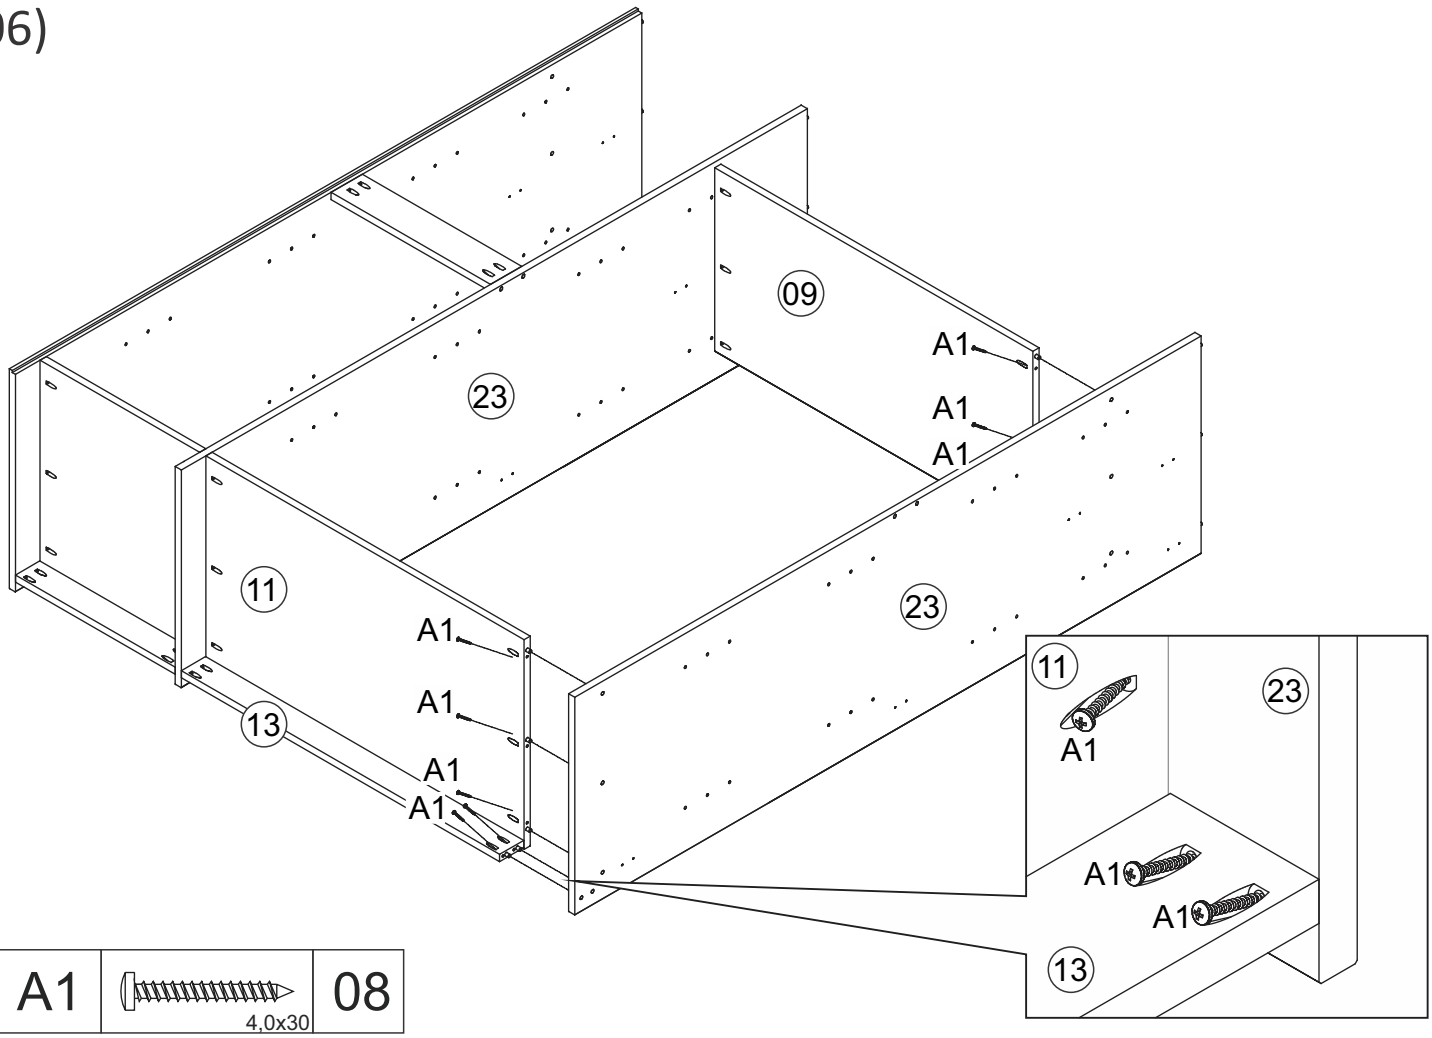


A1	4,0x30	08

07)

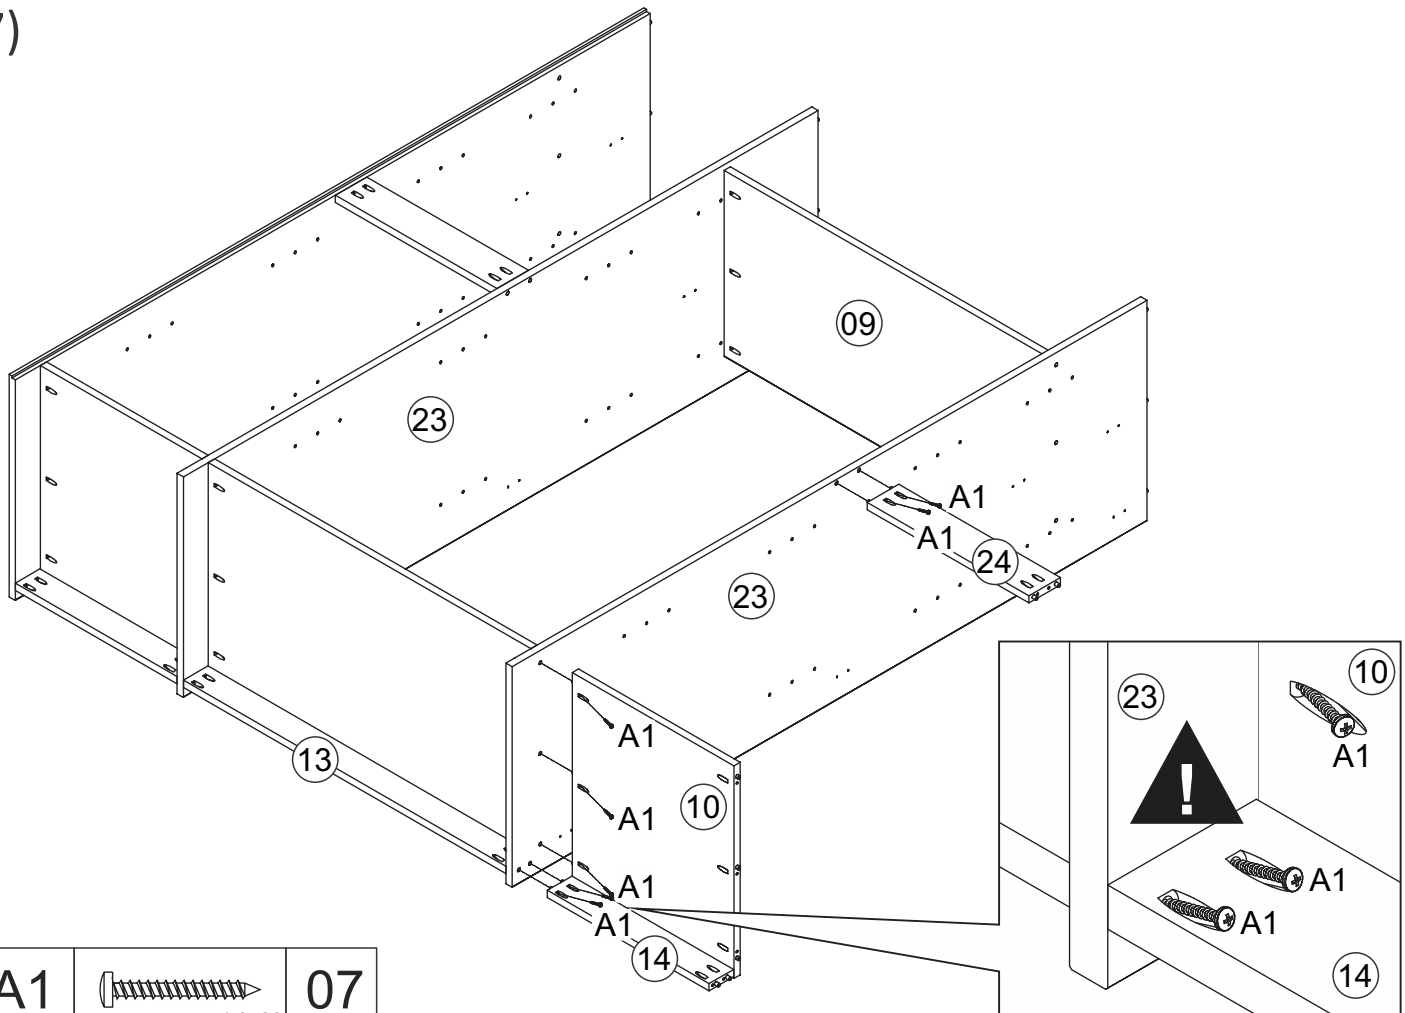


A1	4,0x30	07

08)

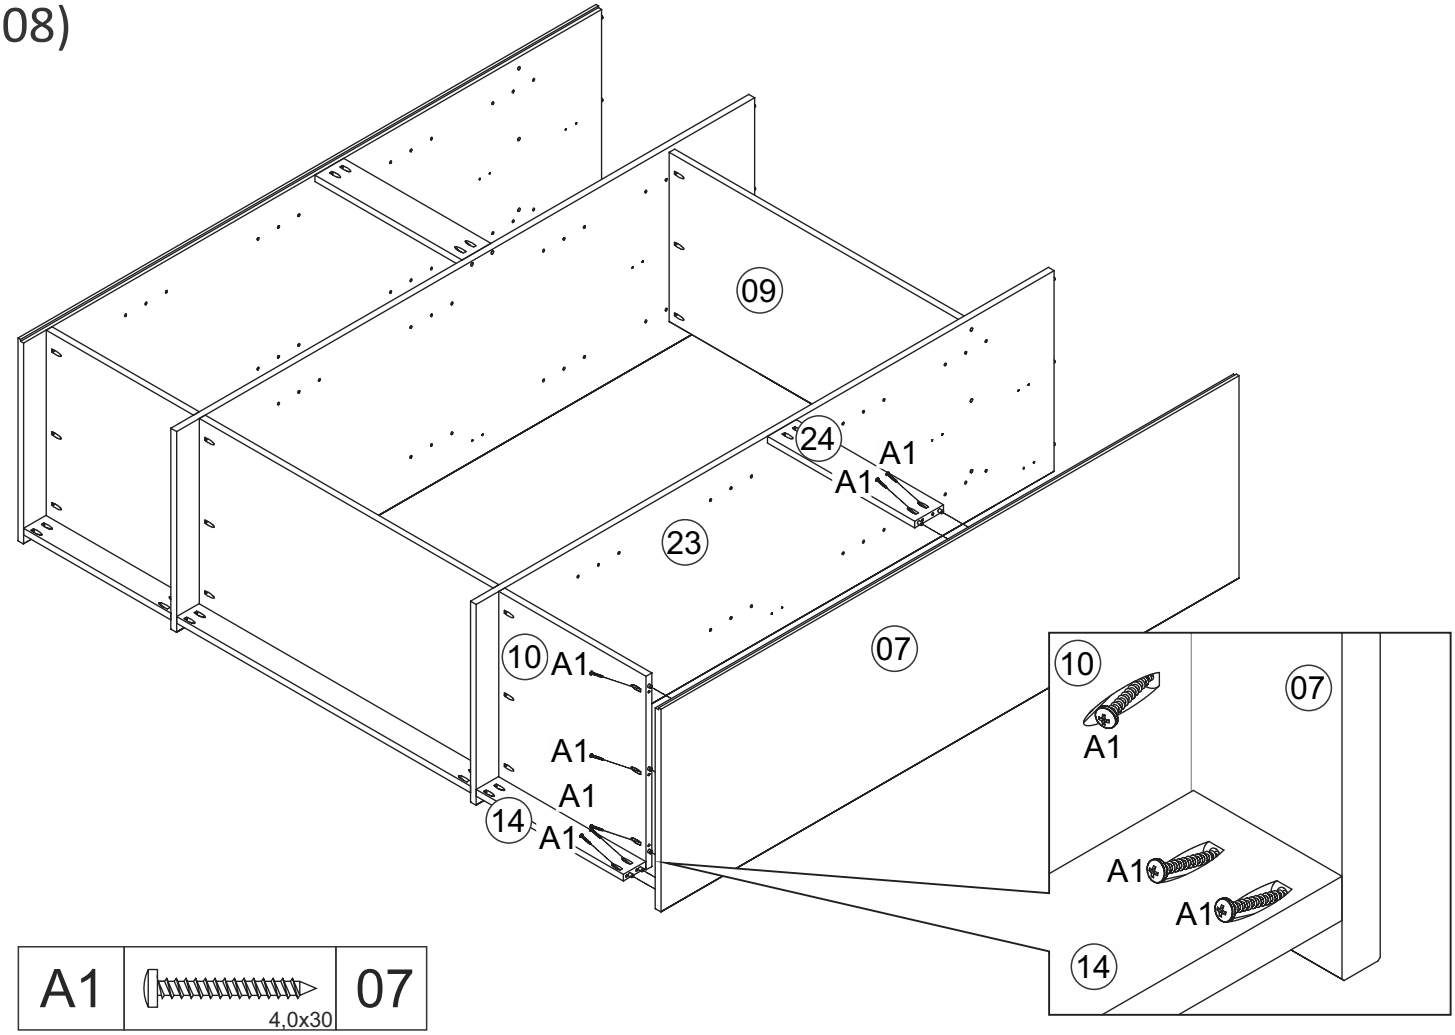


A1	4,0x30	07

09)

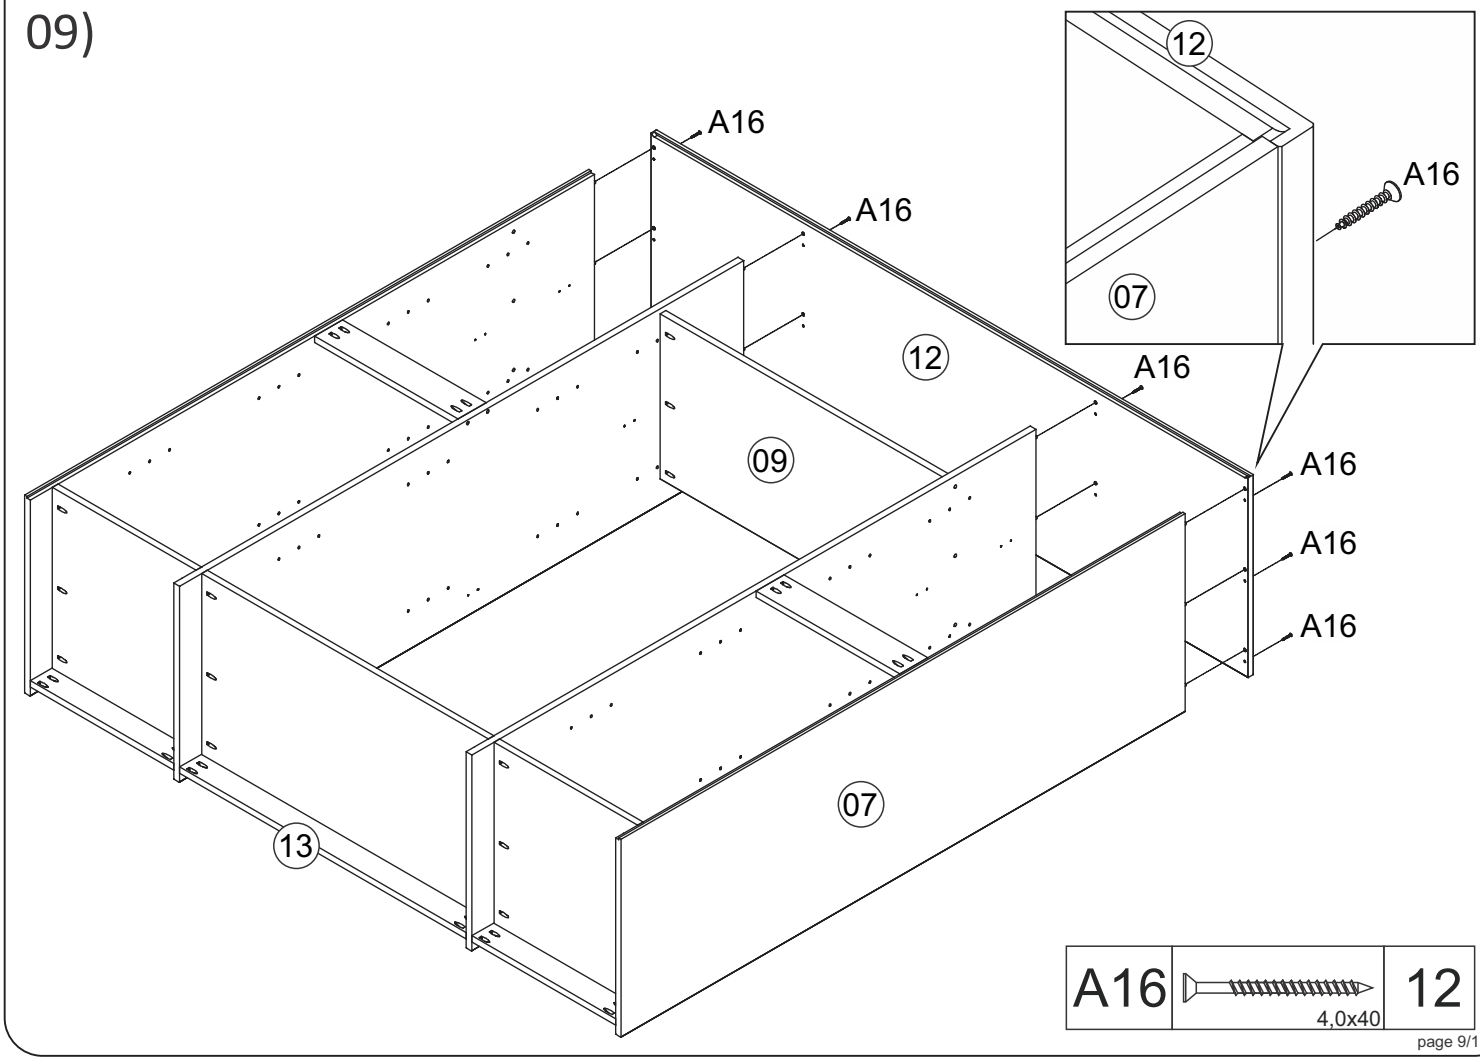


A16	4,0x40	12

10)

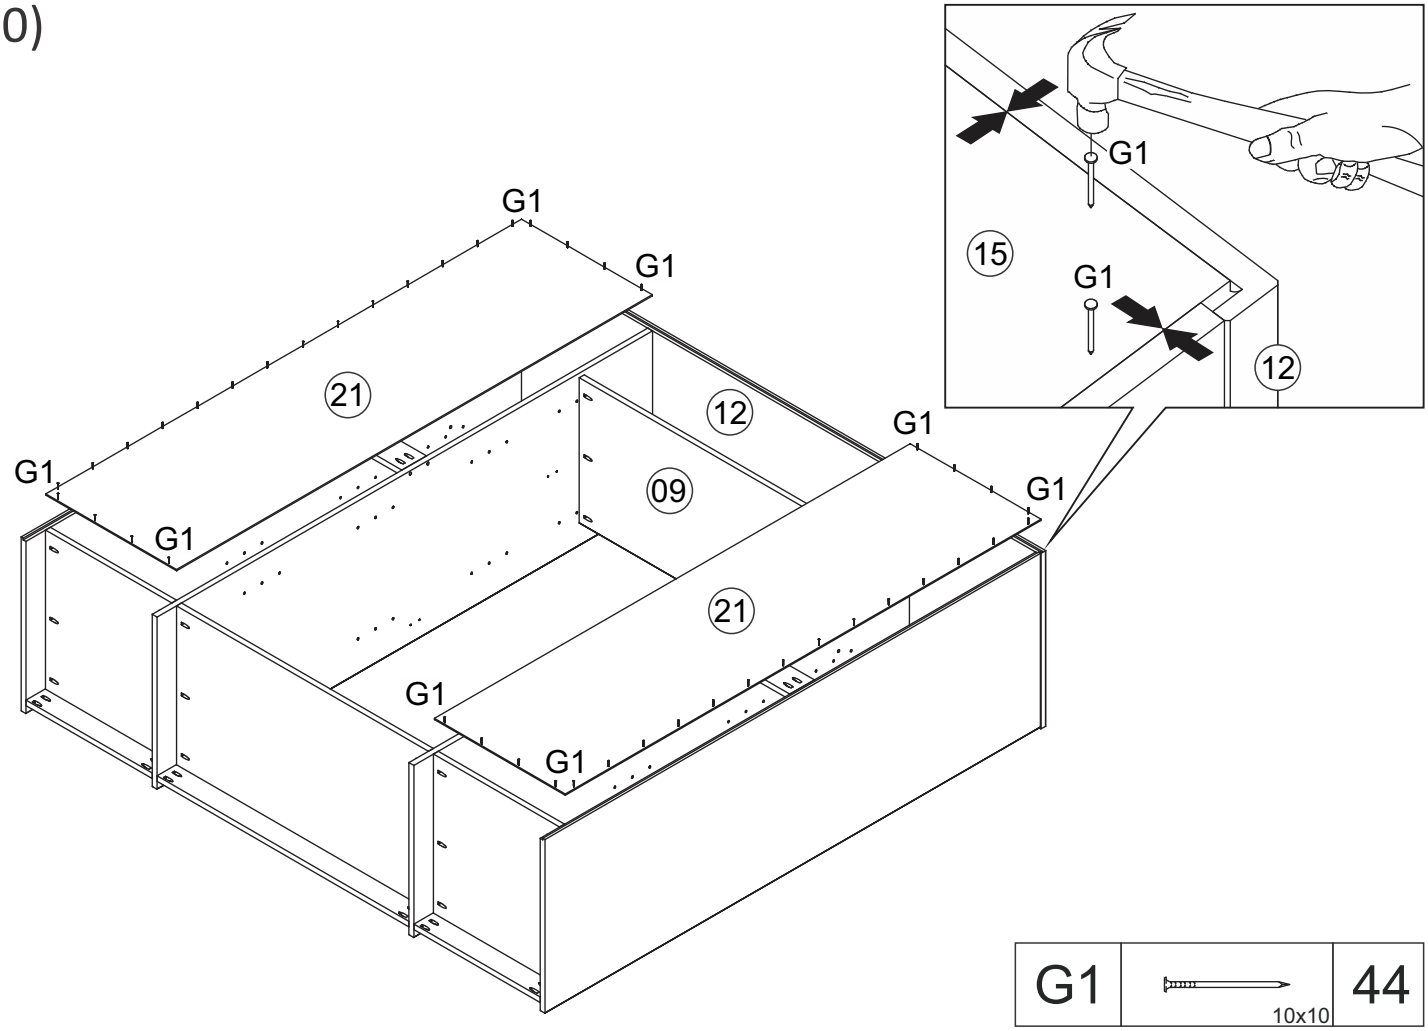

G1	10x10	44


11)

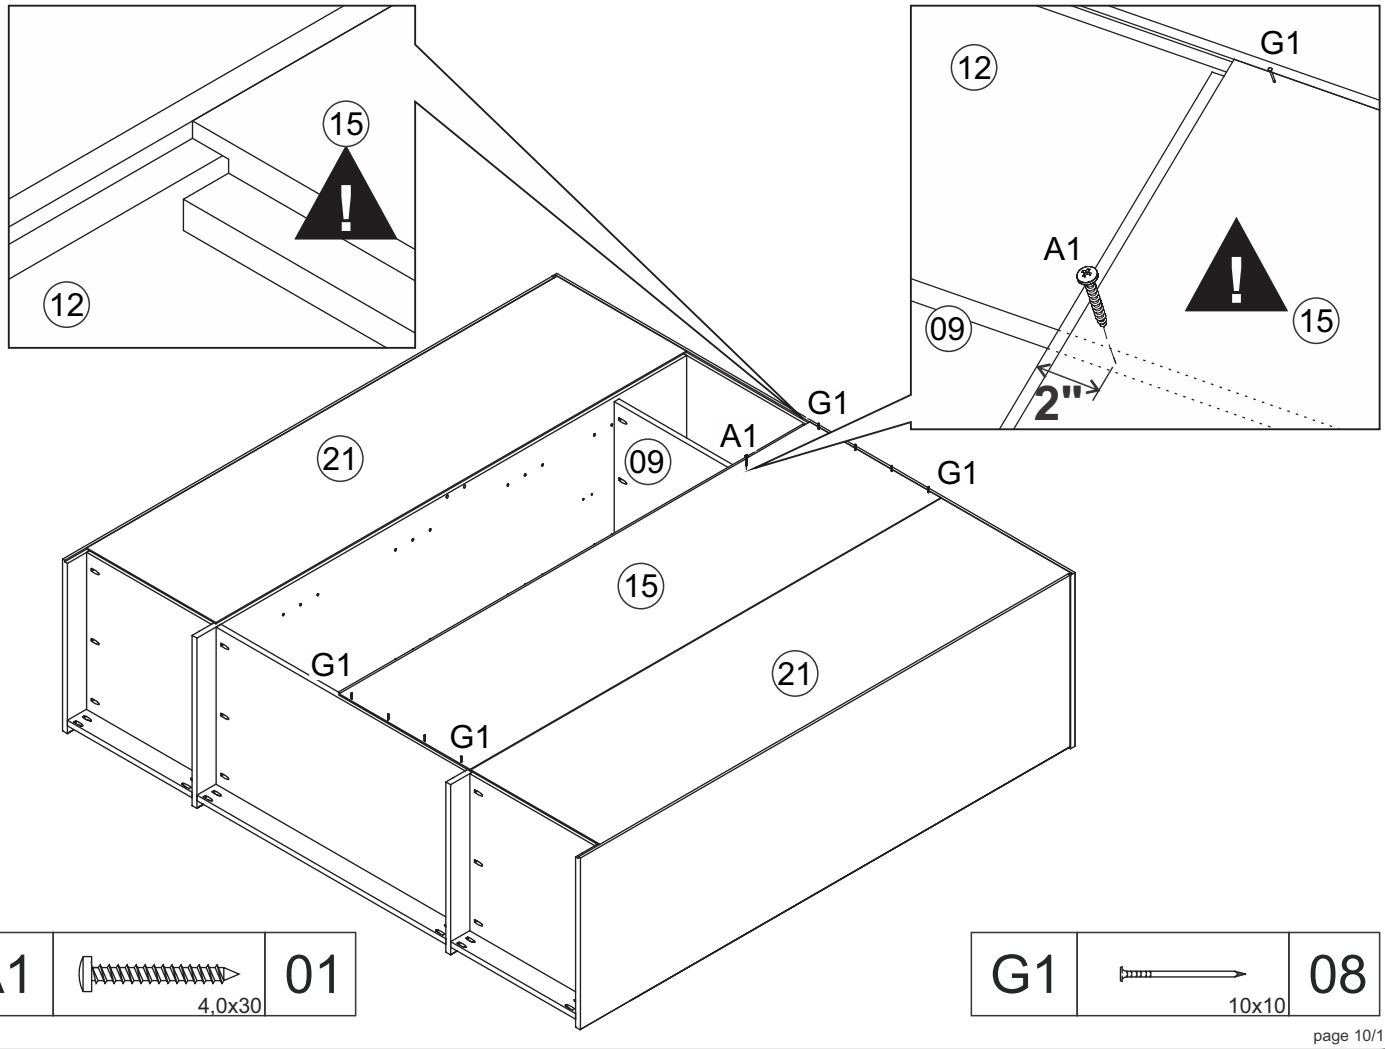

A1	4,0x30	01


G1	10x10	08

12)

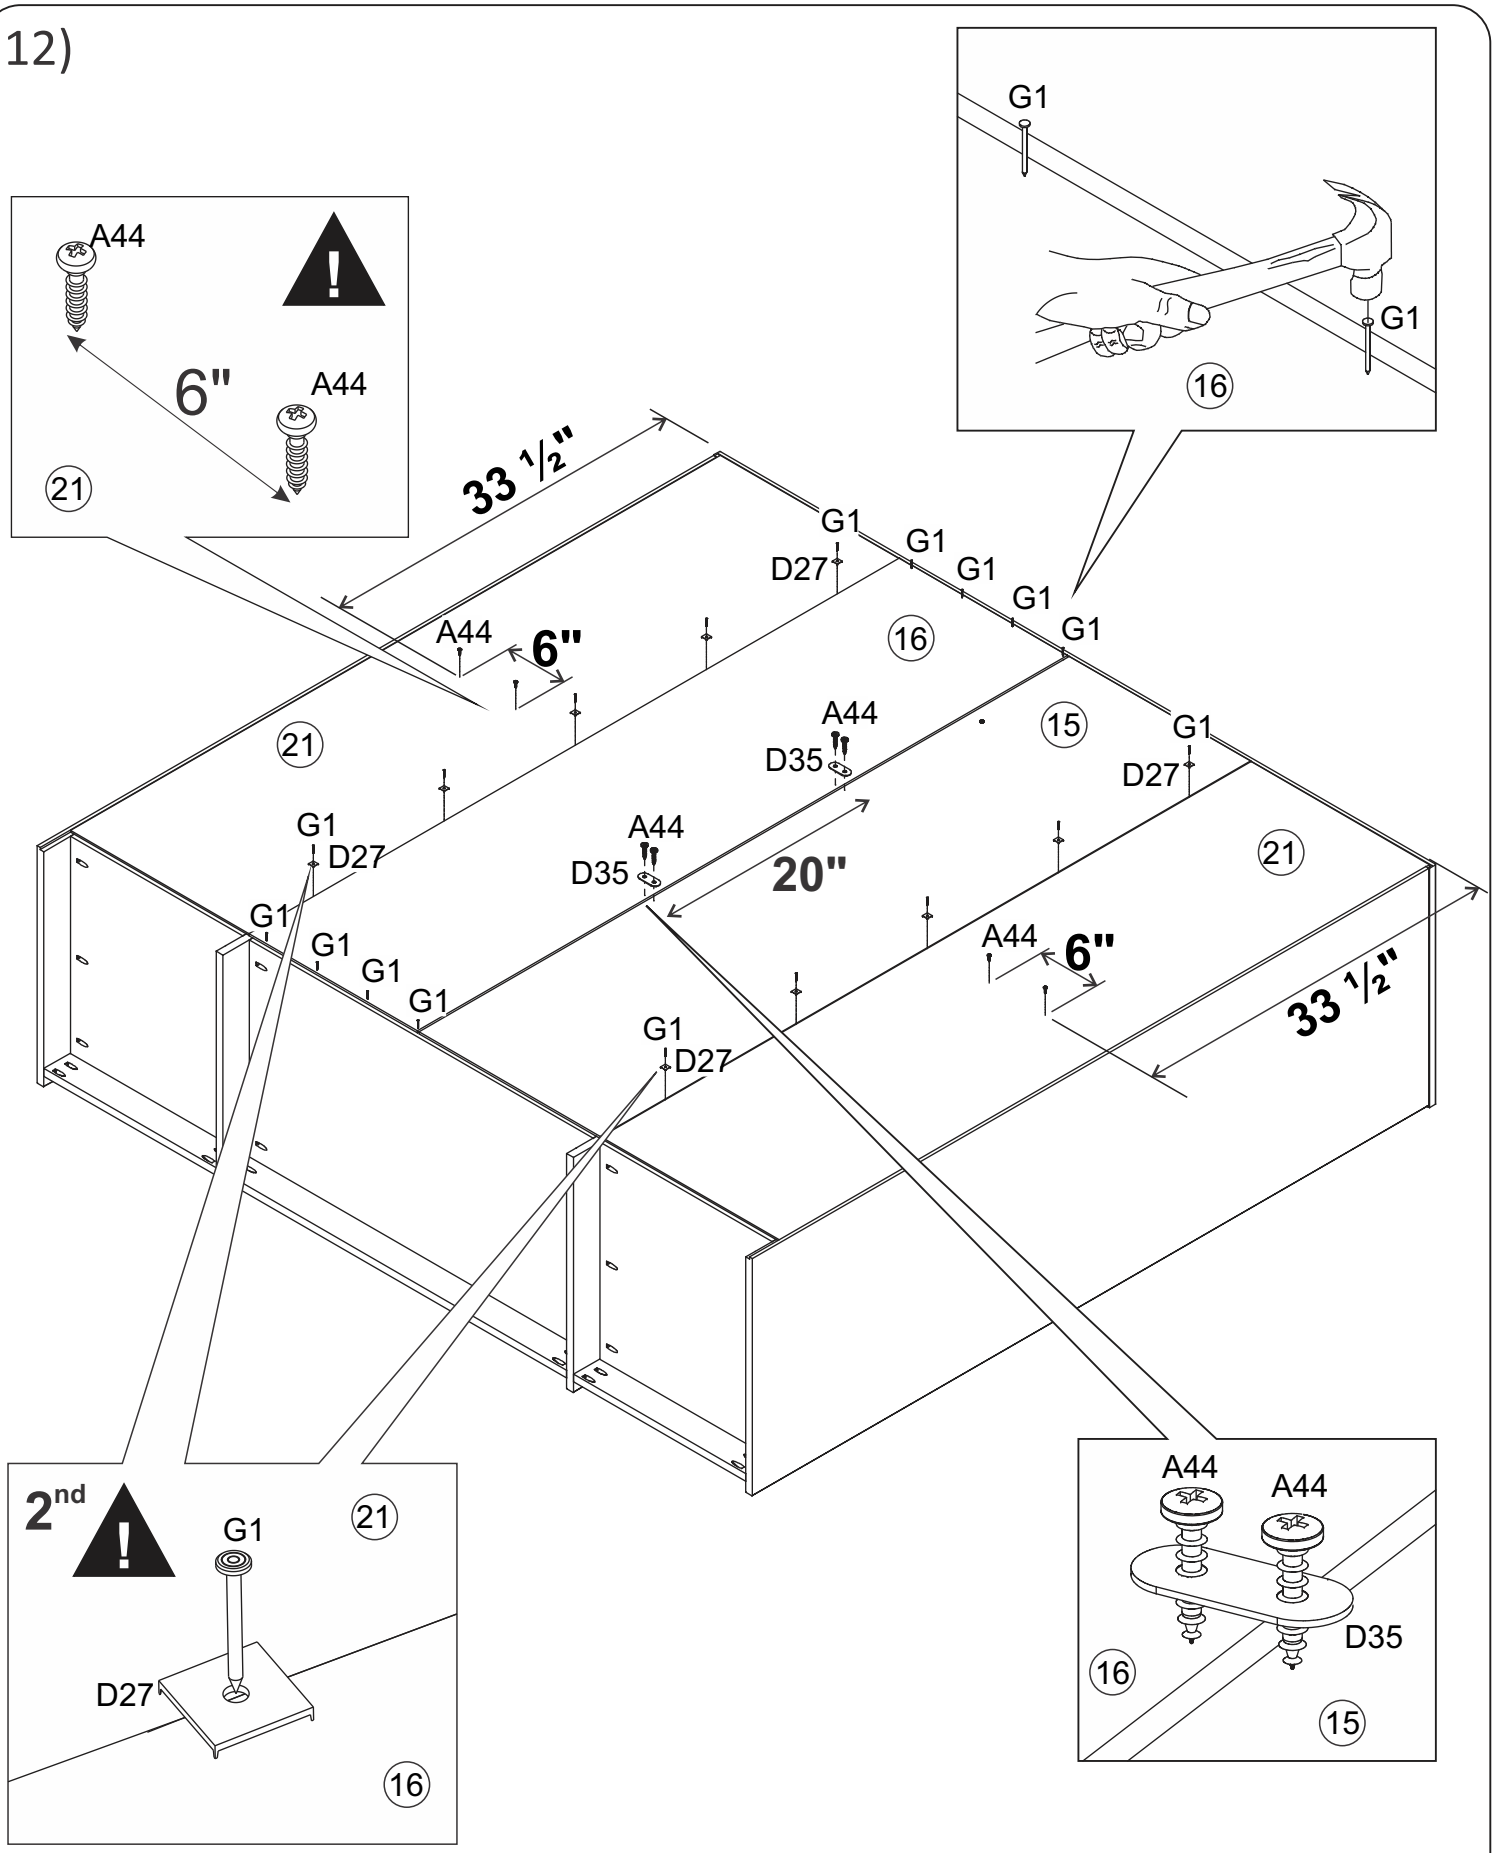


A44	3,5x14	08
D27		10
D35		02
G1	10x10	18

13)

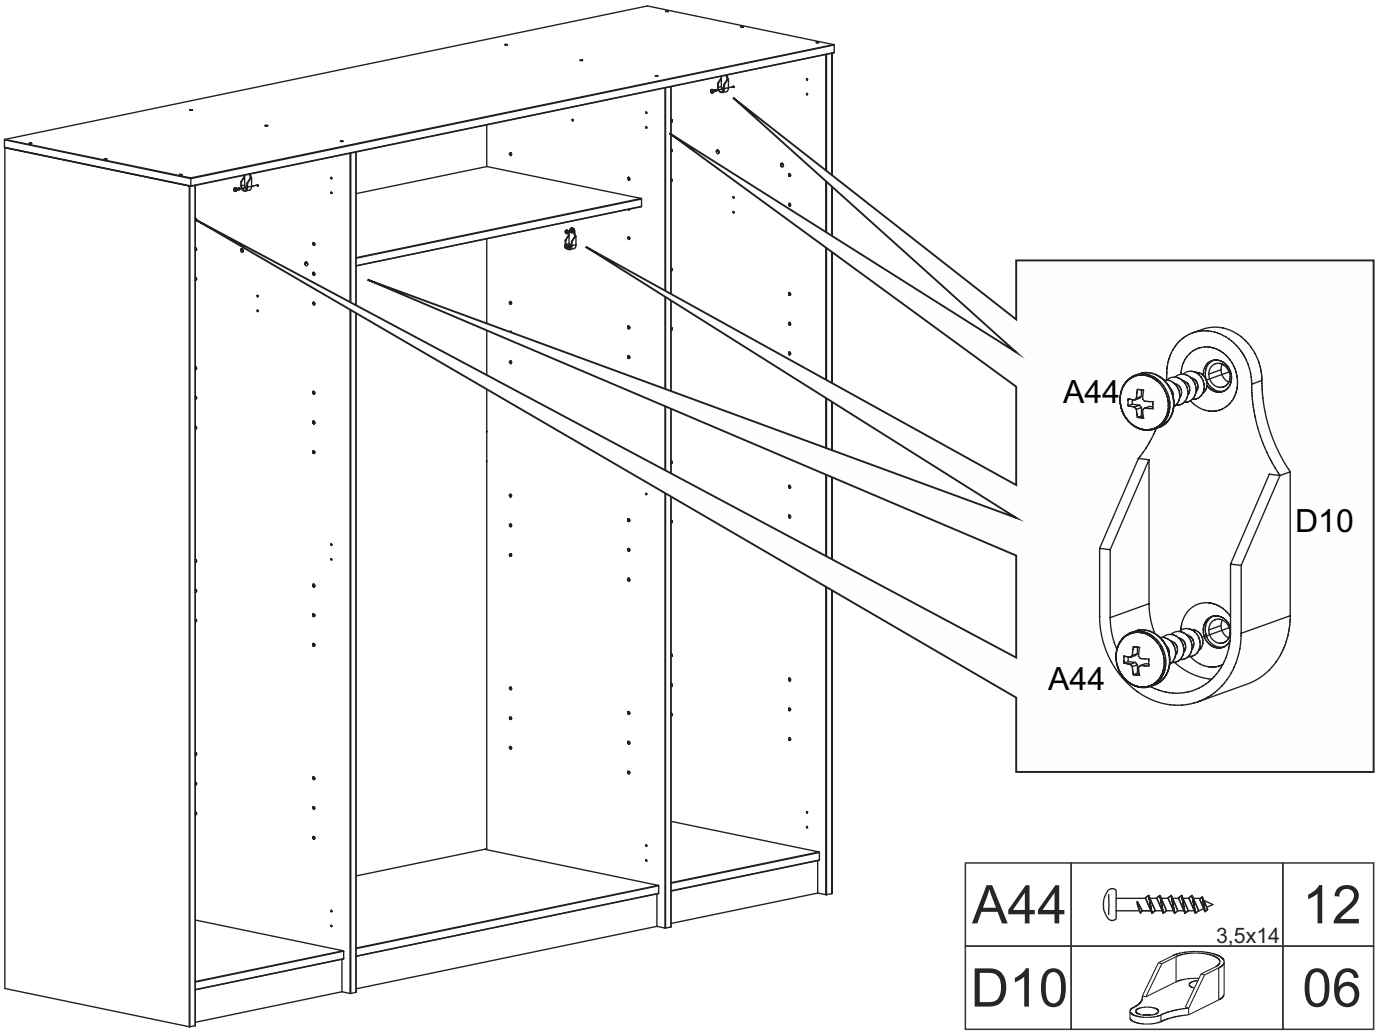


A44	3,5x14	12
D10		06

14)

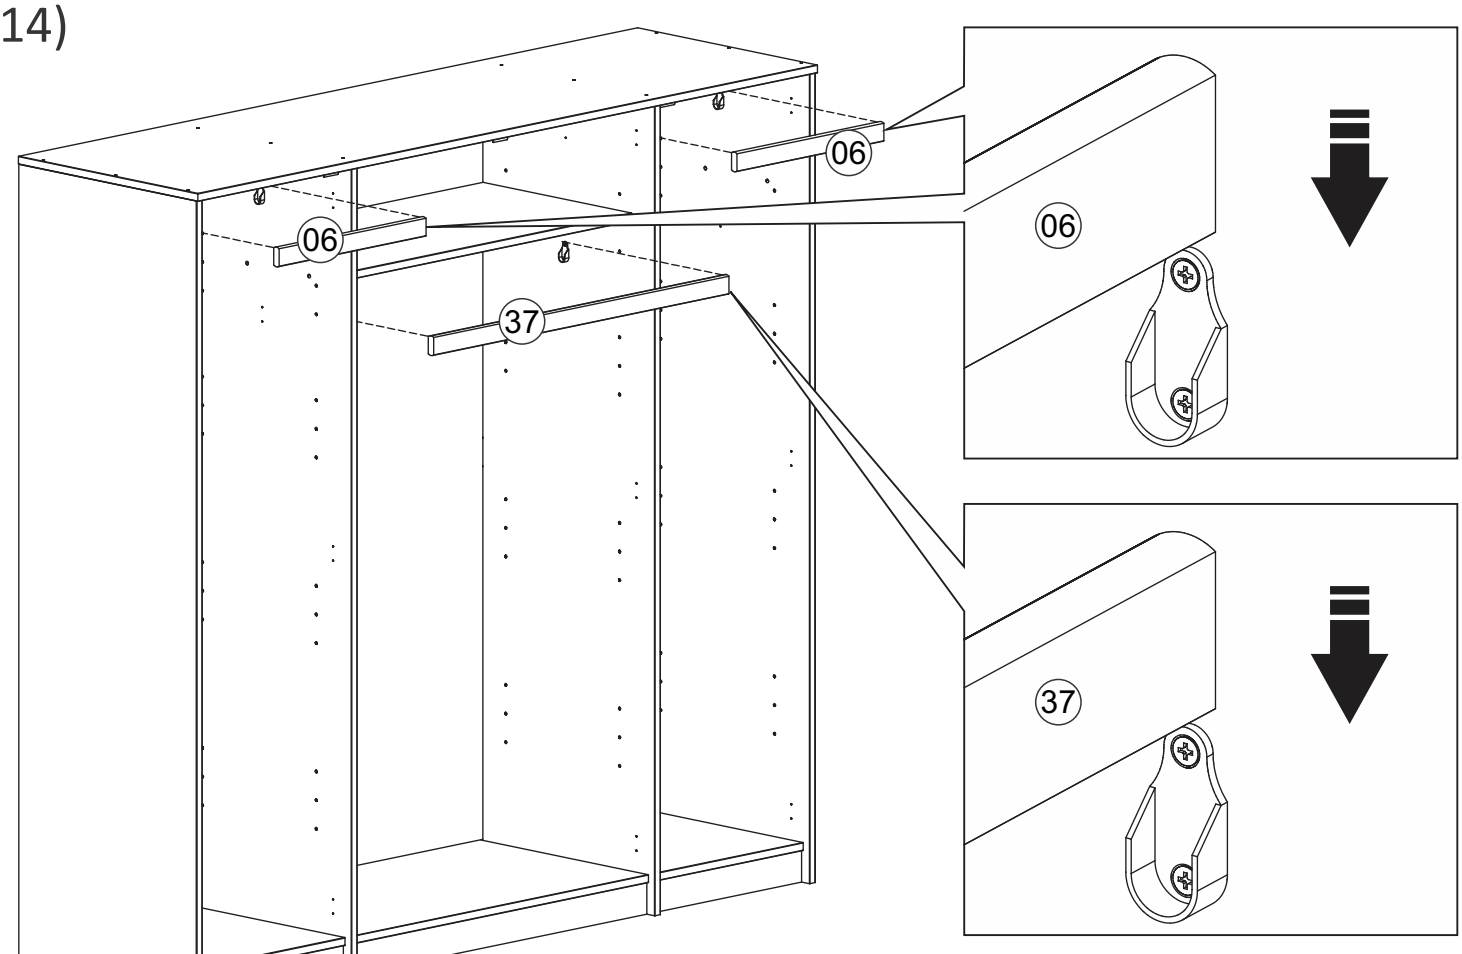


15)

If the hinge (F16) is detached, attach it to the hinge plate by aligning and pushing it in until it clicks securely into place.

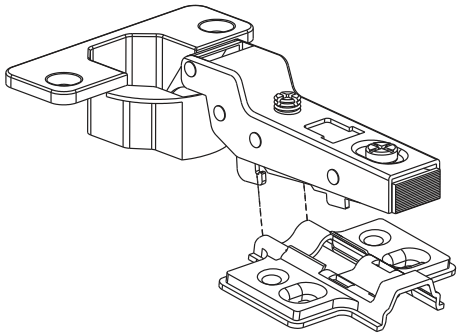


F16

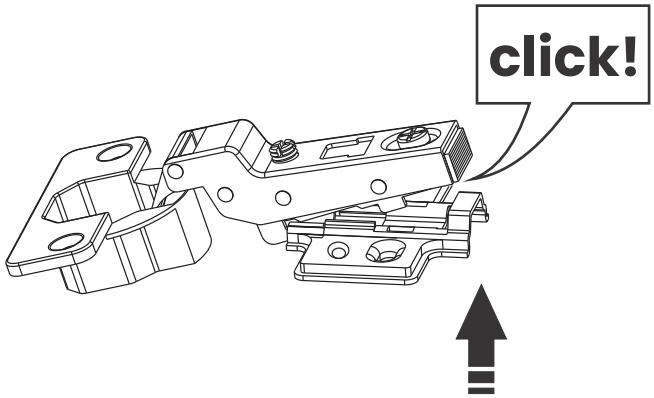


16)

4x

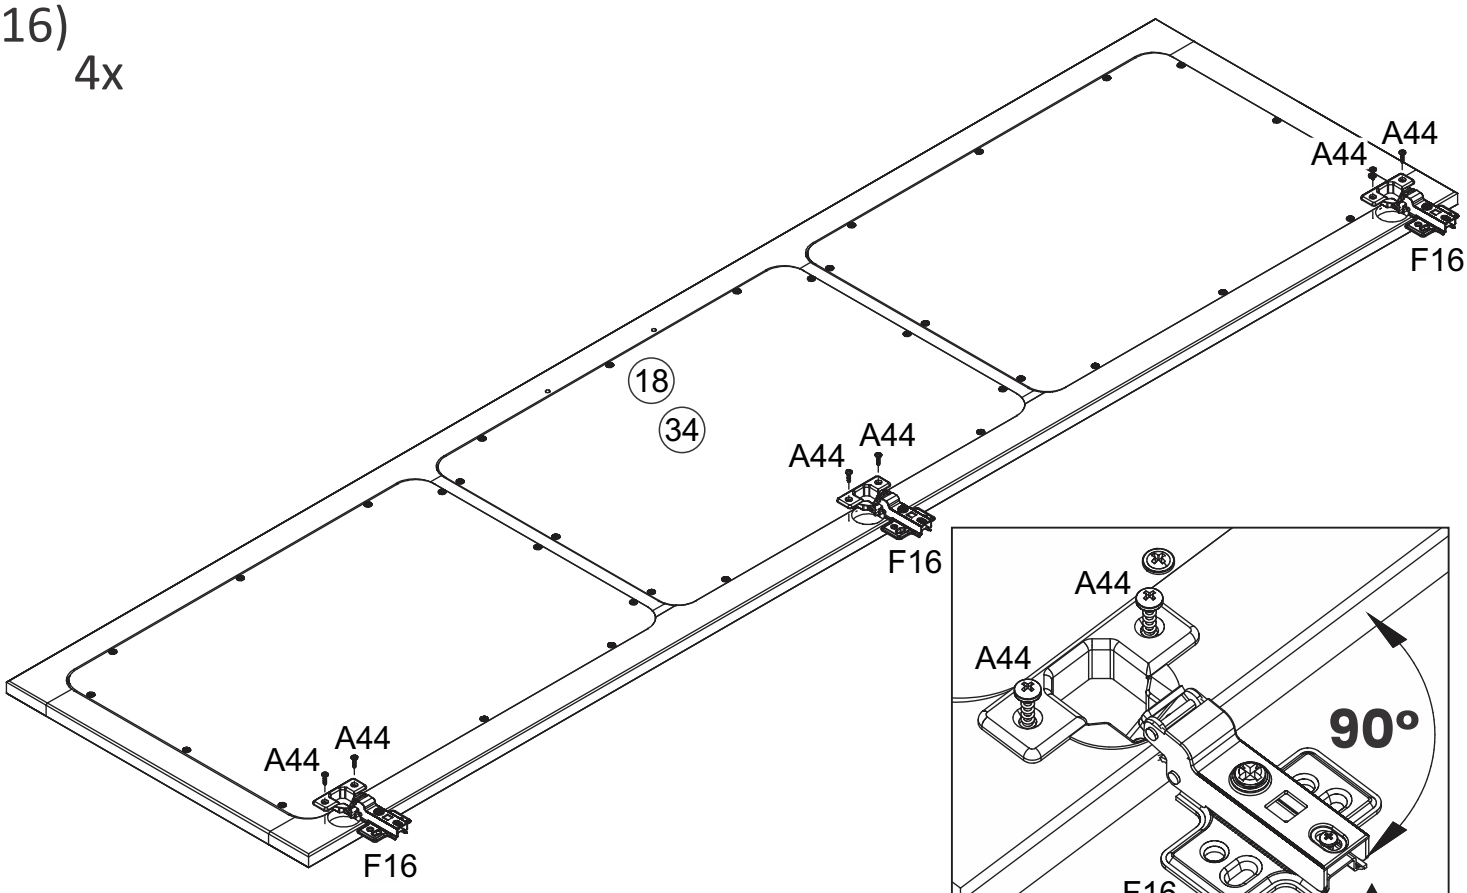


A44	3,5x14	24
F16		12

17)

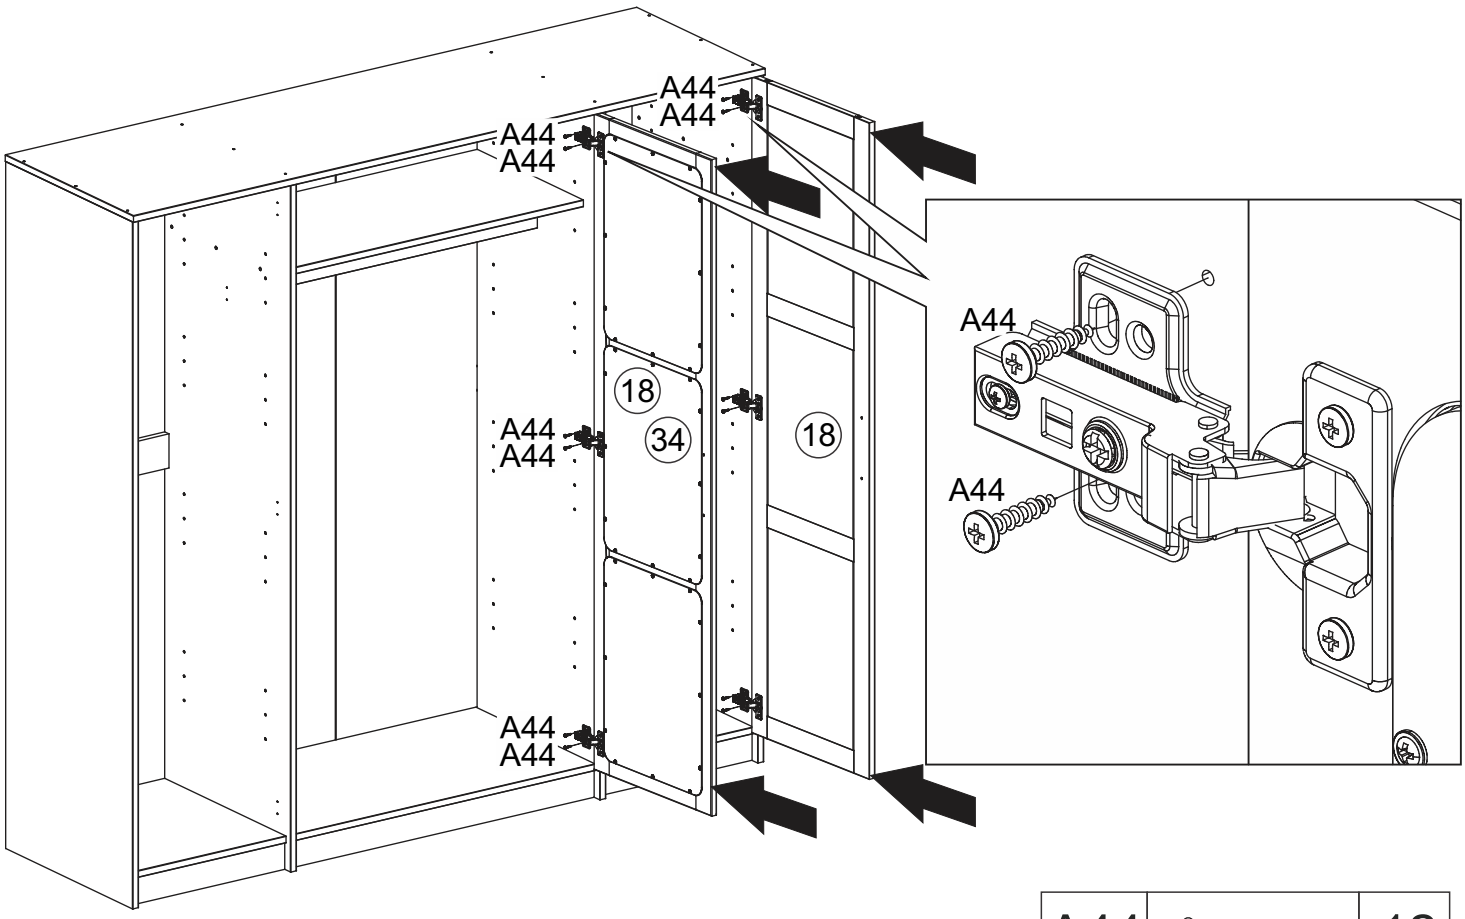


A44	3,5x14	12

18)

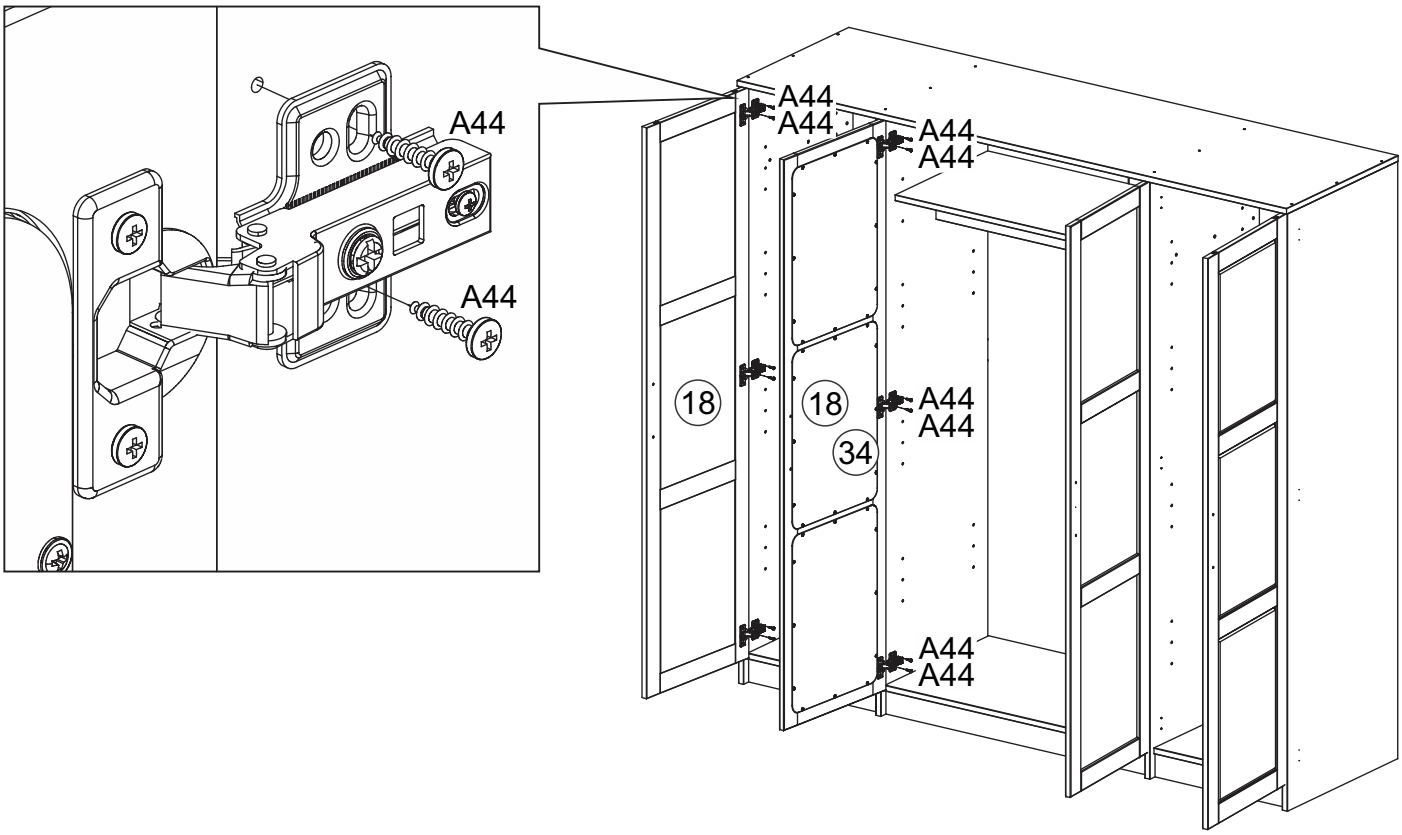

A44	3,5x14	12


19)

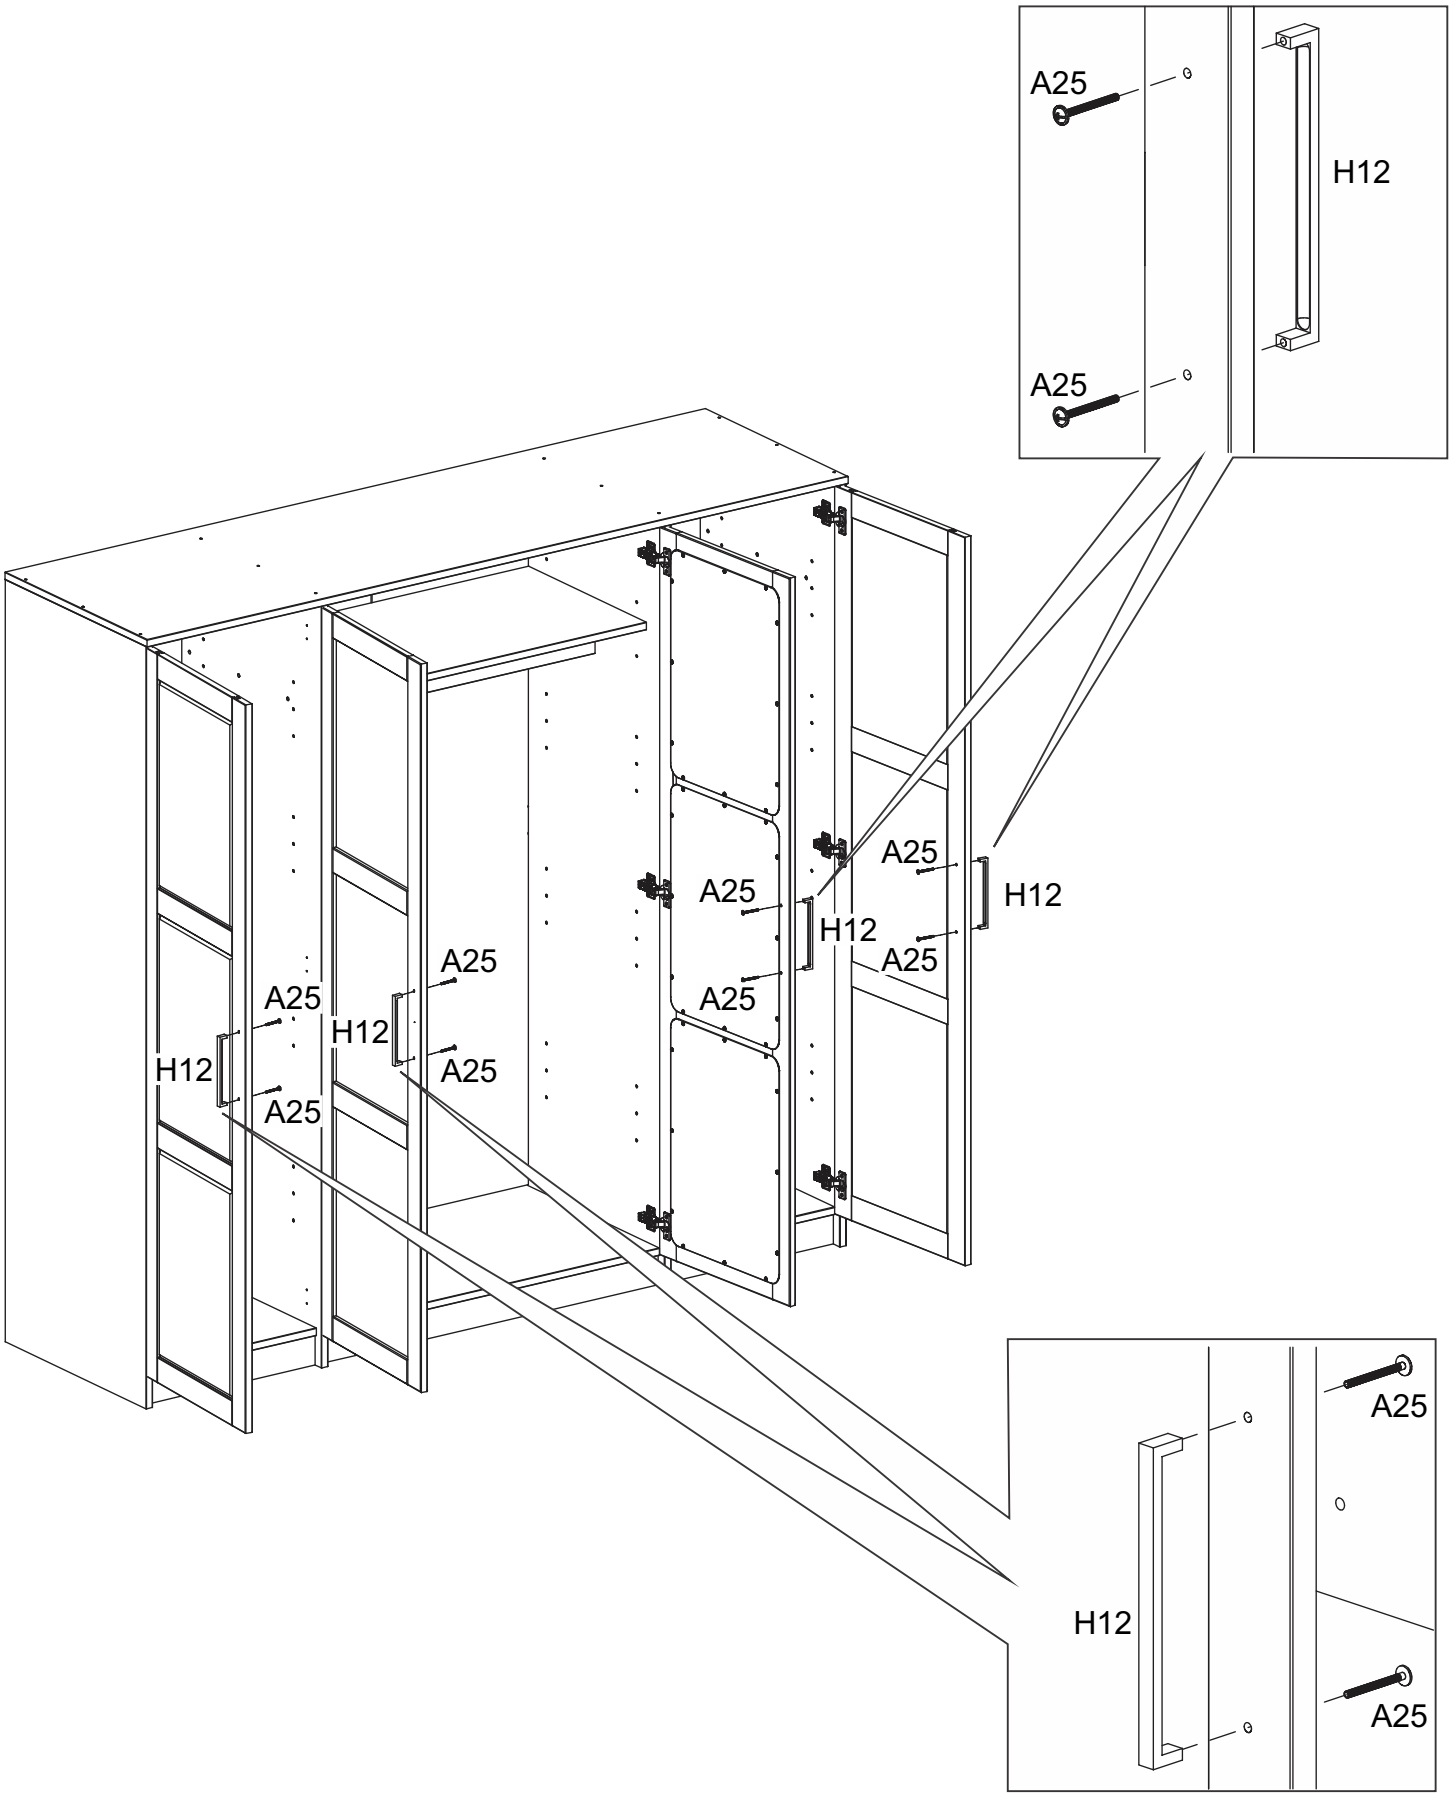


A25	M4x25	08


H12		04

20) Align Crooked Doors

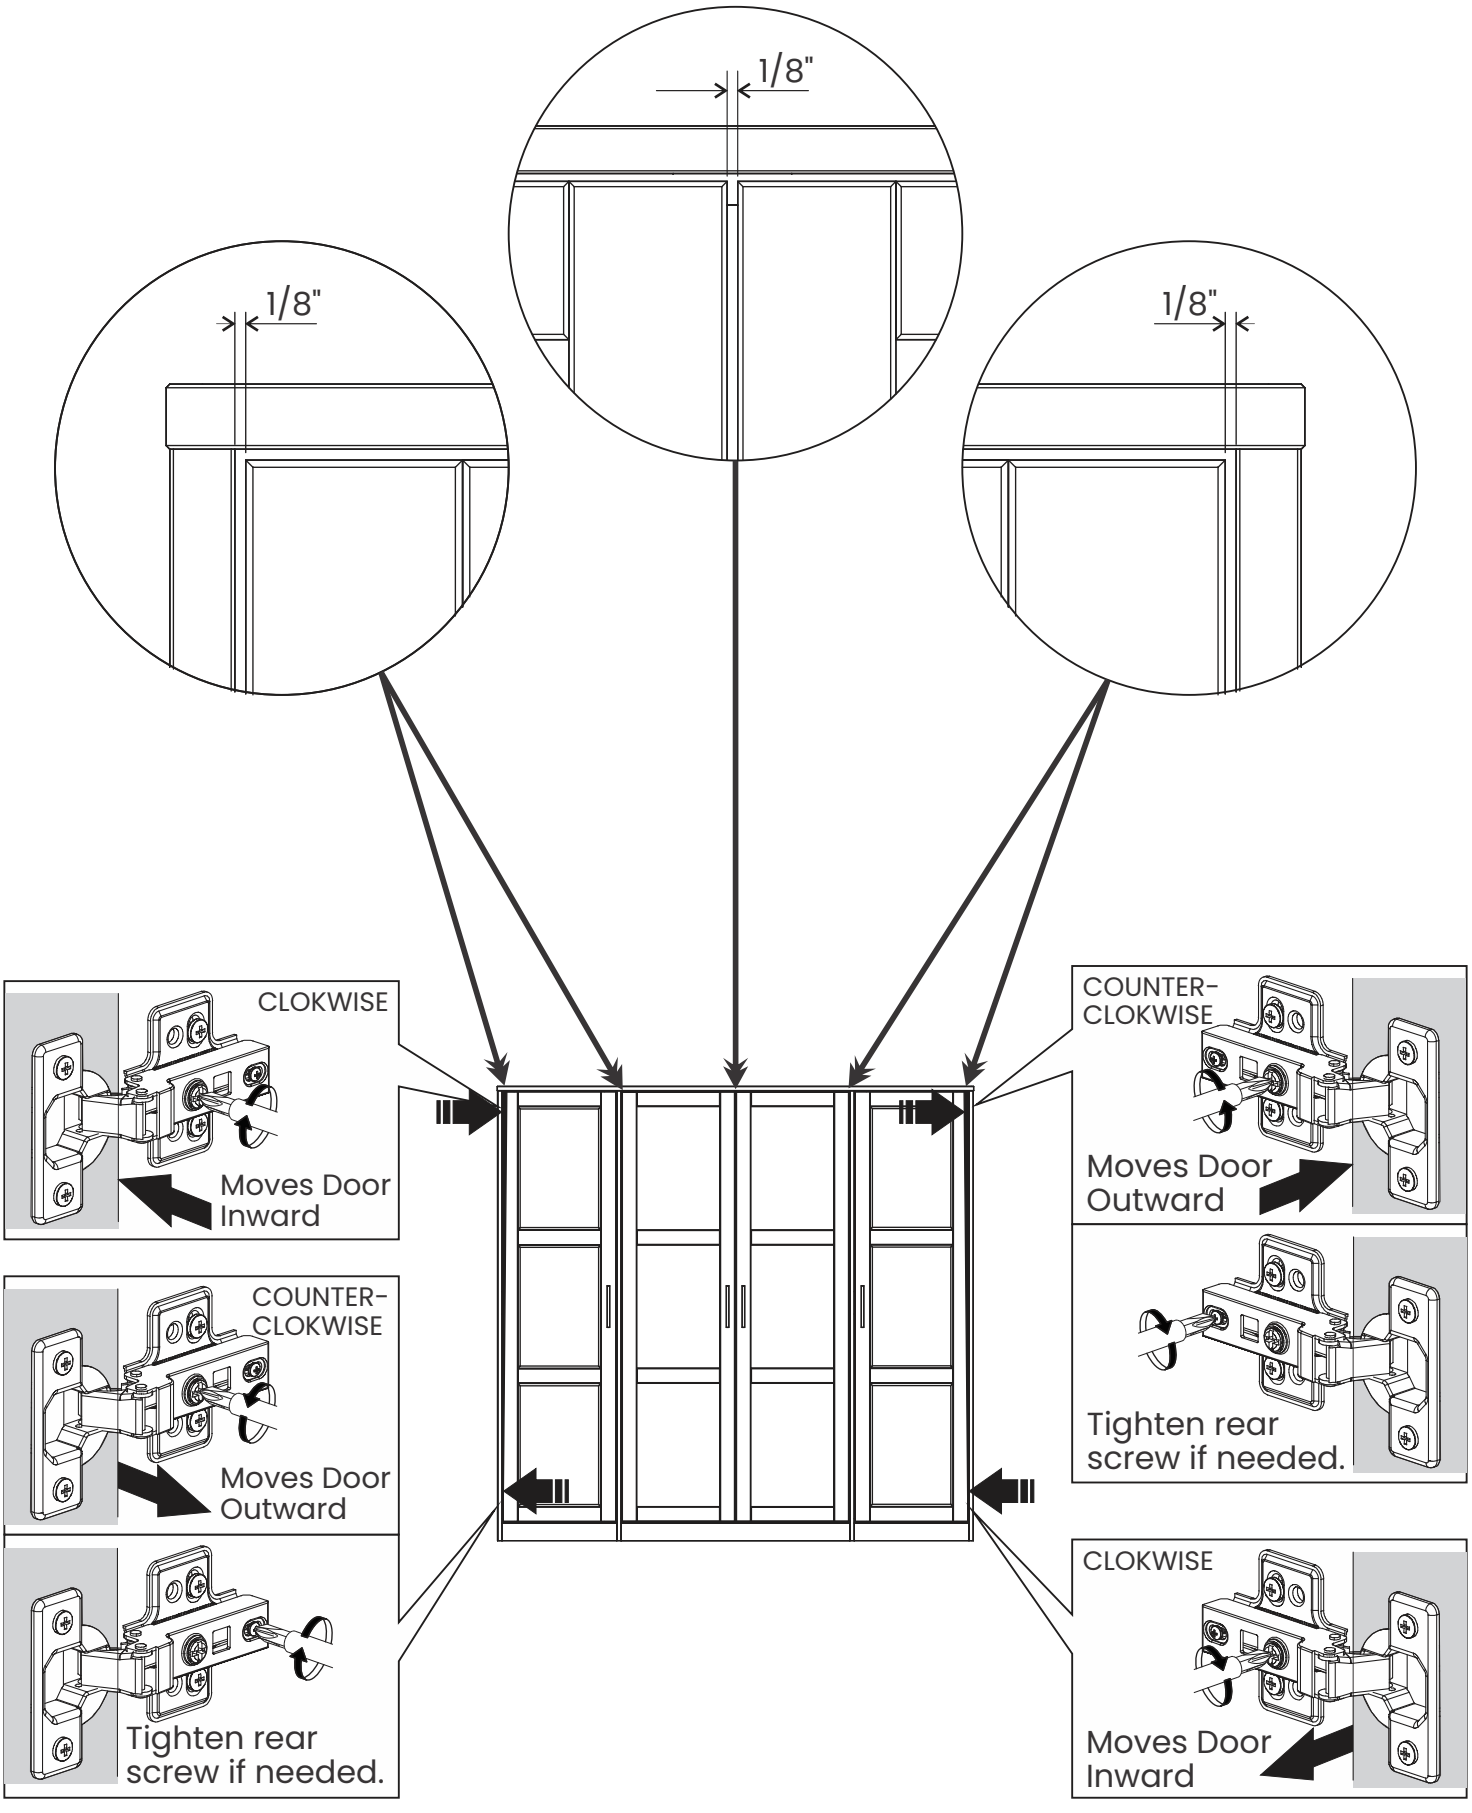


21) To align the doors with the sides of the wardrobe

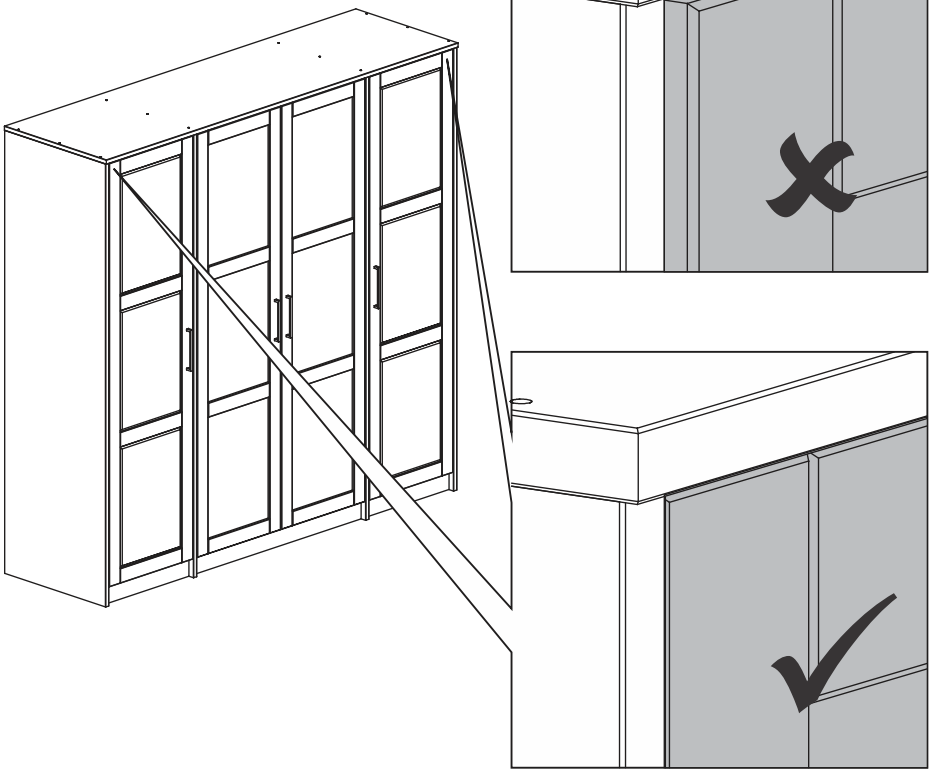


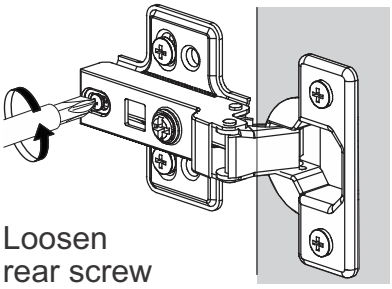

Loosen
rear screw

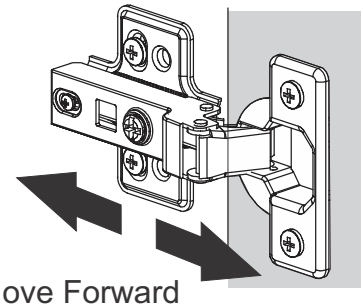



Move Forward
or Backward

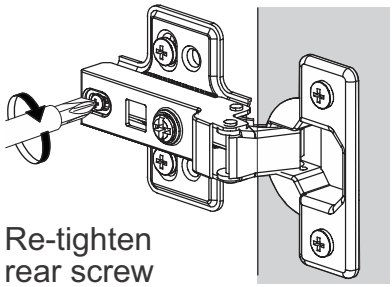


Re-tighten
rear screw

22) Adjusting the space between the door and the top.

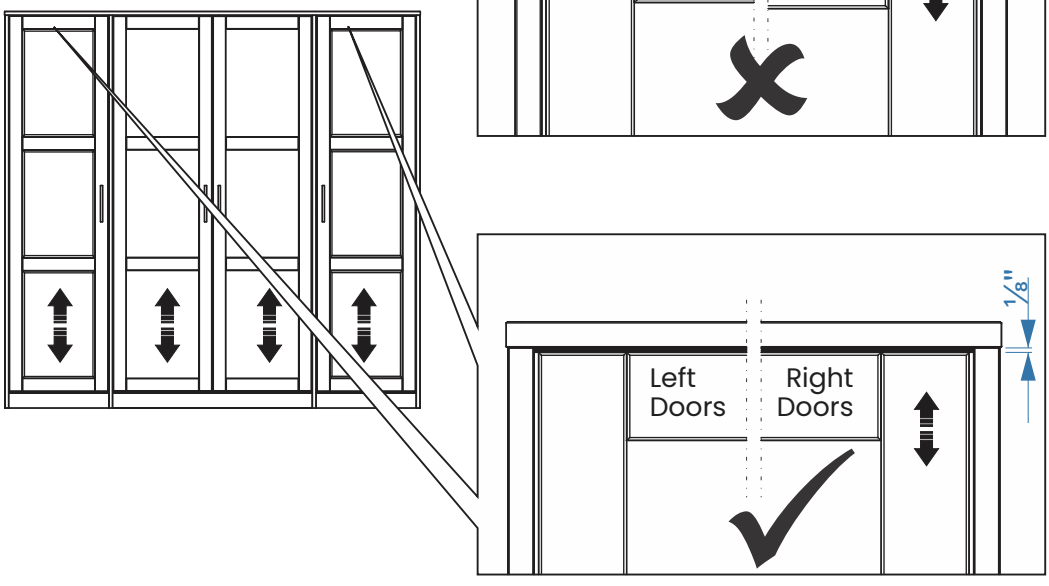


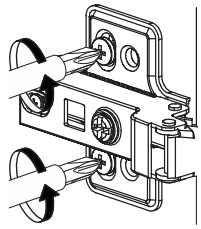

Loosen top and bottom
screw on all hinges.

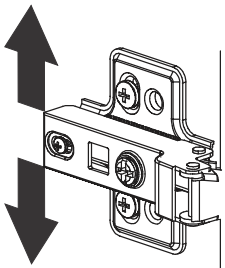



Adjust Height:
Move Up or Down

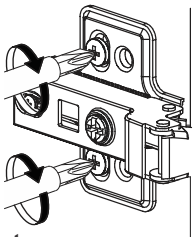



Re-tighten screws
on all hinges.


23) Tip-over Restraint Kit Installation

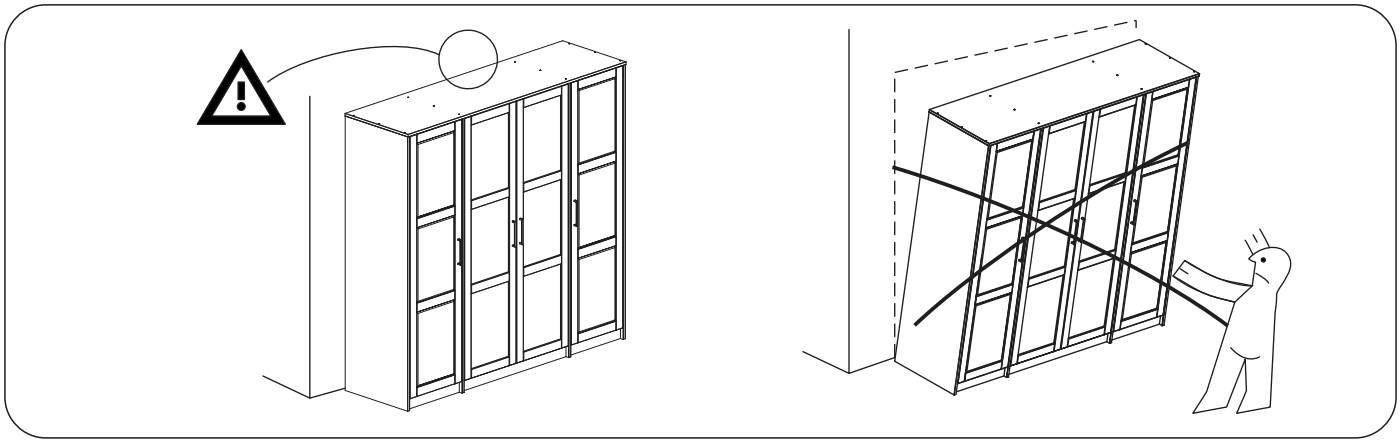

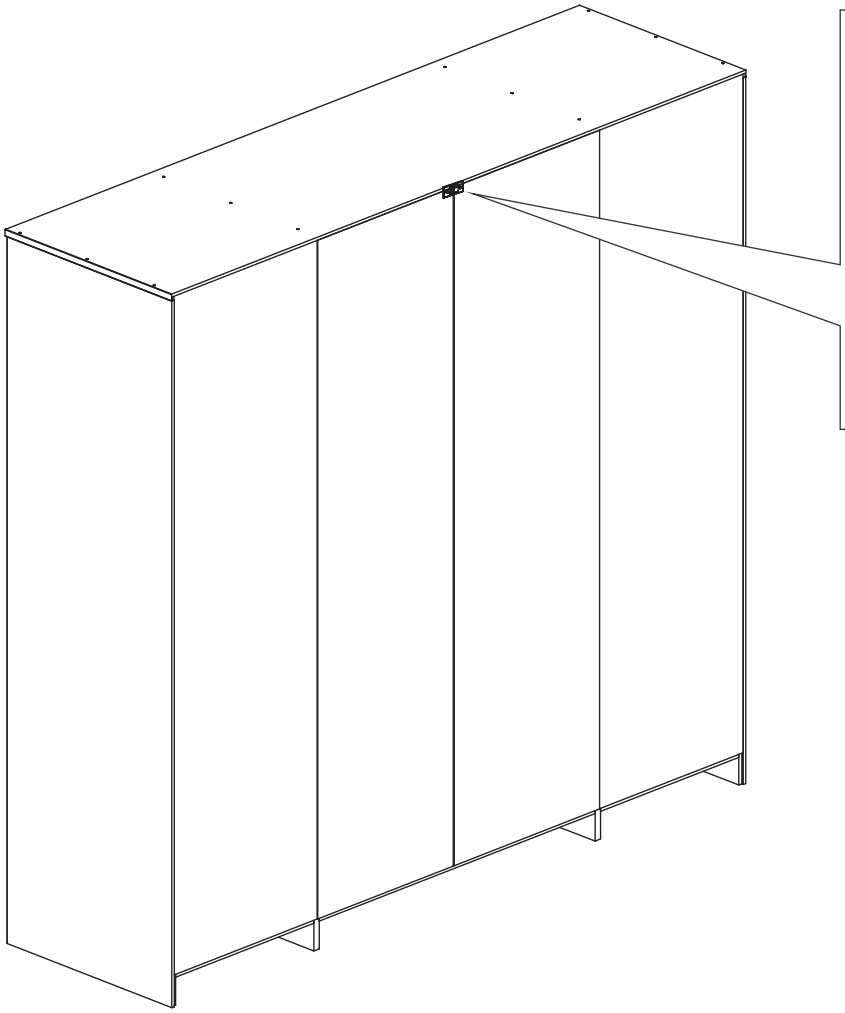

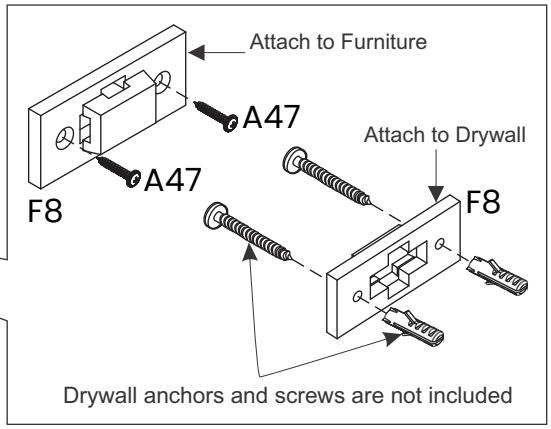

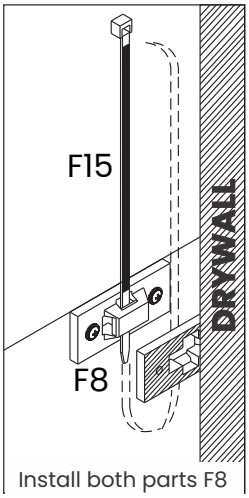

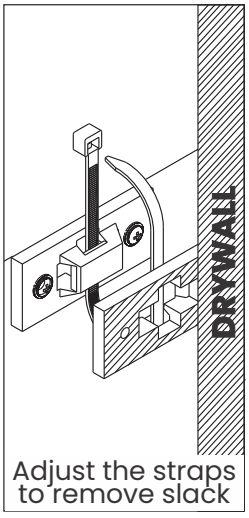

A47	3,0x20	2
F8		2
F15		1