













ASSEMBLY INSTRUCTION

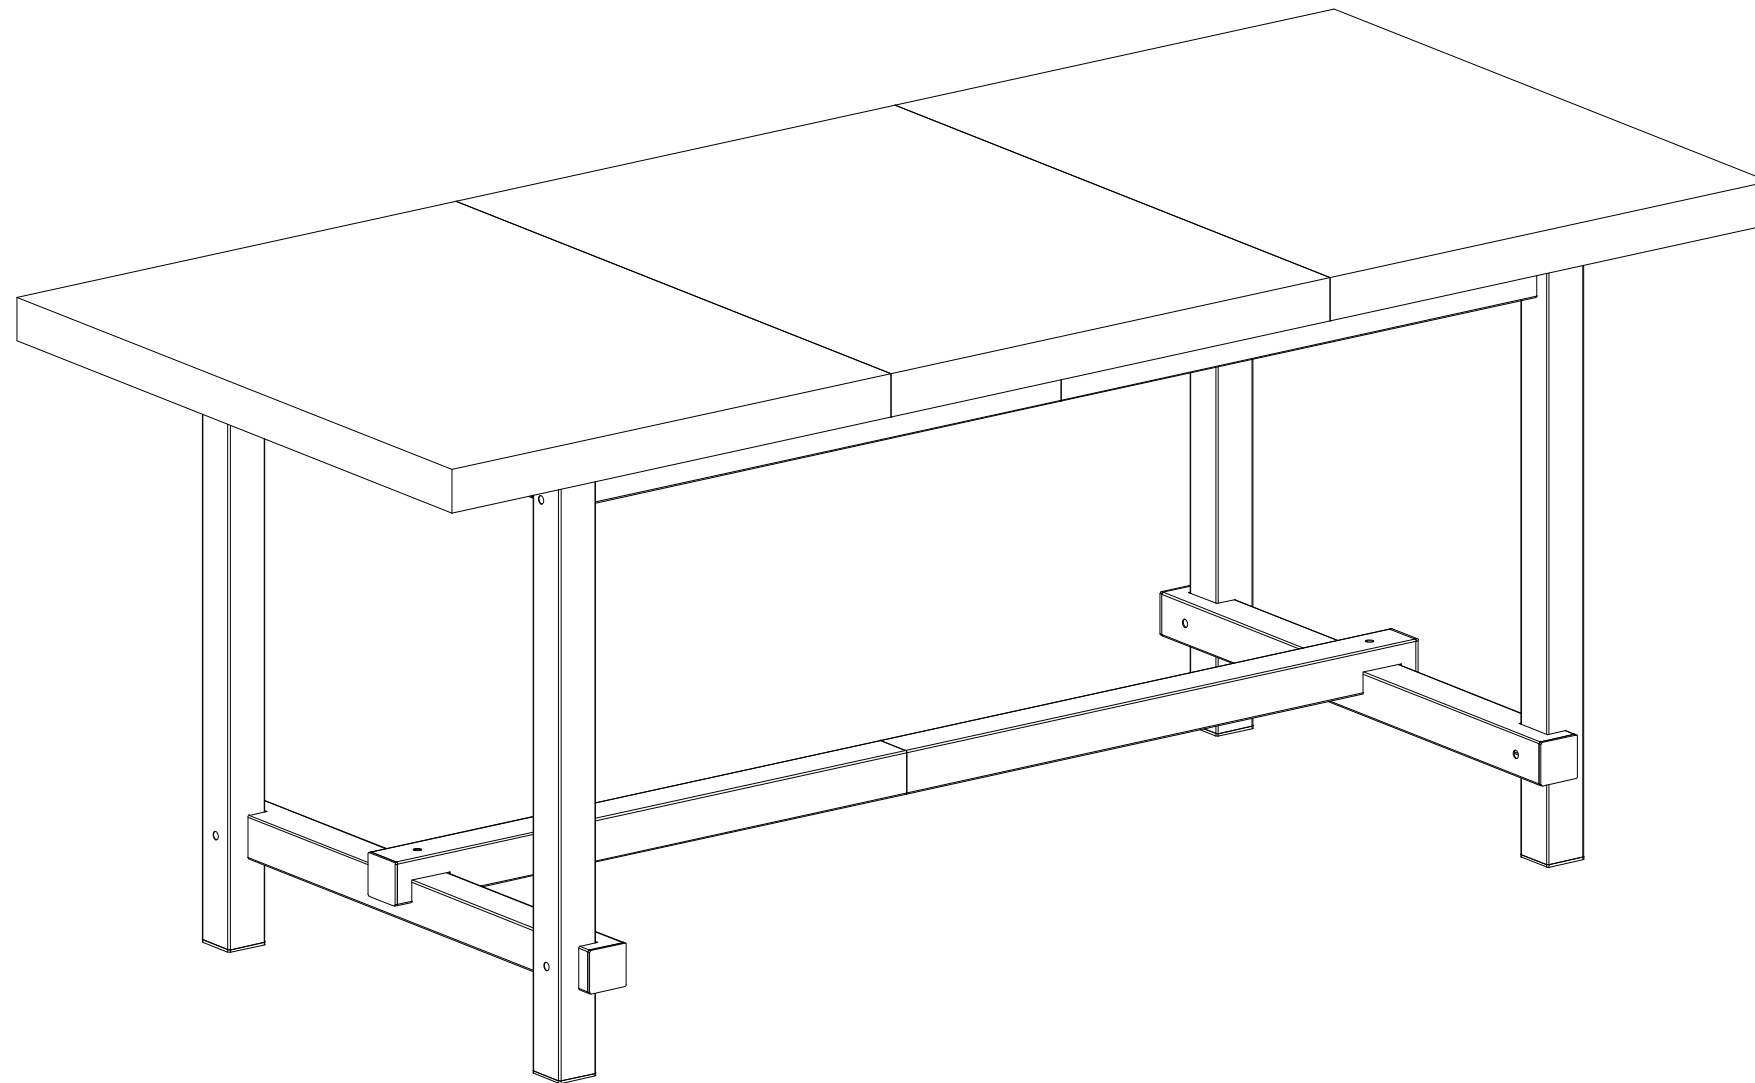



Loosely hand-tighten screws when fitting the table base; fully tighten all only after the full frame is aligned and assembled.

If you have any questions, please feel free to contact us at any time.
Official Consultation Email: **service@syimex.cn**

Parts & Tool List

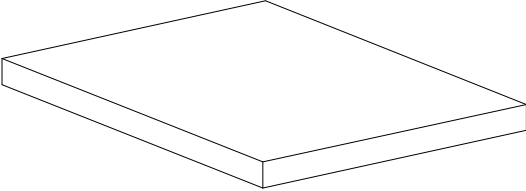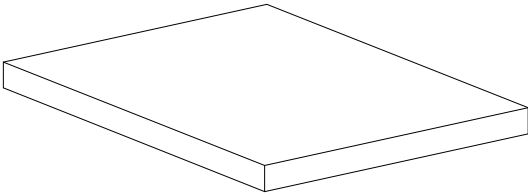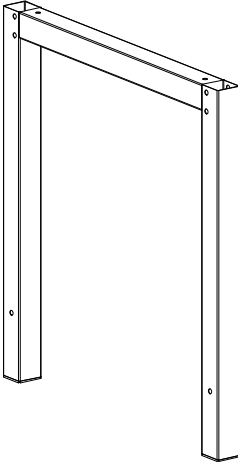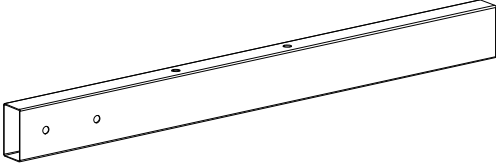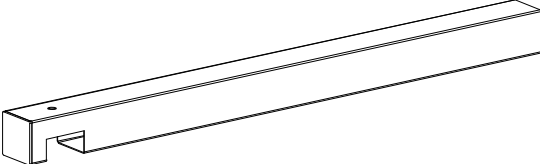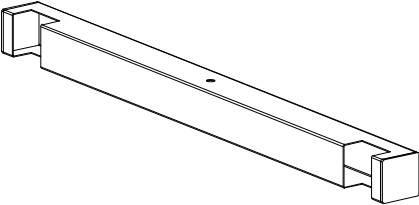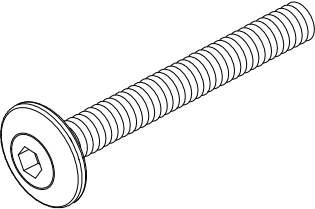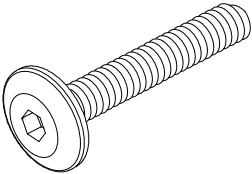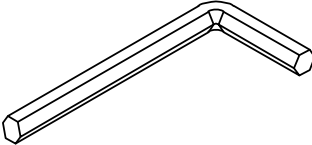① x2 	② x1 	③ x2 	④ x4 	⑤ x2 
⑥ x2 	⑦ x2 	⑧ x1 		
A x16+1  M6*70mm	B x10+1  M6*60mm	C x6+1  M6*25mm	Dx12+1  M6*12mm	Ex2  S4



1

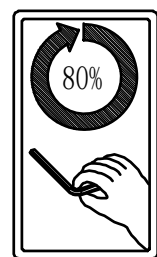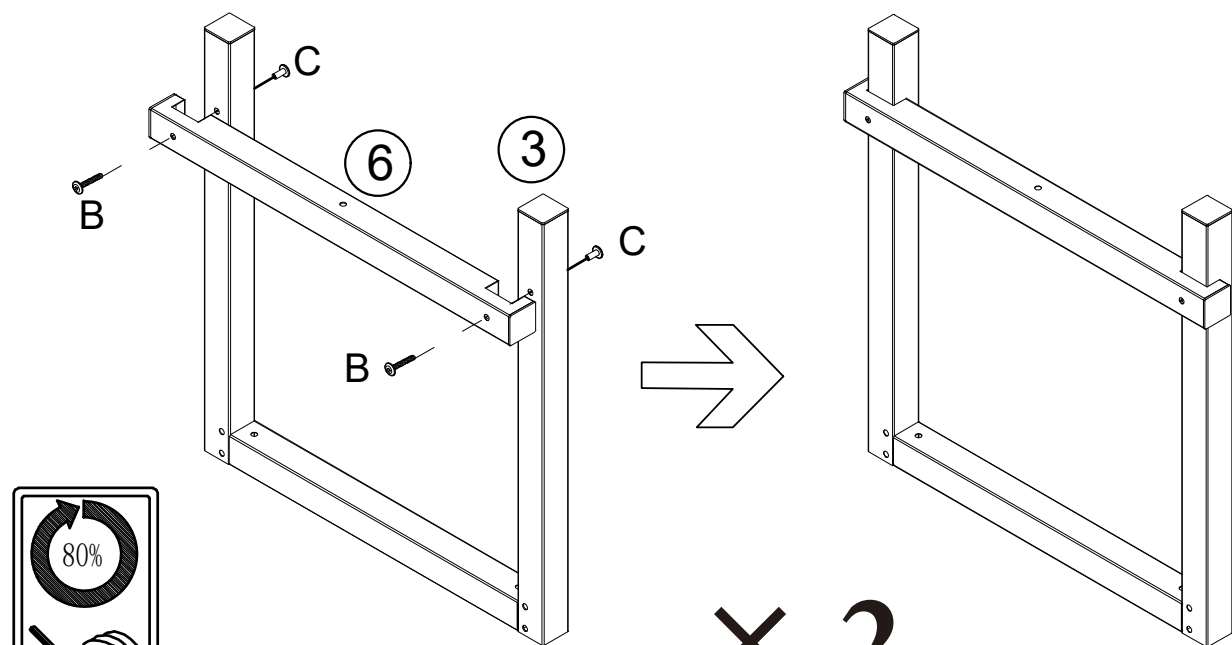

× 2



Cx4
Bx4
Ex2

2

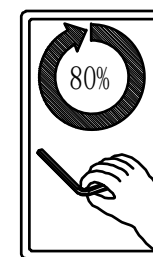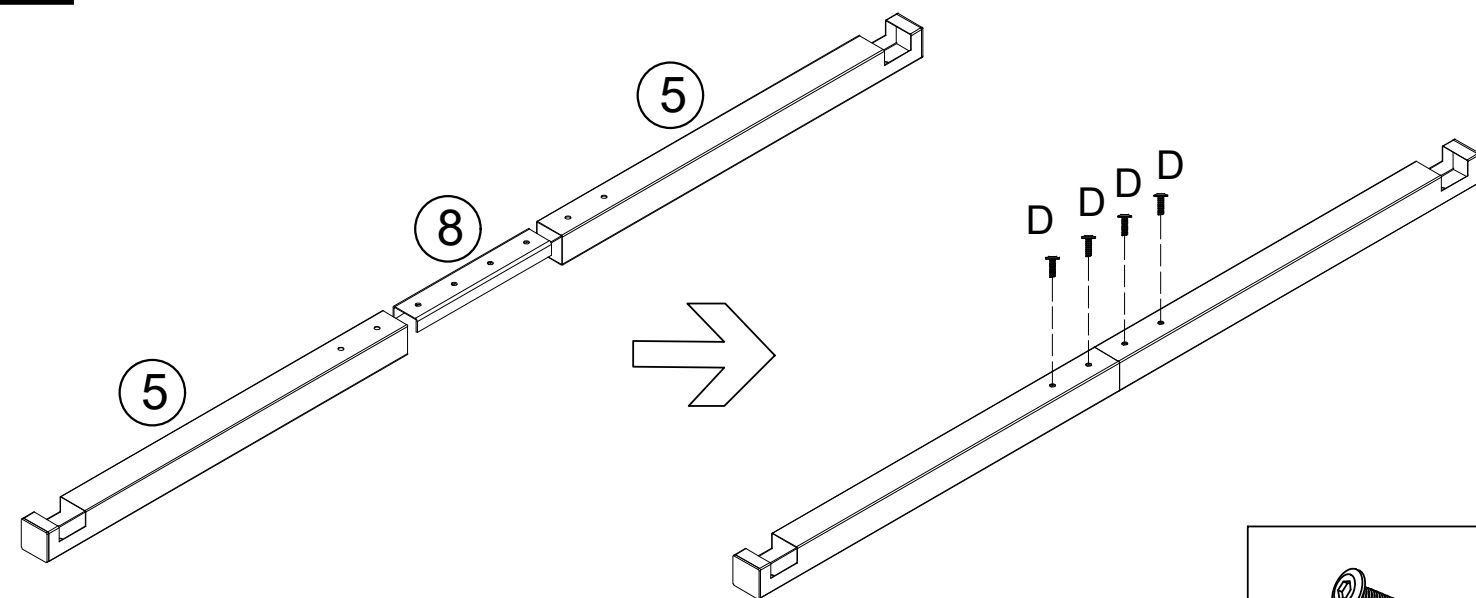

Dx4
Ex1



3

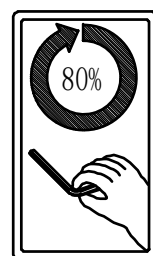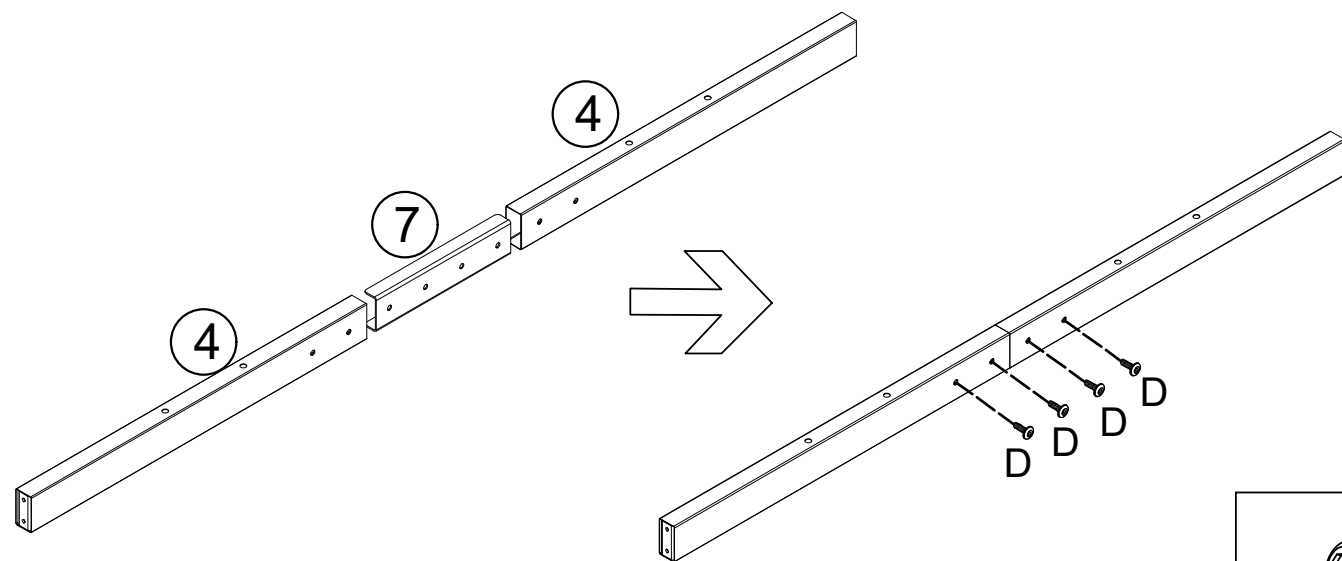

× 2


Dx8
Ex1

4


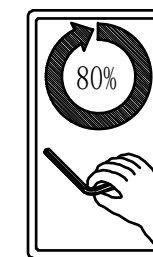
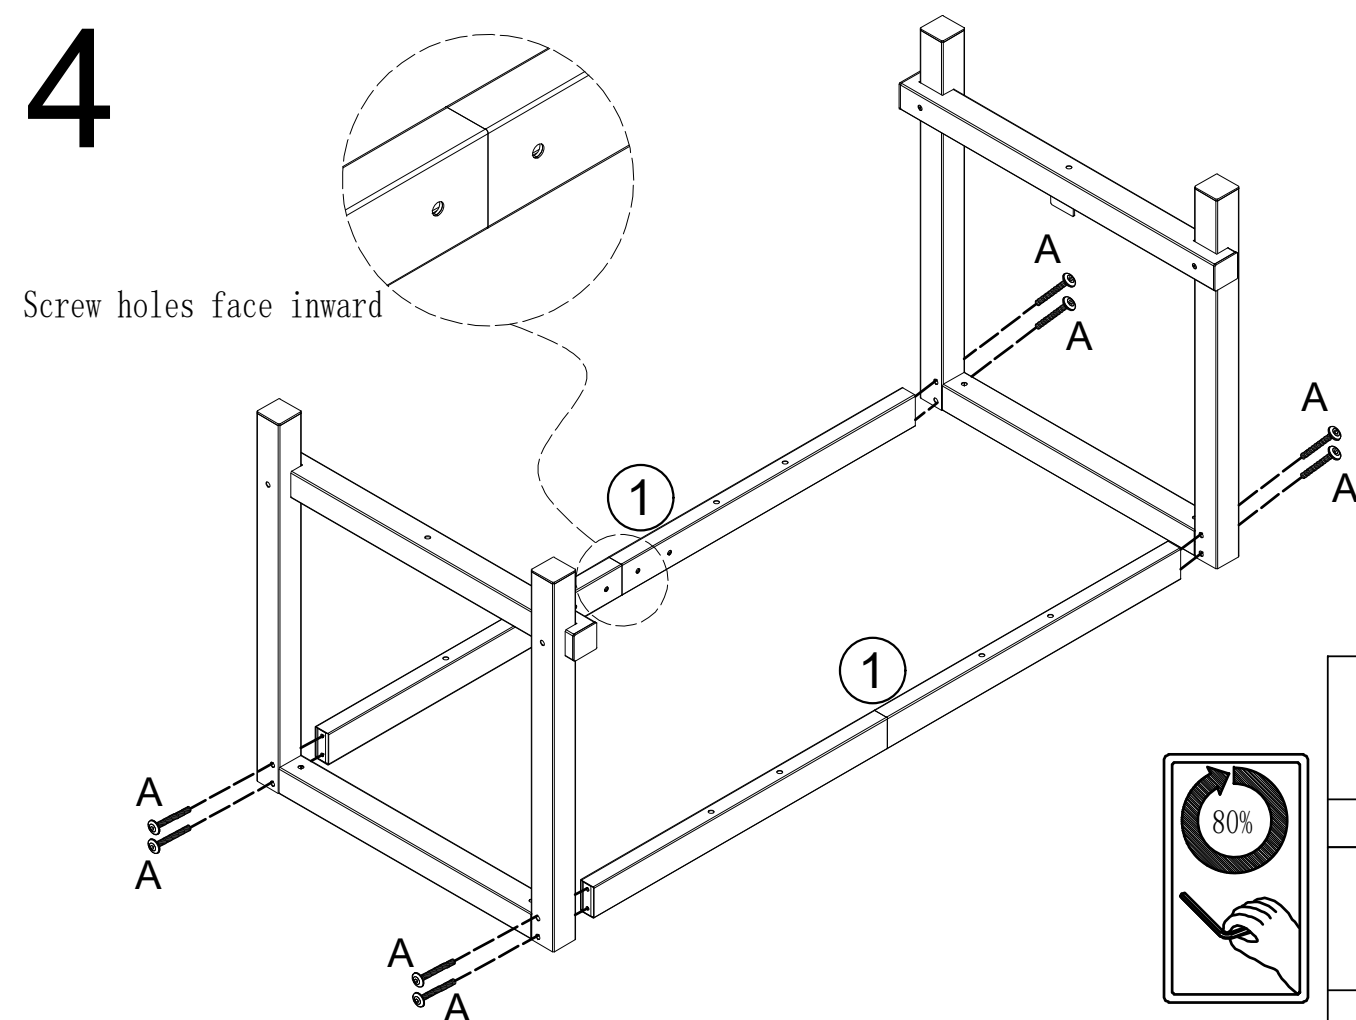


Ax8
Ex1


5

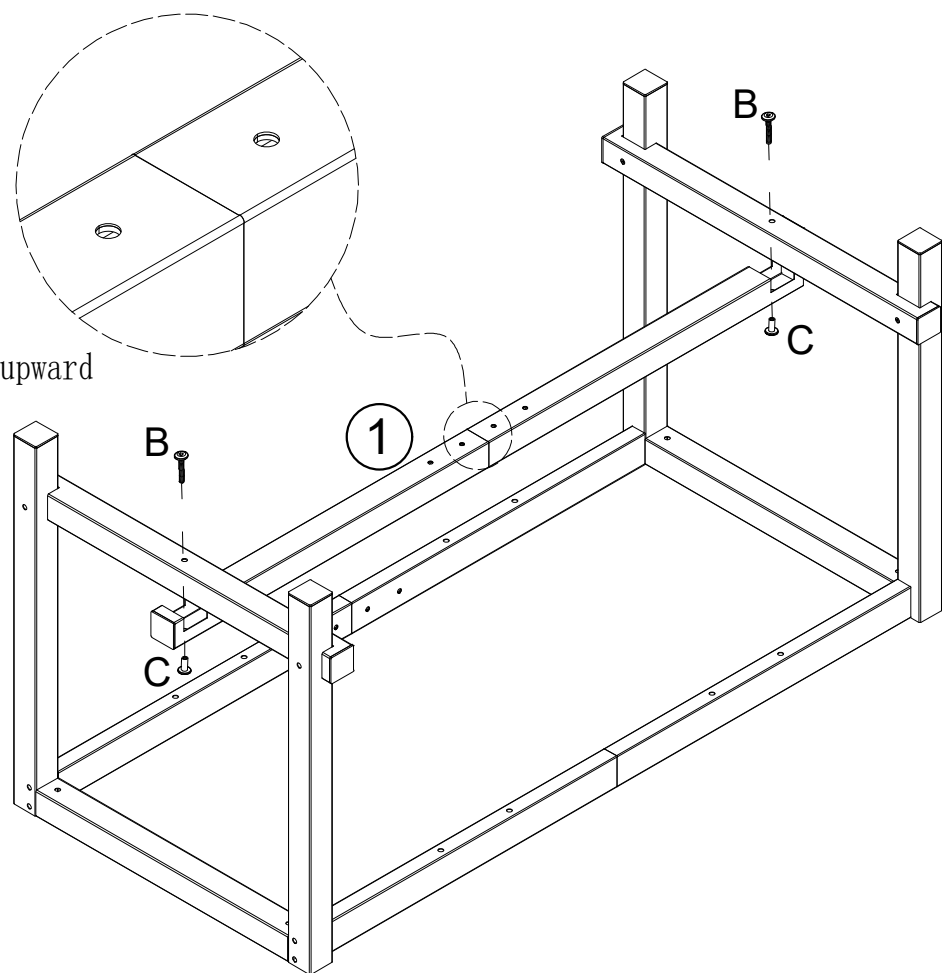


Screw holes face upward

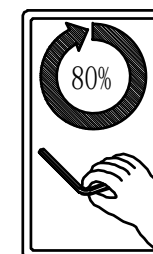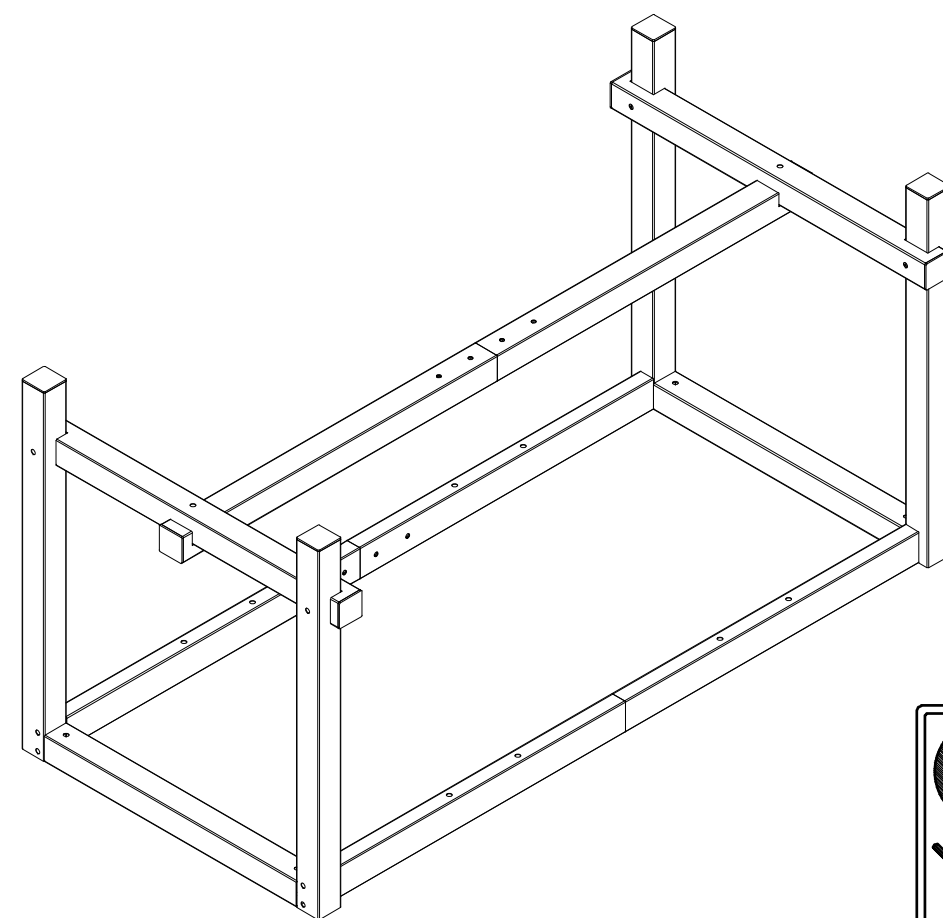

Cx2




Bx2




Ex2

6

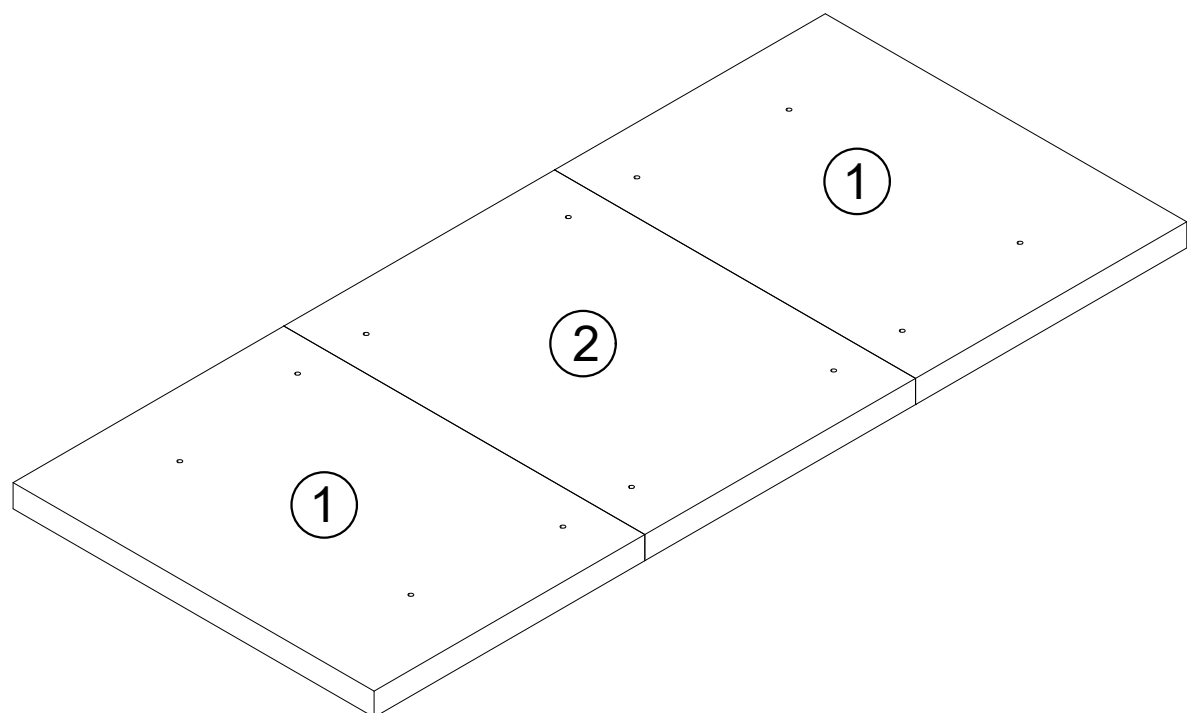




7

Notice: keep all the screws 50% tightness first , then Push the 1&2 desktop, make sure no gap , then tighten the screws

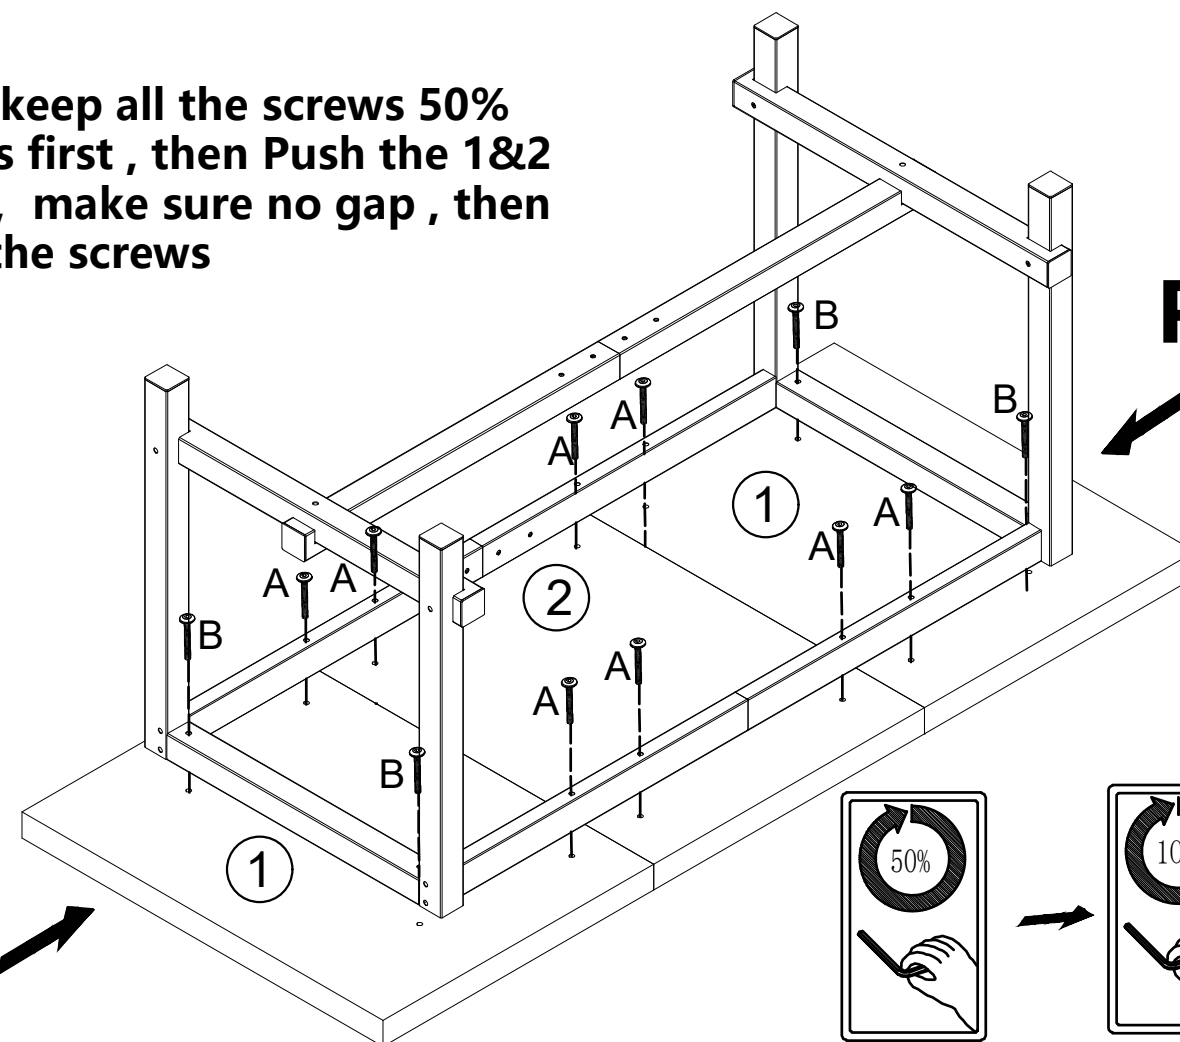


Push


Push

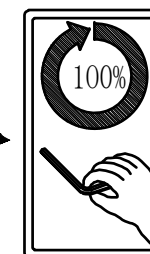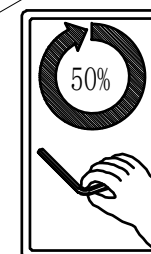

Ax8




Bx4



Ex1

8

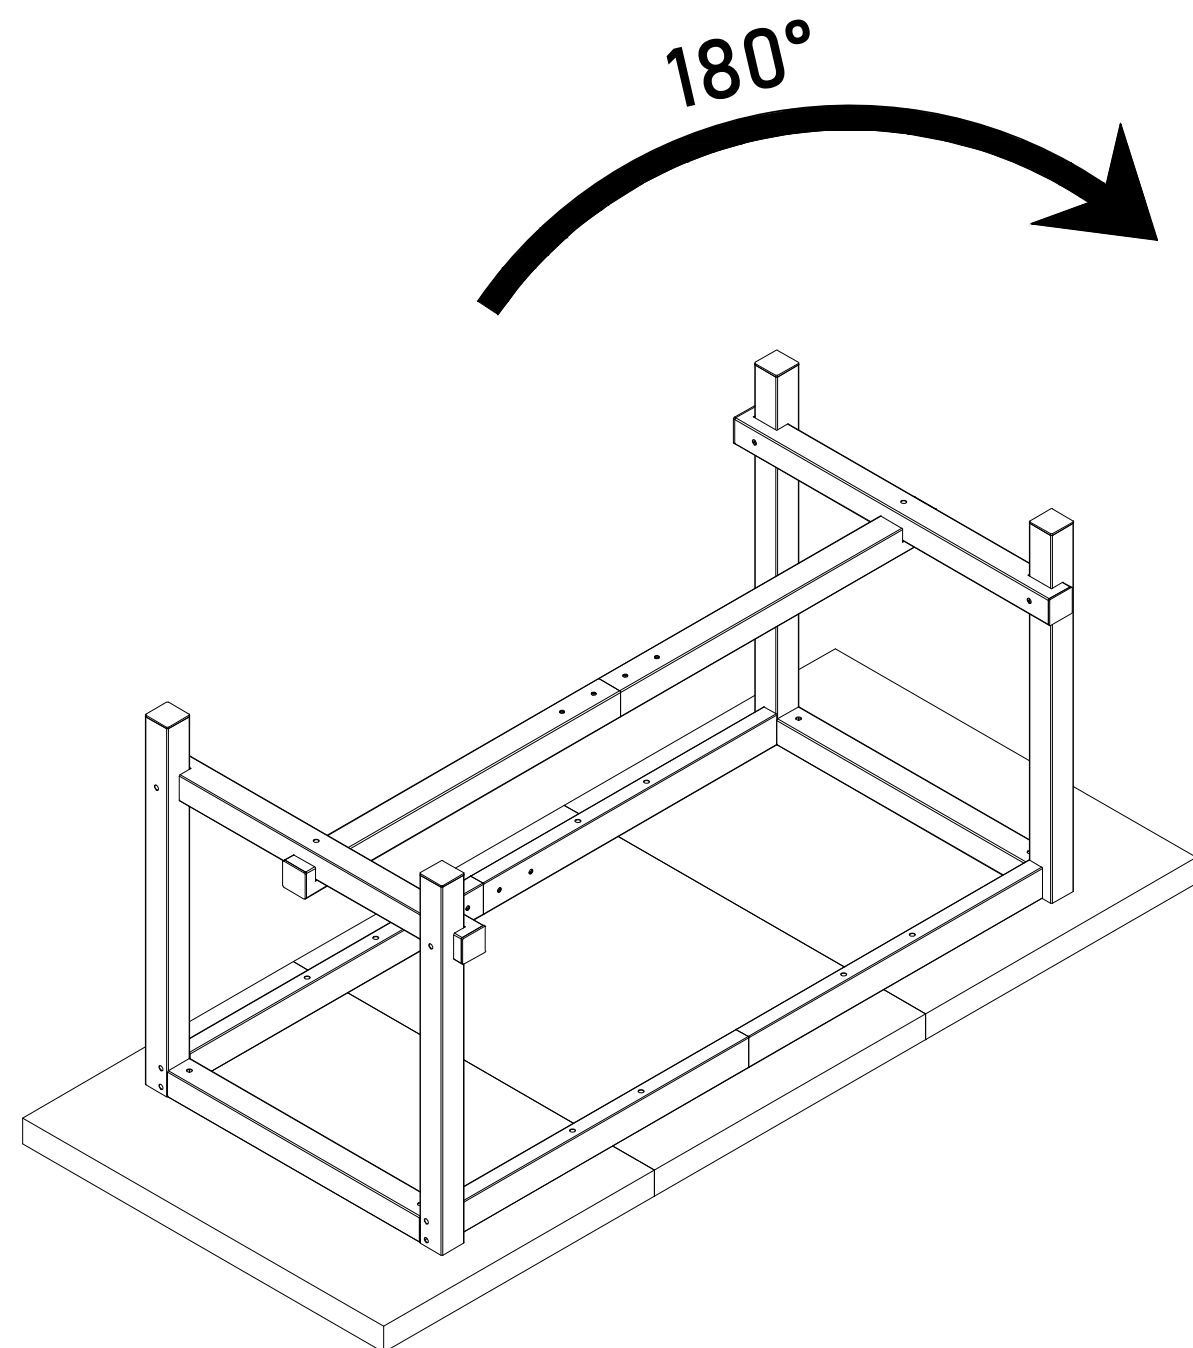

9

