


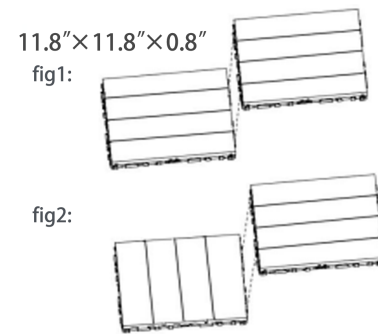

100% Energy-saving composite material

EN

INSTALLATION STEP-BY-STEP

1. Clean the area of installation

NOTE: We recommend the tiles to be installed on a flat surface such as cement or wood flooring.

2. Install the tiles by inserting the hooks into the designated slots. Two designs are possible: either parallel (fig. 1) or perpendicular (fig. 2).

IMPORTANT: Make sure there is enough clearance (for heat expansion) from the wall to the tiles. We recommend 2.5 to 5cm (1 to 2 in.) minimum depending on floor coverage.