


Installation Instruction

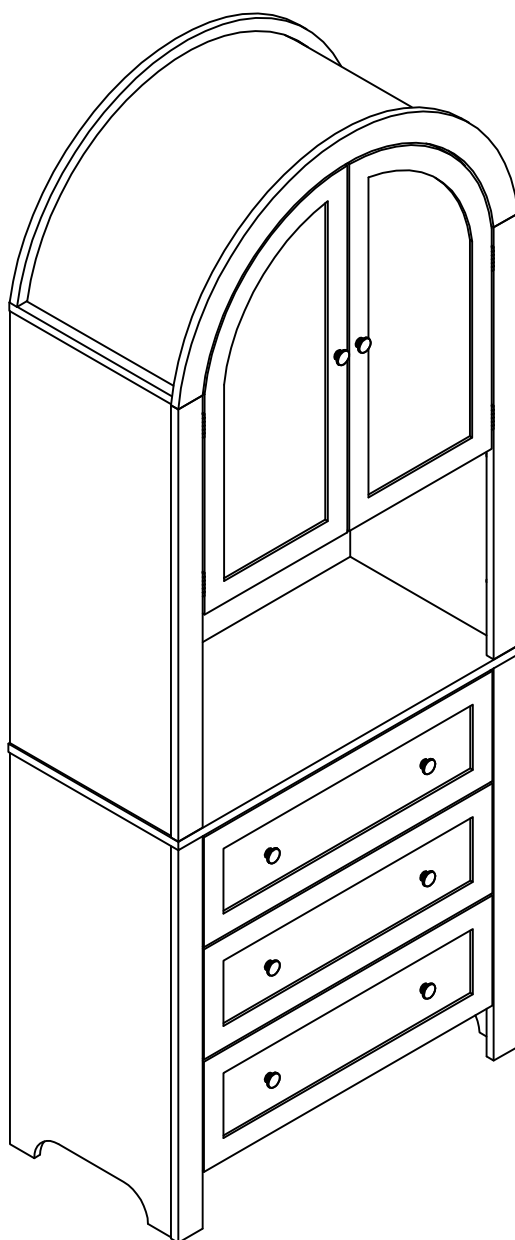

Assembling


Estimated time for assembly



45 : 00

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100

lbs table top

| 35

lbs per

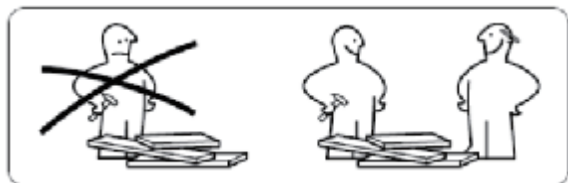


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	67
B	Cam Lock 15X10MM	67
C	Wooden Dowel M6X30MM	14
D	Screw M4X40MM	24
E	Screw M3.5X14MM	2
F	Metal shake handshandle	8
G	Nylon Strap	2
H	Screw M3.0X14MM	70
I	Cam Bolt M4X18MM	2
J	The back button	24
K	Anchor	2
L	Cam Bolt M4X8MM	6
M	Ron absorption	2
N	Metal handle	2
O	Hole position sticker	67
P	Hinge	4
Q	Foot nail	4
R	Wooden Dowel M6X60MM	2
CL	Left mother extended orbit	3
CR	Right mother extended orbit	3
DL	Left public extension track	3
DR	Right public extends track	3

The Hardware

A




B



C



D



E



F



G




H



I



J




K



L




M



N



O



P




Q




R




CL




CR



DL



DR



IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product. Do not use power tools.


Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	2
3	Superior left side plate	1
4	Superior right side plate	1
5	Drawer panel	3
6	Drawer left panel	3
7	Drawer right side panel	3
8	The drawer bottom	3
9	After the drawer board	3
10	Reinforcing strip	3
11	Upper plate	1
12	Middle lamella	1
13	Inferior left side plate	1
14	Inferior right side plate	1
15	Front apron	1
16	Reinforcing plate	3
17	Back shield	1
18	Top plate	1





Included Accessories

Code	Description	Qty
19	Left door panel	1
20	Right door panel	1
21	Upper left trim board	1
22	Upper right trim board	1
23	Bottom trim	2
24	Epigonotum	2
25	Hypotergite	2
26	Back brace	2


The Accessoriess

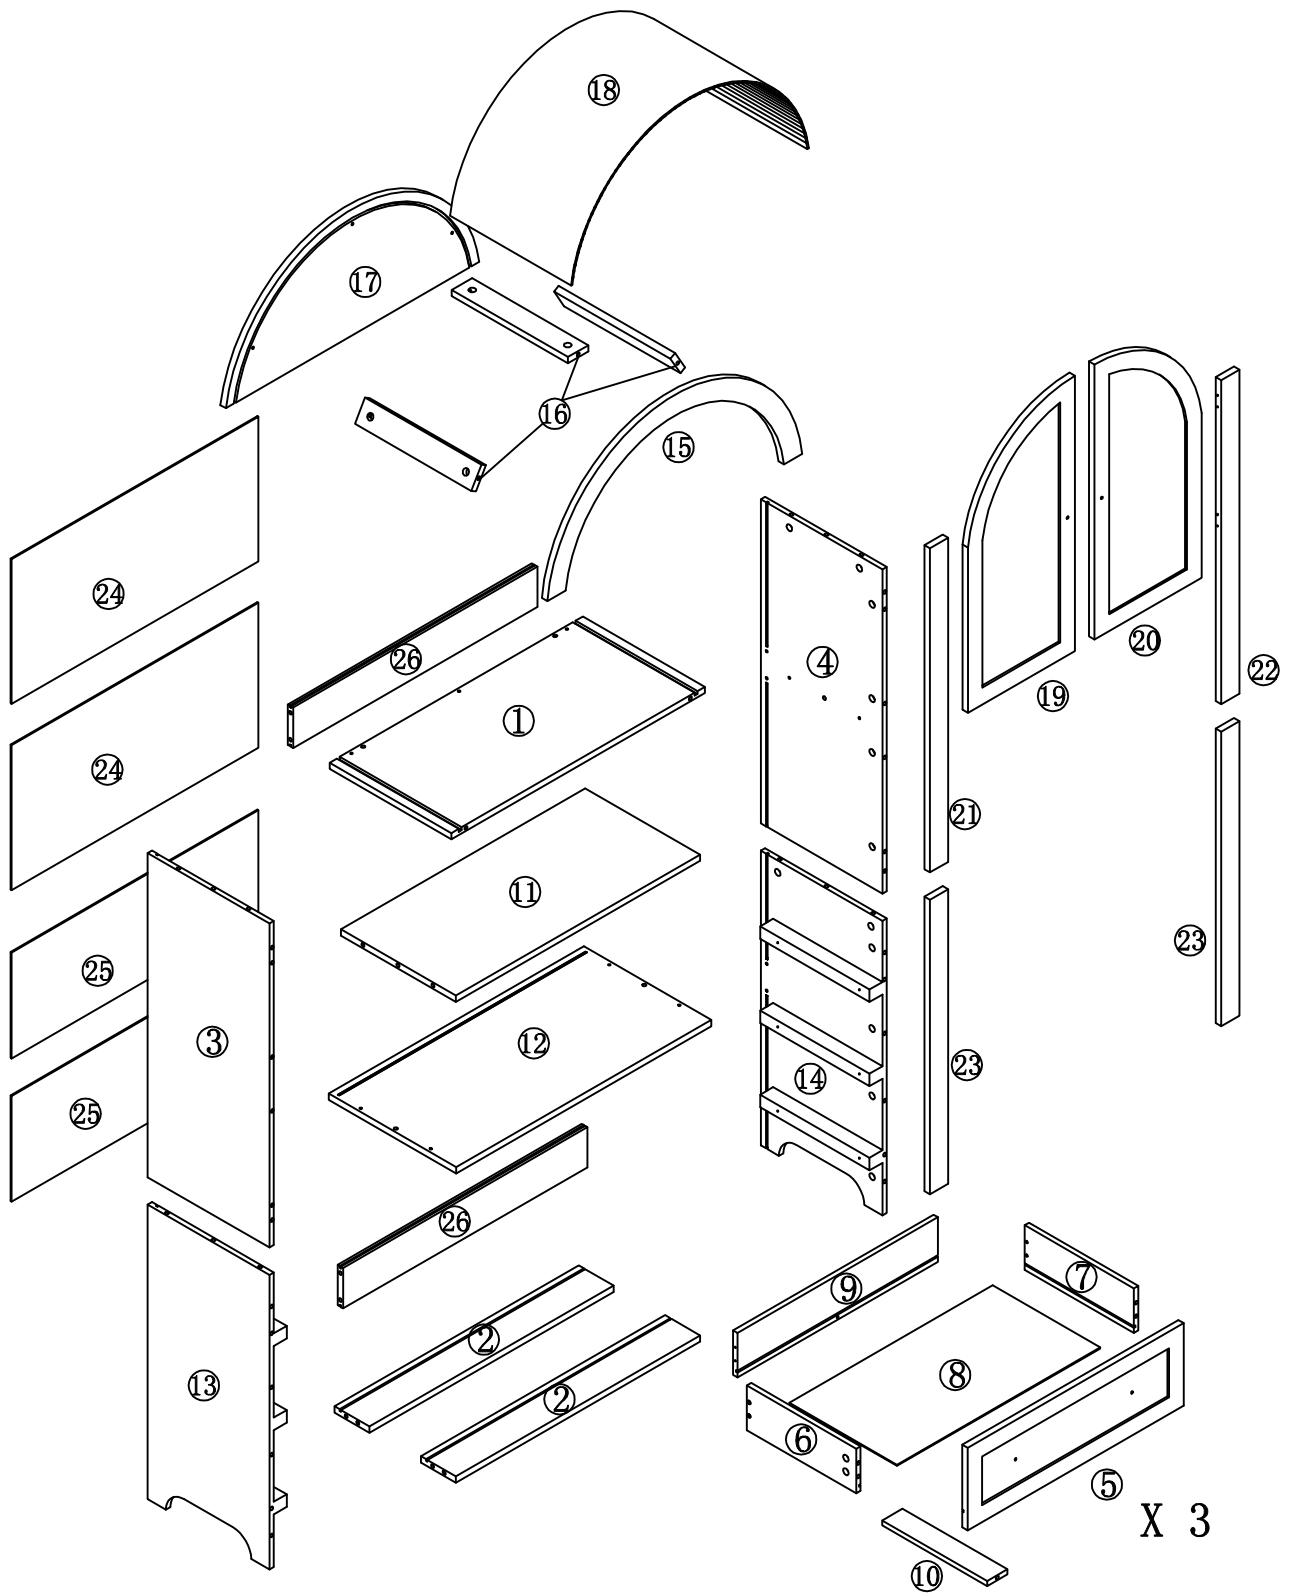





Step 1

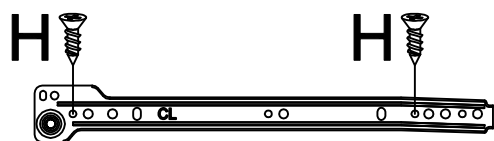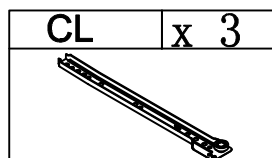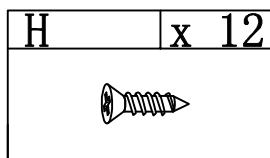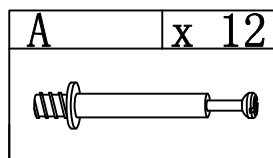









CL

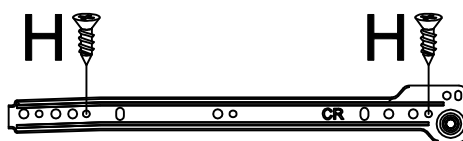


CR

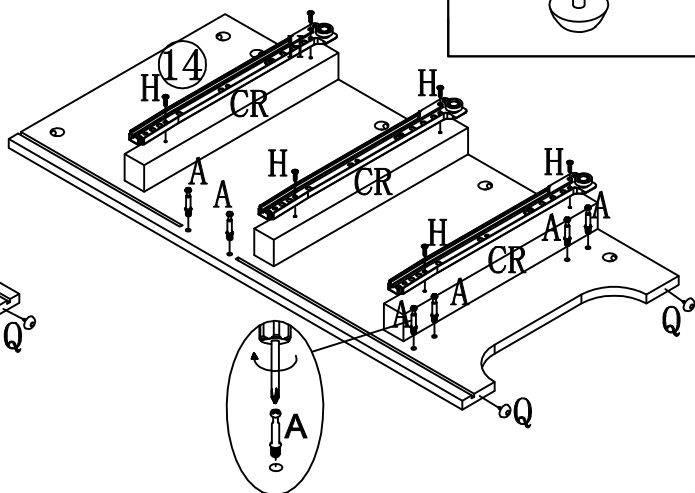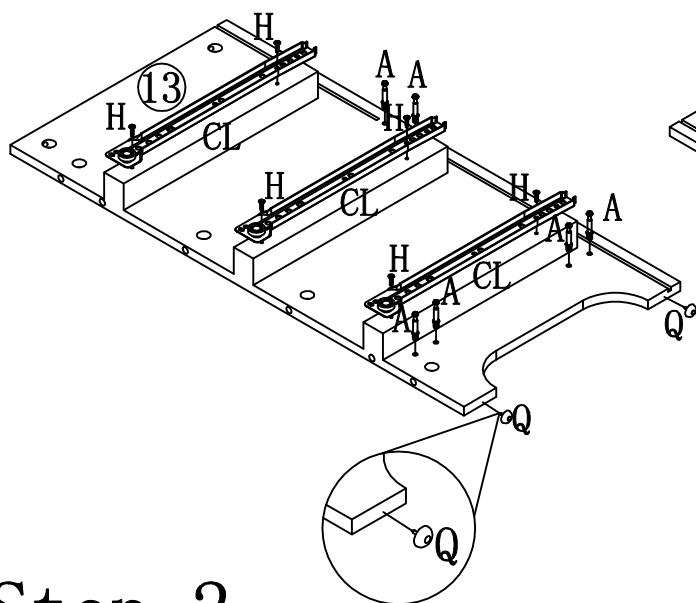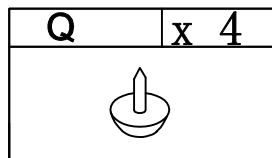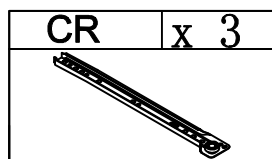









Step 2

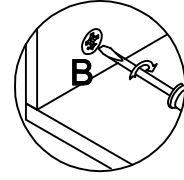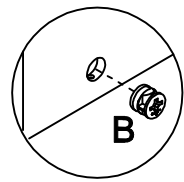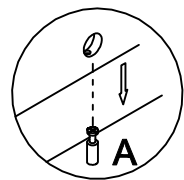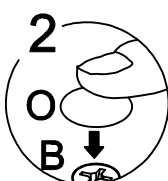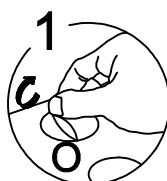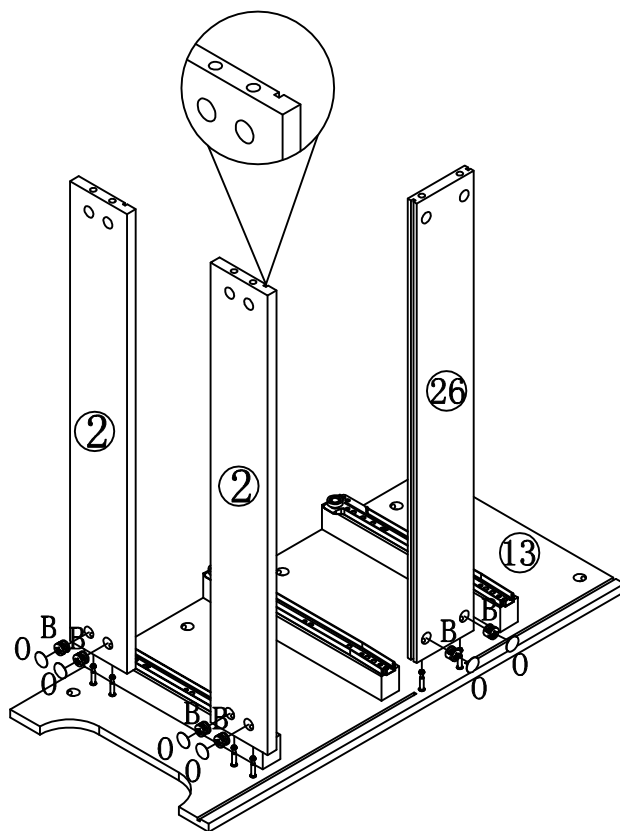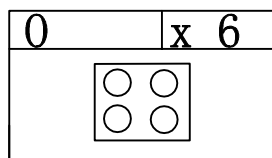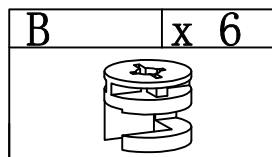


Step 3

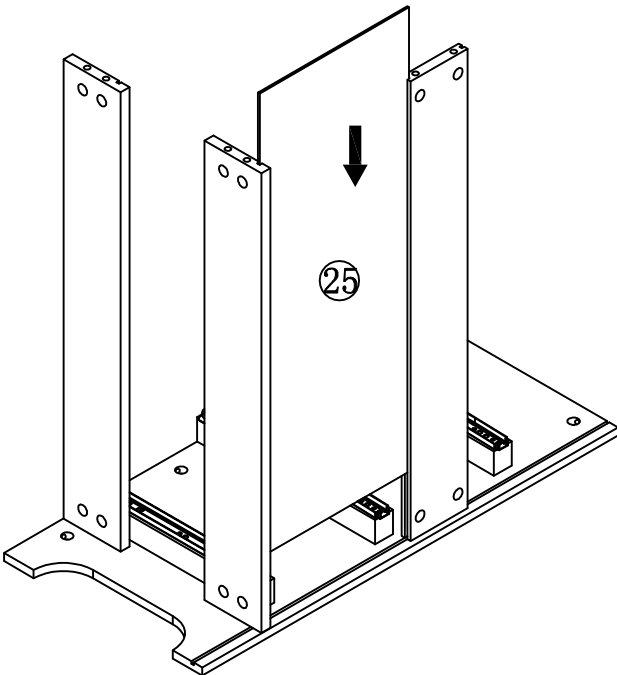

Step 4

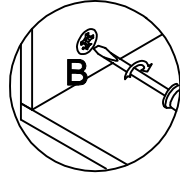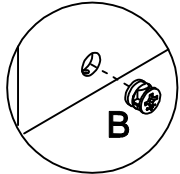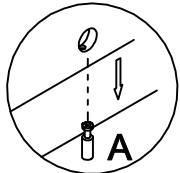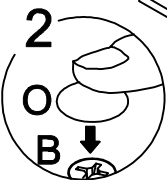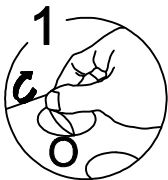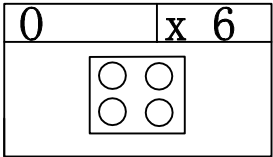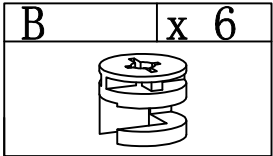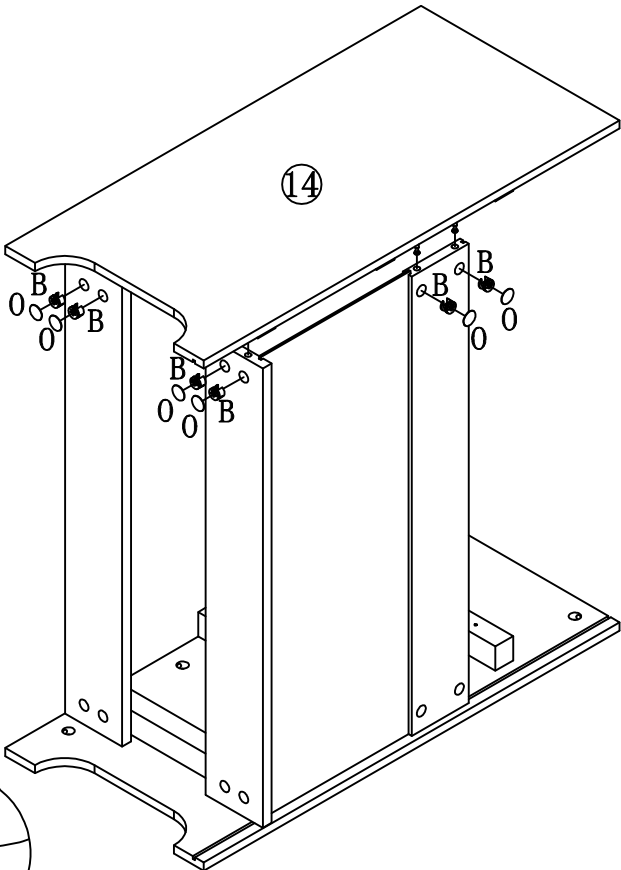


Step 5

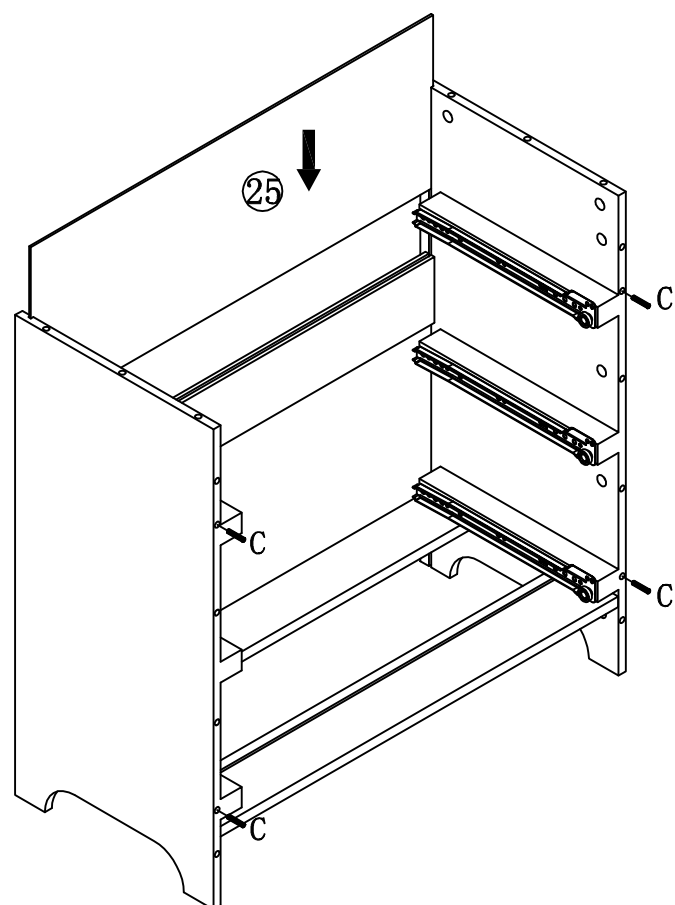

C	x 4


Step 6


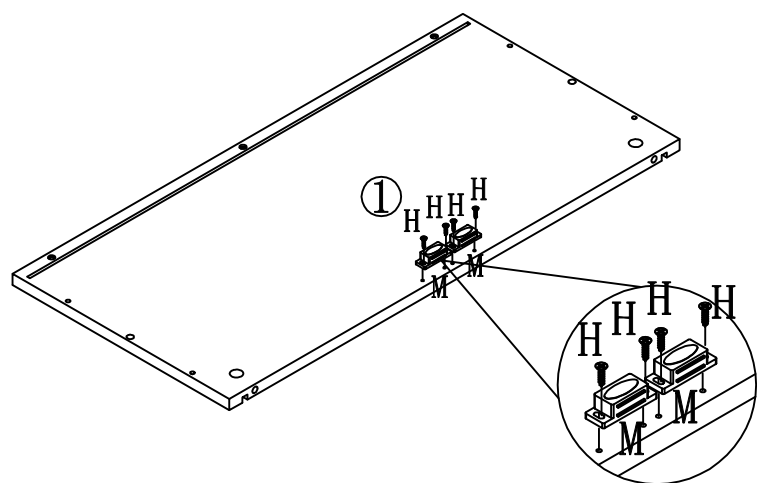


H	x 4

M	x 2


Step 7

A	x 8
	






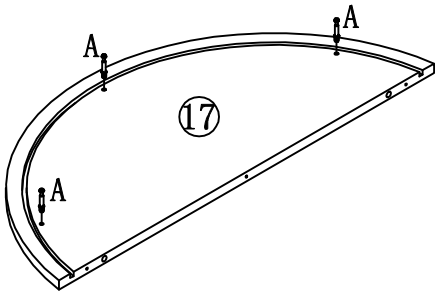
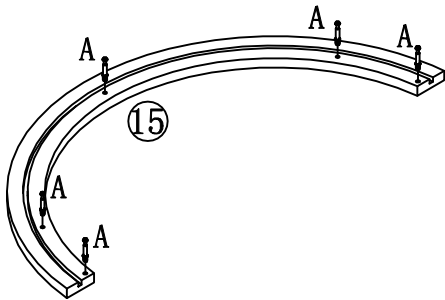


Step 8



B	x 3
	

C	x 2
	

O	x 3
	

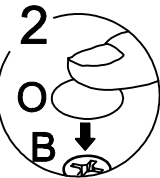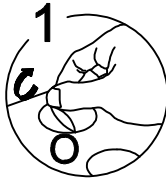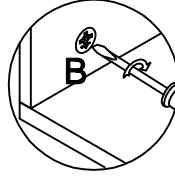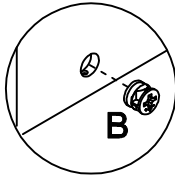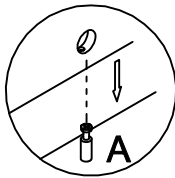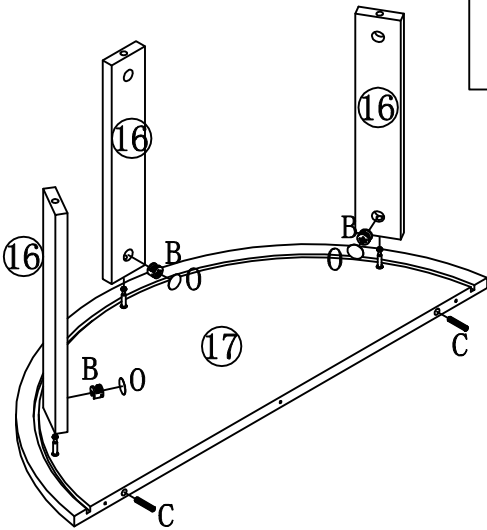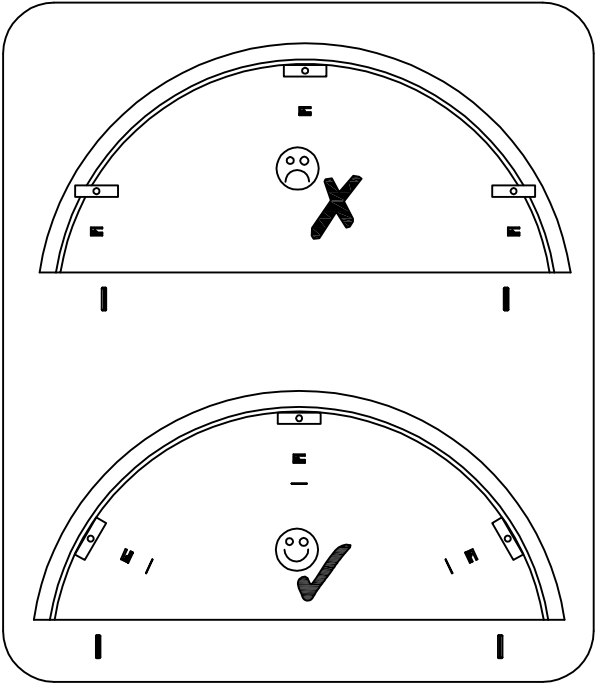


Step 9

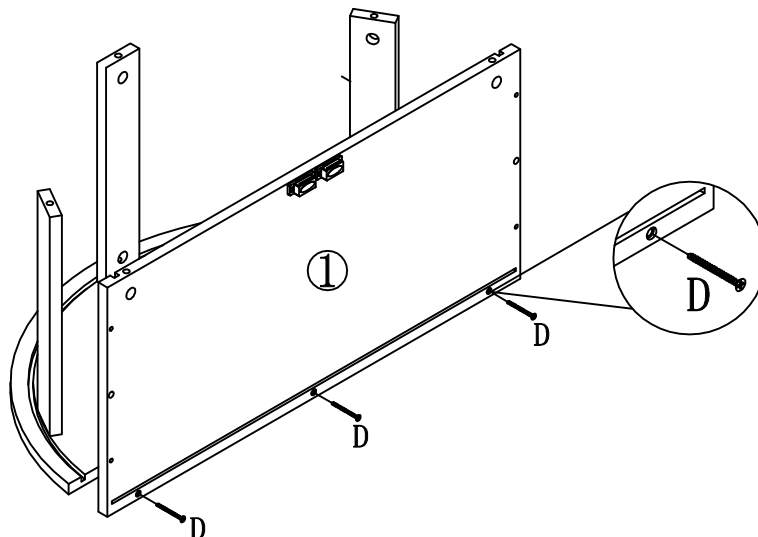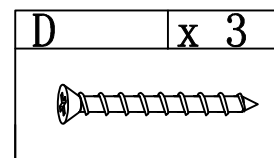







Step 10

The linen faces out,
the groove faces in

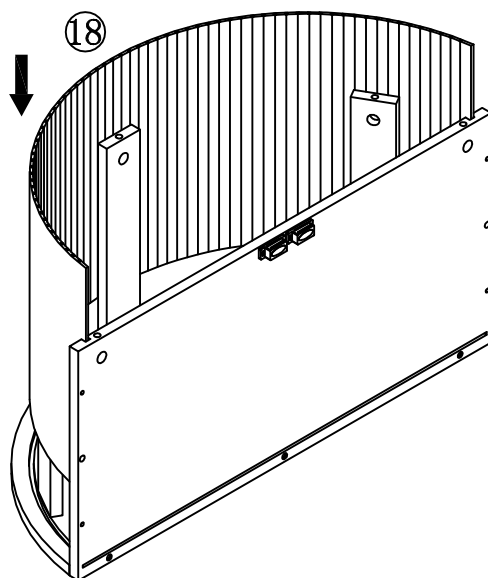



Step 11

B	x 5
	
0	x 5
	

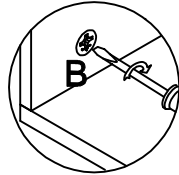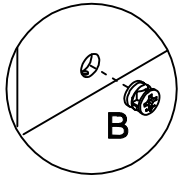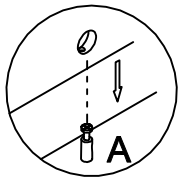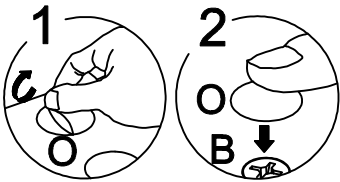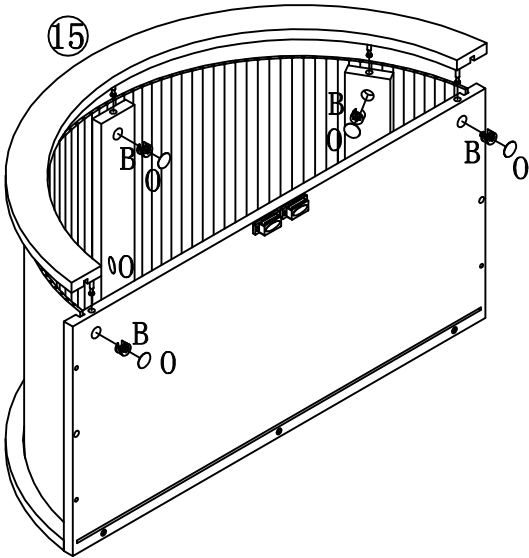



Step 12

A	x 4
	

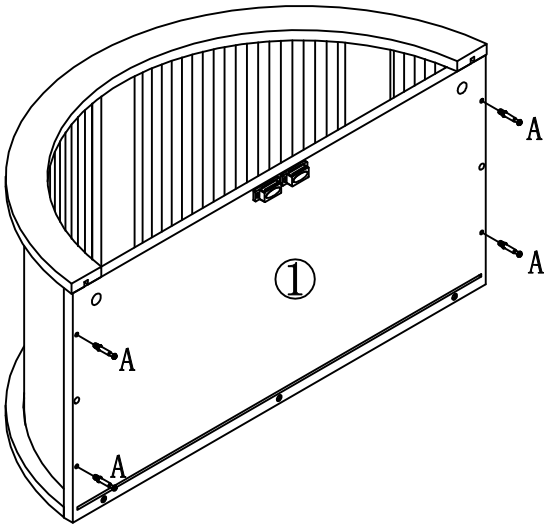


Step 13


A	x 8
	

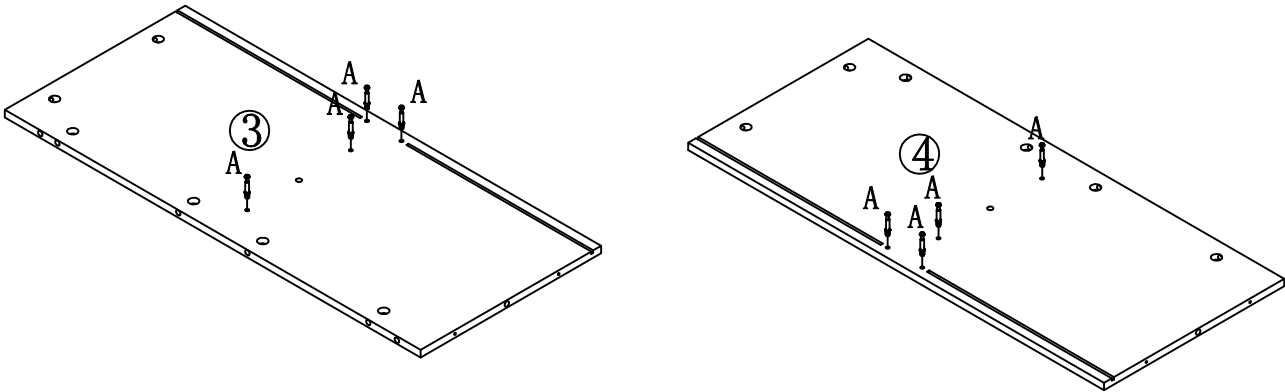



Step 14

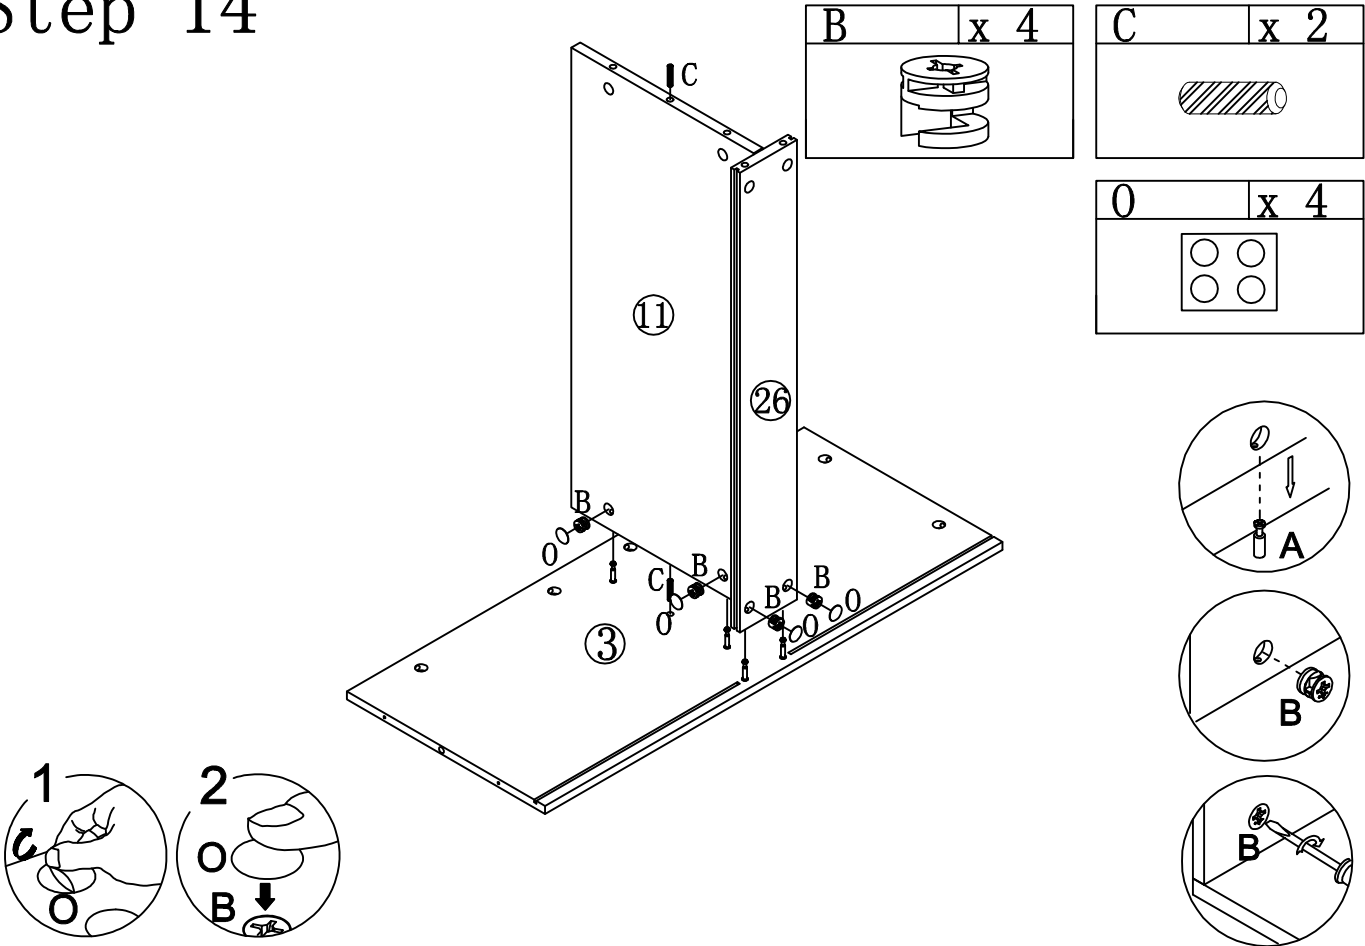


Step 15

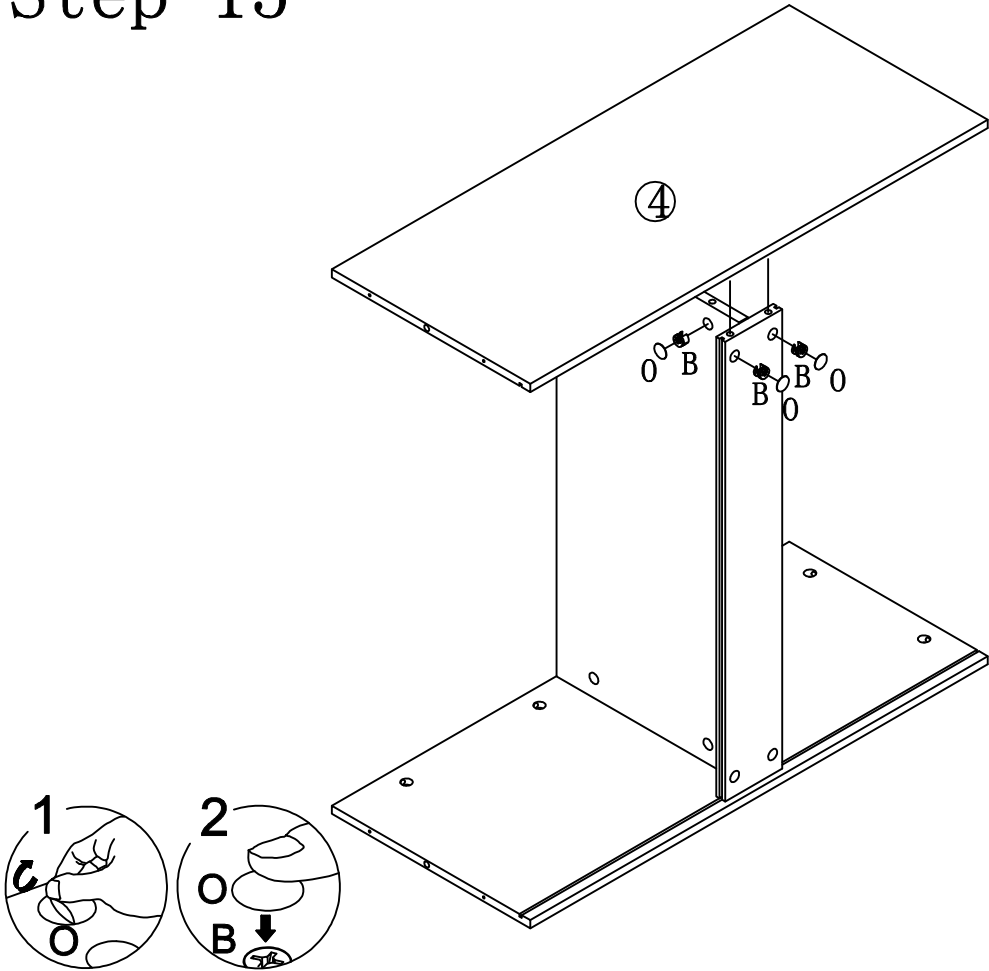

B	x 4
O	x 4

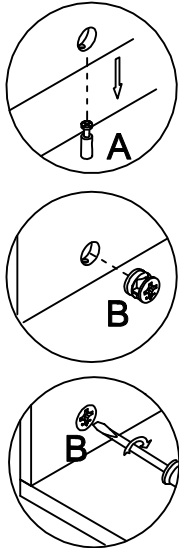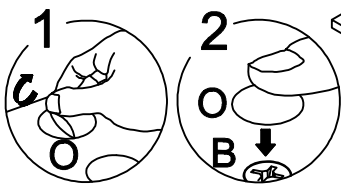






Step 16

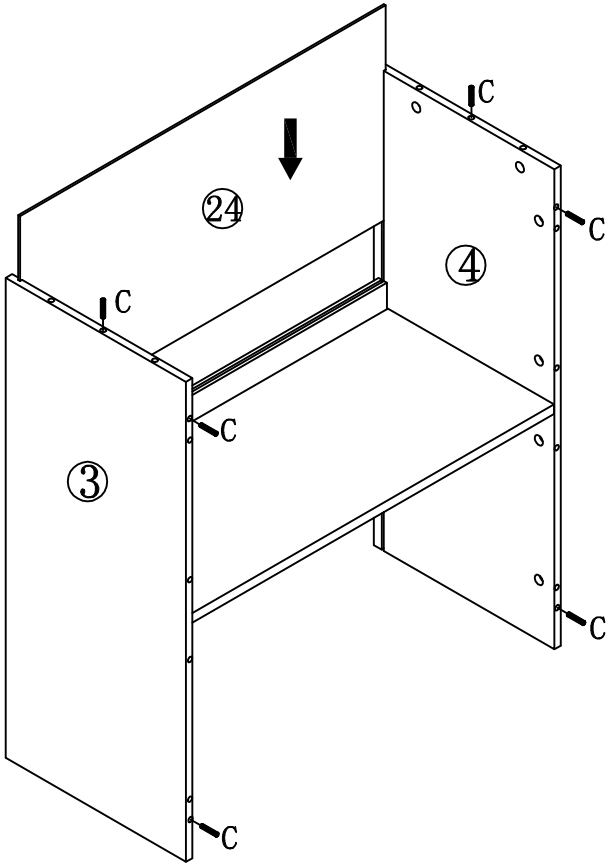

C	x 6

Step 17






A	x 16
	

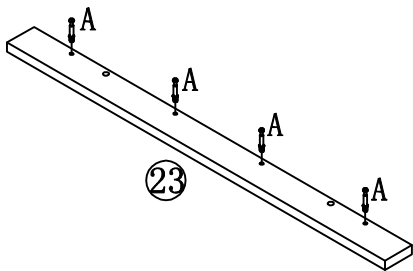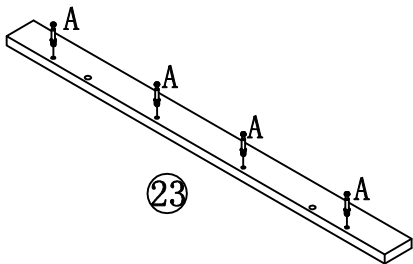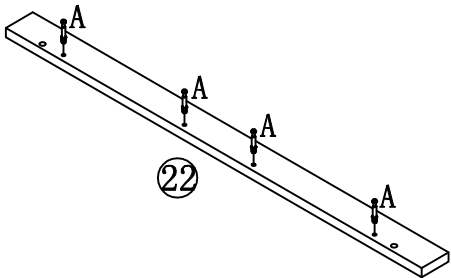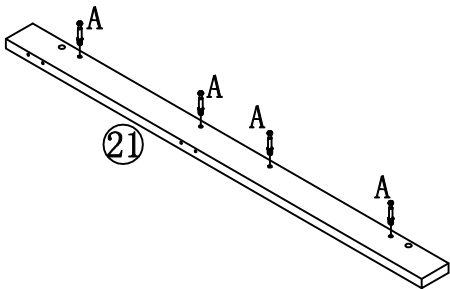


Step 18

B	x 8
	


O	x 8
	

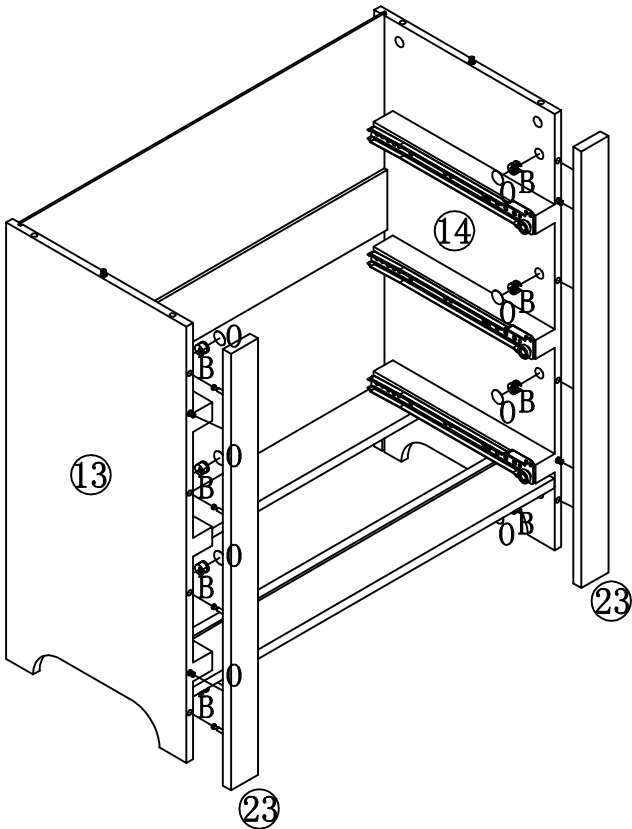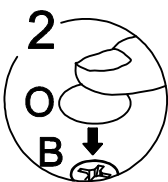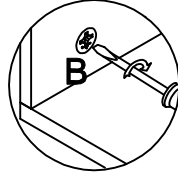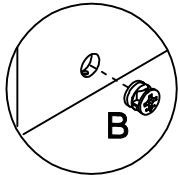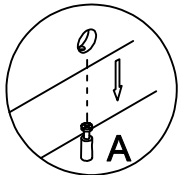


Step 19

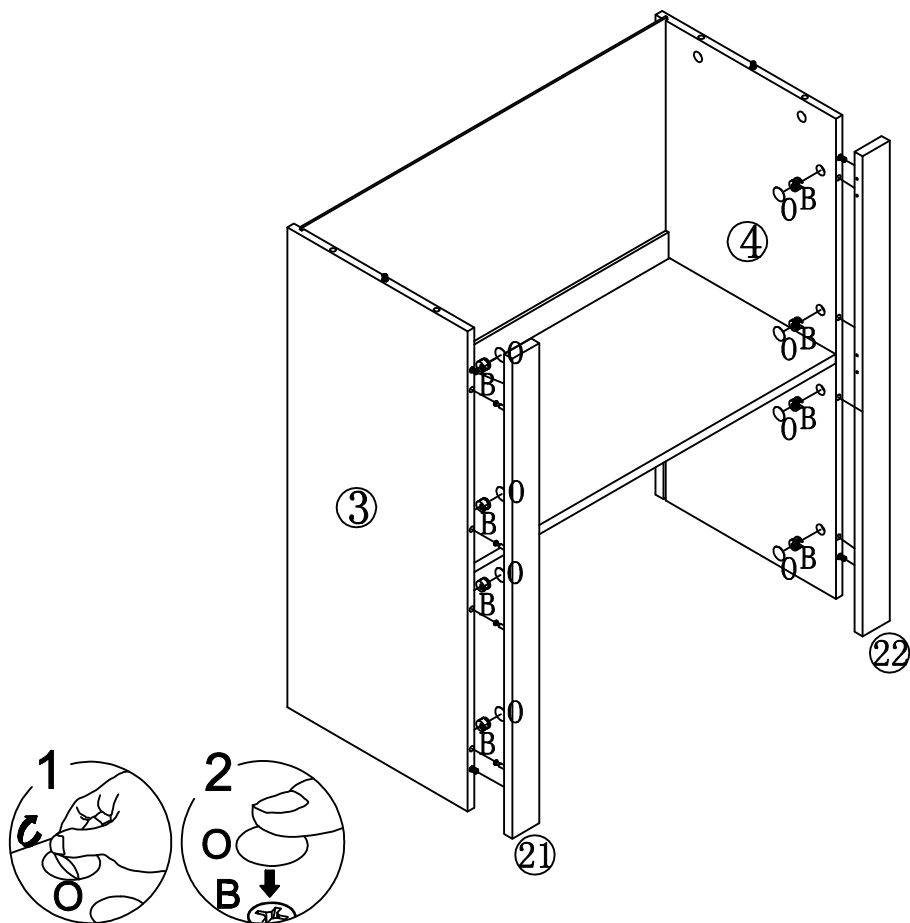


B	x 8
O	x 8

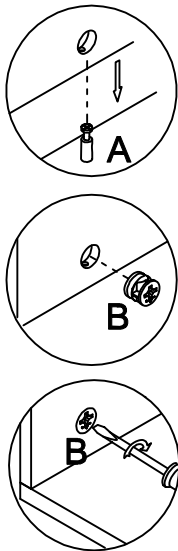

Step 20

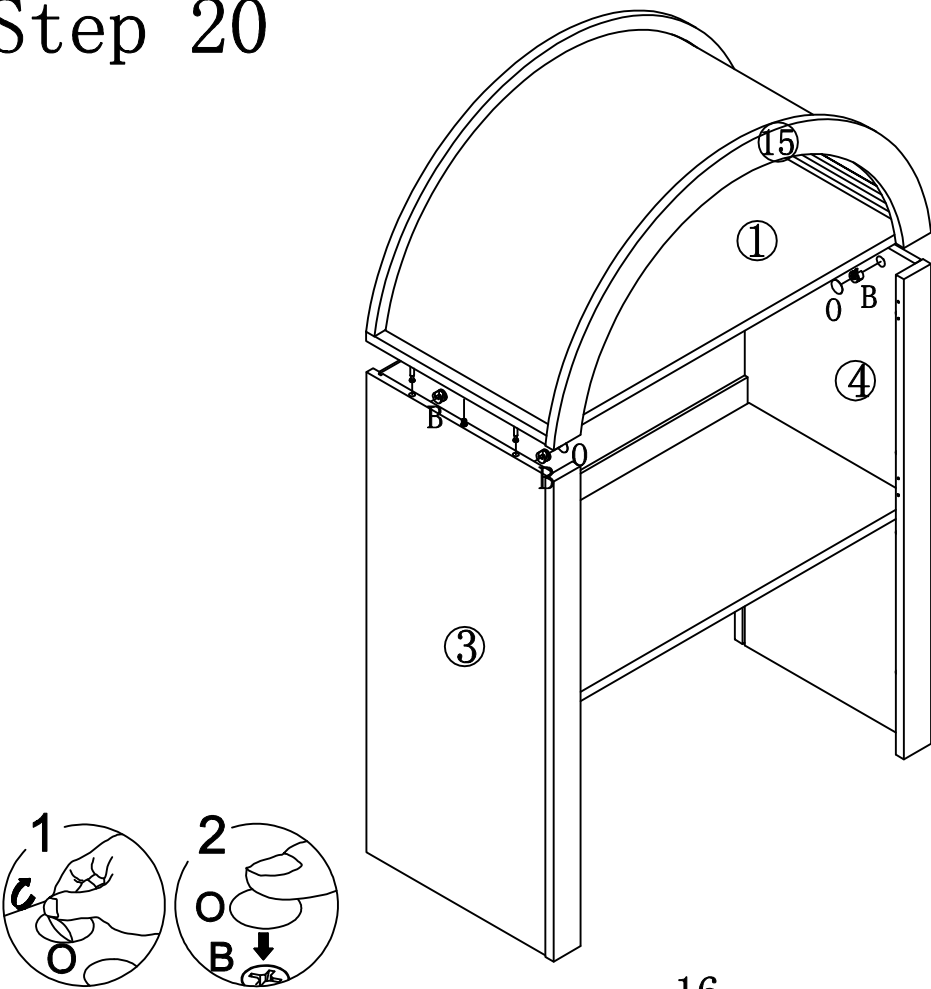


B	x 4
O	x 4

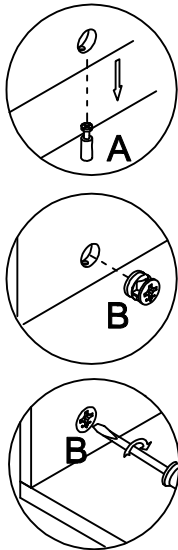



Step 21

R	x 2
	

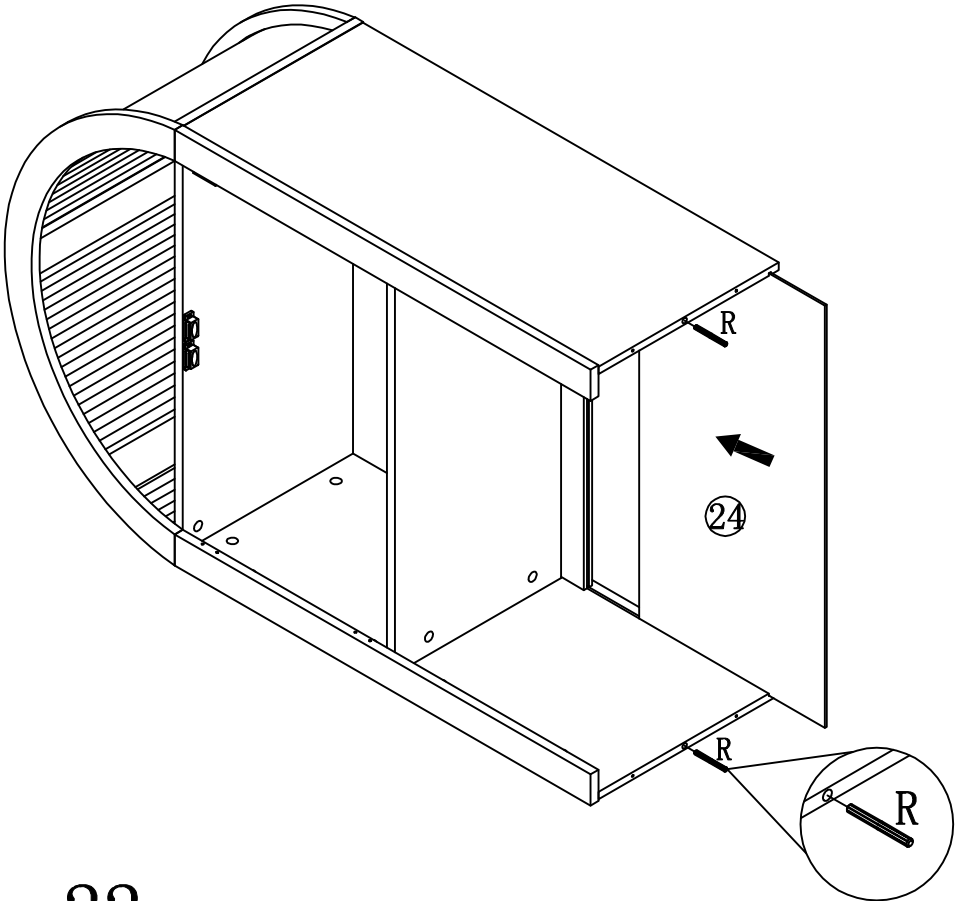



Step 22

D	x 4
	

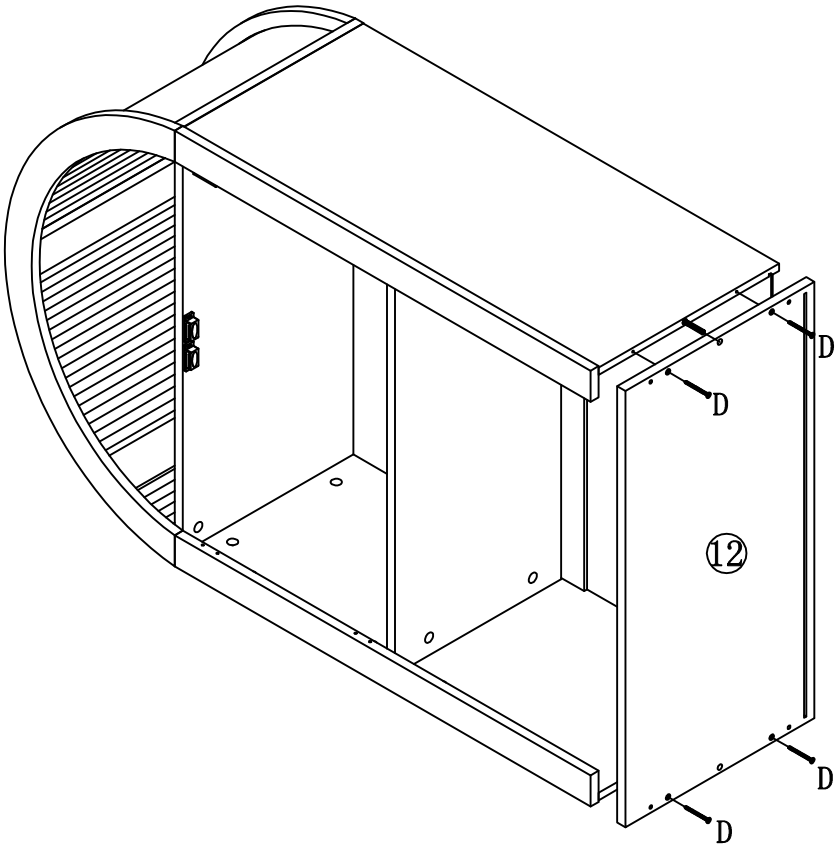


Step 23

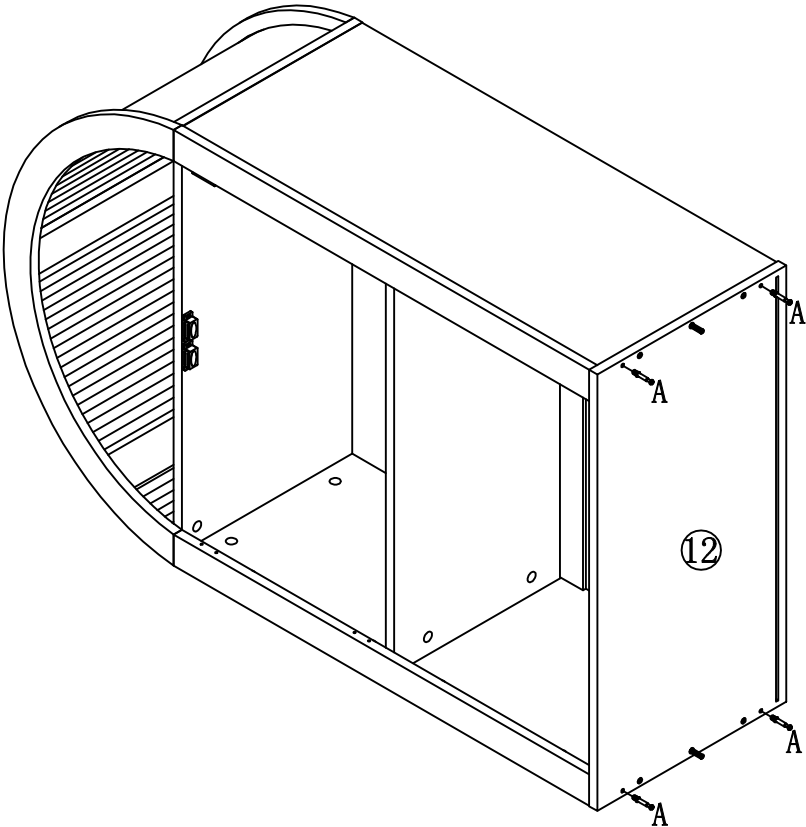




A	x 4
	

Step 24

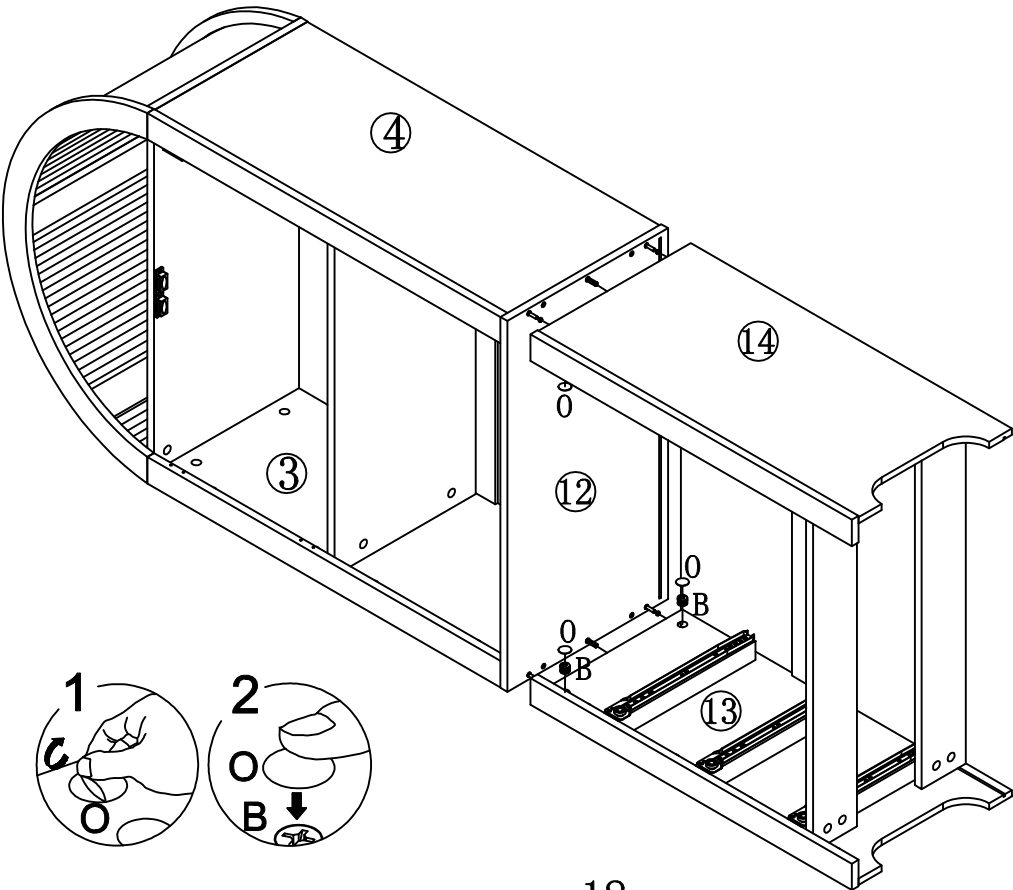


B	x 4
	


O	x 4
	

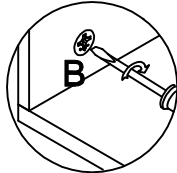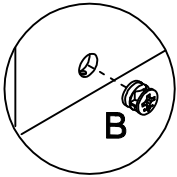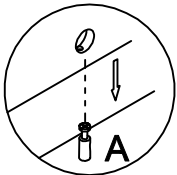


Step 25

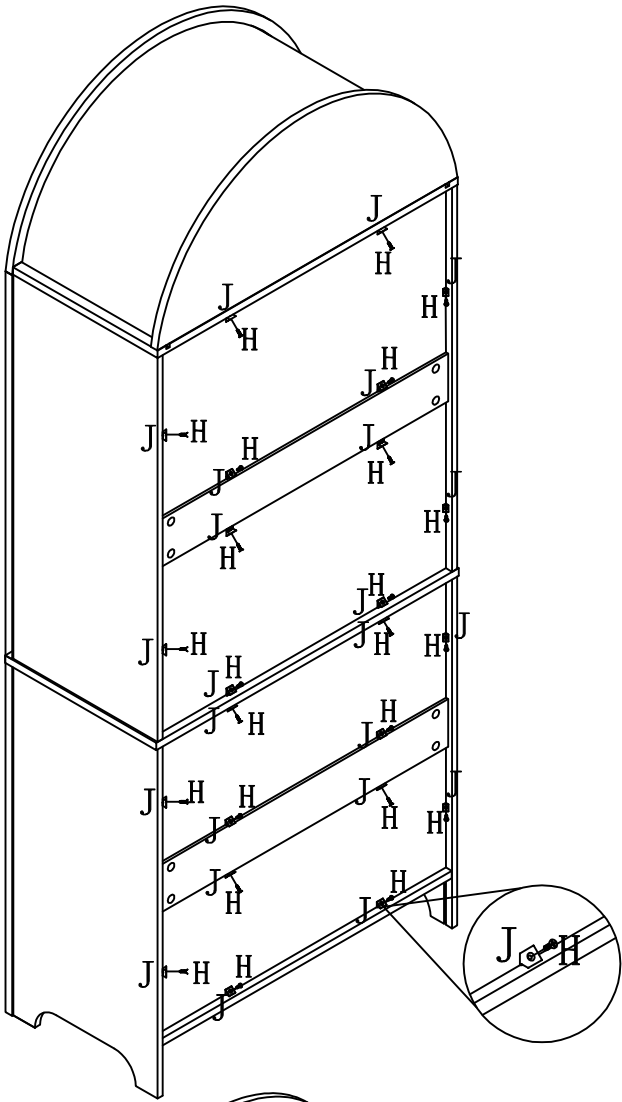


H	x 24
	

J	x 24
	

Step 26

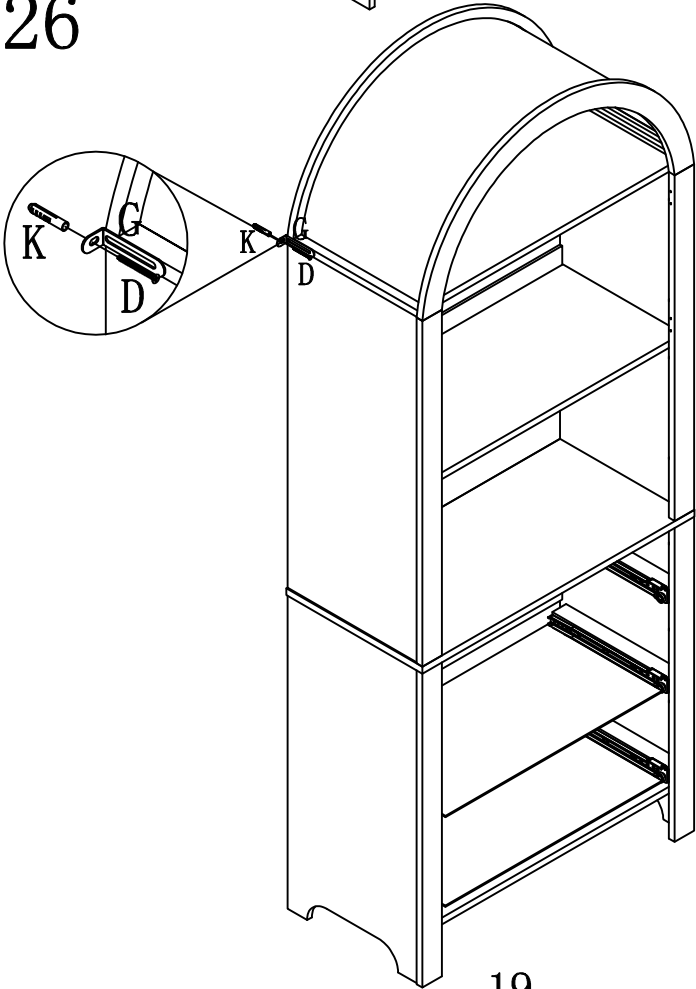


D	x 2
	

G	x 2
	


K	x 2
	

Step 27

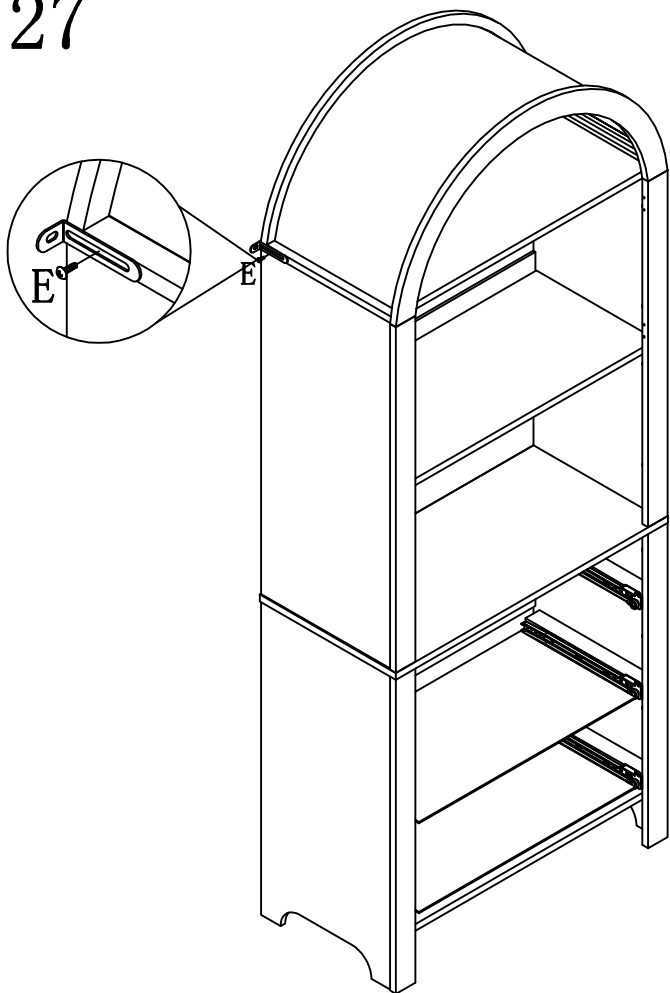



E	x 2
	

Step 28

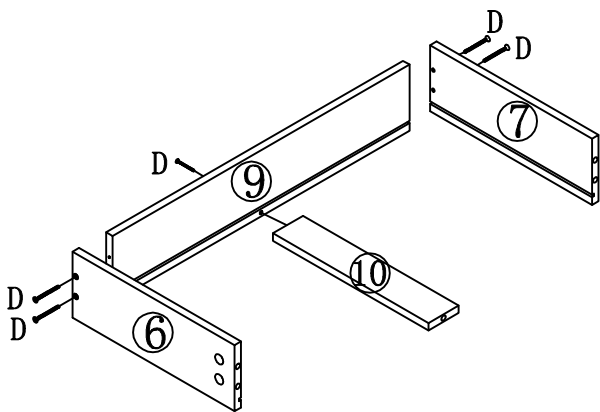





X 3

D	x 15
	

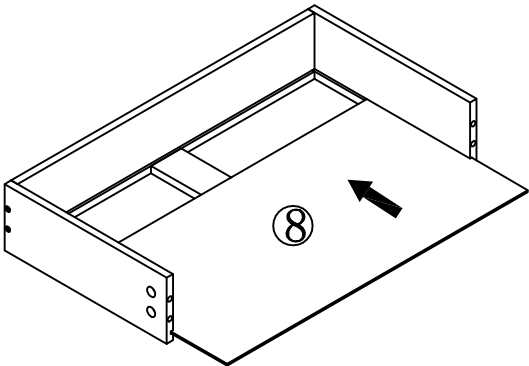


X 3






Step 29

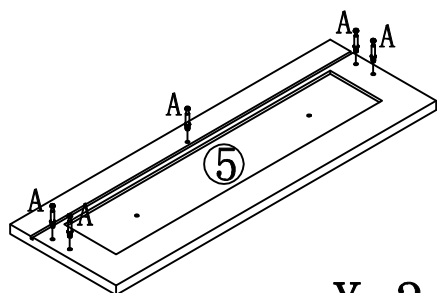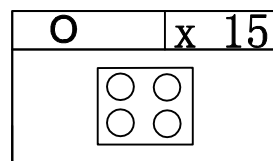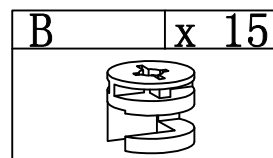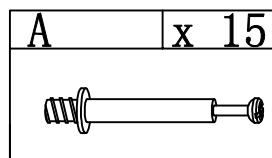




X 3

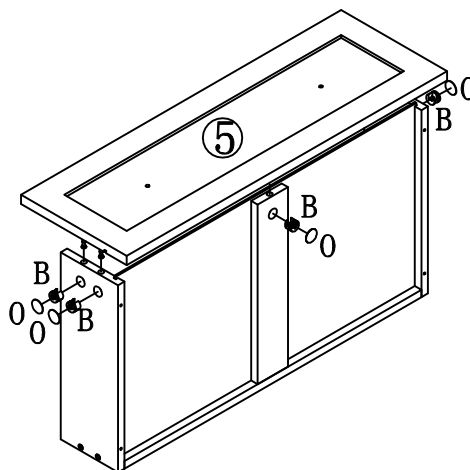

X 3

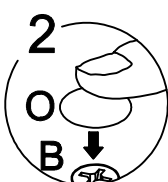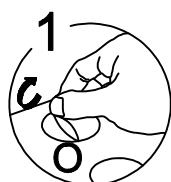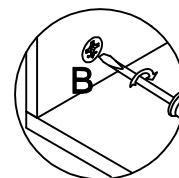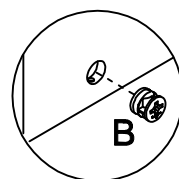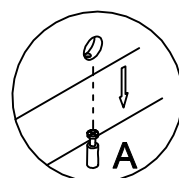




Step 30

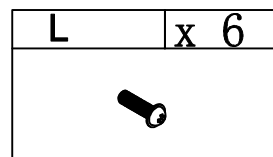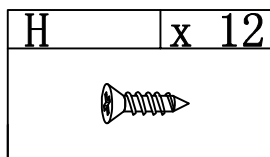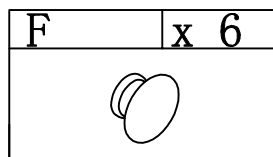


DL




DR

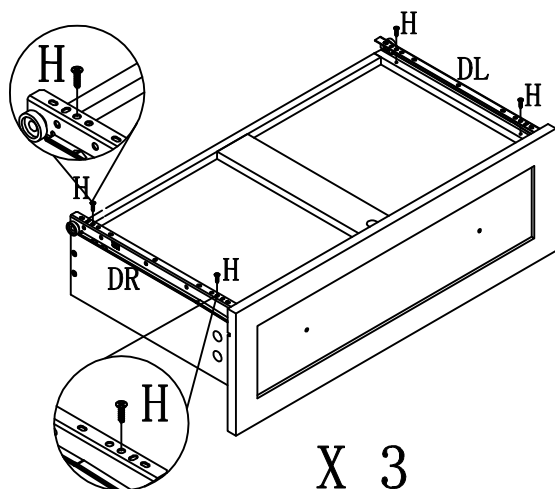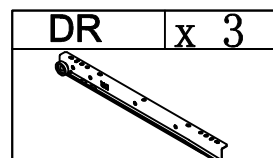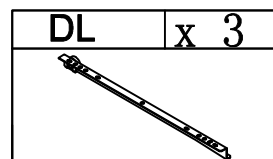


X 3

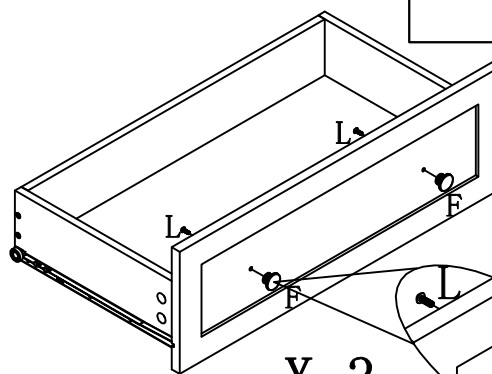


X 3

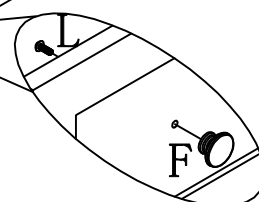



Step 31

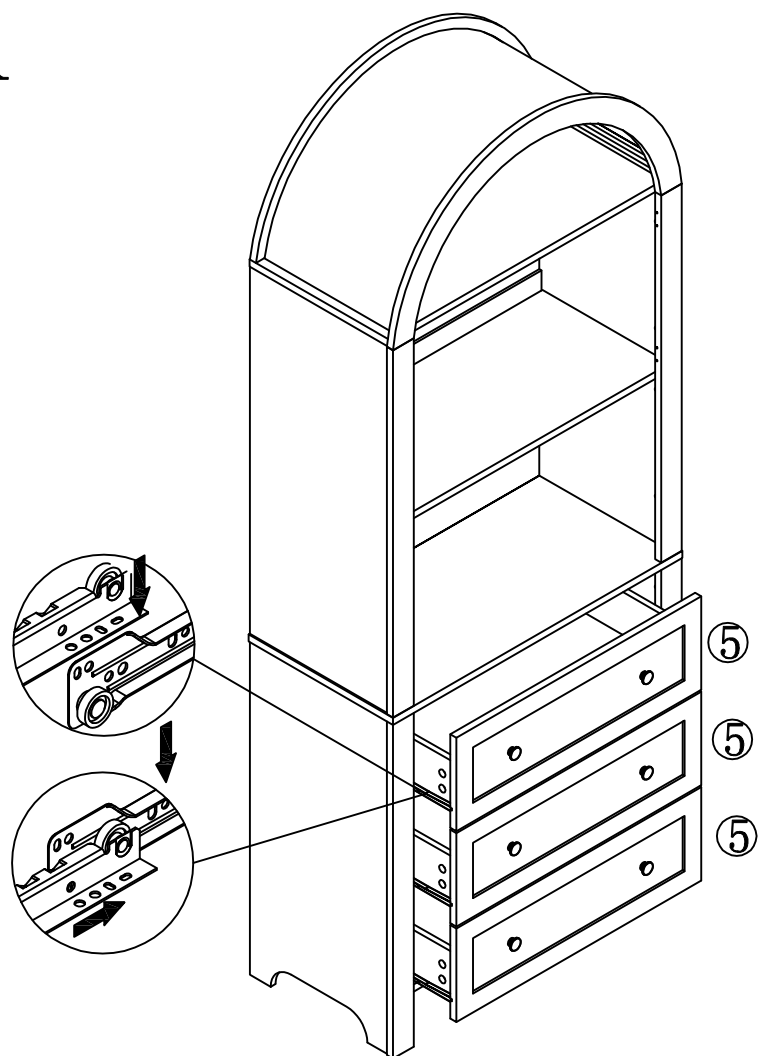

Step 32

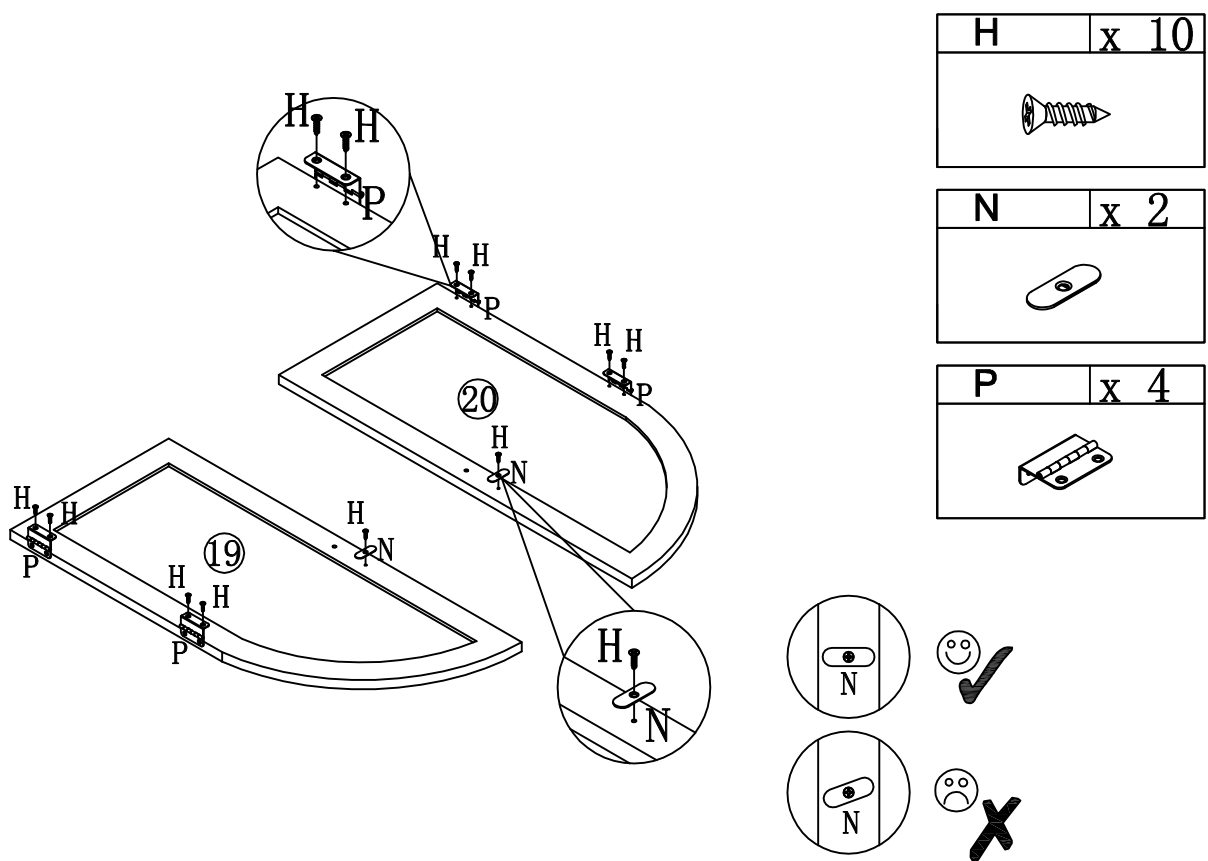

Step 33

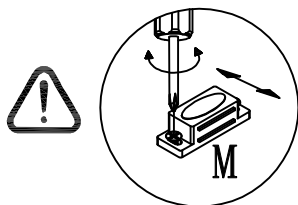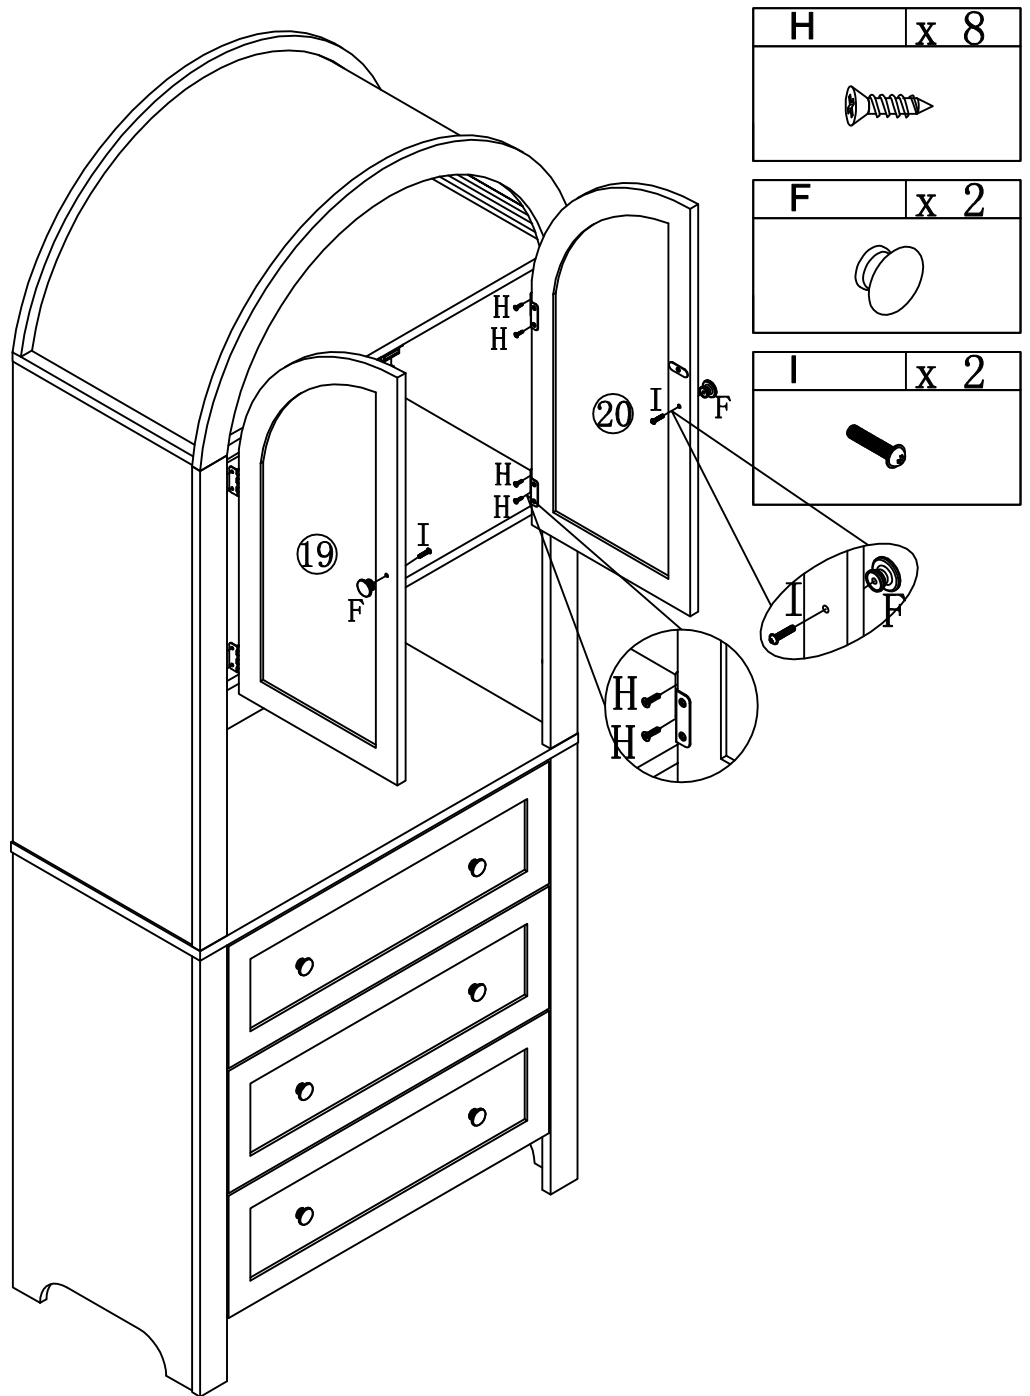

If the magnet does not absorb the door,
please adjust the hardware M as shown