



ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



BEFORE STARTING

Before Using Product



- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.



WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

QUICKFIT

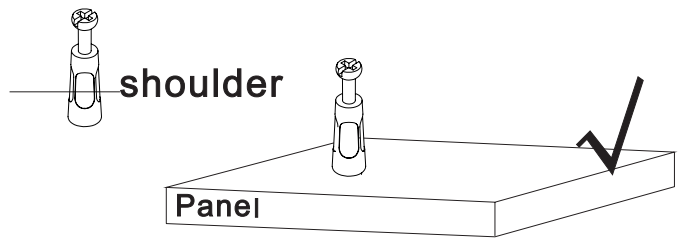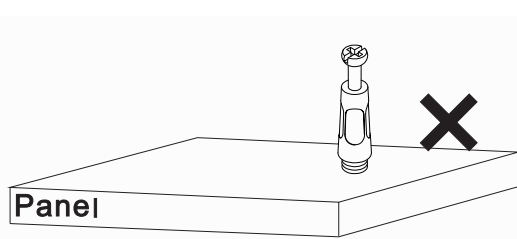


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

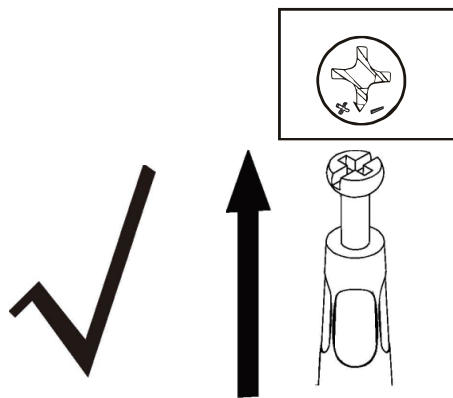


CORRECT

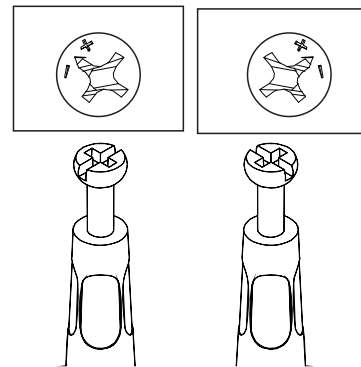


WRONG

When fitting cam lock, ensure starting position is correct before you insert cam lock to quickfit.


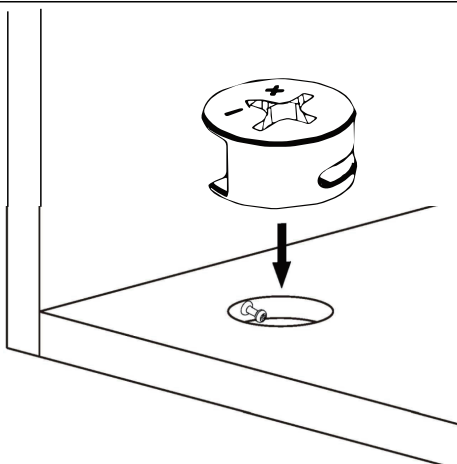


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.


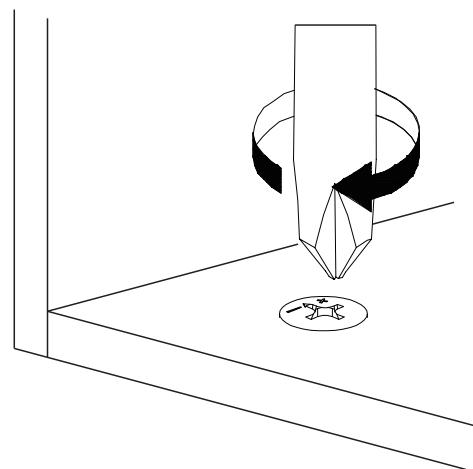


Turn cam lock clockwise to tighten.

















If the top Panel collapses or bends
Please adjust according to the following image

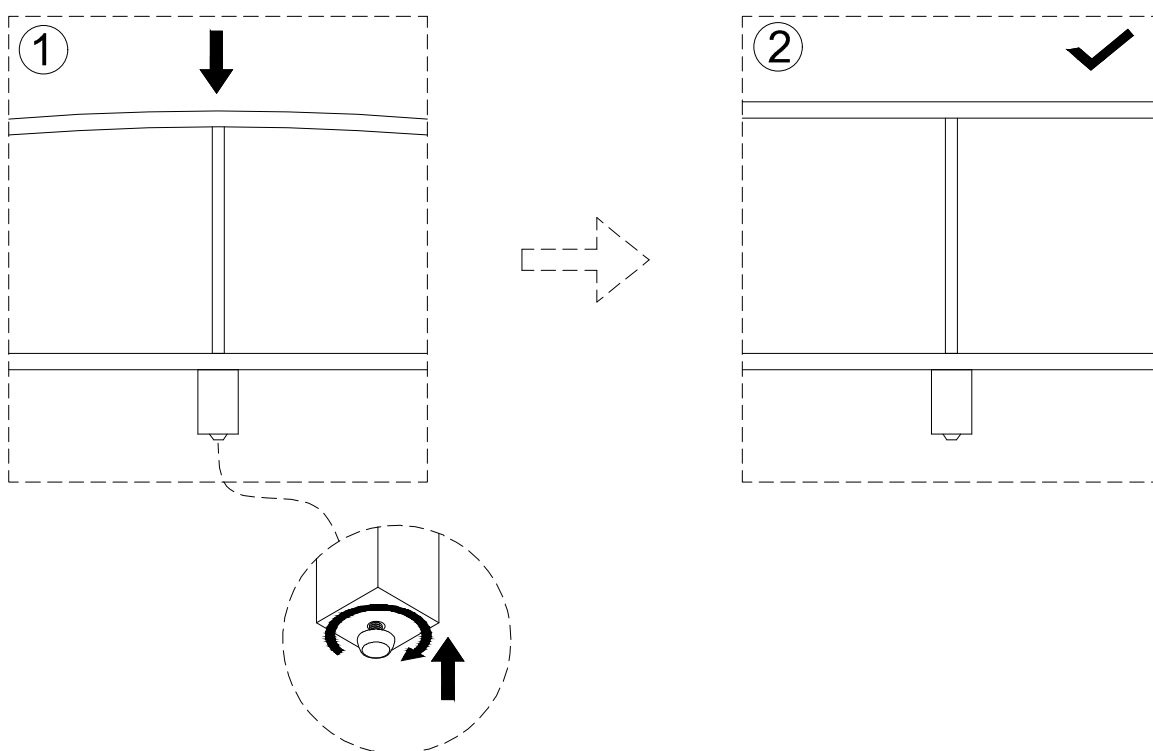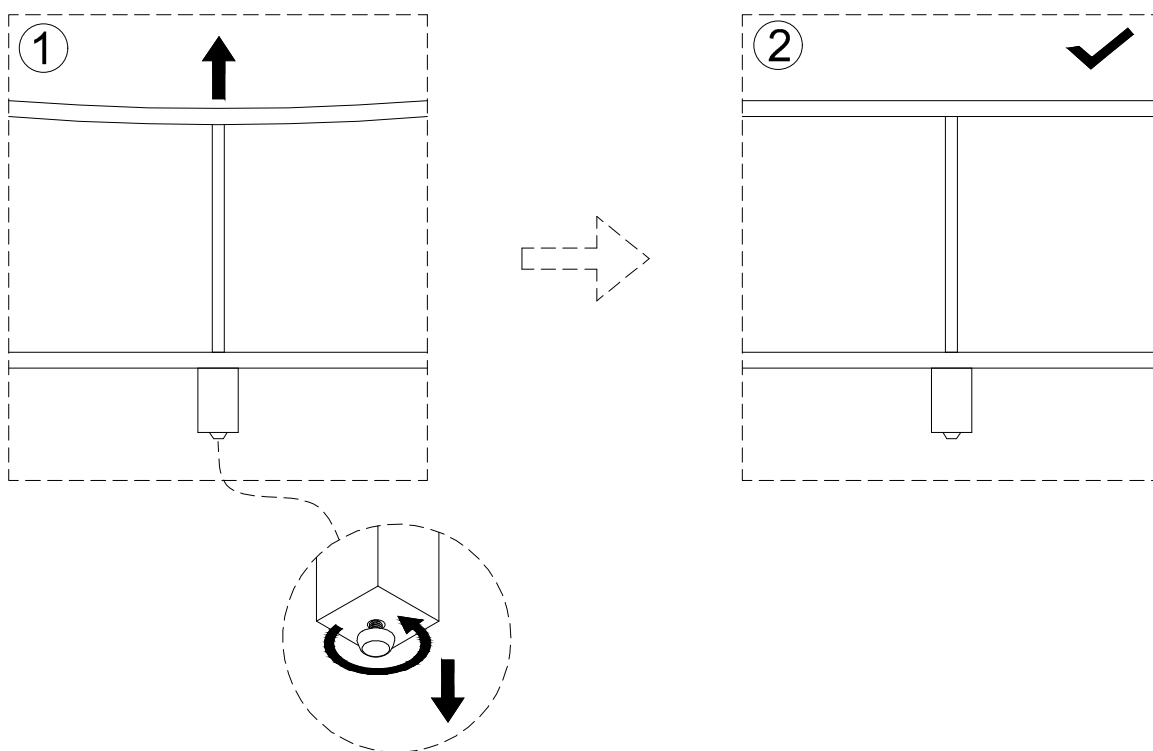






PART LIST

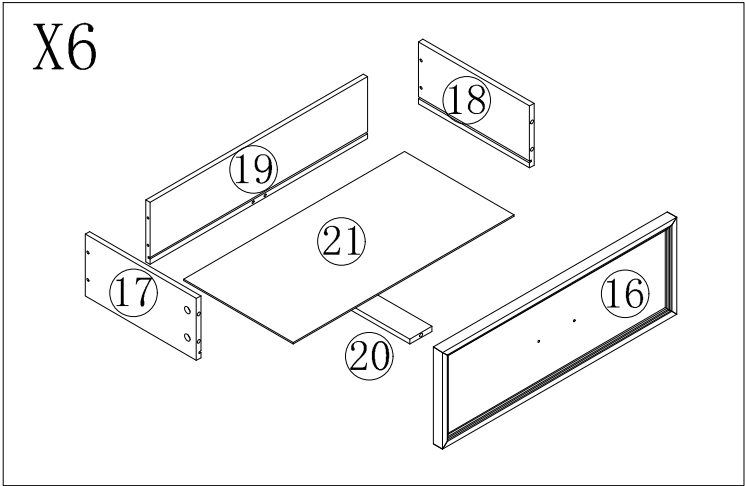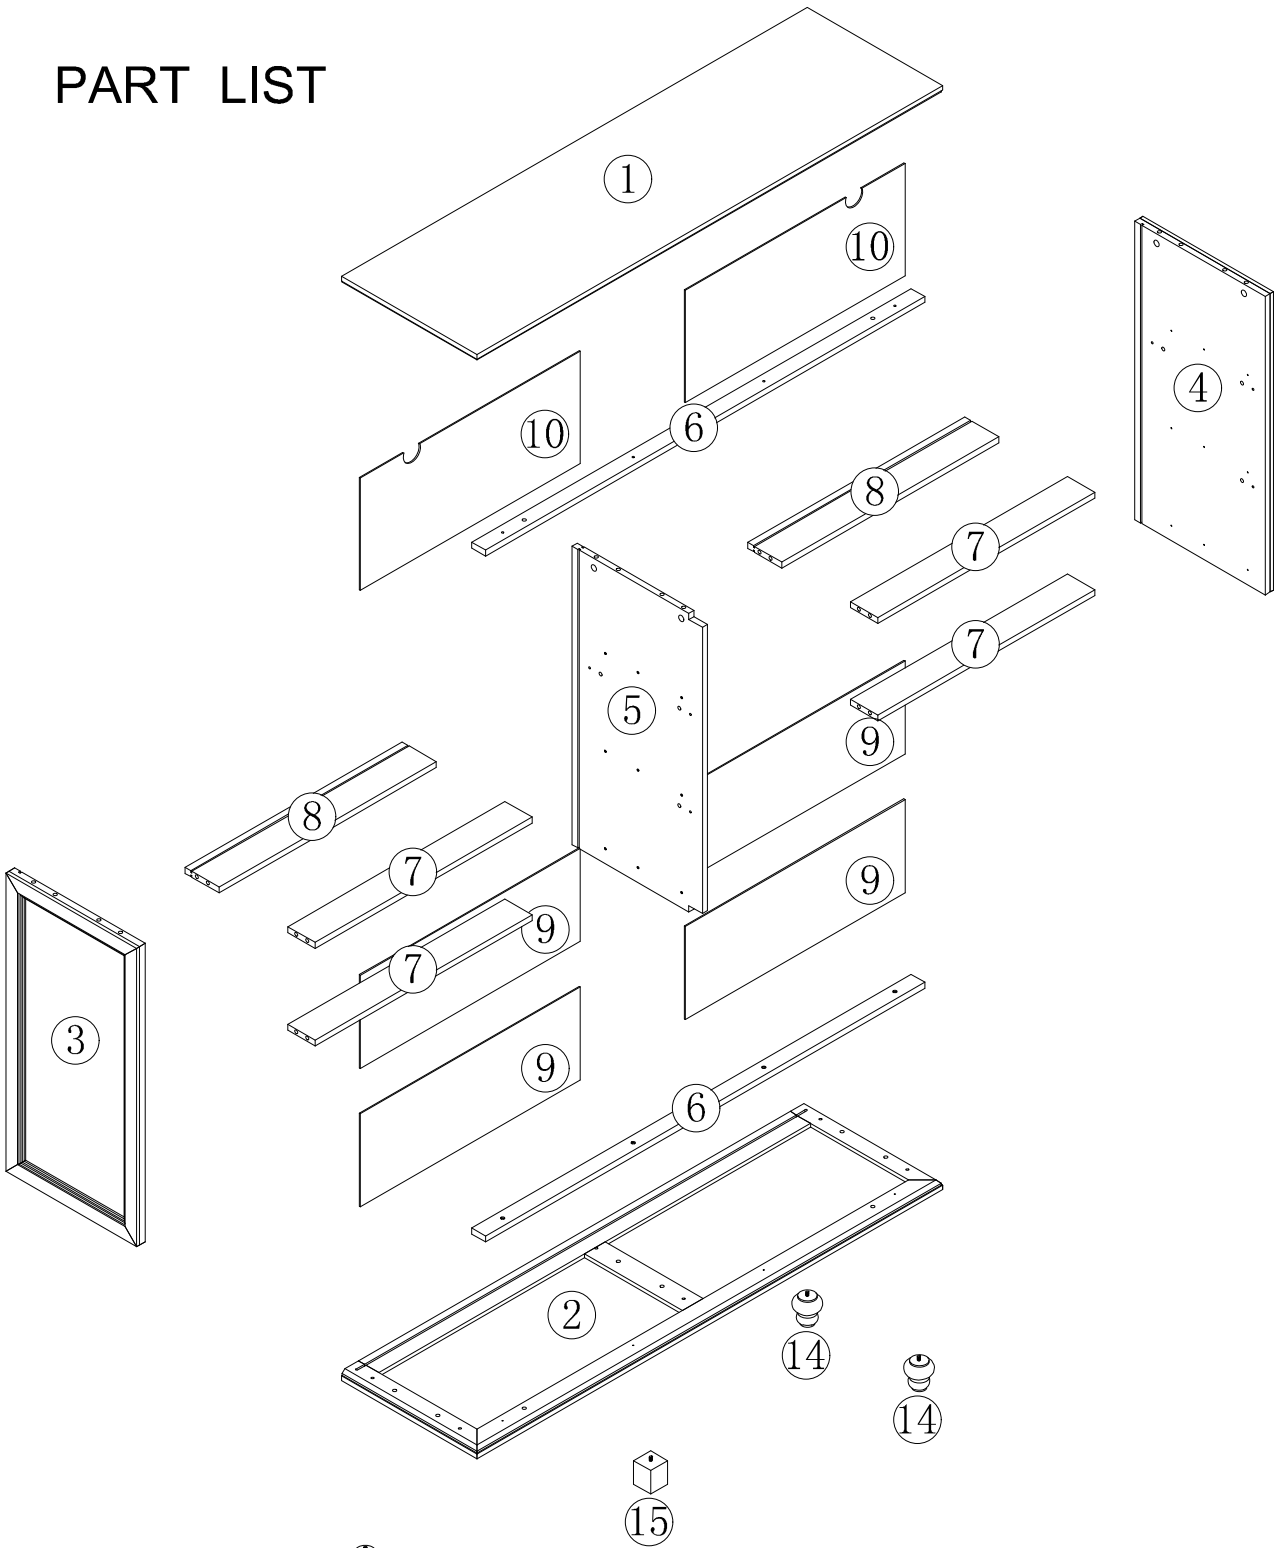

PART LIST

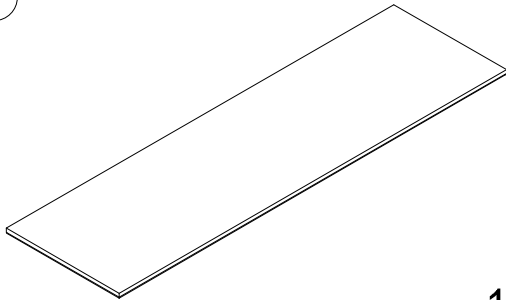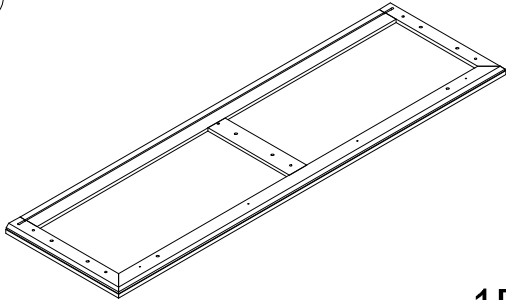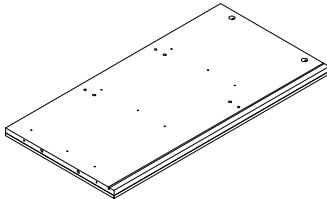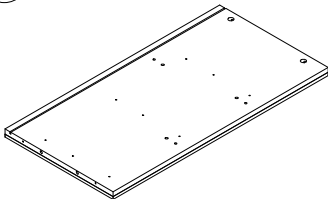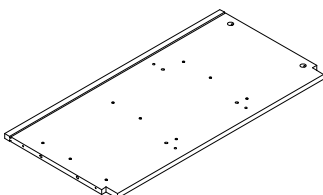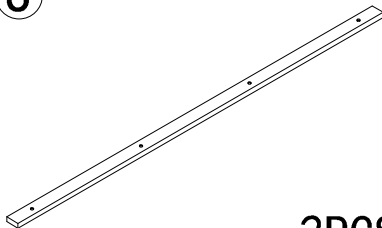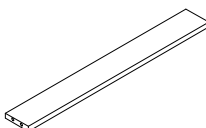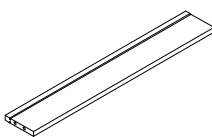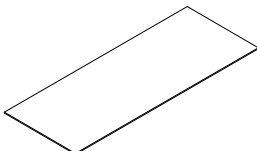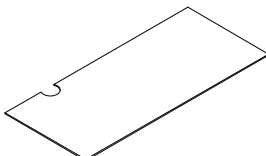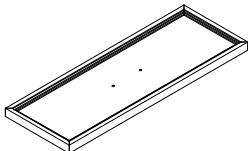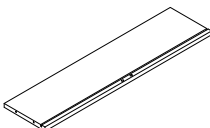
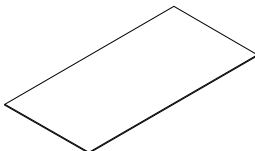
①  1PC	②  1PC		
③  1PC	④  1PC	⑤  1PC	
⑥  2PCS	⑦  4PCS	⑧  2PCS	
⑨  4PCS	⑩  2PCS	⑭  4PCS	⑮  1PC
⑯  6PCS	⑰  6PCS	⑱  6PCS	
⑲  6PCS	⑳  6PCS	㉑  6PCS	

HARDWARE LIST

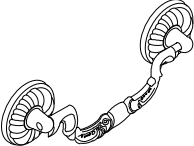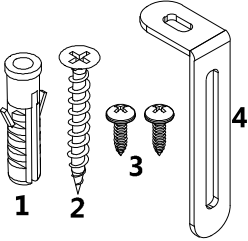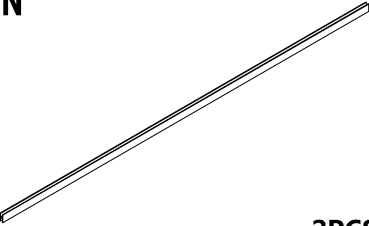
A  $\phi 6 \times 35$ (48+3)PCS	B  $\phi 15 \times 9.5$ (48+3) PCS	C  $\phi 8 \times 30$ (28+2)PCS
D  $\phi 5 \times 40$ (42+3)PCS	E  6PCS	F  (12+1)PCS
G  $\phi 3 \times 15$ (20+2)PCS	H  (20+2)PCS	I  $\phi 4 \times 30$ (8+1)PCS
J  6SET	K  $\phi 3 \times 12$ (63+3)PCS	L  $\phi 4 \times 12$ (9+1)PCS
M  1 2 3 4 2SET	N  2PCS	 3PCS
 1PC		




J X6SET




CL



CR




DL




DR



E

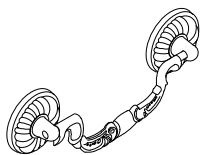

=




+




M

=




1



2




3

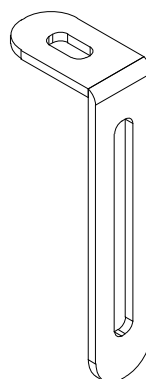

4




K





3mm

L




4mm

STEP 1

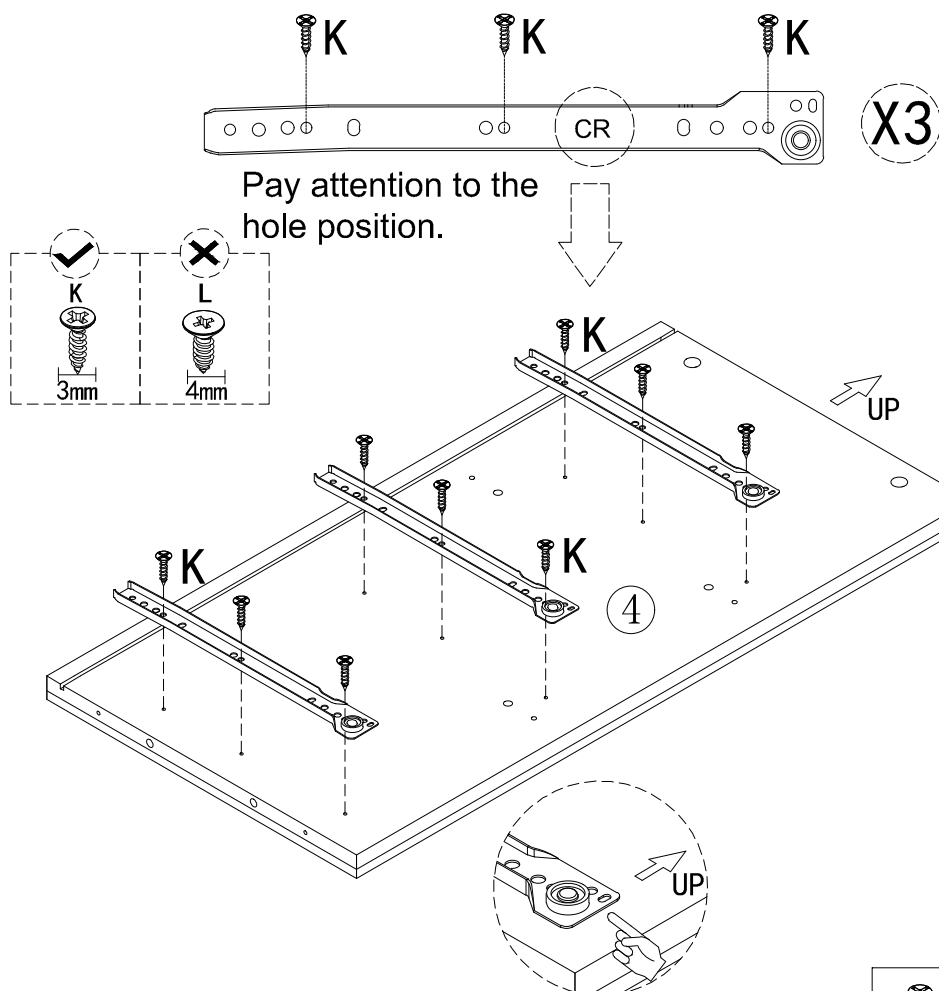
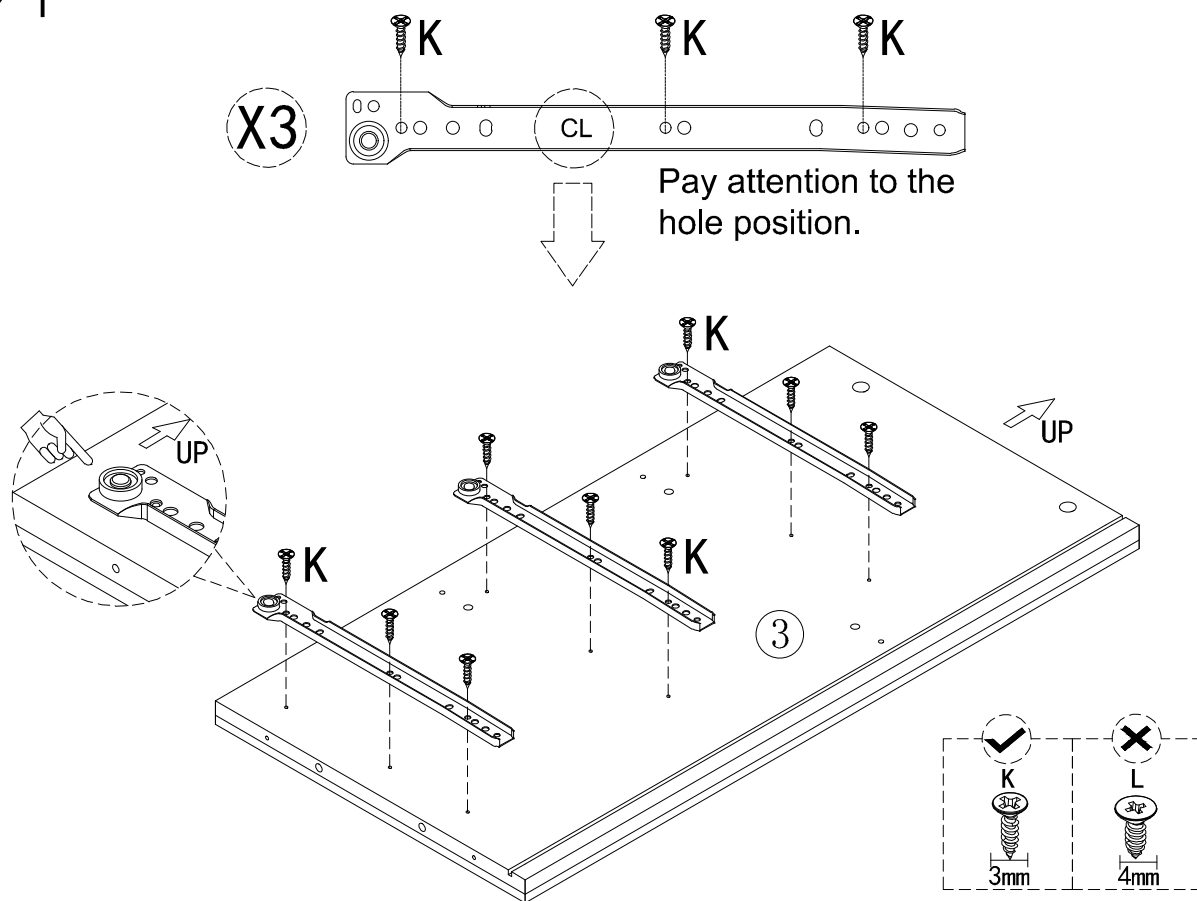


K X 18PCS

STEP 2

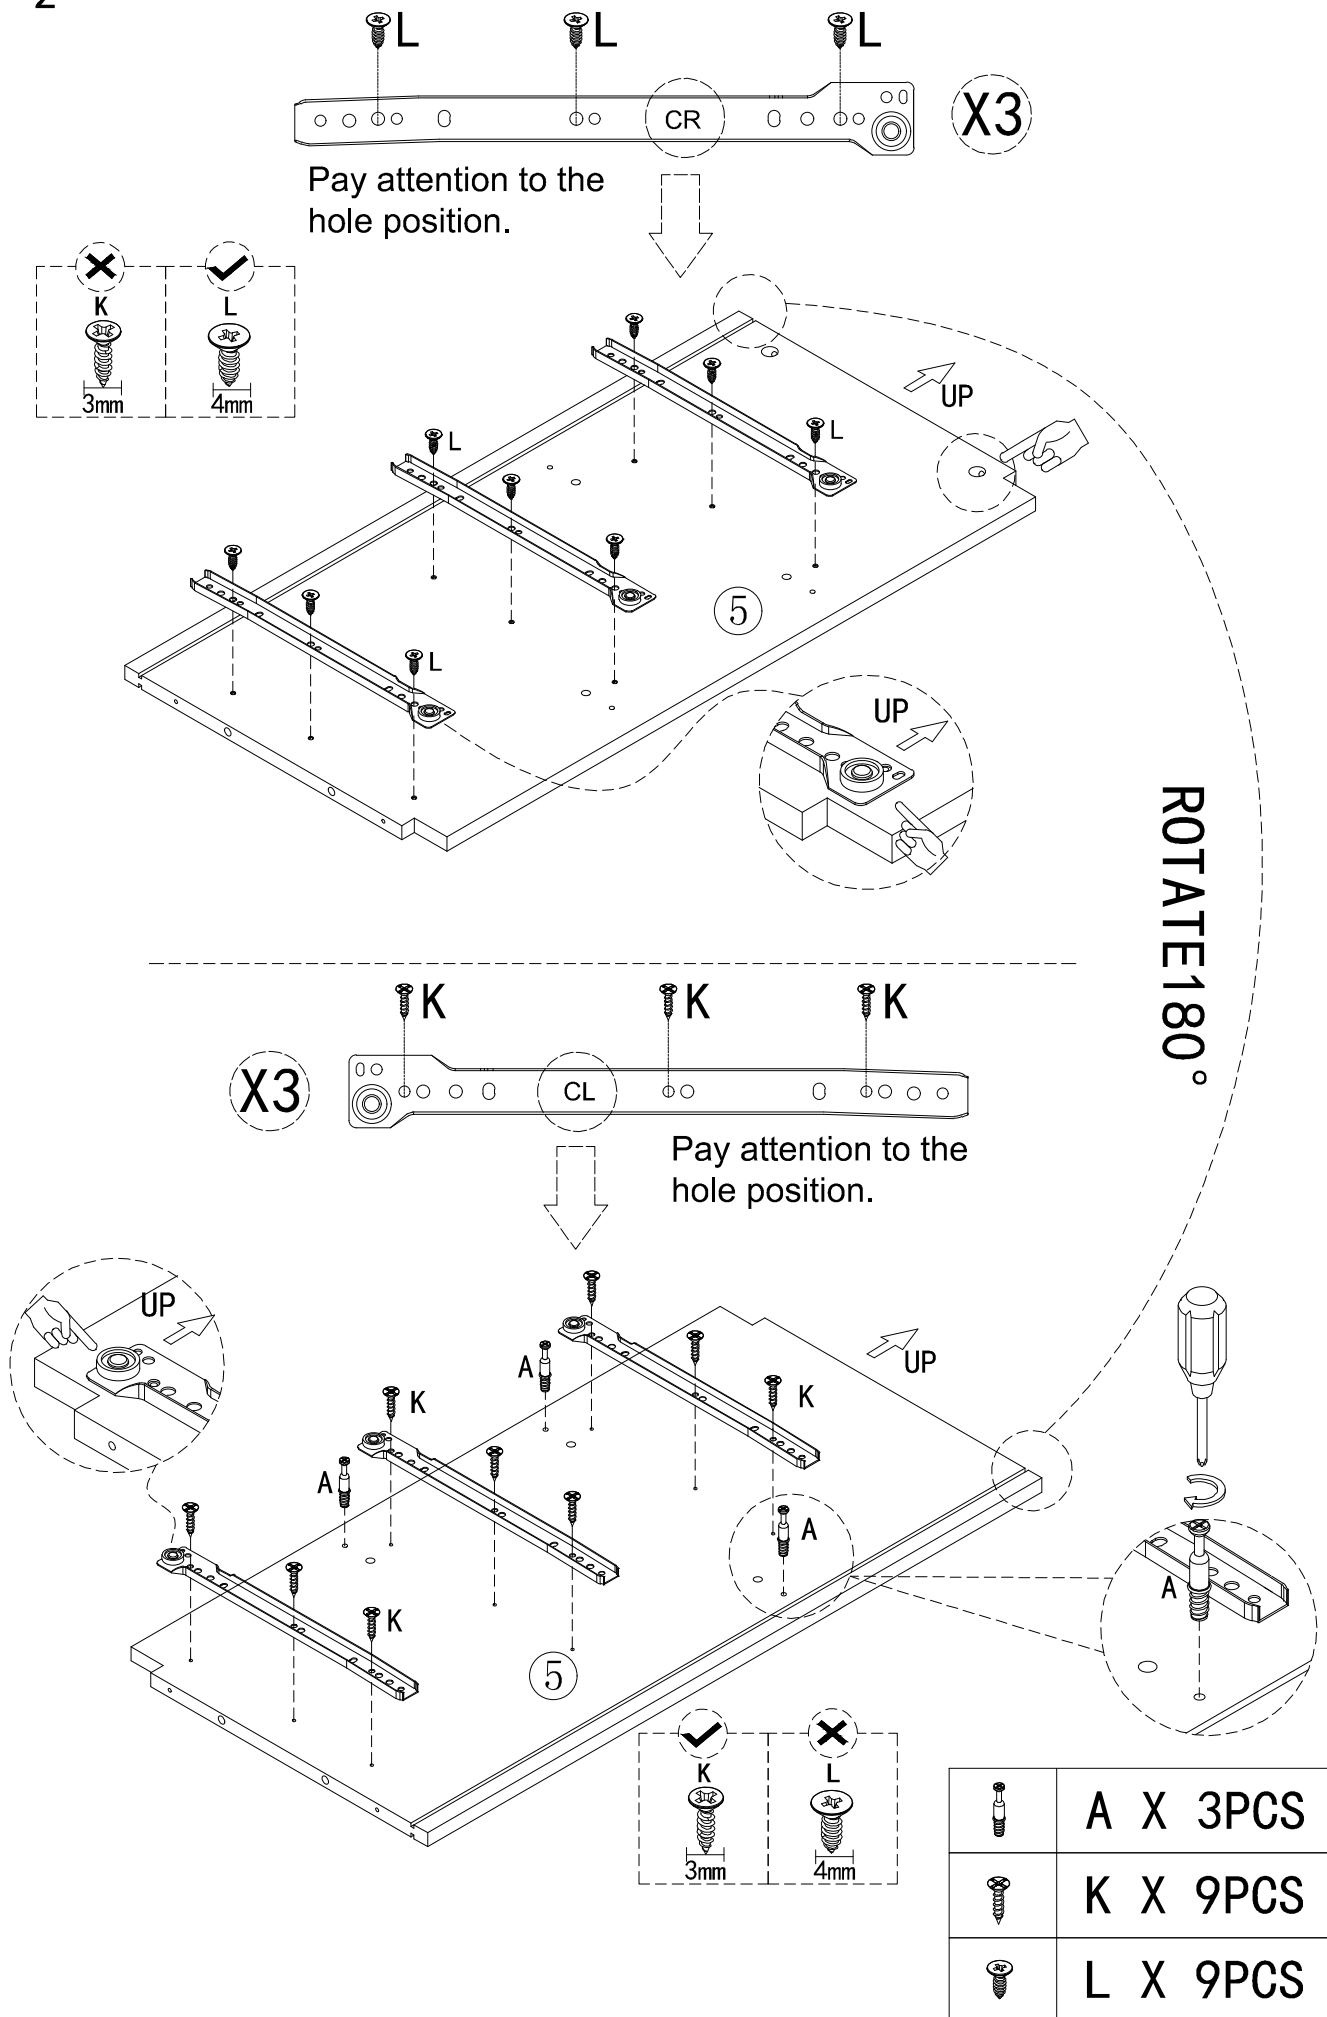


STEP 3

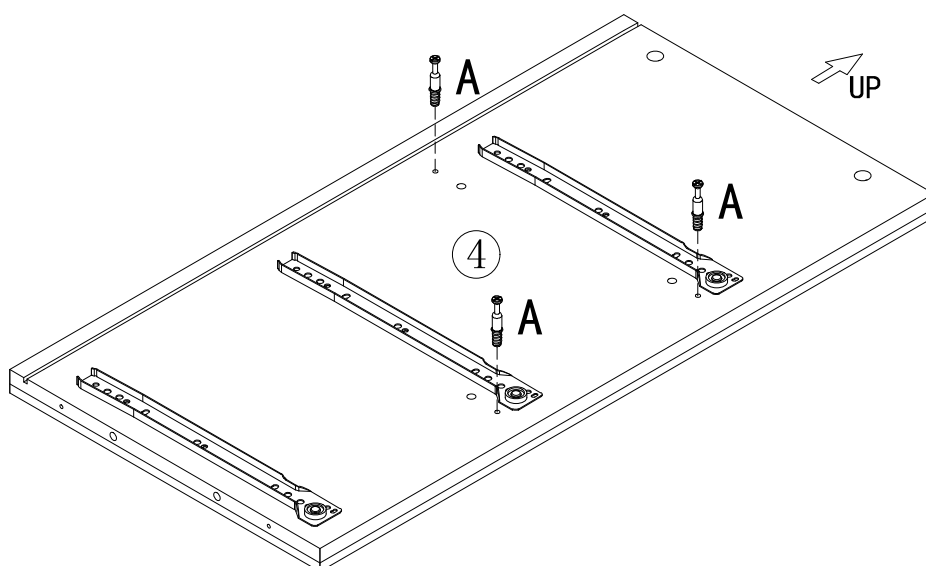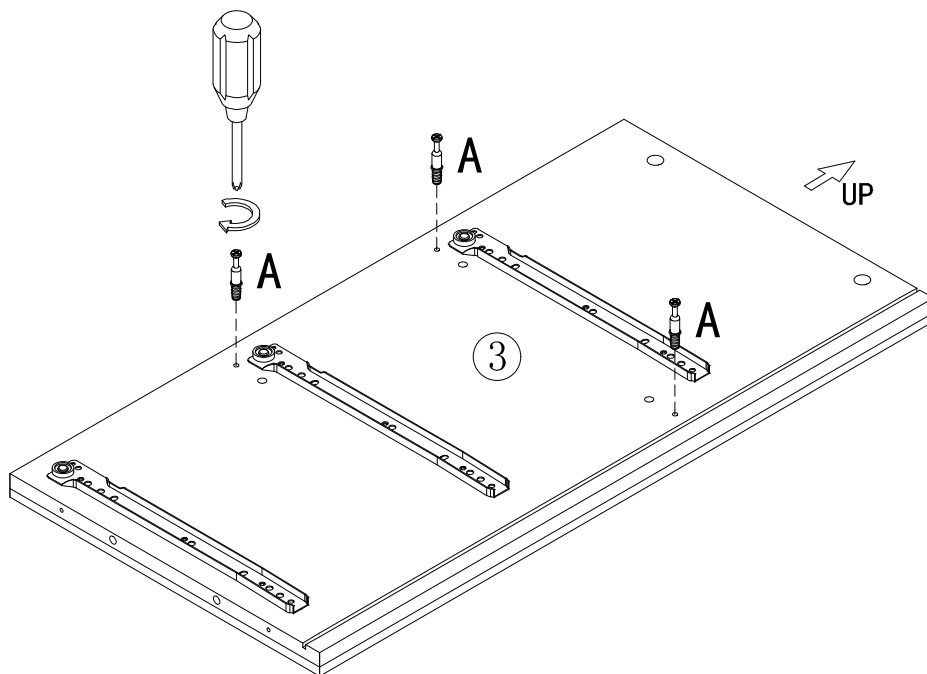

A X 6PCS


STEP 4

Pay attention to the hole position.

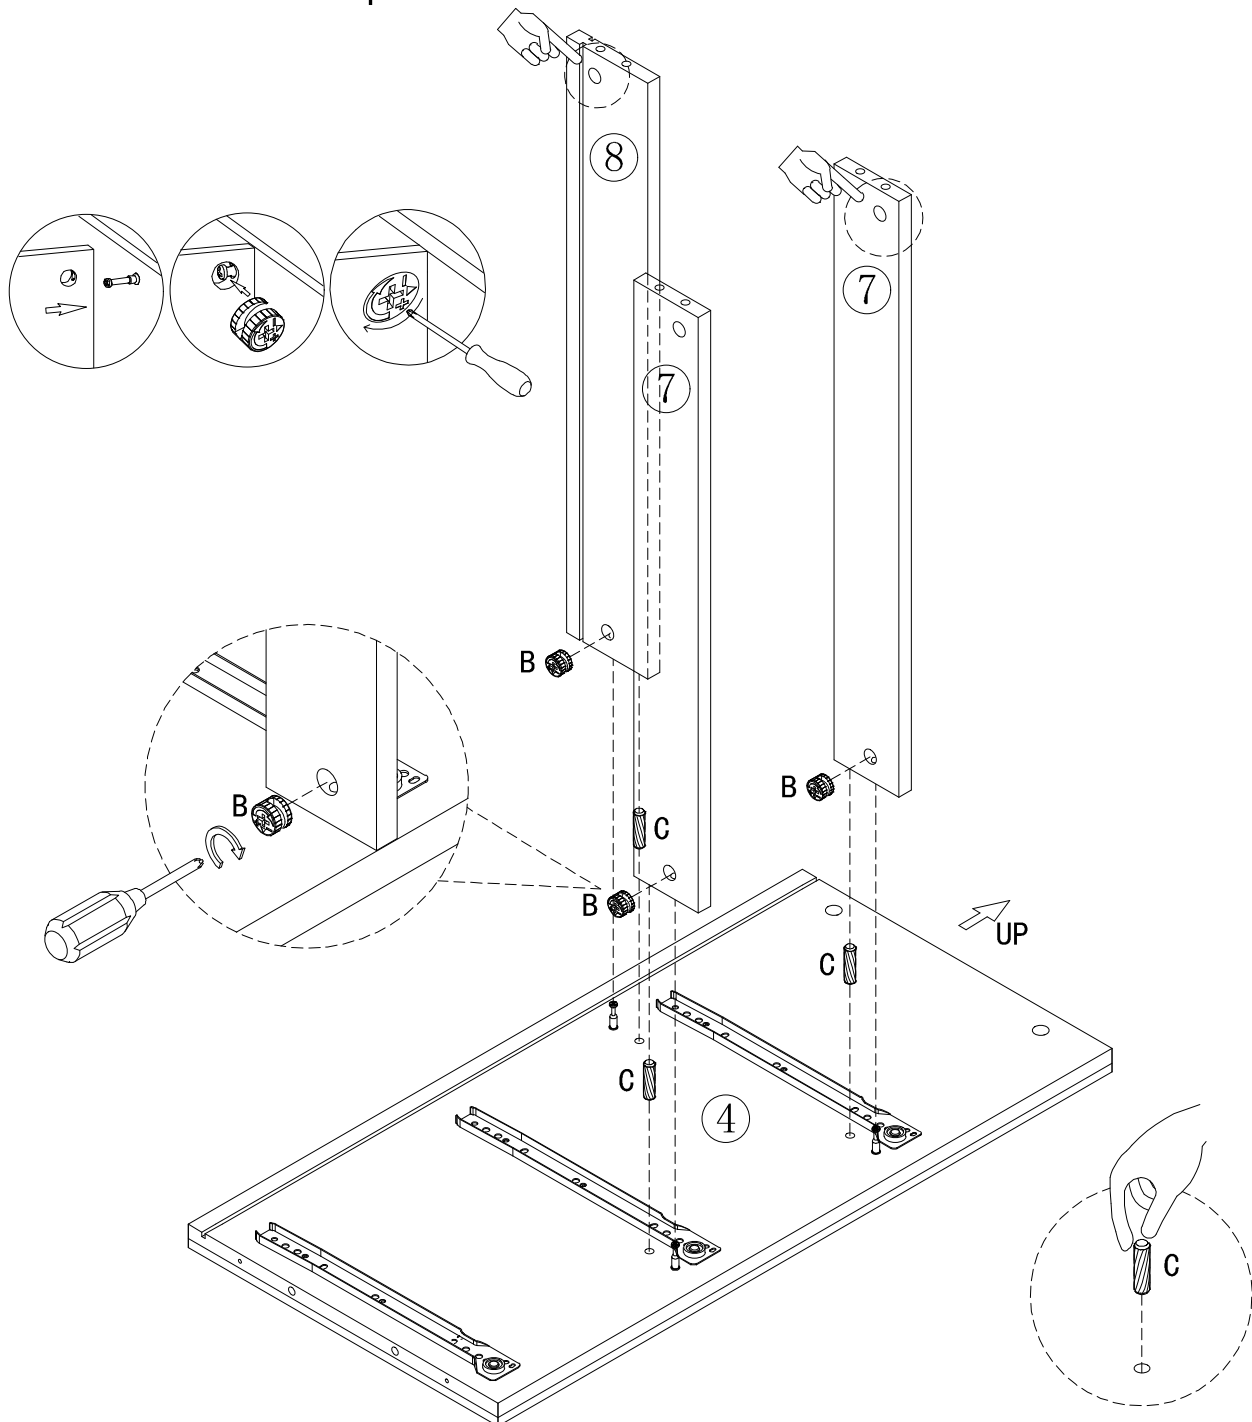


	B X 3PCS
	C X 3PCS

STEP 5

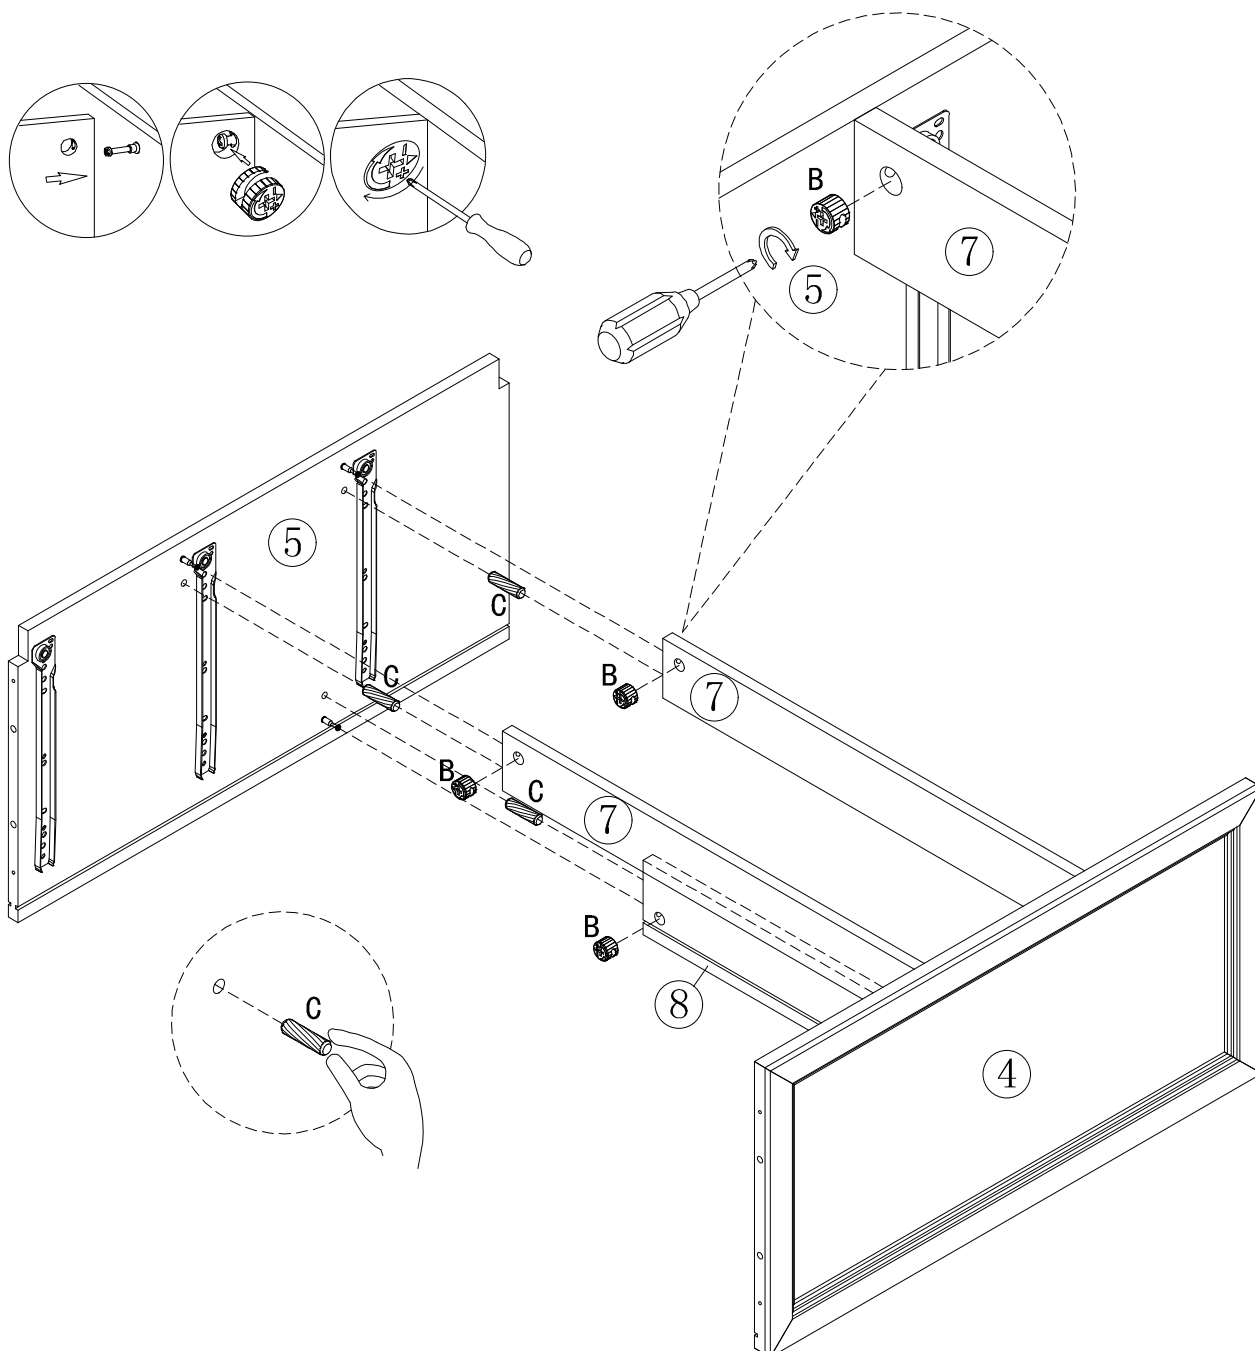


	B X 3PCS
	C X 3PCS

STEP 6

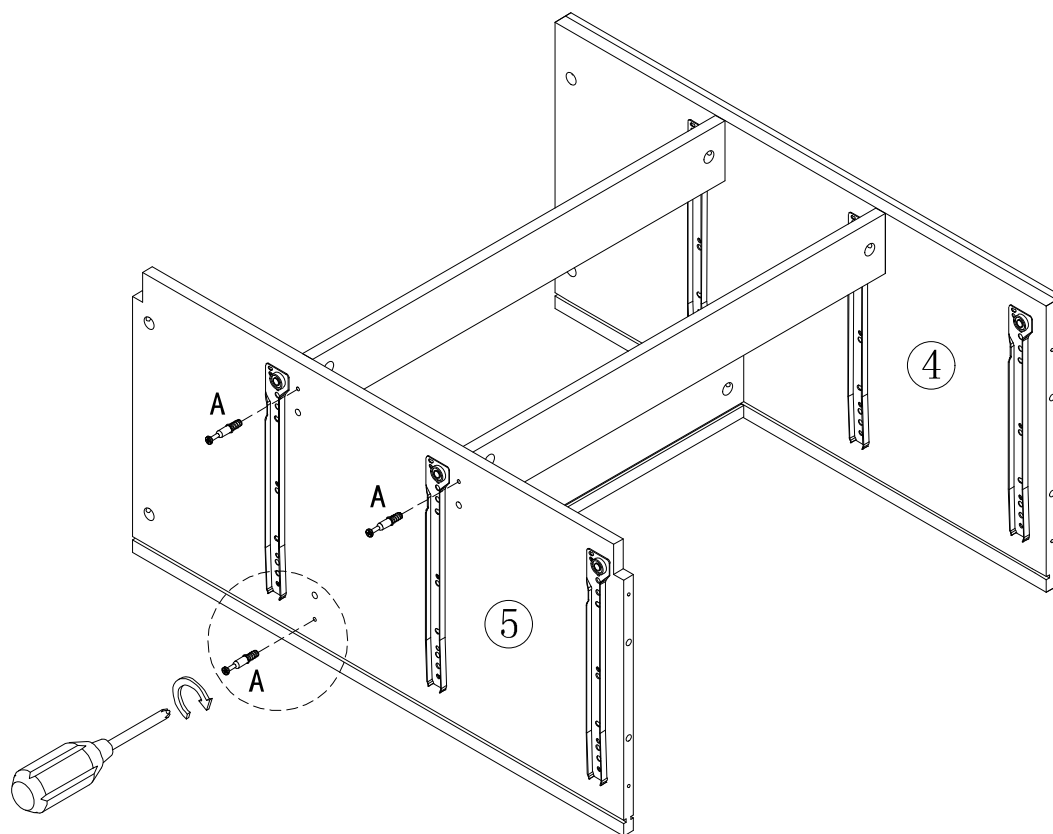

A X 3PCS


STEP 7

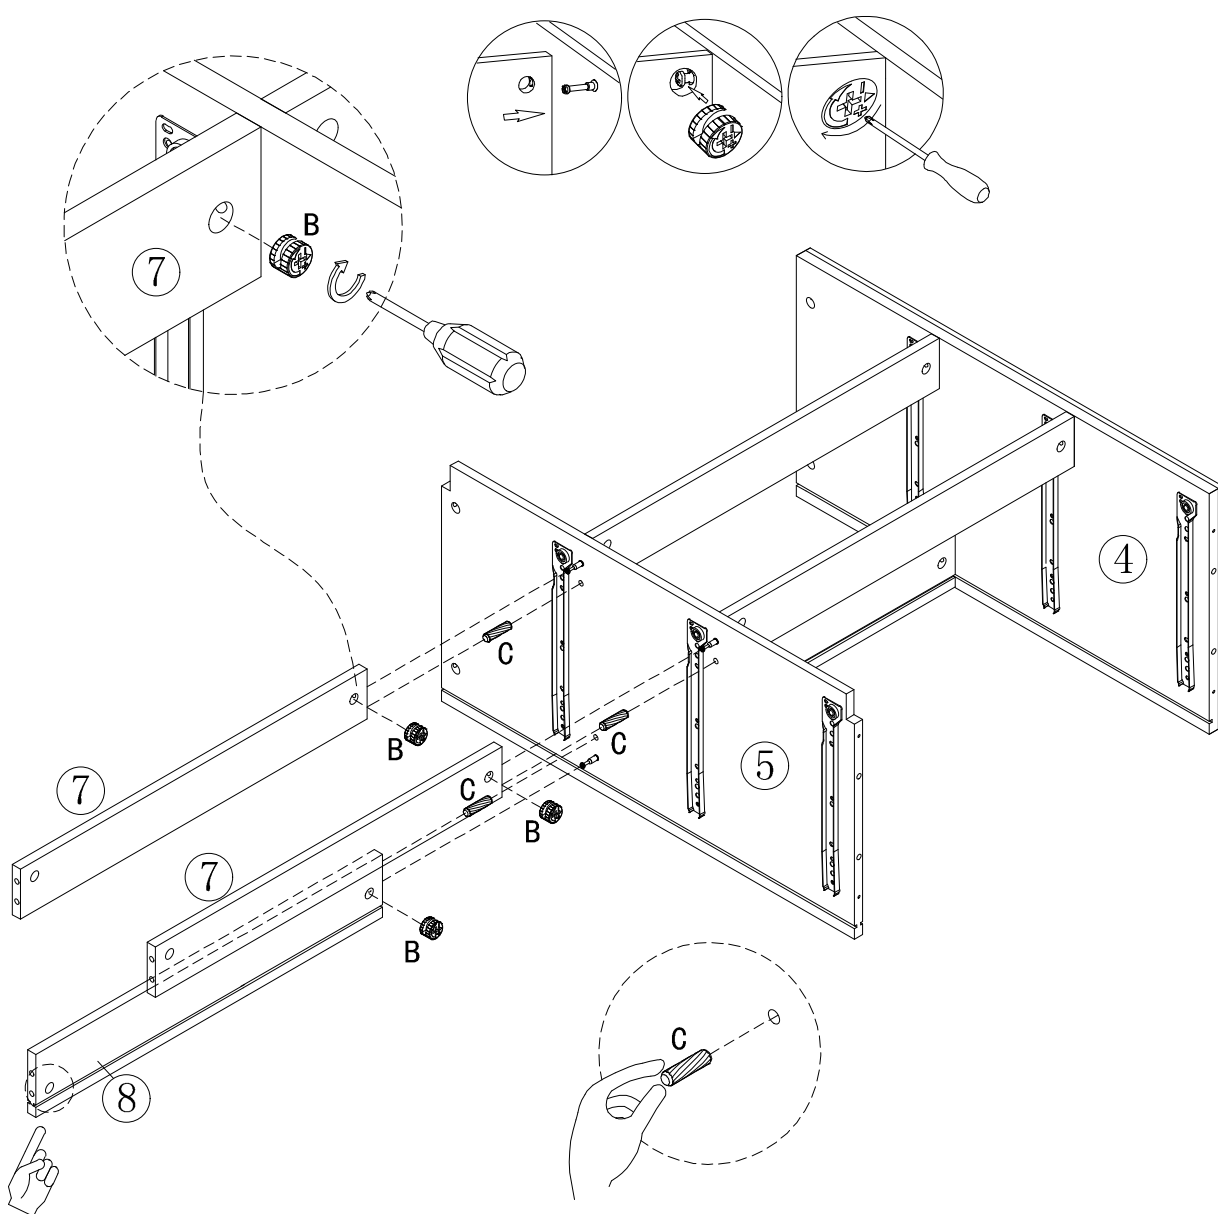

Pay attention to the hole position.


	B X 3PCS
	C X 3PCS

STEP 8

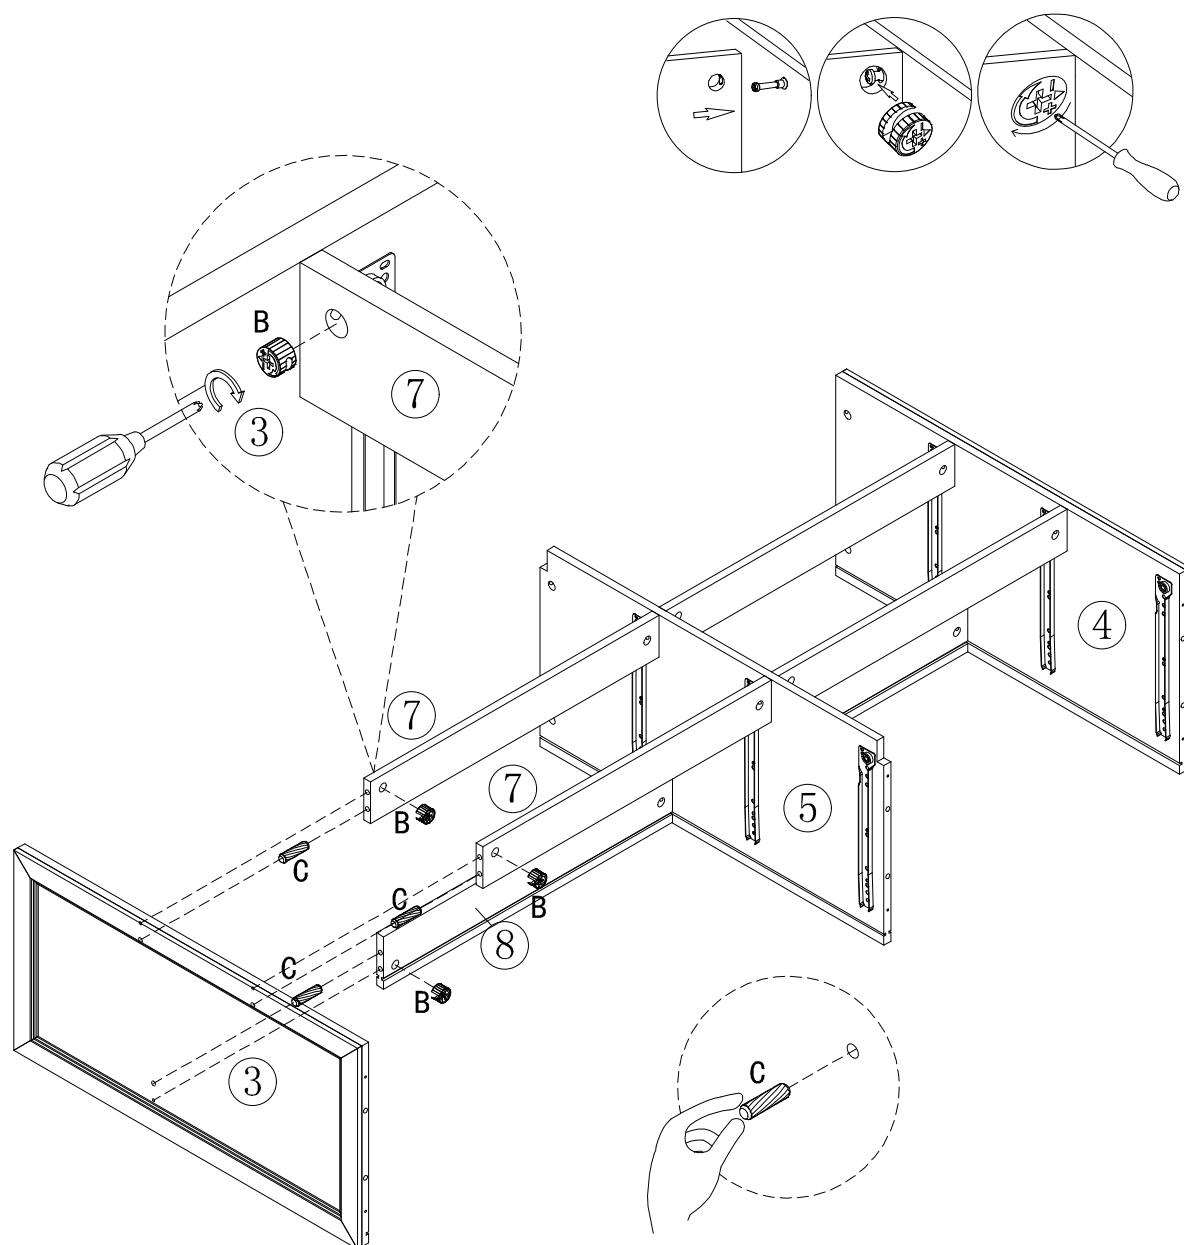





	B X 3PCS
	C X 3PCS

STEP 9

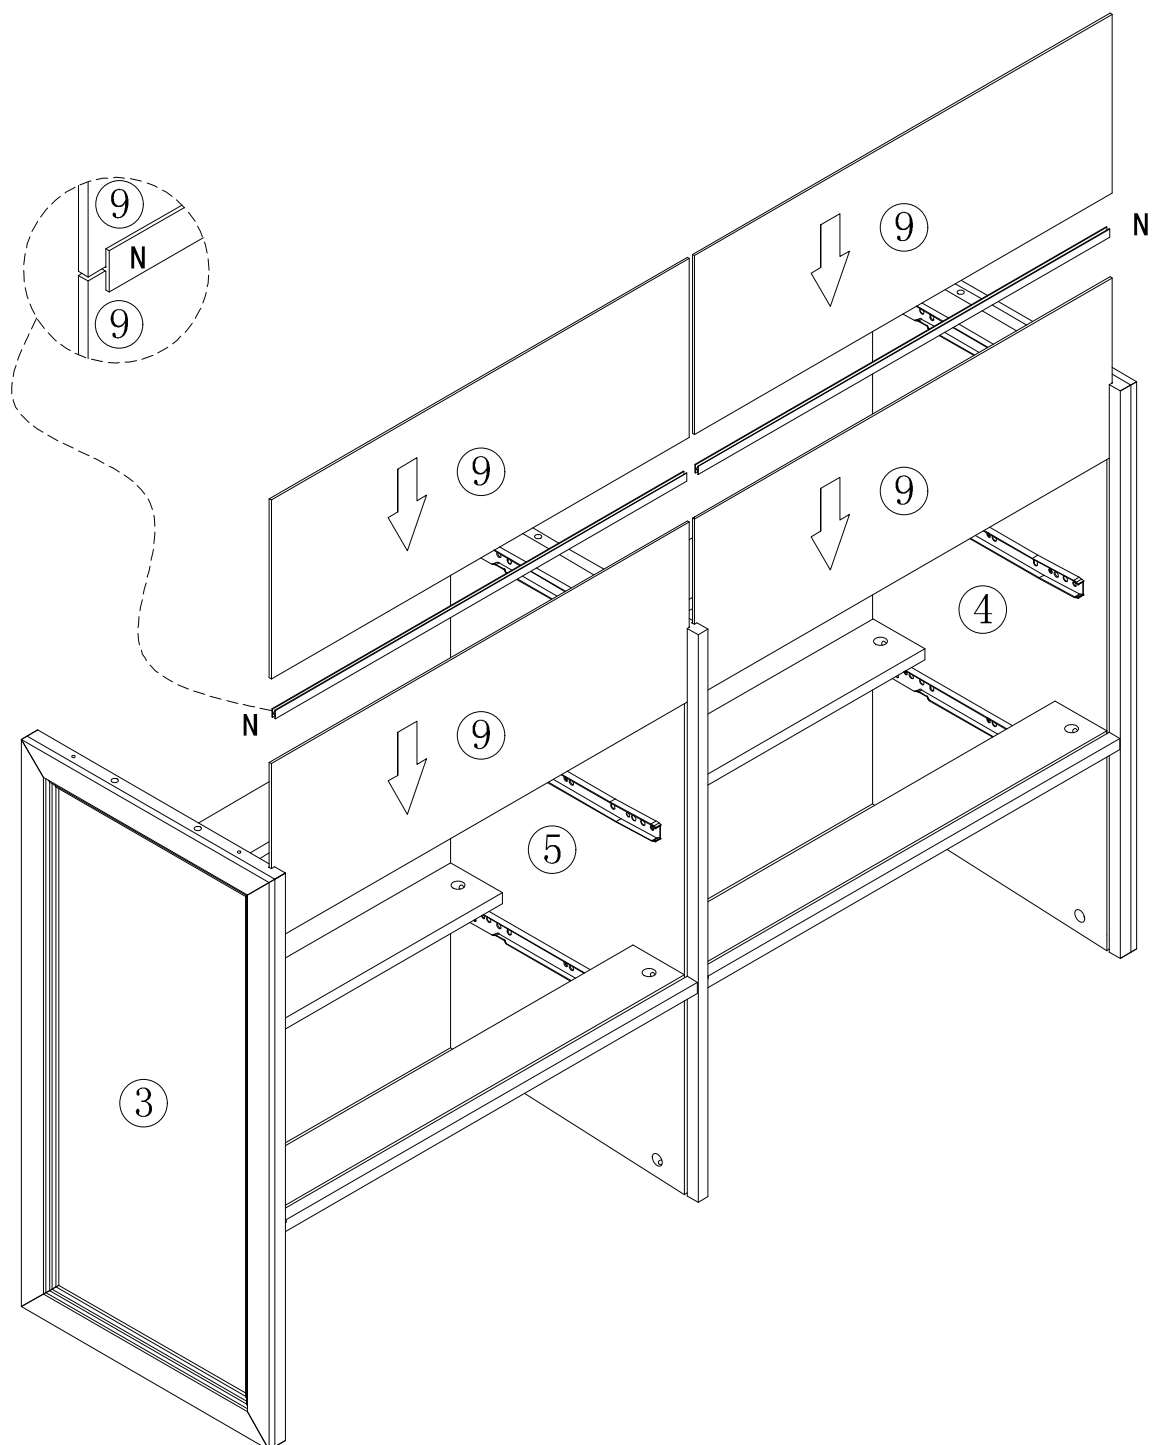


	N X 2PCS
---	----------


STEP 10

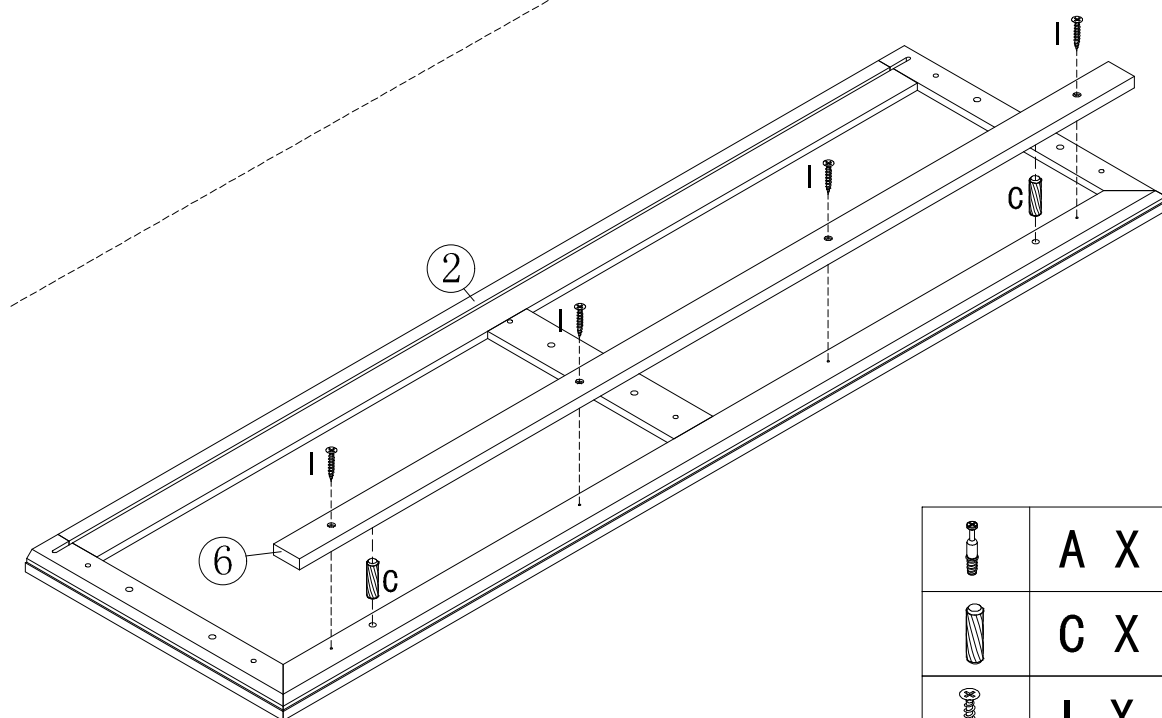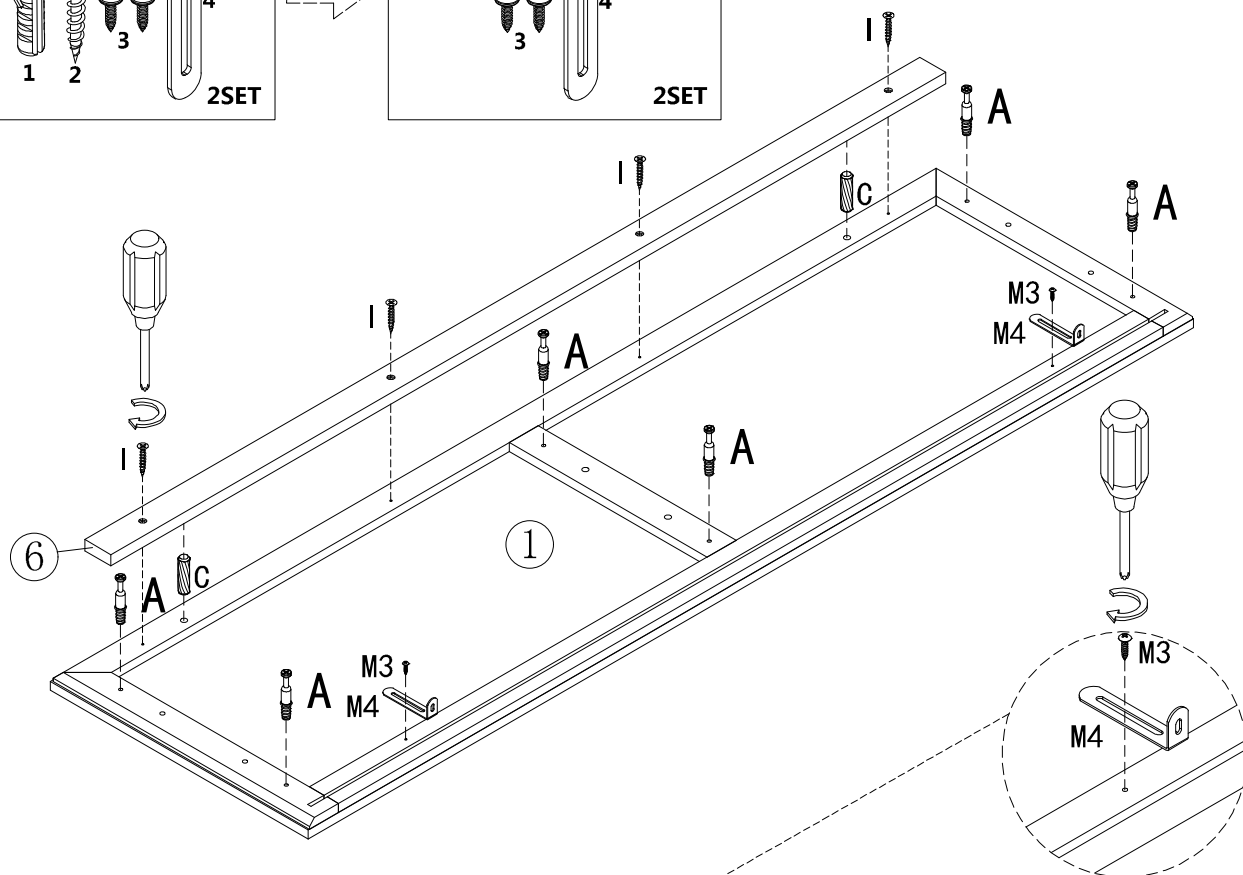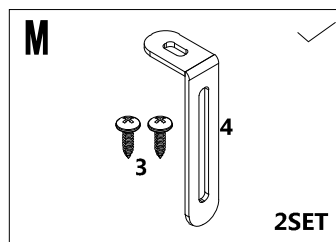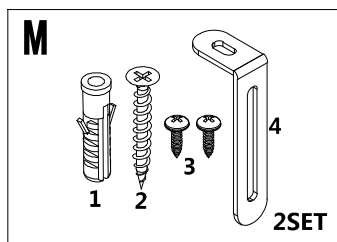

	A X 6PCS
	C X 4PCS
	I X 8PCS

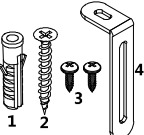
	M X 2SET
---	----------

STEP 11

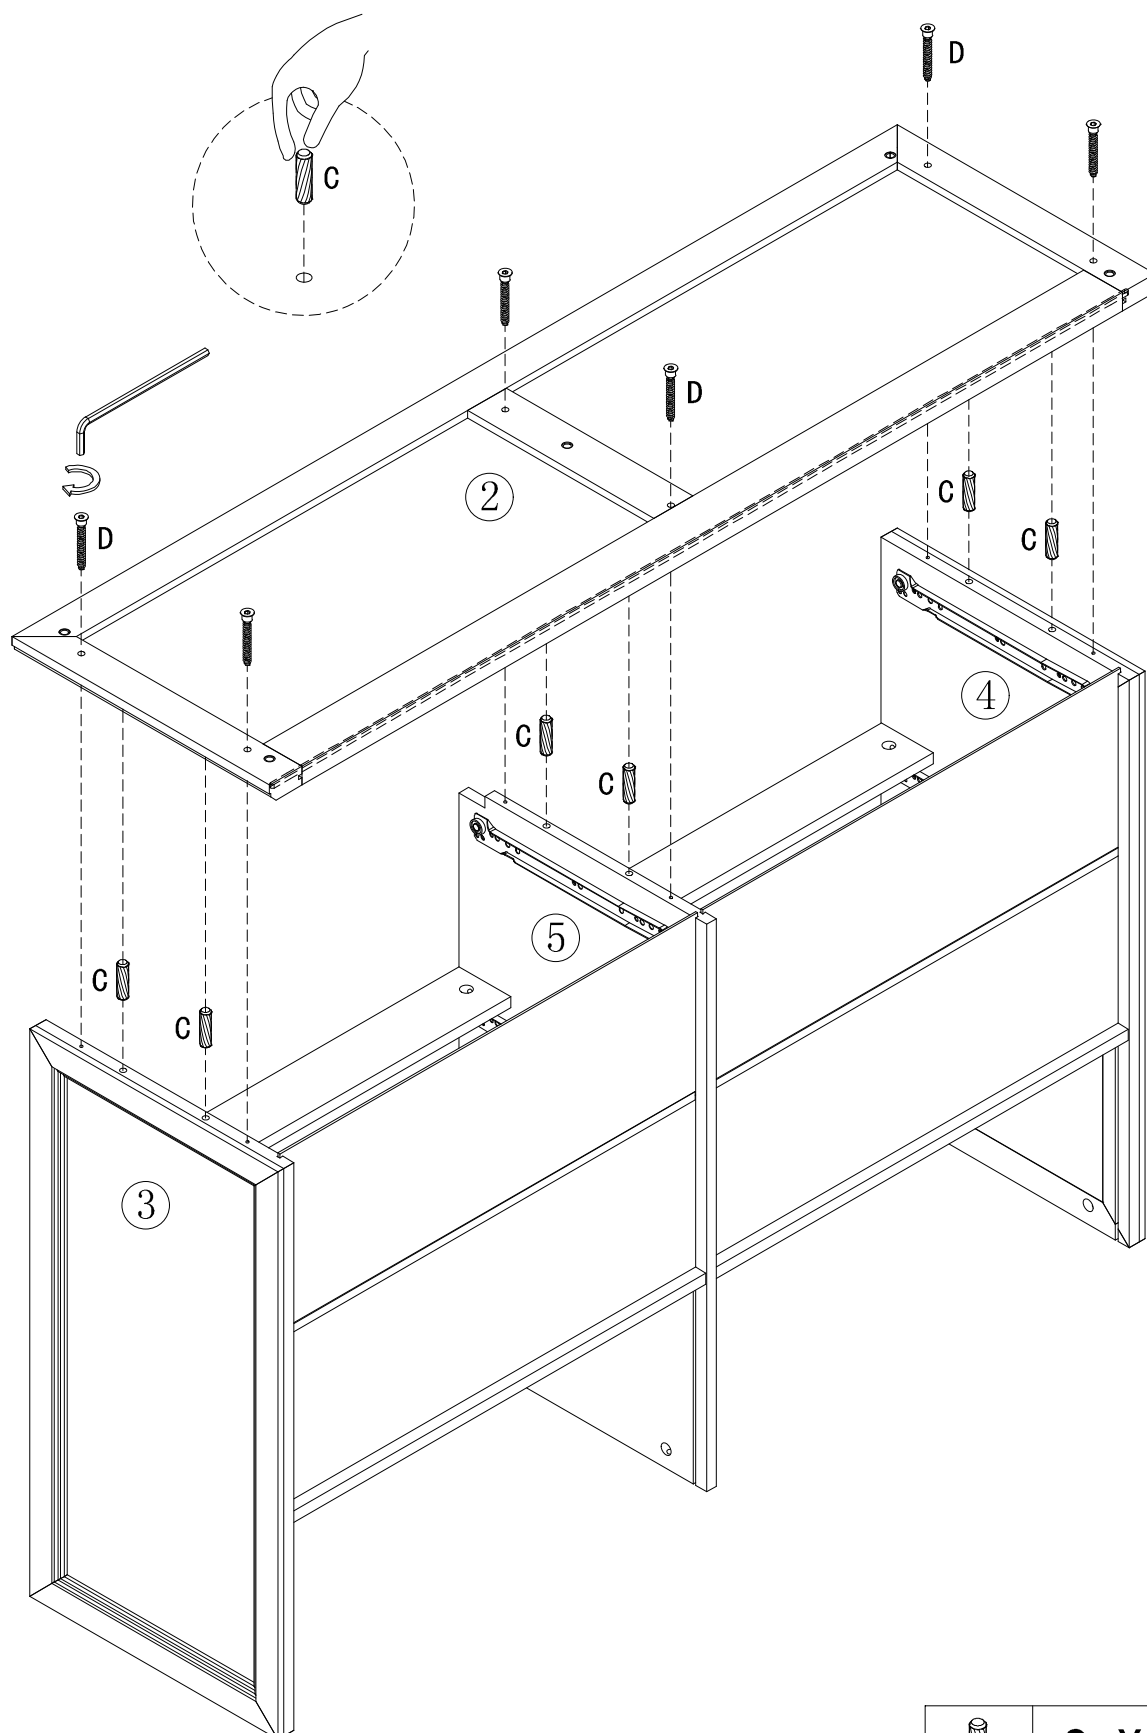


	C X 6PCS
	D X 6PCS

STEP 12

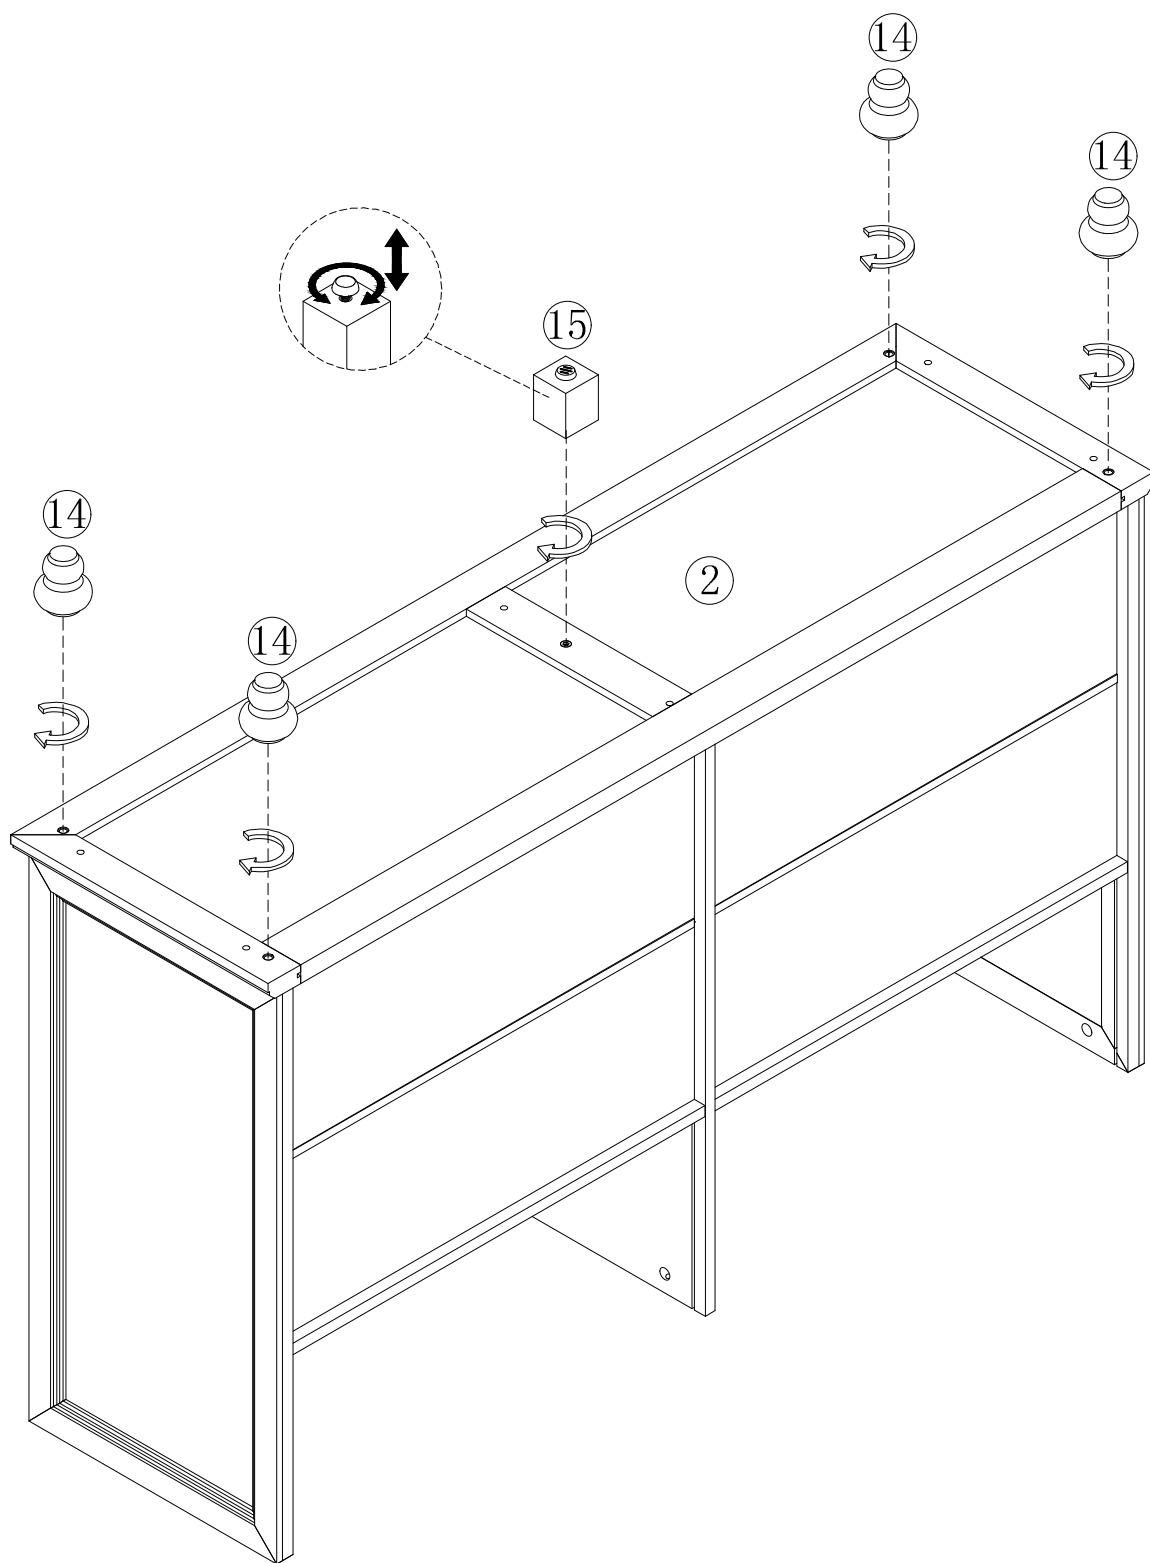


STEP 13

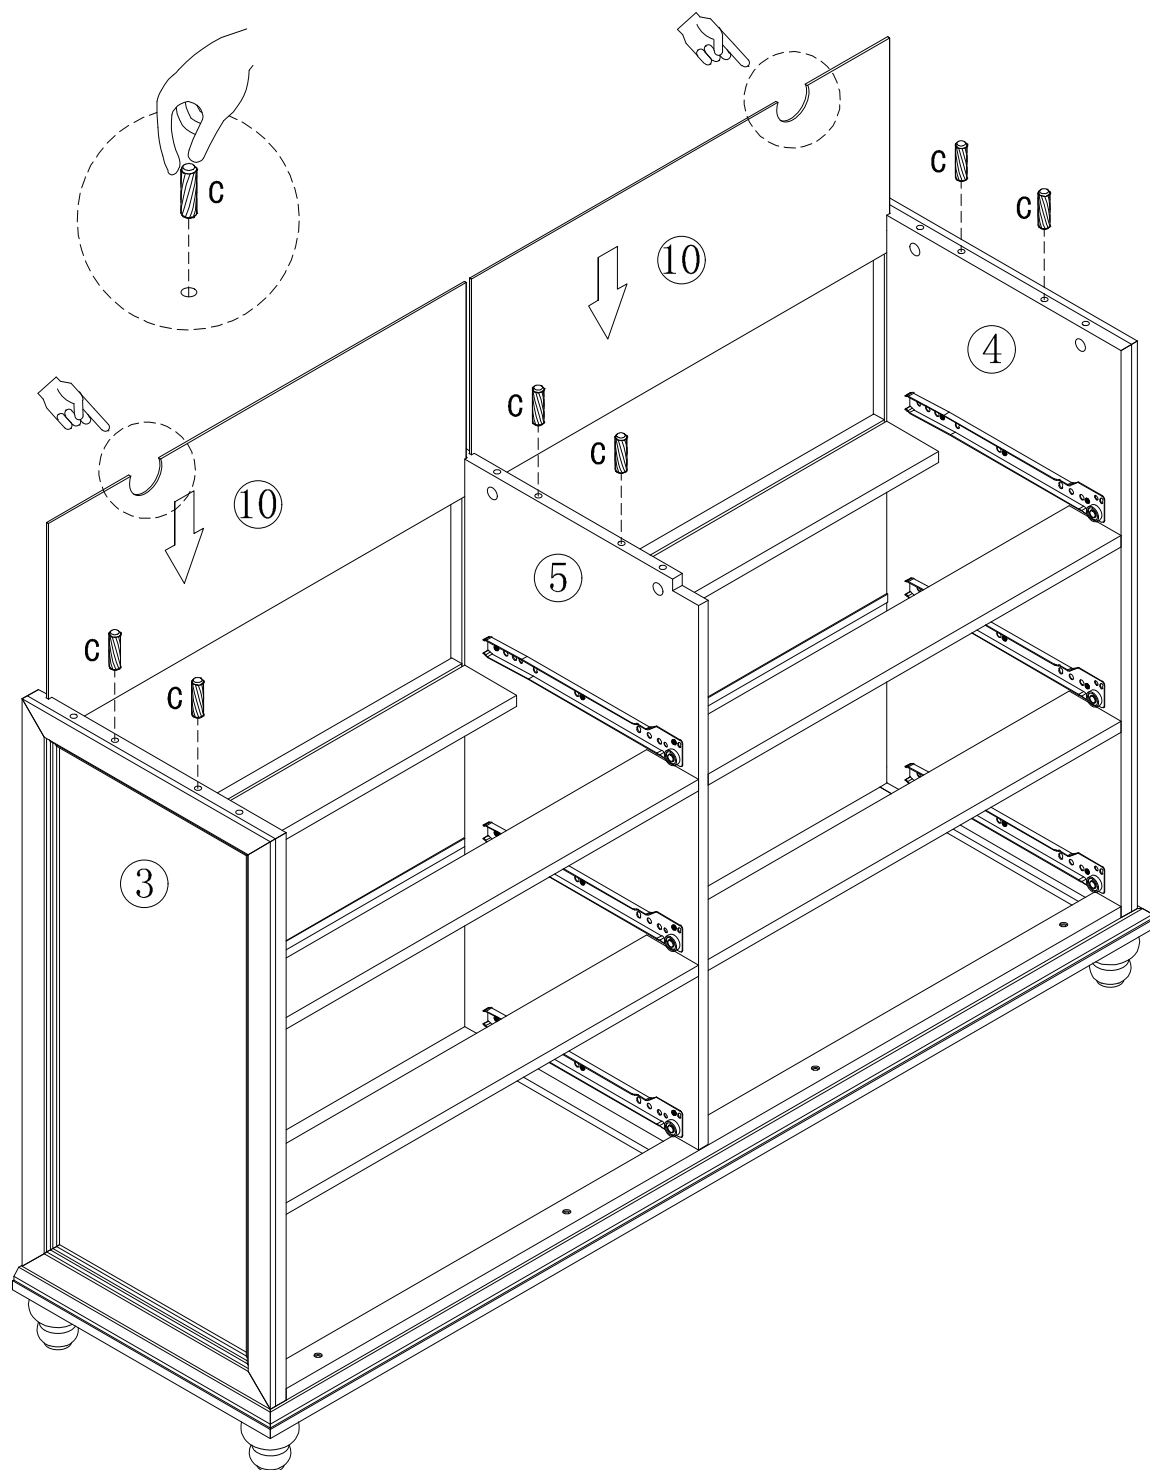

C X 6PCS


STEP 14

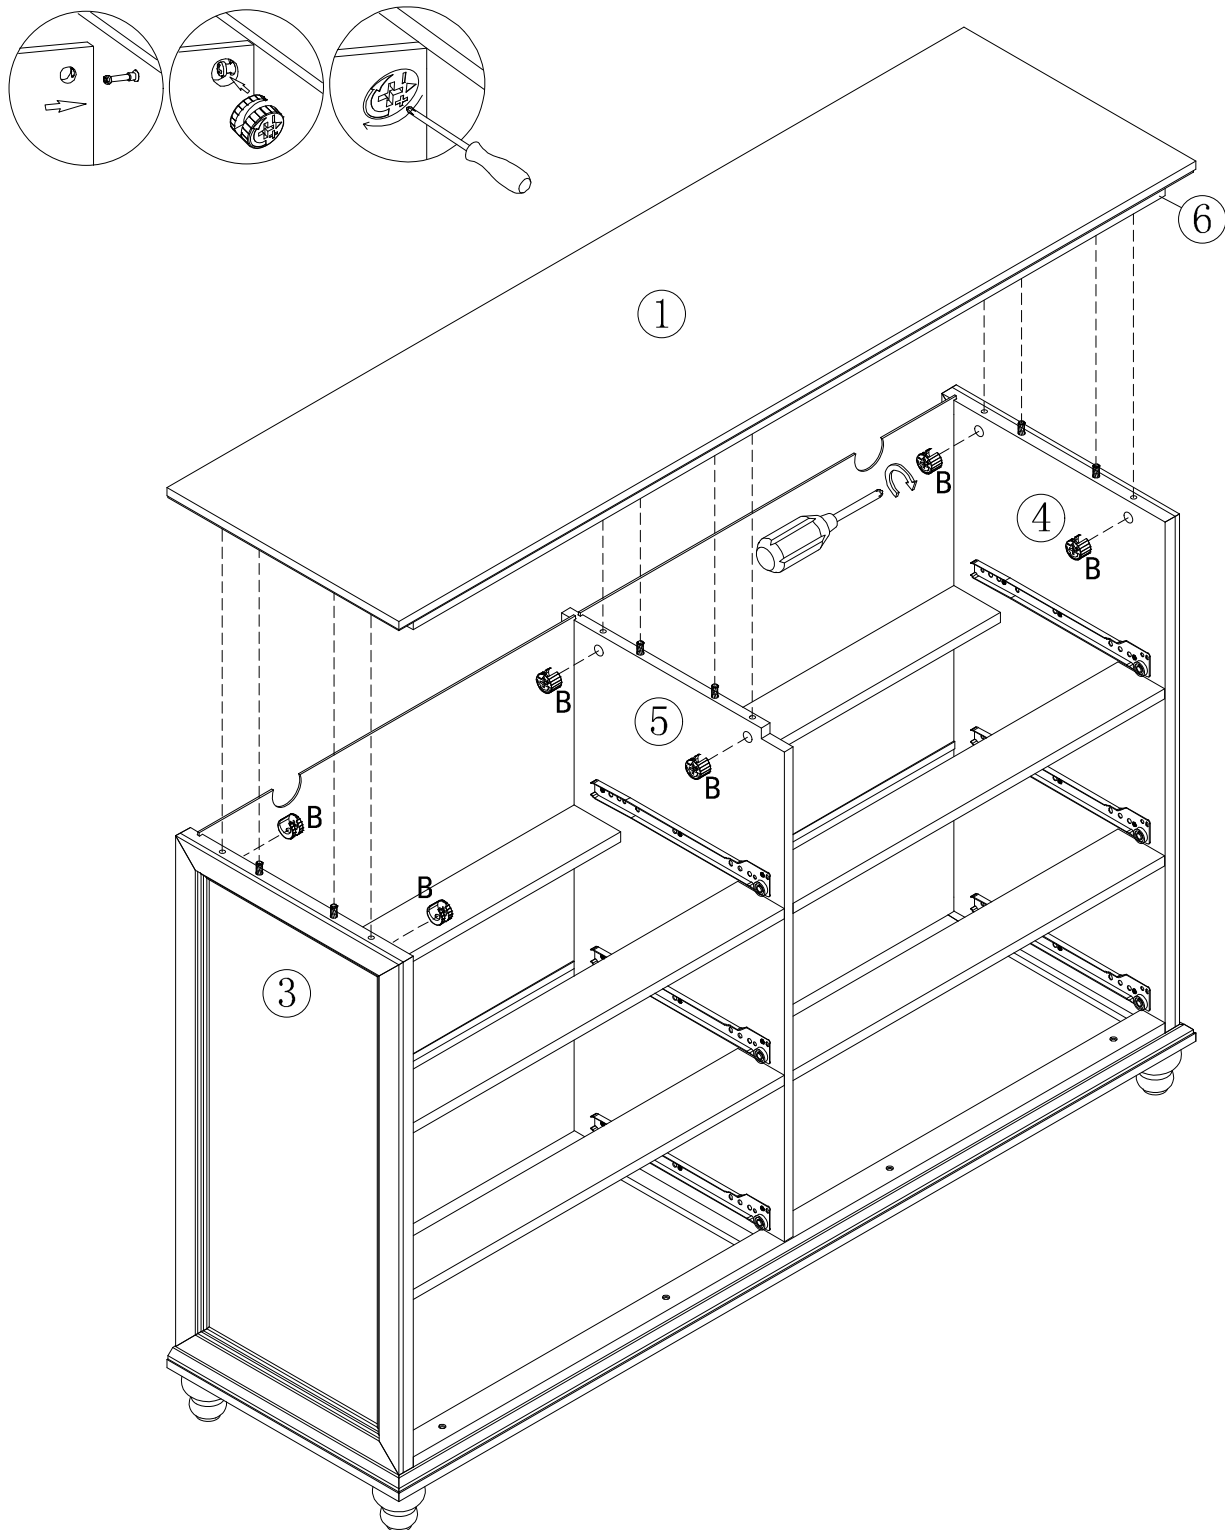

B X 6PCS


STEP 15

NOTE: To prevent the cabinet from wobbling please be sure to install the back panel fasteners.



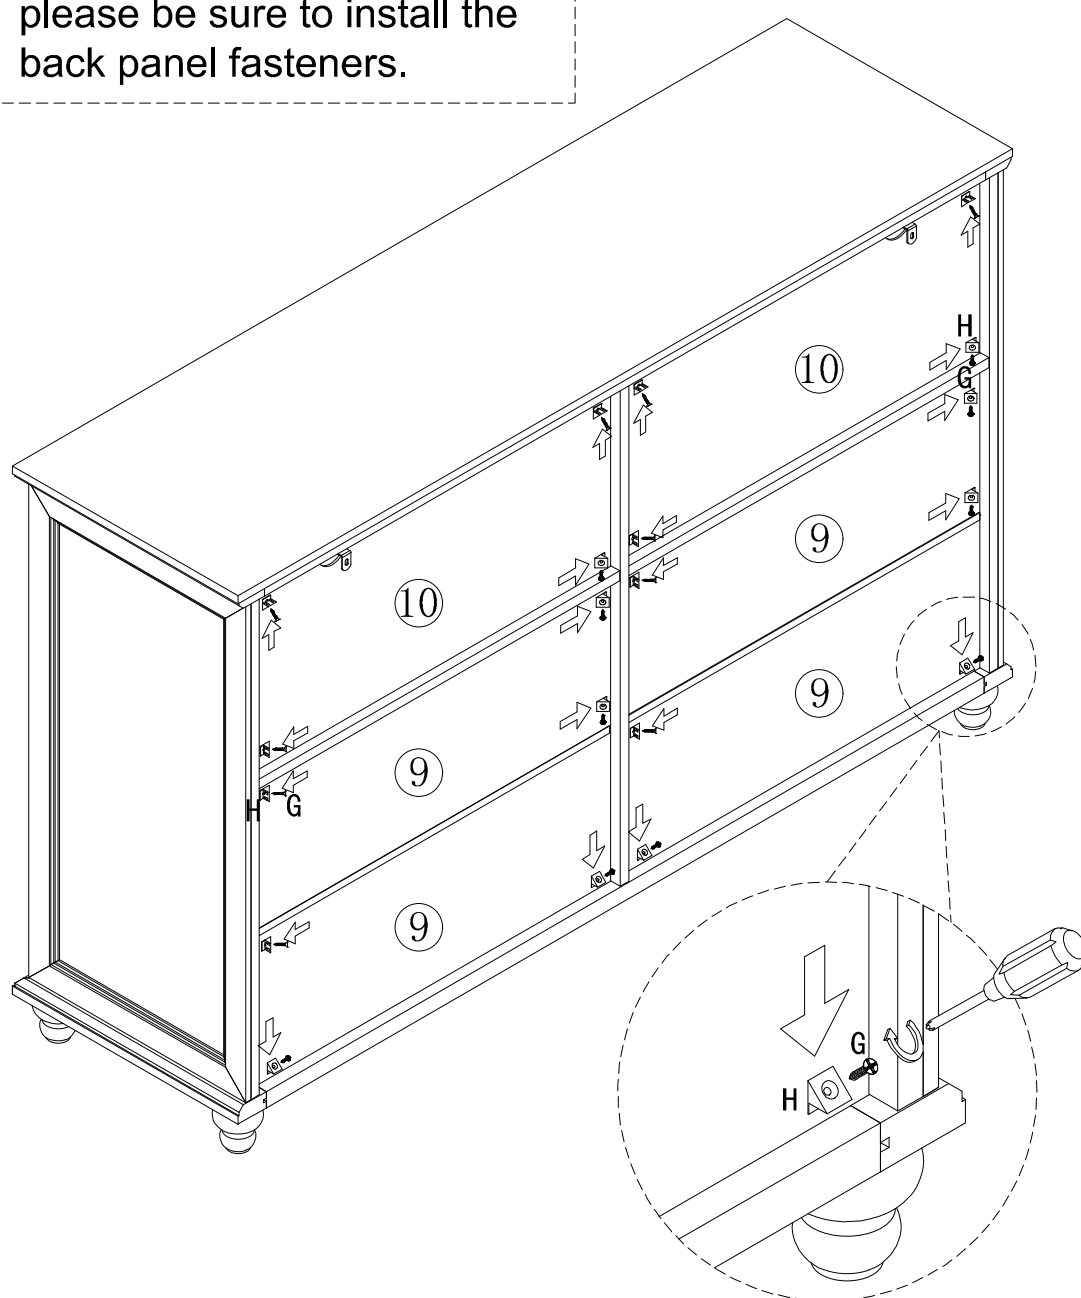


	G X 20PCS
	H X 20PCS


STEP 16

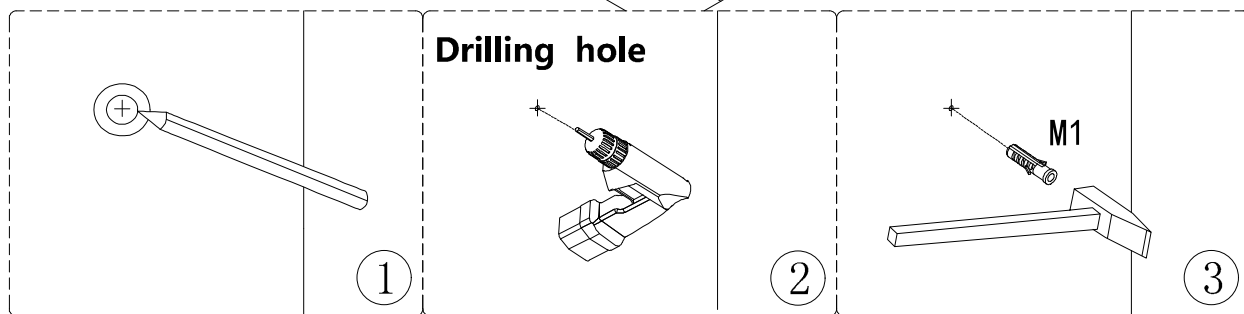


WALL

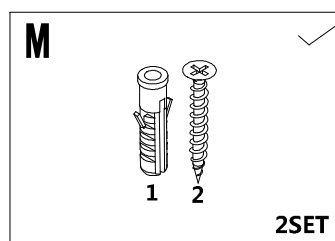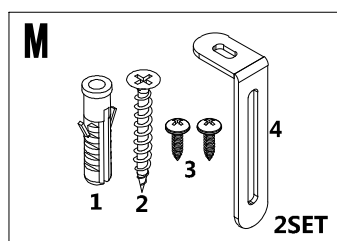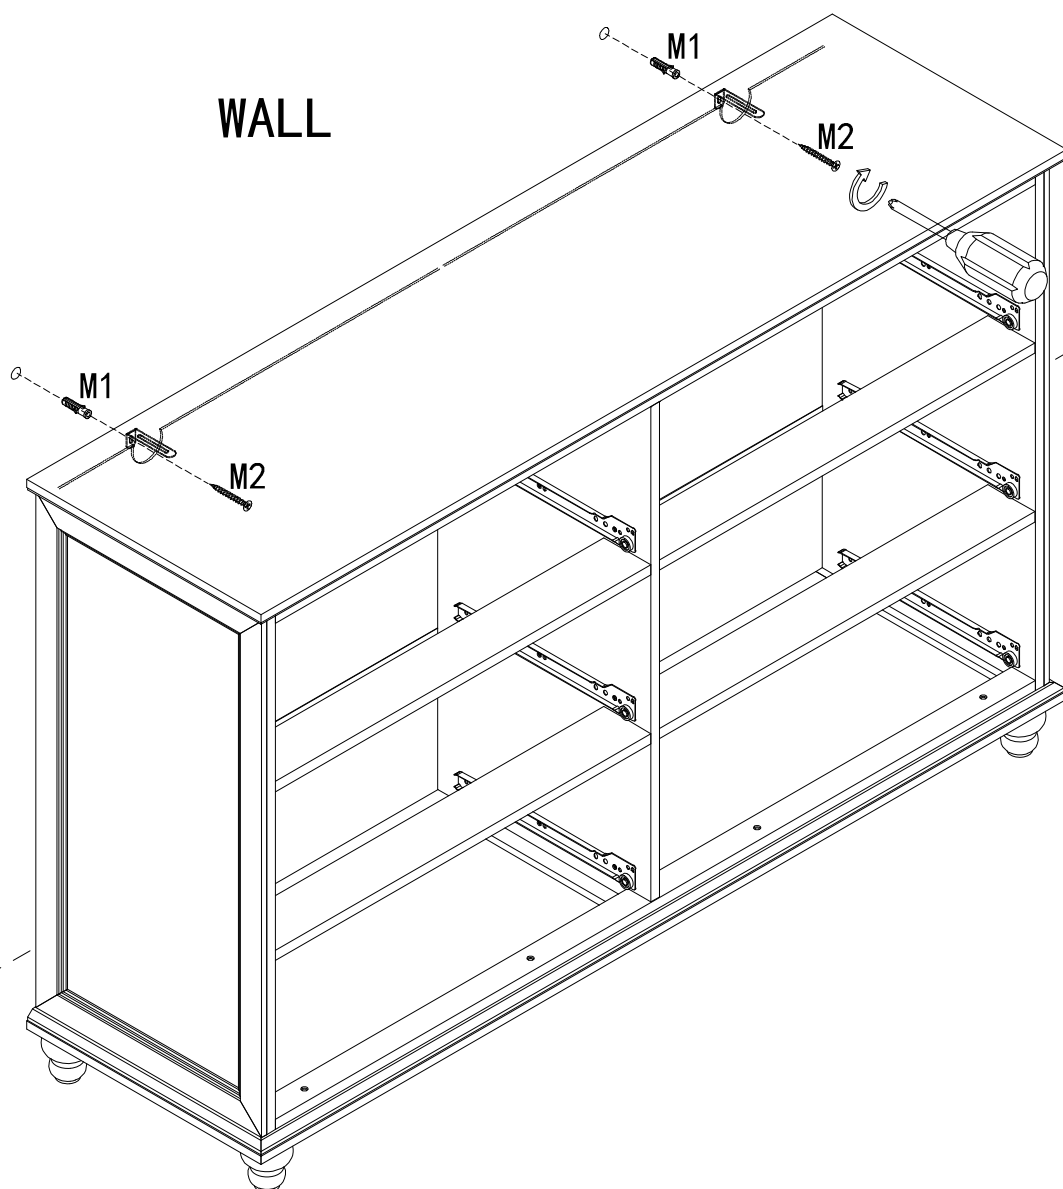

STEP 17

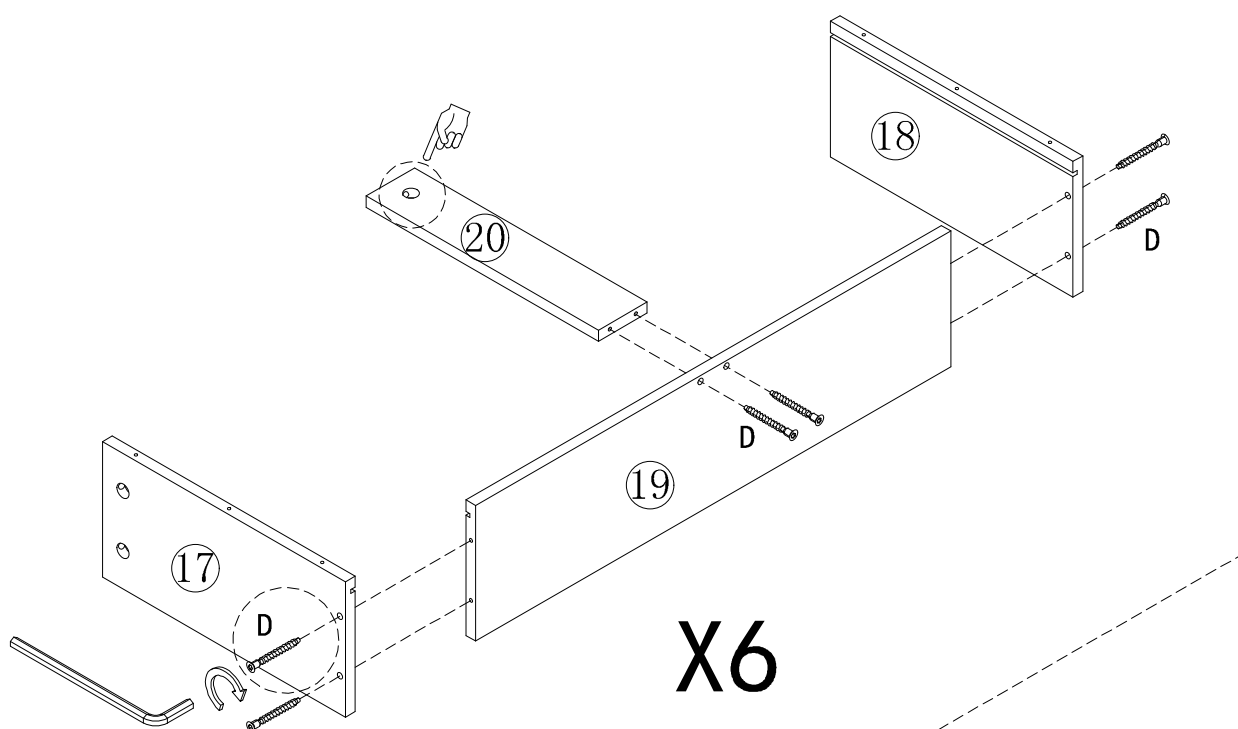


X6

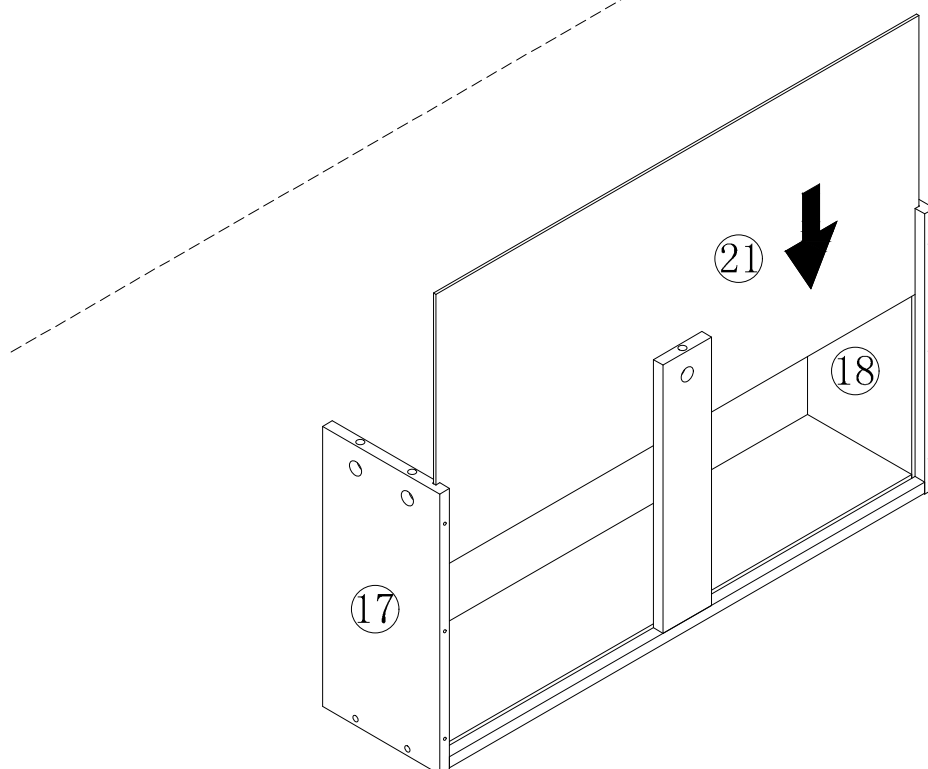


X6

STEP 18

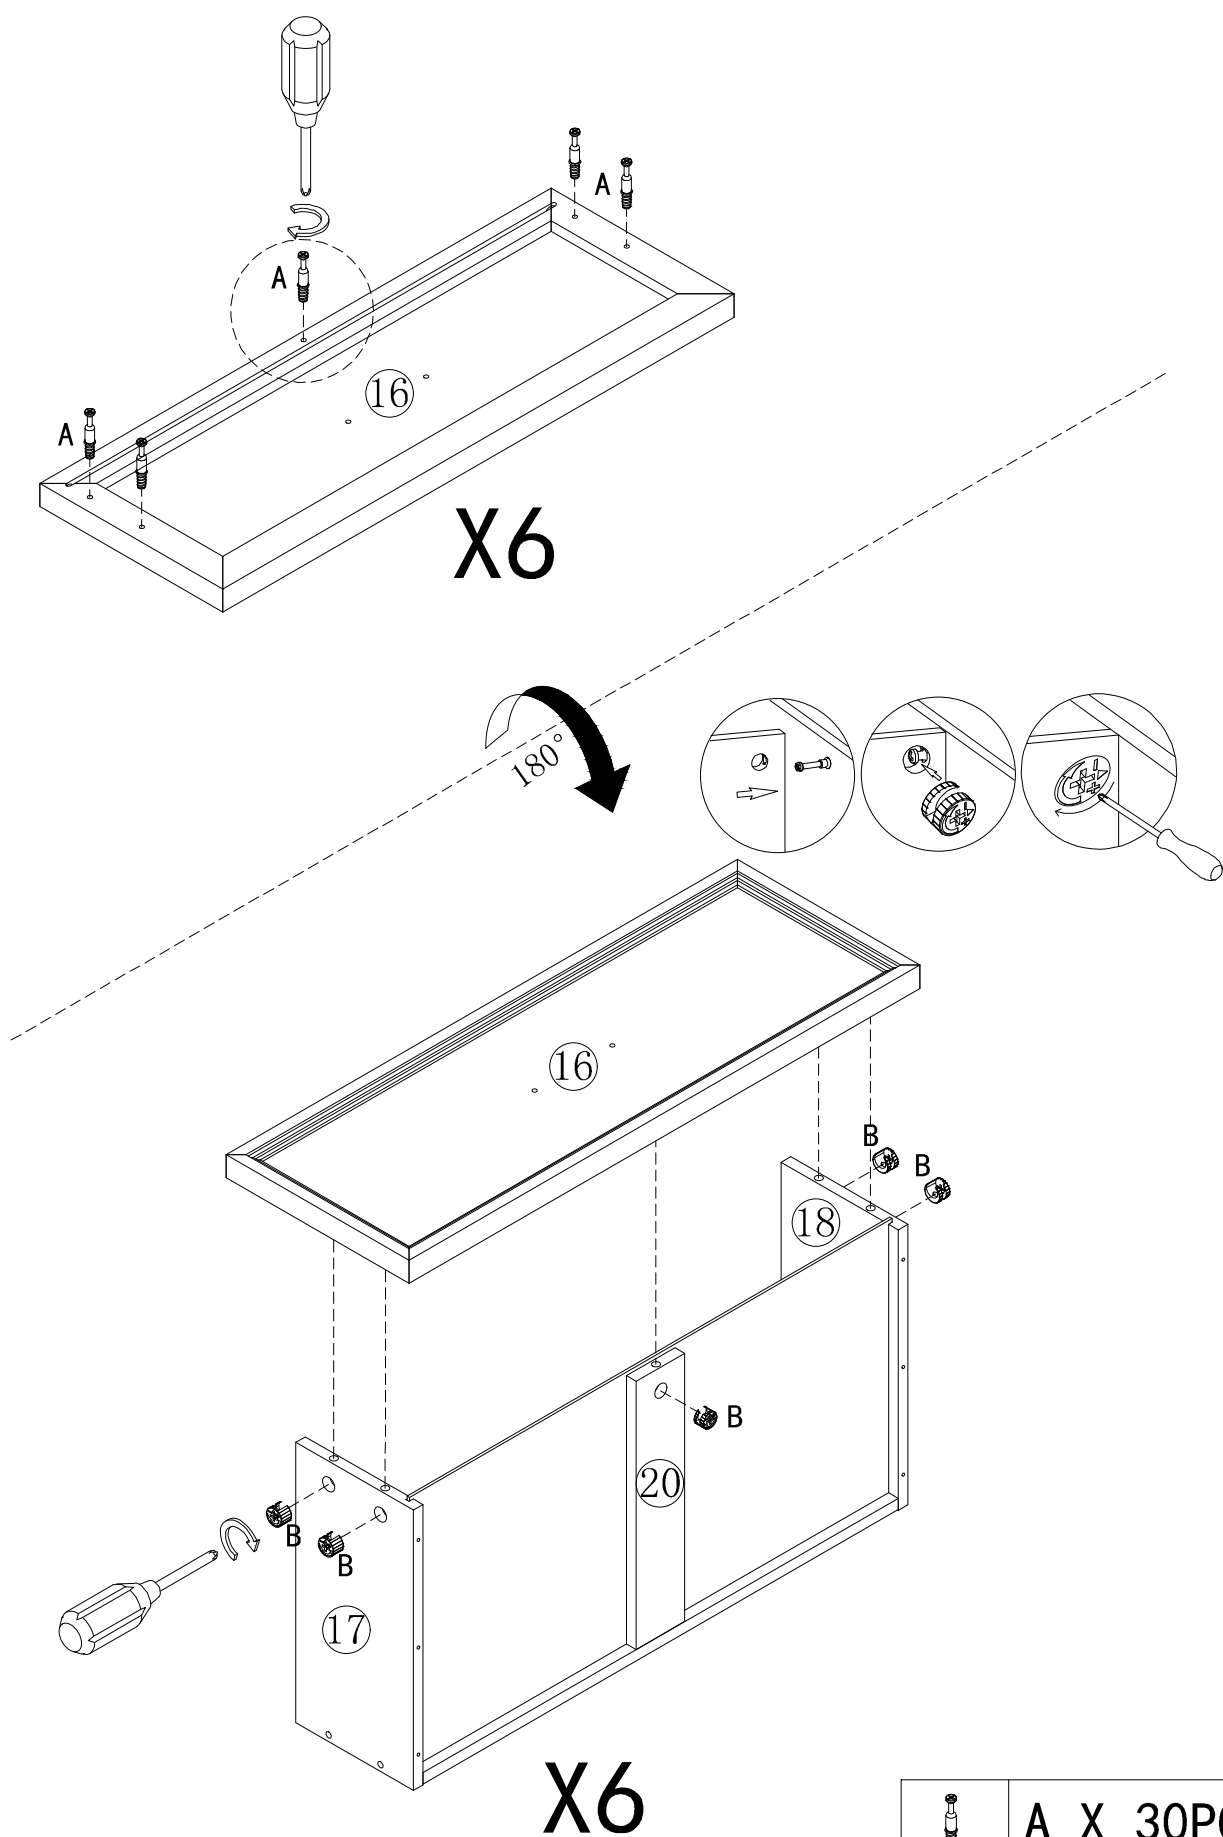



	A X 30PCS
	B X 30PCS

STEP 19

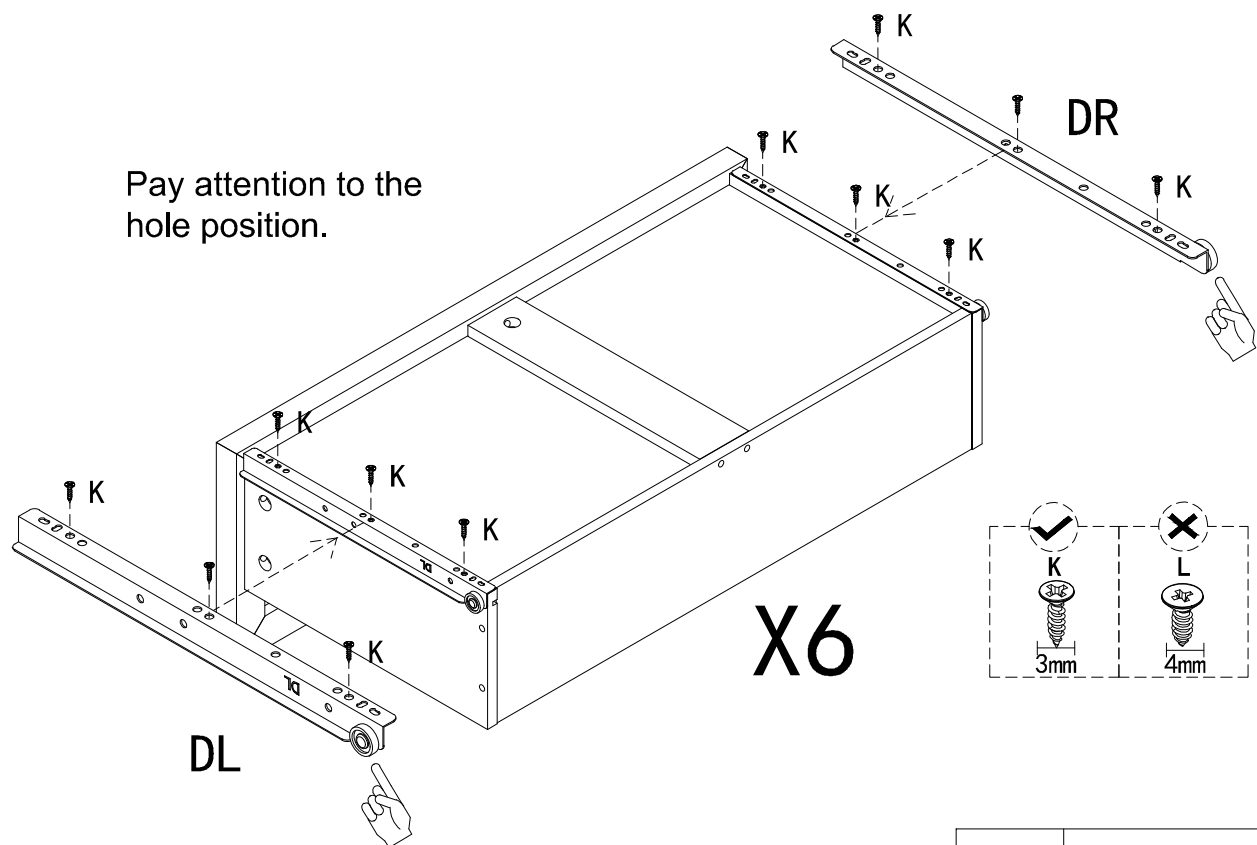

	K X 36PCS
---	-----------

STEP 20

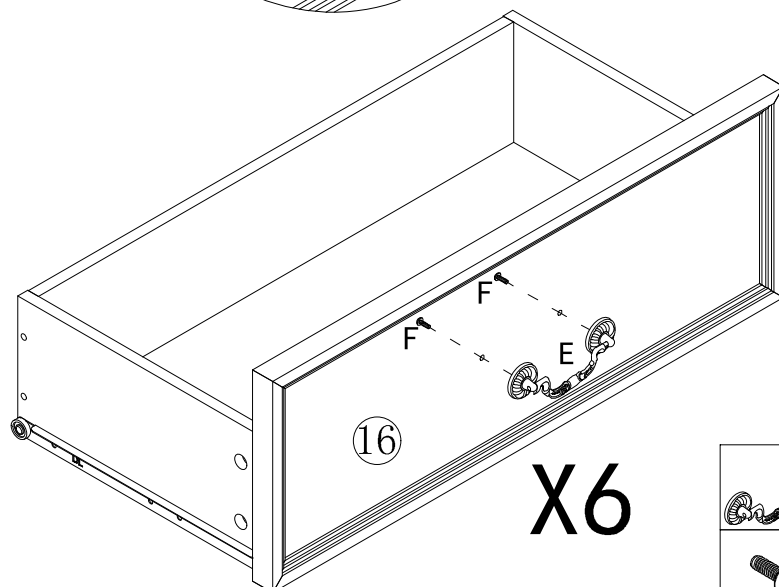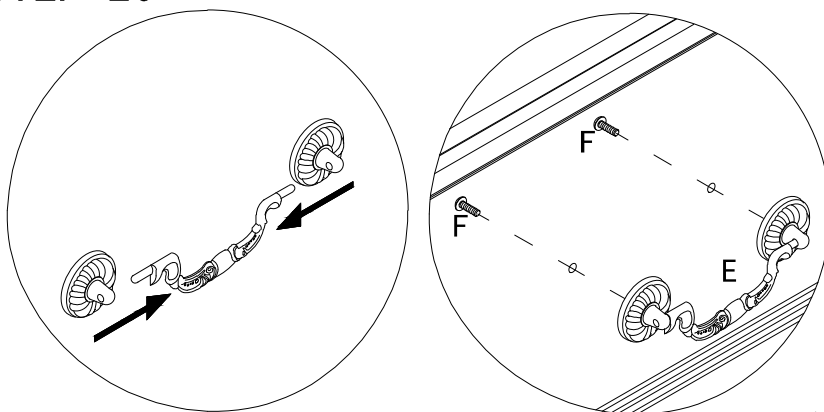

	E X 6PCS
	F X 12PCS

STEP 21

