

628

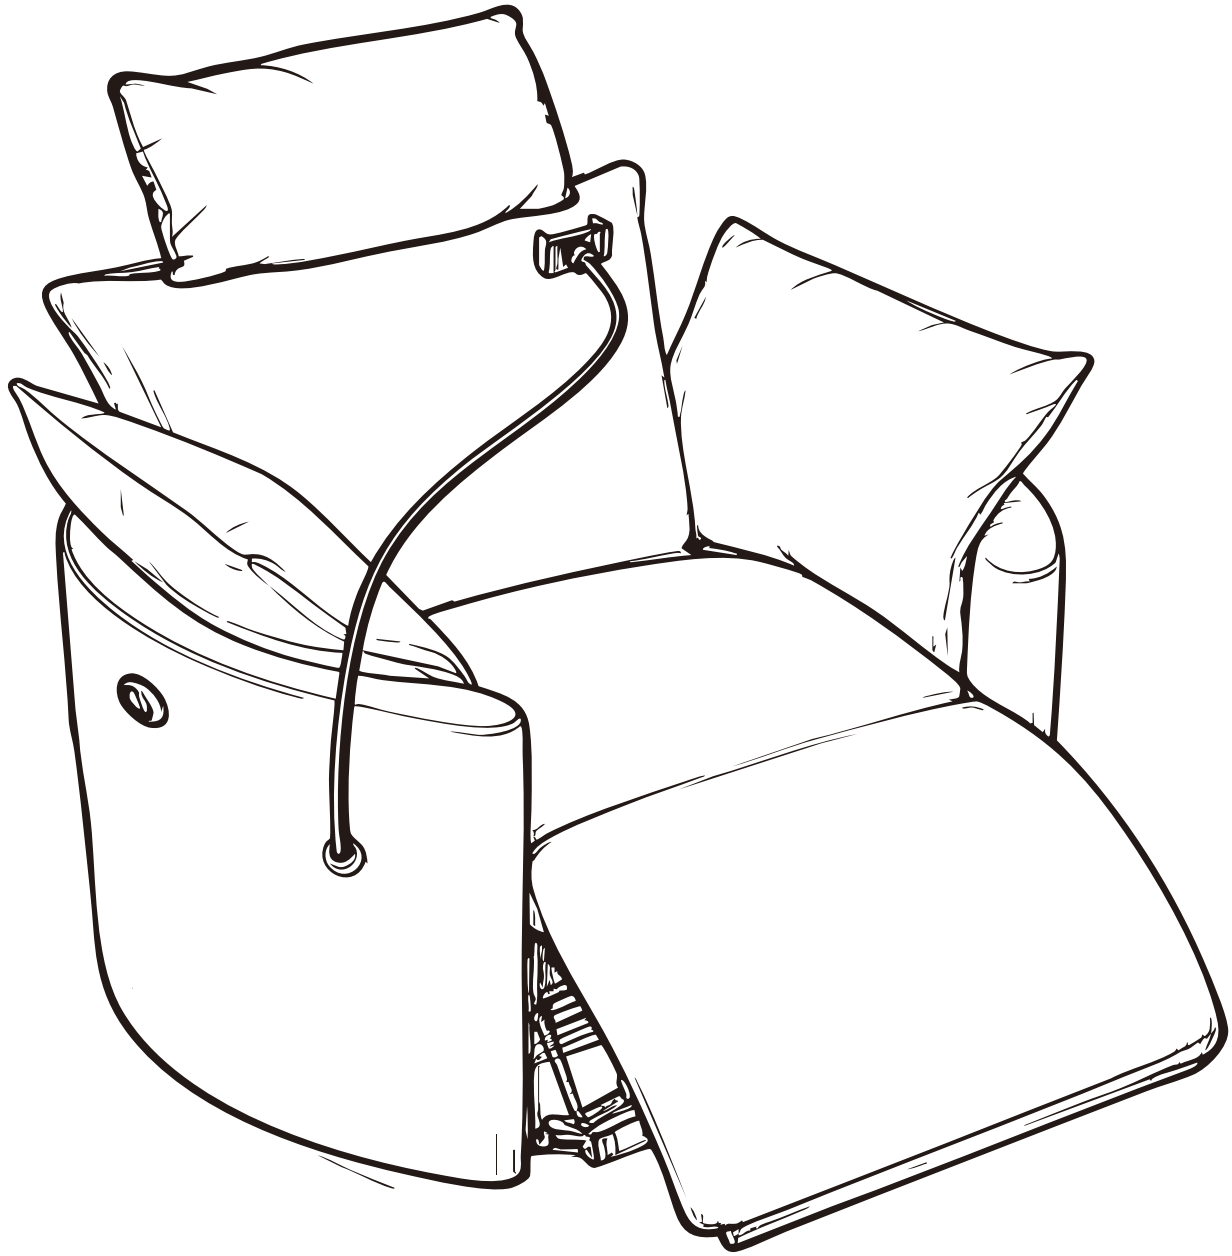

EN Electric Swivel Recliner


EN Box A

B

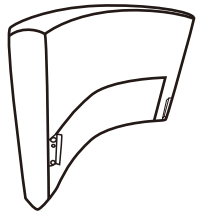


x1

C

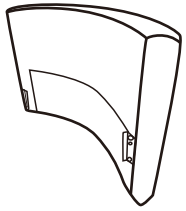


x1

D

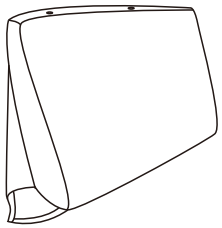


x1

E

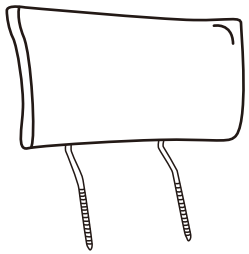


x1

F

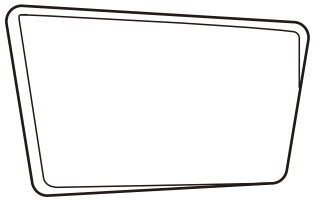

x1

G

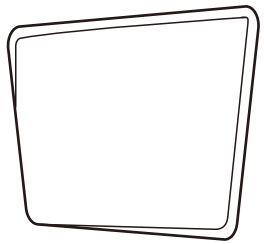


x2

1



x1

2



x1

3



M6X60mm

x2

4



x2


5



x1


EN Box B

A

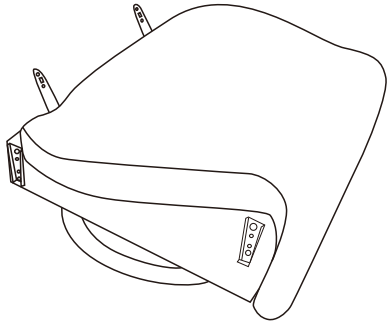


x1

I

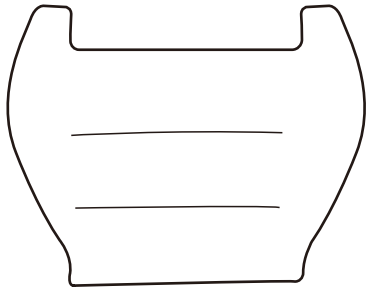

x1


H

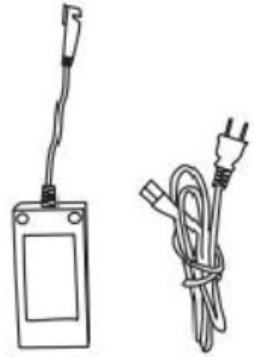


x1

1

A	X1
I	X1

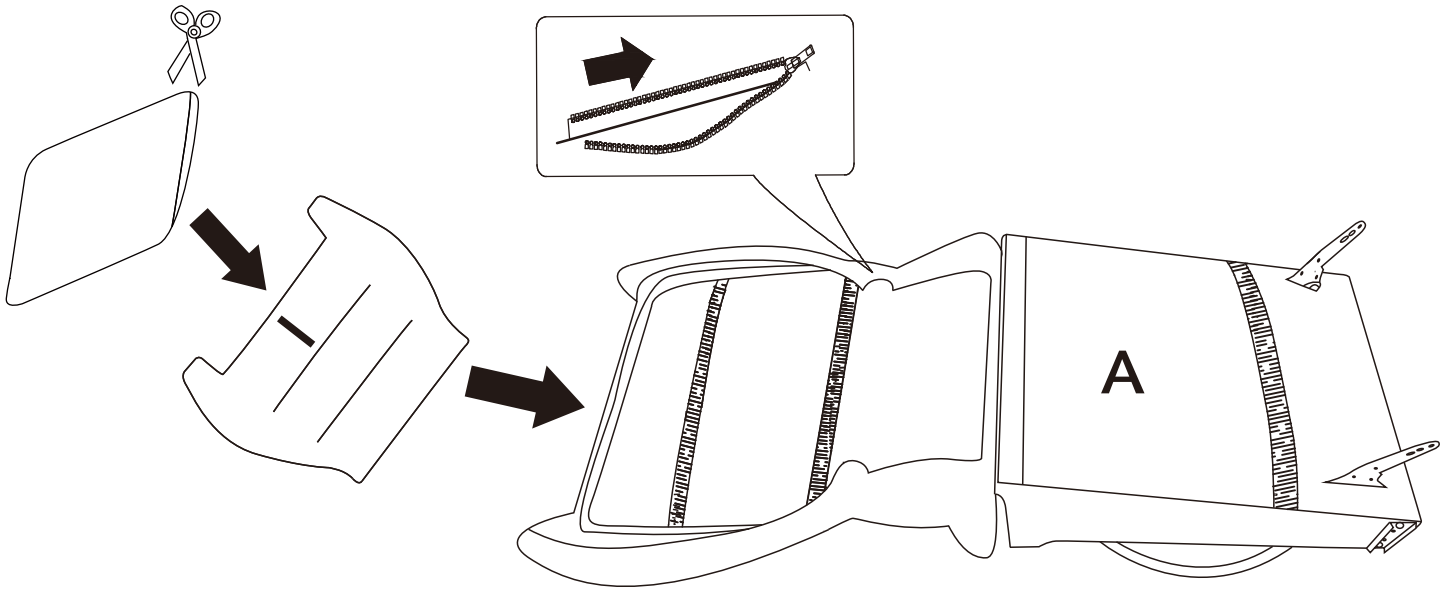


Open the zipper

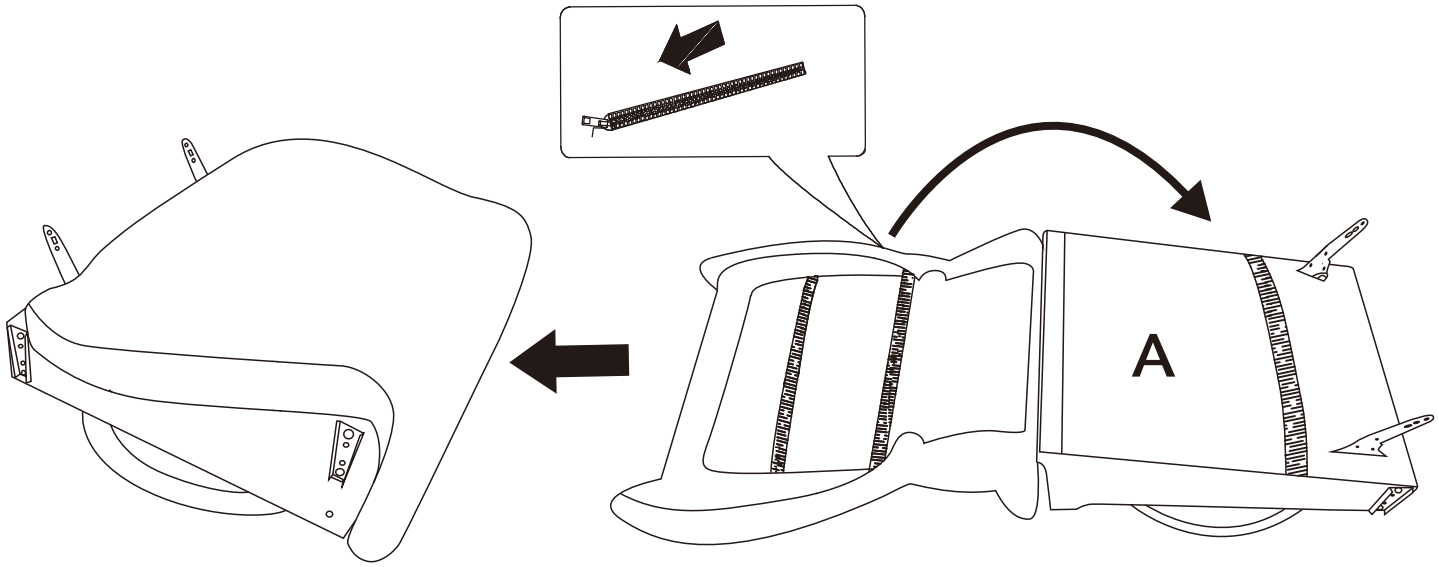

Close the zipper

2

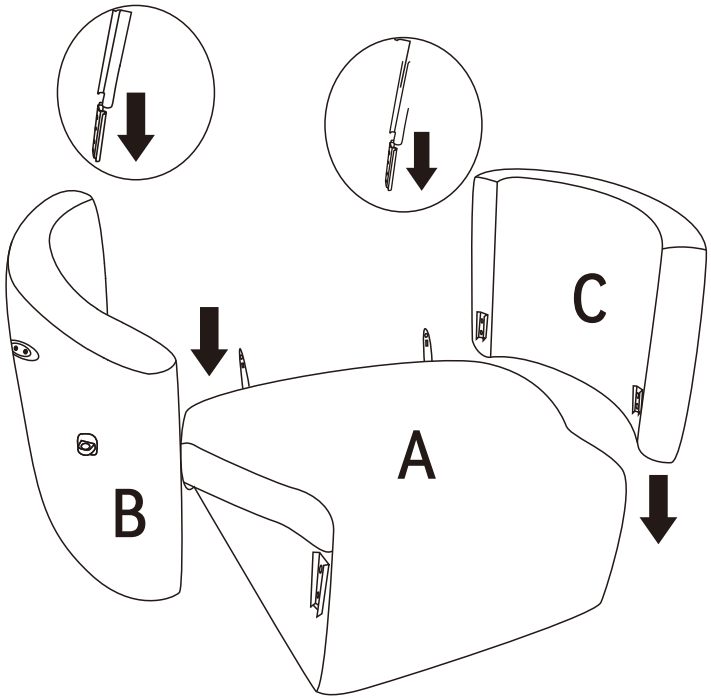


A X1

B X1


C X1

3

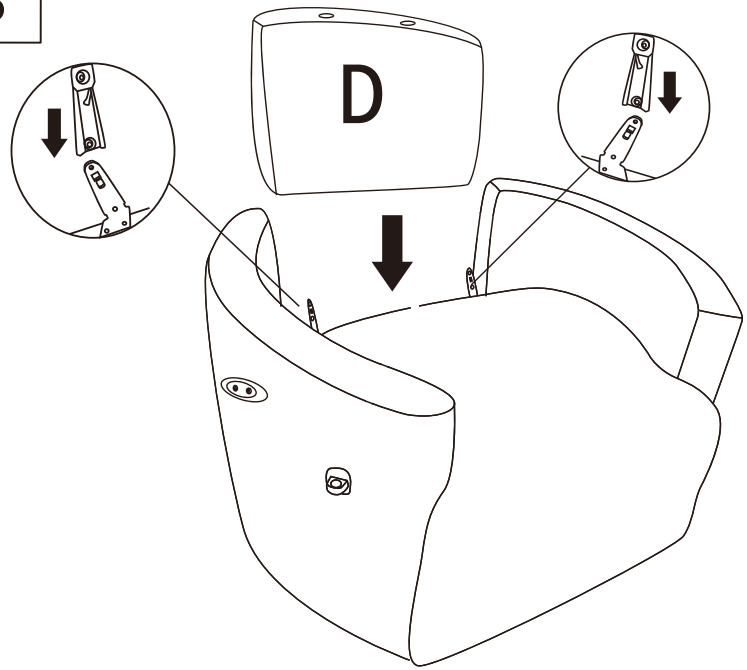

D X1

4

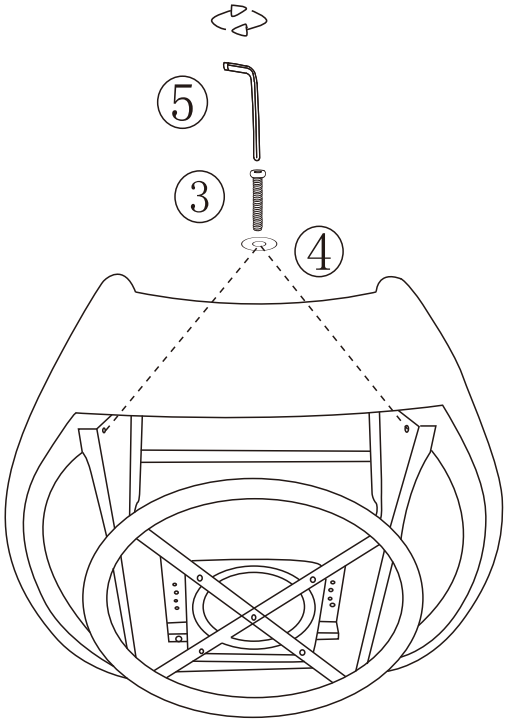


③ X2

④ X2

⑤ X1


5

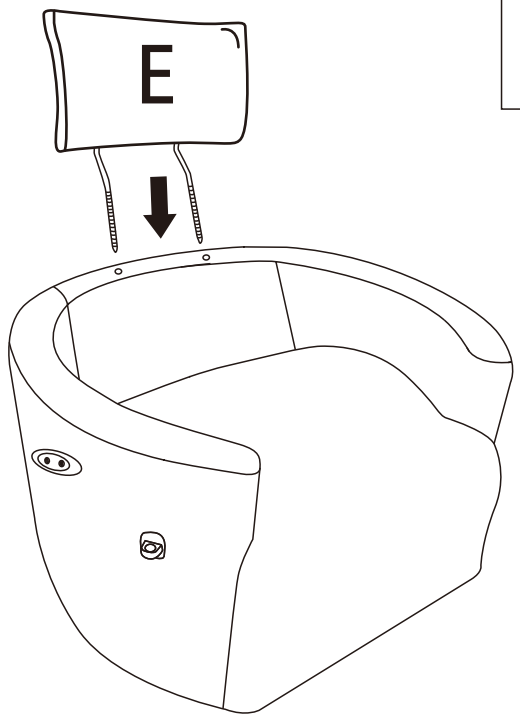


E X1


6

Cut

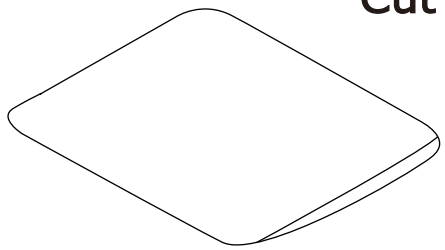

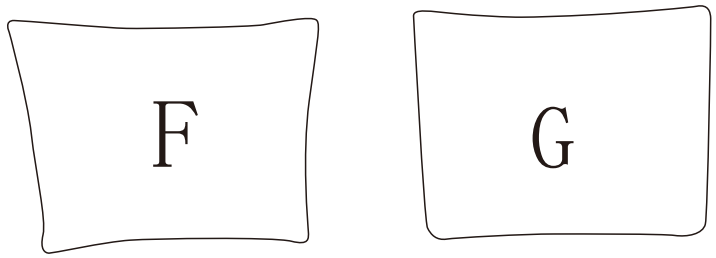

Pat around evenly plump

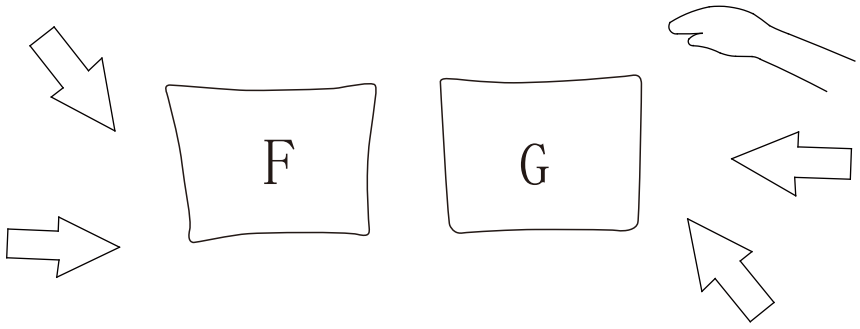

F X1

G X2




7


H




x1

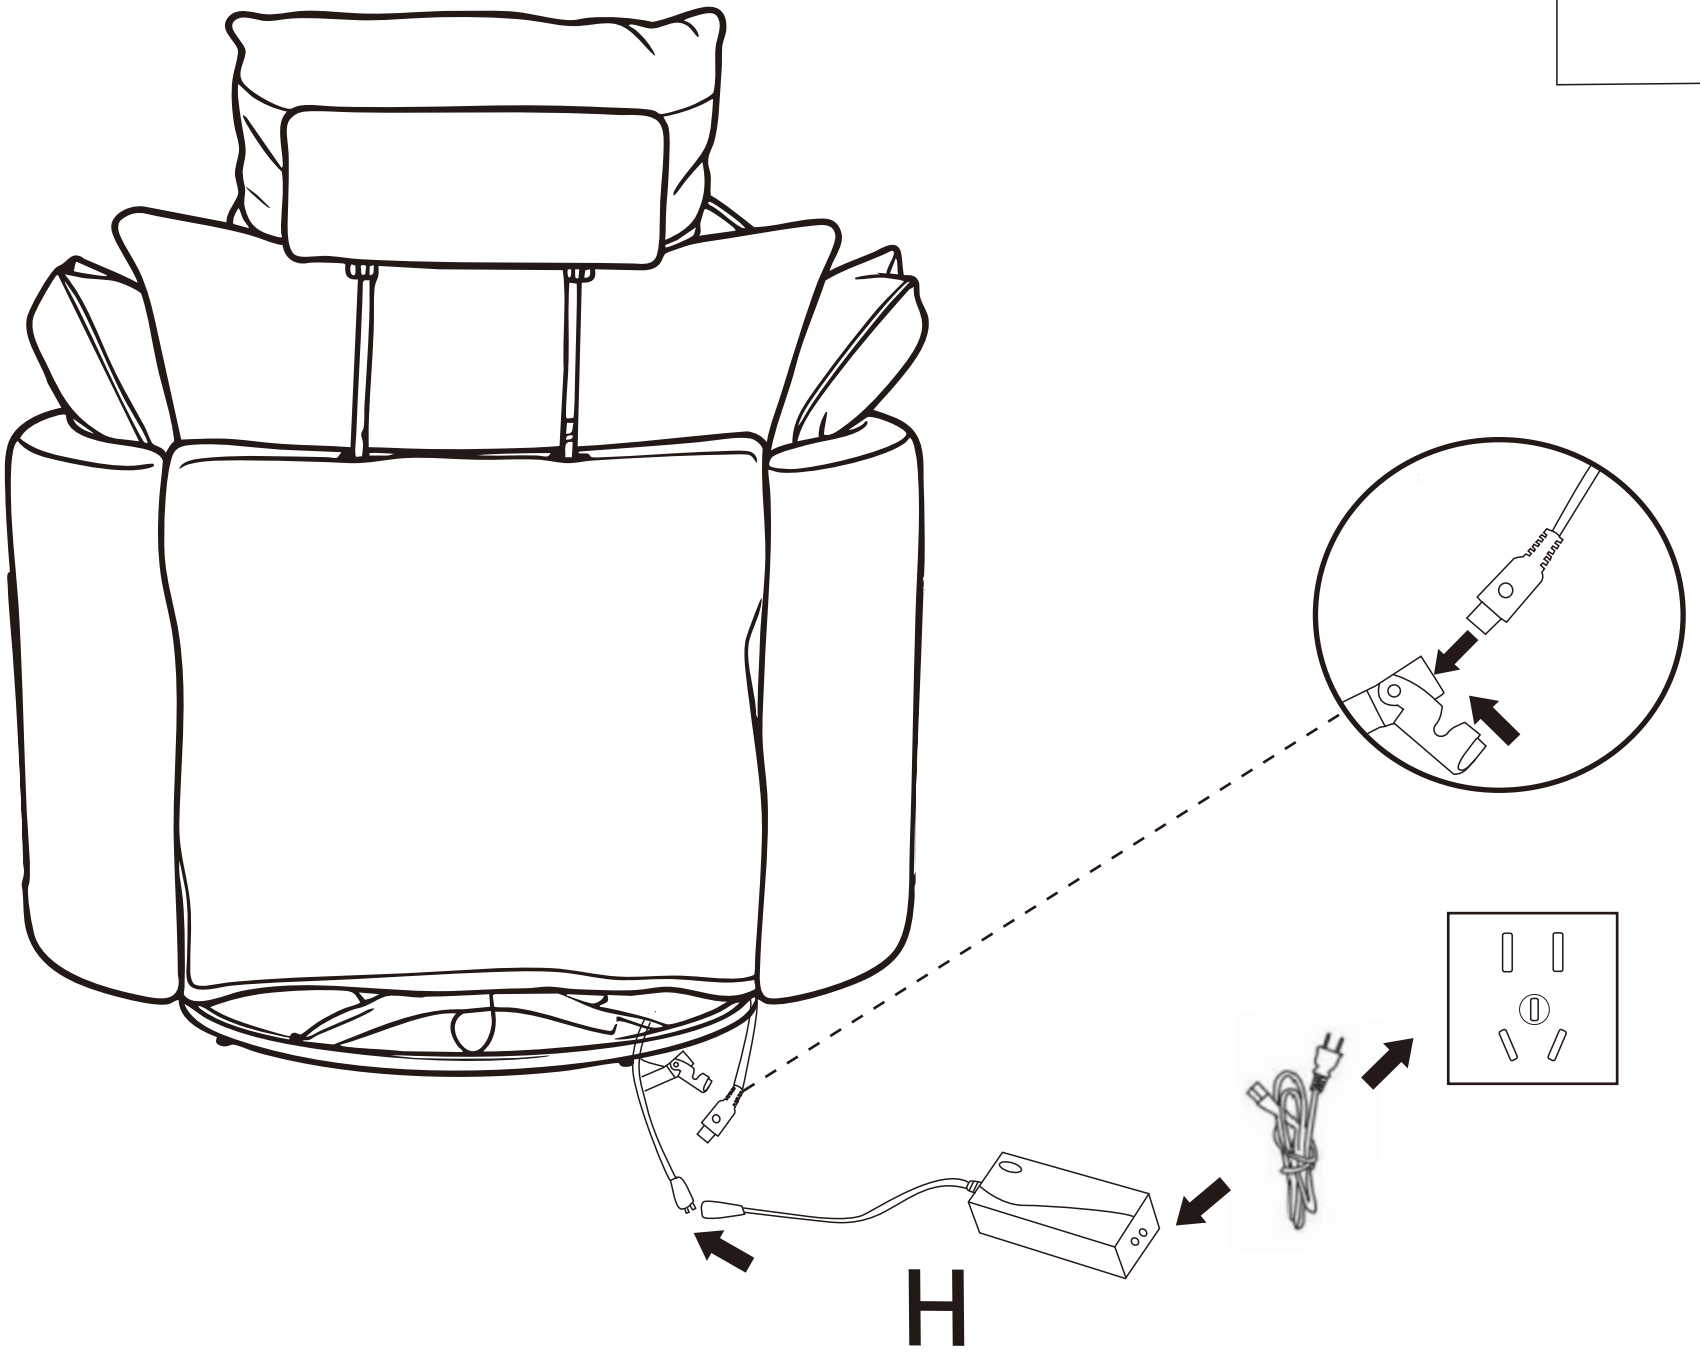

8

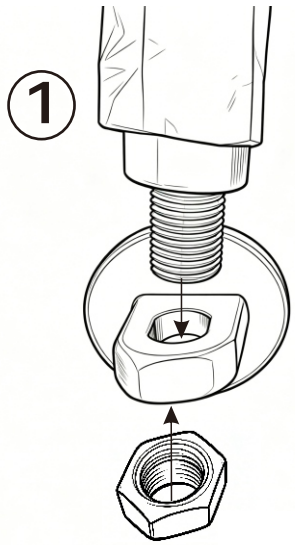

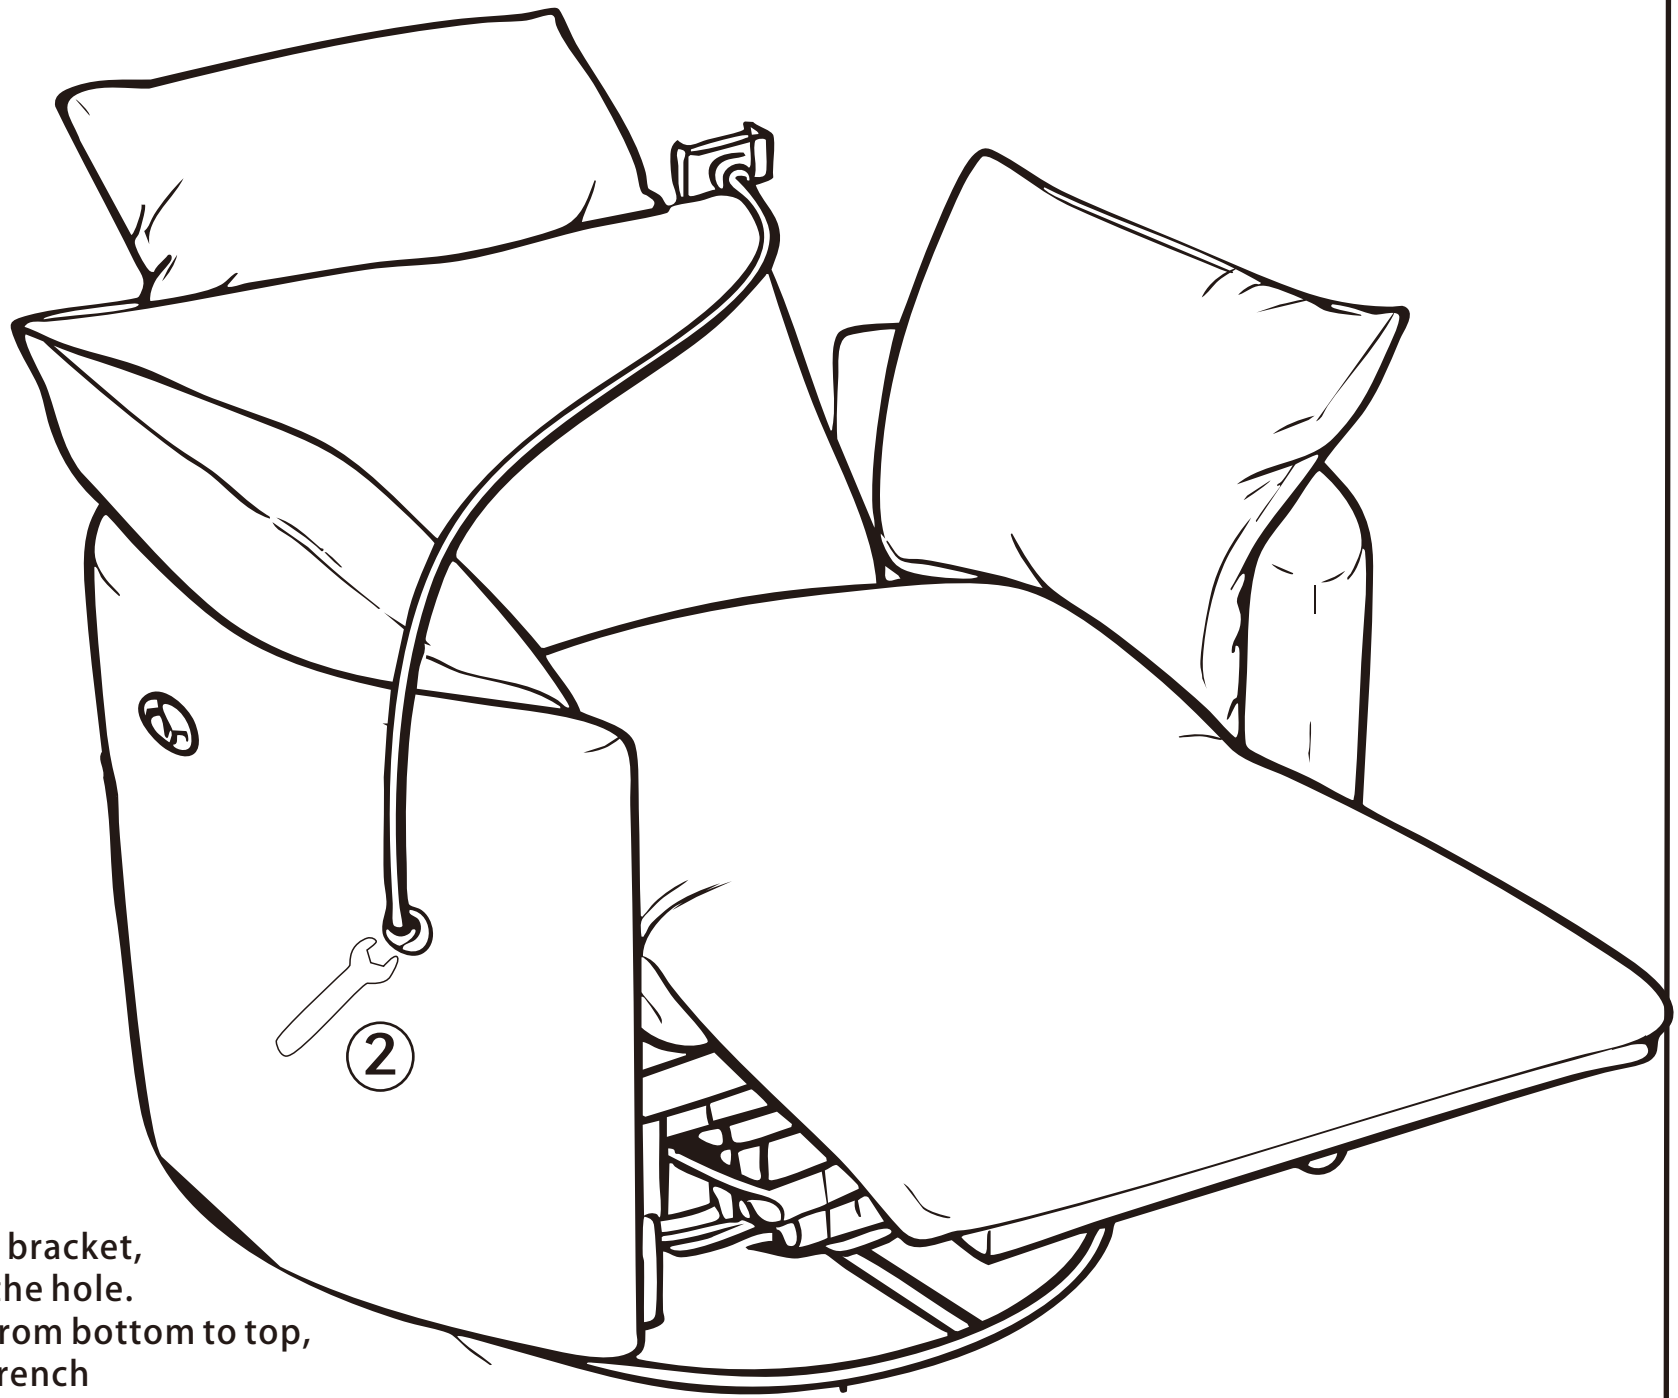

First, unscrew the nut on the bracket,
then insert the bracket into the hole.
Next, tighten the lower nut from bottom to top,
and finally secure it with a wrench

8

