

## ASSEMBLY INSTRUCTIONS

### Parts:

#### (4) Shelves

(Back groove on both sides)



#### (2) Top / Bottom piece


(Groove on one side only)



#### (5) Backs



#### (2) Sides

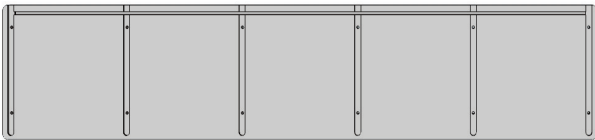

### Hardware:


(24) Hex Screws




Allen Wrench




**Notice - KEEP BACK GROOVES ALIGNED  
Do Not Drill!**

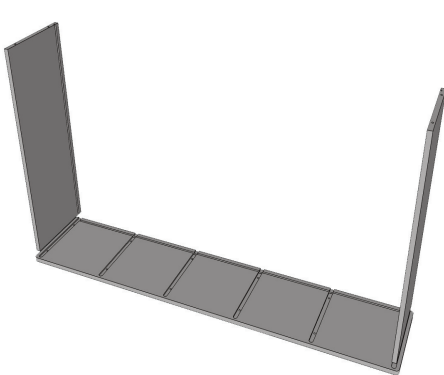


**Step 1:** Insert edge of **Bottom** piece into mortise of **Side** piece as shown, making sure to align back grooves. Insert **Hex screws** into each of (2) pre-drilled holes in Side piece and tighten down halfway using **Allen wrench**. Repeat for remaining **Top** piece. Back grooves face inwards.

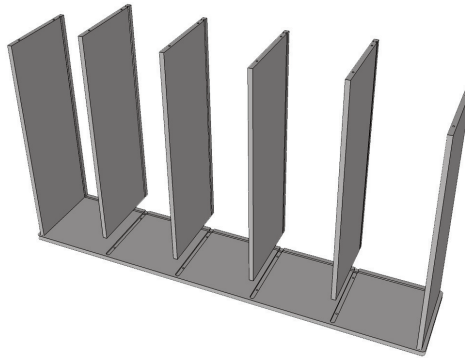

**Step 2:** Insert edge of **Shelf** piece into mortise of Side piece, making sure to align back grooves. Insert **Hex screws** into each of (2) pre-drilled holes in Side piece and tighten down halfway. Repeat for (3) remaining **Shelf** pieces.

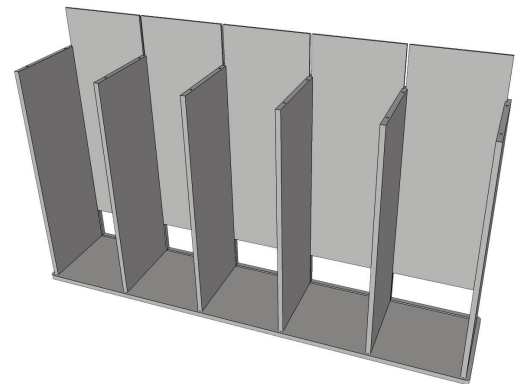

**Step 3:** Insert sides of **Back** piece into back groove of Bottom and bottom shelf pieces. Slide down until edge rests firmly in back groove of Side piece. Repeat with (4) remaining **Back** pieces. No hardware is required for this step.

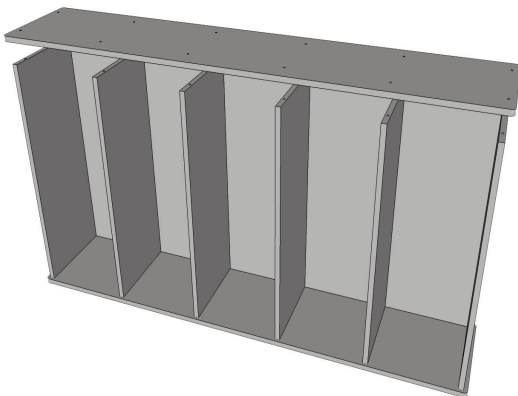

**Step 4:** Insert edges of assembled pieces into mortises and back grooves of remaining **Side** piece. Insert **Hex screws** into each of (12) pre-drilled holes in Side piece and tighten down halfway.

**Step 5:** Tighten all screws snugly. **DO NOT OVERTIGHTEN**. Rotate unit so that it rests on **bottom piece** and edges of **side pieces**. **Assembly is now complete.**

