


Sample Mural Instructions

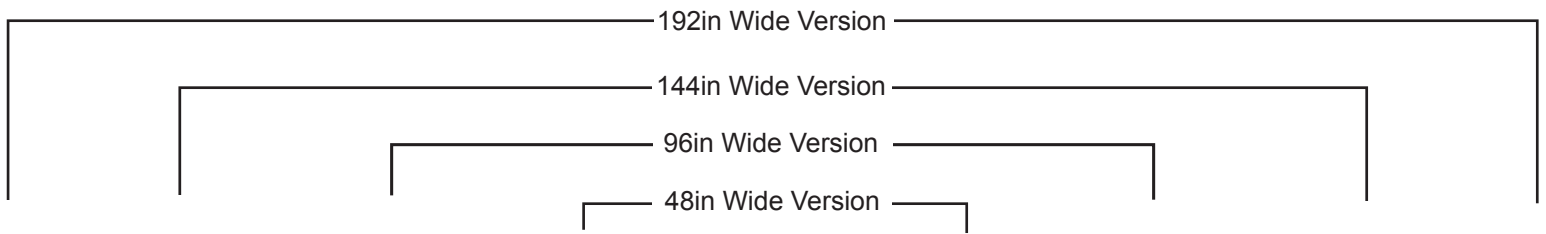

A B C D E F G H

***Very Important:**

Did you just paint your walls? If so, please allow at least 2 weeks or until your wall paint is fully cured before you apply any wall murals. They will NOT work on freshly painted walls. Although the paint may be dry to the touch, it is not fully cured yet. Tiny air pockets are still releasing gasses that our eyes can't see. This will cause the wall mural to come off. *Zero VOC or Low VOC (volatile organic compound) paint chemicals can take 6-8 weeks to fully cure.

Wall graphics must be applied to a clean, smooth, dry and non-porous surface. Application work best on flat walls and slightly textured walls. Will not work on heavily textured walls like (knock-down texture).

- Step 1. Wipe down the wall with a lint-free microfiber cloth to remove any dust, pay special attention to the wall's edges and corners. Ask a friend for a helping hand on larger pieces.
- Step 2. Each printed design is already cut, simply peel your decal off backing paper and apply on your wall.
 - a) Start with decal (A). When you are completely finished with decal (A), continue to the next decal B, C, etc...
You must overlap the next mural panel (1/2in or so) to match the design.
This will make a seamless connection.

* If you need to reposition your Wall decal, GENTLY and SLOWLY remove them & reposition.