
ASSEMBLY INSTRUCTIONS


PF060

V-TS25-1284
V-TS25-1285

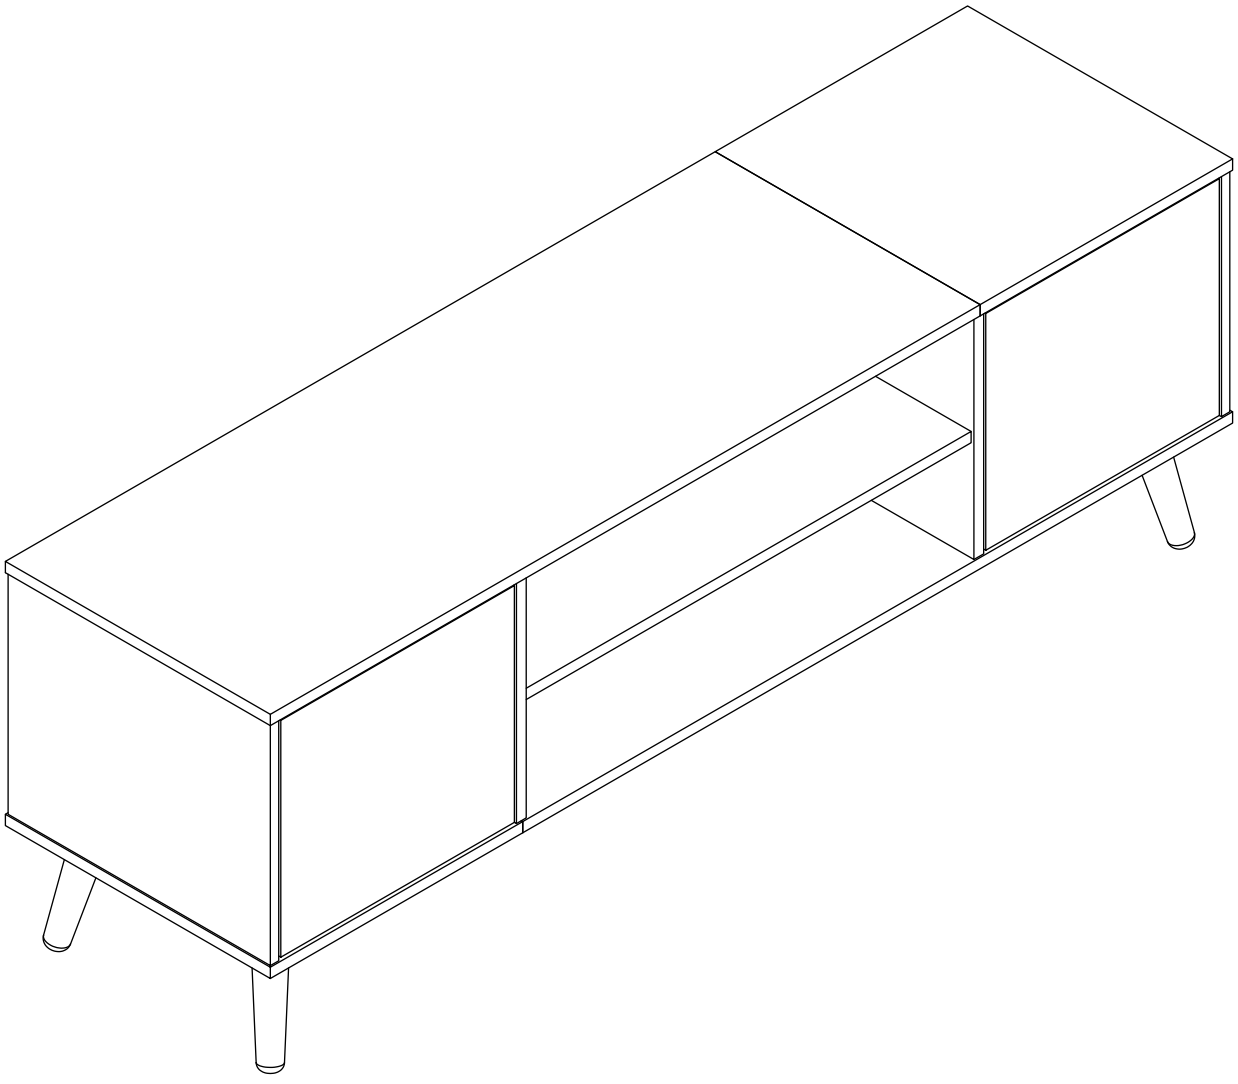

WARNING !


PF060






Estimated Time for Assembly


60 mins

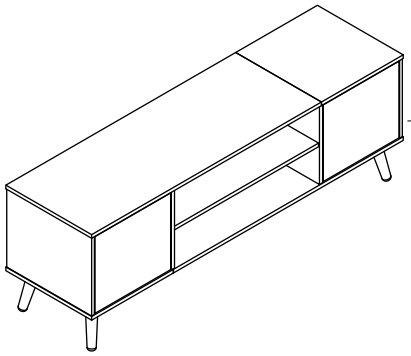

MAXIMUM LOAD
220 lb/ 100kg

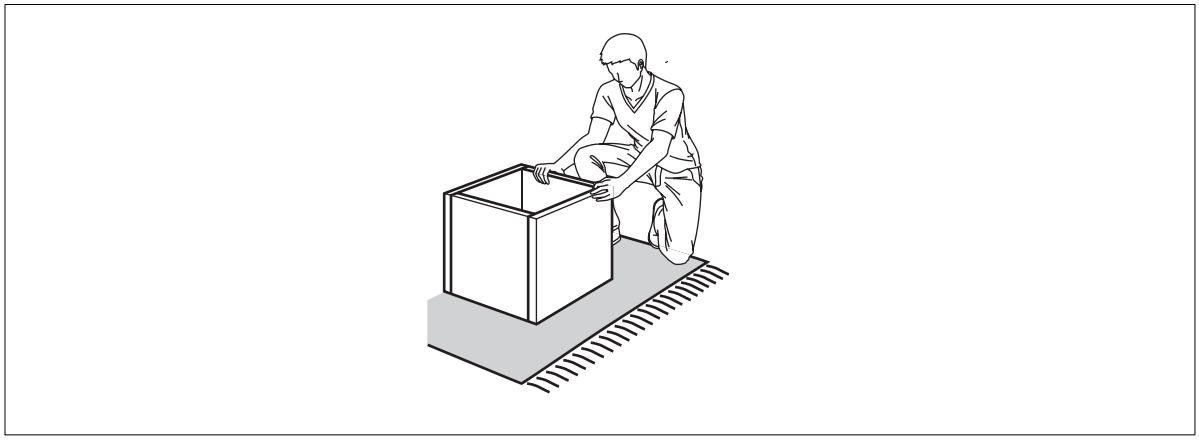

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

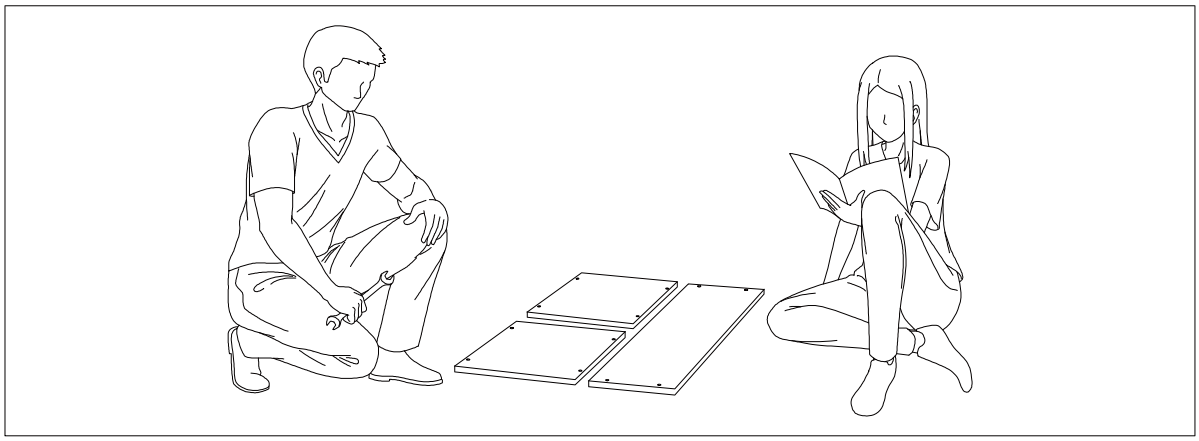


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

PACKAGE CONTENT


PF060

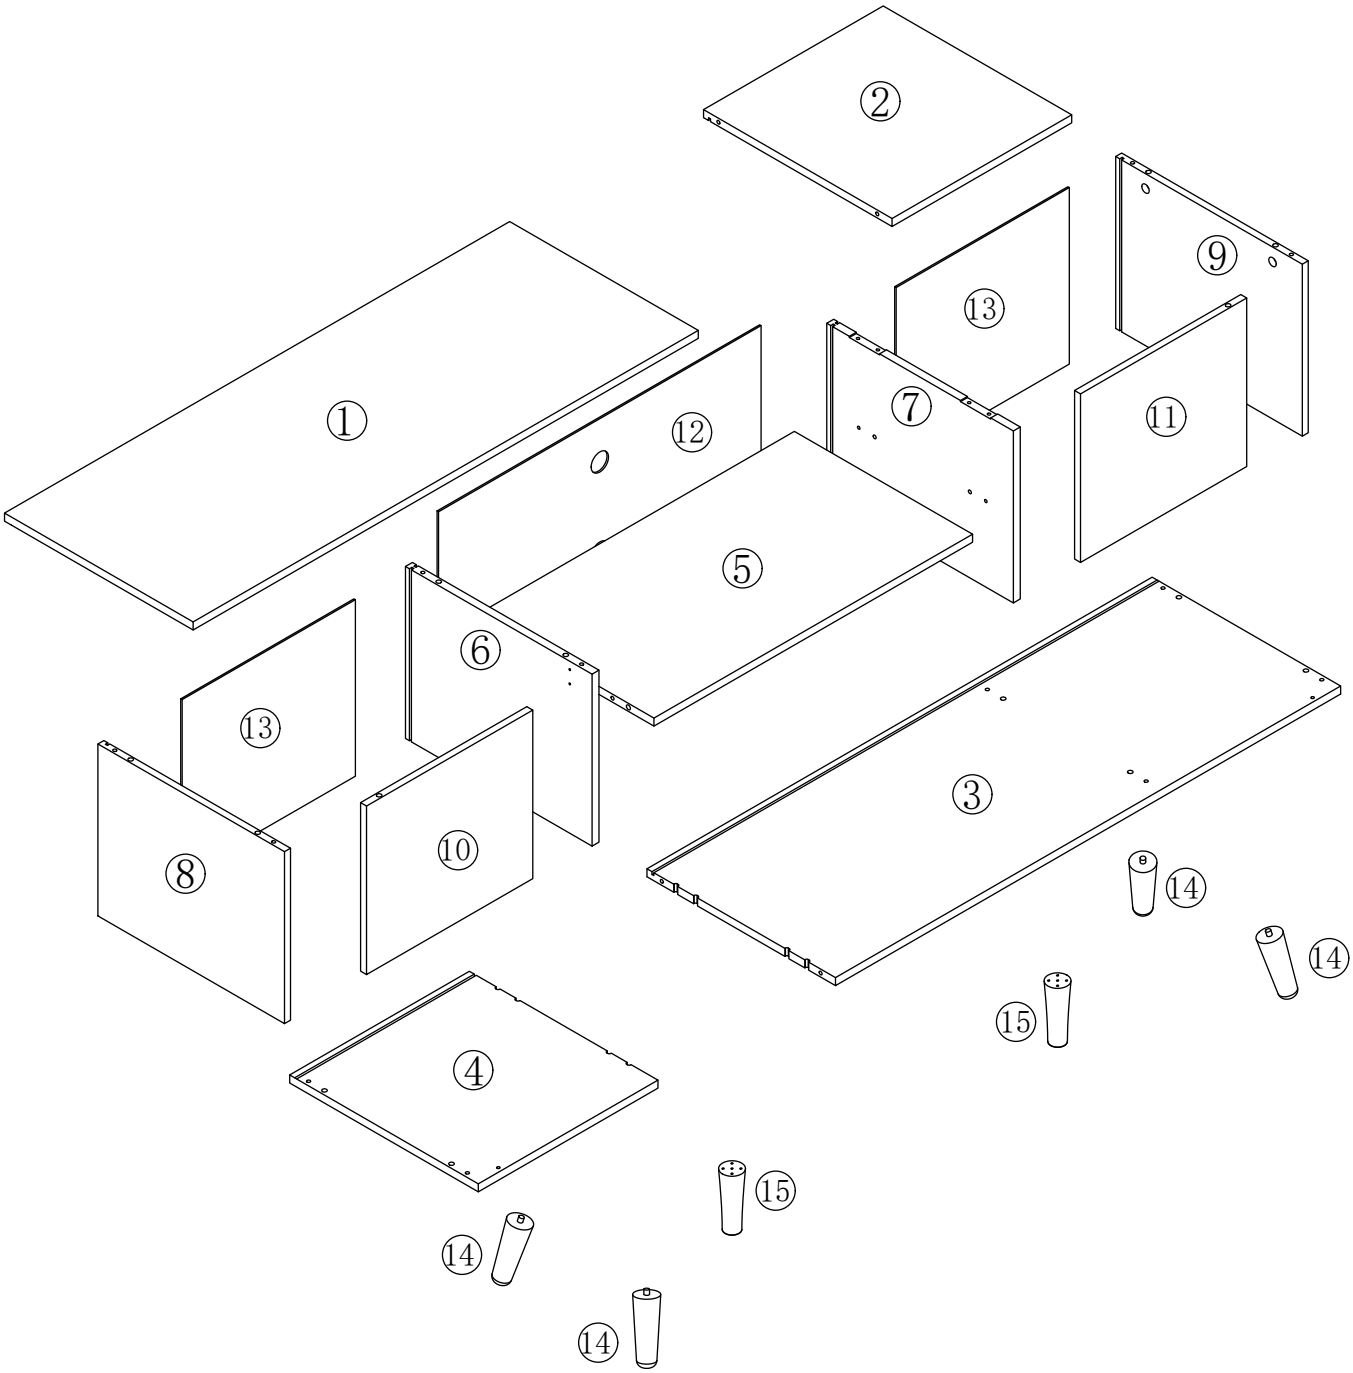

BOARD IDENTIFICATION















Not actual size

PF060

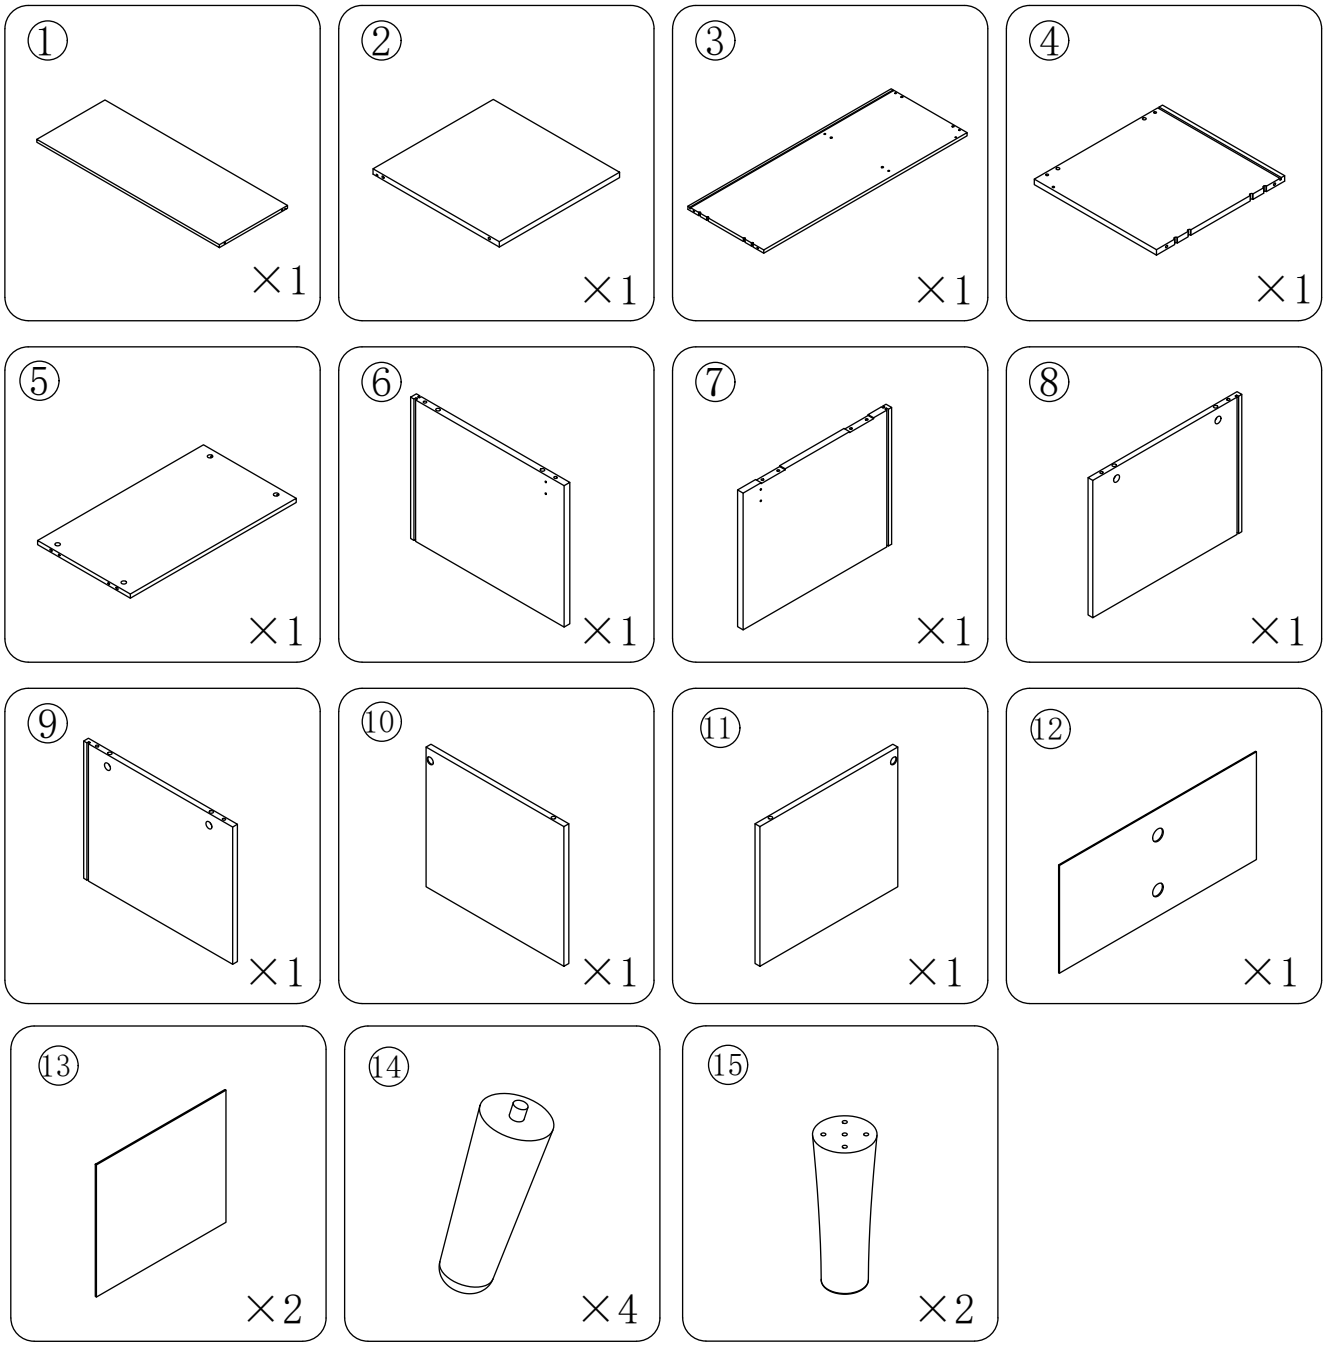


HARDWARE PART LIST


PF060

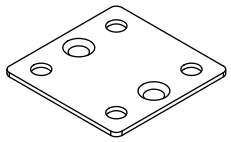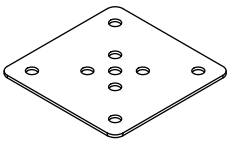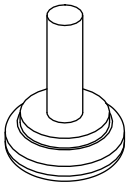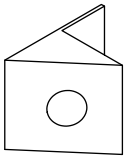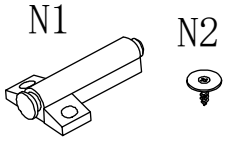
A  ×4	B  ×2	C  ×4	D  ×2
E  M6×40mm ×14+1	F  M6×12mm ×16+1	G  M3.5×12mm ×40+2	H  M3×14mm ×12+1
I  M6×40mm ×20+2	J  M6×33.5mm ×10+1	K  φ15×9.5mm ×10+1	L  ×12
M  ×4	N  ×2	O  ×1	P  ×1

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

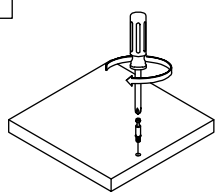1 

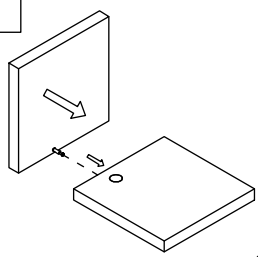2 

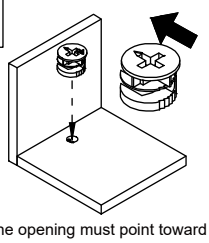
3 

The opening must point toward the edge of the board

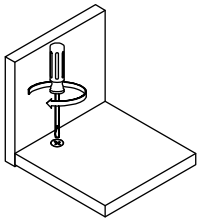4 

STEP 1


PF060

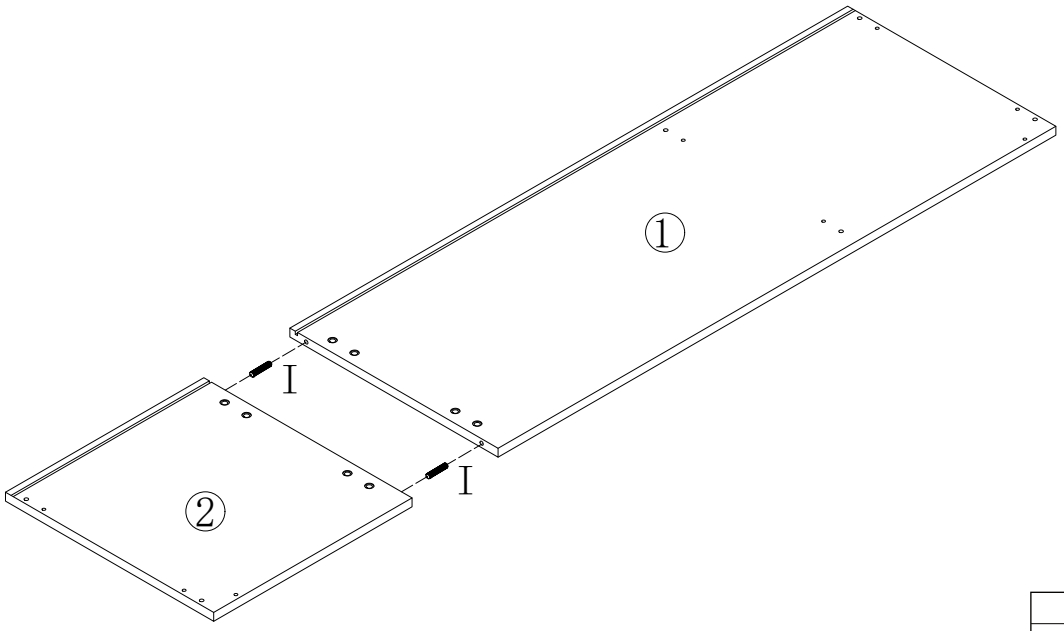


I	X2
	
M6x40mm	

STEP 2


PF060

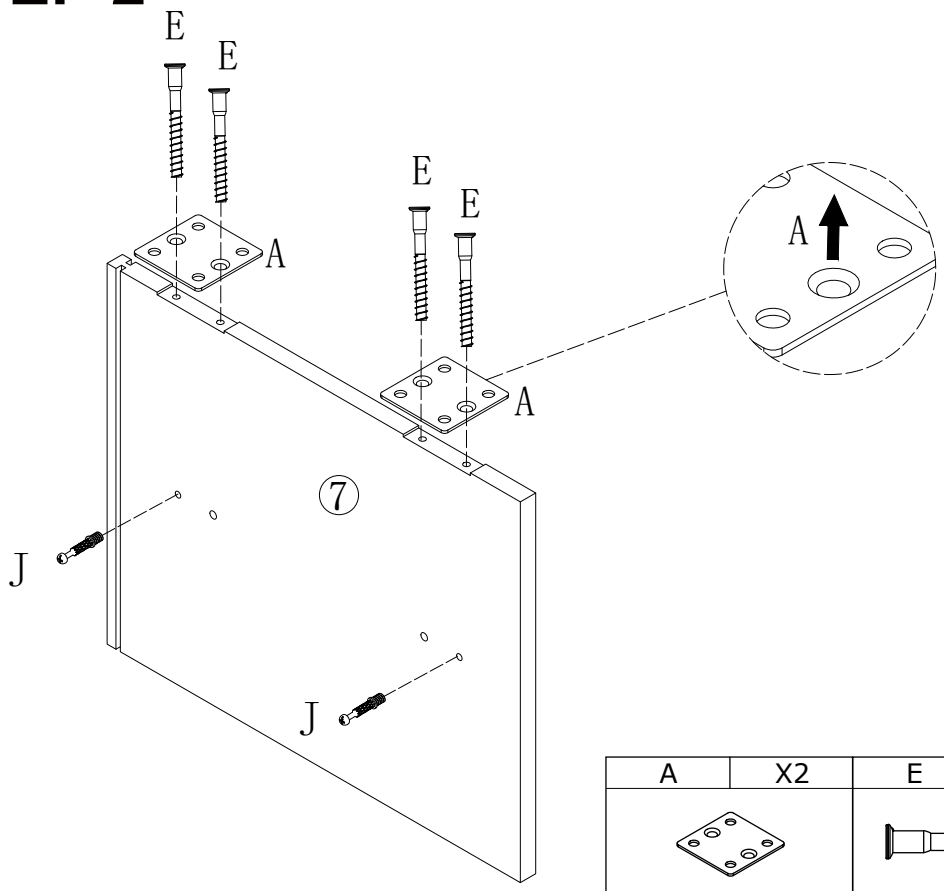

A	X2	E	X4	J	X2
					
		M6x40mm		M6x33.5mm	

STEP 3


PF060

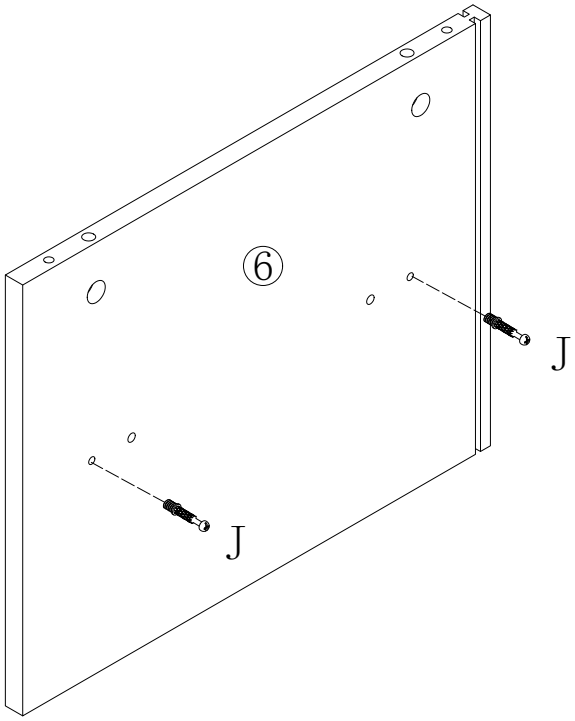

J	X2
	
M6x33.5mm	

STEP 4


PF060

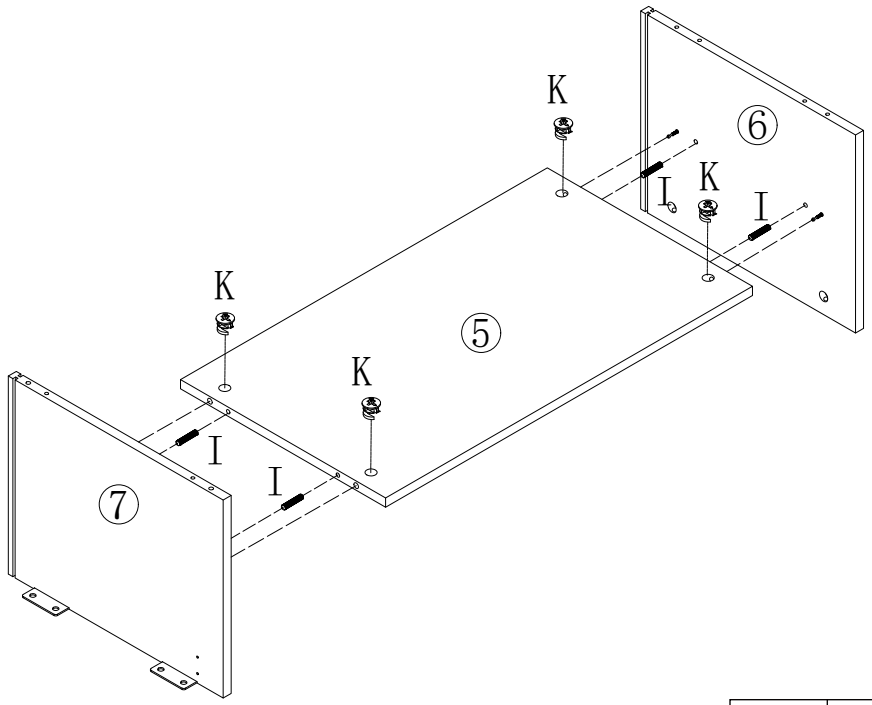

I	X4	K	X4
			
M6x40mm		φ15x9.5mm	

STEP 5


PF060

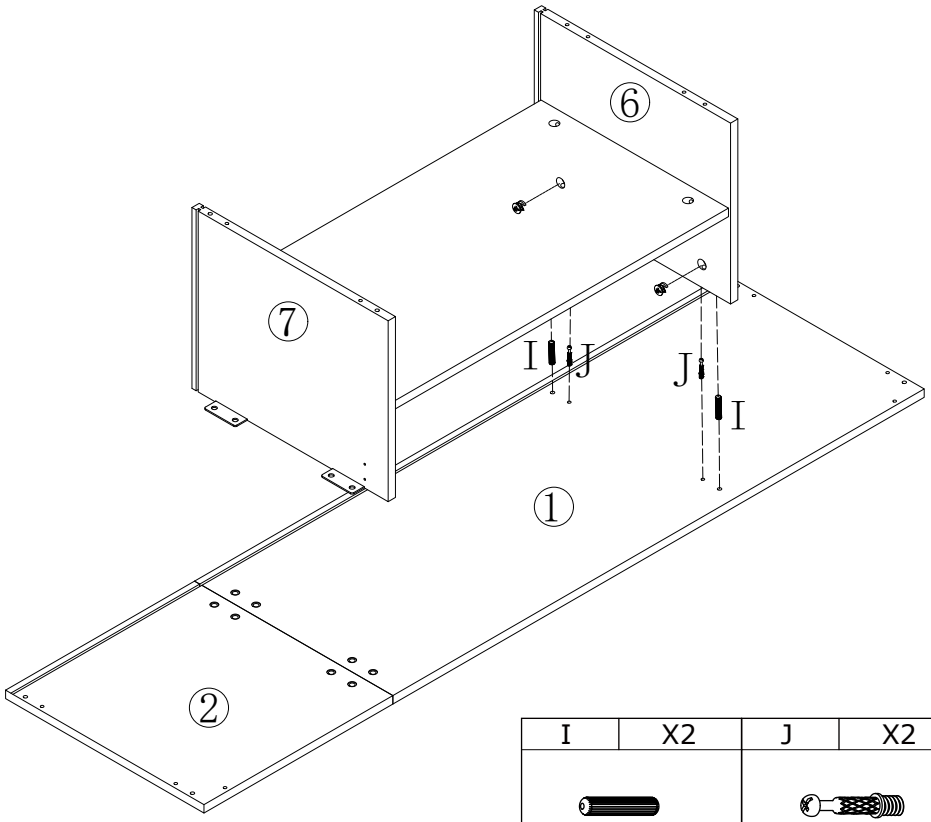

I	X2	J	X2	K	X2
					
M6x40mm		M6x33.5mm		φ15x9.5mm	

STEP 6


PF060

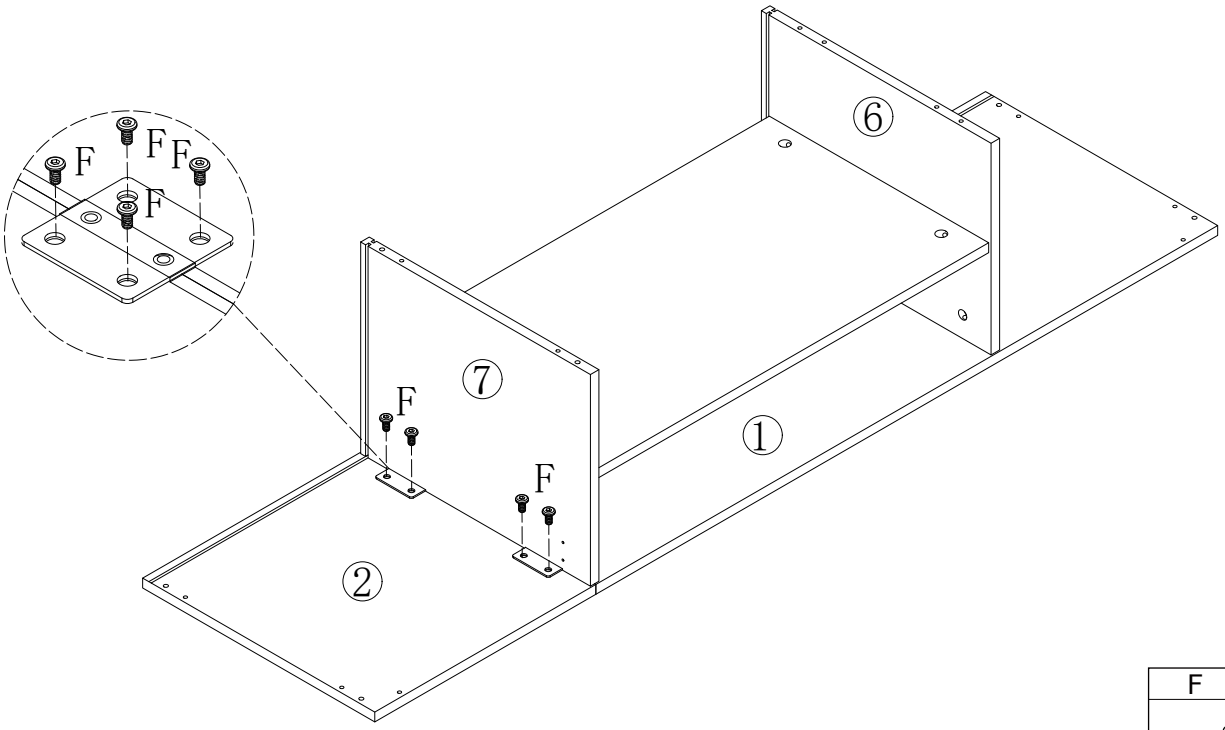

F	X8
	
M6x12mm	

STEP 7


PF060

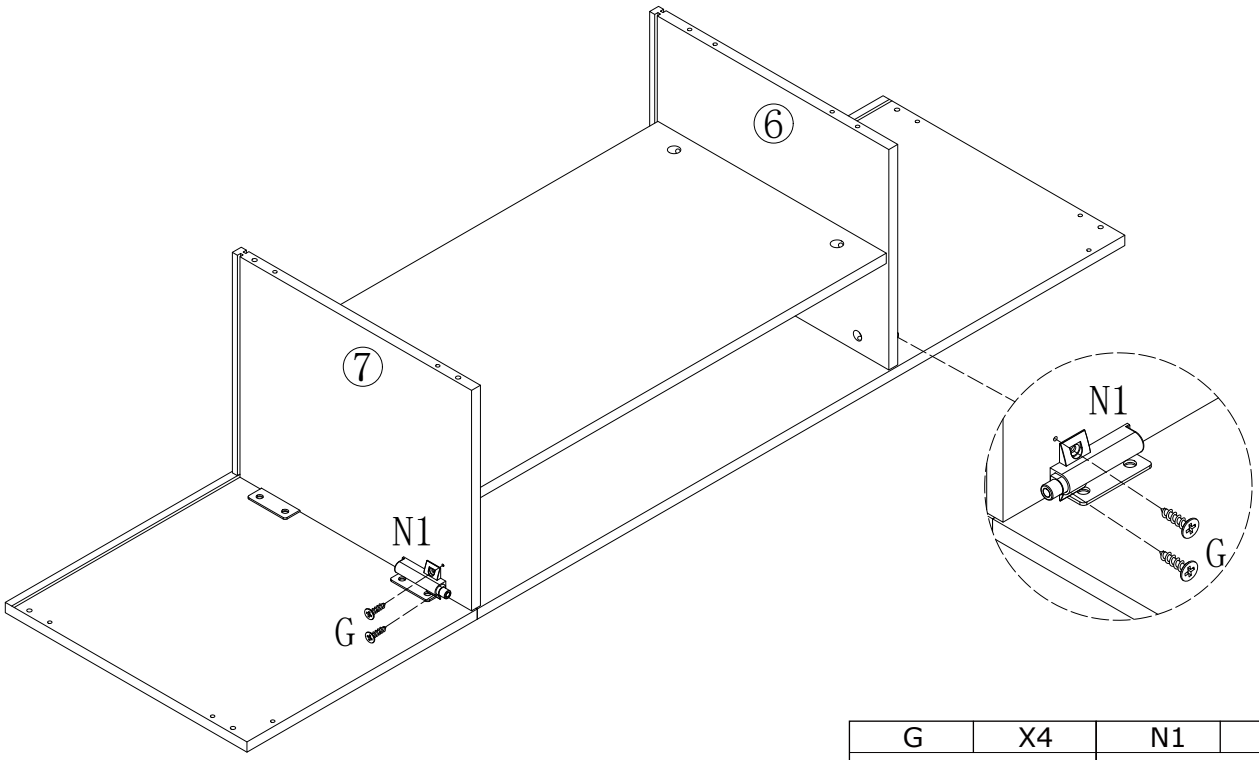

G	X4	N1	X2
			
M3.5x12mm			

STEP 8


PF060

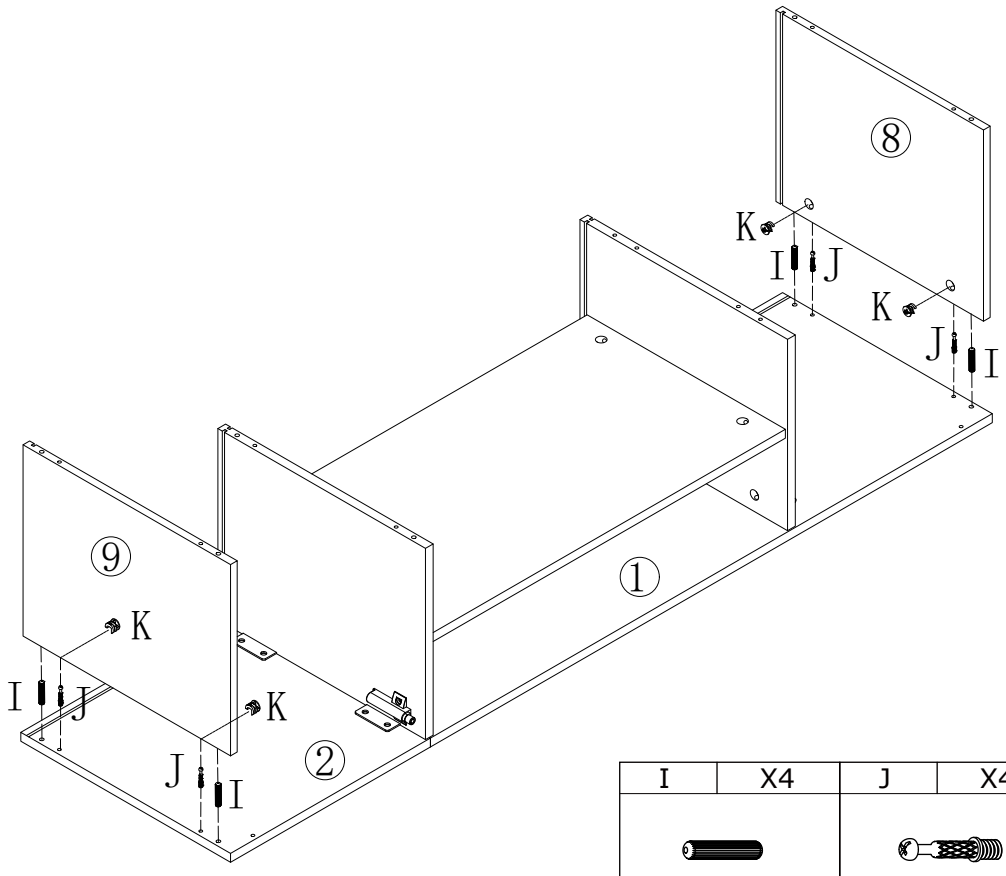

I	X4	J	X4	K	X4
					
M6x40mm		M6x33.5mm		φ15x9.5mm	


STEP 9

PF060

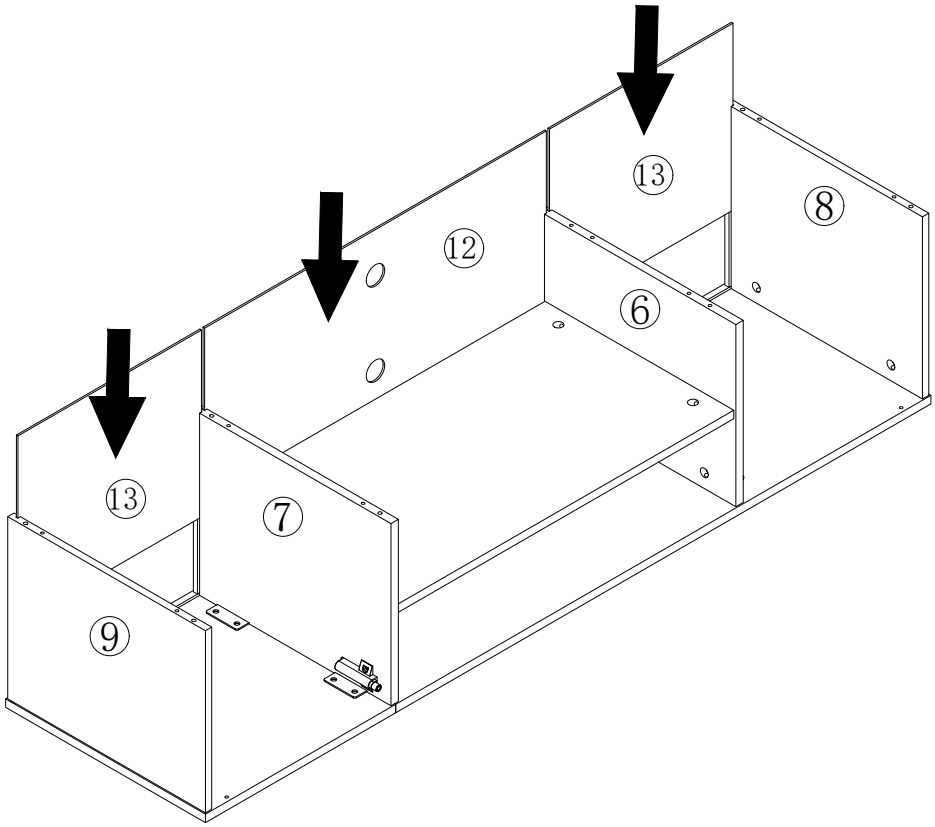

STEP 10


PF060

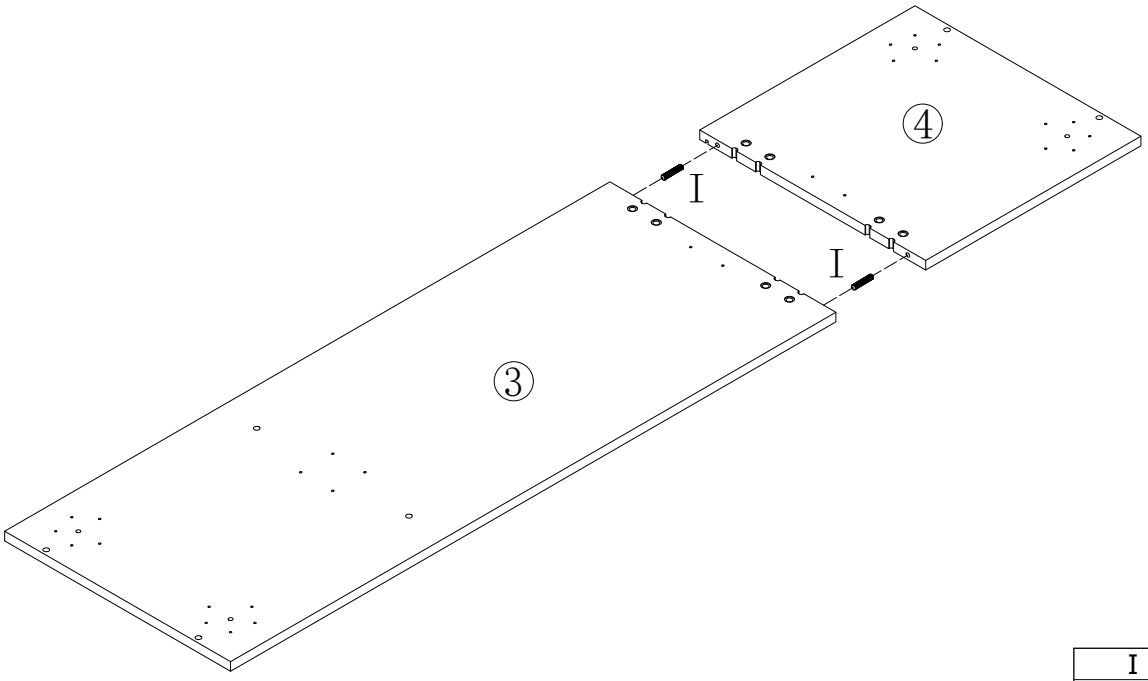

I	X2
	
M6x40mm	

STEP 11


PF060

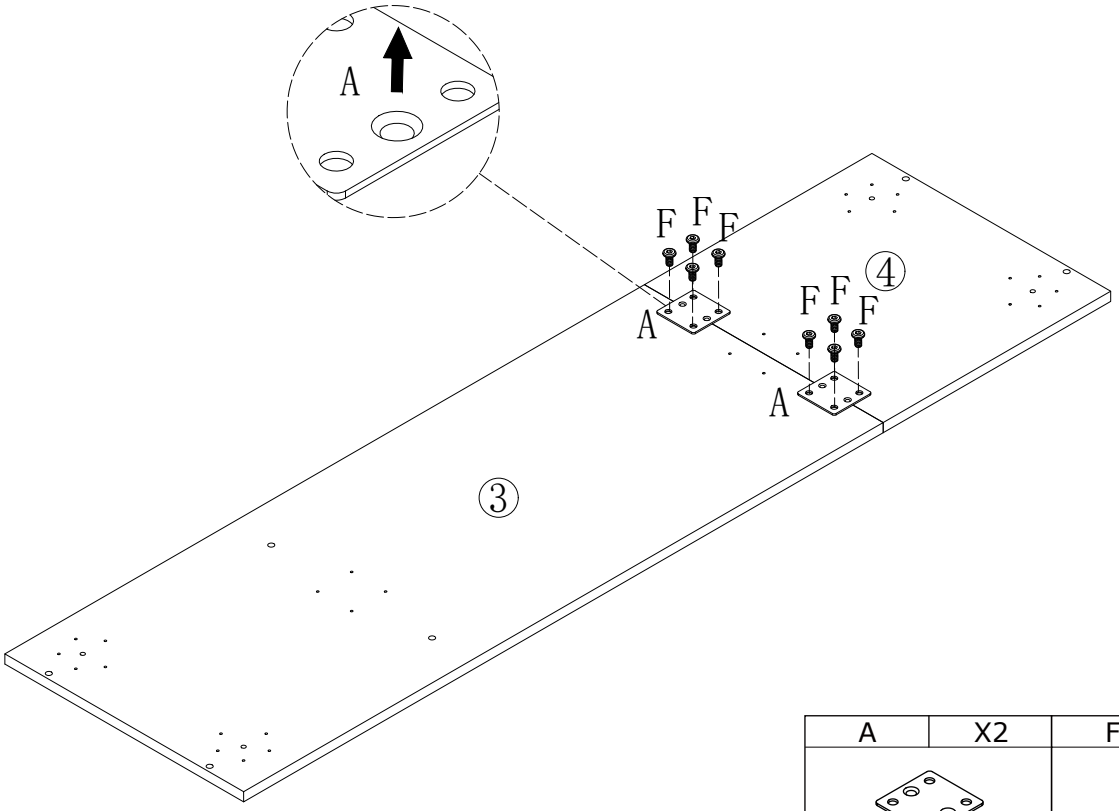


A	X2	F	X8
			
			M6x12mm

STEP 12


PF060

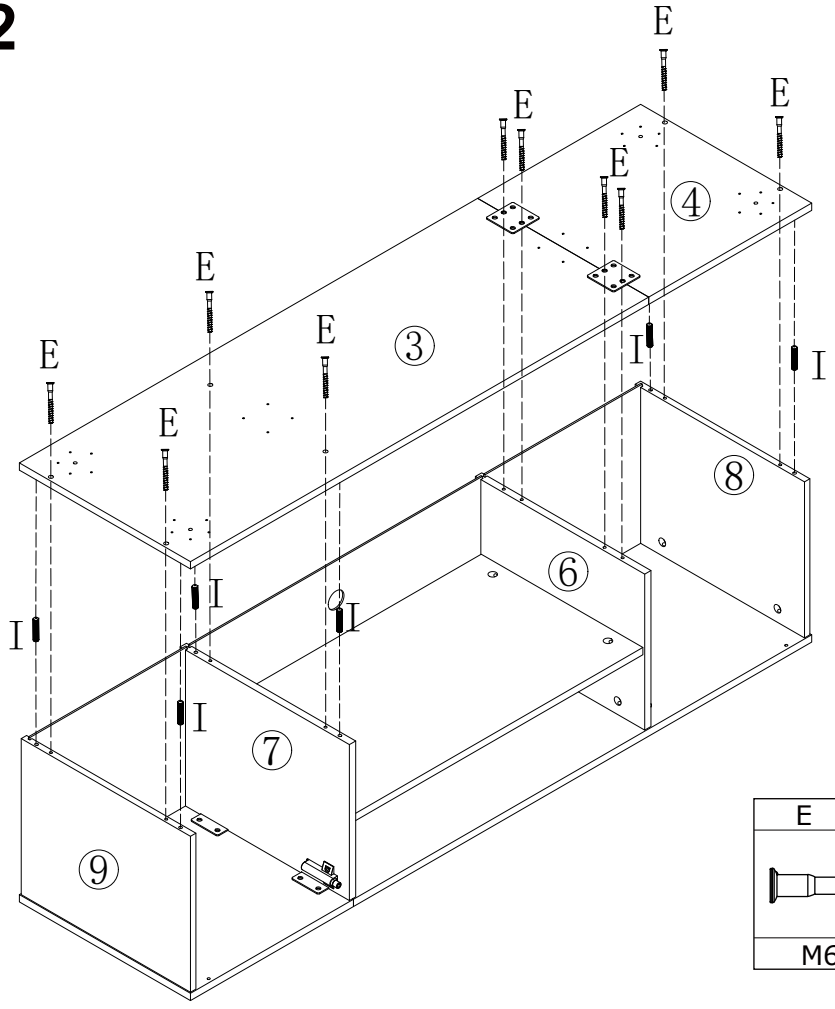


E	X10	I	X6
			
M6x40mm		M6x40mm	

STEP 13

PF060

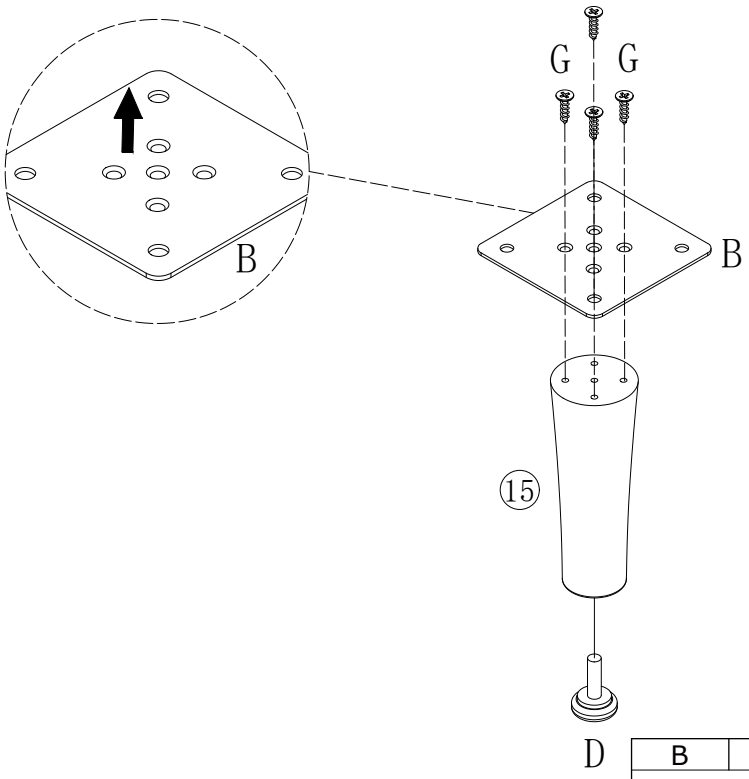


X2

B	X2	D	X2	G	X8
					
				M3.5x12mm	

STEP 14


PF060

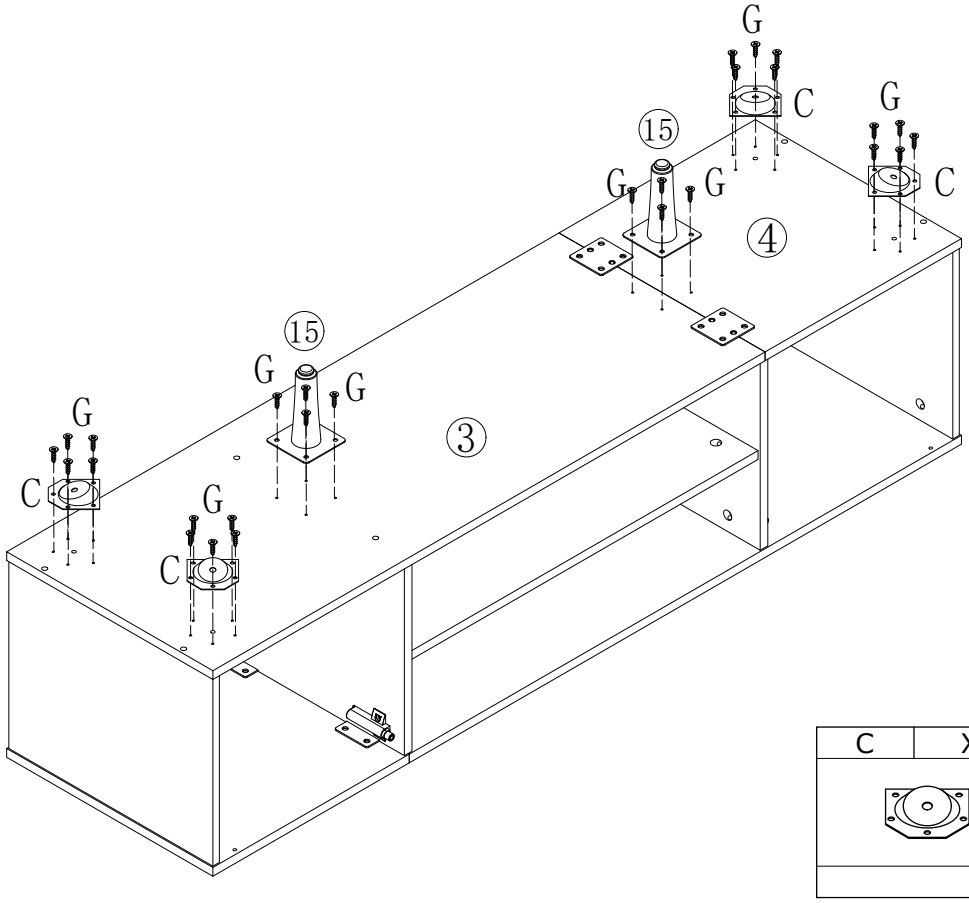

C	X4	G	X28
			
		M3.5x12mm	


STEP 15

PF060

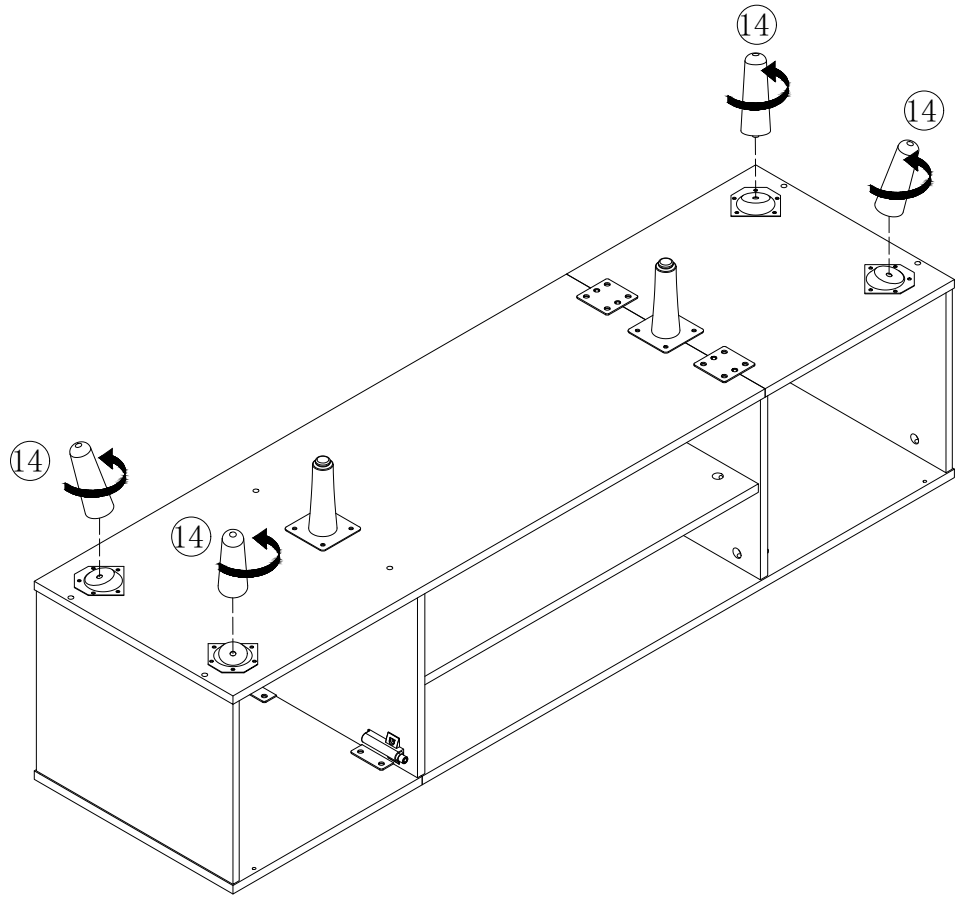

STEP 16


PF060

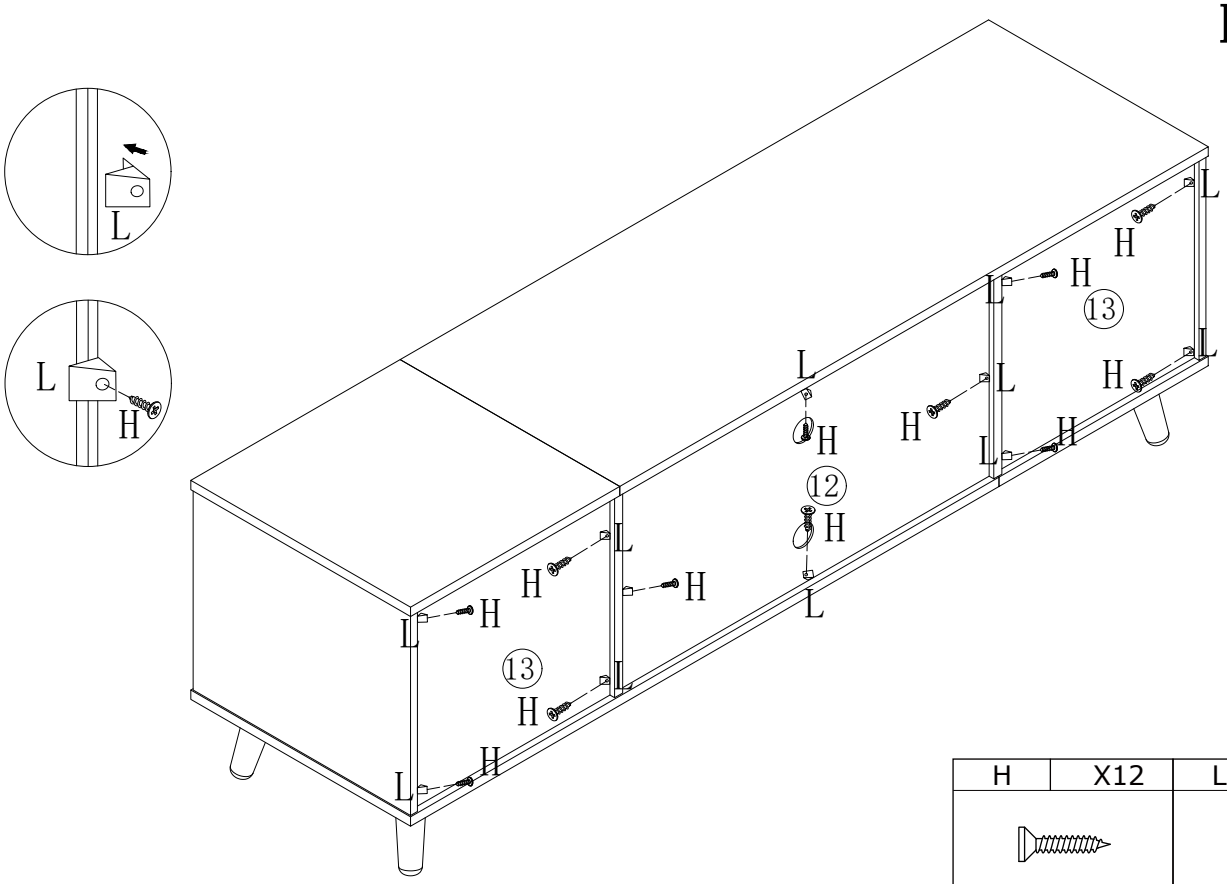

H	X12	L	X12
M3x14mm			

STEP 17


PF060

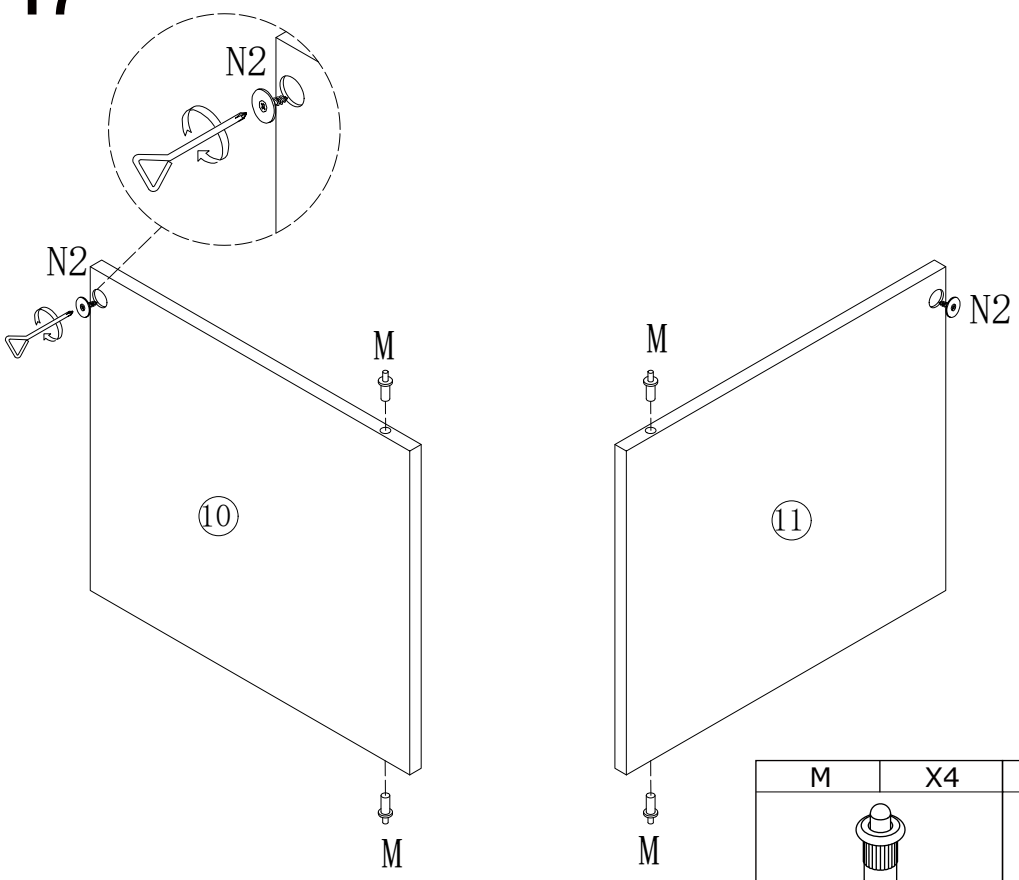

M	X4	N2	X2
			


STEP 18

PF060

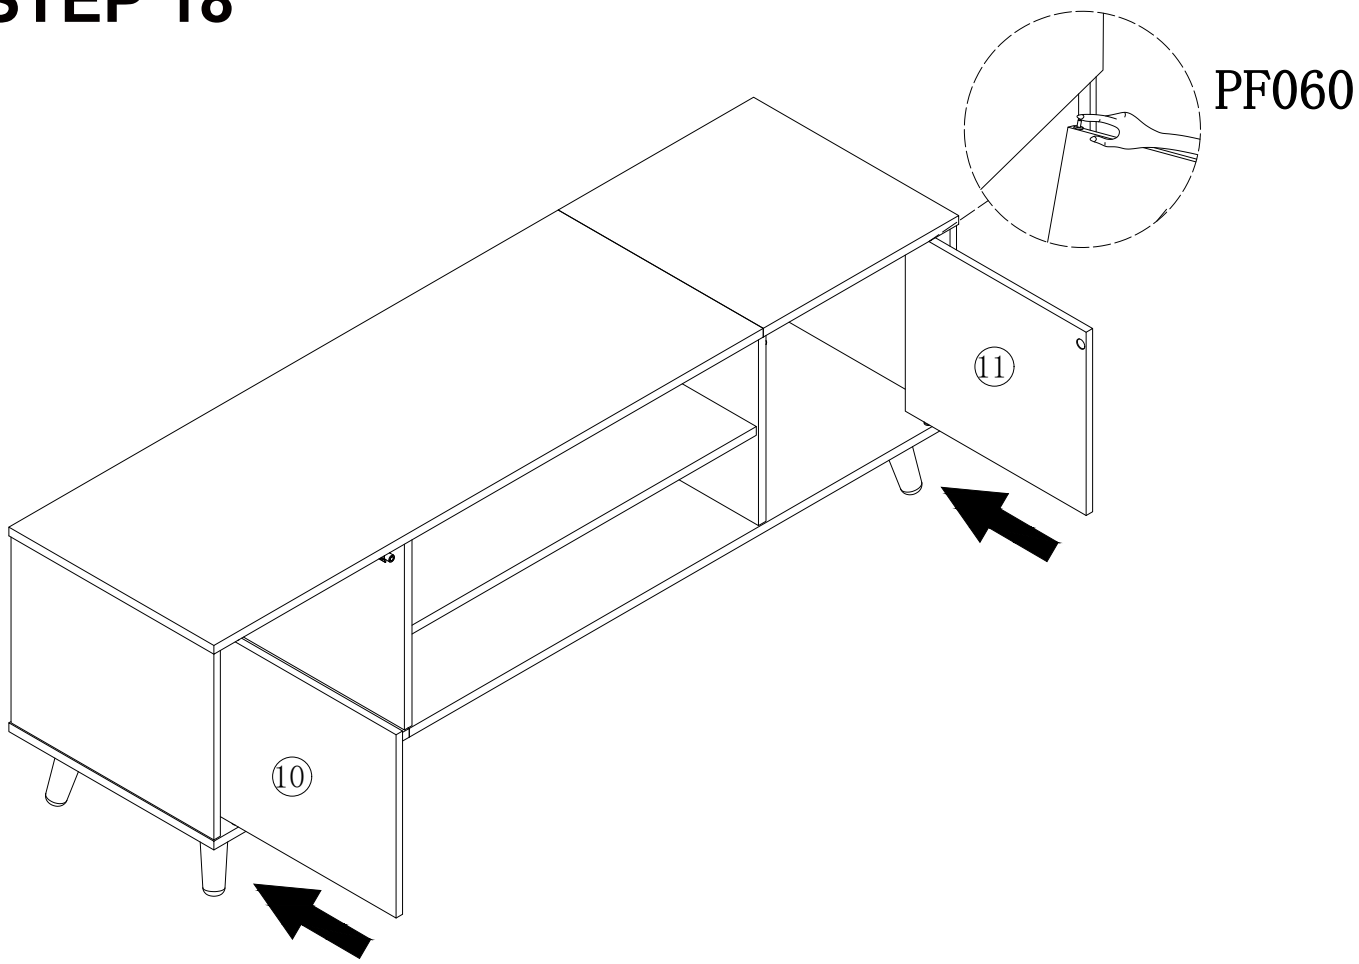

STEP 19


PF060

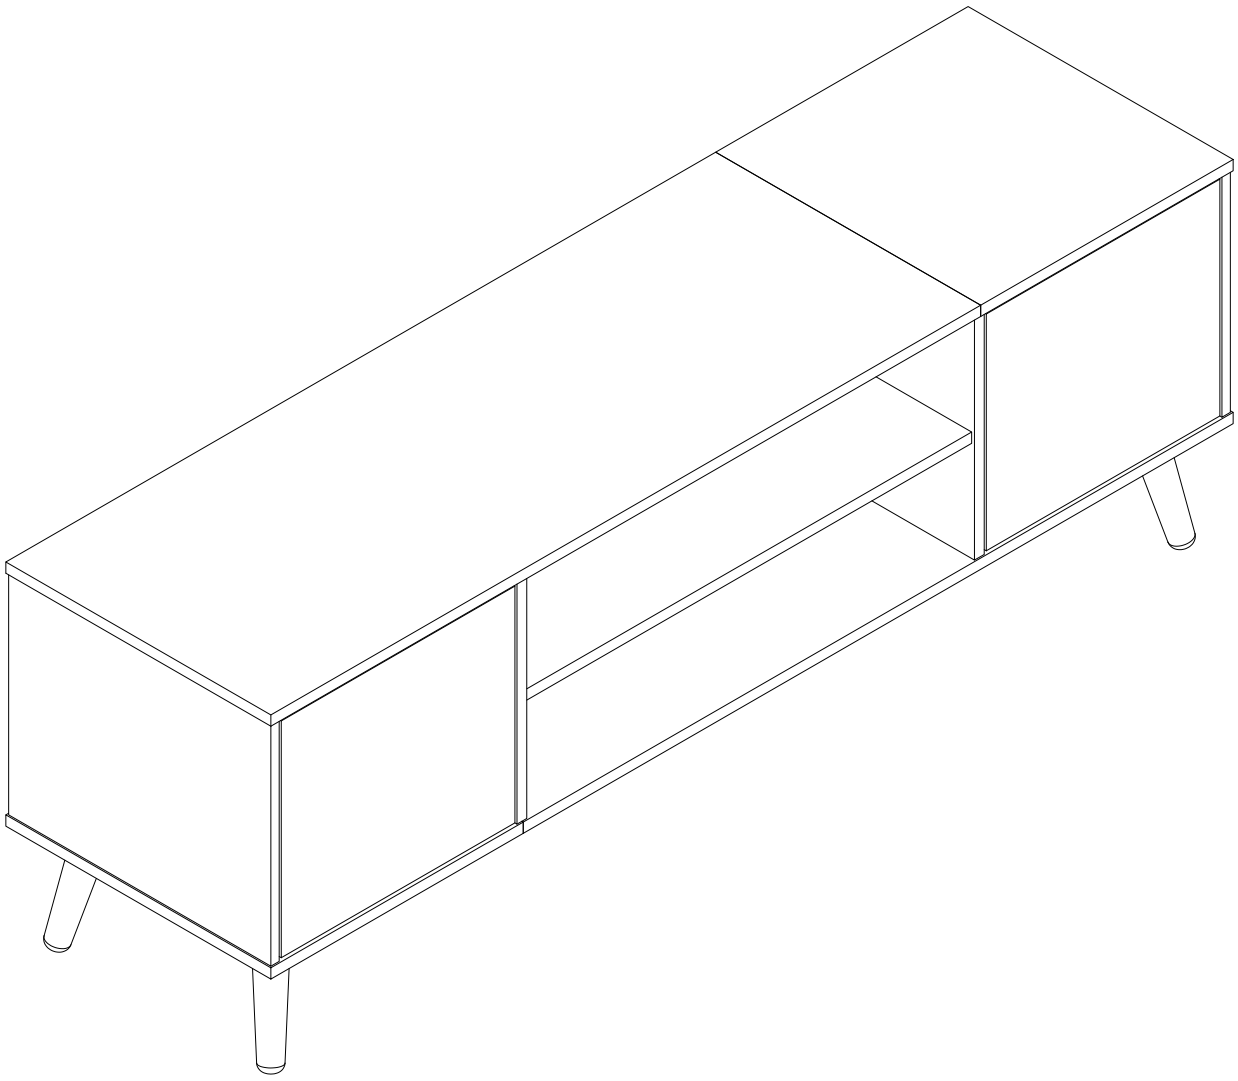

FURNITURE CARE AND MAINTENANCE


Medium - Density Fiberboard and PB

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.

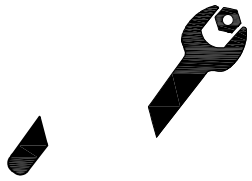

MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary

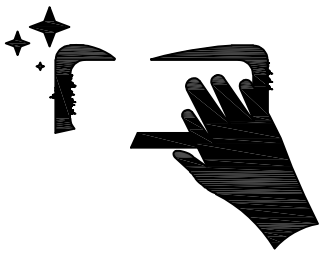

CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary

- Dry the surface immediately after cleaning.

▲ DO NOT use bleach or alcohol detergent to clean the surface.
▲ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and PB will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning