














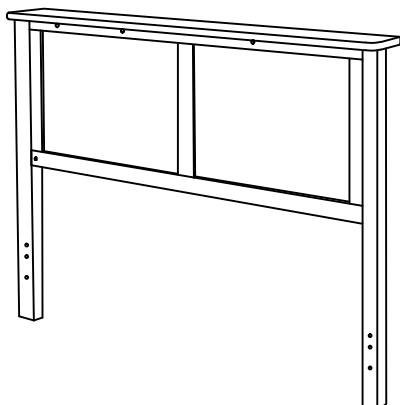


# ASSEMBLY INSTRUCTION

## BLACK FINISH FULL MISSION PANEL HEADBOARD


<b>A</b> Centre Frame	<b>B</b> Side Post	<b>C</b> Caprel	<b>D</b> Jcbc Screw M6 x 80mm
			
1pc	2pcs	1pc	4pcs
<b>E</b> Barrel Nut	<b>F</b> Wooden Button 14.5	<b>G</b> Jcbc Screw M6 x 60mm	<b>H</b> M6 Flat Washer
			
4pcs	4pcs	6pcs	6pcs
<b>I</b> Nylon Washer 20mm	<b>J</b> M6 Hex Nut	<b>K</b> M4 Allen Key	<b>L</b> Minifix Bolt
			
6pcs	6pcs	1pc	3pcs
<b>M</b> Housing 13.5mm	<b>N</b> Plastic Cap(Brown)	<b>O</b> Wrench 10mm	
			
3pcs	3pcs	1pc	

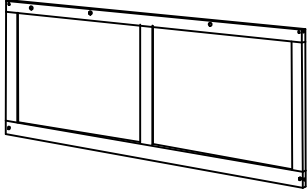


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**1**

Attach Side Post (B) to Center Frame (A) using JCBC Bolt M6 x 80mm (D) through Barrel Nut (E). Tighten using M4 Allen Key (K).

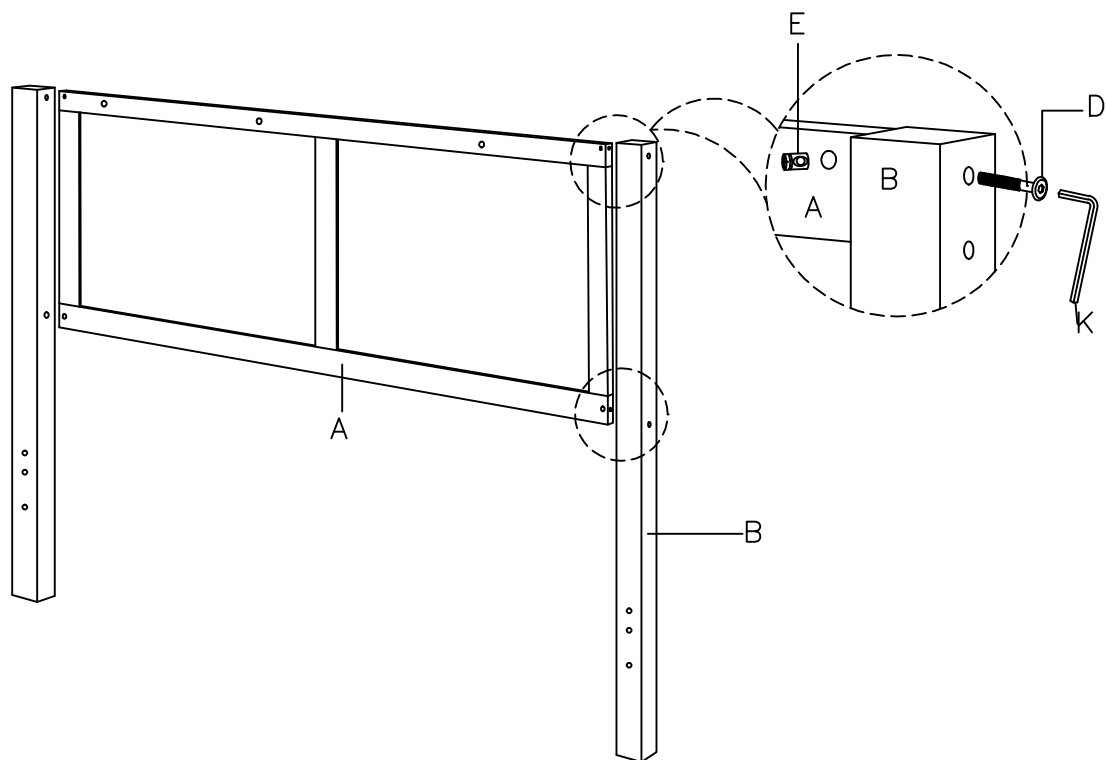
**2**

Put the Minifix Bolt (L) on Caprel (C) and fix it to Center Frame (A) using Housing 13.5 (M) and put the Plastic Cap (N).

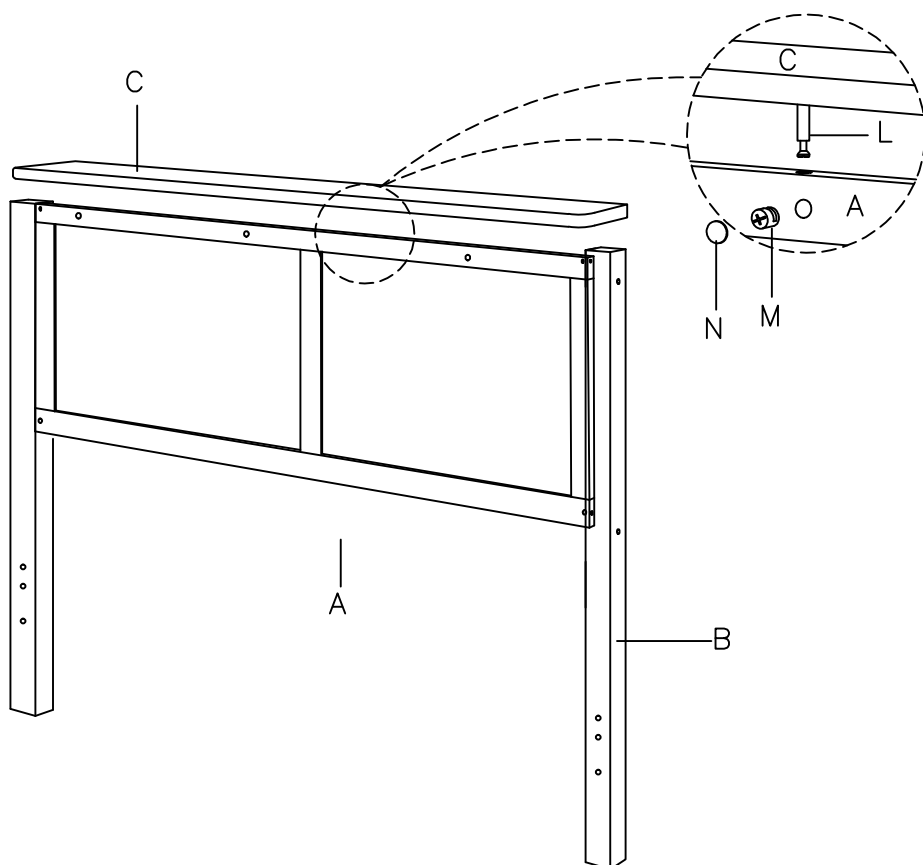

**3**

Align following hardware Jcbc Screw (G), Nylon Washer (H), Flat Washer (I) and Hex Nut M6 (J). By using Allen key (K) tighten the Hex Nut M6 using Wrench 10mm(O). Do not tighten all the screws until completely assembled.

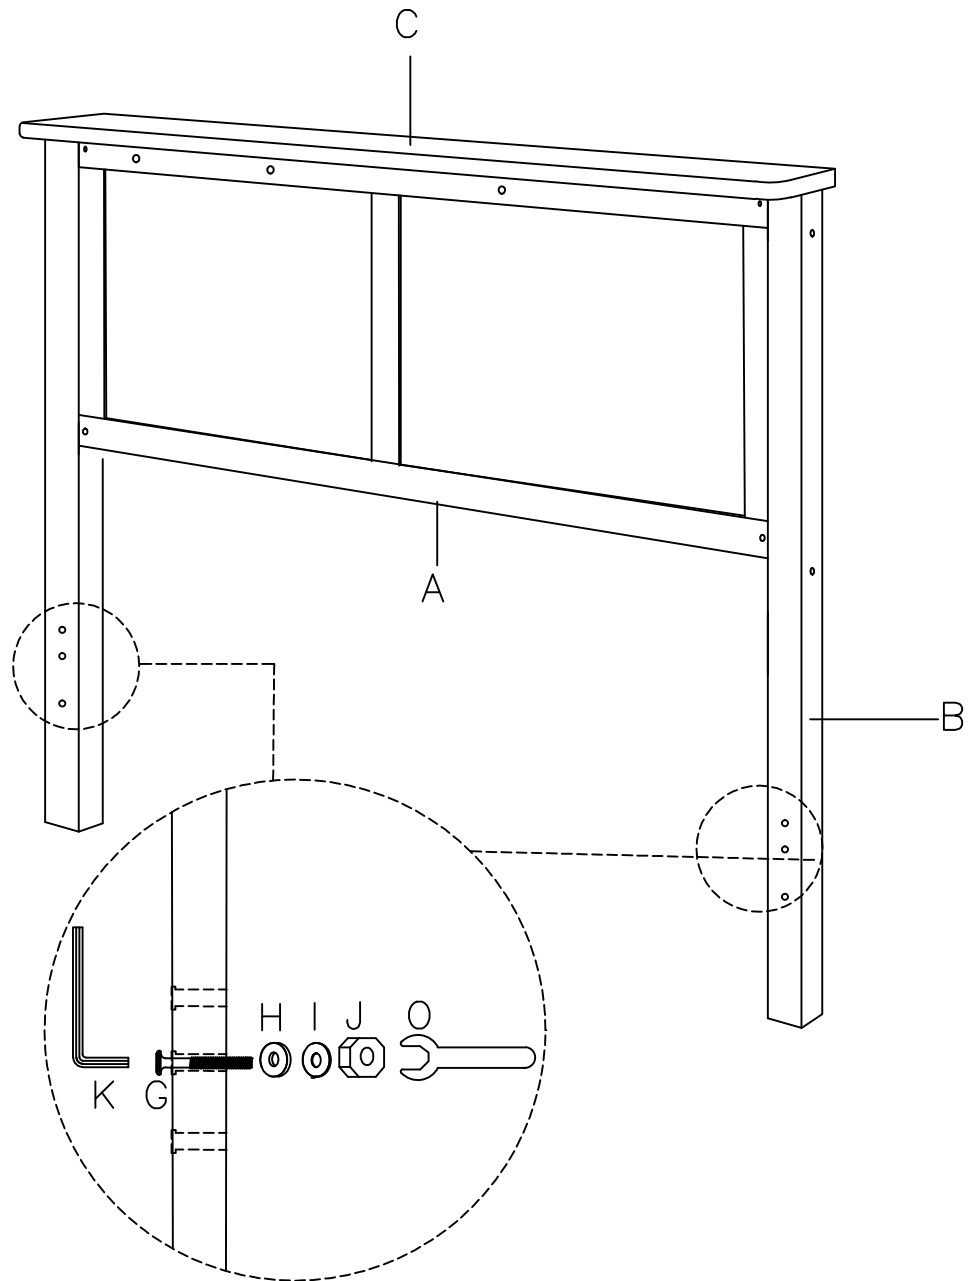

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.