
GDSG0241BK
GDSG0241WA
GDSG0241GE
GDSG0241YO

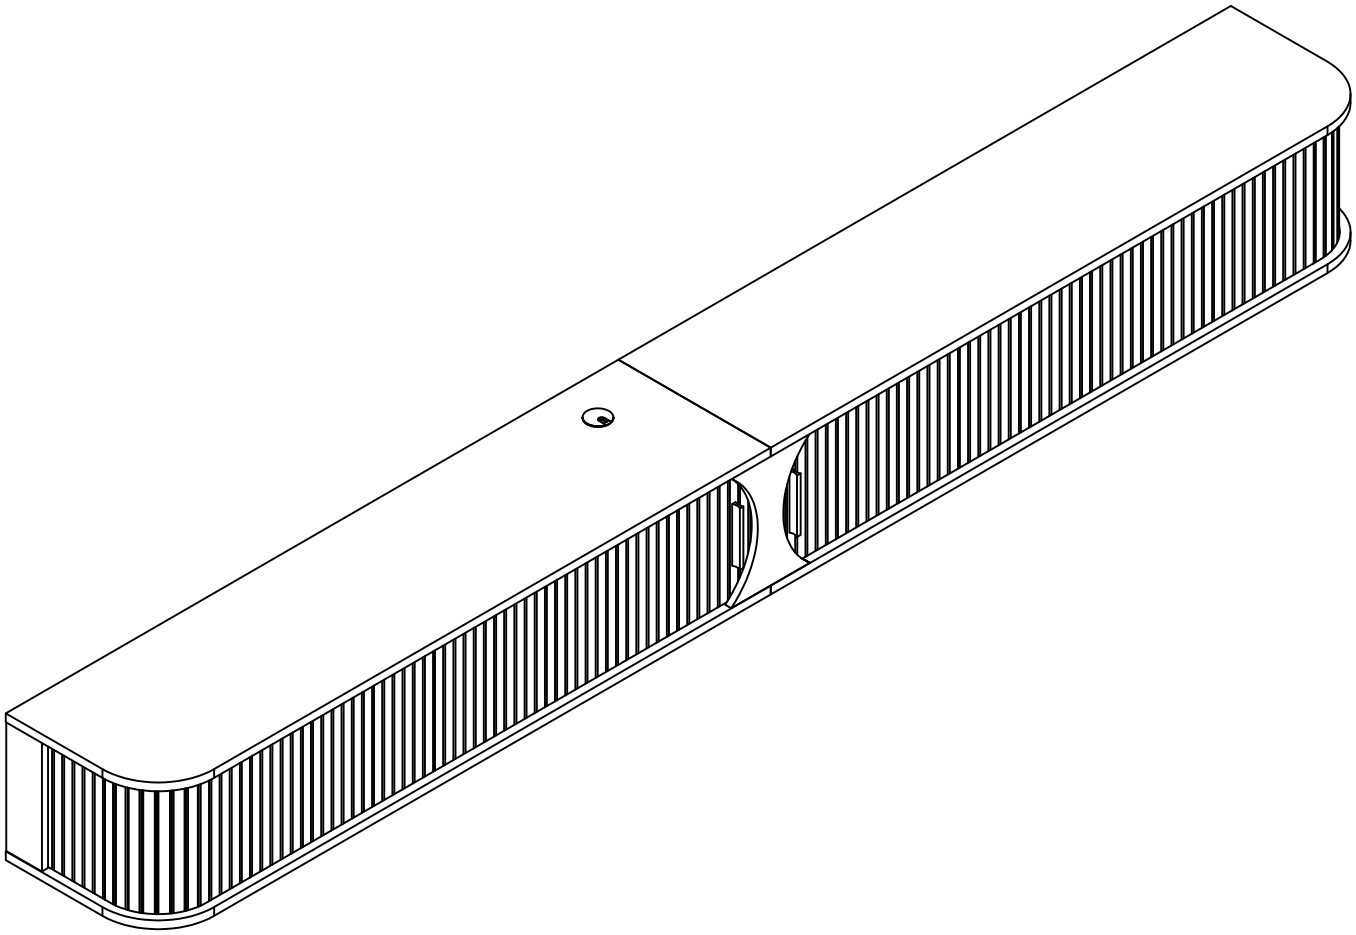


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

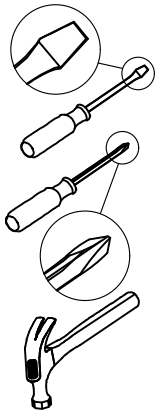

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screw driver）


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.




- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.

- Slides are labeled with an **R** (right) and **L** (left) for proper placement.

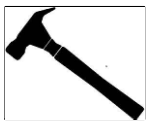

- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.

- Never push, pull, or drag your furniture.


Board Identification

Not actual size

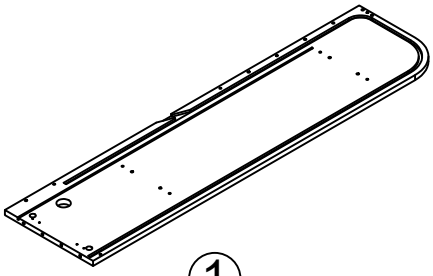


①

LEFT PANEL
Qty:1

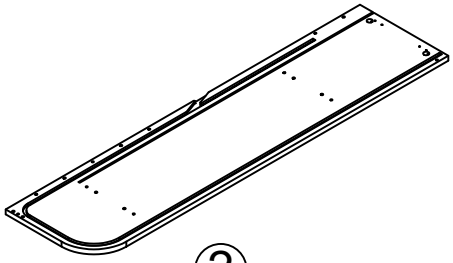


②

RIGHT PANEL
Qty:1

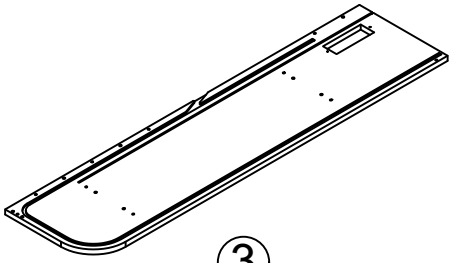


③

LEFT BASE PLATE
Qty:1

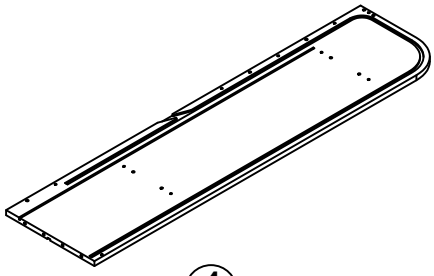


④

RIGHT BASE PLATE
Qty:1

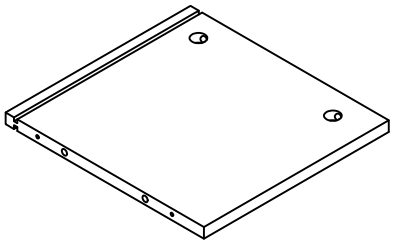


⑤

MIDDLE VERTICAL BOARD
Qty:2

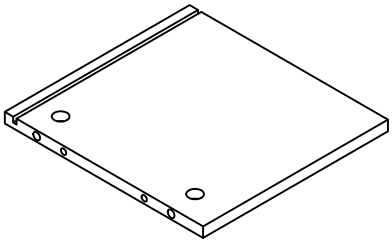


⑥

LEFT VERTICAL PANEL
Qty:1

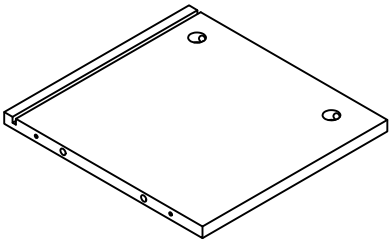


⑦

RIGHT VERTICAL PLATE
Qty:1

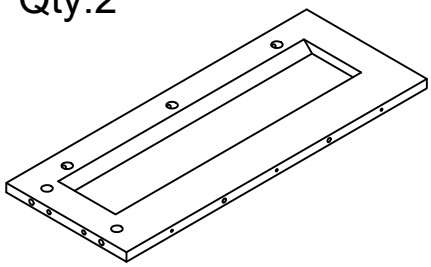


⑧

LEFT THICK BACK PLATE
Qty:1

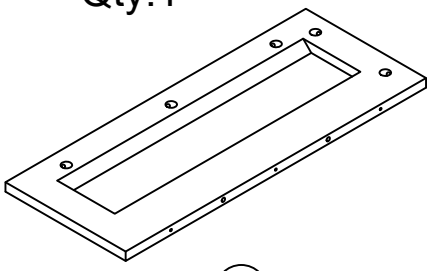


⑨

RIGHT THICK BACK PLATE
Qty:1

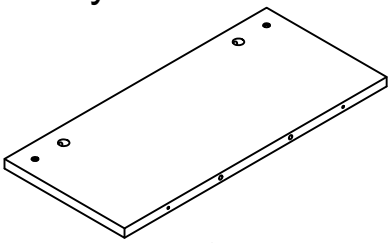


⑩

MEDIUM THICKNESS BACK PLATE
Qty:1

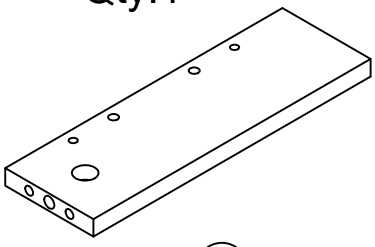

⑪

LEFT VERTICAL BAR
Qty:1

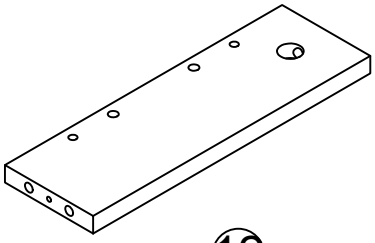


⑫


RIGHT VERTICAL BAR
Qty:1

Board Identification


Not actual size

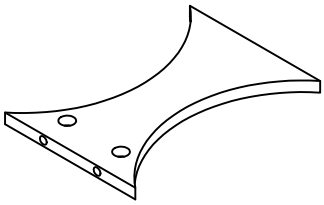


13
FRONT BUMPER
Qty:1

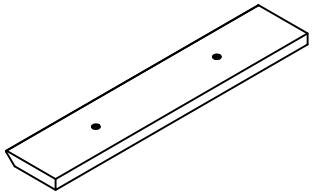


14
WALL PANEL
Qty:2

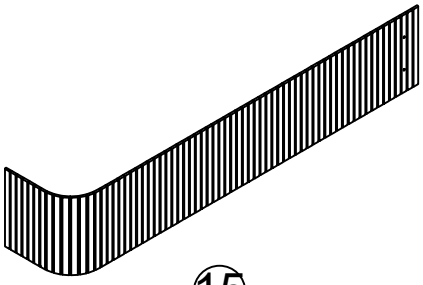

15
SIDE TO SIDE
ROLL-UP DOOR
Qty:2

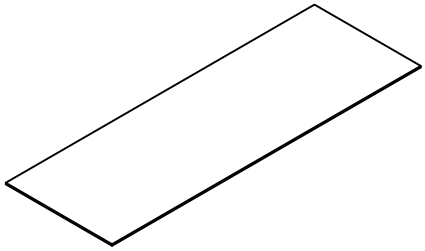

16
LEFT AND RIGHT
BACK PLATE
Qty:2

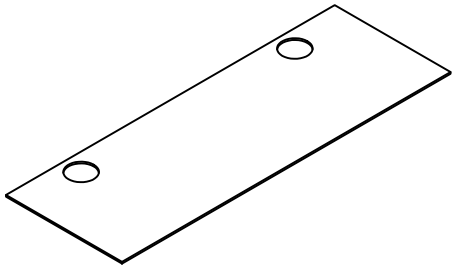

17
MIDDLE BACK PLATE
Qty:1


Part List



Ø15X9.5mm

A	X32

CAM LOCK
spare:2



Ø6.5X35mm

B	X24

CAM BOLT
spare:2



Ø6X30mm

C	X44


WOOD DOWEL
spare:3



Ø3X12mm

D	X3

SCREW
spare:1



Ø4X35mm

E	X20

SCREW
spare:2



M4X9mm

F	X4

SCREW
spare:1



20X10X6.7mm

G	X1


CRIMPING BUCKLE
spare:1



Ø21mm


H	X8

PERFECT STICKER
spare:2



I	X1

LINE HOLE COVER



162X55X40mm

J	X1

USB ON AC SIDE

105X15X7mm

K	X2

PULL HANDLES




L	X1set

LIGHT STRIP




M	X1set

ANTI-TIPPING



N	X5


SELF-ADHESIVE BUCKLE



70X30X5mm

O	X1

TOOL




Ø5X60mm


P	X4

CAM BOLT
spare:1

Part List

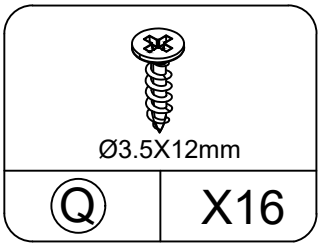


SCREW
spare:2

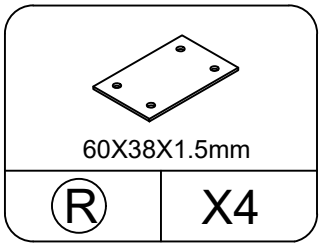

IRON SHEET


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

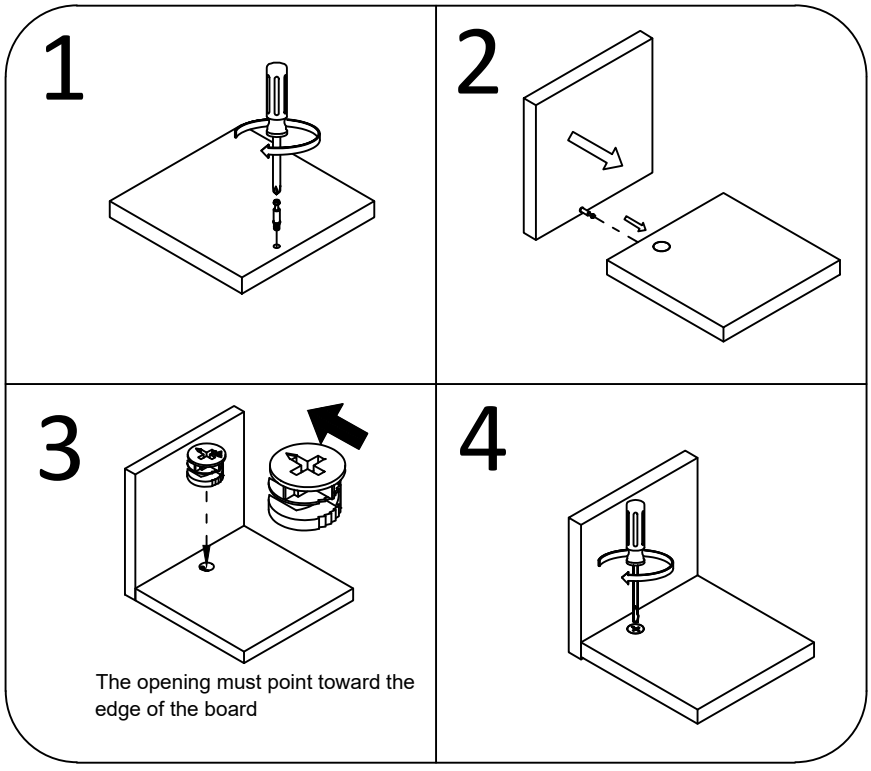



Board Identification


Not actual size

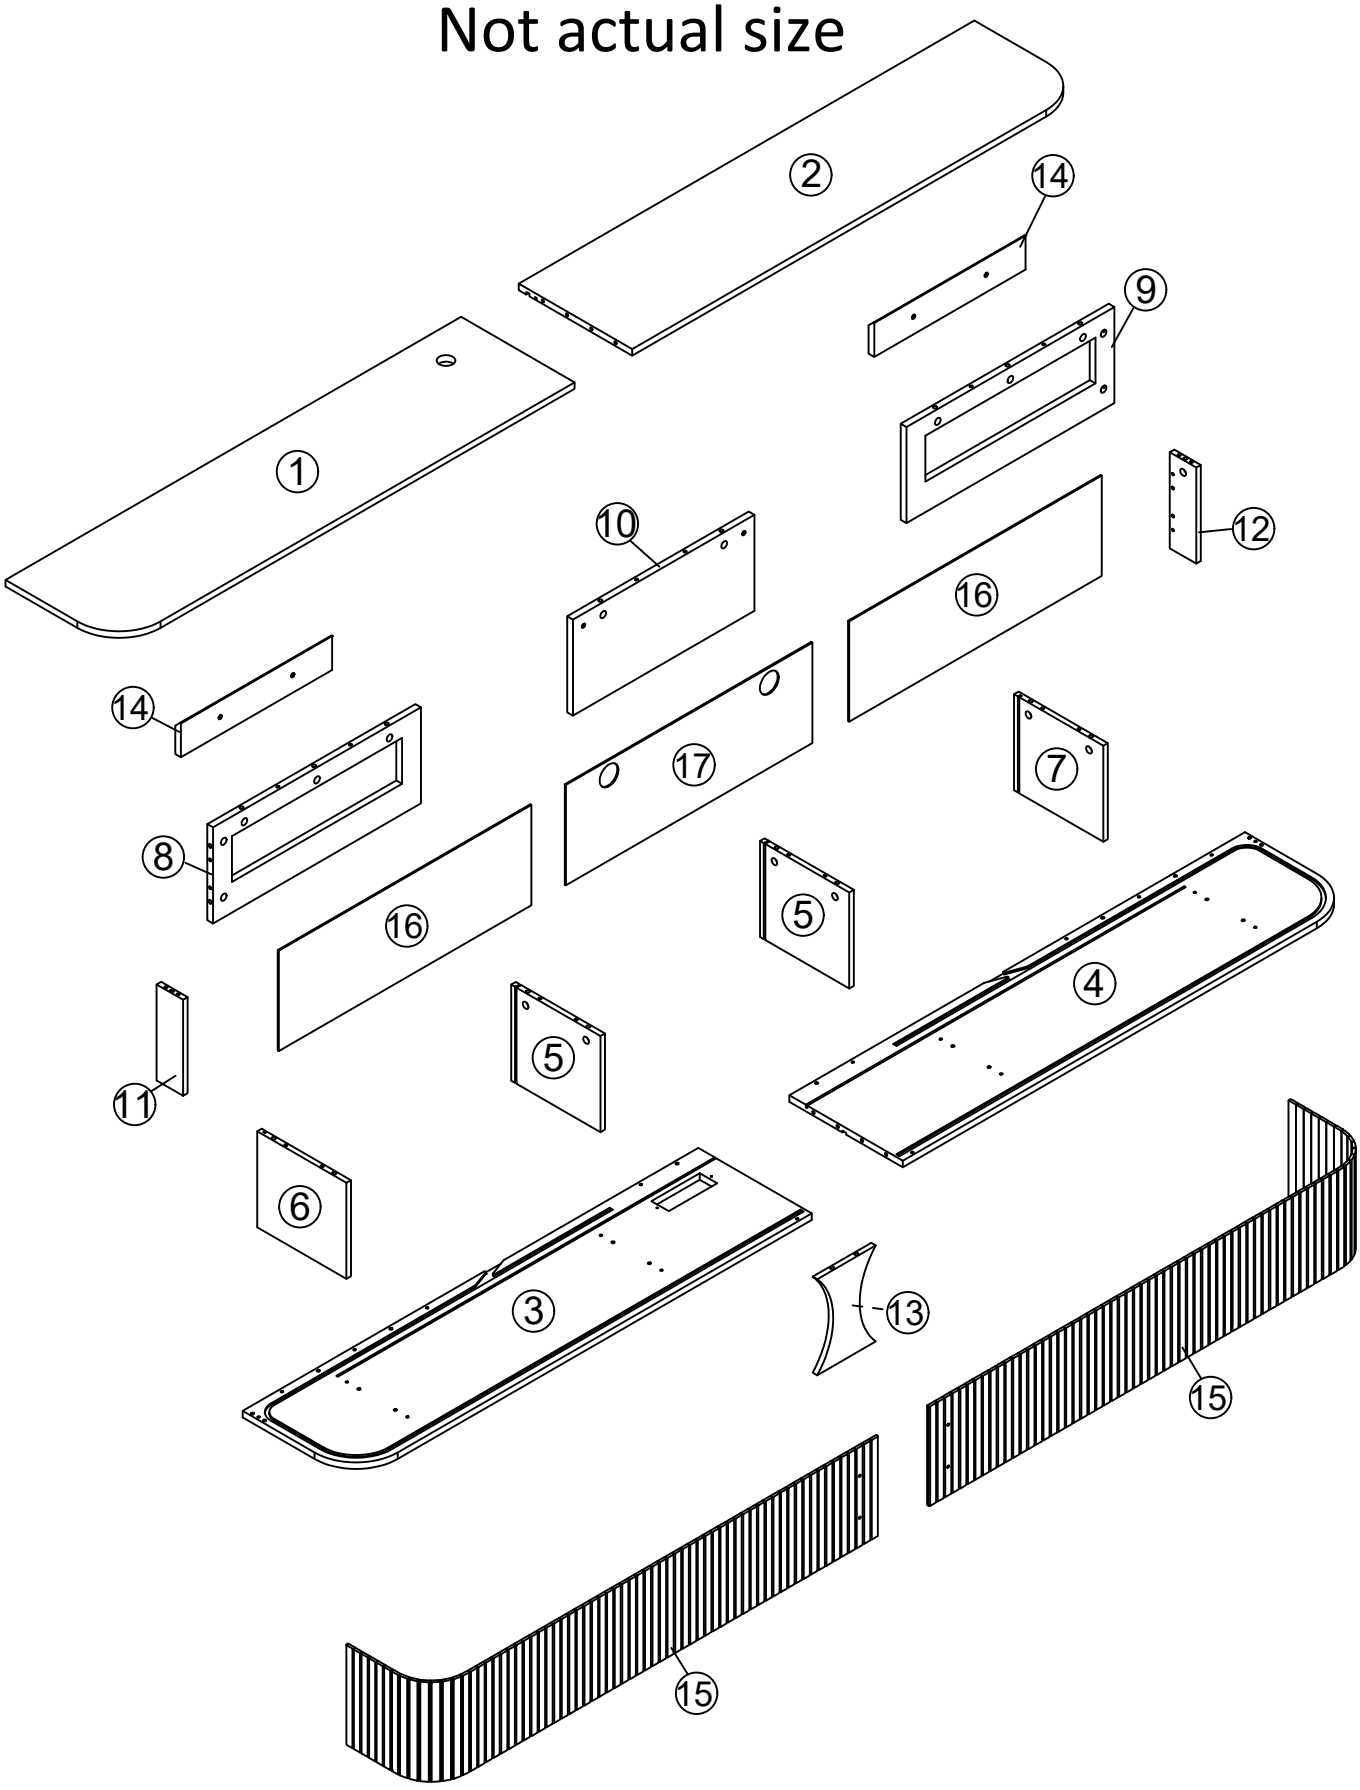


STEP1

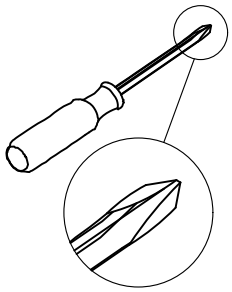


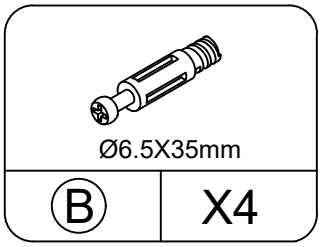


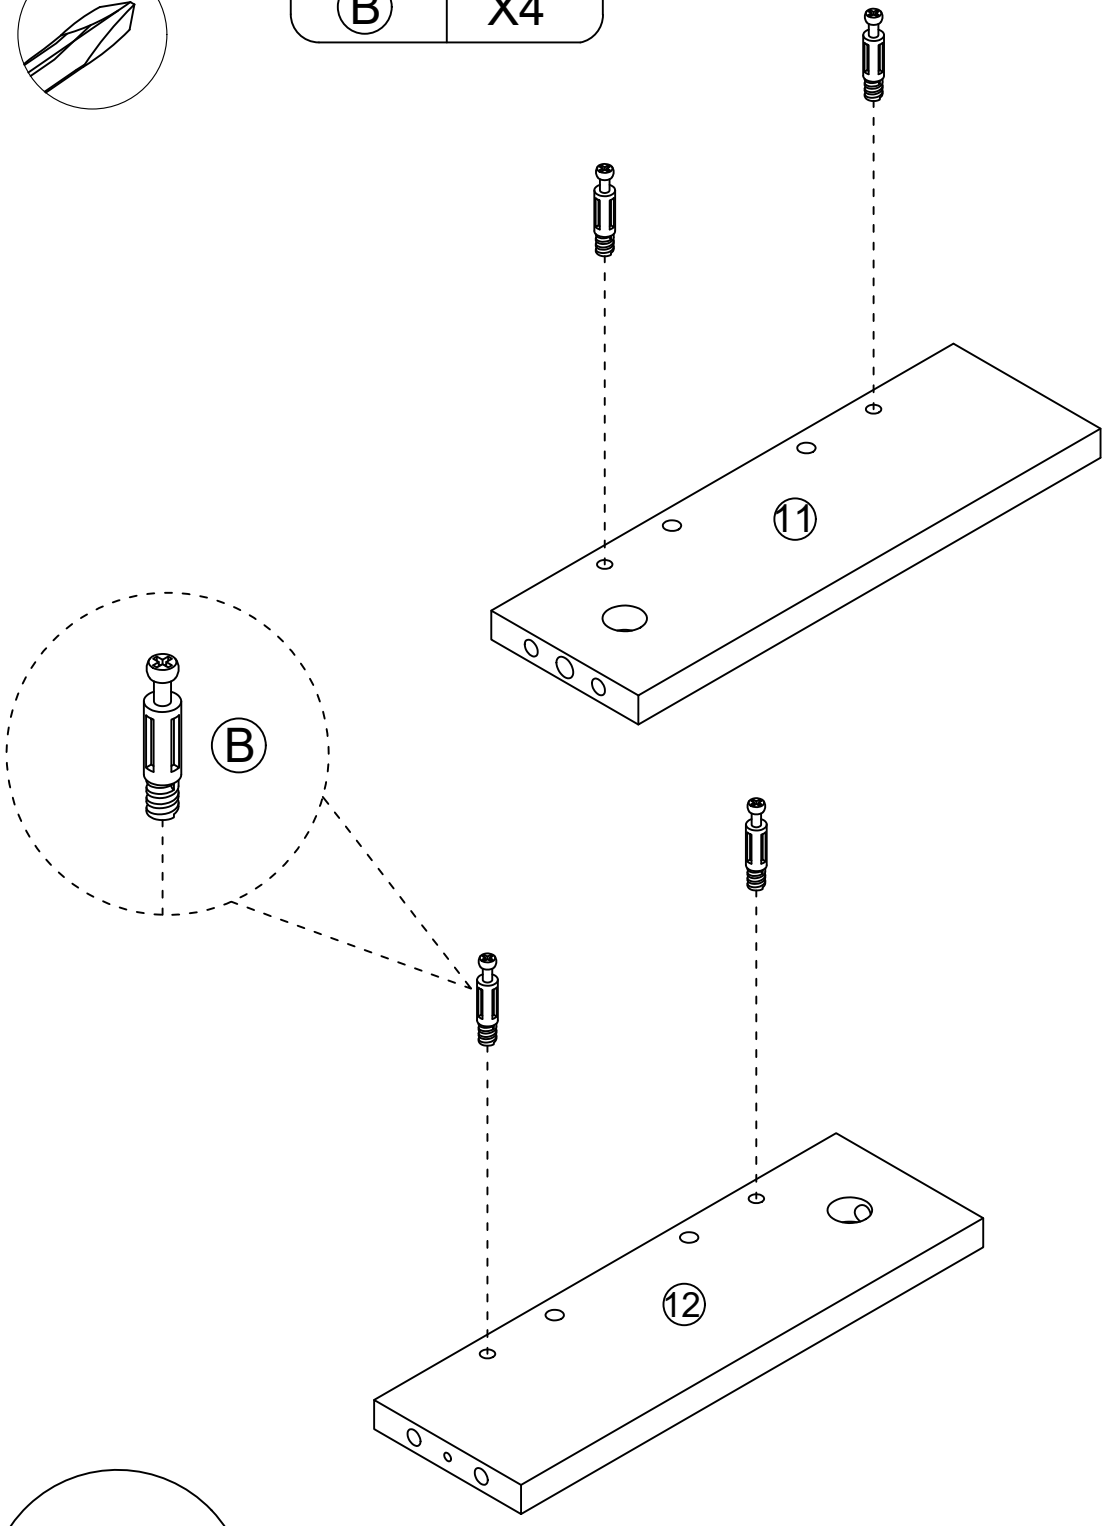


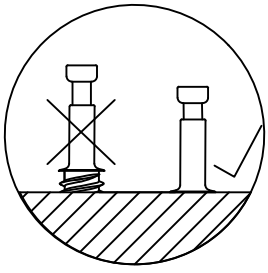


STEP2

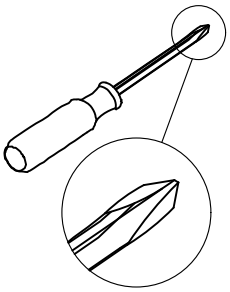


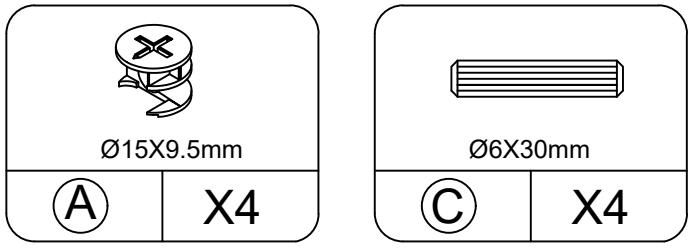

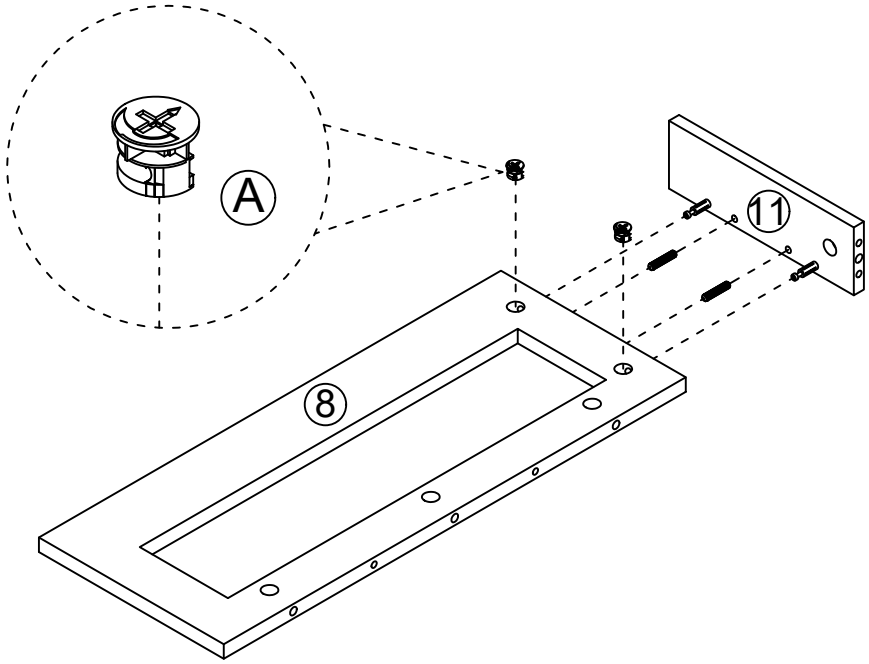

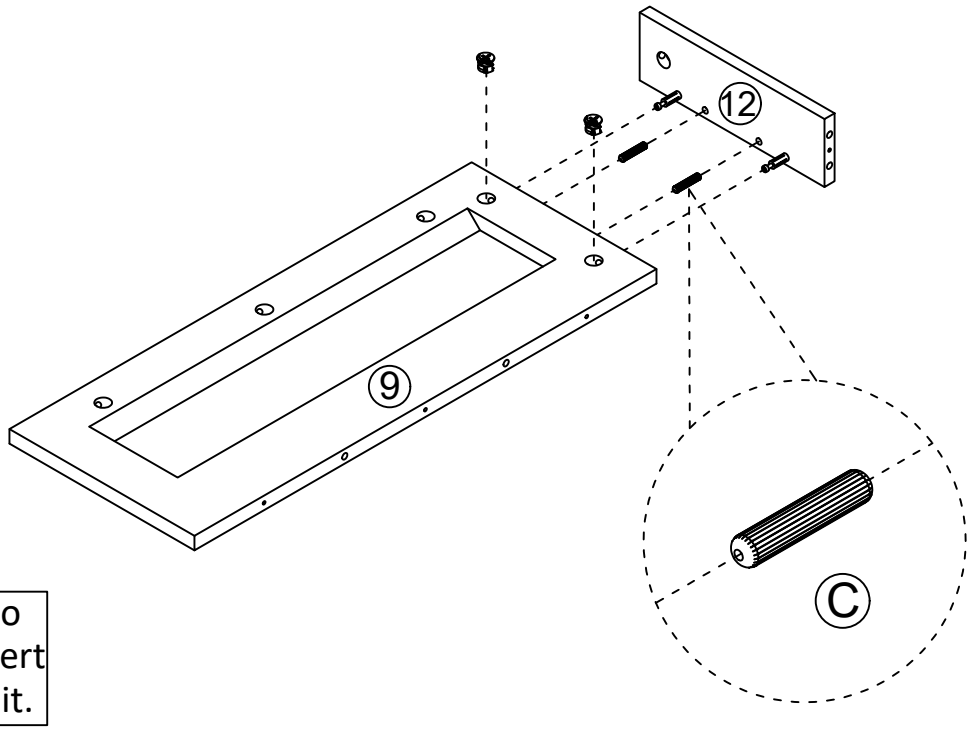



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

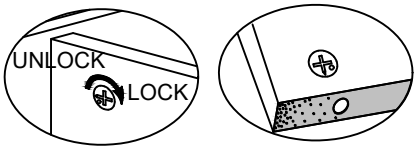



Proper orientation of CAM LOCK


STEP3

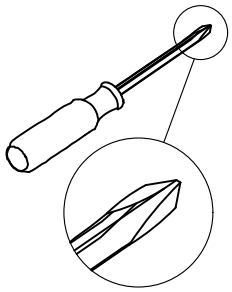

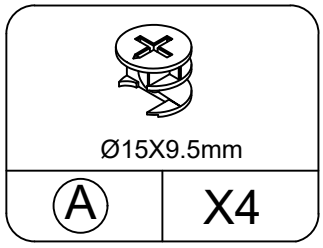


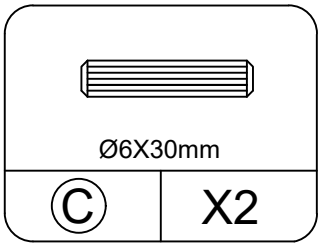

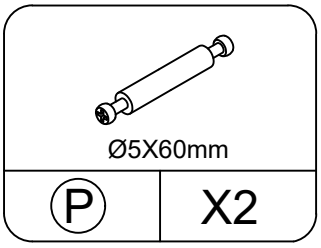

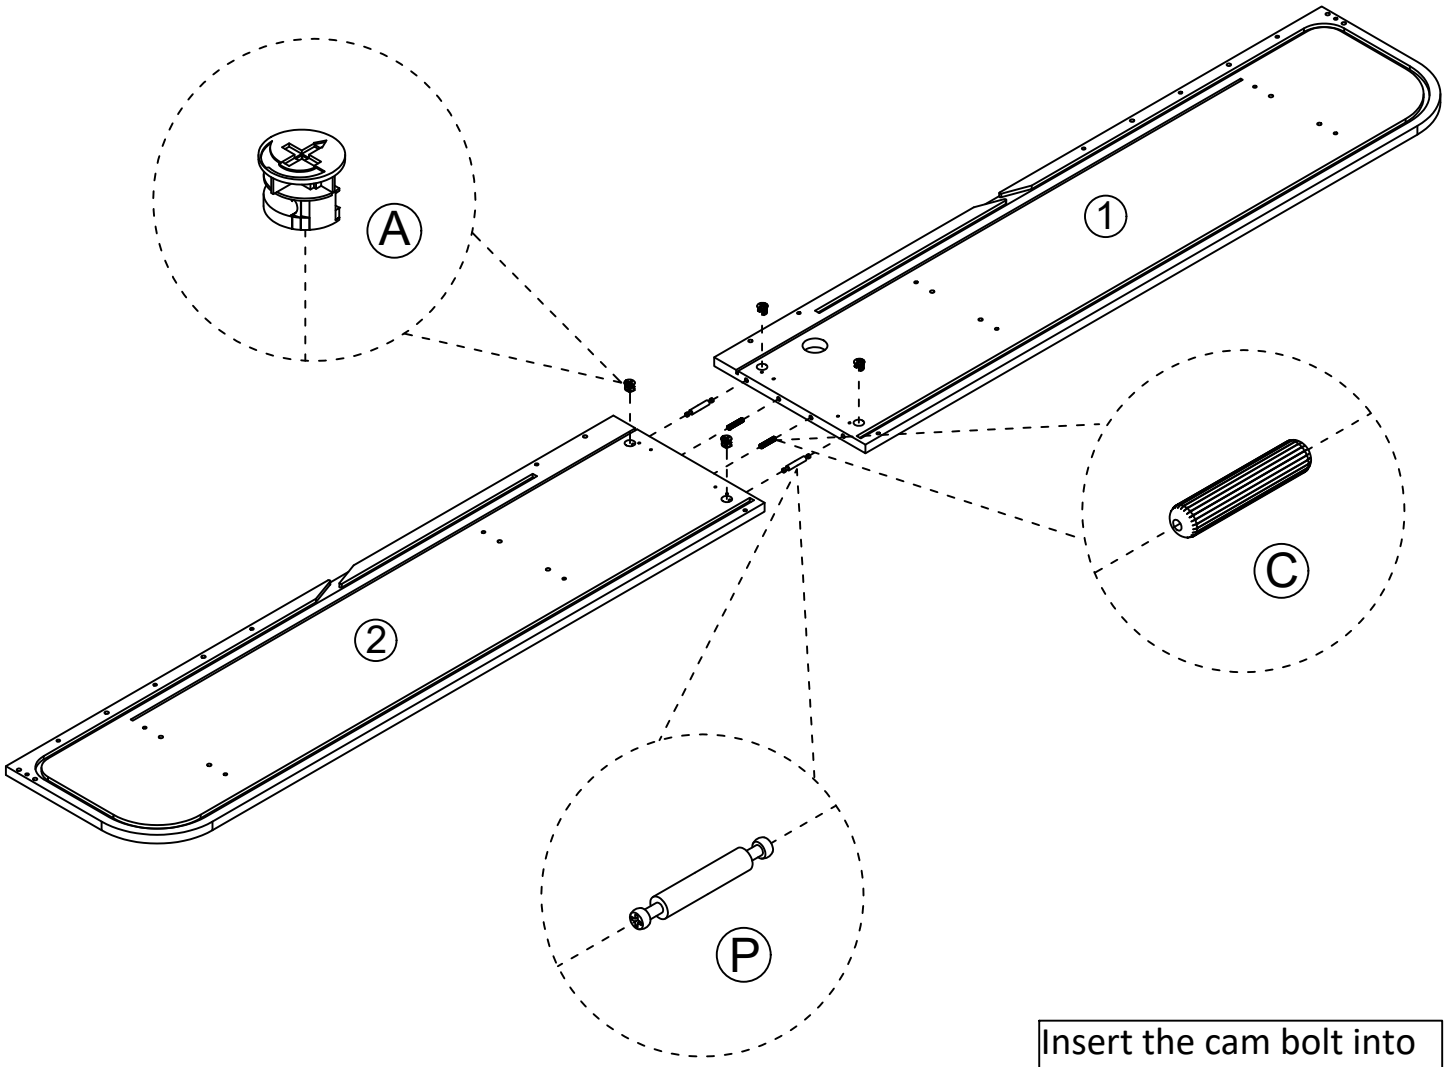



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

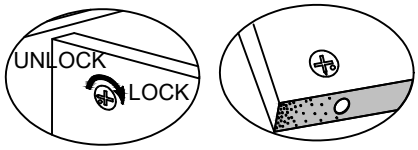



Proper orientation of CAM LOCK

STEP4

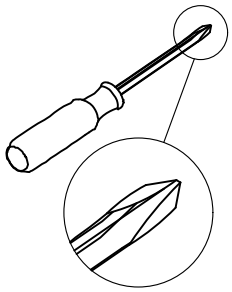


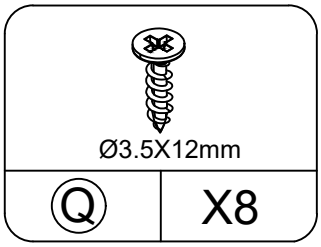


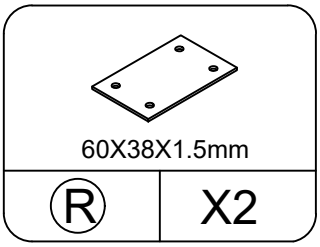


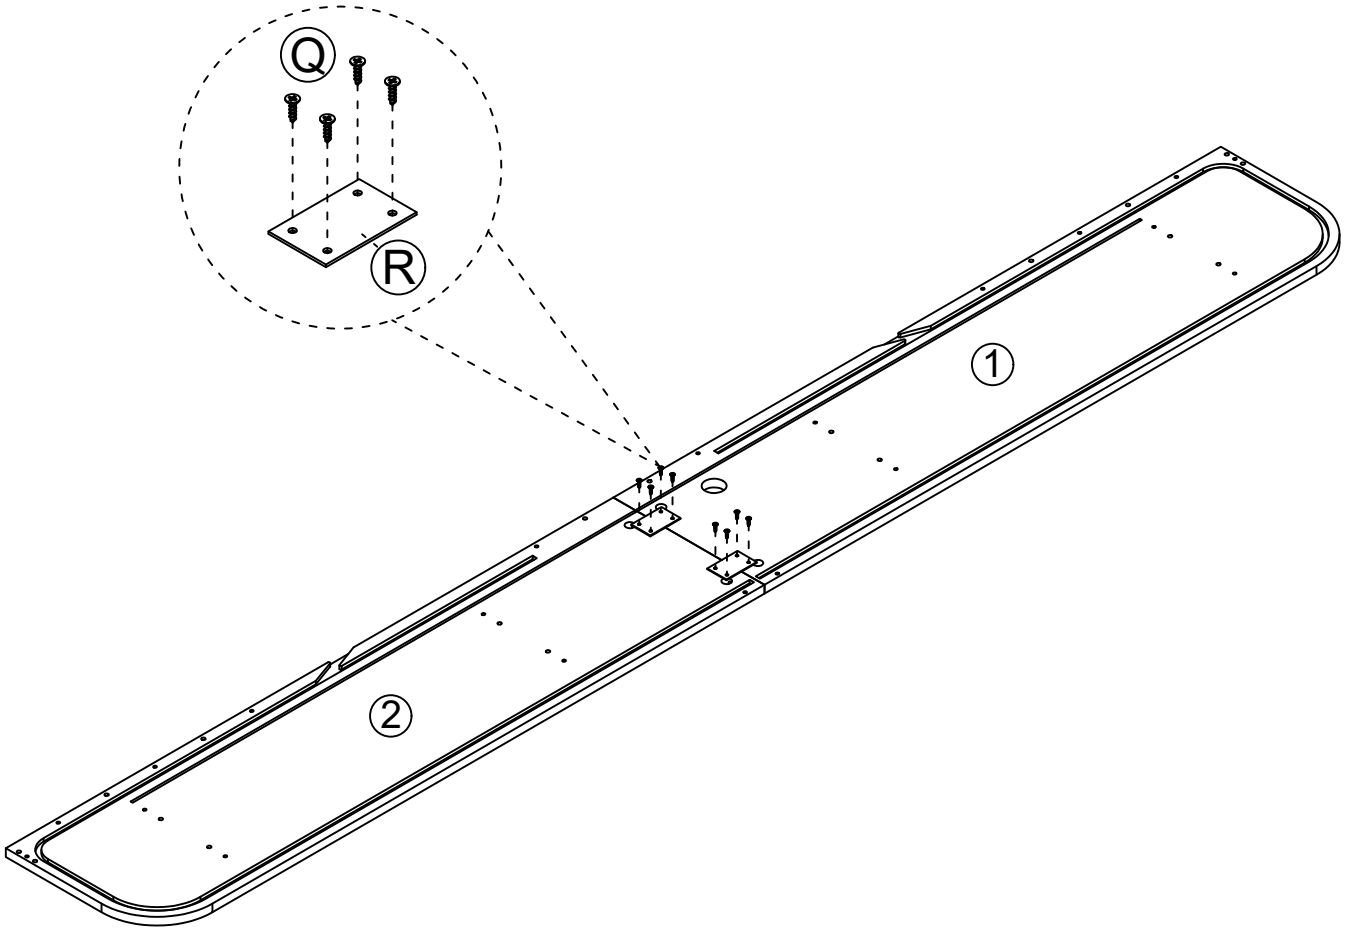


STEP5

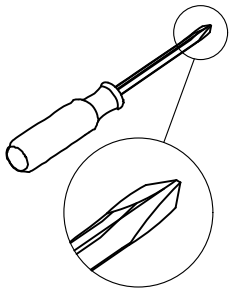


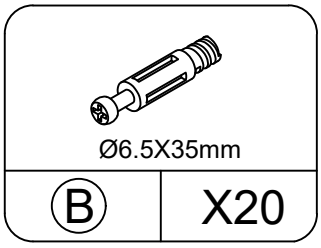


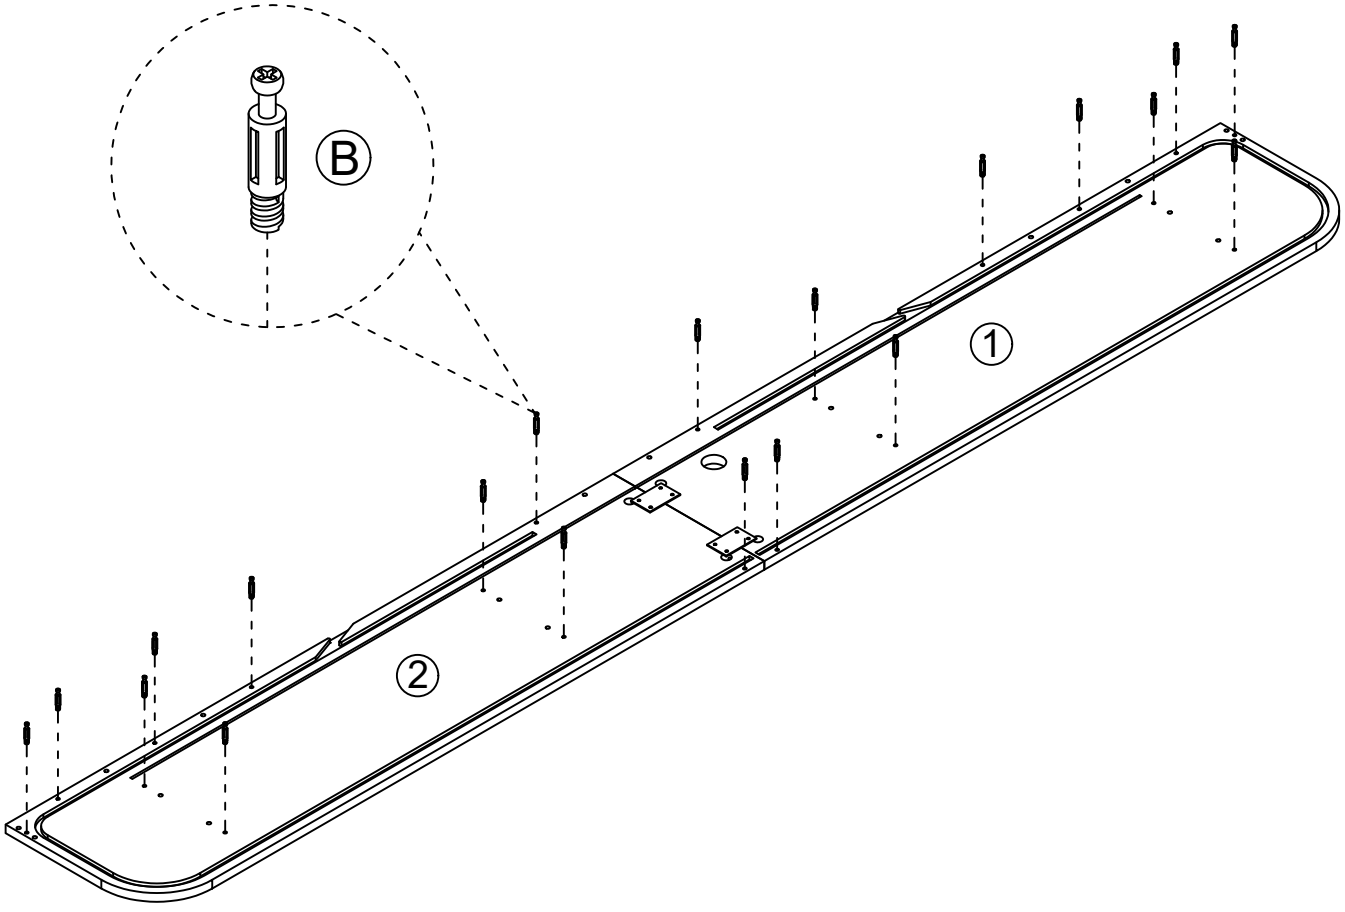


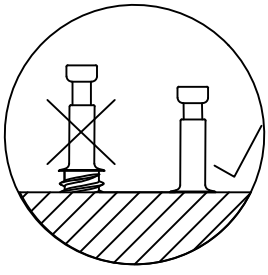


STEP6

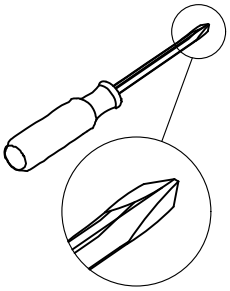


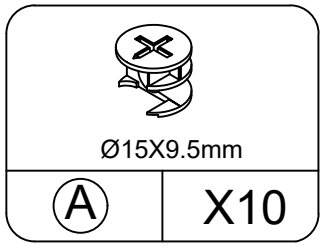

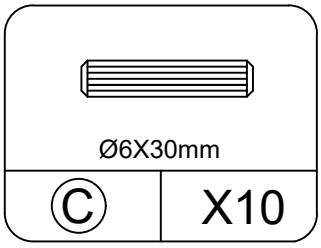

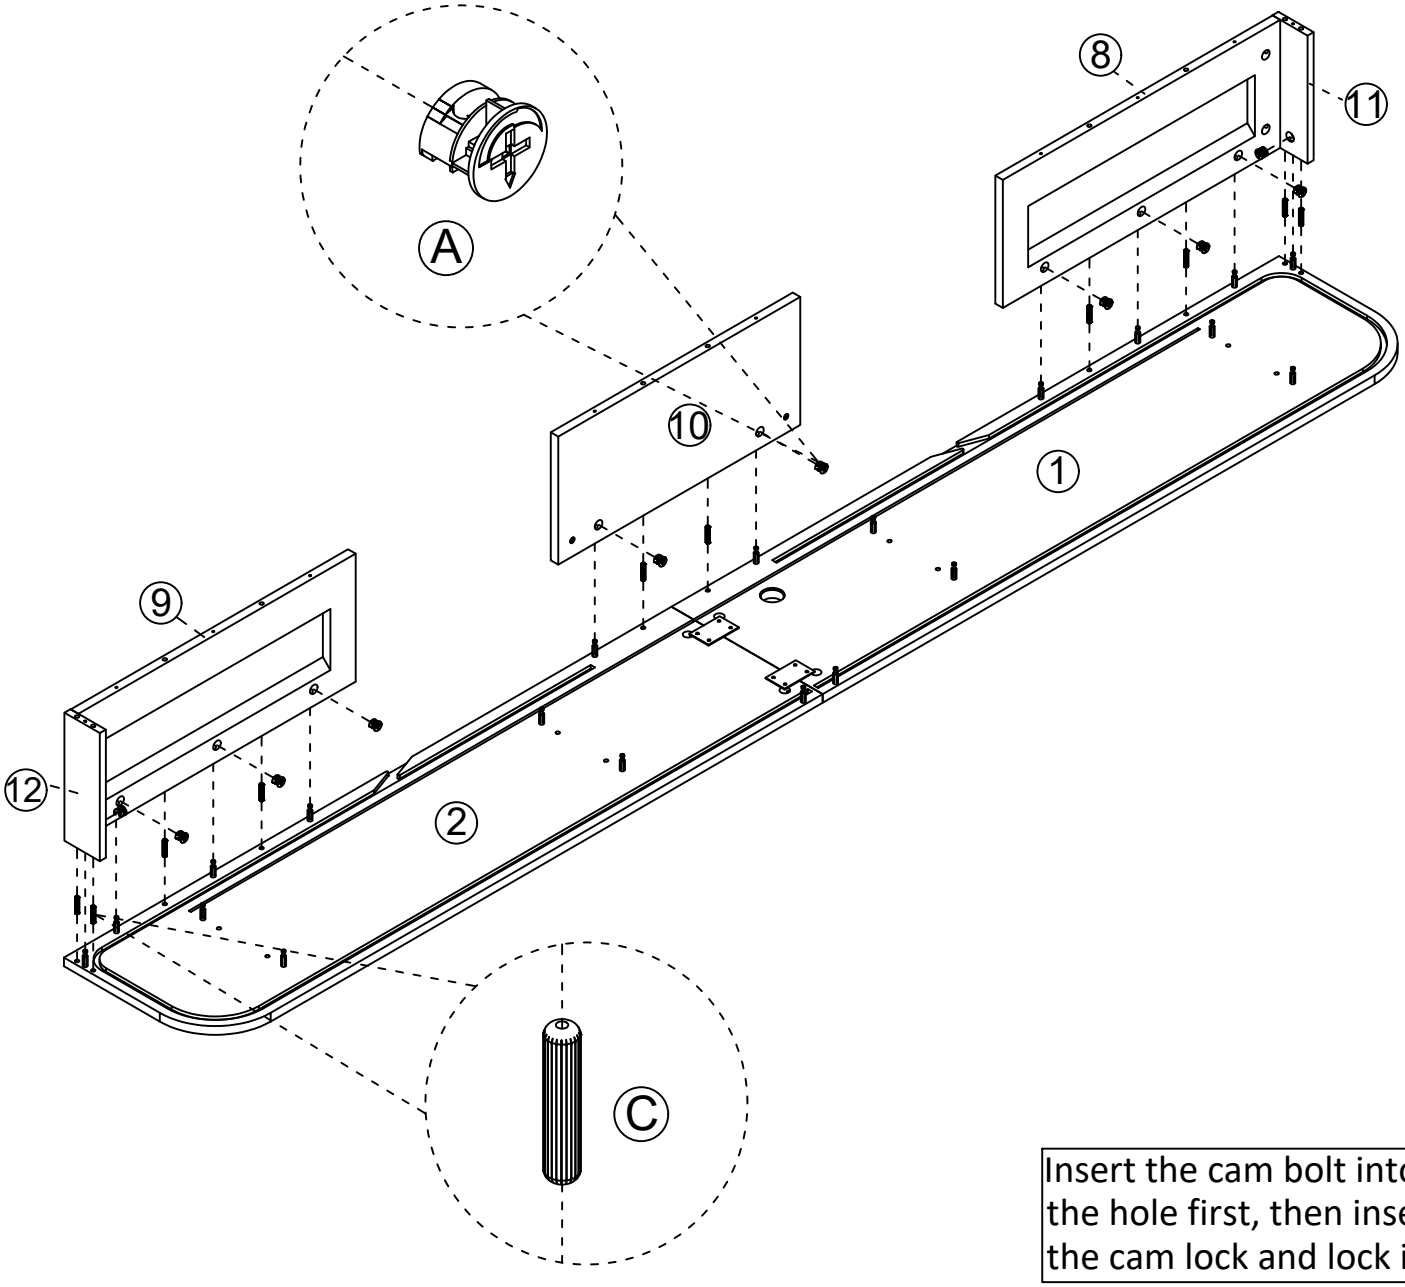



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

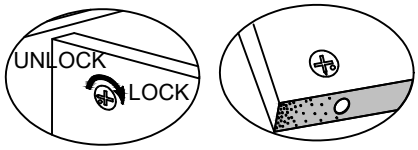



Proper orientation of CAM LOCK

STEP7

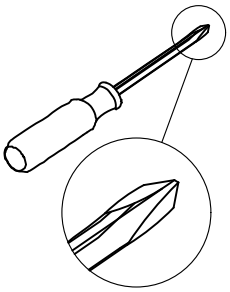


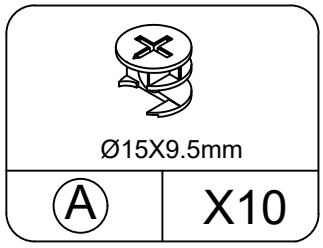

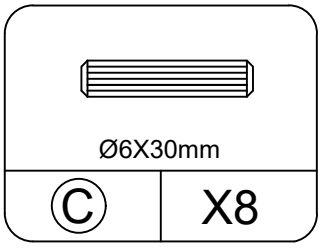

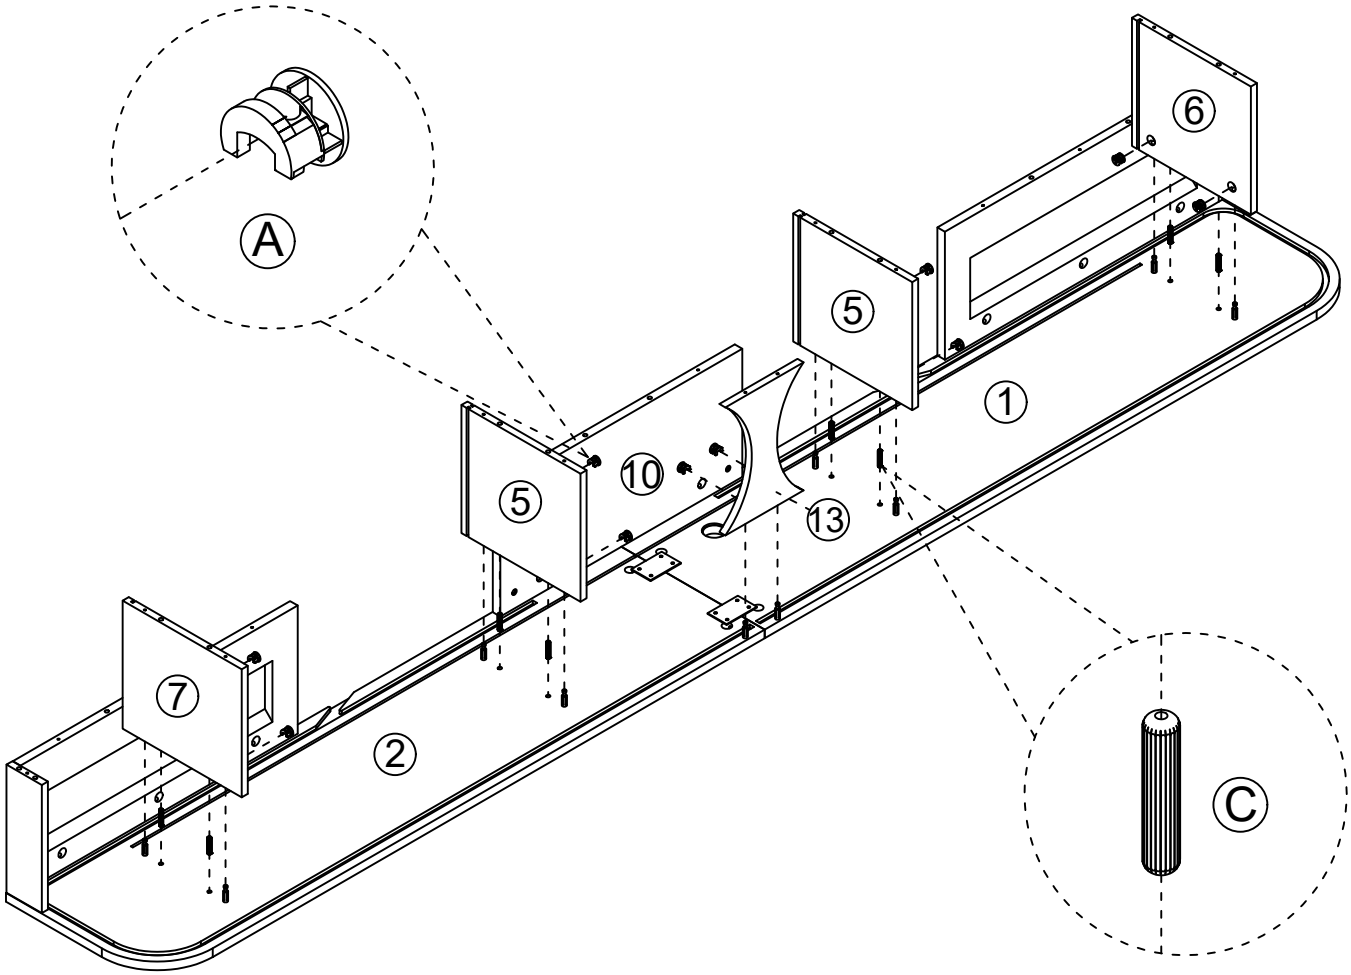



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

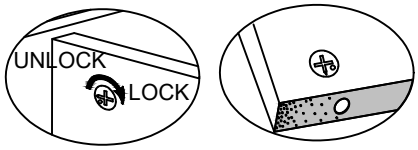


Proper orientation of CAM LOCK

STEP8

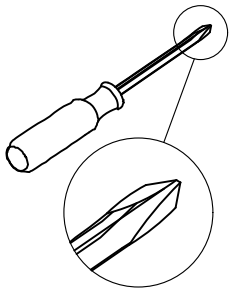

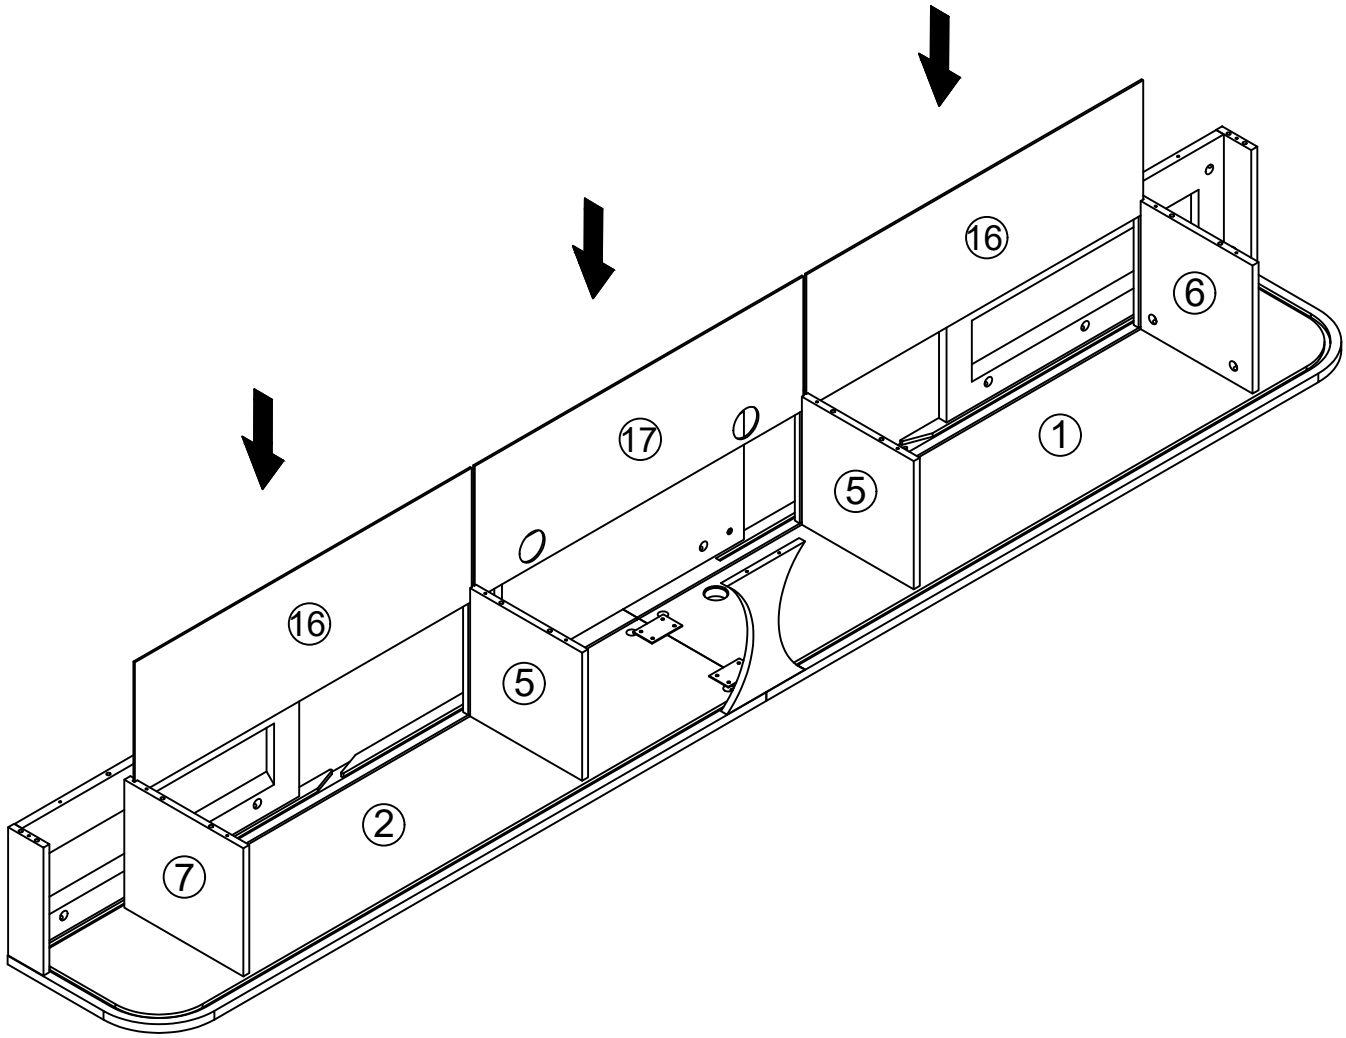

STEP9

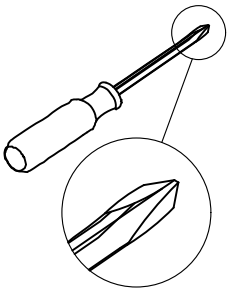





Ø15X9.5mm	
A	X4




Ø6X30mm	
C	X2



Ø5X60mm	
P	X2

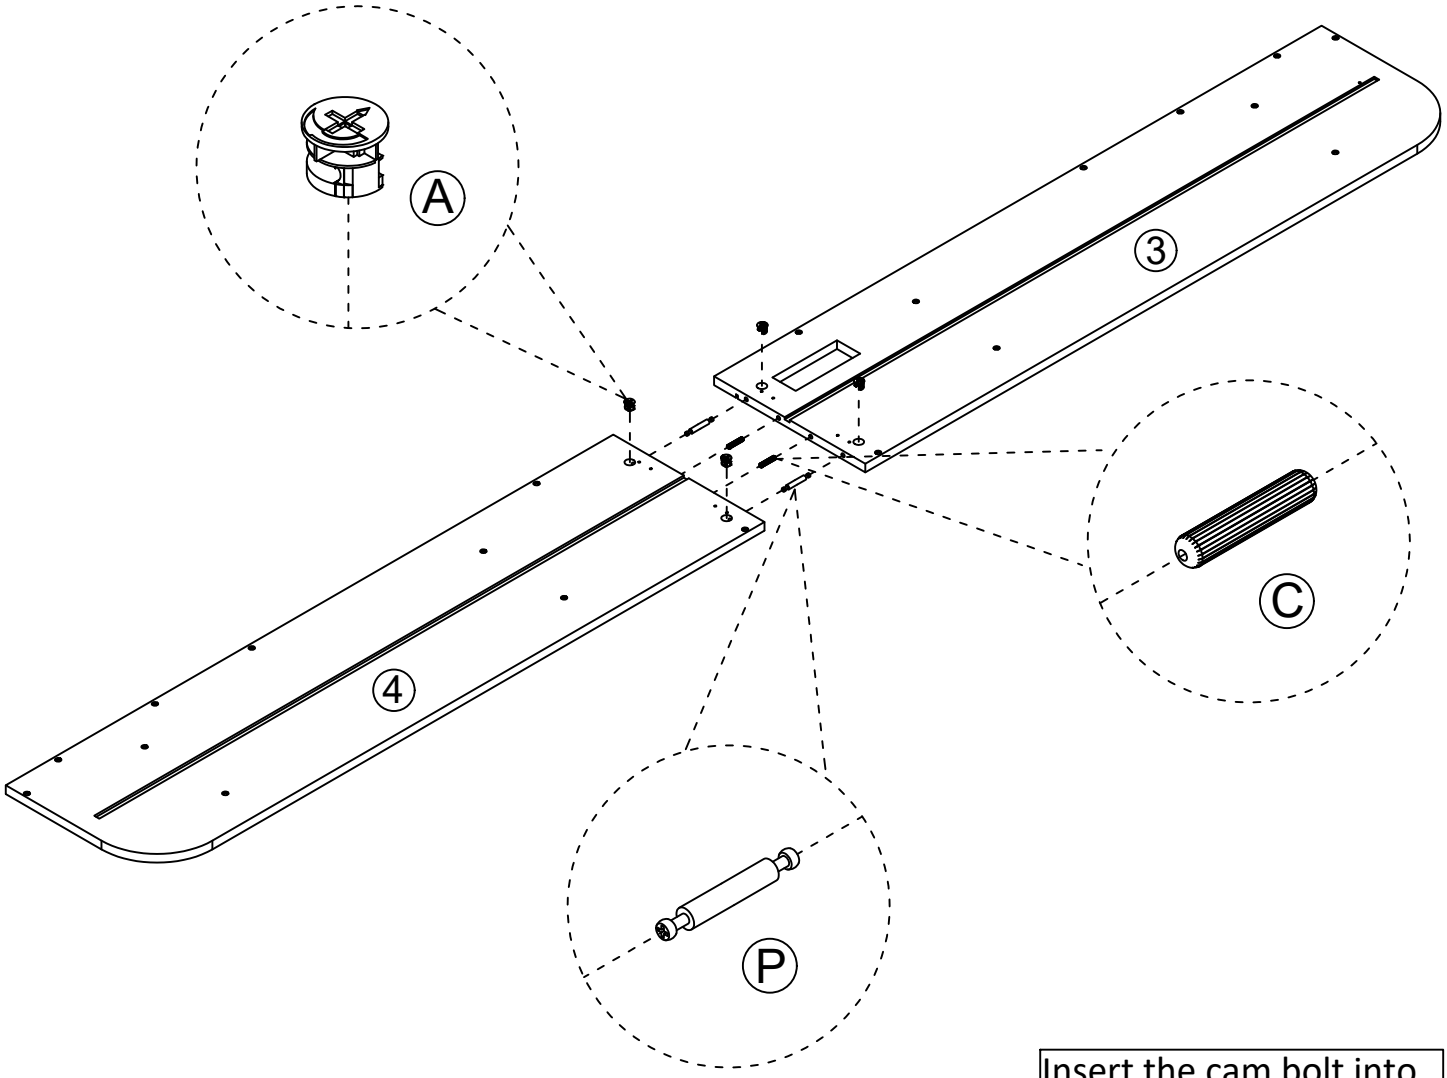



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

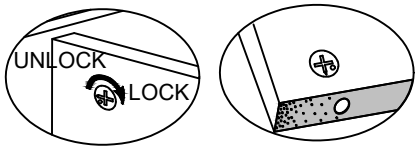

Proper orientation of CAM LOCK


STEP10

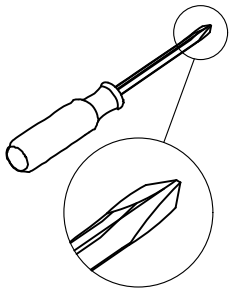

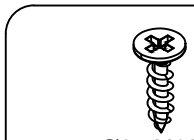


Ø3.5X12mm

Q X8





60X38X1.5mm


R X2

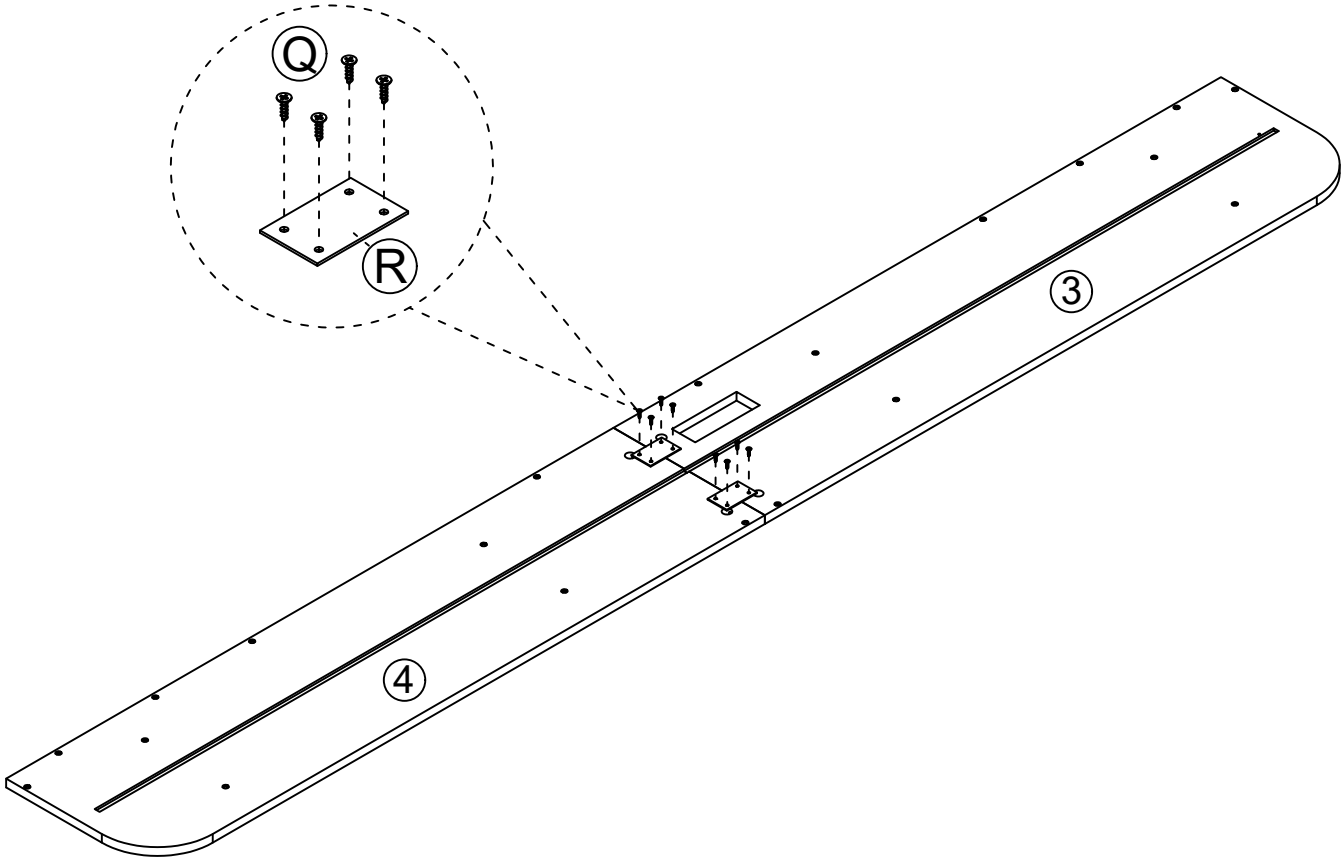



STEP11

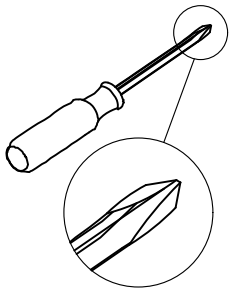

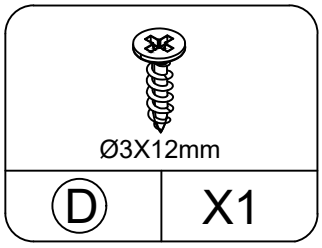


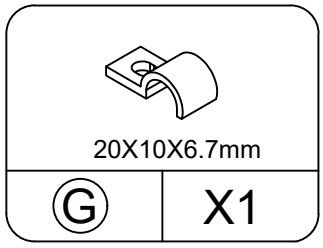


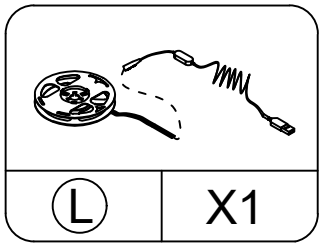


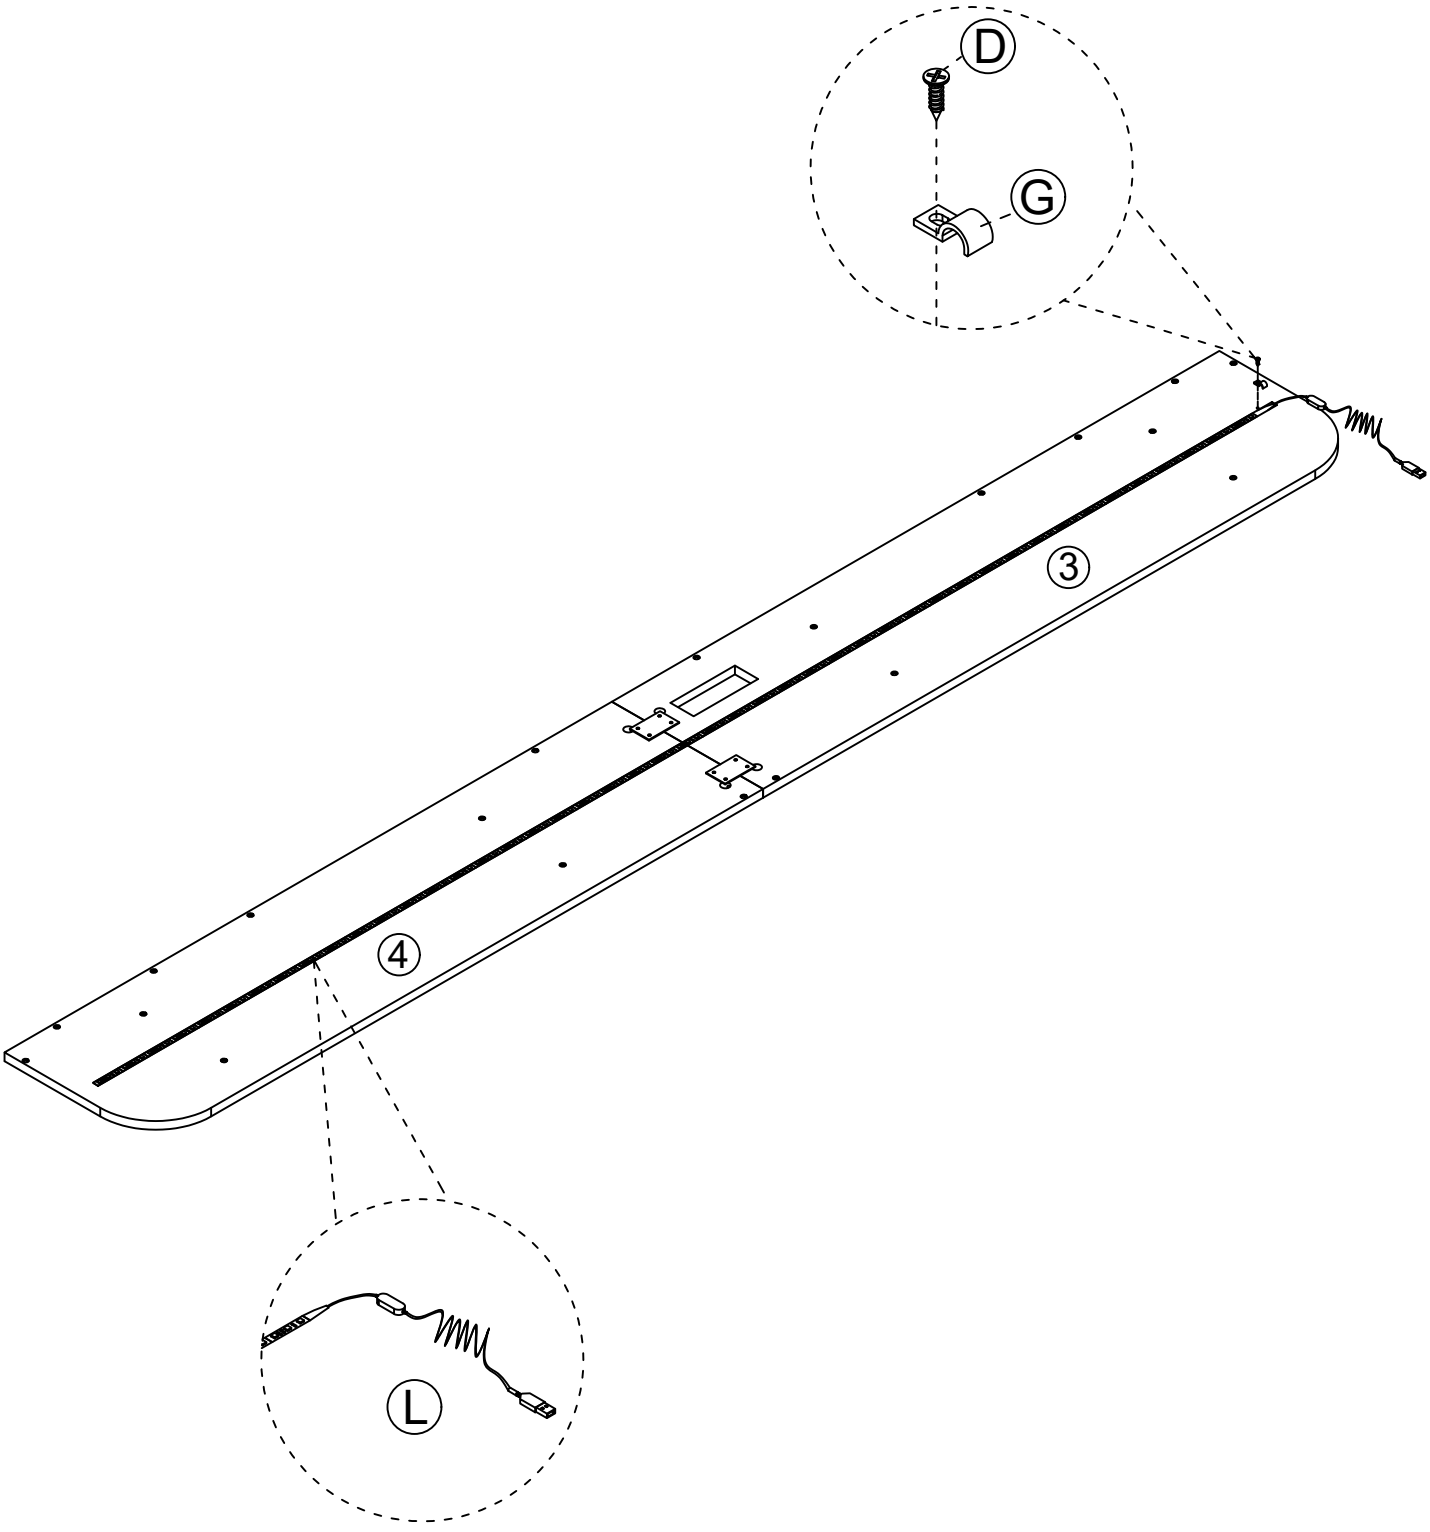


STEP12

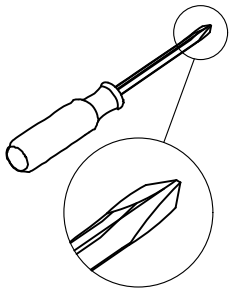


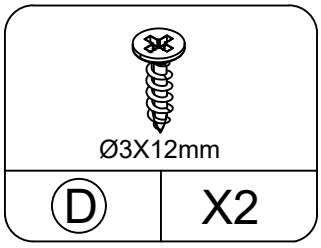


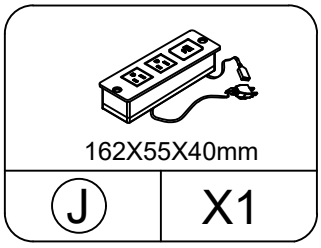


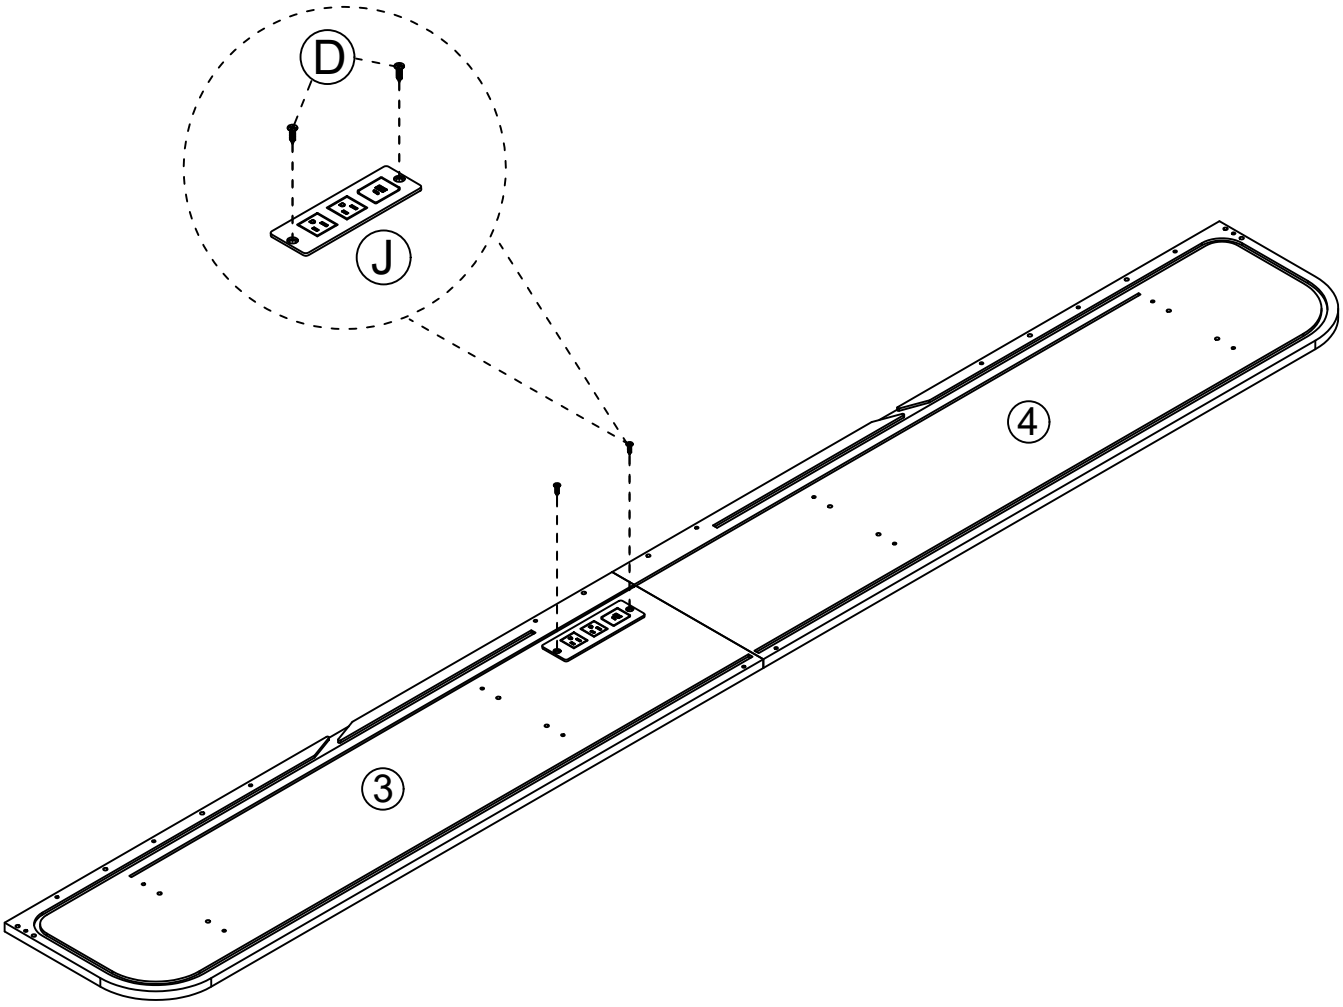



STEP13

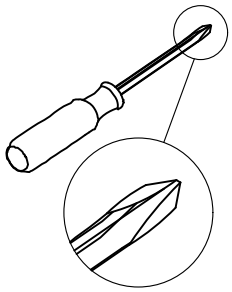

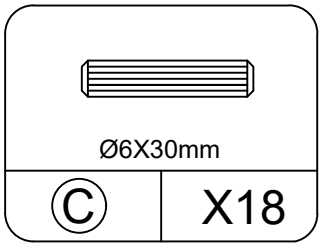


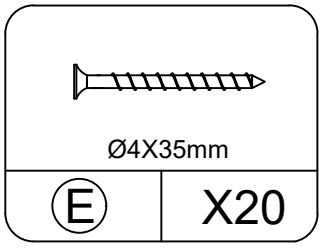

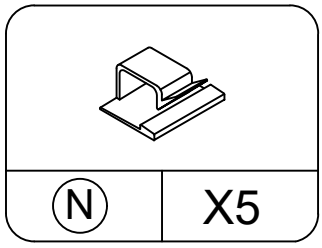


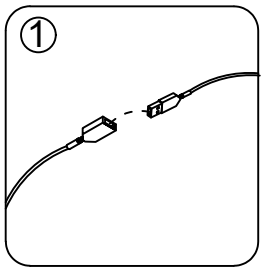


USB interface connection of the socket on the base plate and the USB interface of the LED strip

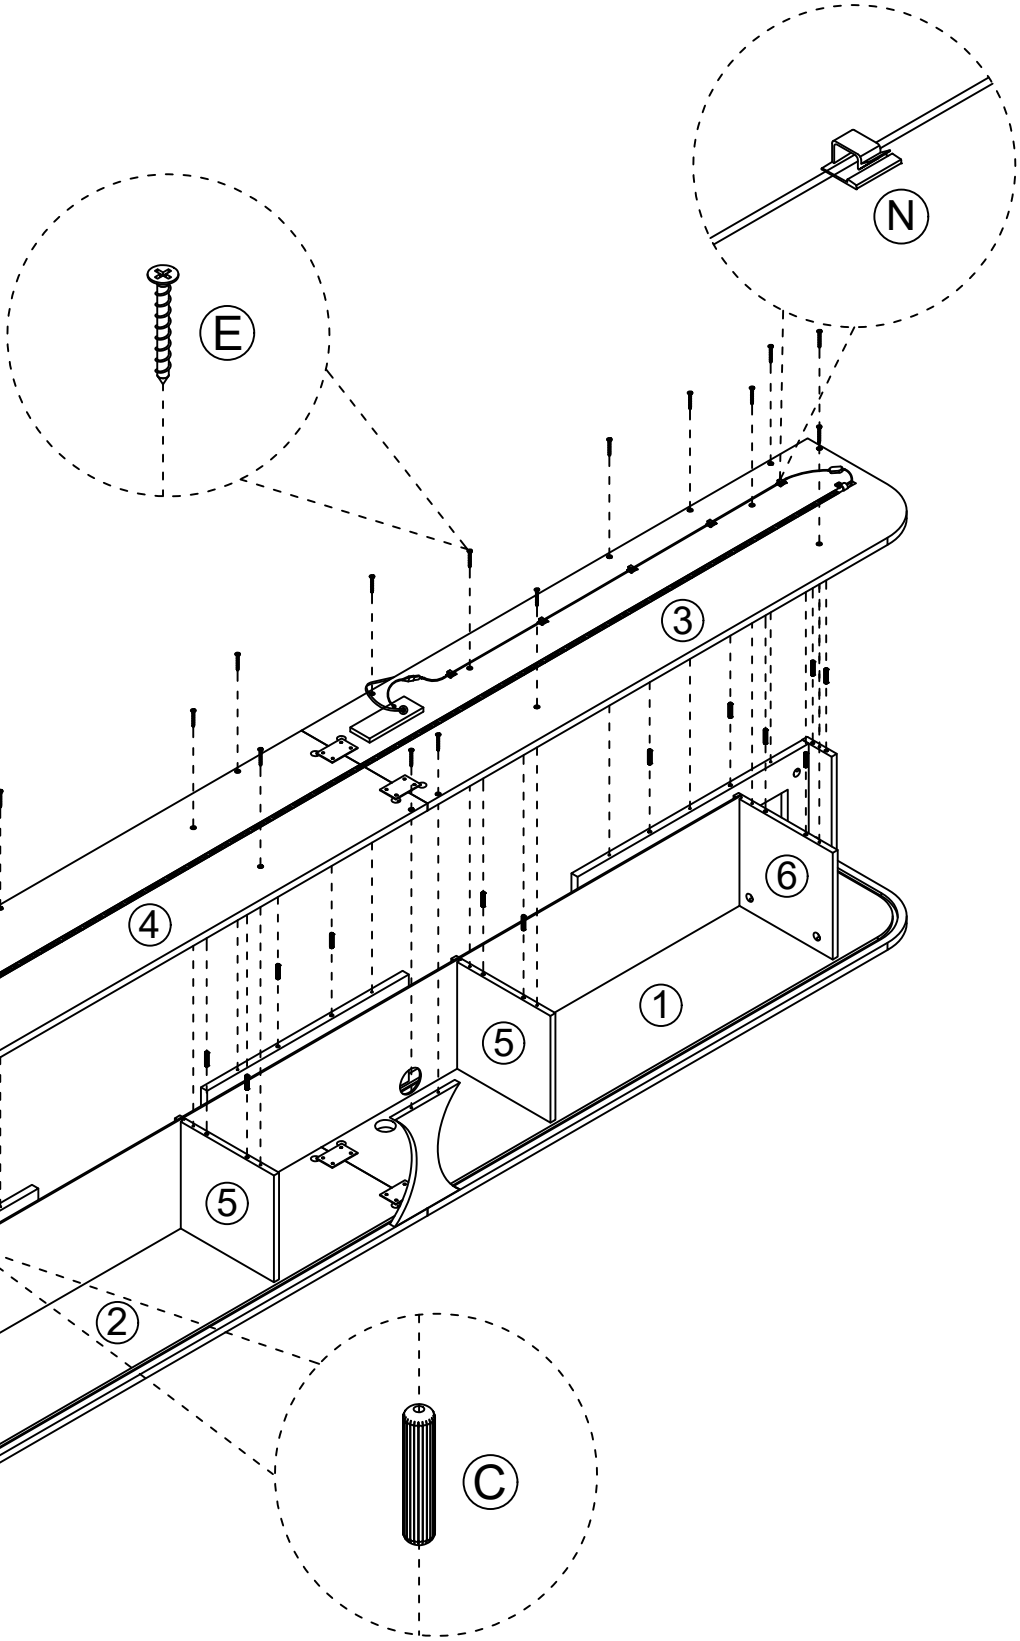


STEP14

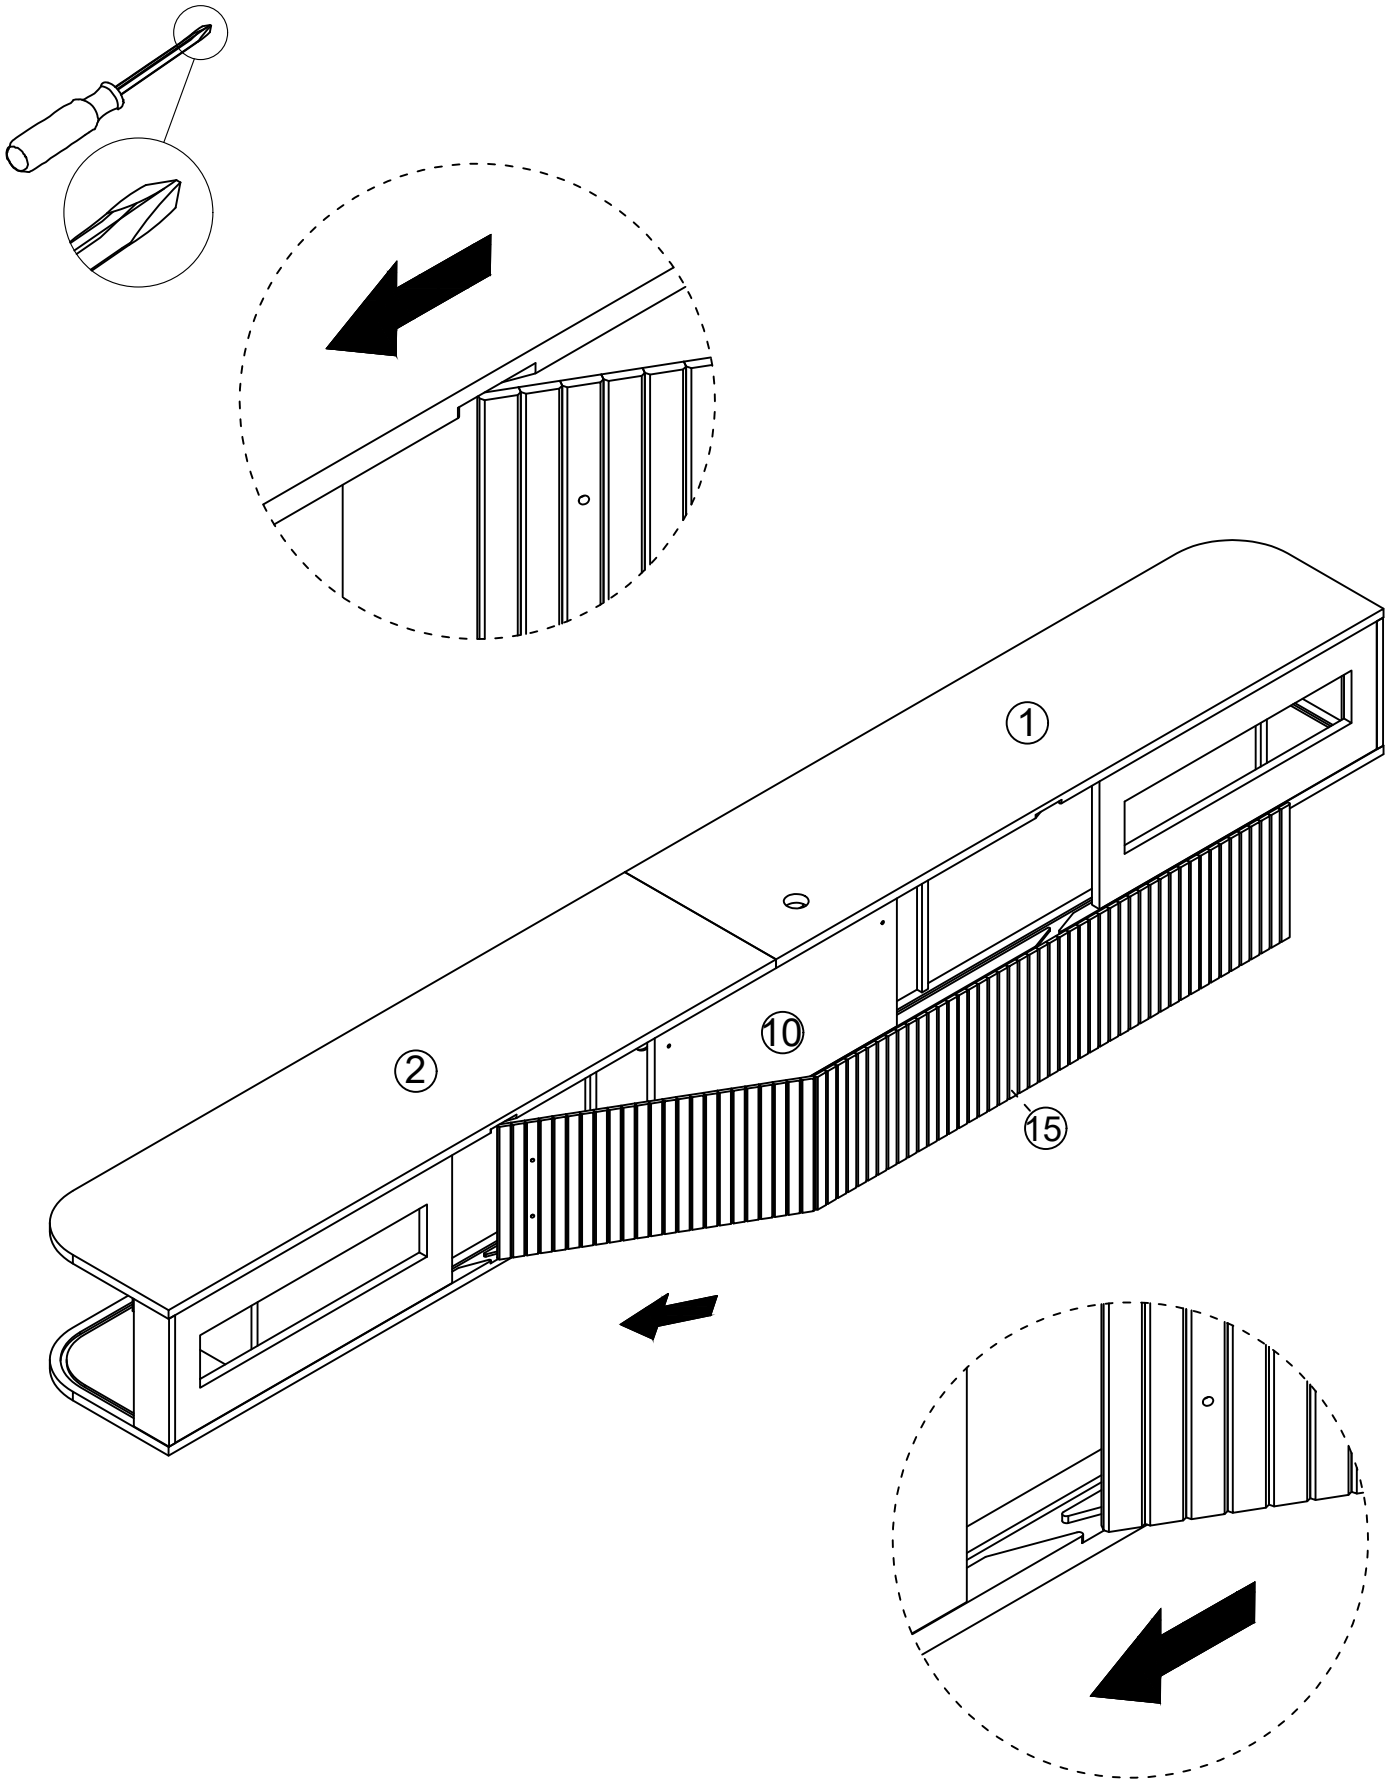



STEP15

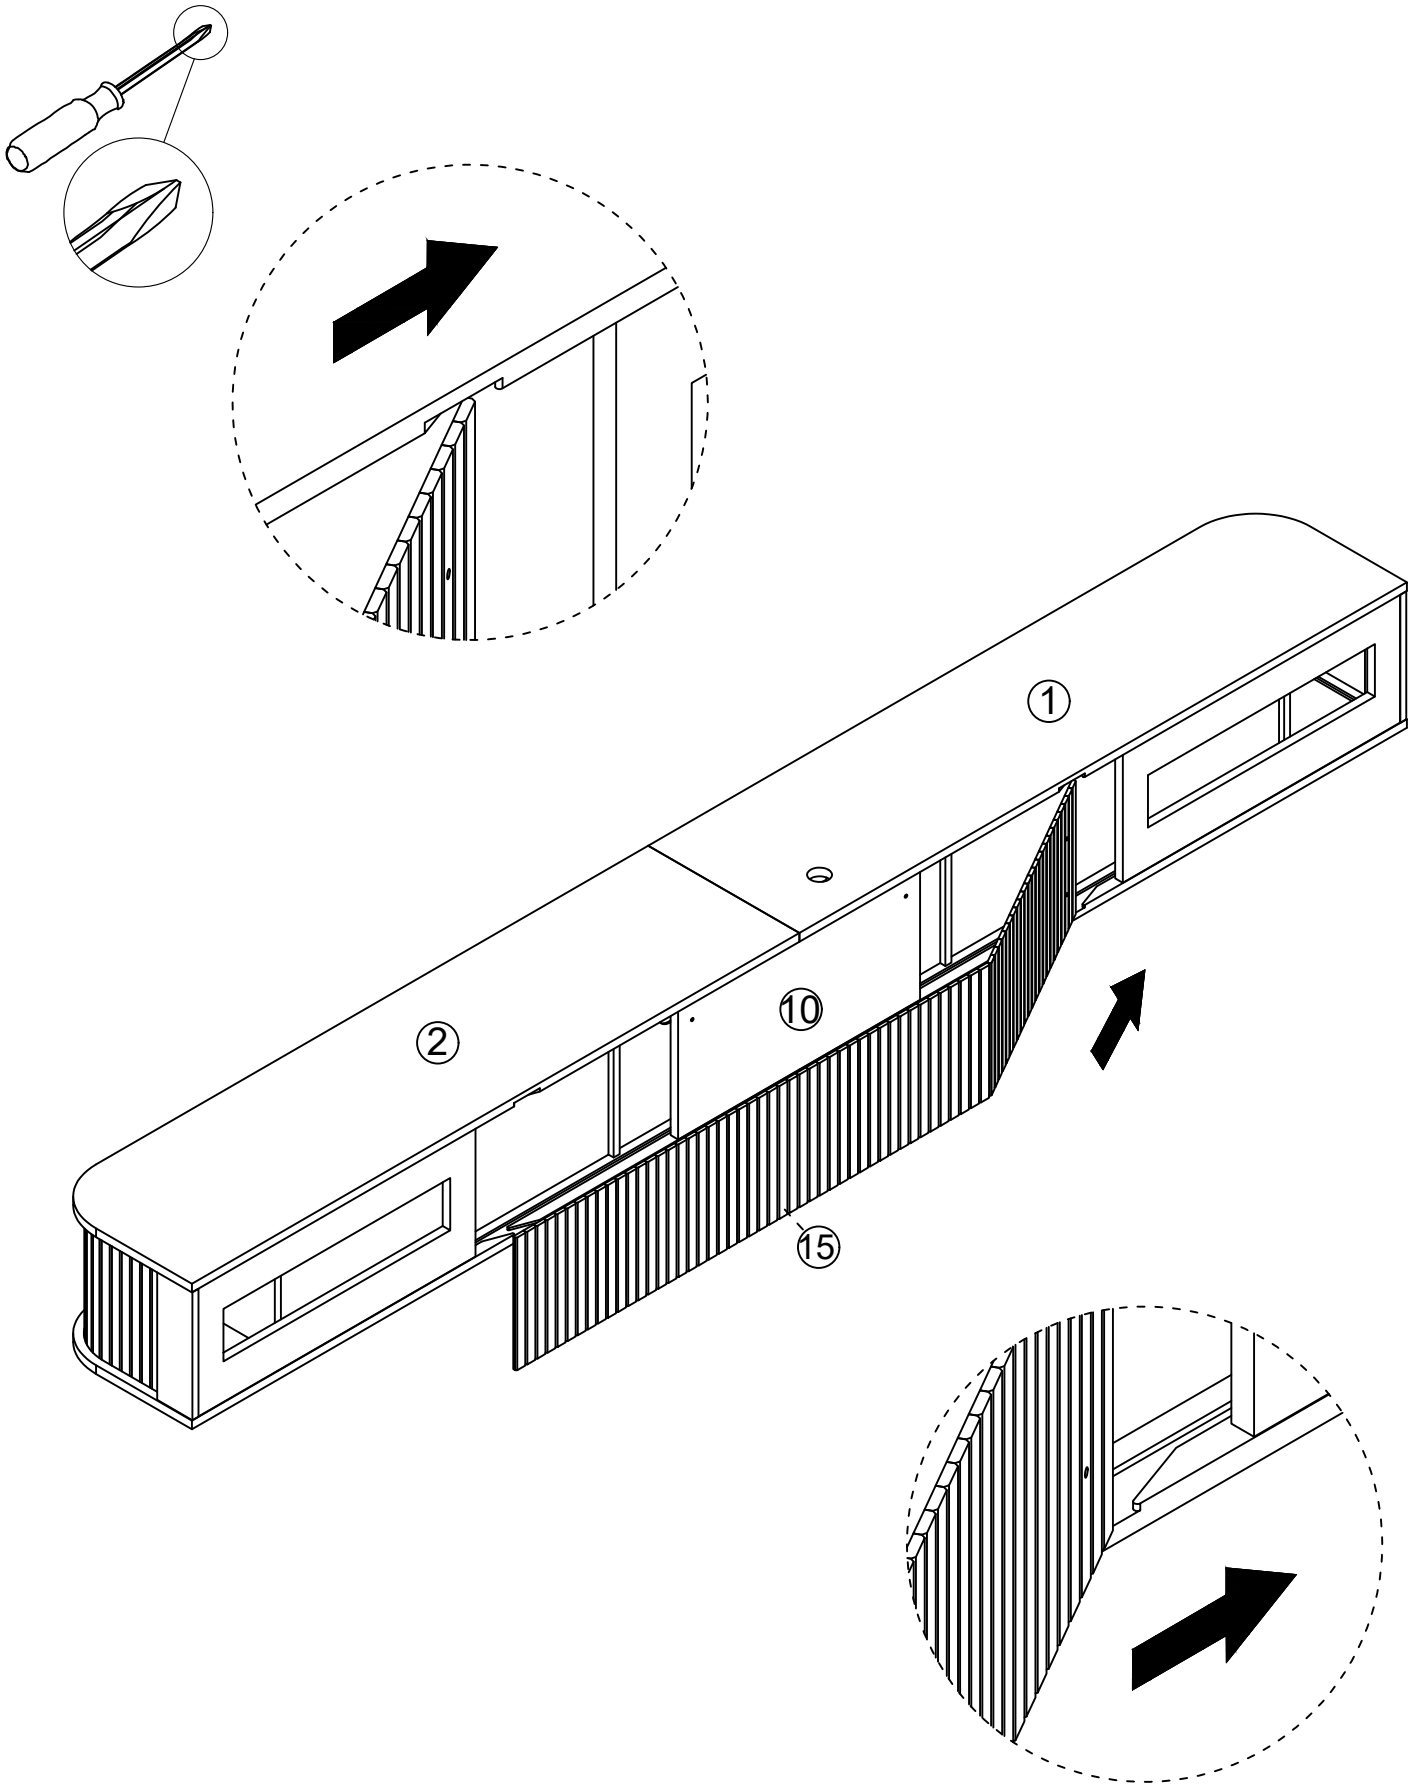


STEP16

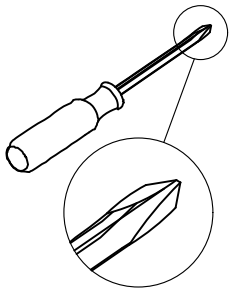


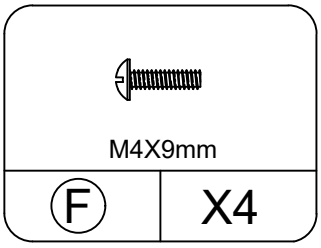


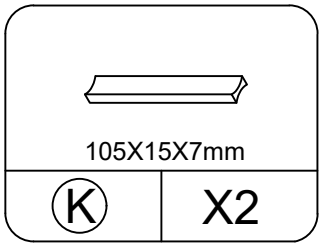


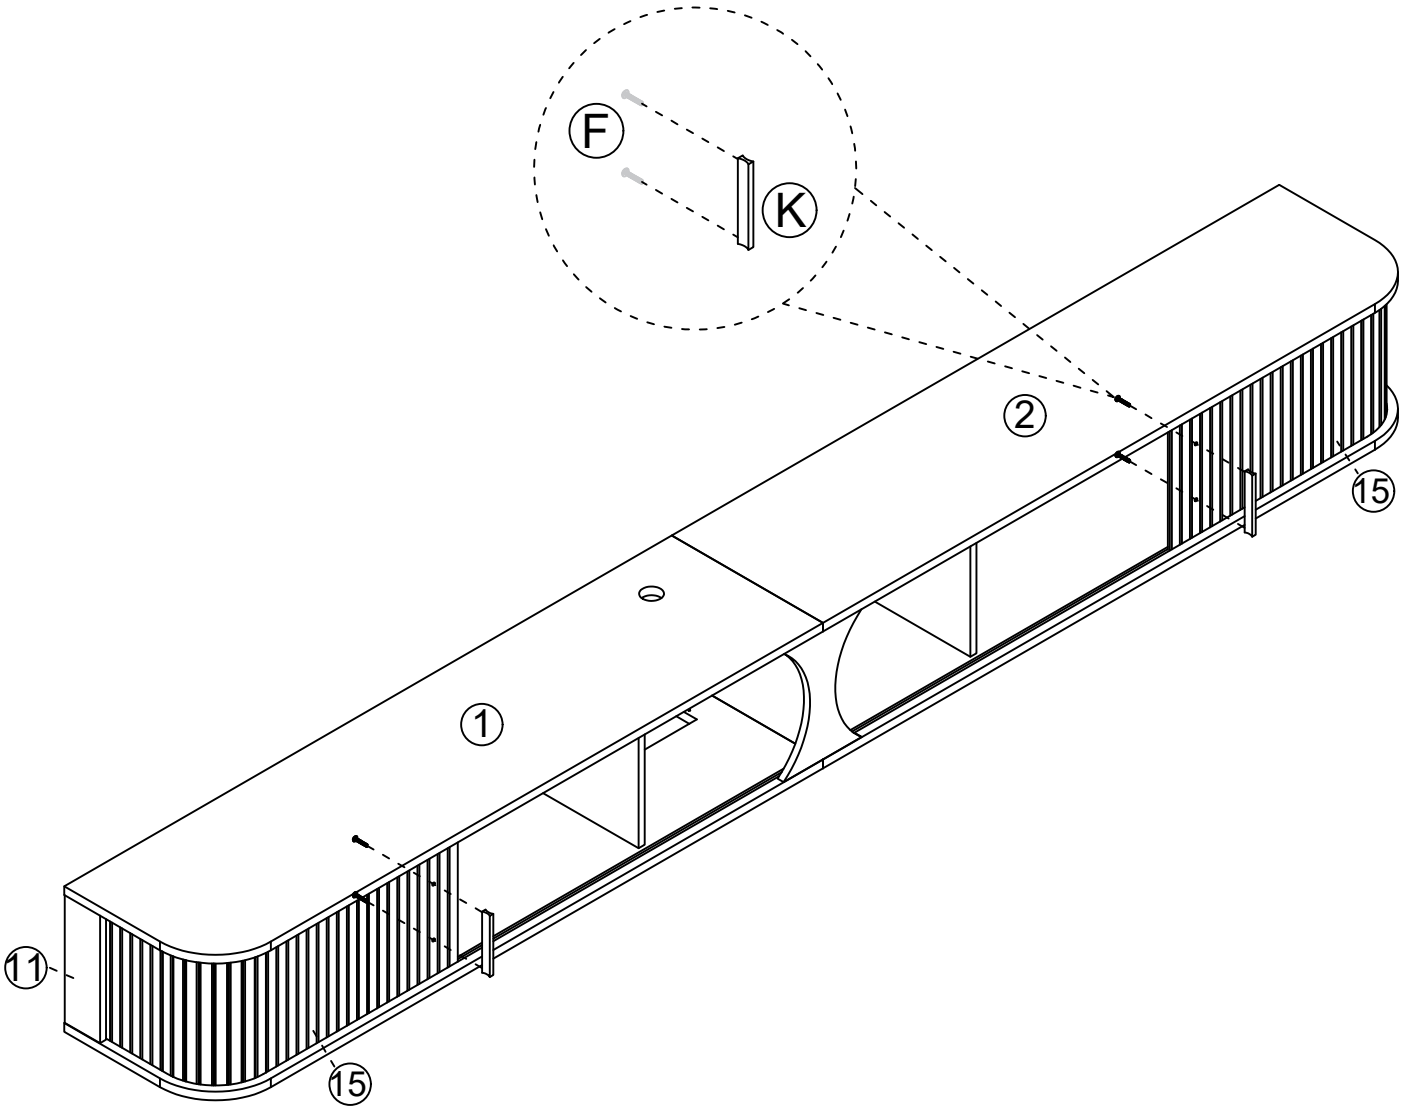


STEP17

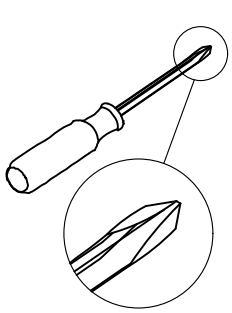


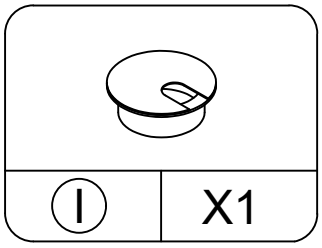


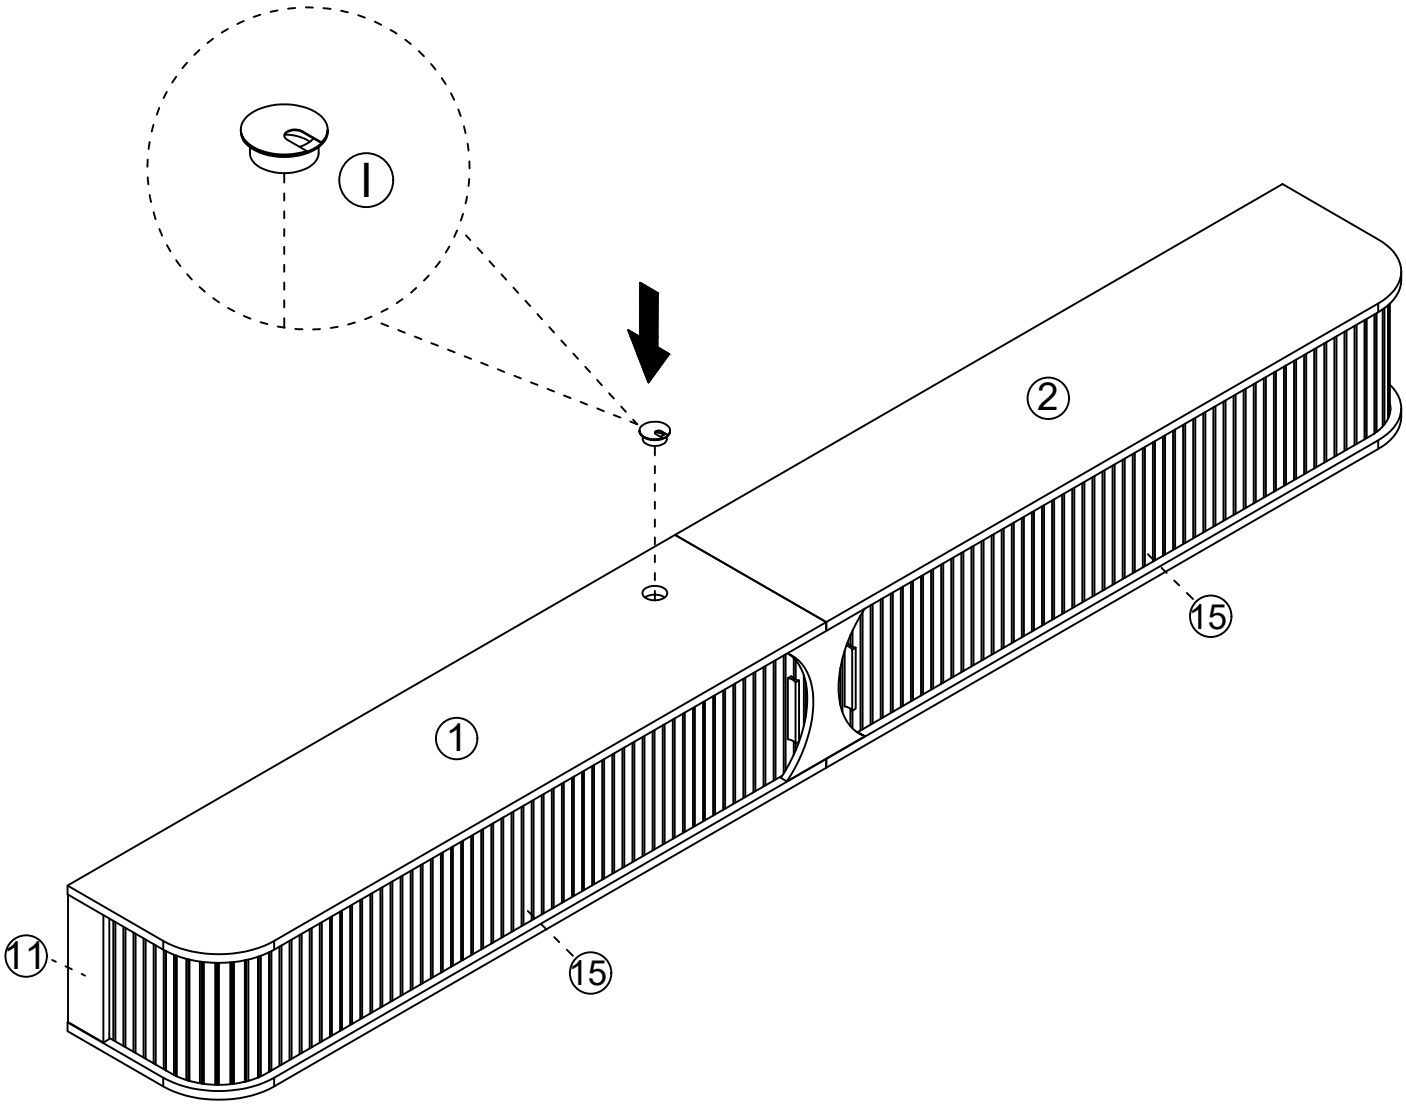


STEP18

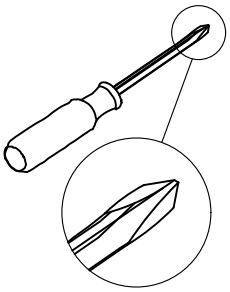

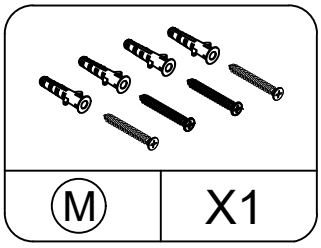

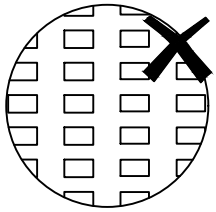


Cavity wall

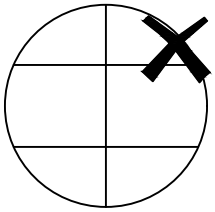


Gypsum board walls


Versatile Wall Mounted Option

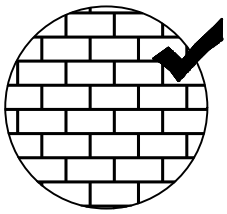

Brick walls

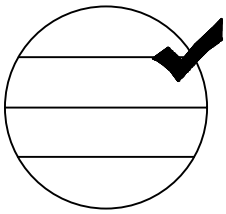


Wooden walls

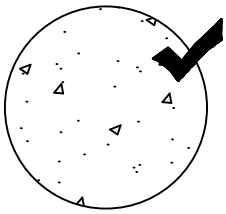


Concrete walls


Brick walls and
Concrete walls
Wall requirements

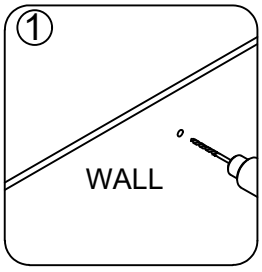


1.drill four Ø8
holes on the wall

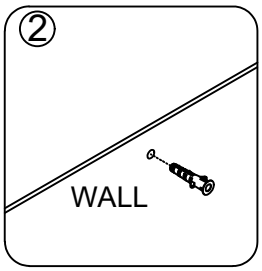

2.put four anchors in
the holes

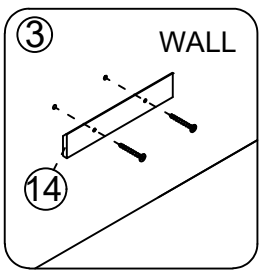


3.fix the wall panel on the
wall by the long screws

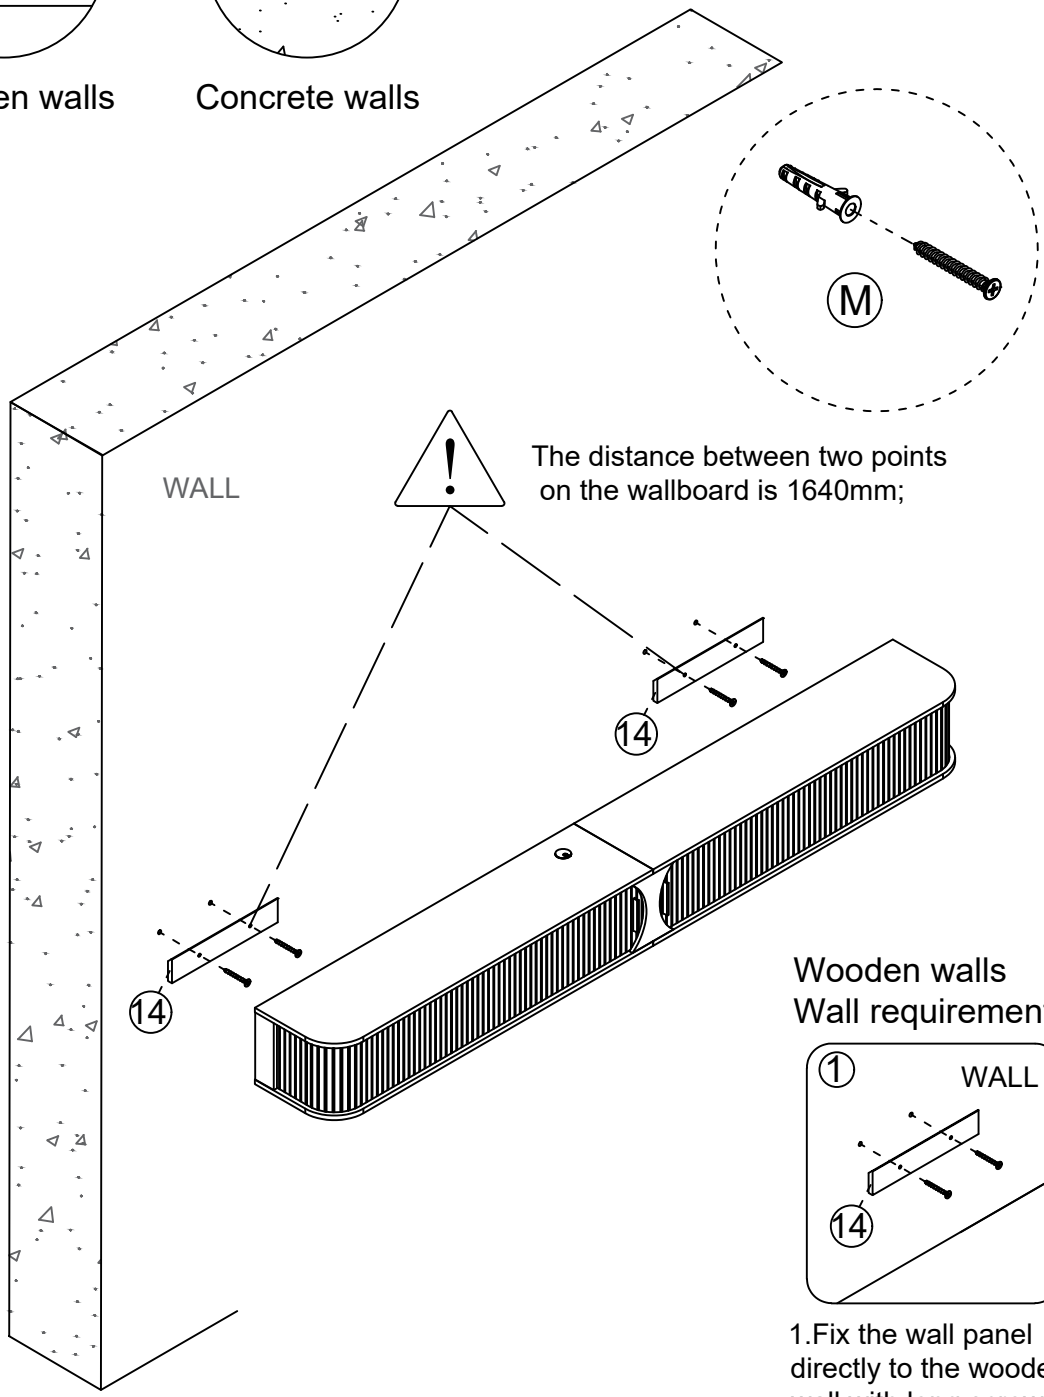


Wooden walls
Wall requirements

1.Fix the wall panel
directly to the wooden
wall with long screws


STEP19

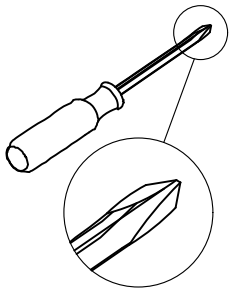


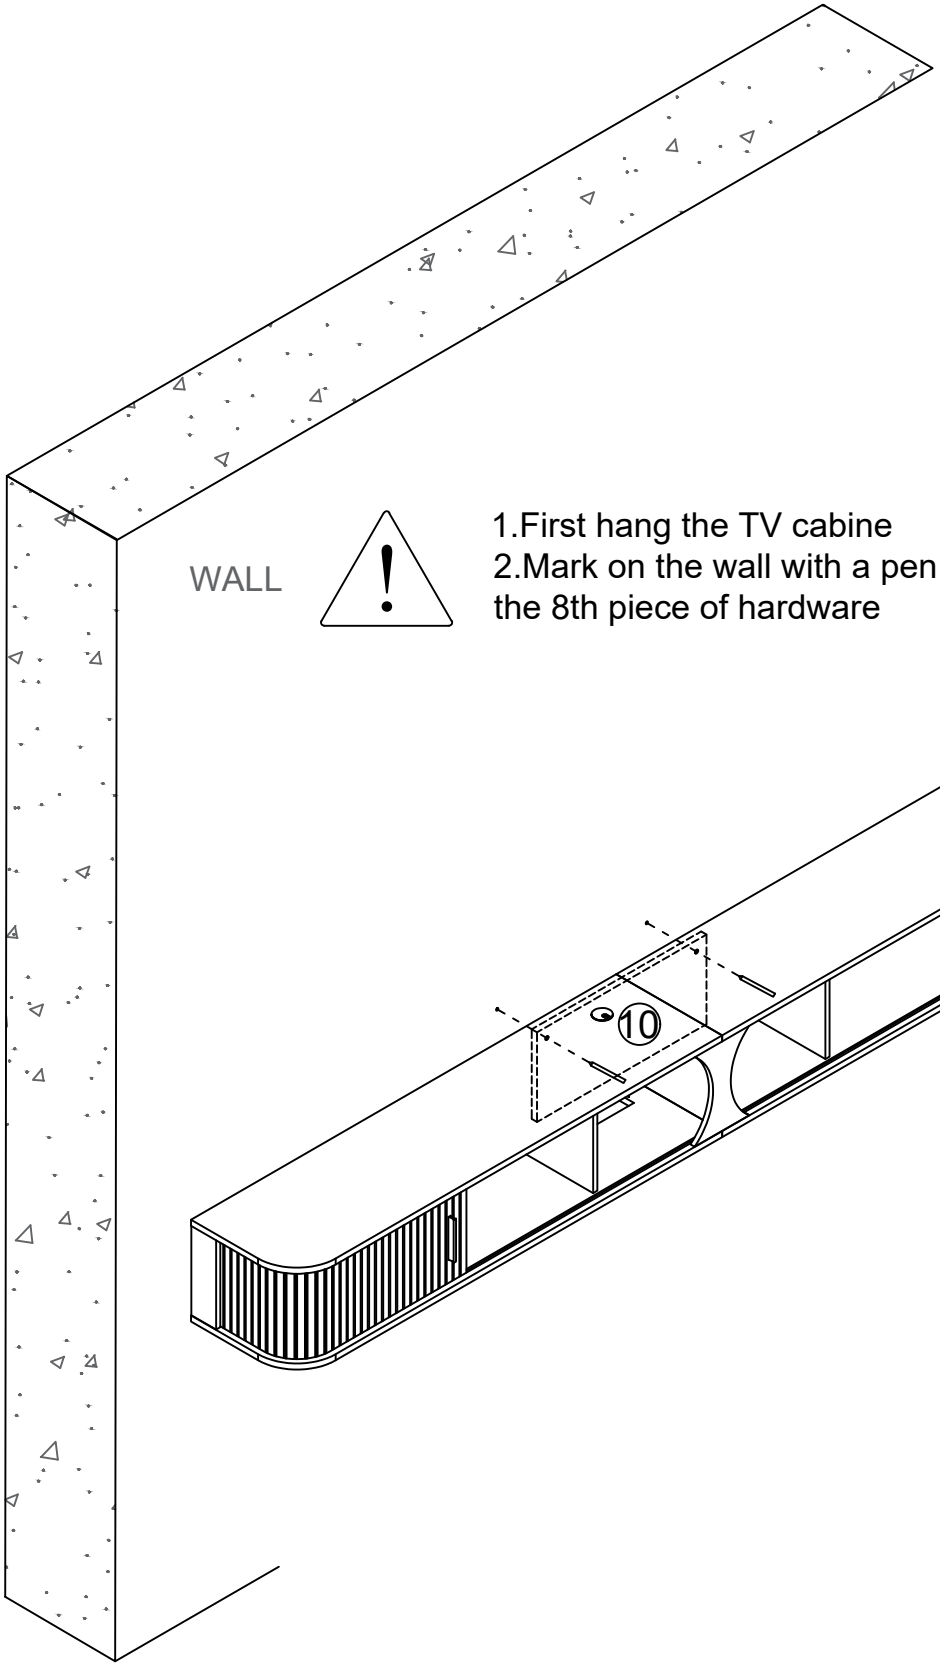


1.First hang the TV cabine
2.Mark on the wall with a pen, through the 8th piece of hardware


STEP20

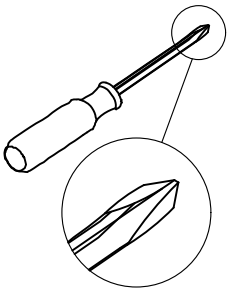

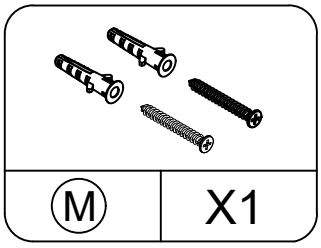

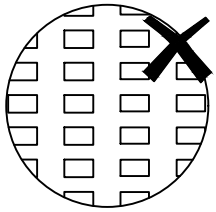


Cavity wall

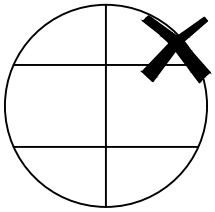


Gypsum board walls


Versatile Wall Mounted Option

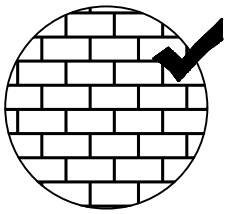

Brick walls

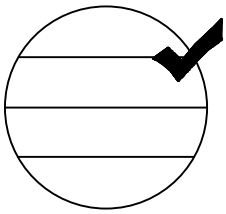


Wooden walls

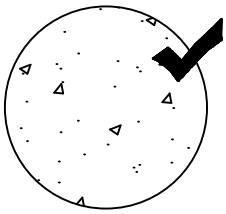


Concrete walls


Brick walls and
Concrete walls
Wall requirements

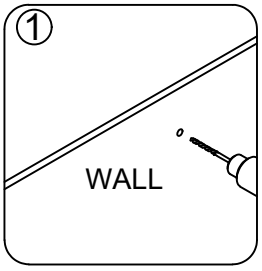


1.drill two Ø8
holes on the wall

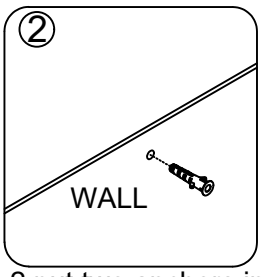


2.put two anchors in
the holes

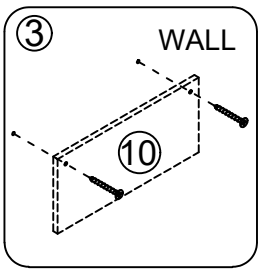


3.Fix the two holes of the
thick middle backboard on
the wall with long screws

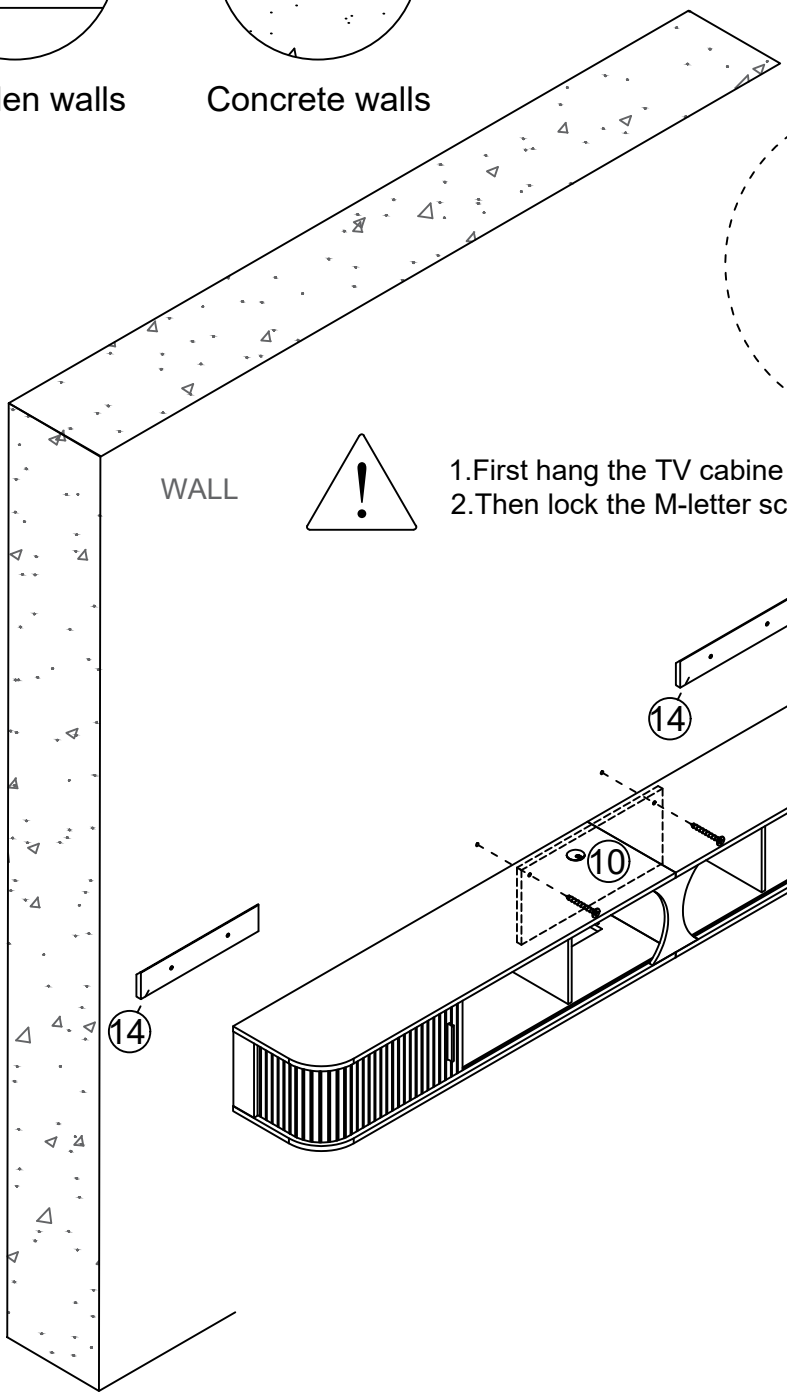

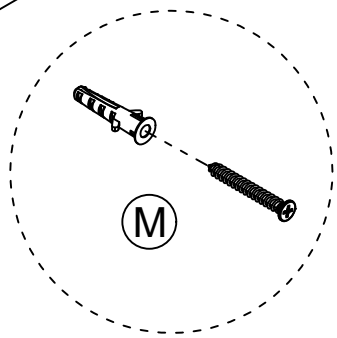

1.First hang the TV cabine
2.Then lock the M-letter screw

Wooden walls
Wall requirements

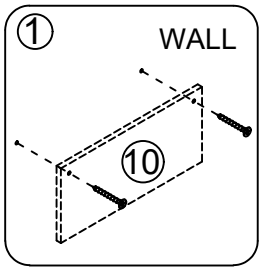

1.Fix the wall panel
directly to the wooden
wall with long screws

STEP21

