

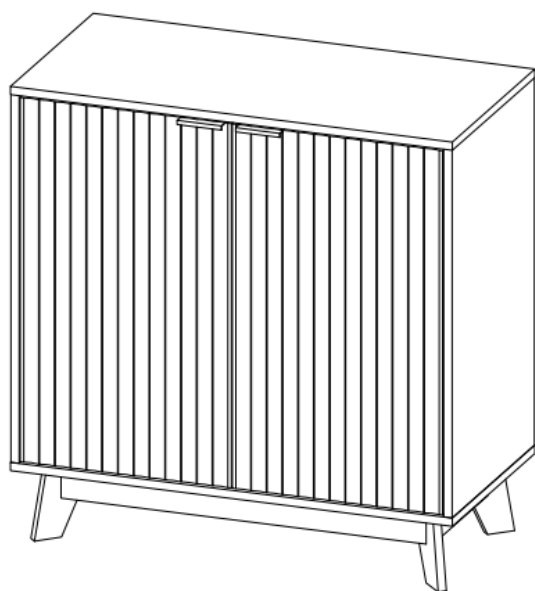


cabinet



Before You Start



1. Read each step carefully and follow the correct order.
2. Separate and count all parts and hardware.
3. Leave enough space for the assembly process.
4. Prepare the following tools: Flat Head Screwdriver, Cross Head Screwdriver and Hammer.
5. Note: If you use an electric drill or electric screwdriver to tighten the screws, please be careful to slow down and stop when tightening the screws. Otherwise, the screws may fall off. (Using an electric screwdriver can increase assembly speed).

Useful Tips


Assembly Personnel Required: 1-2 People

- Unpack the item in the area where you plan to store it to avoid excessive lifting.
- Identify, sort, and count the parts before attempting assembly.
- Use a hammer to gently tap in the compression pins.
- The sliders are marked with R (right) and L (left) for proper placement.
- Make sure to always point the tip of the top of the cam lock toward the outer edge.
- If there is a back panel in the package, install it to ensure your unit is complete and sturdy.
- Tighten all the screws provided for the back panel, which can enhance the stability of the product. If it is difficult to tighten, you can use a hammer to secure it and then tighten it.
- Do not use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

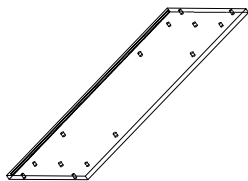


1

BOTTOM BOARD
800mm*396mm
Qty: 1

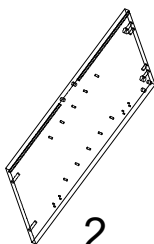


2

LEFT BOARD
660mm*395mm
Qty: 1

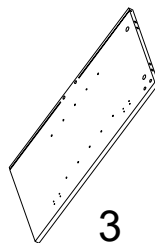


3

RIGHT BOARD
660mm*395mm
Qty: 1

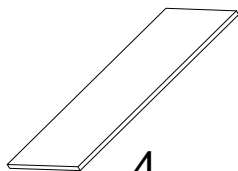


4

SHELF BOARD
767mm*355mm
Qty: 1

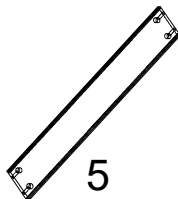


5

BACK BOARD
769mm*115mm
Qty: 1

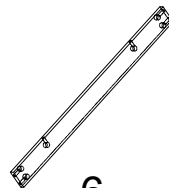


6

FRONT BOARD
769mm*60mm
Qty: 1

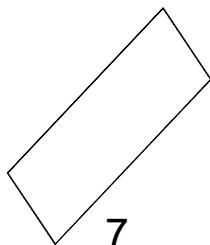


7

BACK BOARD
781mm*284mm
Qty: 2

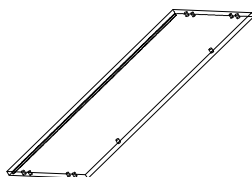

8

TOP BOARD
800mm*396mm
Qty: 1

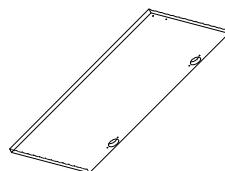


9

LEFT DOOR
654mm*381.5mm
Qty: 1


Board Identification

Not actual size

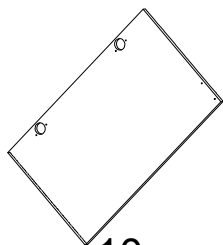

10

RIGHT DOOR
654mm*381.5mm
Qty: 1

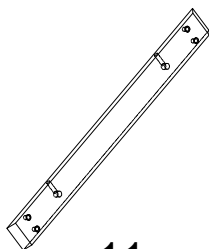

11

LEG SUPPORT
661.5mm*60mm
Qty: 2



12

LEG SUPPORT
257.5mm*60mm
Qty: 2




13


LEG
130mm*82mm
Qty: 4

Board Identification


Not actual size

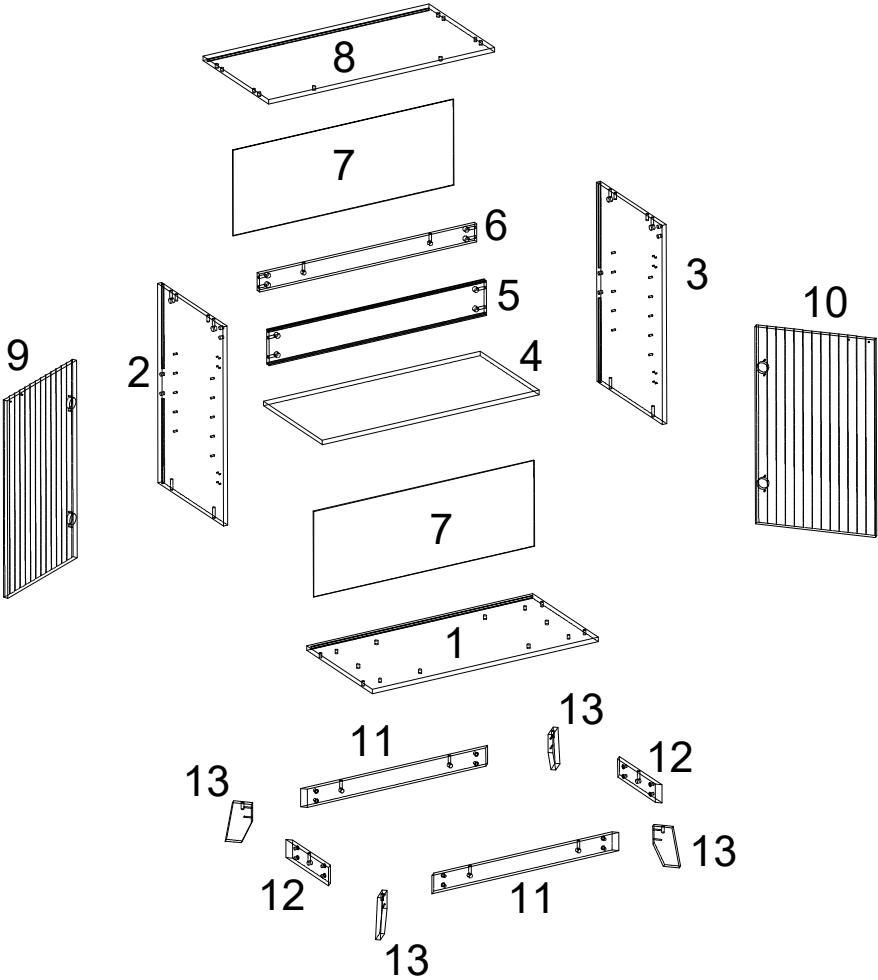


Part List

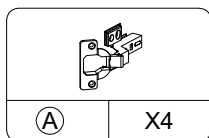


DOOR HINGE

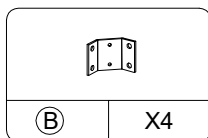


LEG SUPPORT

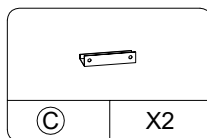


HANDLE

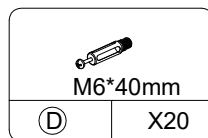


CAM BOLT
spare:2

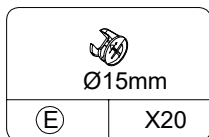


CAM LOCK
spare:2

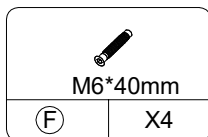


SCREW

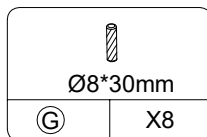

DOWEL
spare:1

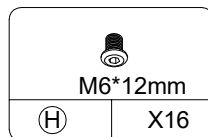





BOLT
spare:1

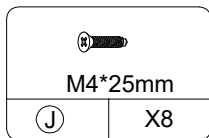

SCREW



SCREW
spare:3

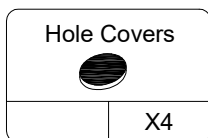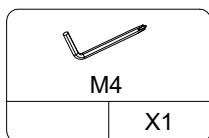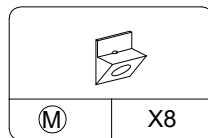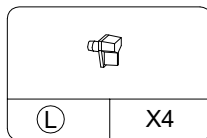


Part List


Cam Lock Fastening System

insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

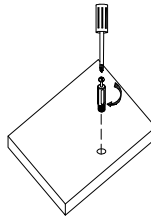

2

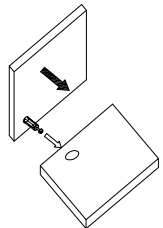


3

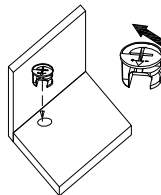


The opening must point toward the edge of the board

4

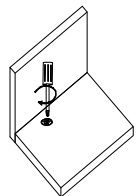


Step 1




 M6*40mm	
(D)	X8

 Ø15mm	
(E)	X8


 M4	
	X1

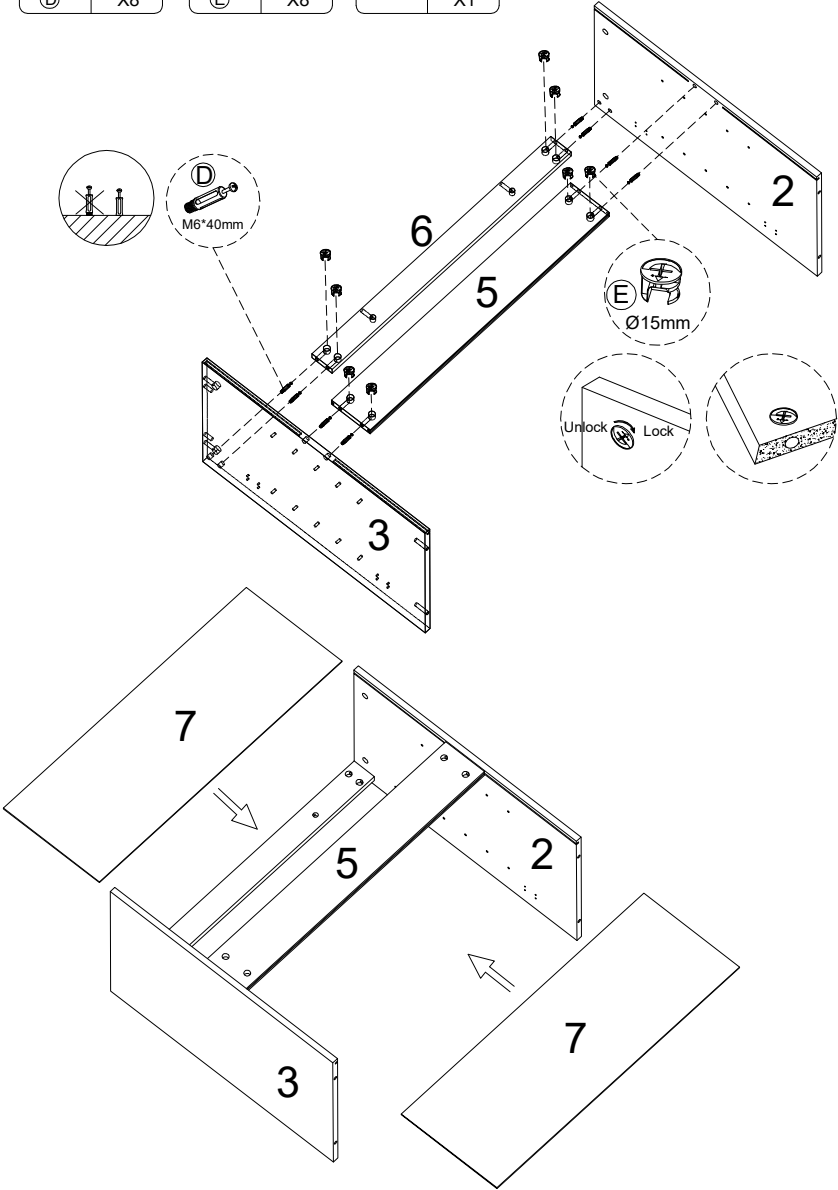

Step 2

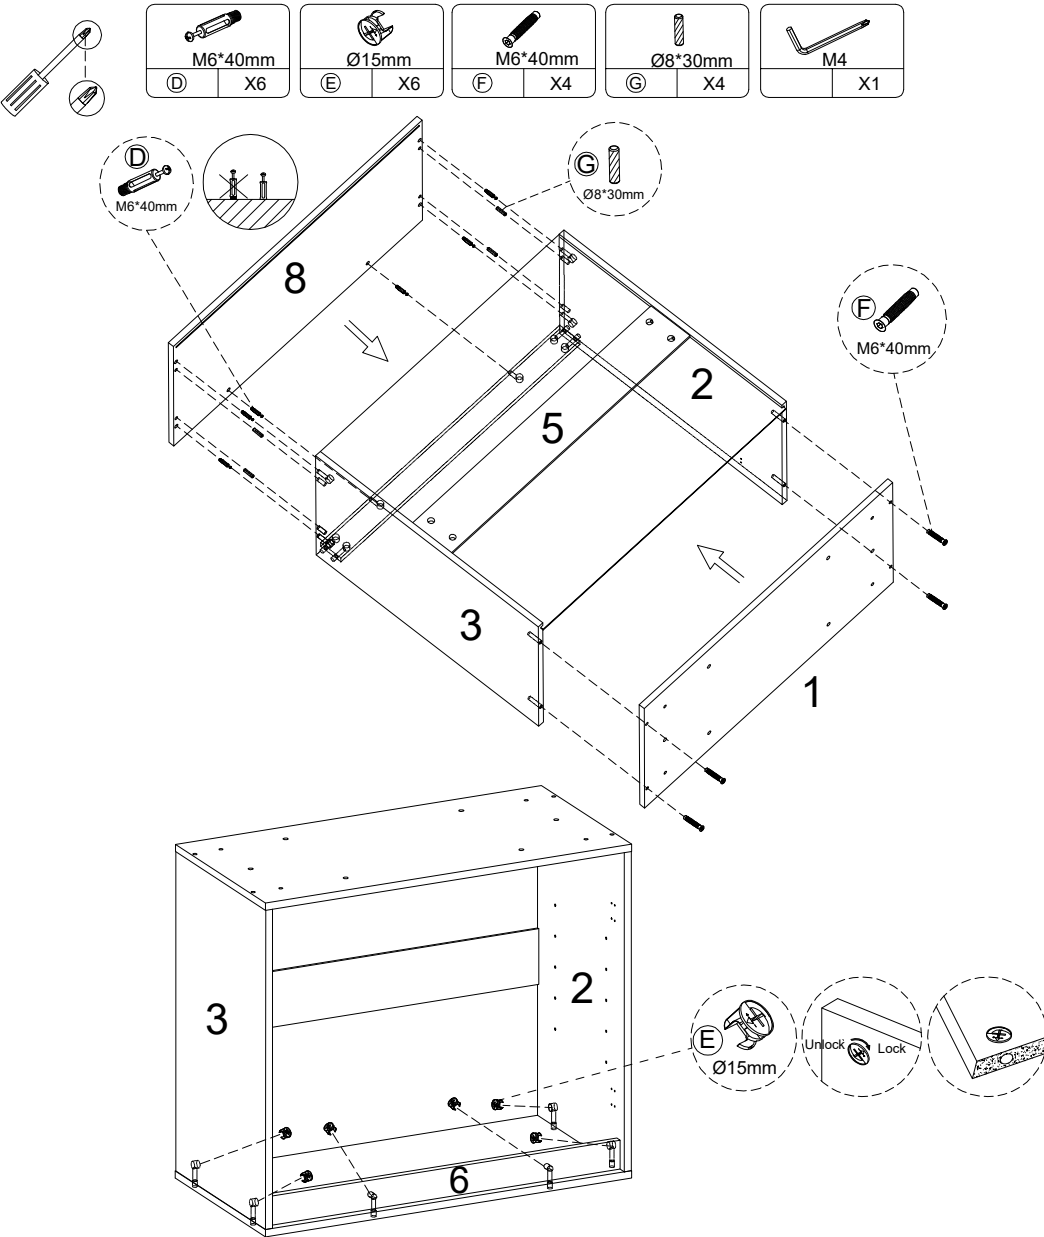




Step 3




 M6*40mm	
(D)	X6

 Ø8*30mm	
(G)	X4

 M4	
	X1

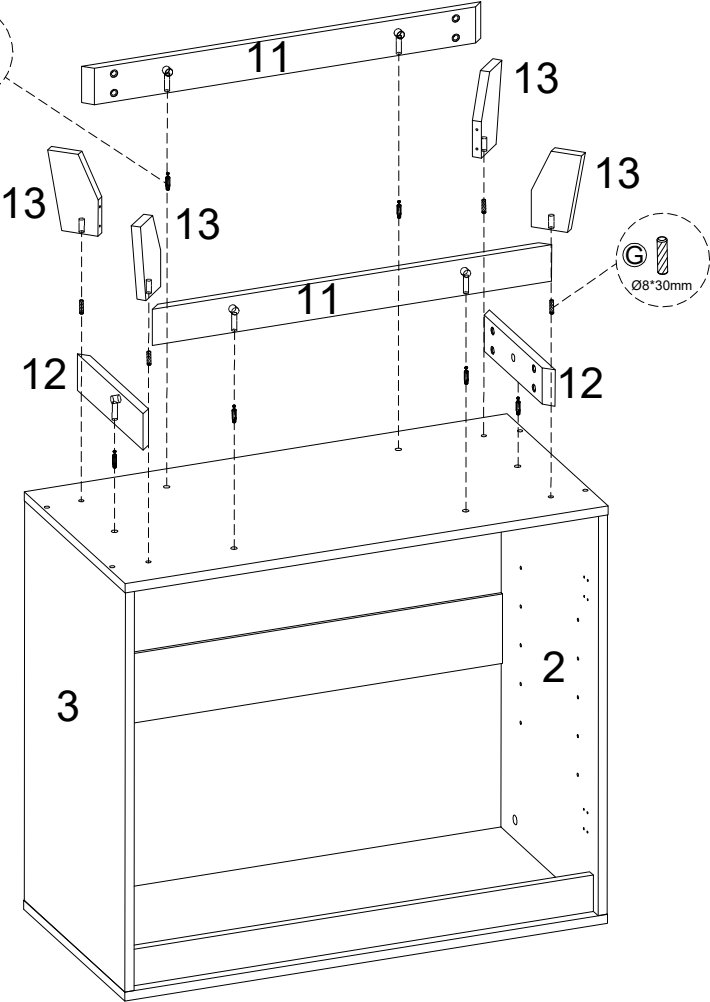

Step 4




(B)	X4

Ø15mm	
(E)	X6







M6*12mm	
(H)	X16

M4*25mm	
(J)	X8





M4	
	X1

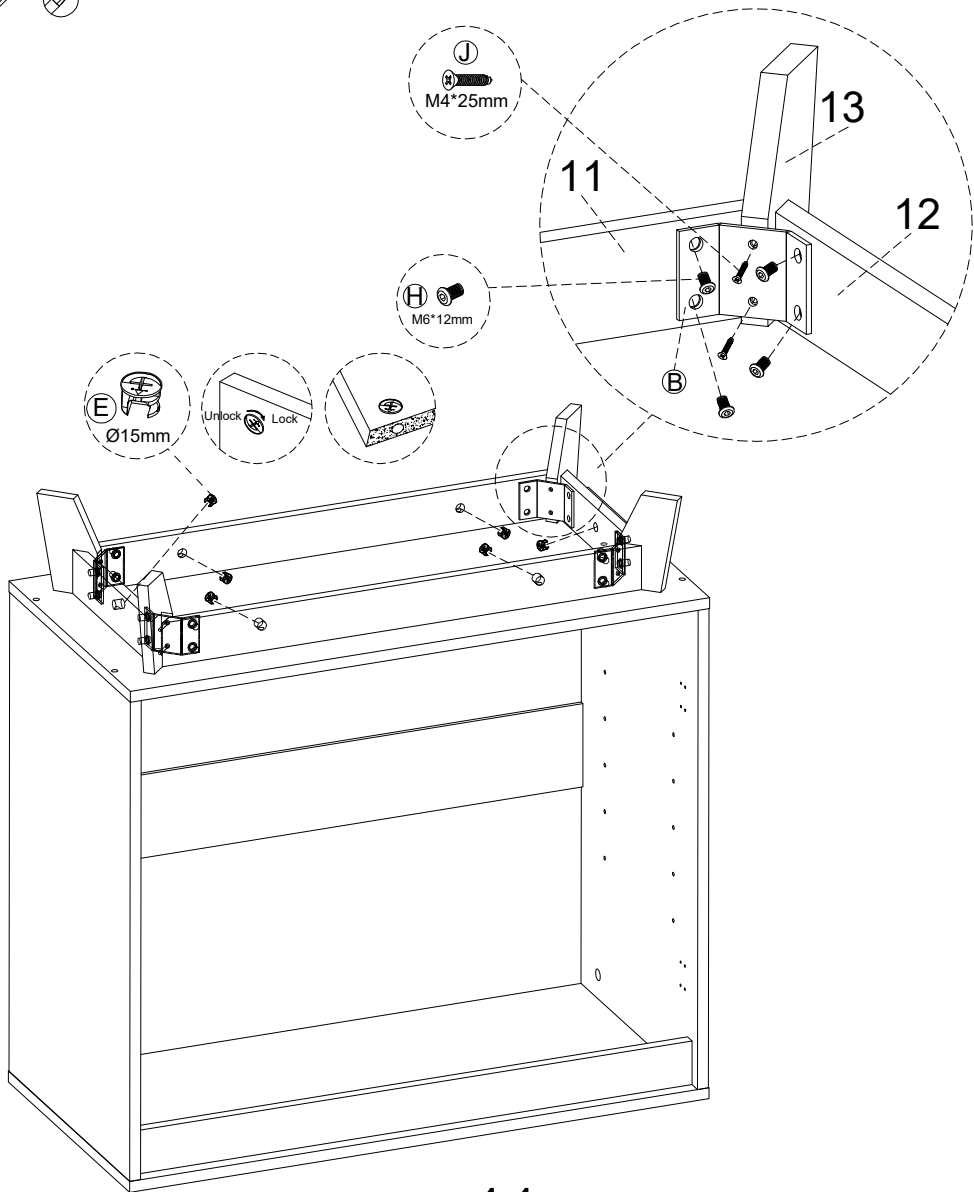


Step 5

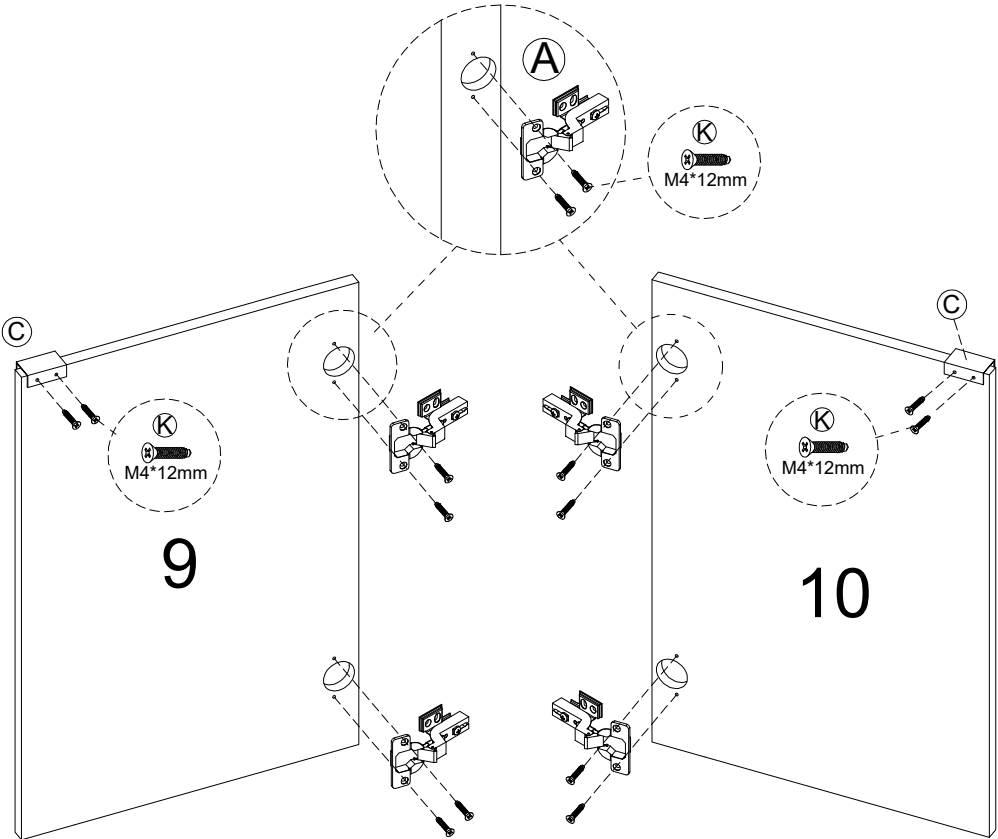




Step 6

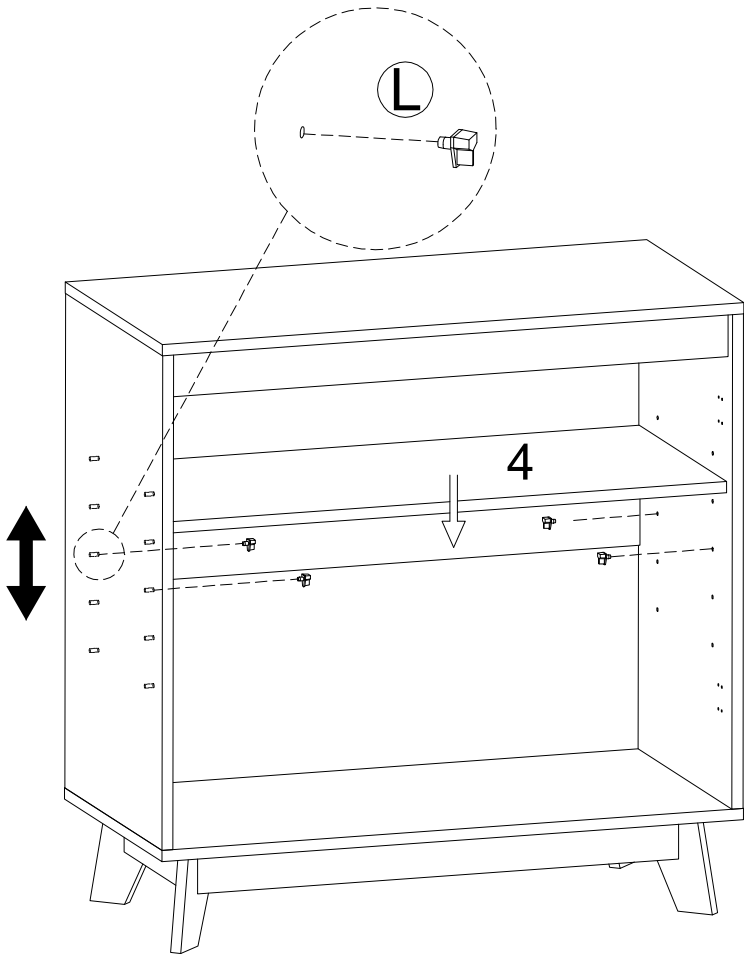


Step 7



 M4*12mm	
(K)	X16

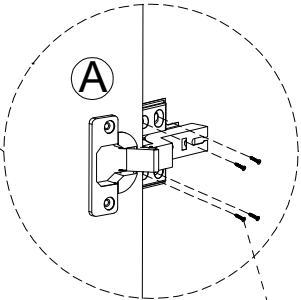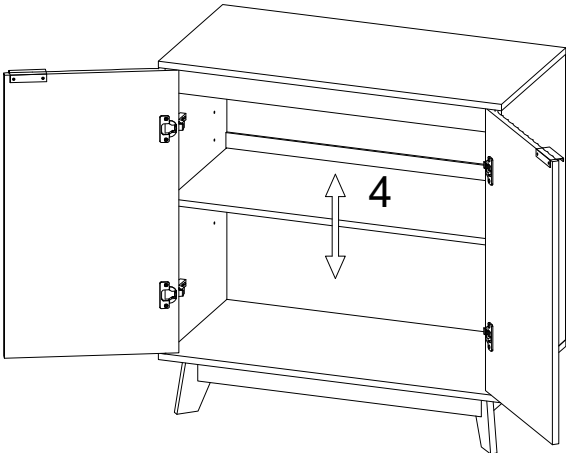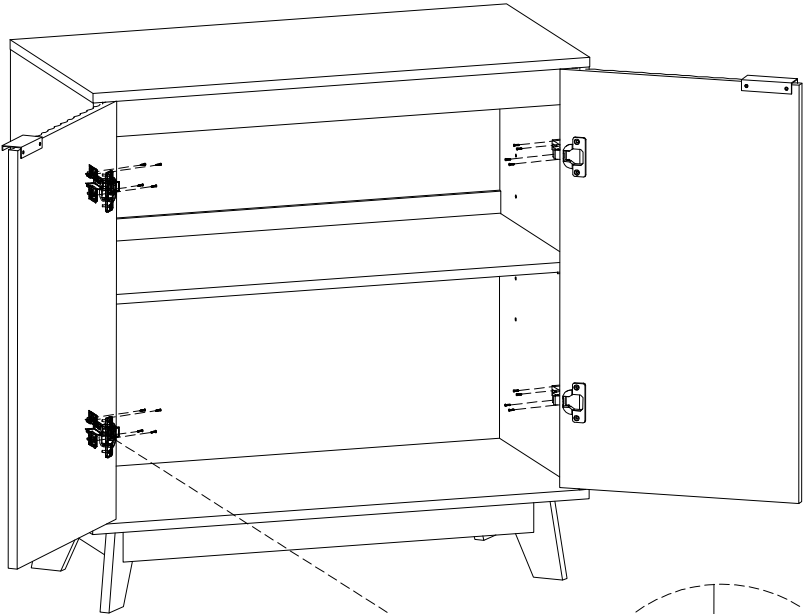


Step 8






 M4*12mm	
(K)	X8

	
(M)	X8

 M4	
	X1


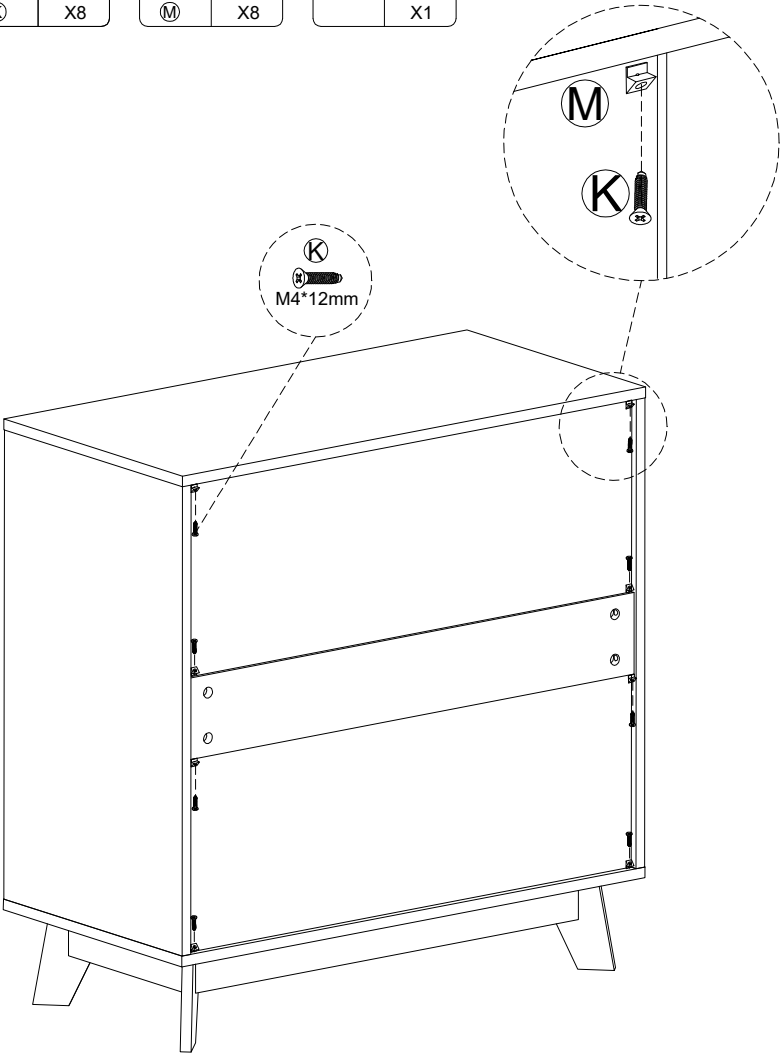


Step 9

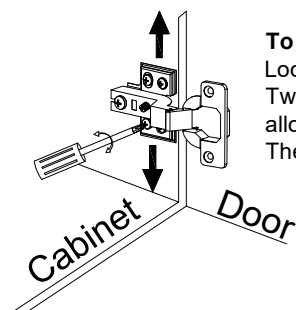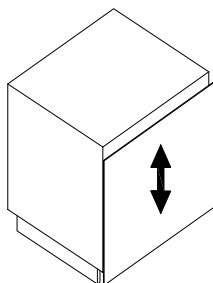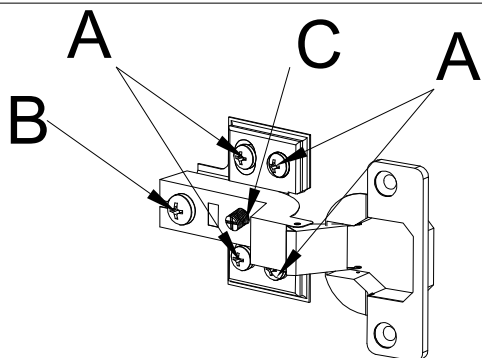



To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

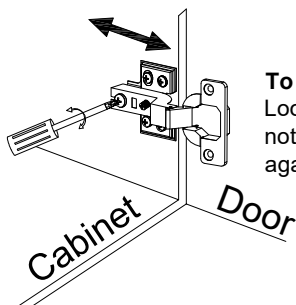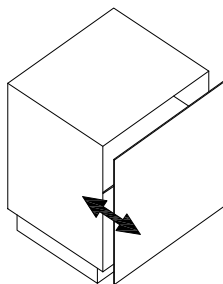

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

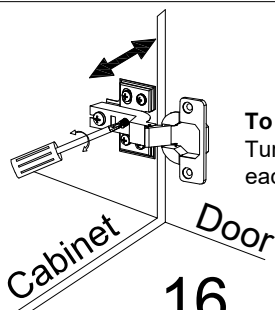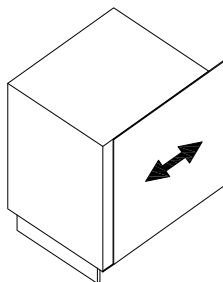

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.