



**PACKAGE CONTENTS:**


- 2 privacy panels
- 2 sets of hinges with screws (6 screws per hinge)
- 3 ground stakes with screws (2 screws per stake)

**MATERIAL:** Polyethylene

**TOOLS REQUIRED:** Cordless drill, level, rubber mallet


**GENERAL INFORMATION:**

- Molded from durable, all-weather polyethylene.
- Rinse clean with a garden hose; for a deeper clean, use a power washer.
- 15-year warranty for residential use, 5-year warranty for commercial use, 1-year warranty on hardware.

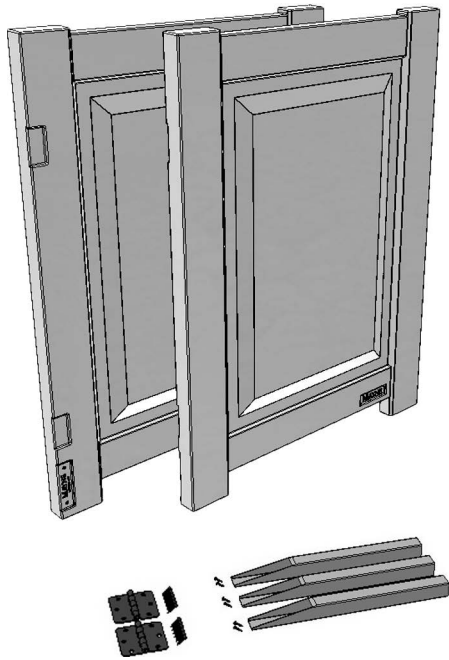

*Front Side*


*Back Side*

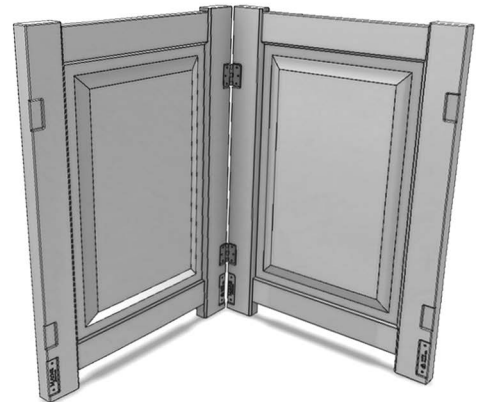

# Installation instructions


## STEP #1

Lay panels down side by side with hinged side facing up. Leave a 1/4 inch gap between the 2 panels and make sure the bottom footings are even.

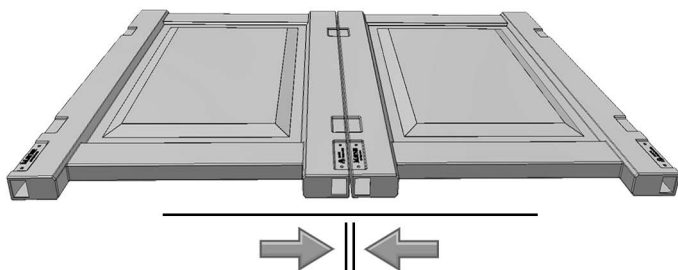


## STEP #3

Slide the 3 ground stakes inside the post openings leaving 12 inches exposed from the bottom. Insert 2 ground stakes in the left panel and 1 ground stake in the right panel as shown. Fasten in place with 2x 3/4 inch truss head screws provided (2 per stake).

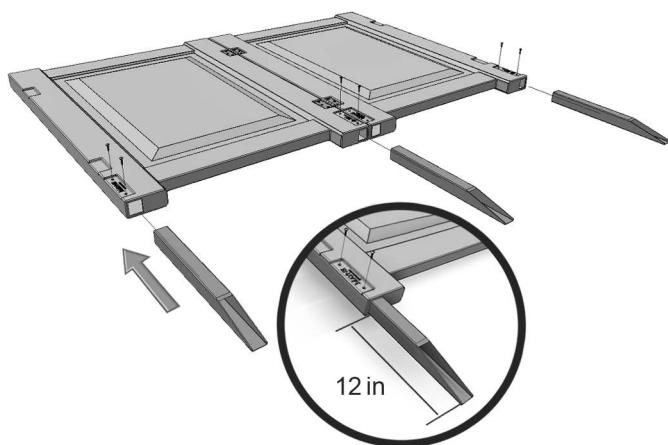


## STEP #5

Use a wood block and rubber mallet to gently hammer the panels into the ground. For hard soil, dig 12 inch deep holes, set the panels in place, then back fill the holes and compact the soil.

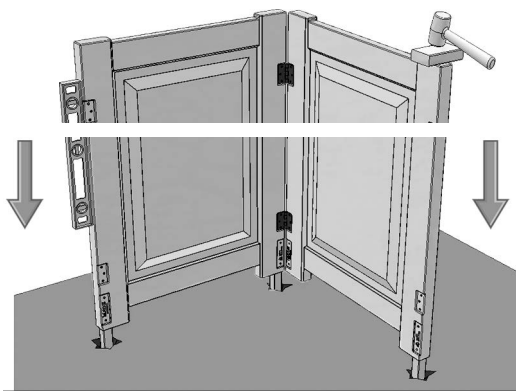


## STEP #2

Position hinges as shown and fasten screws into the marked locations. Dimples are molded into part for easier alignment for hinges and screws. Do not over-tighten.

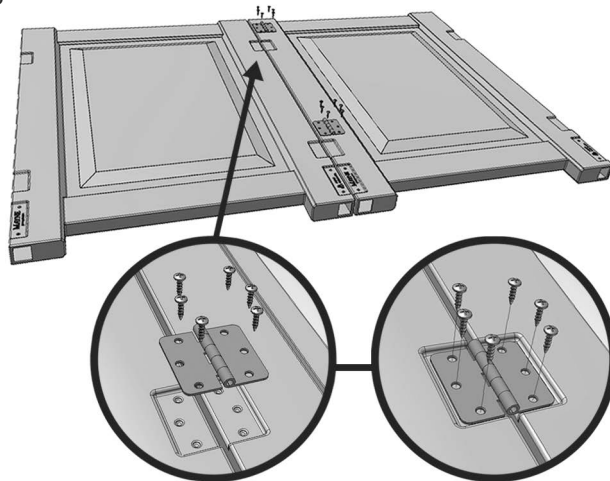

## STEP #4

Position the panels in the desired location and mark the position of the ground stakes. Dig small starter holes and add water to loosen the soil.

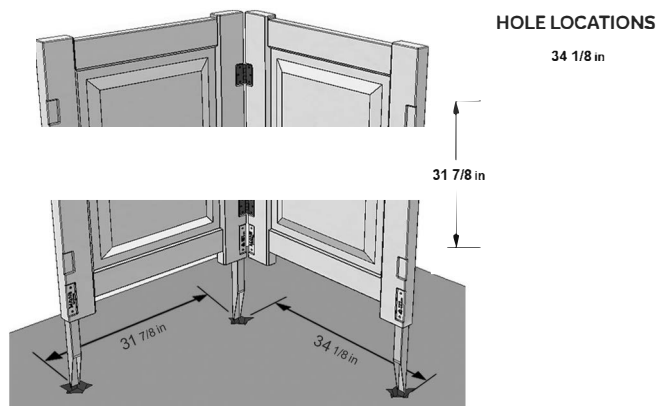

## STEP #6

When mounting on flat surfaces like concrete or a wood deck, secure the panels in place using corner brackets (sold separately).

