



Bar Stool with Back

BY003

Assembly Instructions

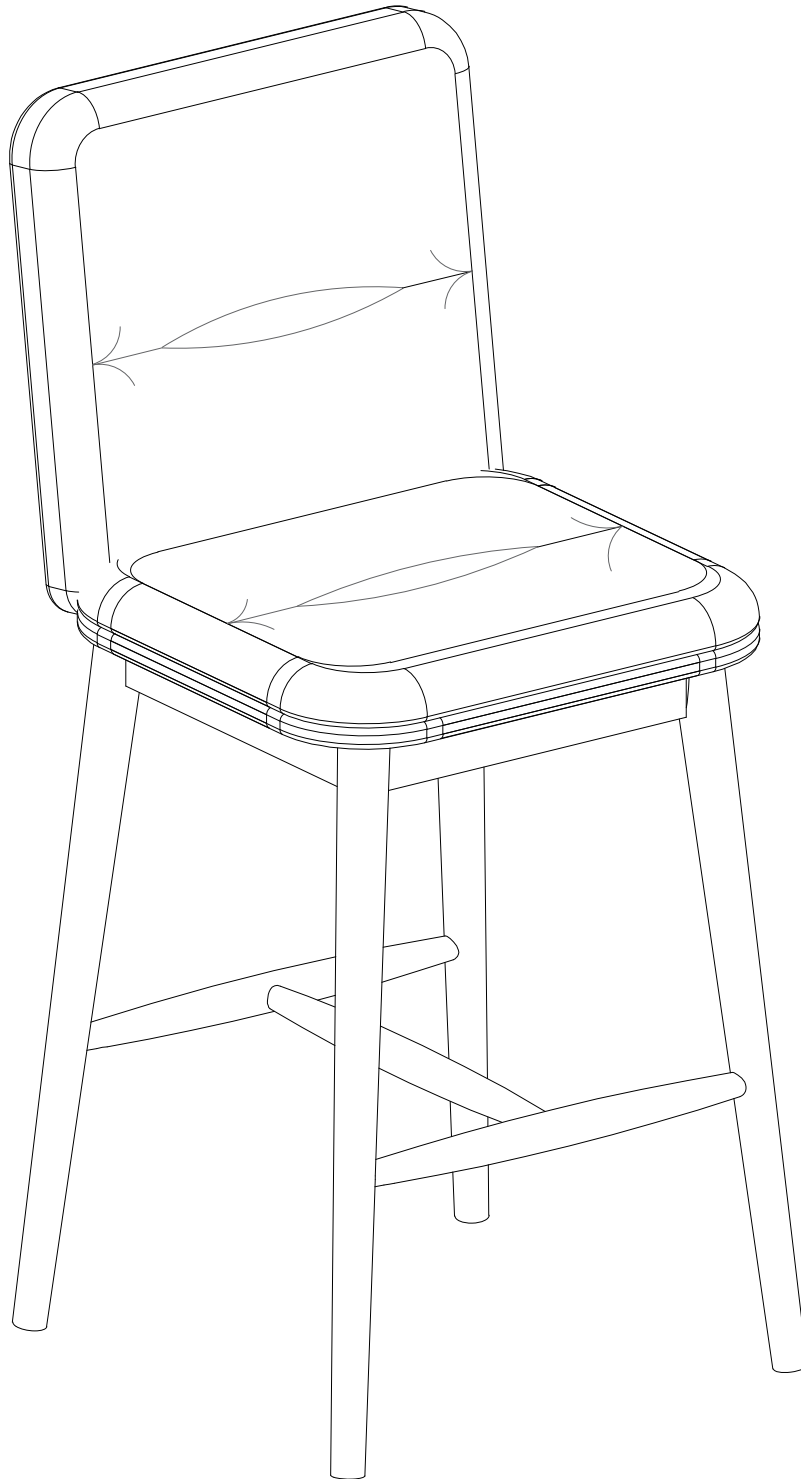


Assembly Overview

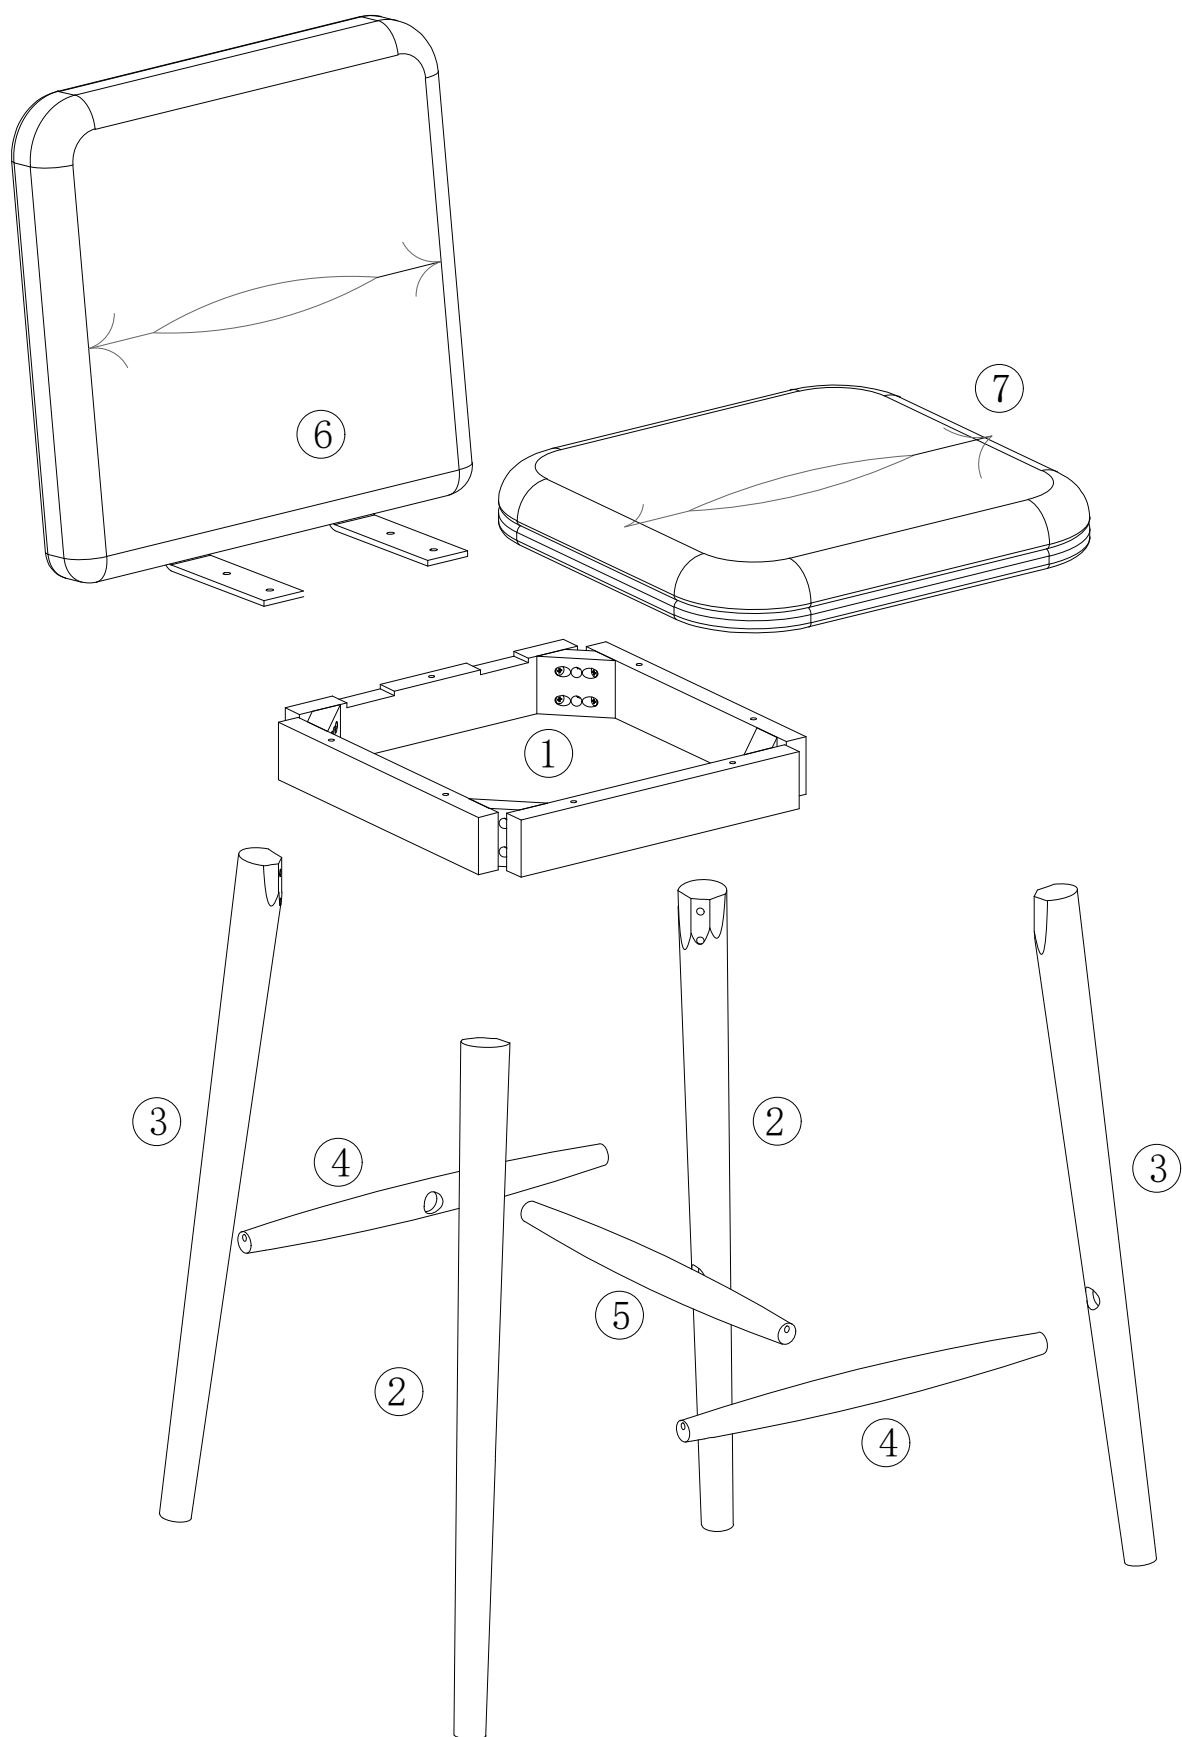


Parts List

1 Seat Frame 1

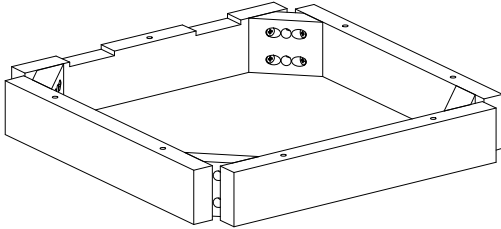


1 PC

2 Leg Frame 1

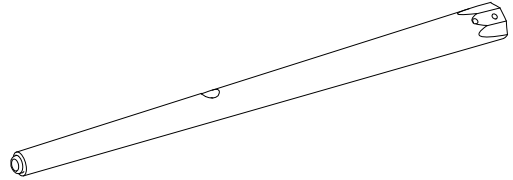


2 PCS

3 Leg Frame 2

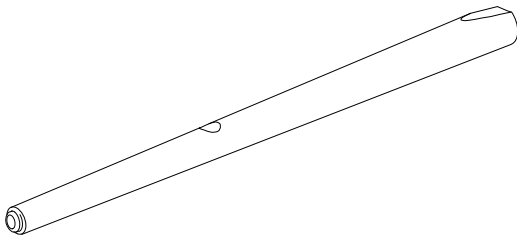

2 PCS


4 Front & Rear Stretchers

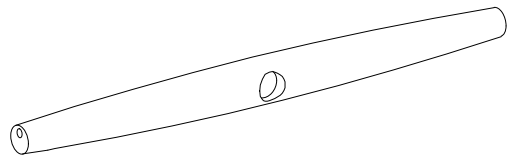

2 PCS


Parts List (continued)

5 Center Stretcher

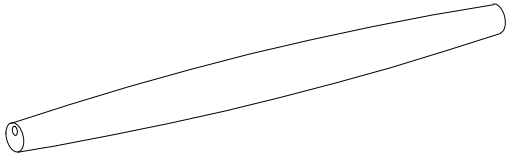


1 PC

6 Backrest

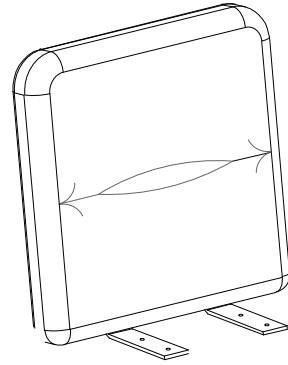

1 PC


7 Seat Frame 2

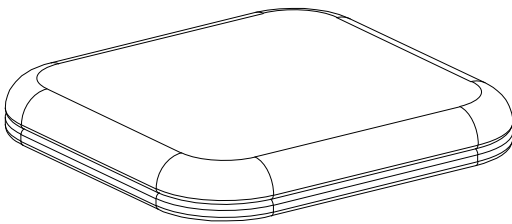

1 PC

Hardware & Tools


A Hex Socket Head Screw

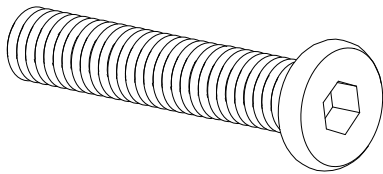

M6 × 50M

8+1 PCS


B Flat Washer

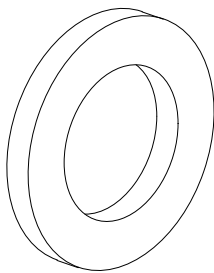

M6 × 16MM

8+1 PCS

C Lock Washer

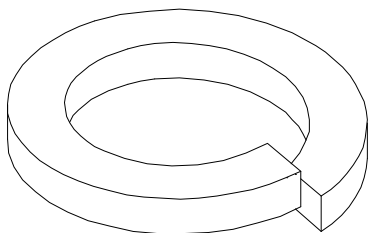


M6

8+1 PCS

Hardware & Tools (continued)

D Hex Key

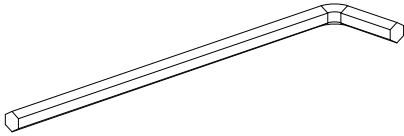


M4 × 100MM

1 PC

Tool - reuse as needed


E Flat-Head Self-Tapping Screw

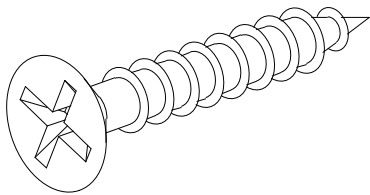

#8 × 30MM

13+2 PCS

F Ratcheting Screwdriver




M6 × 136MM

1 PC

Tool - reuse as needed

Hardware & Tools (continued)


G Hex Socket Head Screw

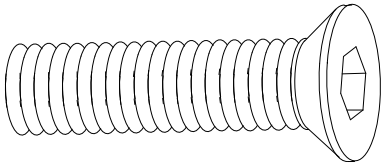

M6 × 20MM

4+1 PCS

H Felt Pad

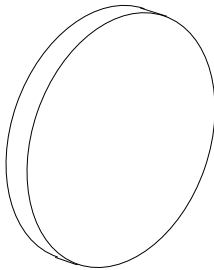

20 × 3MM

4 PCS


Before Assembly

Check all parts and hardware against the lists.


Use the correct screws for each step.

Incorrect screw sizes may cause the wood to crack.

Incorrect screw size

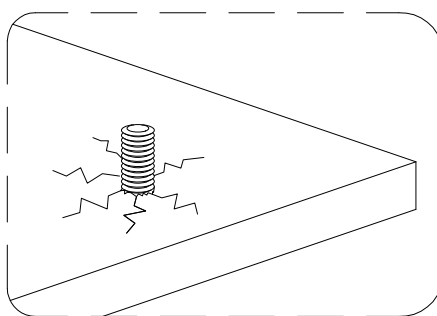

Correct screw size

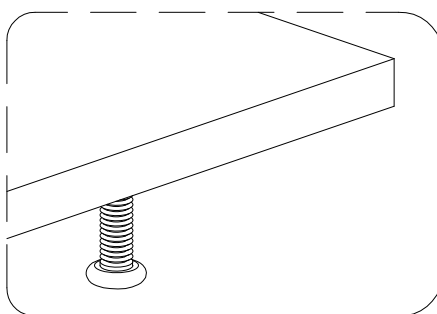

Step 1


Connect seat frame 1 to legs 2 and 3, as shown.

Use screws A, lock washers C and flat washers B with hex key D.

Do not fully tighten the screws yet.

The arrow indicates the front of the seat frame.

A × 4; B × 4; C × 4. Tool: D.

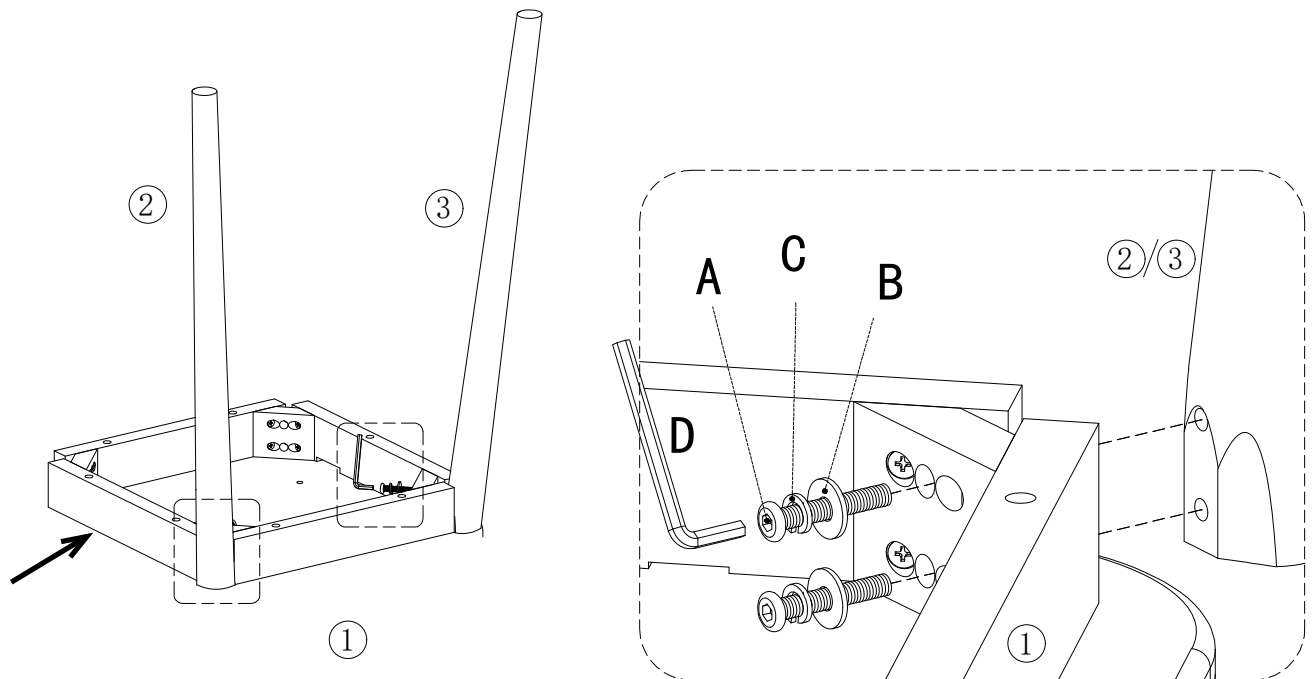

Step 2


Connect the remaining legs 2 and 3 and stretchers 4, as shown.

Use screws A, lock washers C and flat washers B with hex key D.

Do not fully tighten the screws yet.


The arrow indicates the front of the seat frame.

A × 4; B × 4; C × 4. Tool: D.

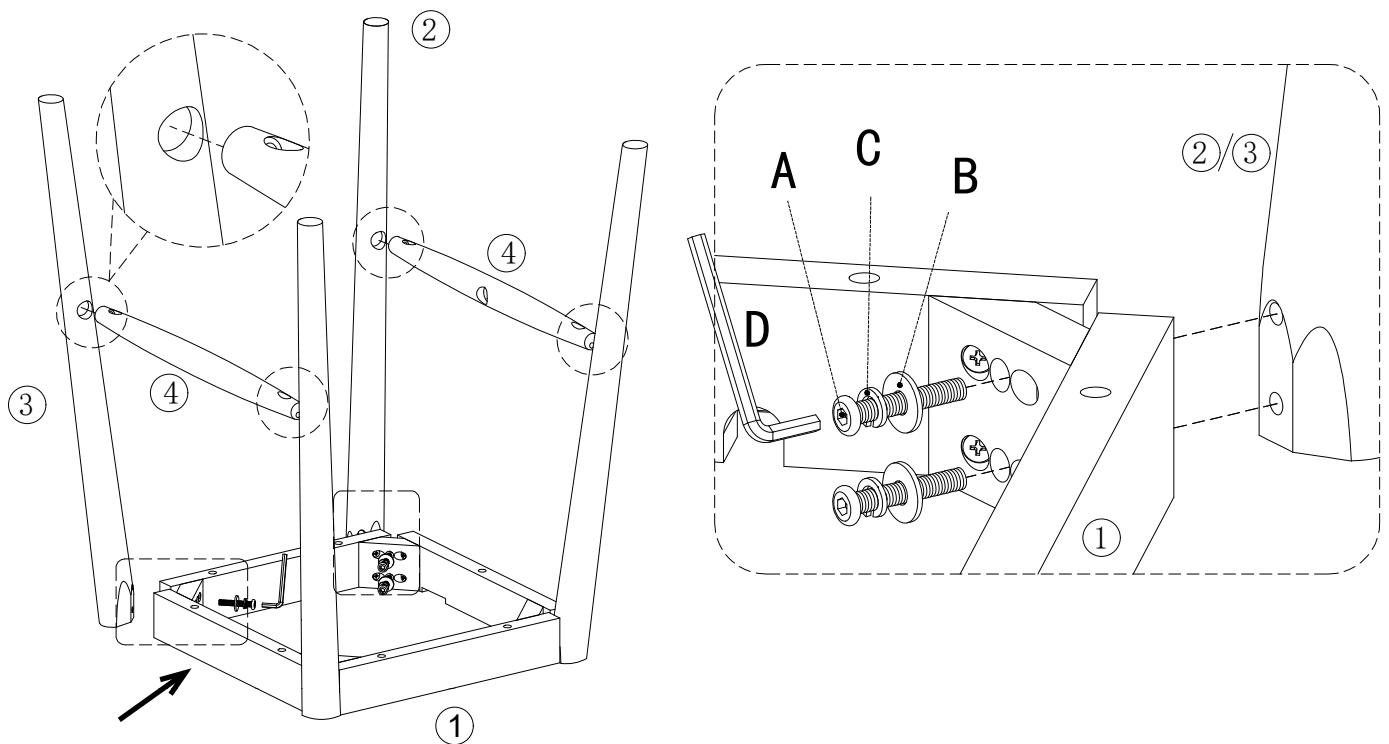

Step 3

Insert center stretcher 5 into the assembly from Step 2.

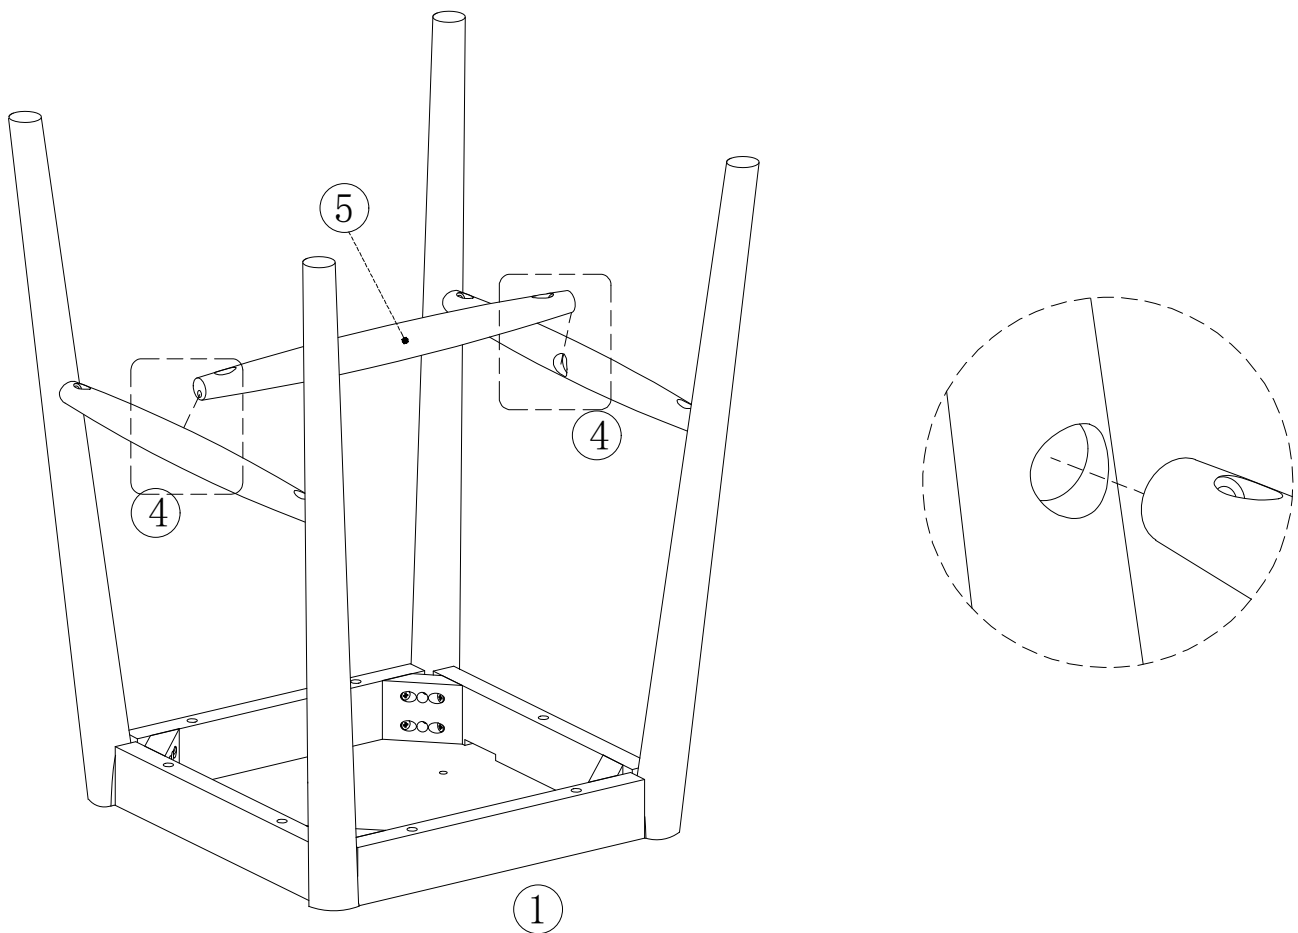


Step 4

Secure the assembly with screws E using screwdriver F.

Tighten all screws installed in the previous steps.

Attach felt pads H to the bottoms of the legs.


E × 6; H × 4. Tool: F.

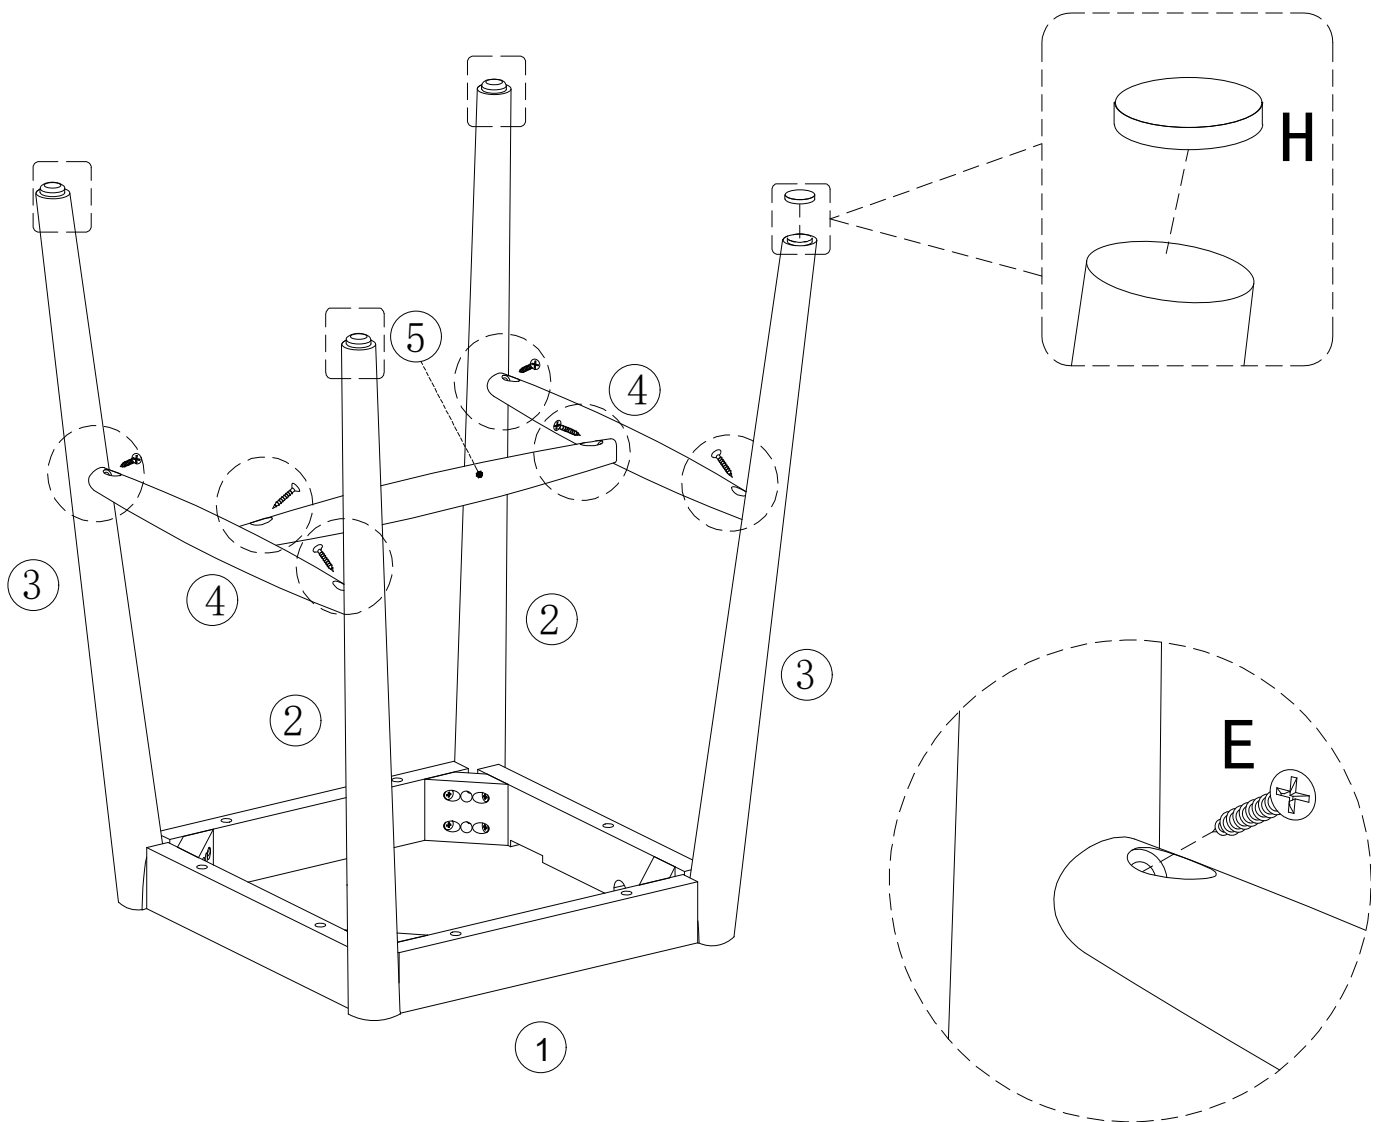

Step 5

Connect backrest 6 to seat frame 7, as shown.
Fasten with screws G using hex key D.



G × 4. Tool: D.

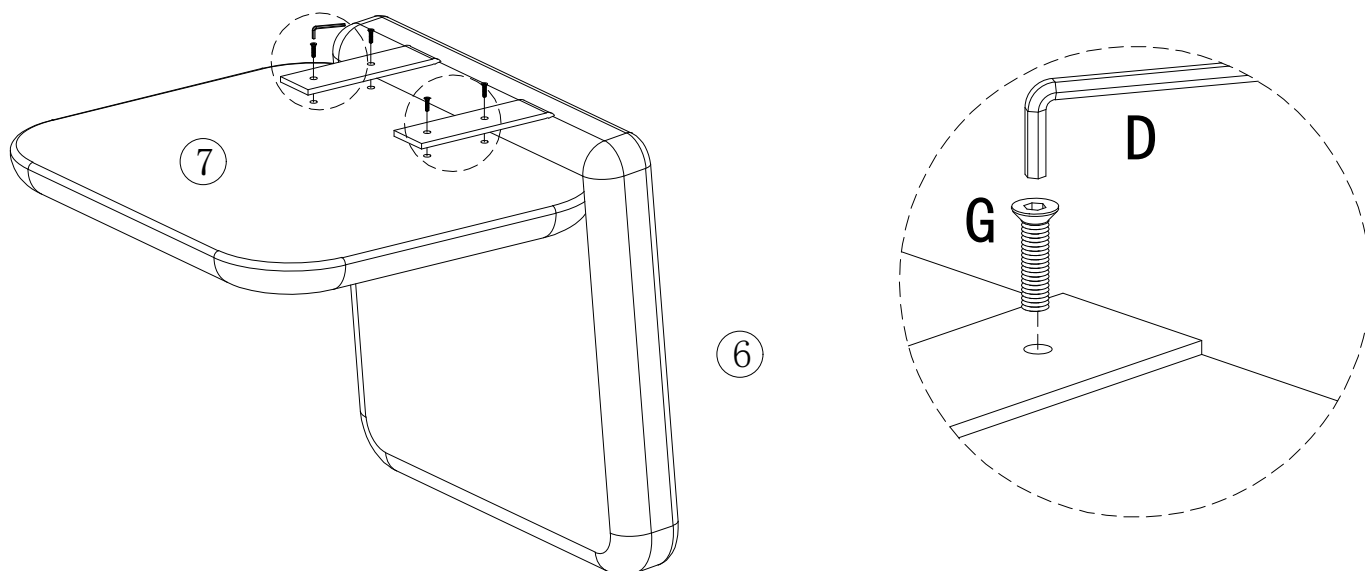

Step 6

Connect the assembly from Step 4 to the assembly from Step 5.
Fasten with screws E using screwdriver F.

E × 7. Tool: F.

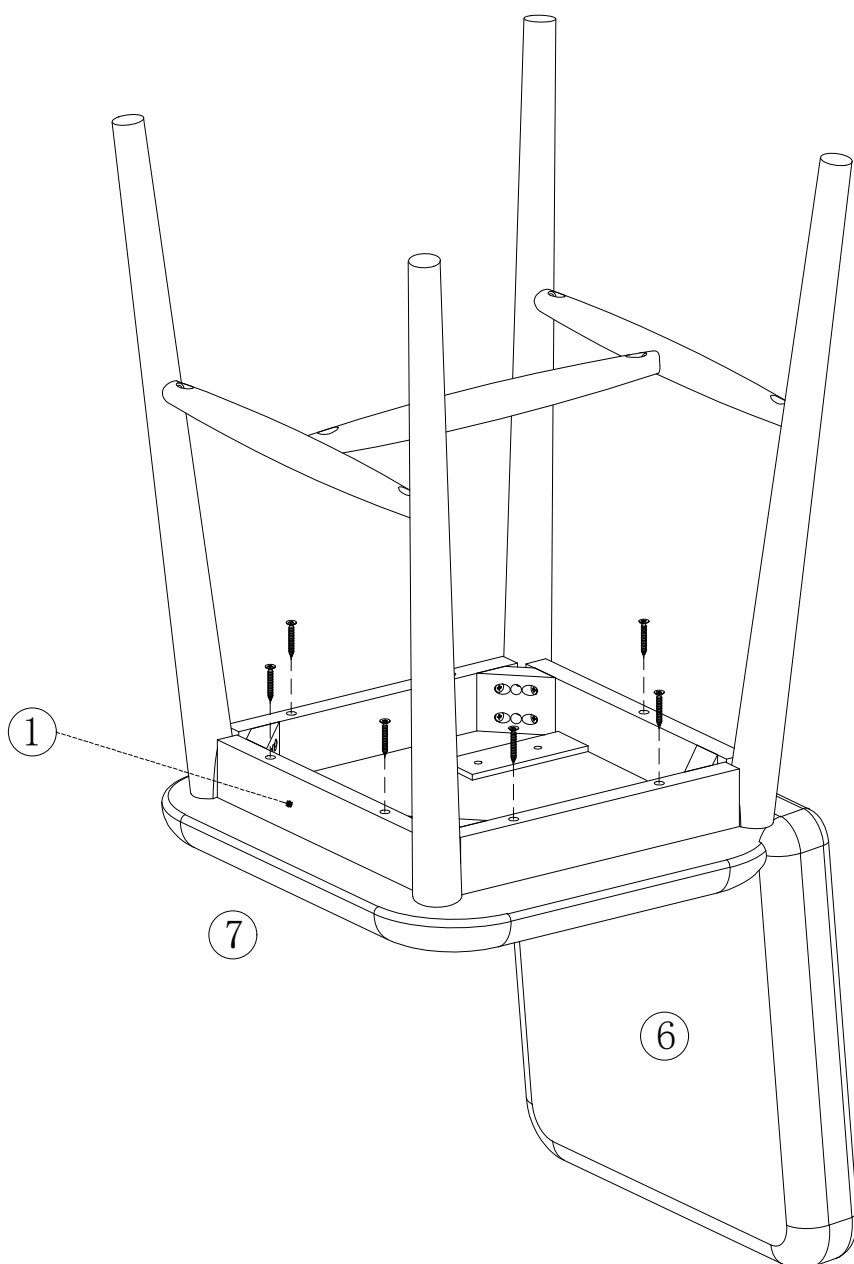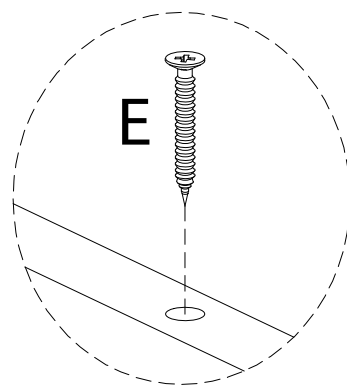

Step 7

Assembly complete. Fully tighten all screws.

