


Multifunctional storage


Assembly Instructions




Parts List

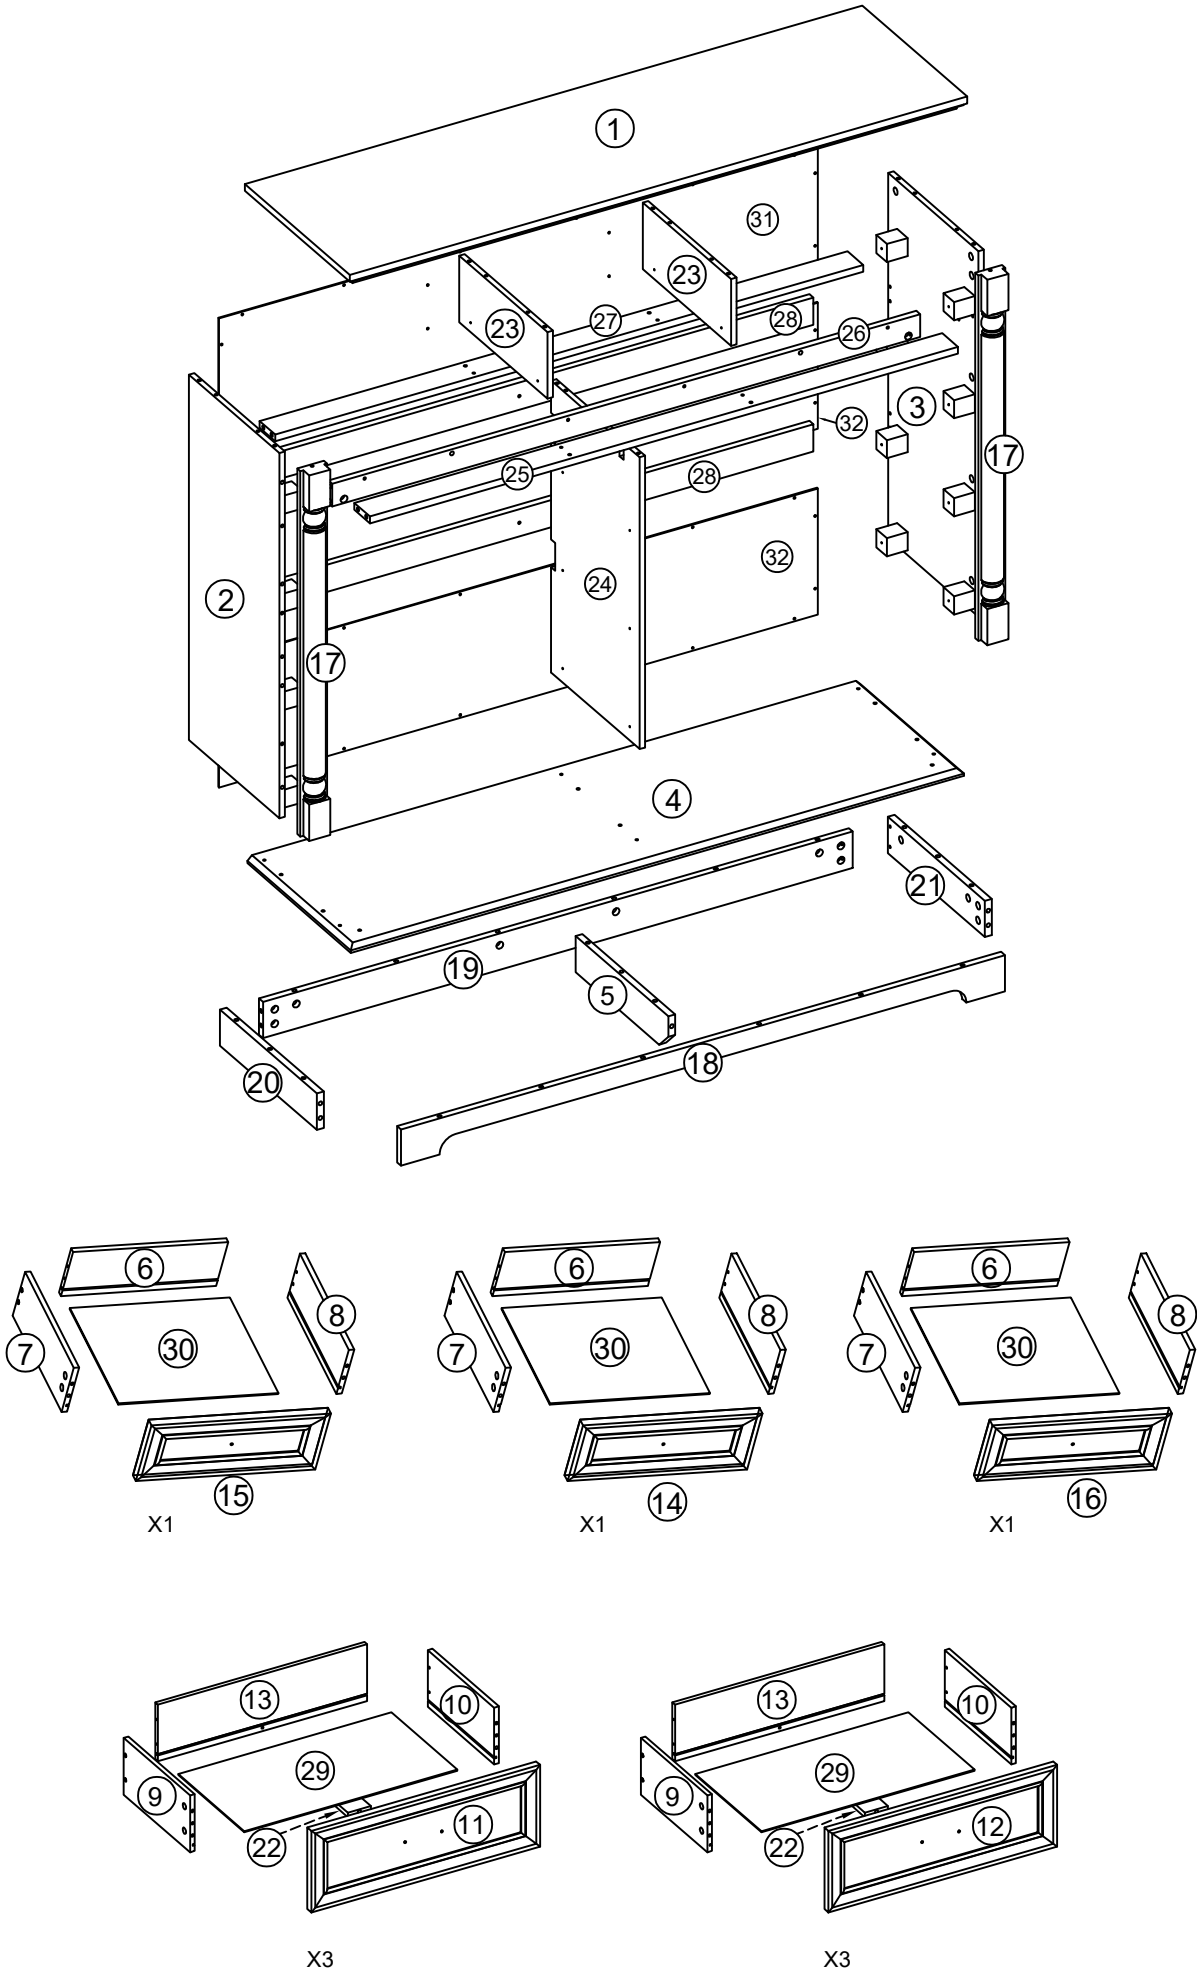

Hardware

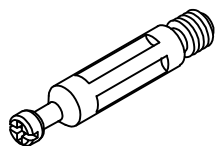


A x 110sets




15X9.5MM

B x 110sets

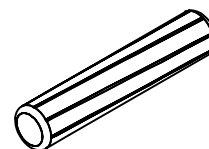


6 x 30MM

C x 45pcs

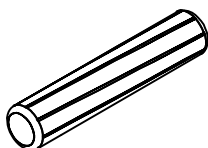


8 x 30MM

D x 13pcs




3.5 x 12MM

E x 75pcs

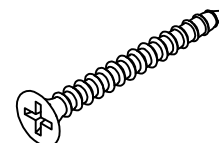


3.5 x 35MM

F x 56pcs

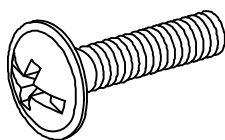


M4 x 12MM

G x 15pcs

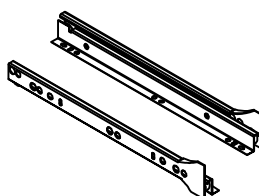


300MM

H x 9sets

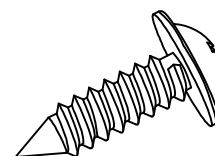


3.5 x 12MM


I x 55pcs

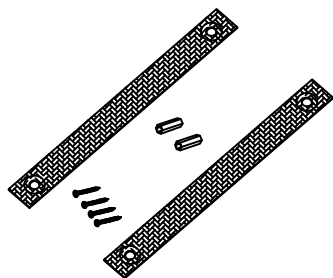


J x 1sets

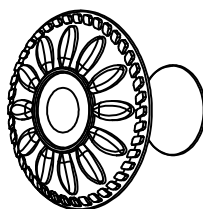


K x 3sets

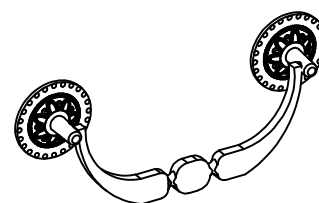

L x 6sets







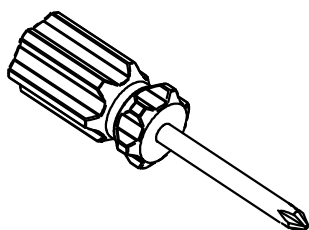






M x 1sets

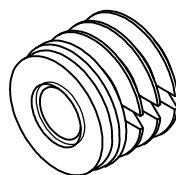








N x 5sets






ASSEMBLY MATERIAL

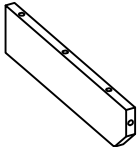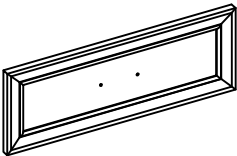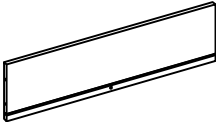Item no.	Reference Image	Oty.
①		X1
③		X1
⑤		X1
⑦		X3
⑨		X6
⑪		X3
⑬		X6
⑮		X1

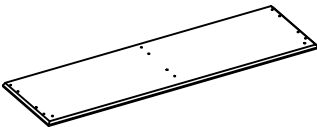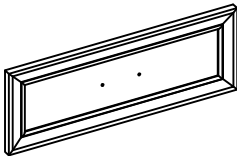
Item no.	Reference Image	Oty.
②		X1
④		X1
⑥		X3
⑧		X3
⑩		X6
⑫		X3
⑭		X1
⑯		X1

ASSEMBLY MATERIAL

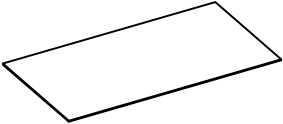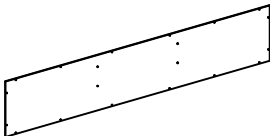
Item no.	Reference Image	Oty.
17		X2
19		X1
21		X1
23		X2
25		X1
27		X1
29		X6
31		X1

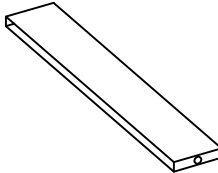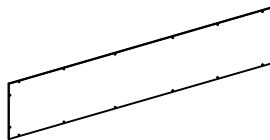Item no.	Reference Image	Oty.
18		X1
20		X1
22		X6
24		X1
26		X1
28		X2
30		X3
32		X2


How to use the cam lock system

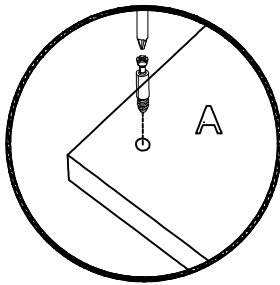


1.Screw cam bolt into panel

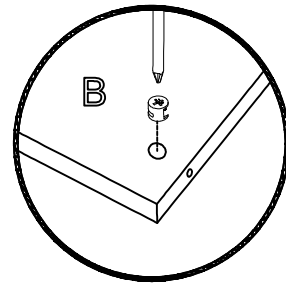


2.Push cam into panel - arrow feature on cam top points to panel edge

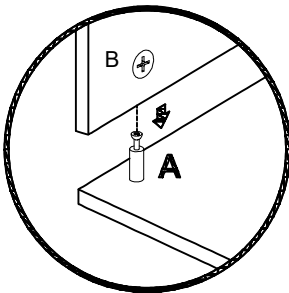

3.Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

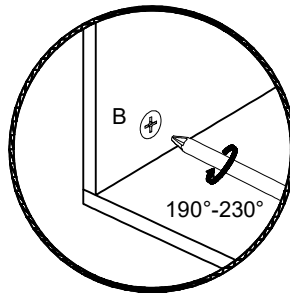


3.Rotate cam(s) clockwise 190°-230° to lock panels together

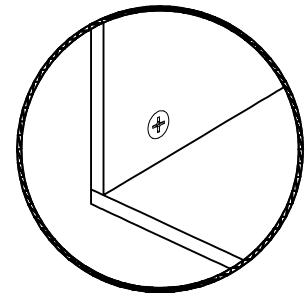

5.Panels should be tight against each other and connection should be rigid


Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet ,IF NECESSARY.

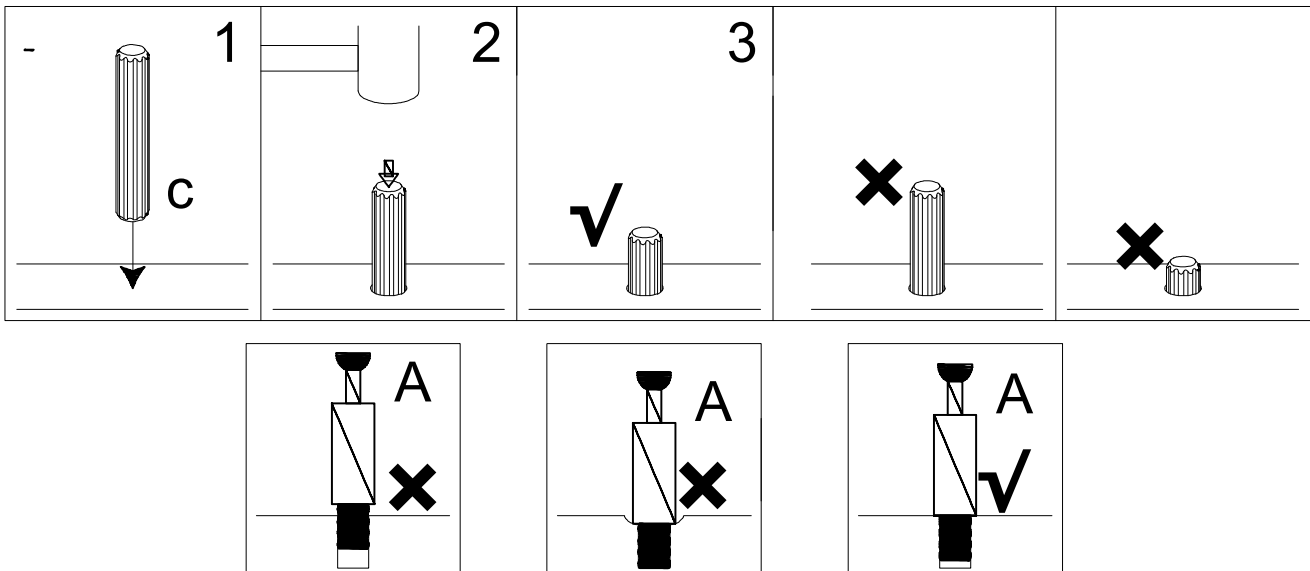

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb,sit or stand on the assembled product.
- For safety reasons,it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting,drilling or hammering into any wall or floor surface,verify the location of electrical, plumbing and gas lines.Cutting may cause serious injury.


Ready to assemble the Multi-purpose lockers

Before installation, observe each structure of the Multi-purpose lockers. The Multi-purpose lockers consists of two main parts. You will assemble the chest first, and then install the Nine drawers. Finally, look at the finished look, and contrast list of part, imagine how to install it faster, hope this will help you.

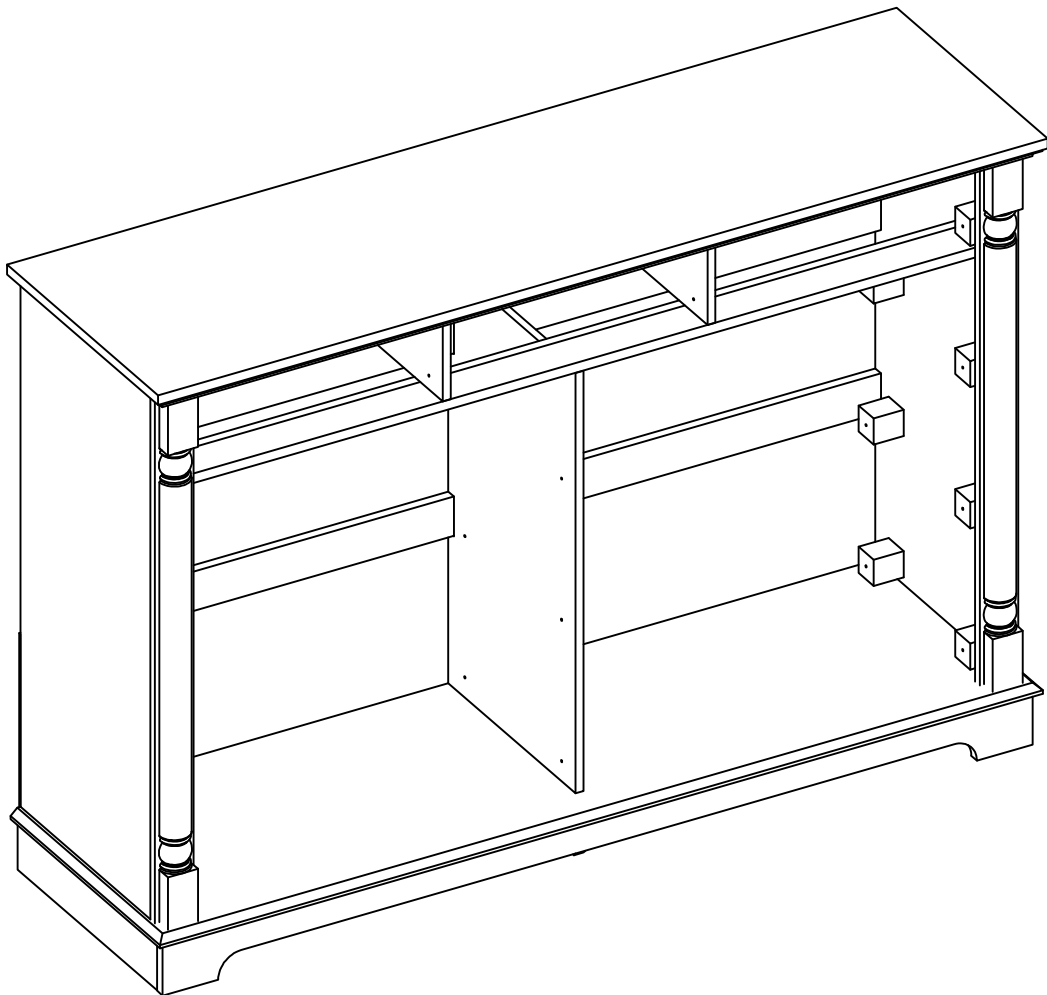

Step 1

Install first rail on the left side of board.

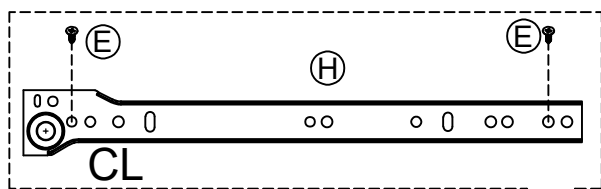


(E)




3.5 x 12MM

E x 8

(H)




HX4

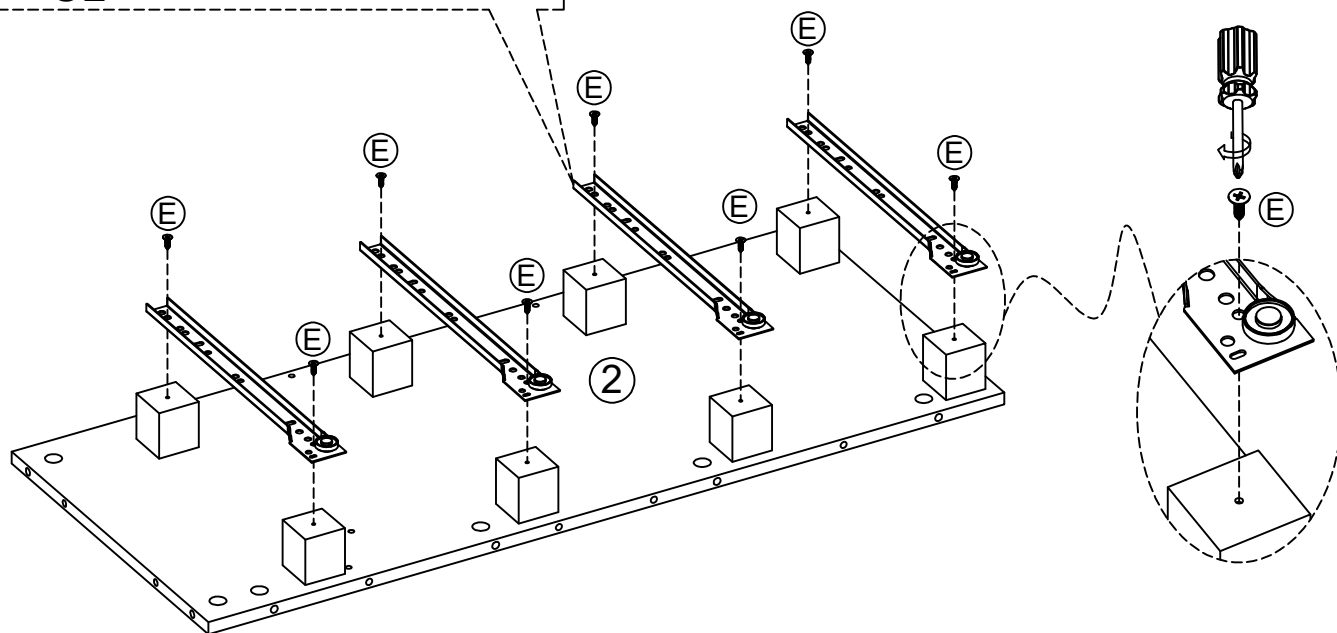

Step 2

Install first rail on the right side of board.

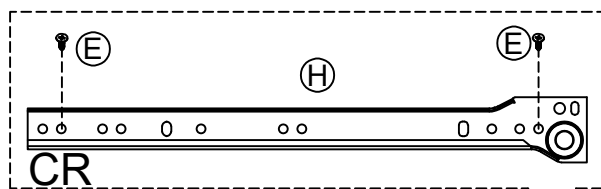


(E)




3.5 x 12MM

E x 8

(H)



HX4

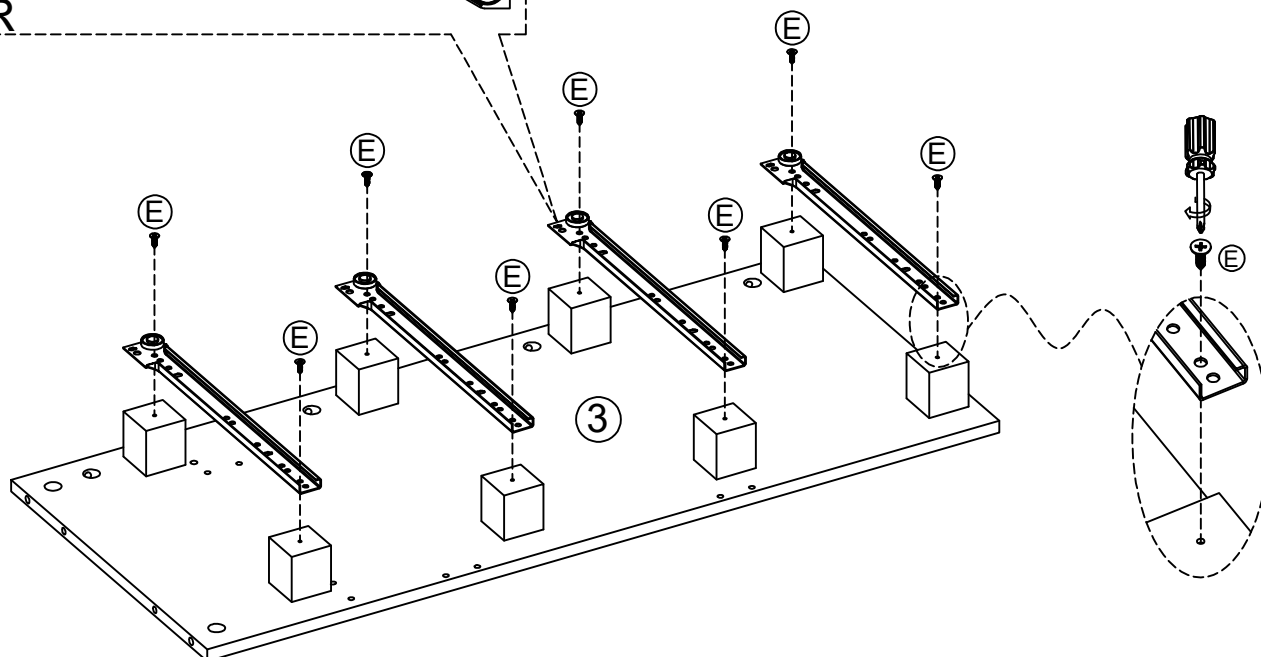

Step 3

E




3.5 x 12MM

E x 8



H




HX2

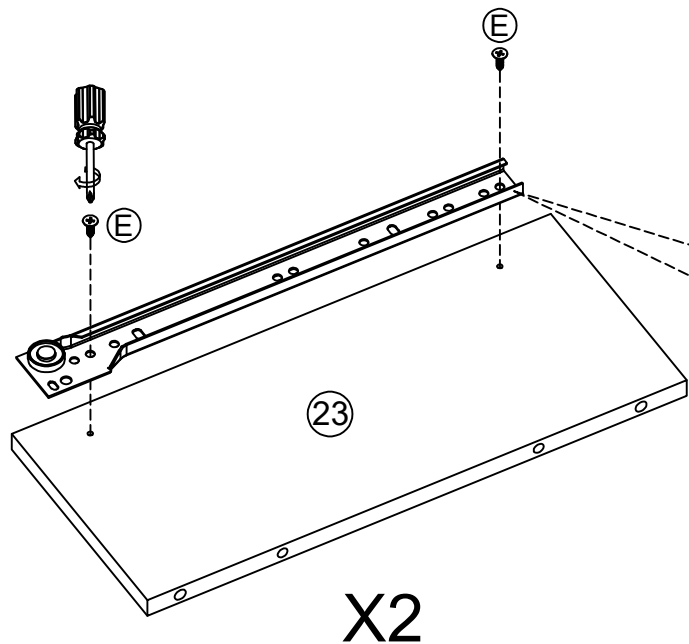

Install second rail on the right side of board.

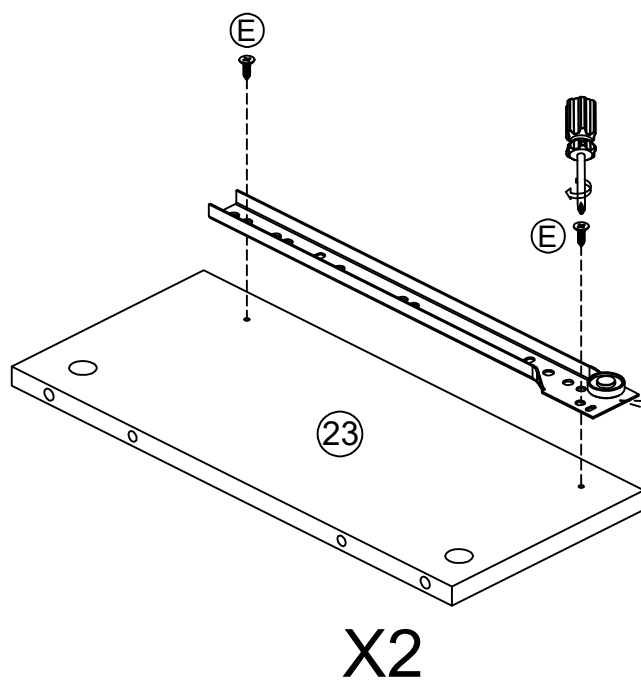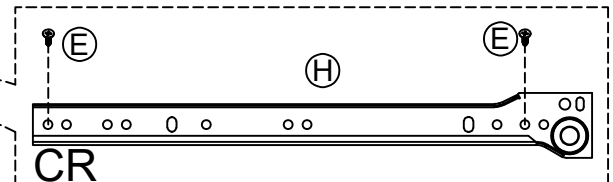

Install first rail on the left side of board.

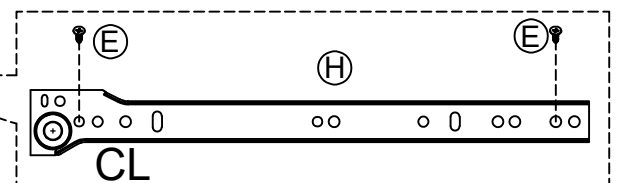

NOTICE: To ensure the stability of the structure, please pay attention to the hole position when locking screws. CL slide should lock on the first hole position near the pulley, CR slide lock on the second hole position near the pulley.

Step 4

E




3.5 x 12MM

E x 12



H




HX3

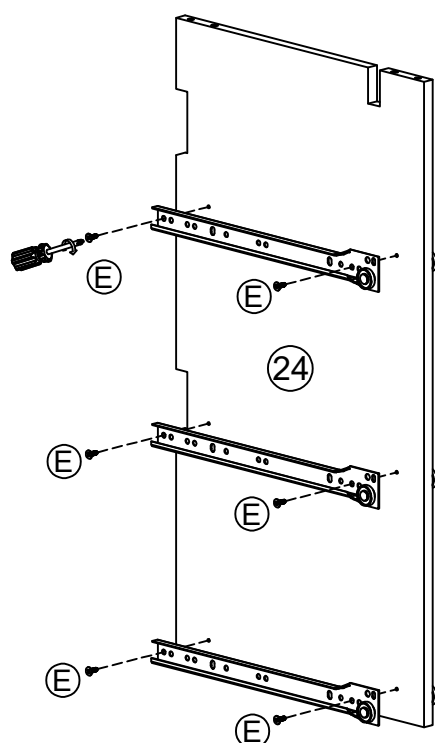

Install second rail on the right side of board.

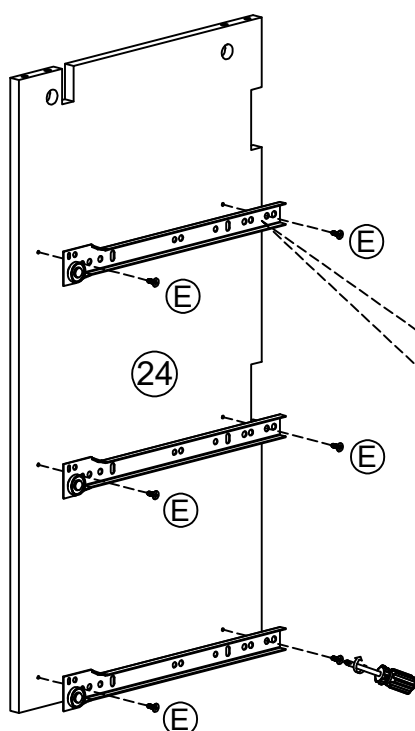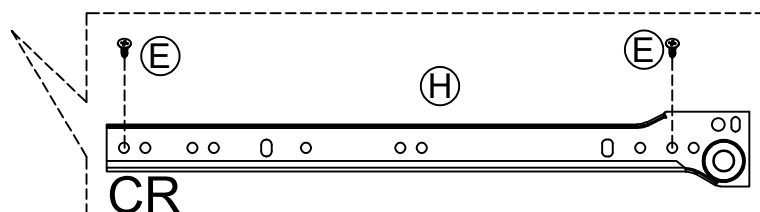


Install first rail on the left side of board.

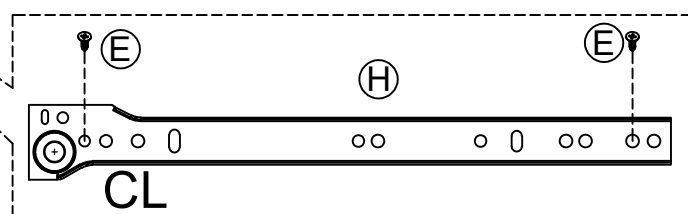

NOTICE: To ensure the stability of the structure, please pay attention to the hole position when locking screws. CL slide should lock on the first hole position near the pulley, CR slide lock on the second hole position near the pulley.

Step 5

A




Ax4

B








Bx4

C




6 x 30MM

C x 4

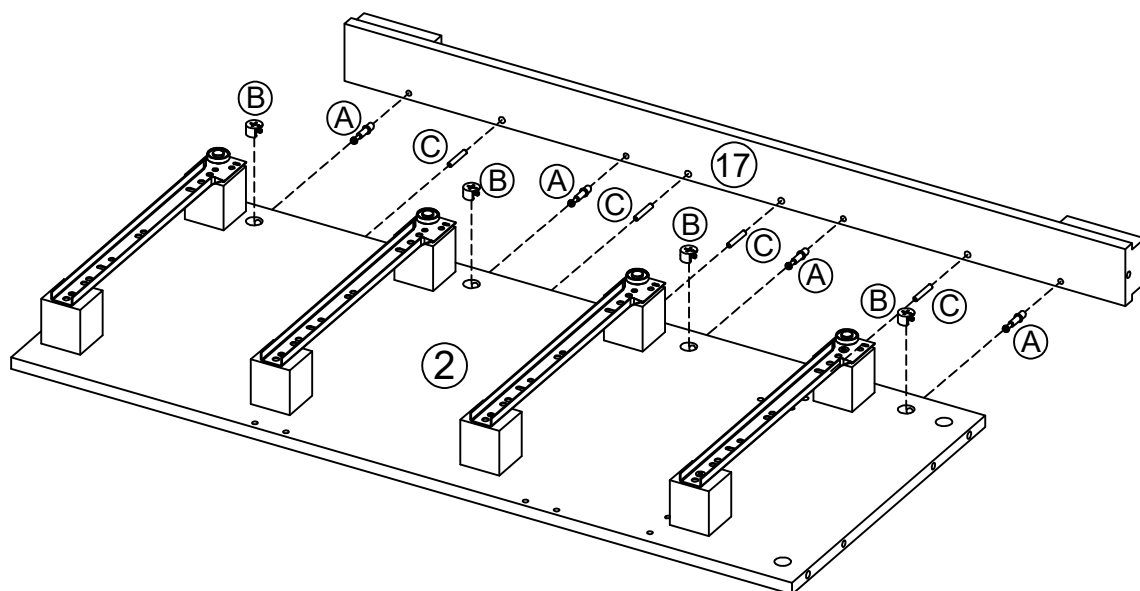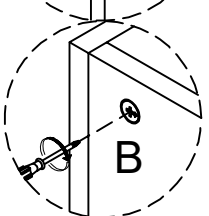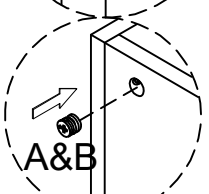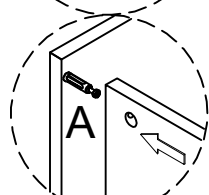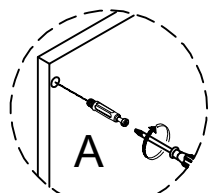

Step 6

A



Ax4

B








Bx4

C




6 x 30MM

C x 4

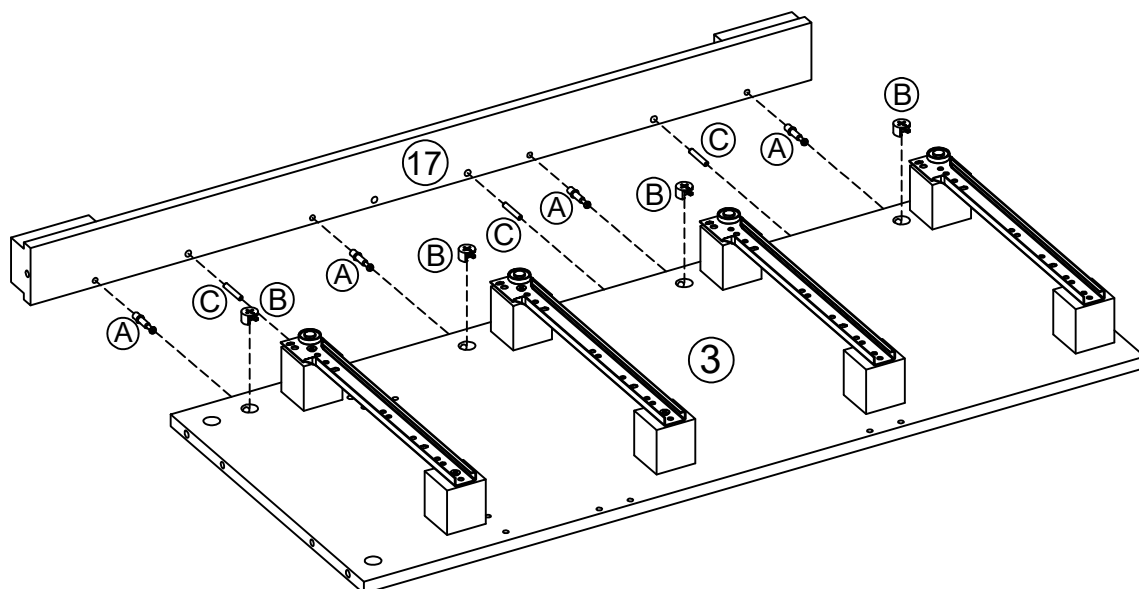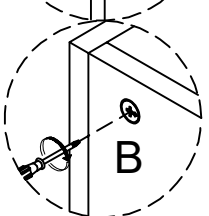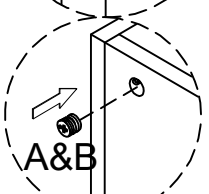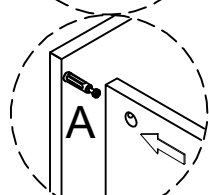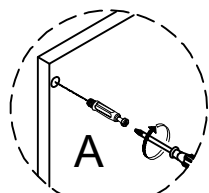

Step 7

A




Ax4

B





Bx4

D



8 x 30MM

D x 2

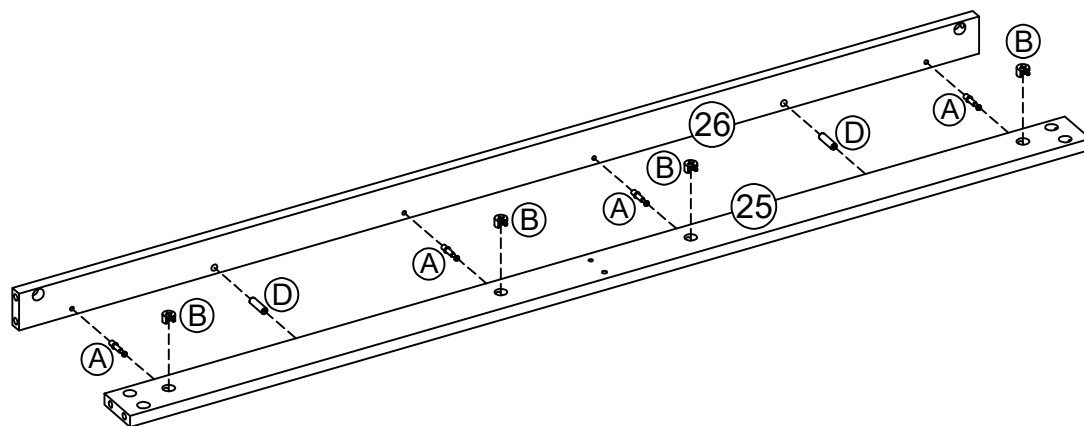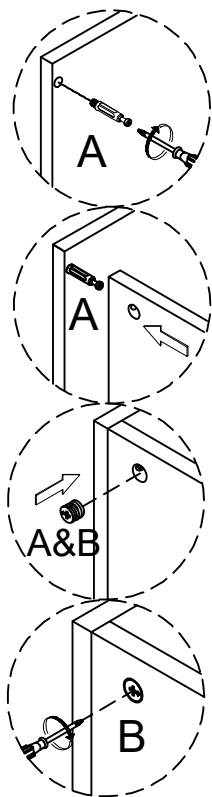


Step 8

F




3.5 x 35MM

F x 2

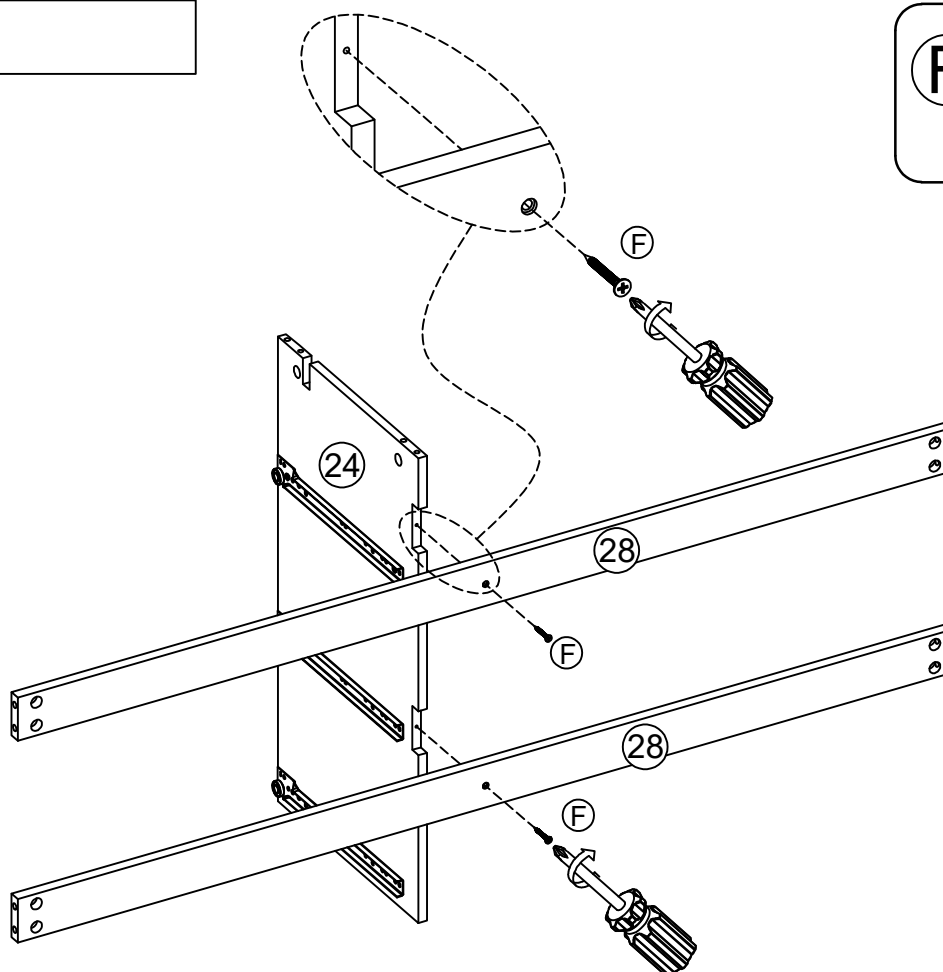

Step 9

A



Ax2

B





Bx2

C




6 x 30MM

C x 2

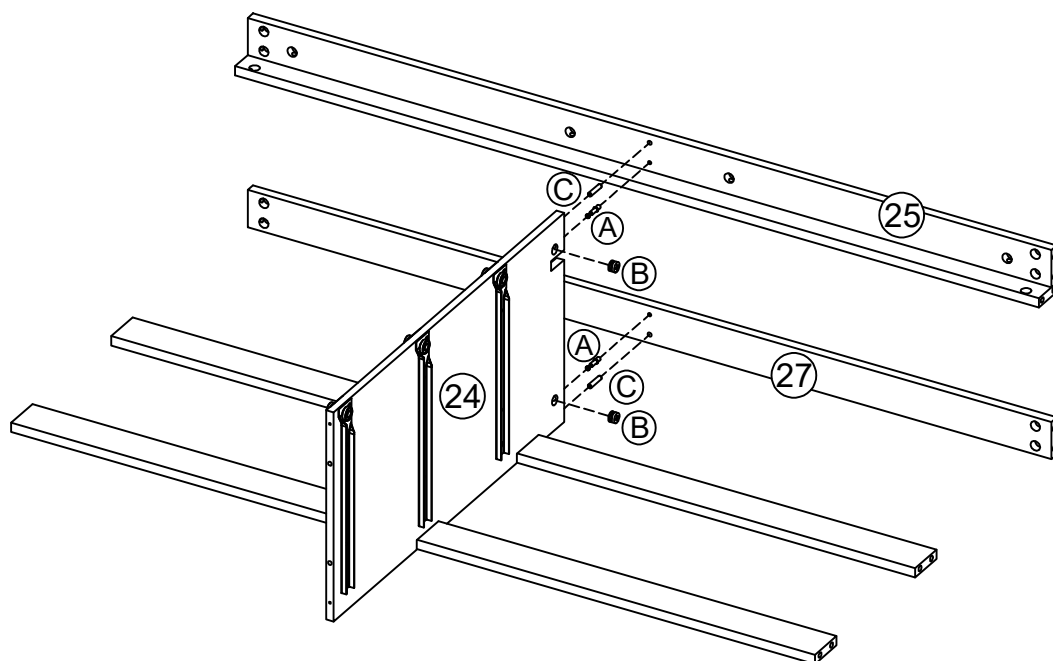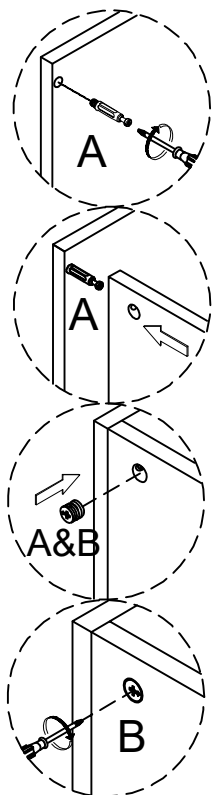

Step 10

A



Ax9

B





Bx9

D




8 x 30MM

D x 1

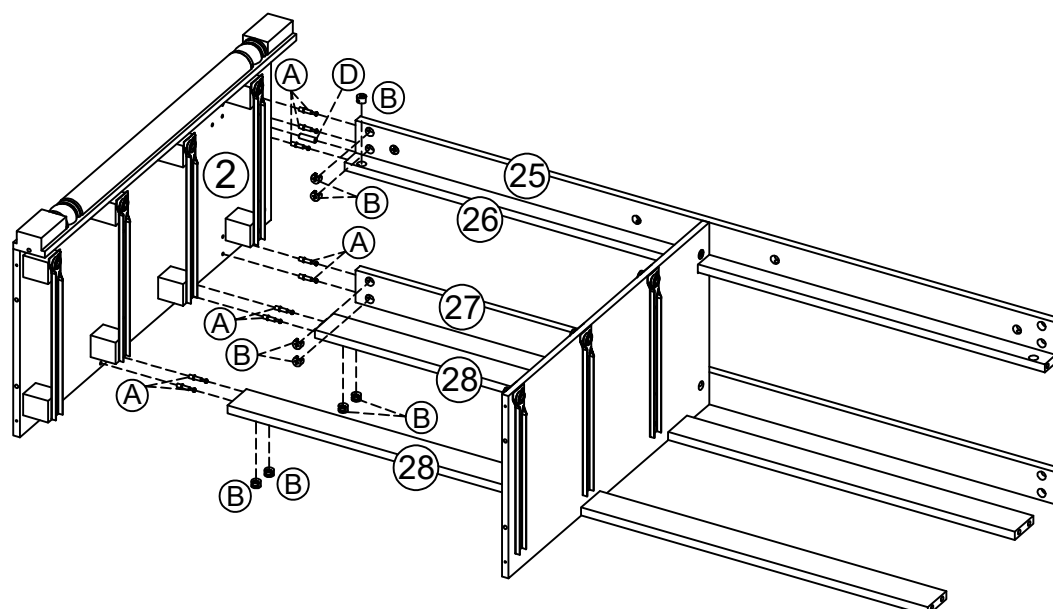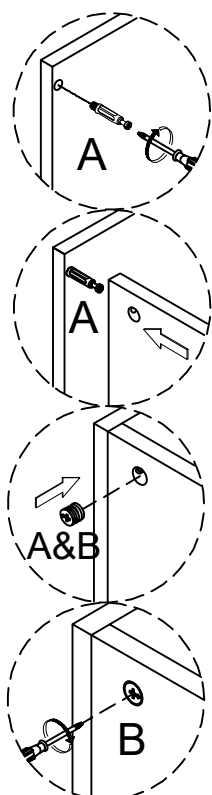

Step 11

A




Ax9

B





BX9

D



8 x 30MM

D x 1

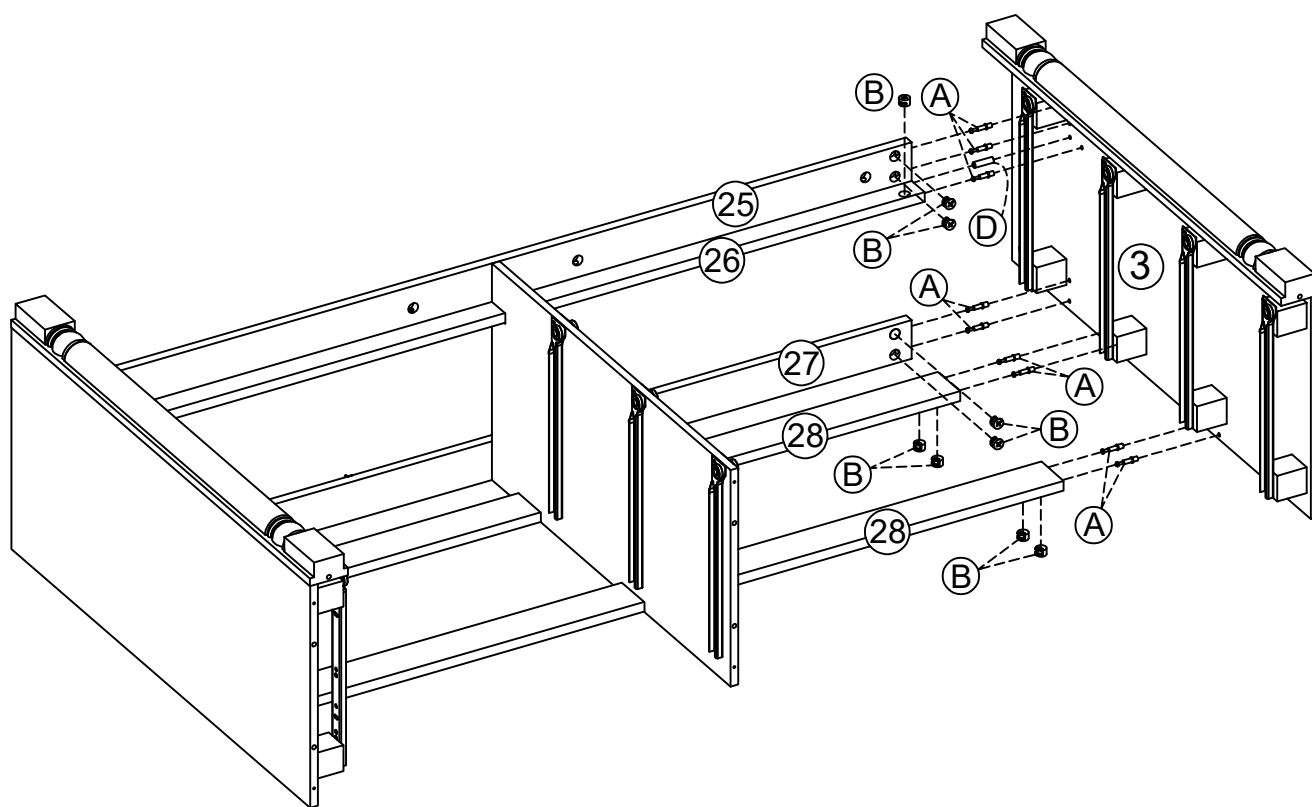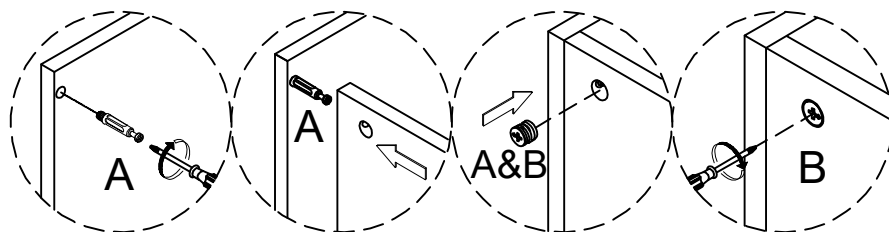

Step 12

C



6 x 30MM


C x 6

F




3.5 x 35MM

F x 6

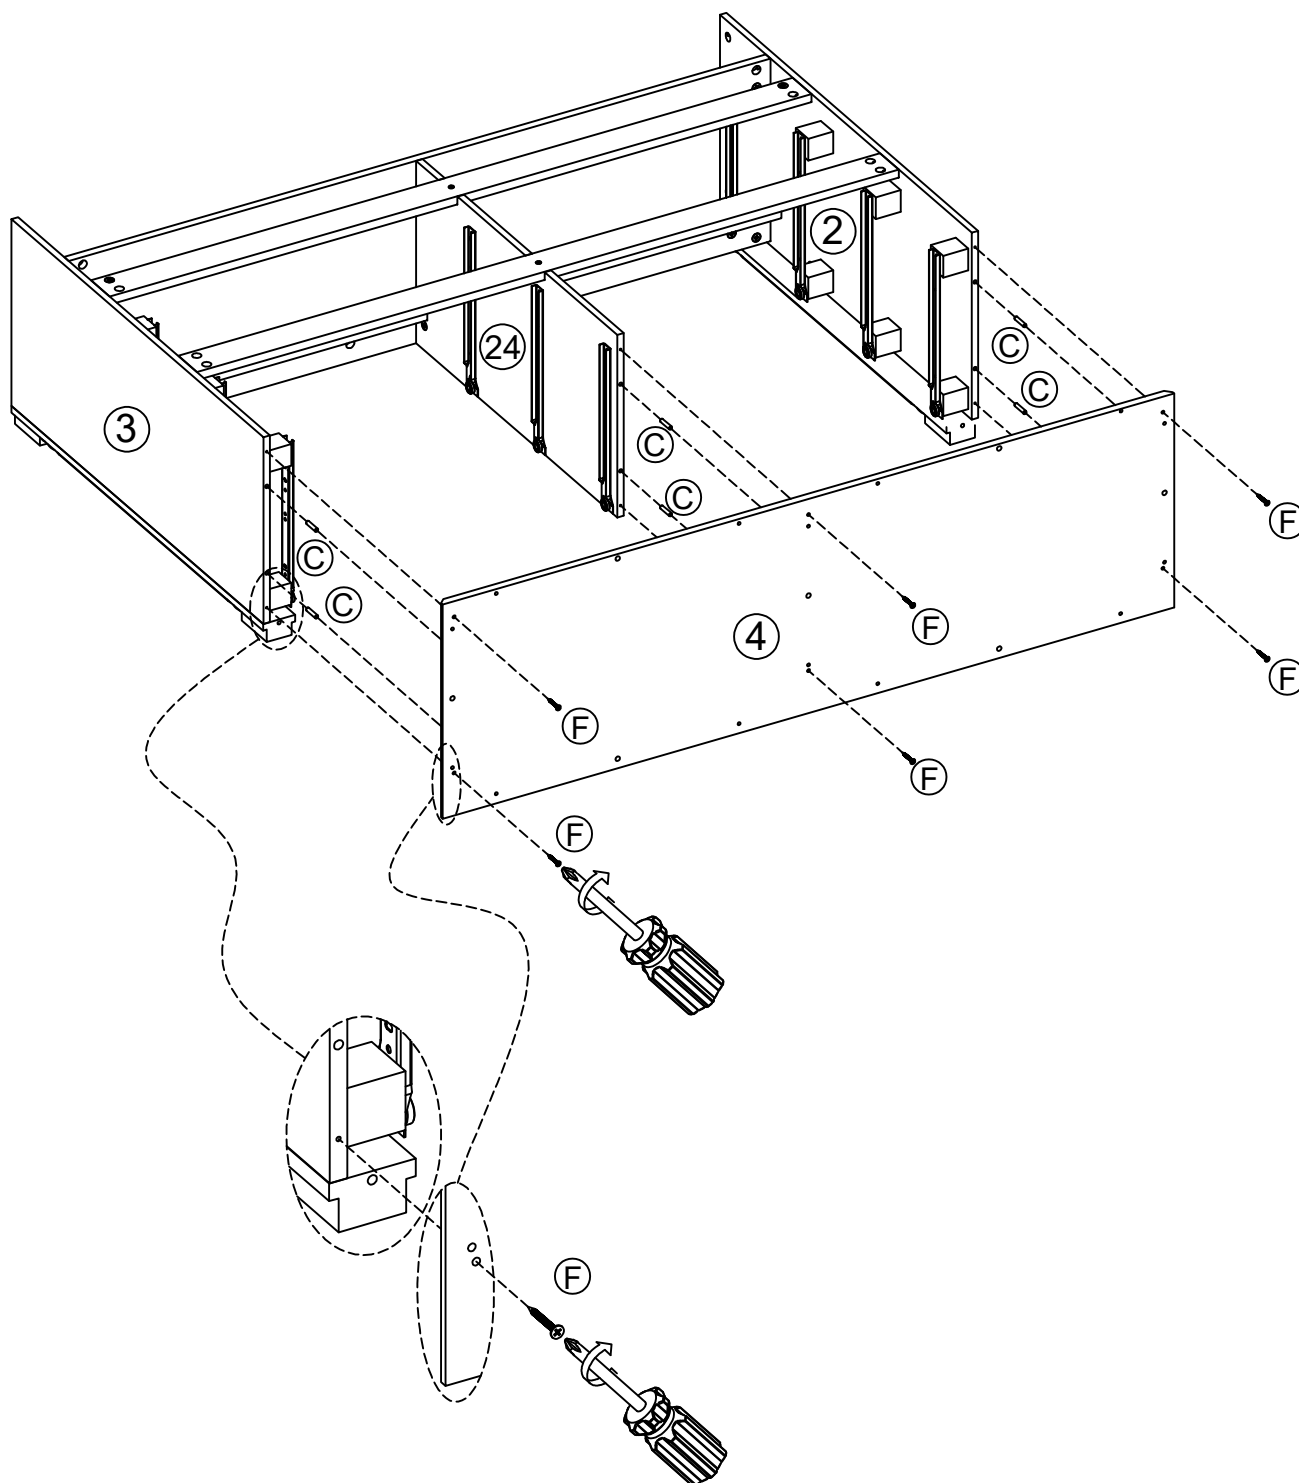

Step 13

A





Ax5

B




BX5

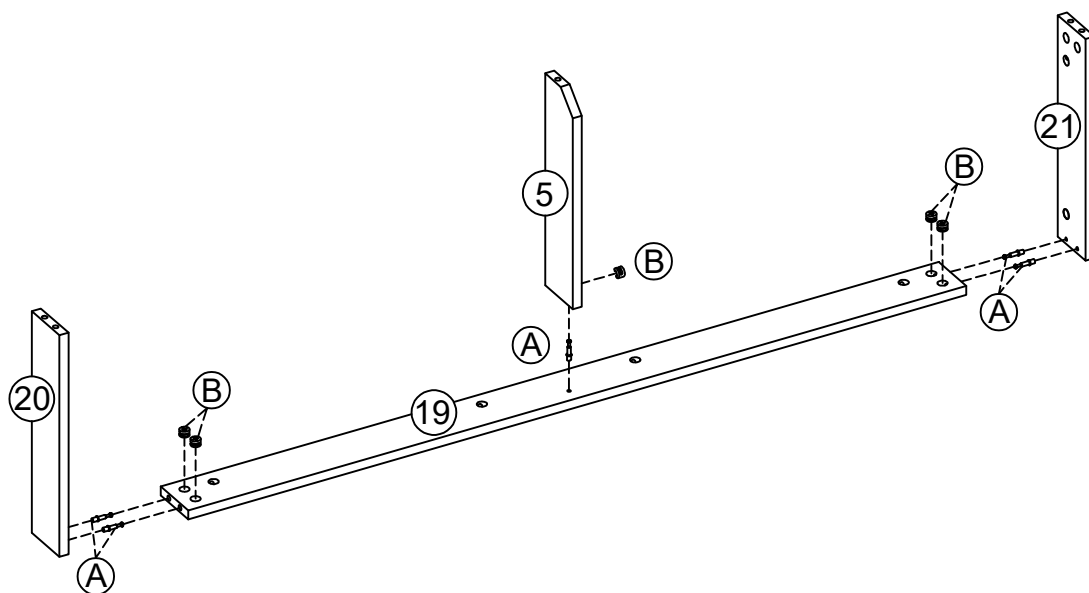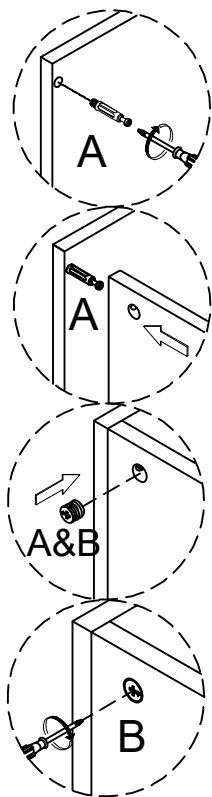

Step 14

A





Ax5

B




BX5

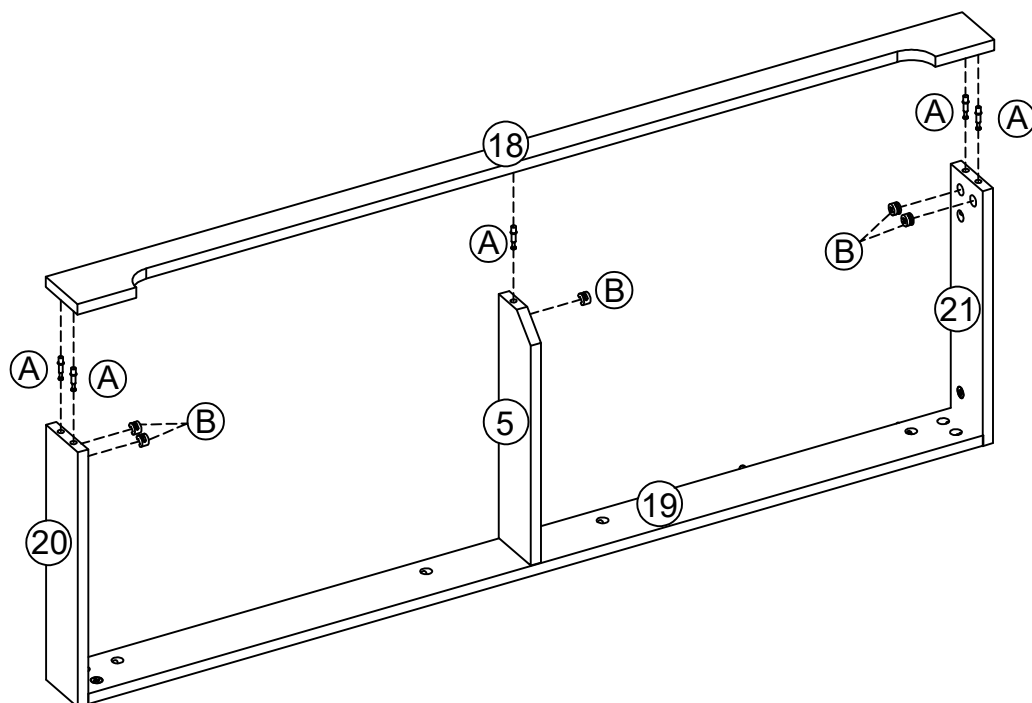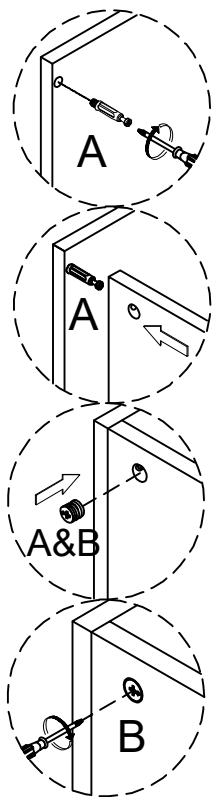

Step 15

A




Ax14

B





Bx14

D



8 x 30MM

D x 7

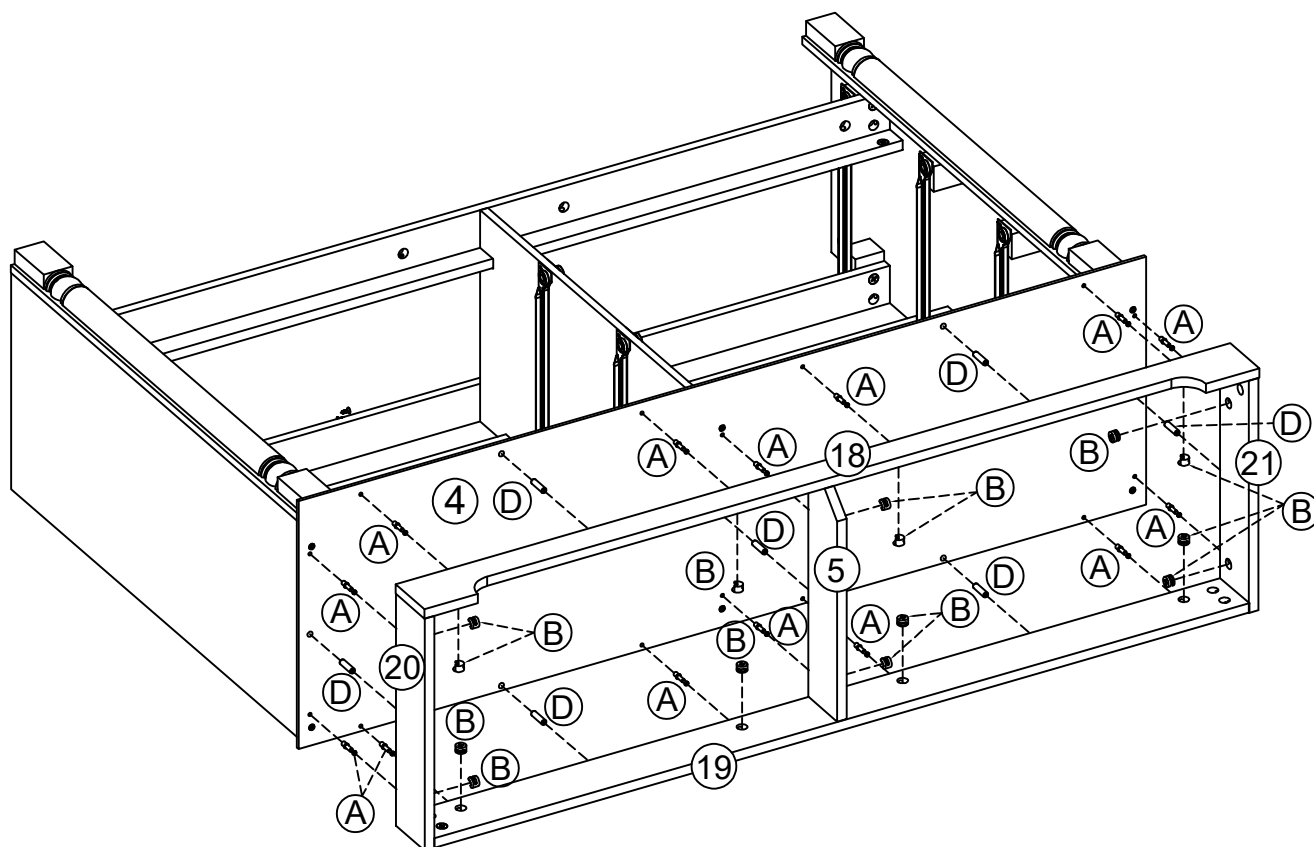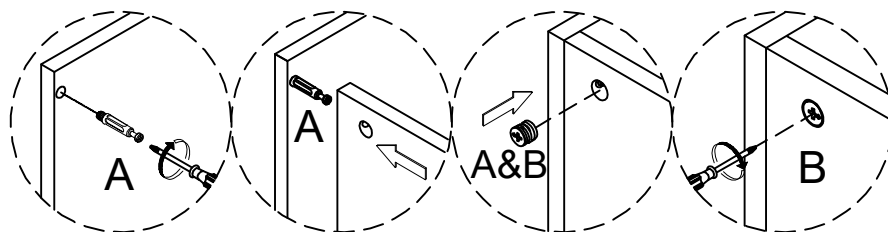

Step 16

C



6 x 30MM


C x 4

F




3.5 x 35MM

F x 4

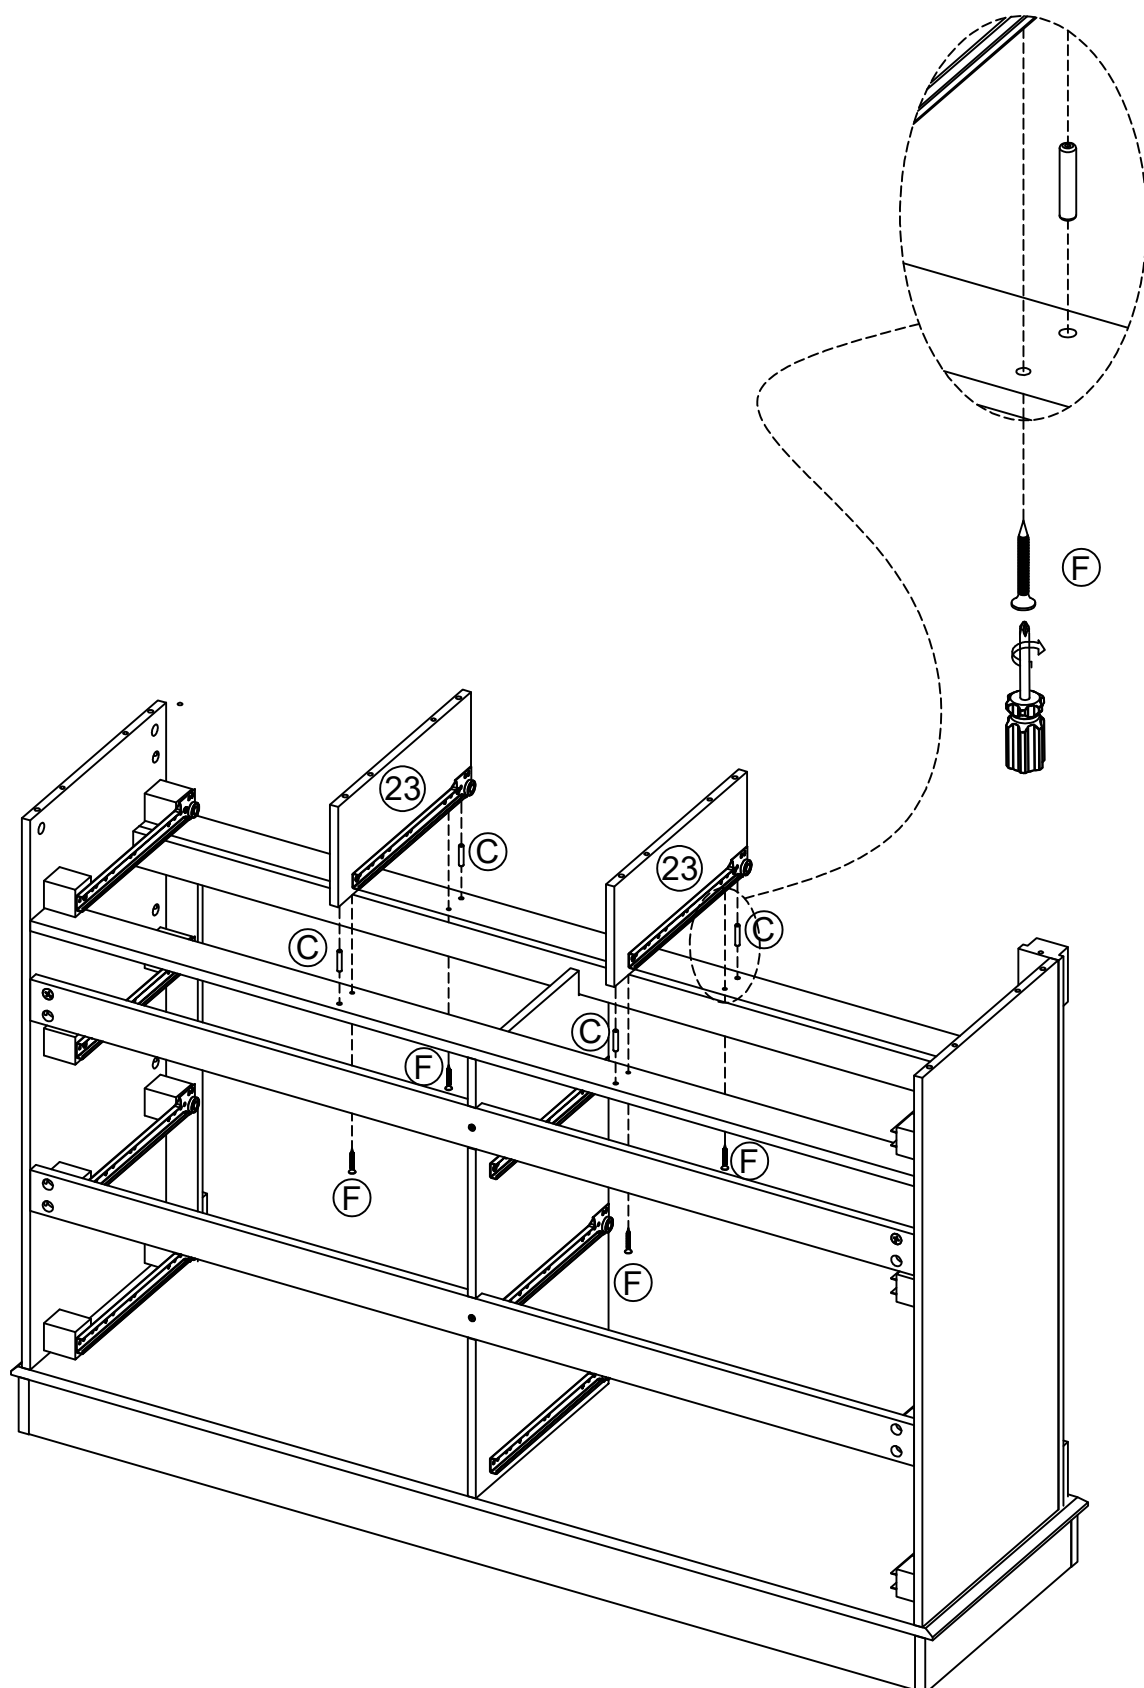

Step 17

A




Ax8

B





Bx8

C



6 x 30MM

C x 10

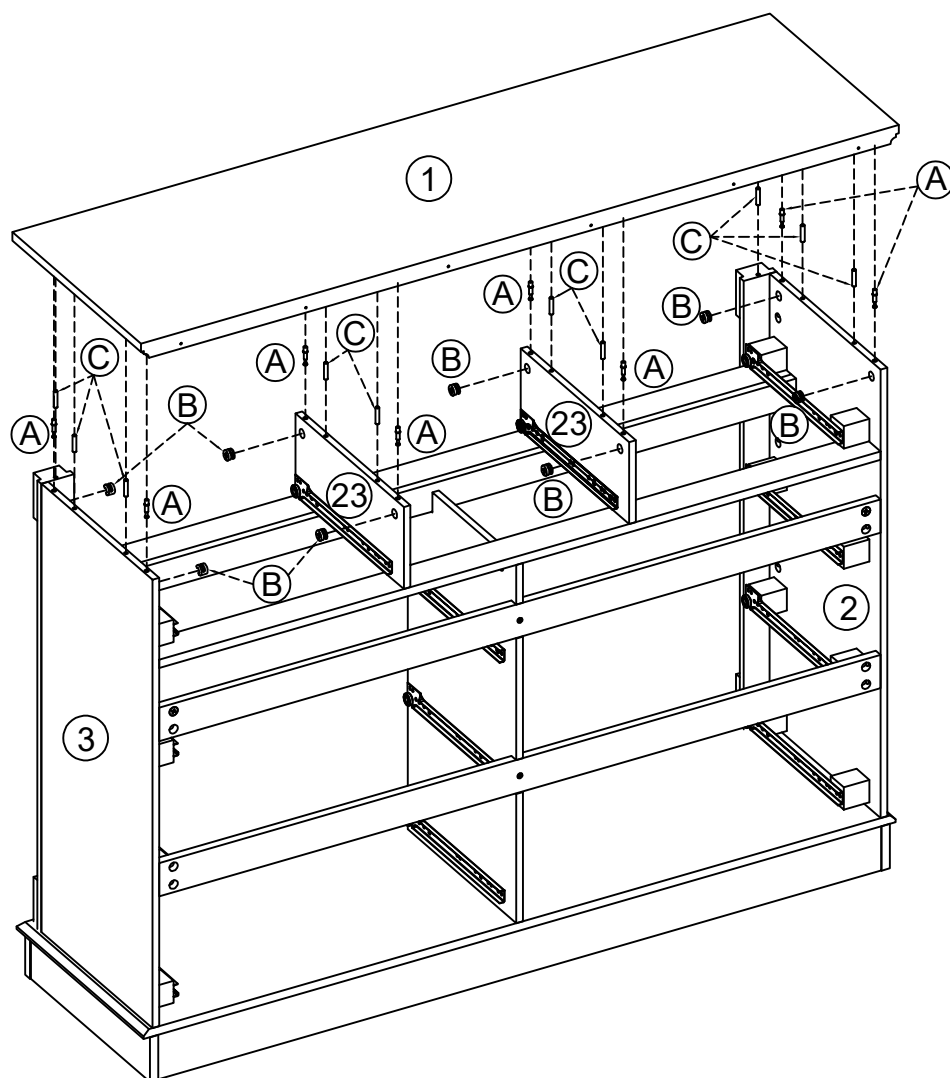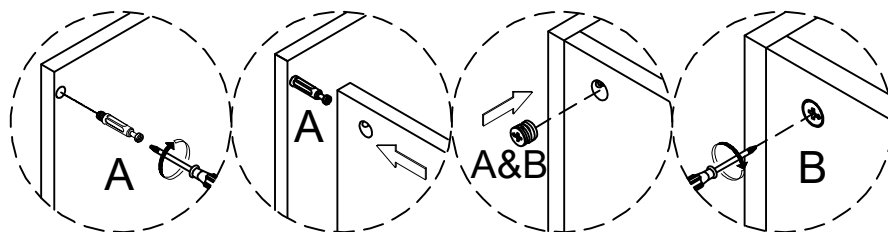

Step 18


I




3.5 x 12MM

I x 50









J









J x 1

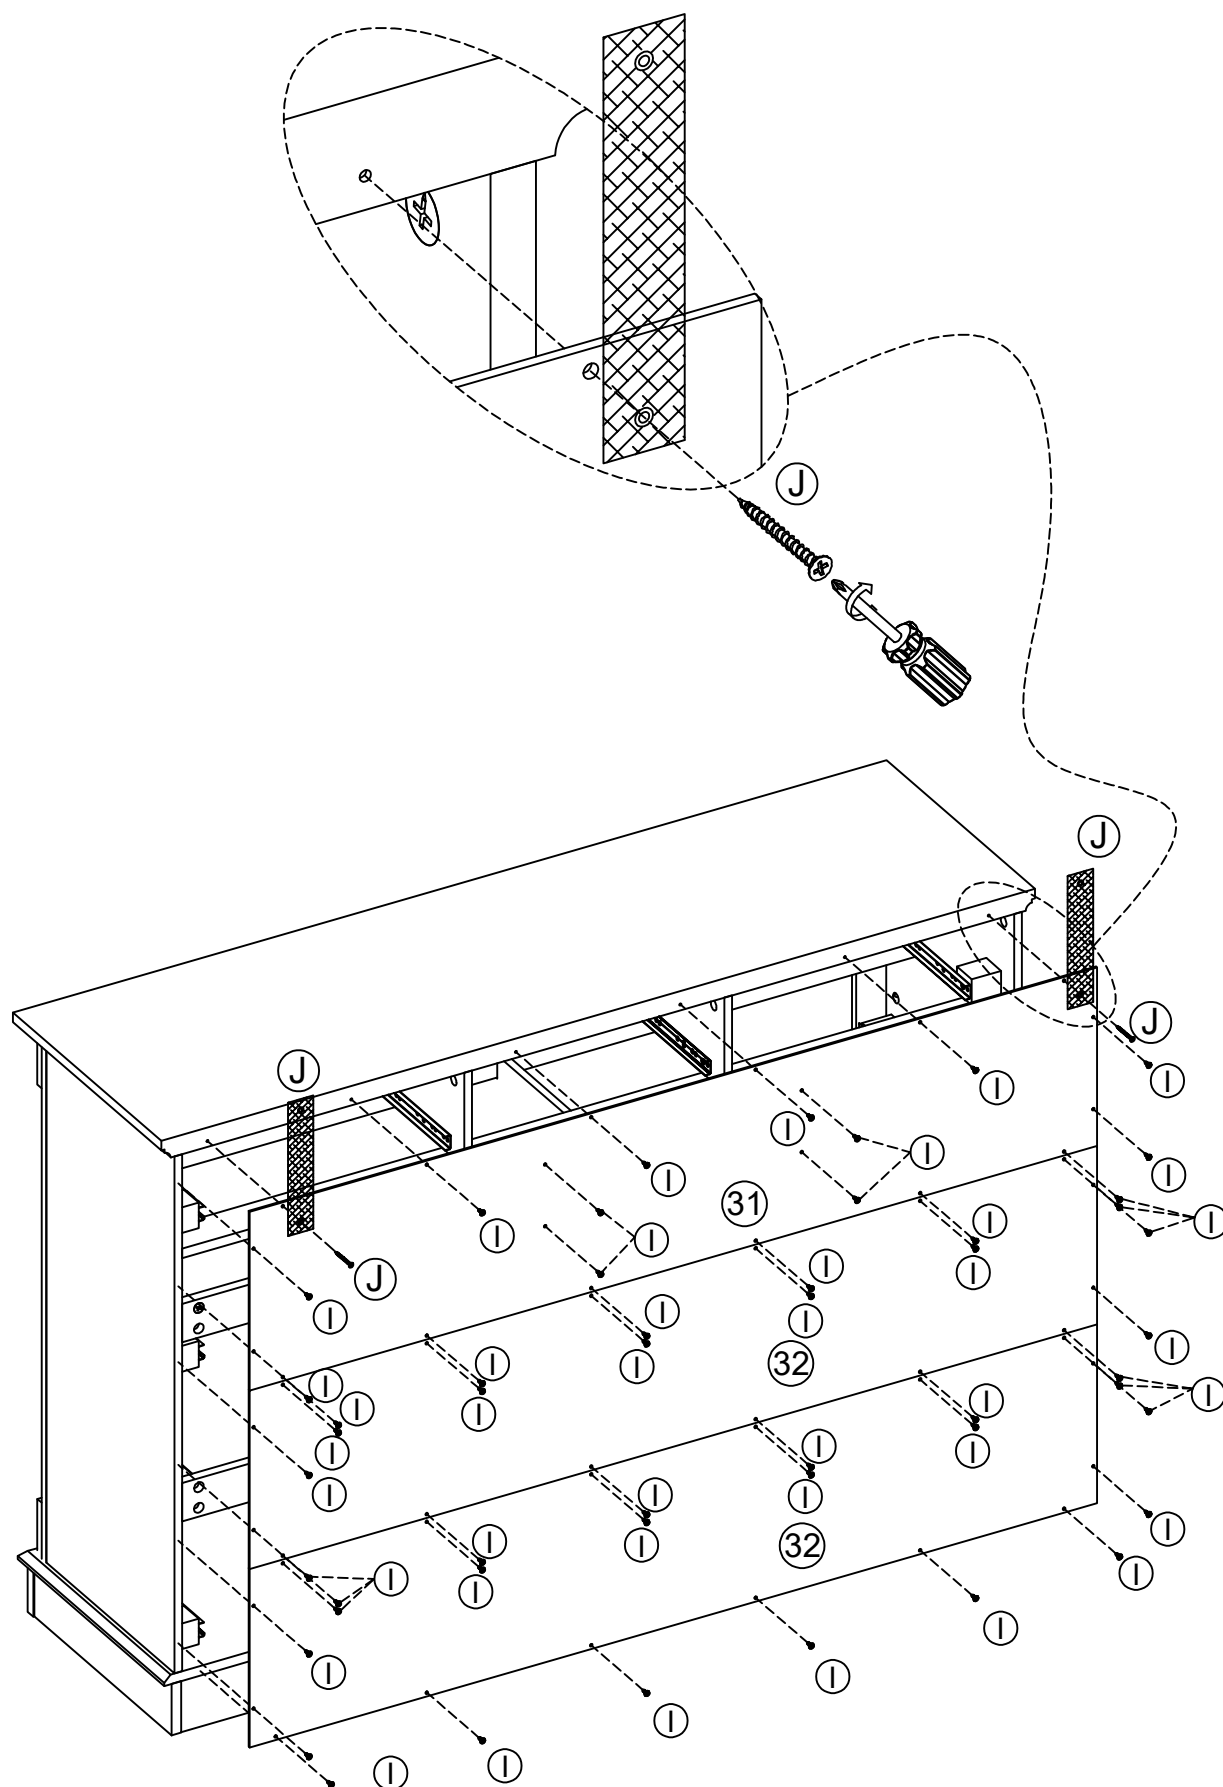







Step 19

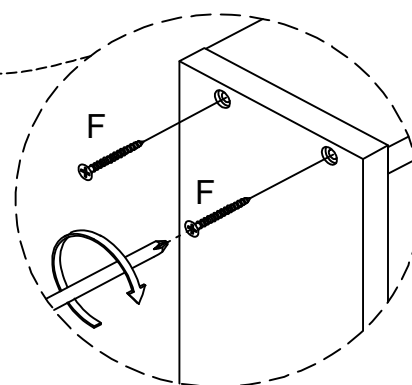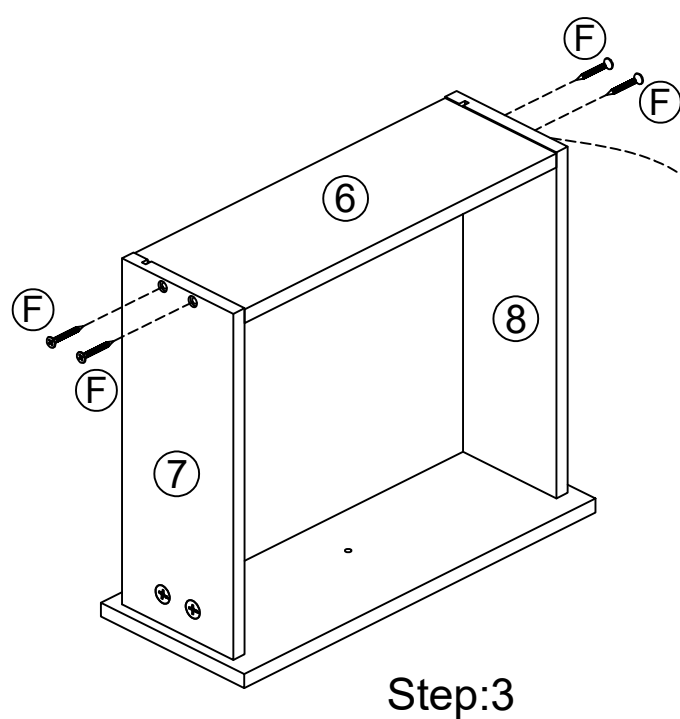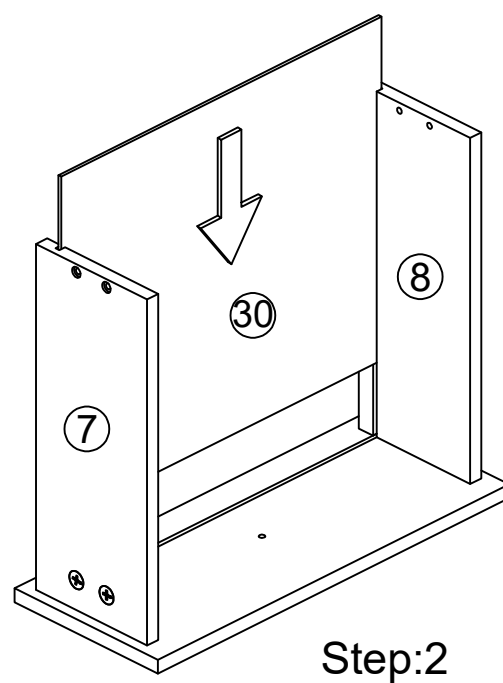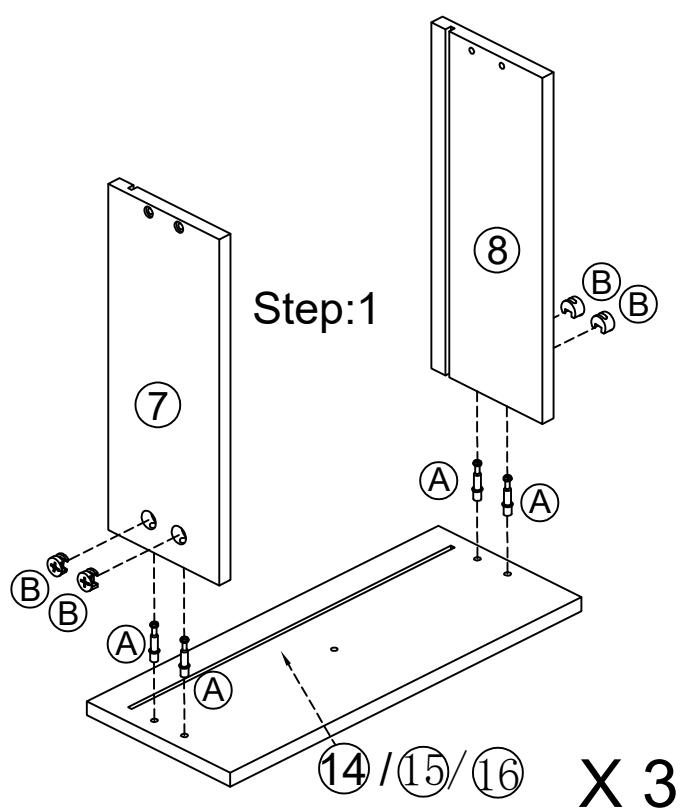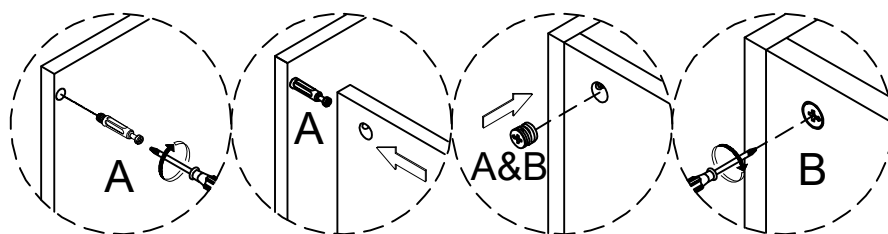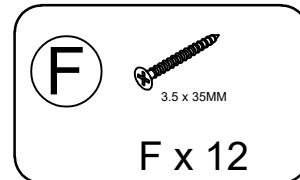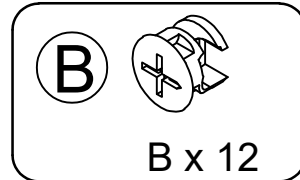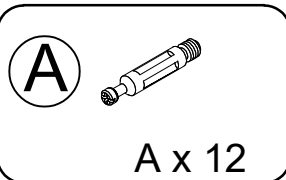

Step 20

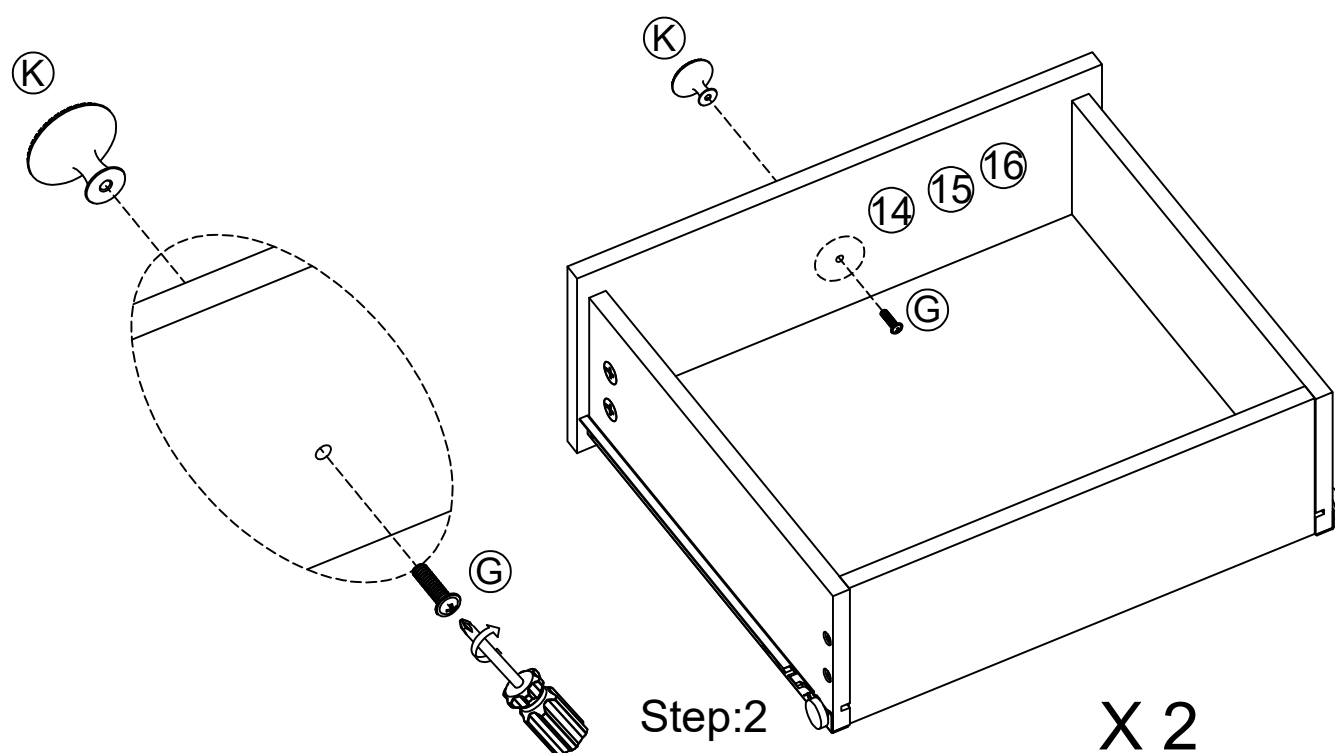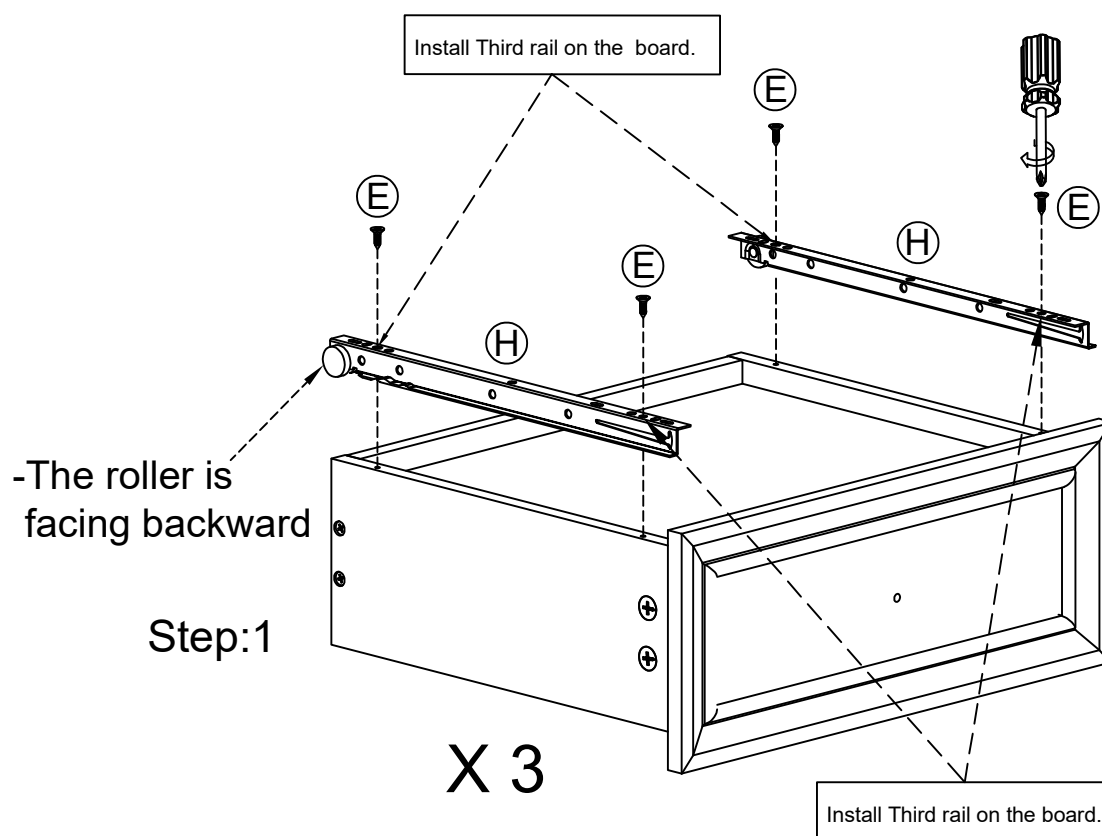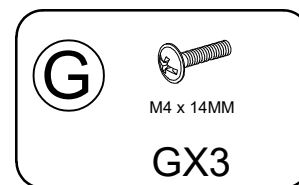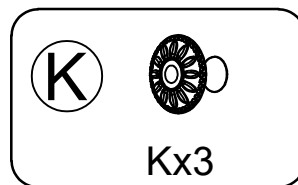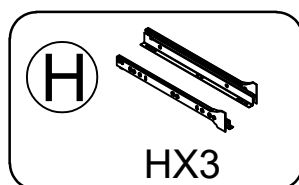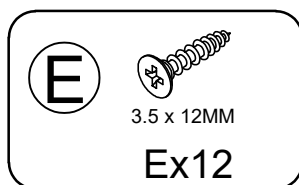

Step 21

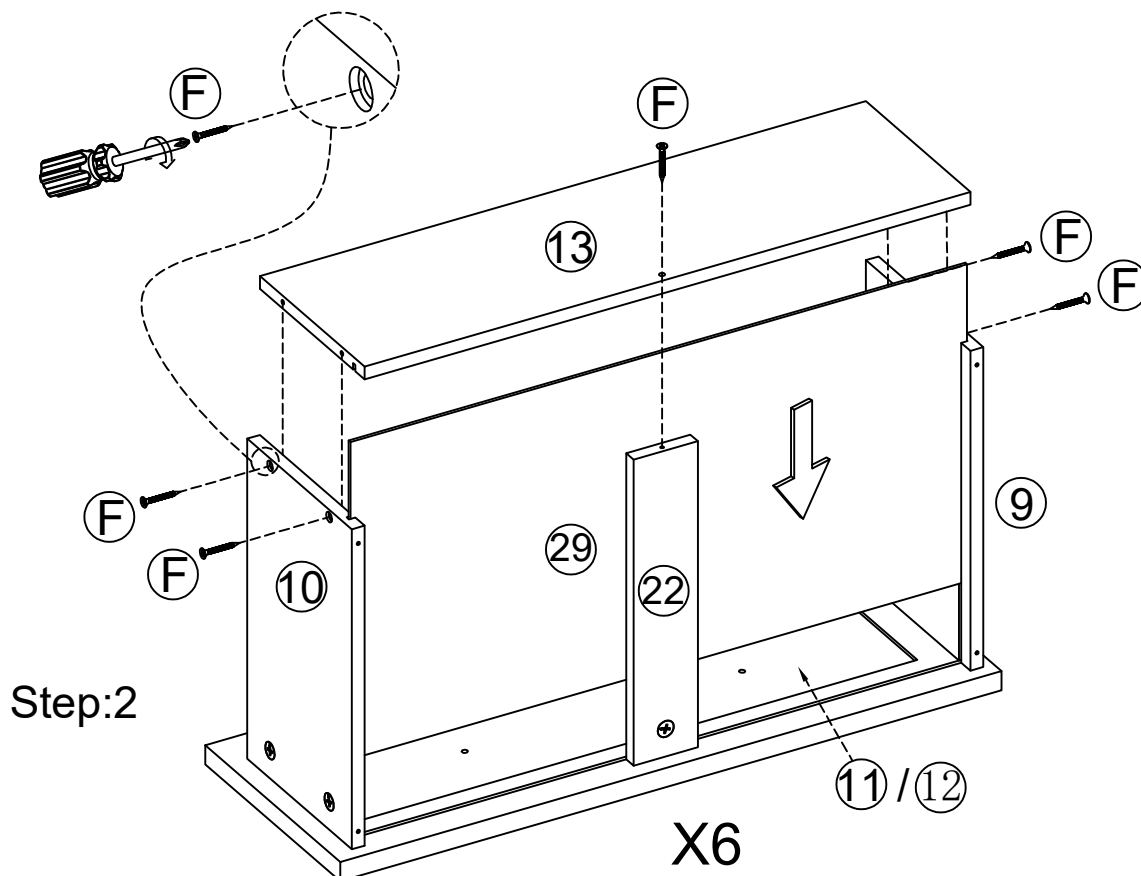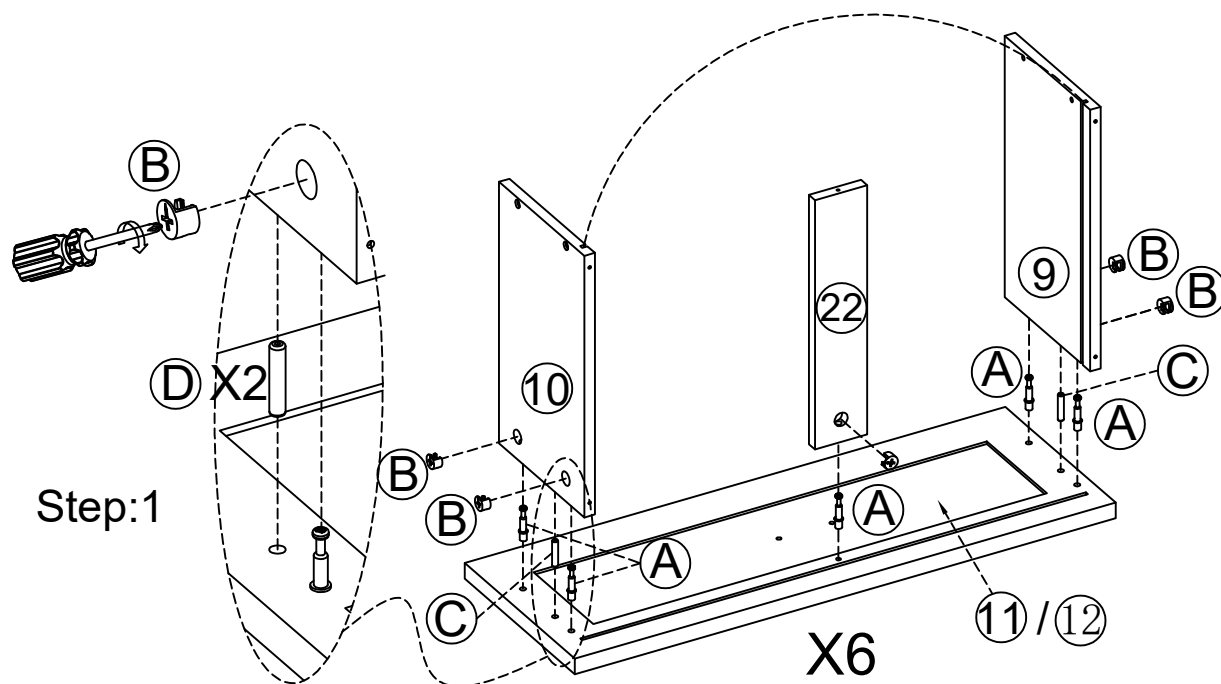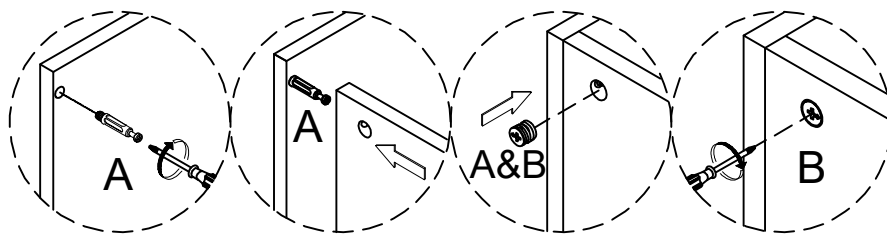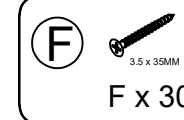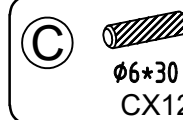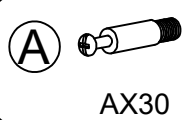

Step 22

G



M4 x 14MM


GX12

E



Ø3.5*12mm
EX24

H



HX6

L



L x 6sets

Install Third rail on the board.

-The roller is
facing backward

Step:1


X6

Install Third rail on the board.

Step:2


X6

Step 23

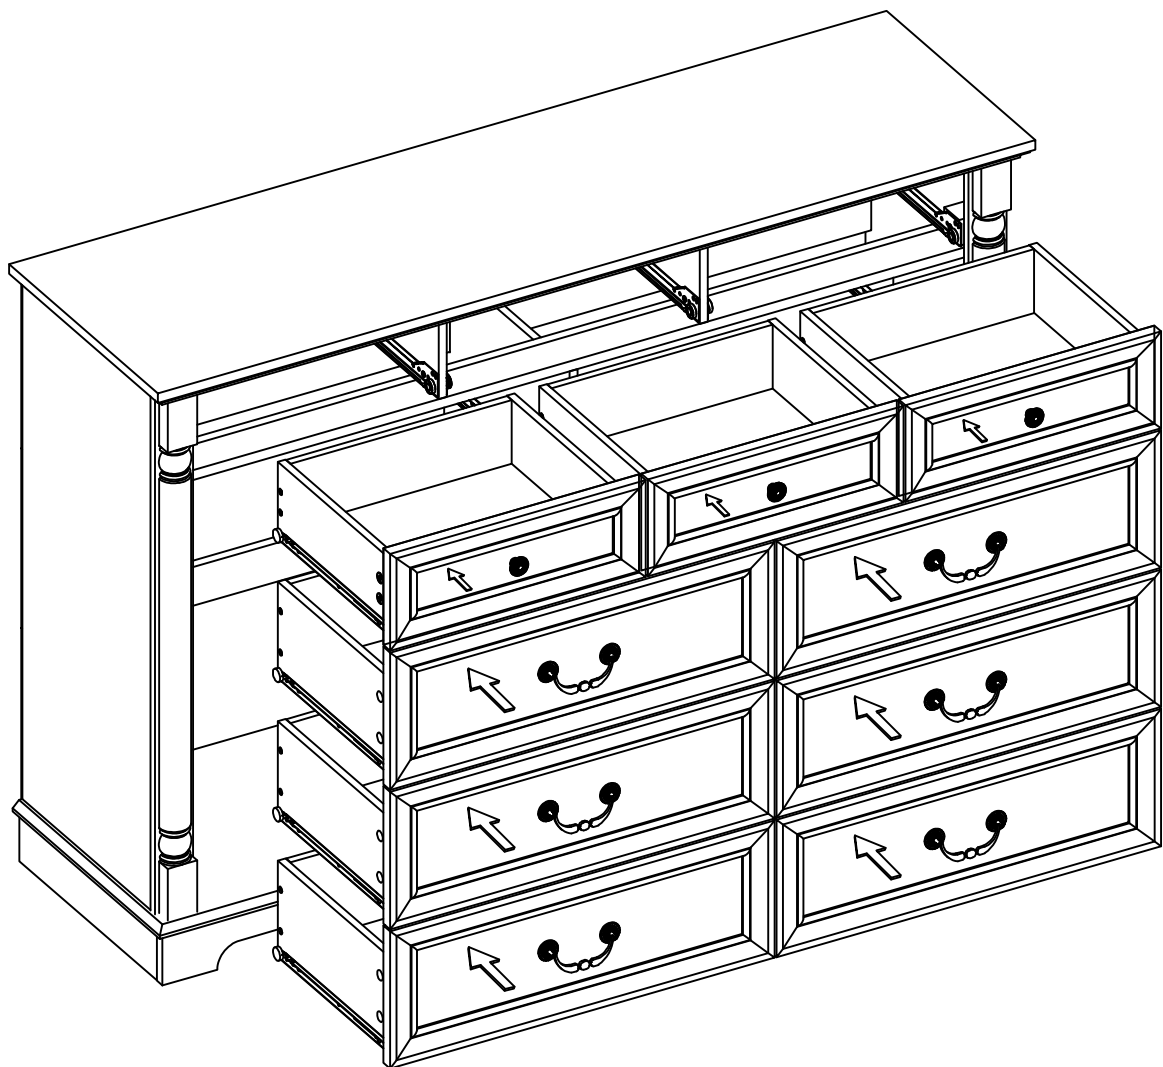


Step 24

J



J x 1

WALL

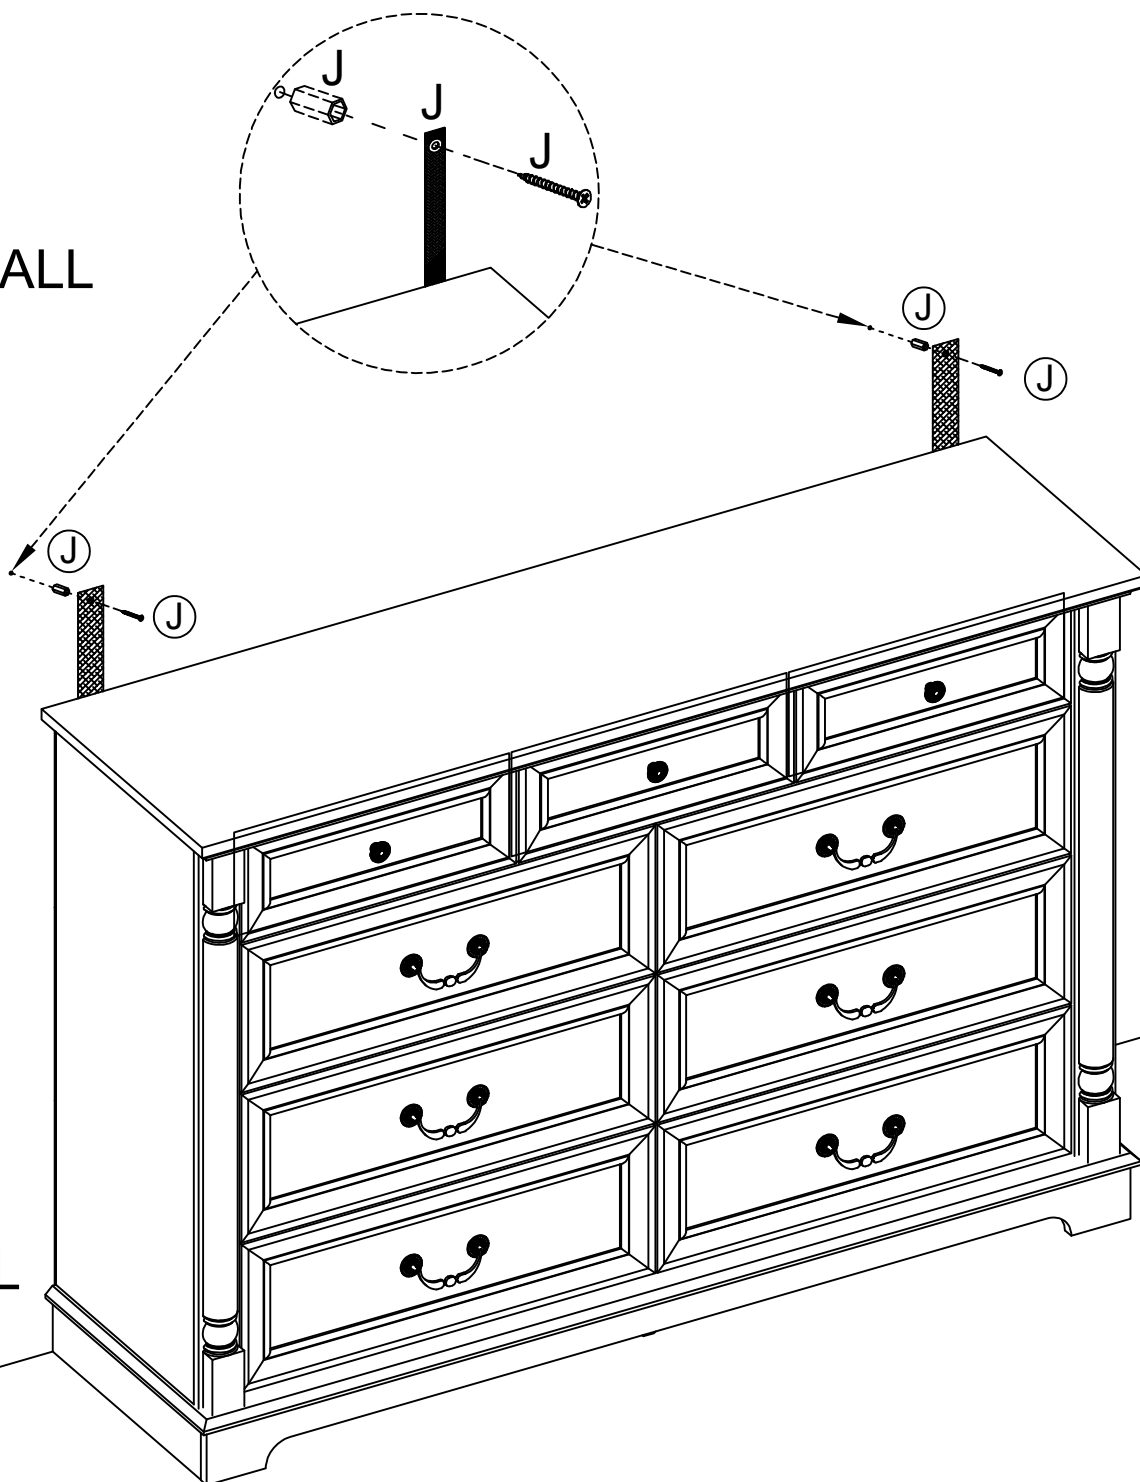

WALL