
DA0301

There are two ways to choose to install the door on the left side. If you want Install the cabinet door to the right side, please check Installation steps on the other side of the manual.

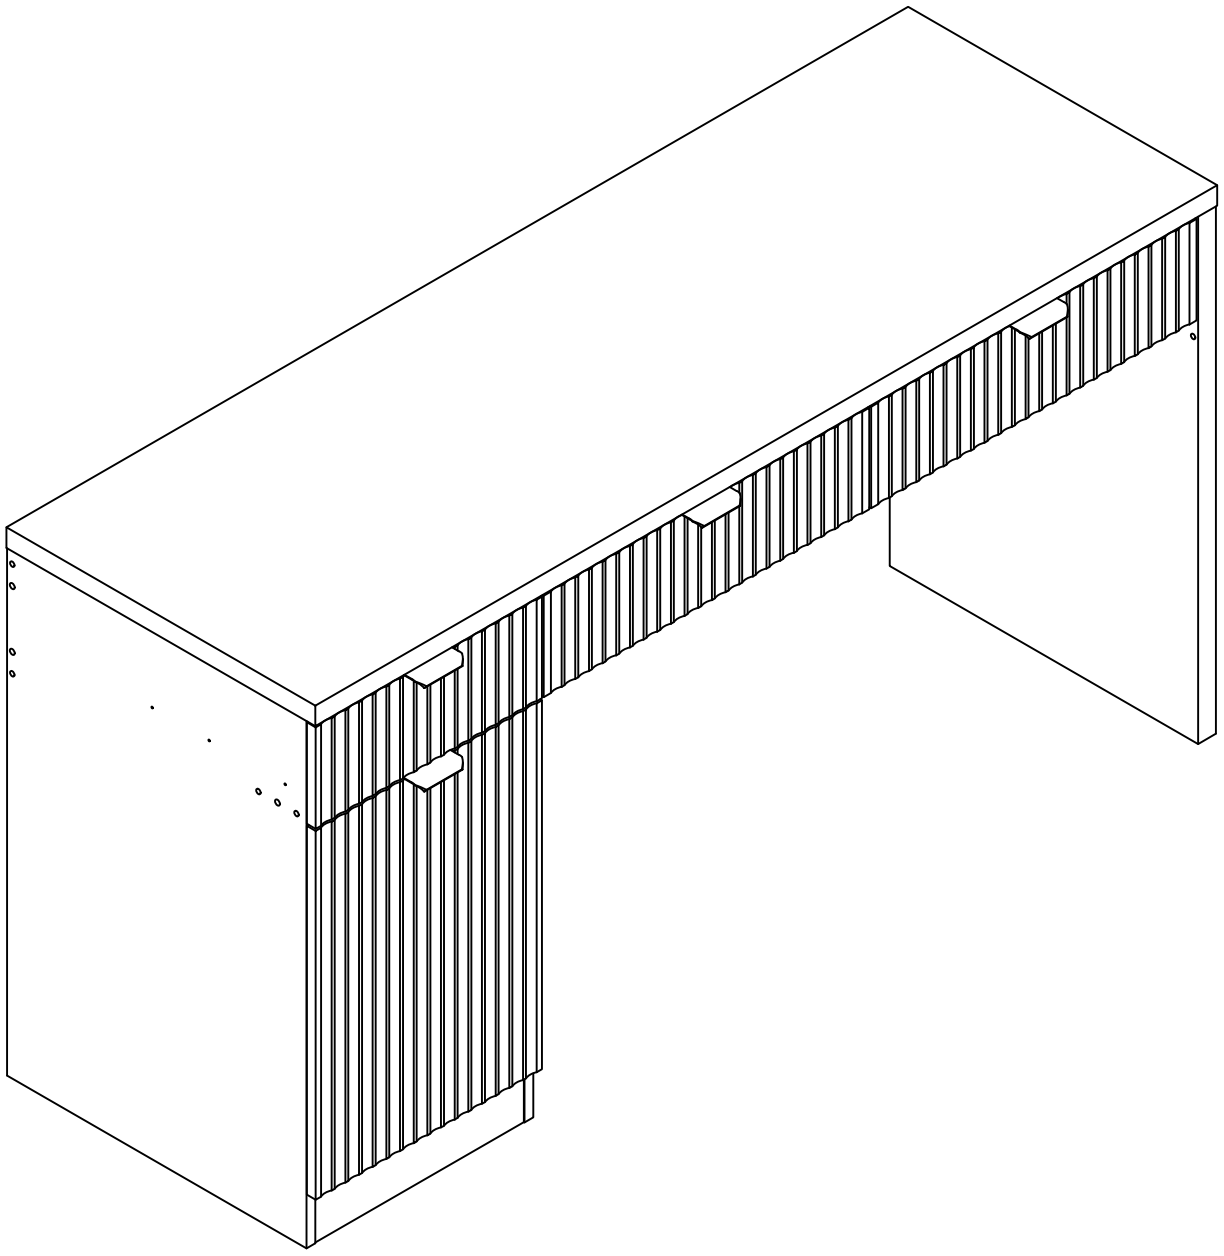


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

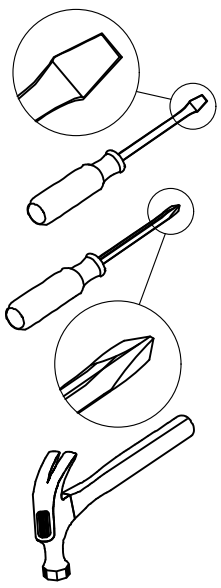


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**


- Open your item in the area you plan to keep it to avoid excessive heavy lifting.

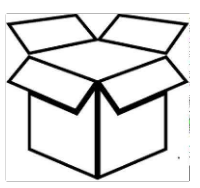

- Identify, sort and count the parts before attempting assembly.




- Compression dowels are lightly tapped in with a hammer.

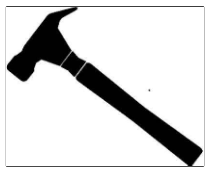


- Slides are labeled with an **R** (right) and **L** (left) for proper placement.


- Make sure to always face the point on the top of the Cam Lock towards the outer edge.

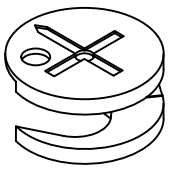

- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.

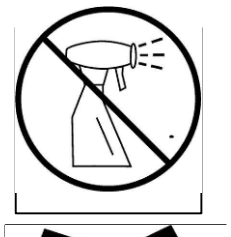

-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.

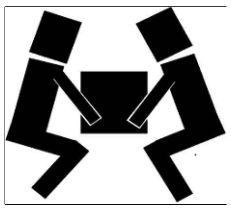


- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

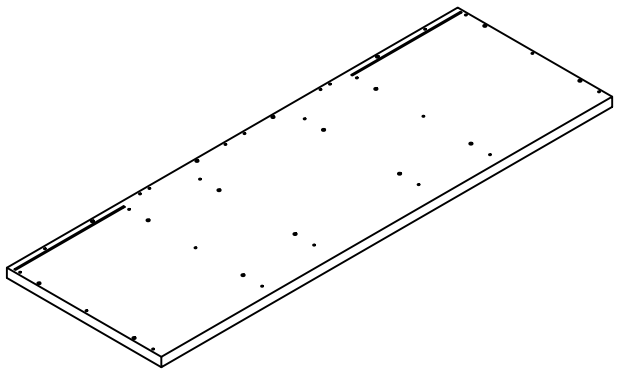


① DESK TOP
Qty:1

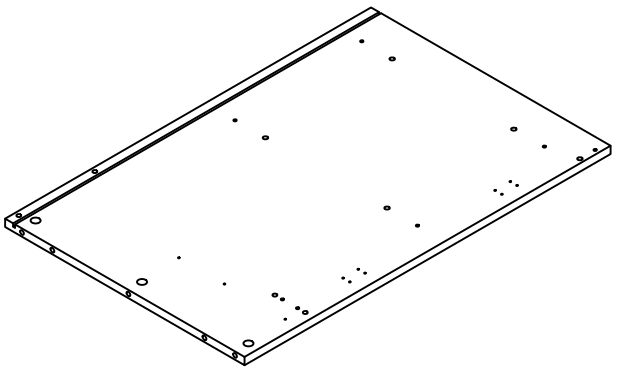


② LEFT SIDE PANE
Qty:1

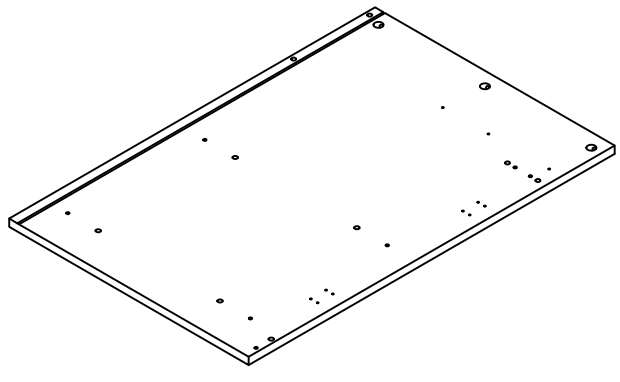


③ MIDDLE SIDE PANE
Qty:1

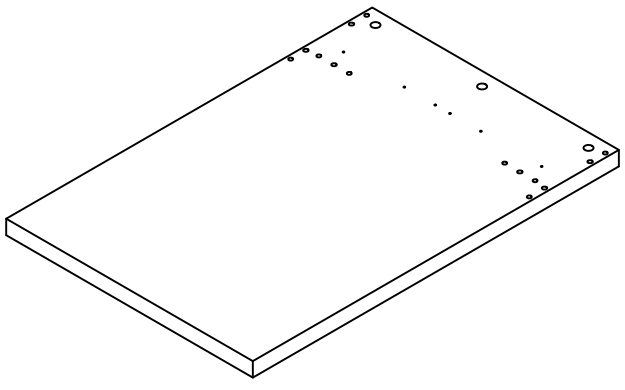


④ RIGHT SIDE PANEL
Qty:1

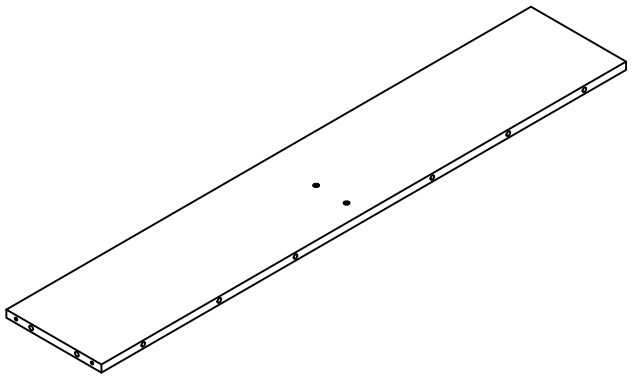


⑤ BACK SLAT
Qty:1

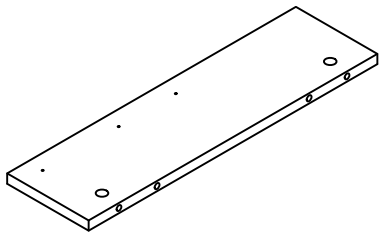


⑥ PARTITION
Qty:1

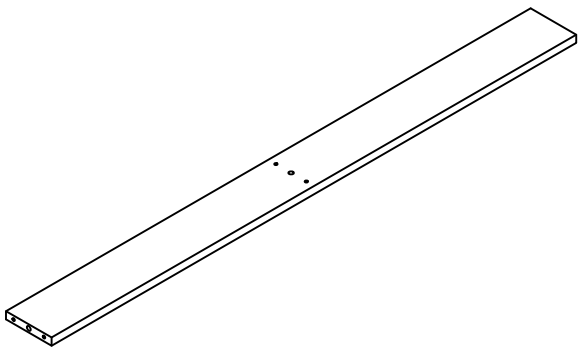

⑦ FRONT SLAT
Qty:1

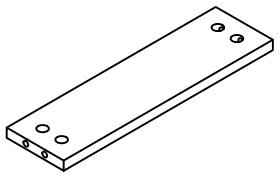


⑧ LEFT FRONT RAIL
Qty:1

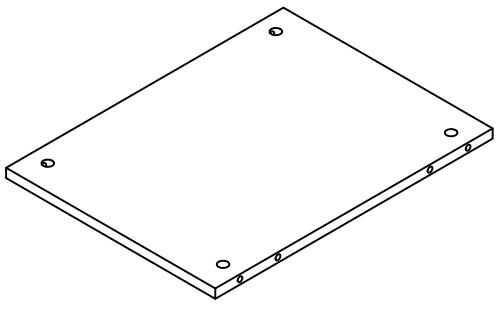

⑨ FIXED SHELF
Qty:1


Board Identification

Not actual size

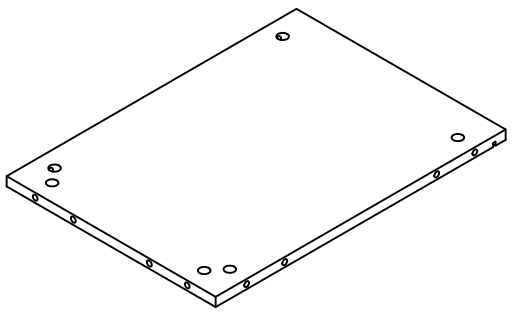


10

BOTTOM
Qty:1

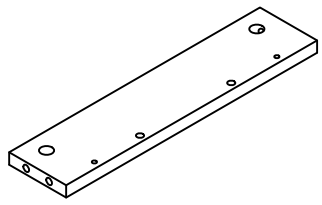


11

STOOL BACK APRON
Qty:1

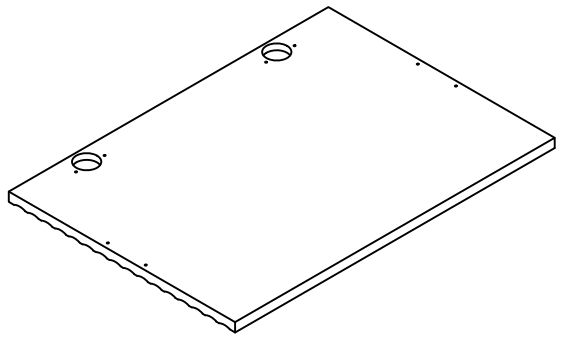


12

DOOR
Qty:1

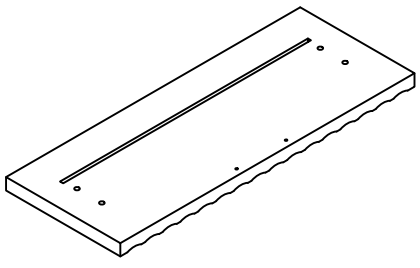


13

DRAWER FRONT
Qty:1

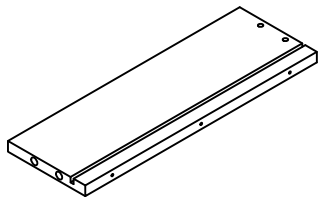


14

LEFT DRAWER SIDE
Qty:3

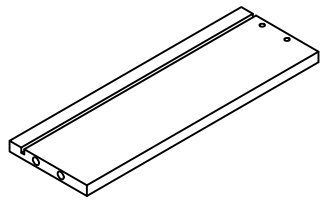


15

RIGHT DRAWER SIDE
Qty:3

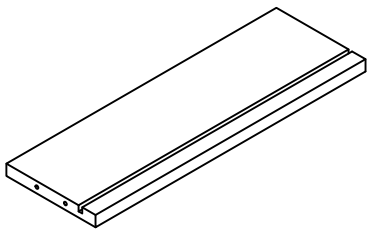


16

DRAWER BACK
Qty:1

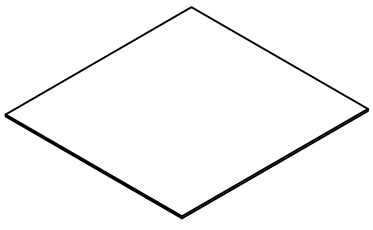

17

DRAWER BOTTOM
Qty:1

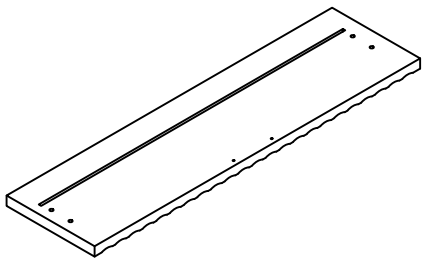


18

DRAWER FRONT
Qty:1


Board Identification

Not actual size

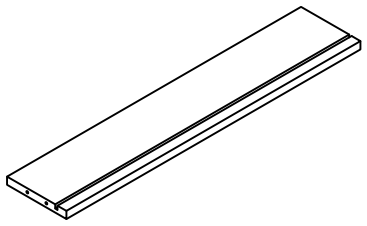


19

DRAWER BACK
Qty:2

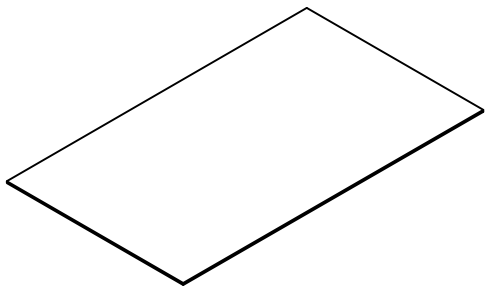


20

DRAWER BOTTOM
Qty:2

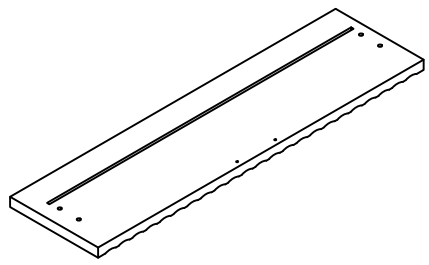

21


DRAWER FRONT
Qty:1

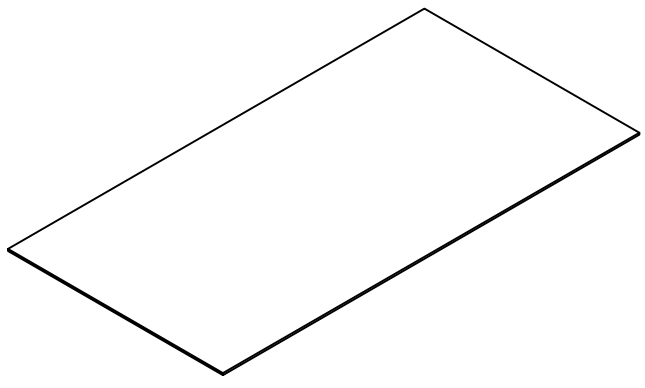


22

BACK PANEL
Qty:1


Part List

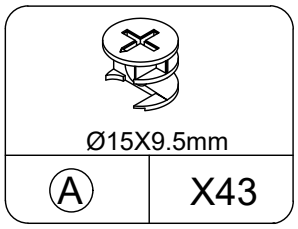


CAM LOCK
spare:3

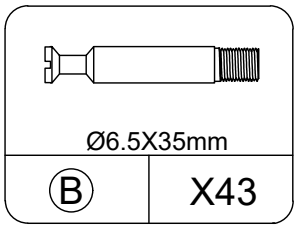


CAM BOLT
spare:3

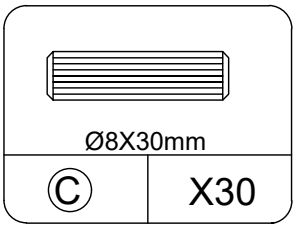


WOOD DOWEL
spare:3

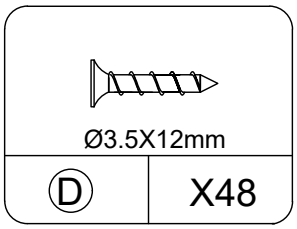


SCREW
spare:3

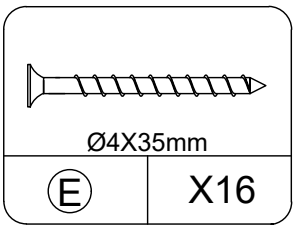


SCREW
spare:1

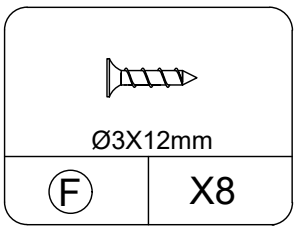


SCREW
spare:1

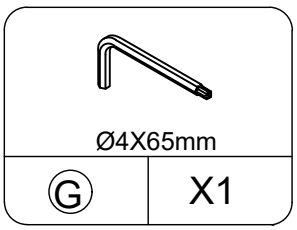


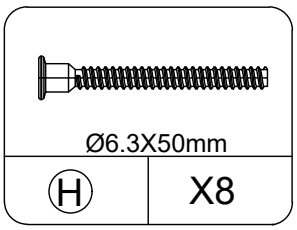


SCREW
spare:1

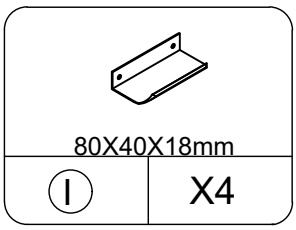


HANDLE

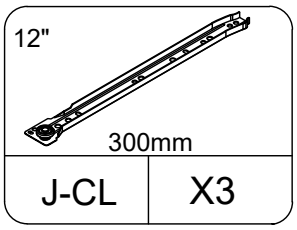


LEFT CABINET MEMBER

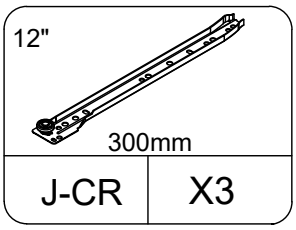


RIGHT CABINET MEMBER

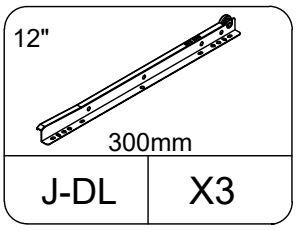


LEFT DRAWER RUNNER

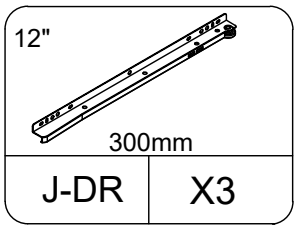


RIGHT DRAWER RUNNER

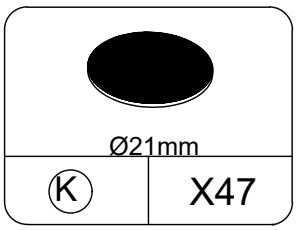


PERFECT STICKER
spare:3

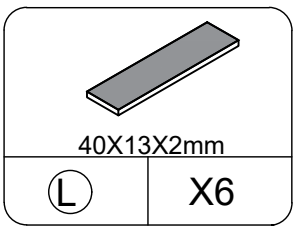

NON SLIP MATS
spare:1

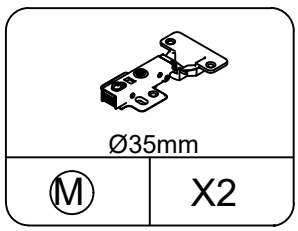

HINGE

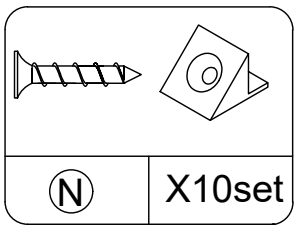

BACK PANEL BUCKLE
spare:1


Part List

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

Board Identification

Not actual size

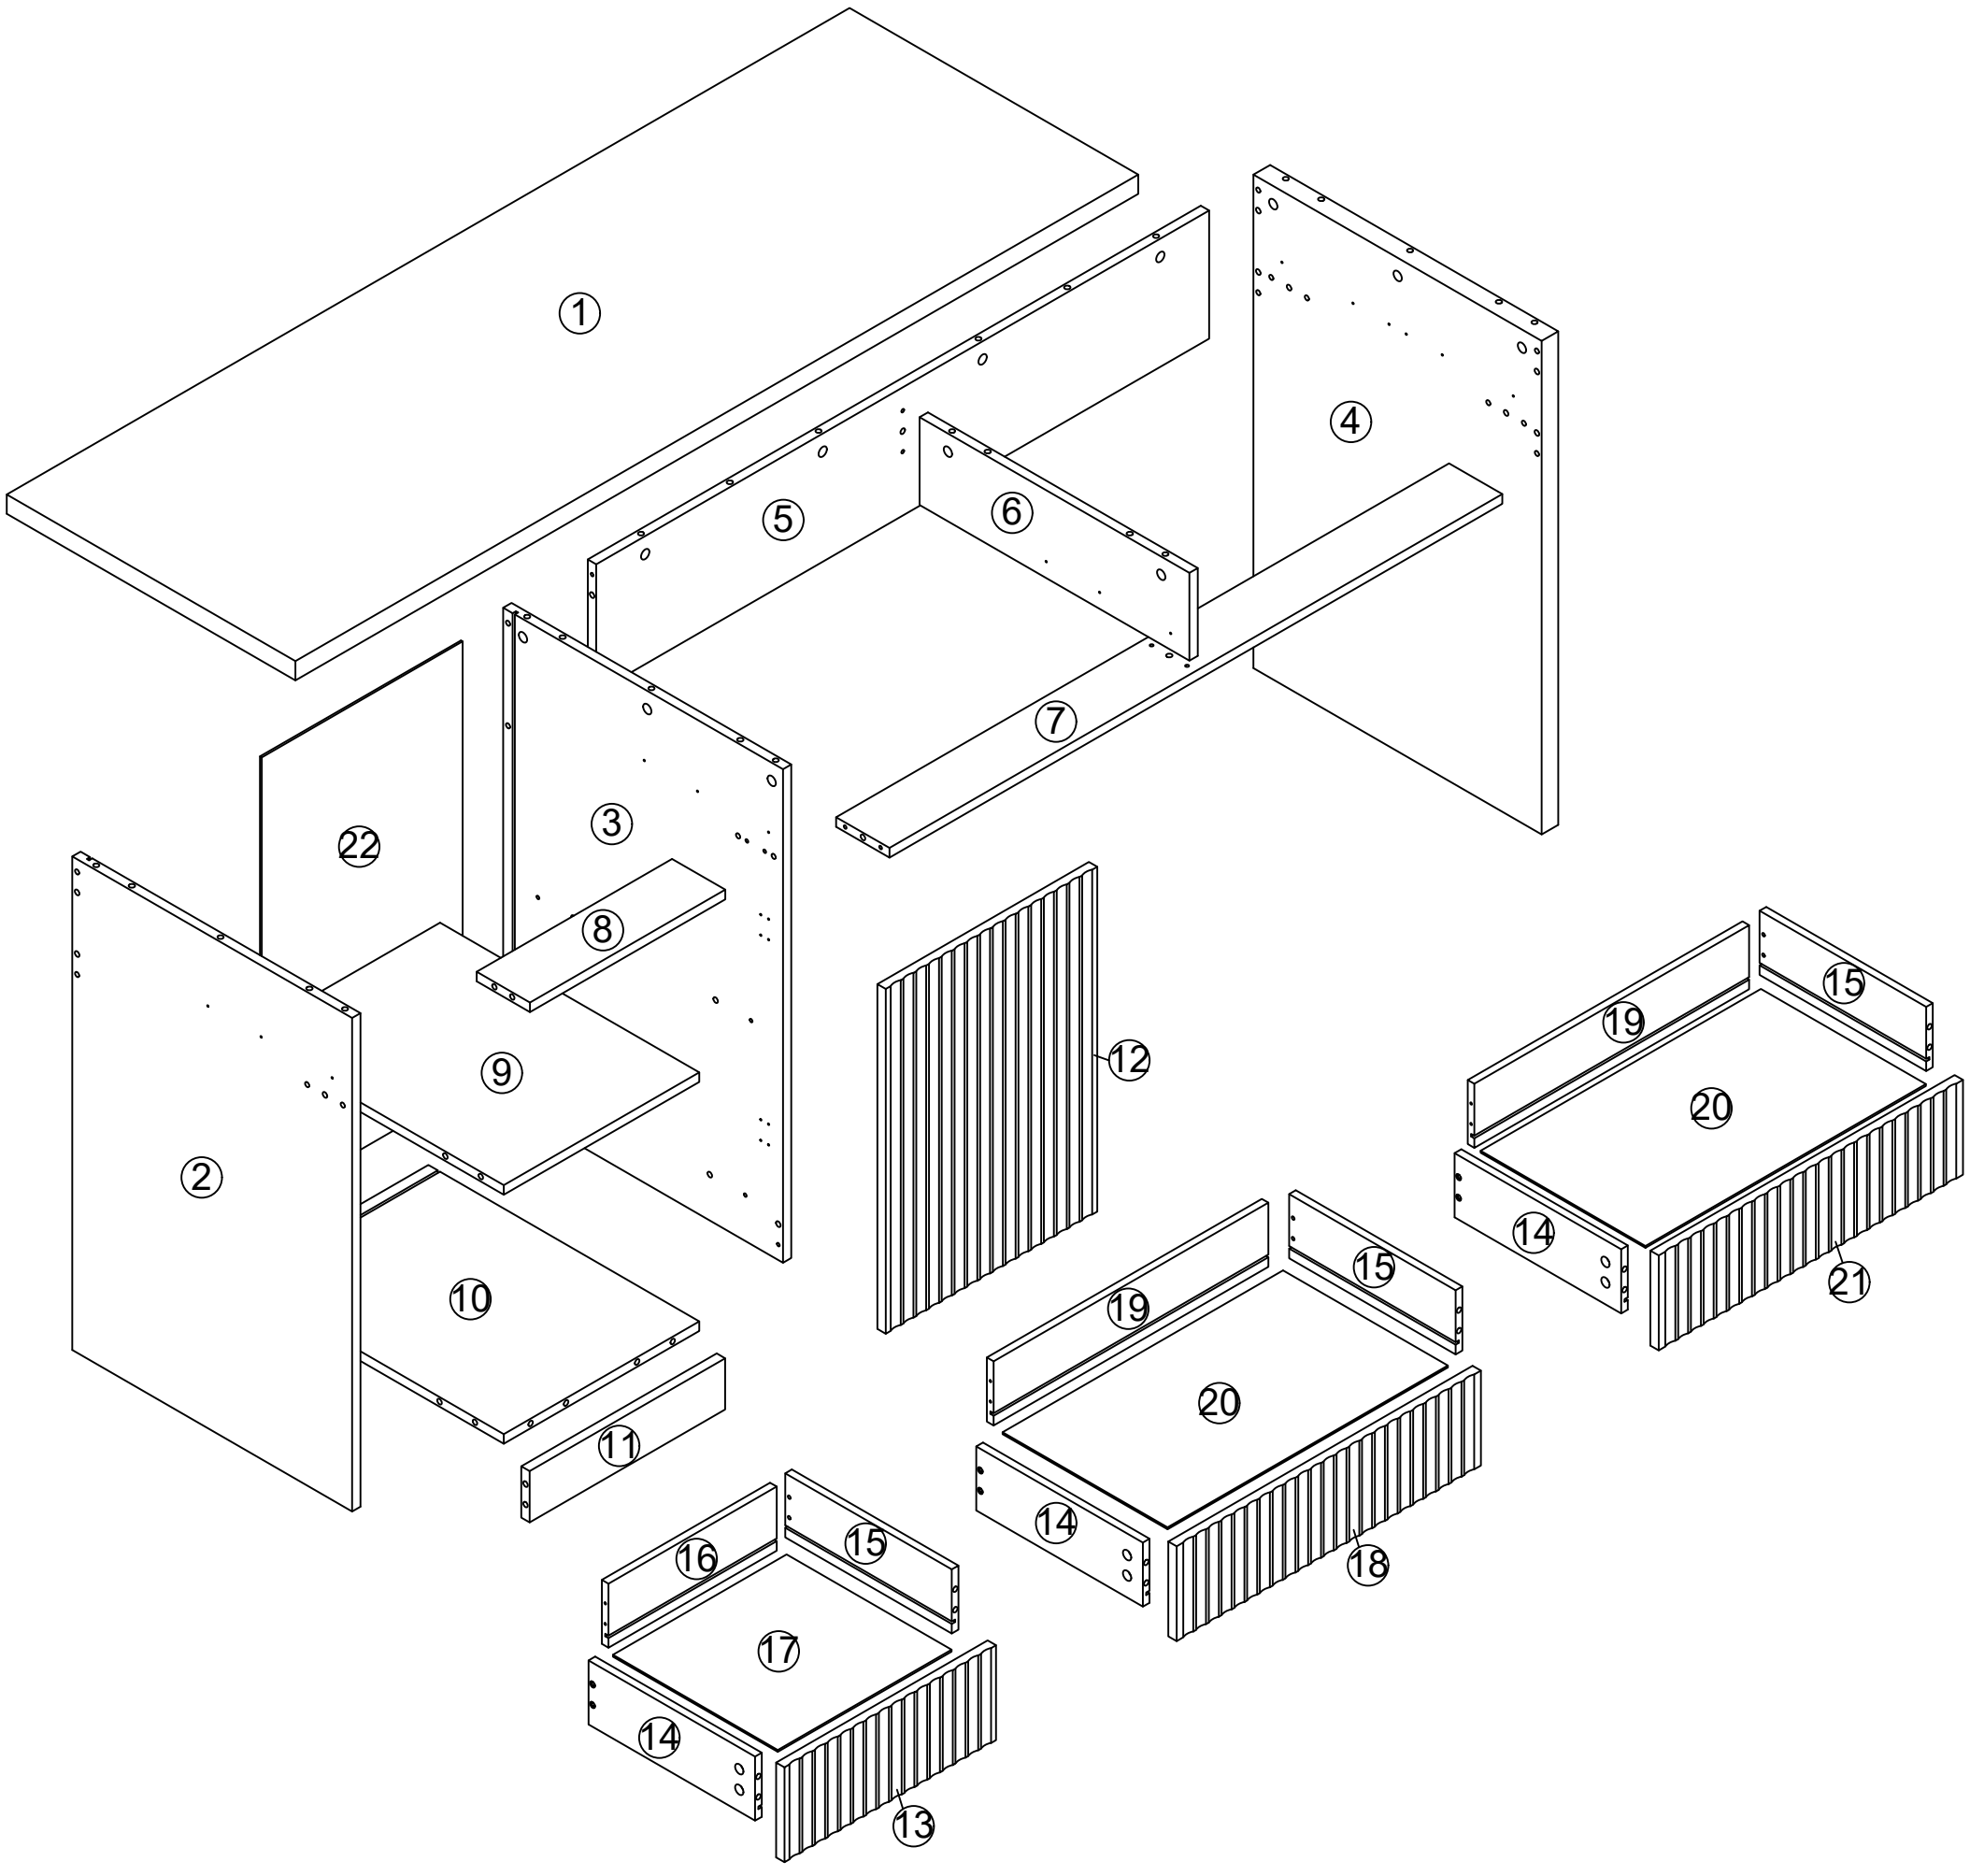


STEP1

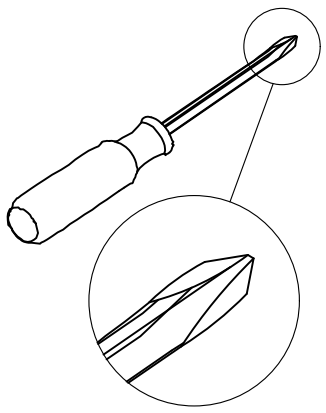




Ø15X9.5mm

A	X4



Ø6.5X35mm


B	X4



Ø4X35mm


E	X4

WHITE




Ø3X12mm

F	X2




80X40X18mm


I	X1

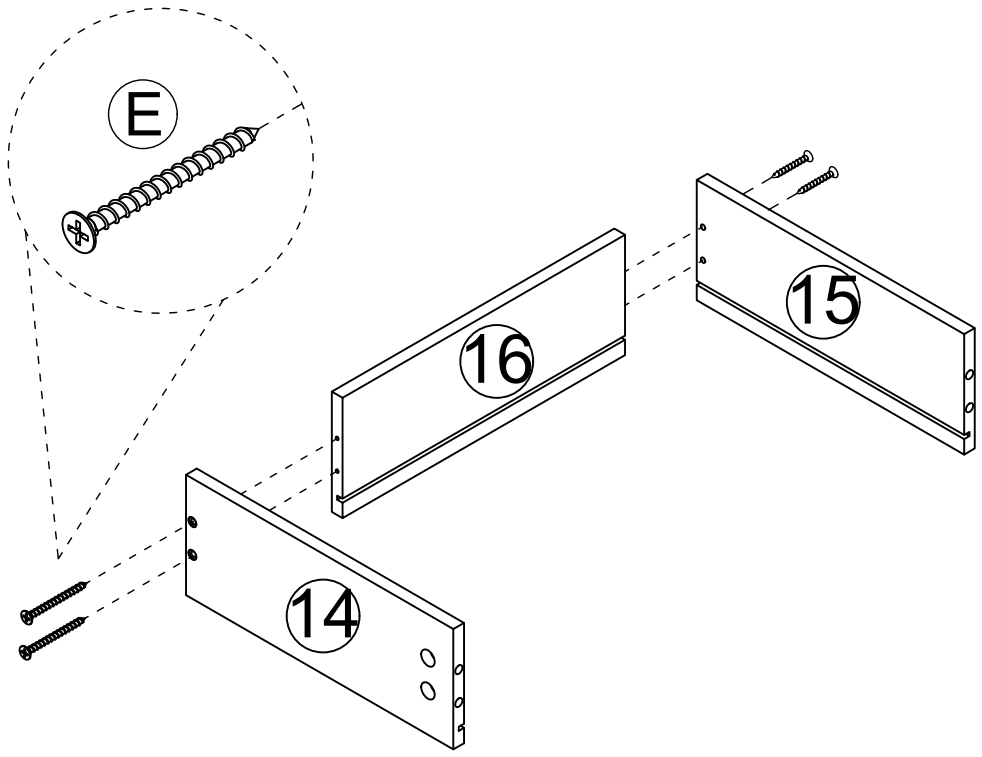


Step 1

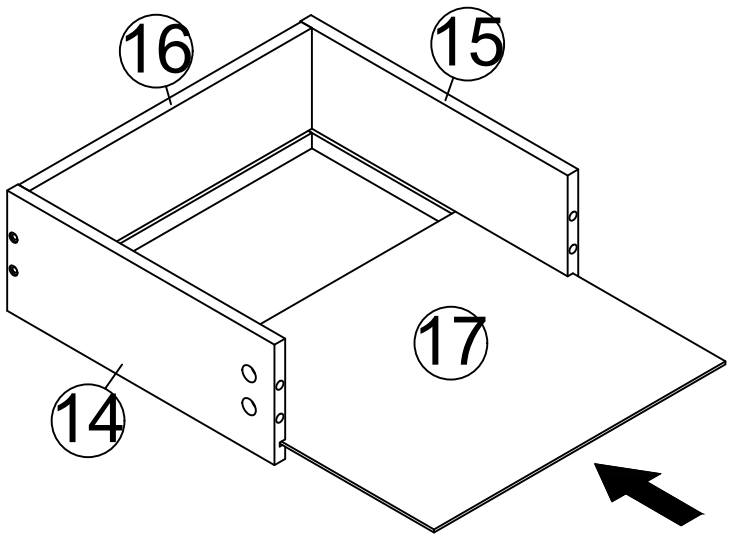



Step 2

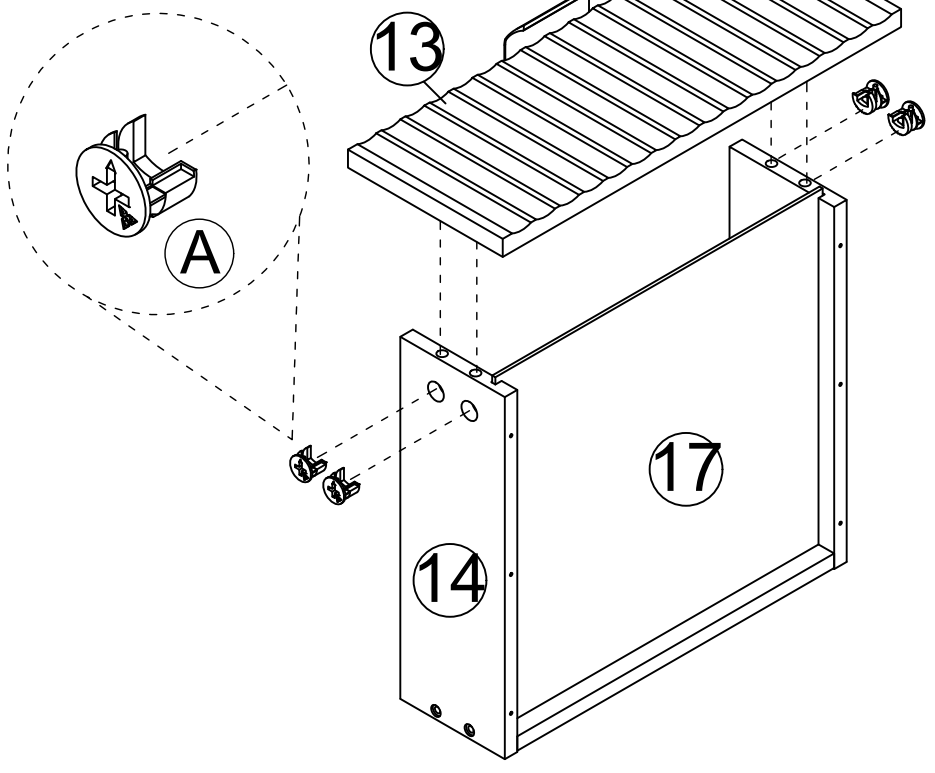

Step 3

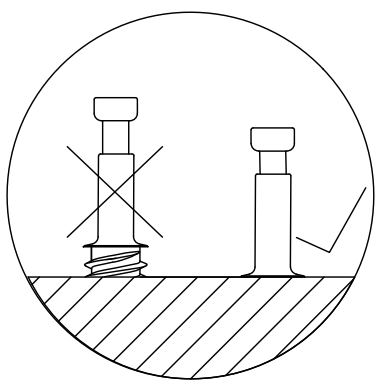

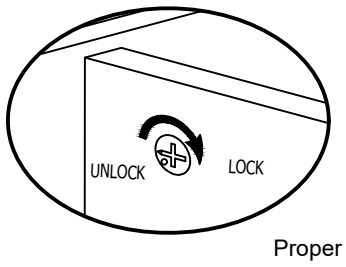


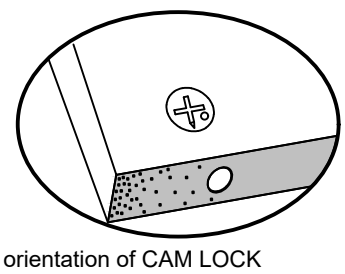

Proper orientation of CAM LOCK

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


STEP2

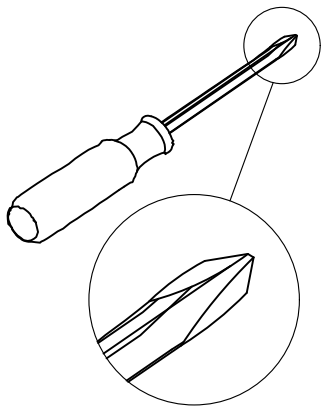




Ø15X9.5mm

A	X8



Ø6.5X35mm


B	X8



Ø4X35mm


E	X8

WHITE




Ø3X12mm

F	X4




80X40X18mm


I	X2

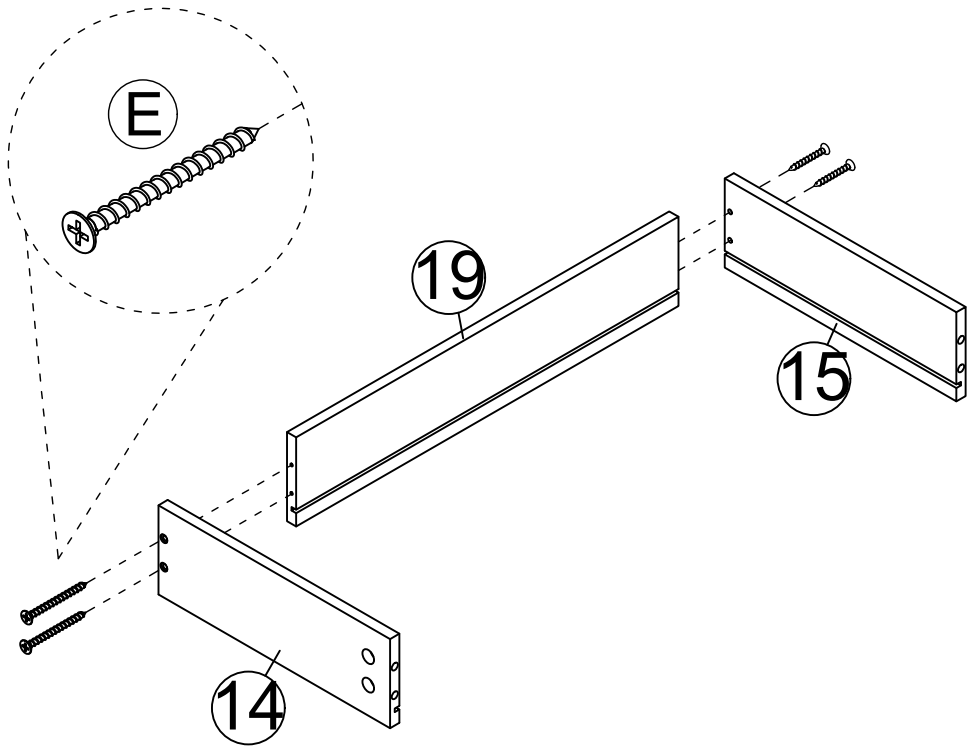


Step 1

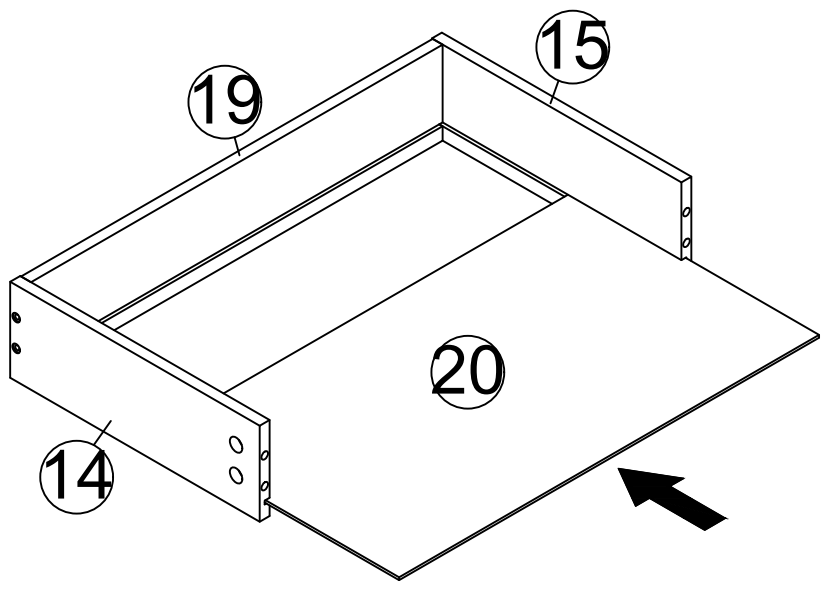



Step 2

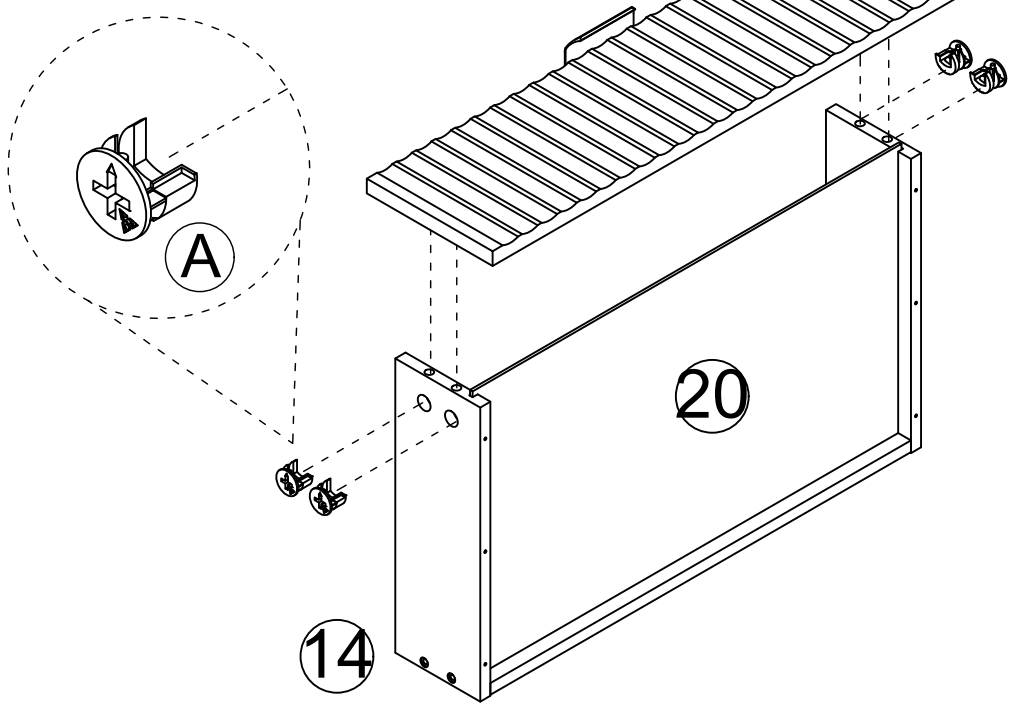

Step 3

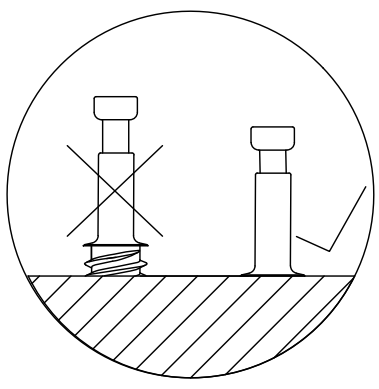

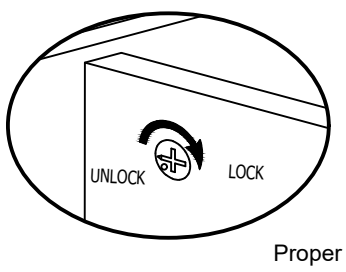

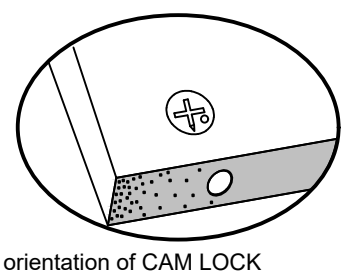



Proper orientation of CAM LOCK


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


X2


STEP3

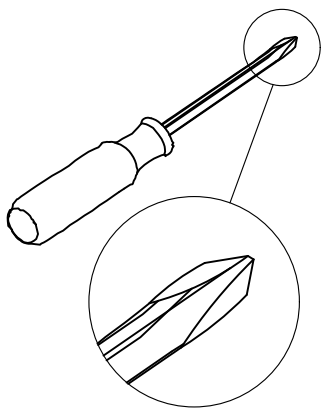

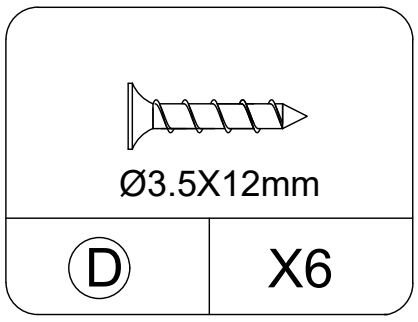

Ø3.5X12mm
D
X6

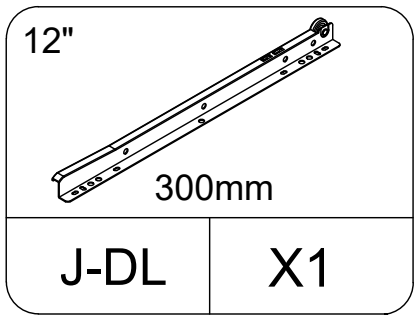

12"
300mm
J-DL
X1

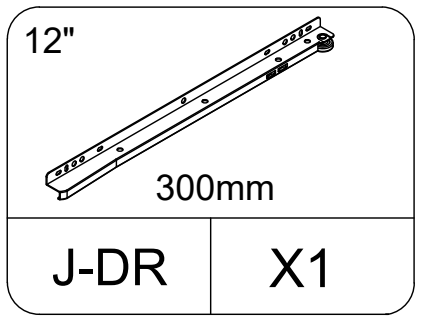

12"
300mm
J-DR
X1

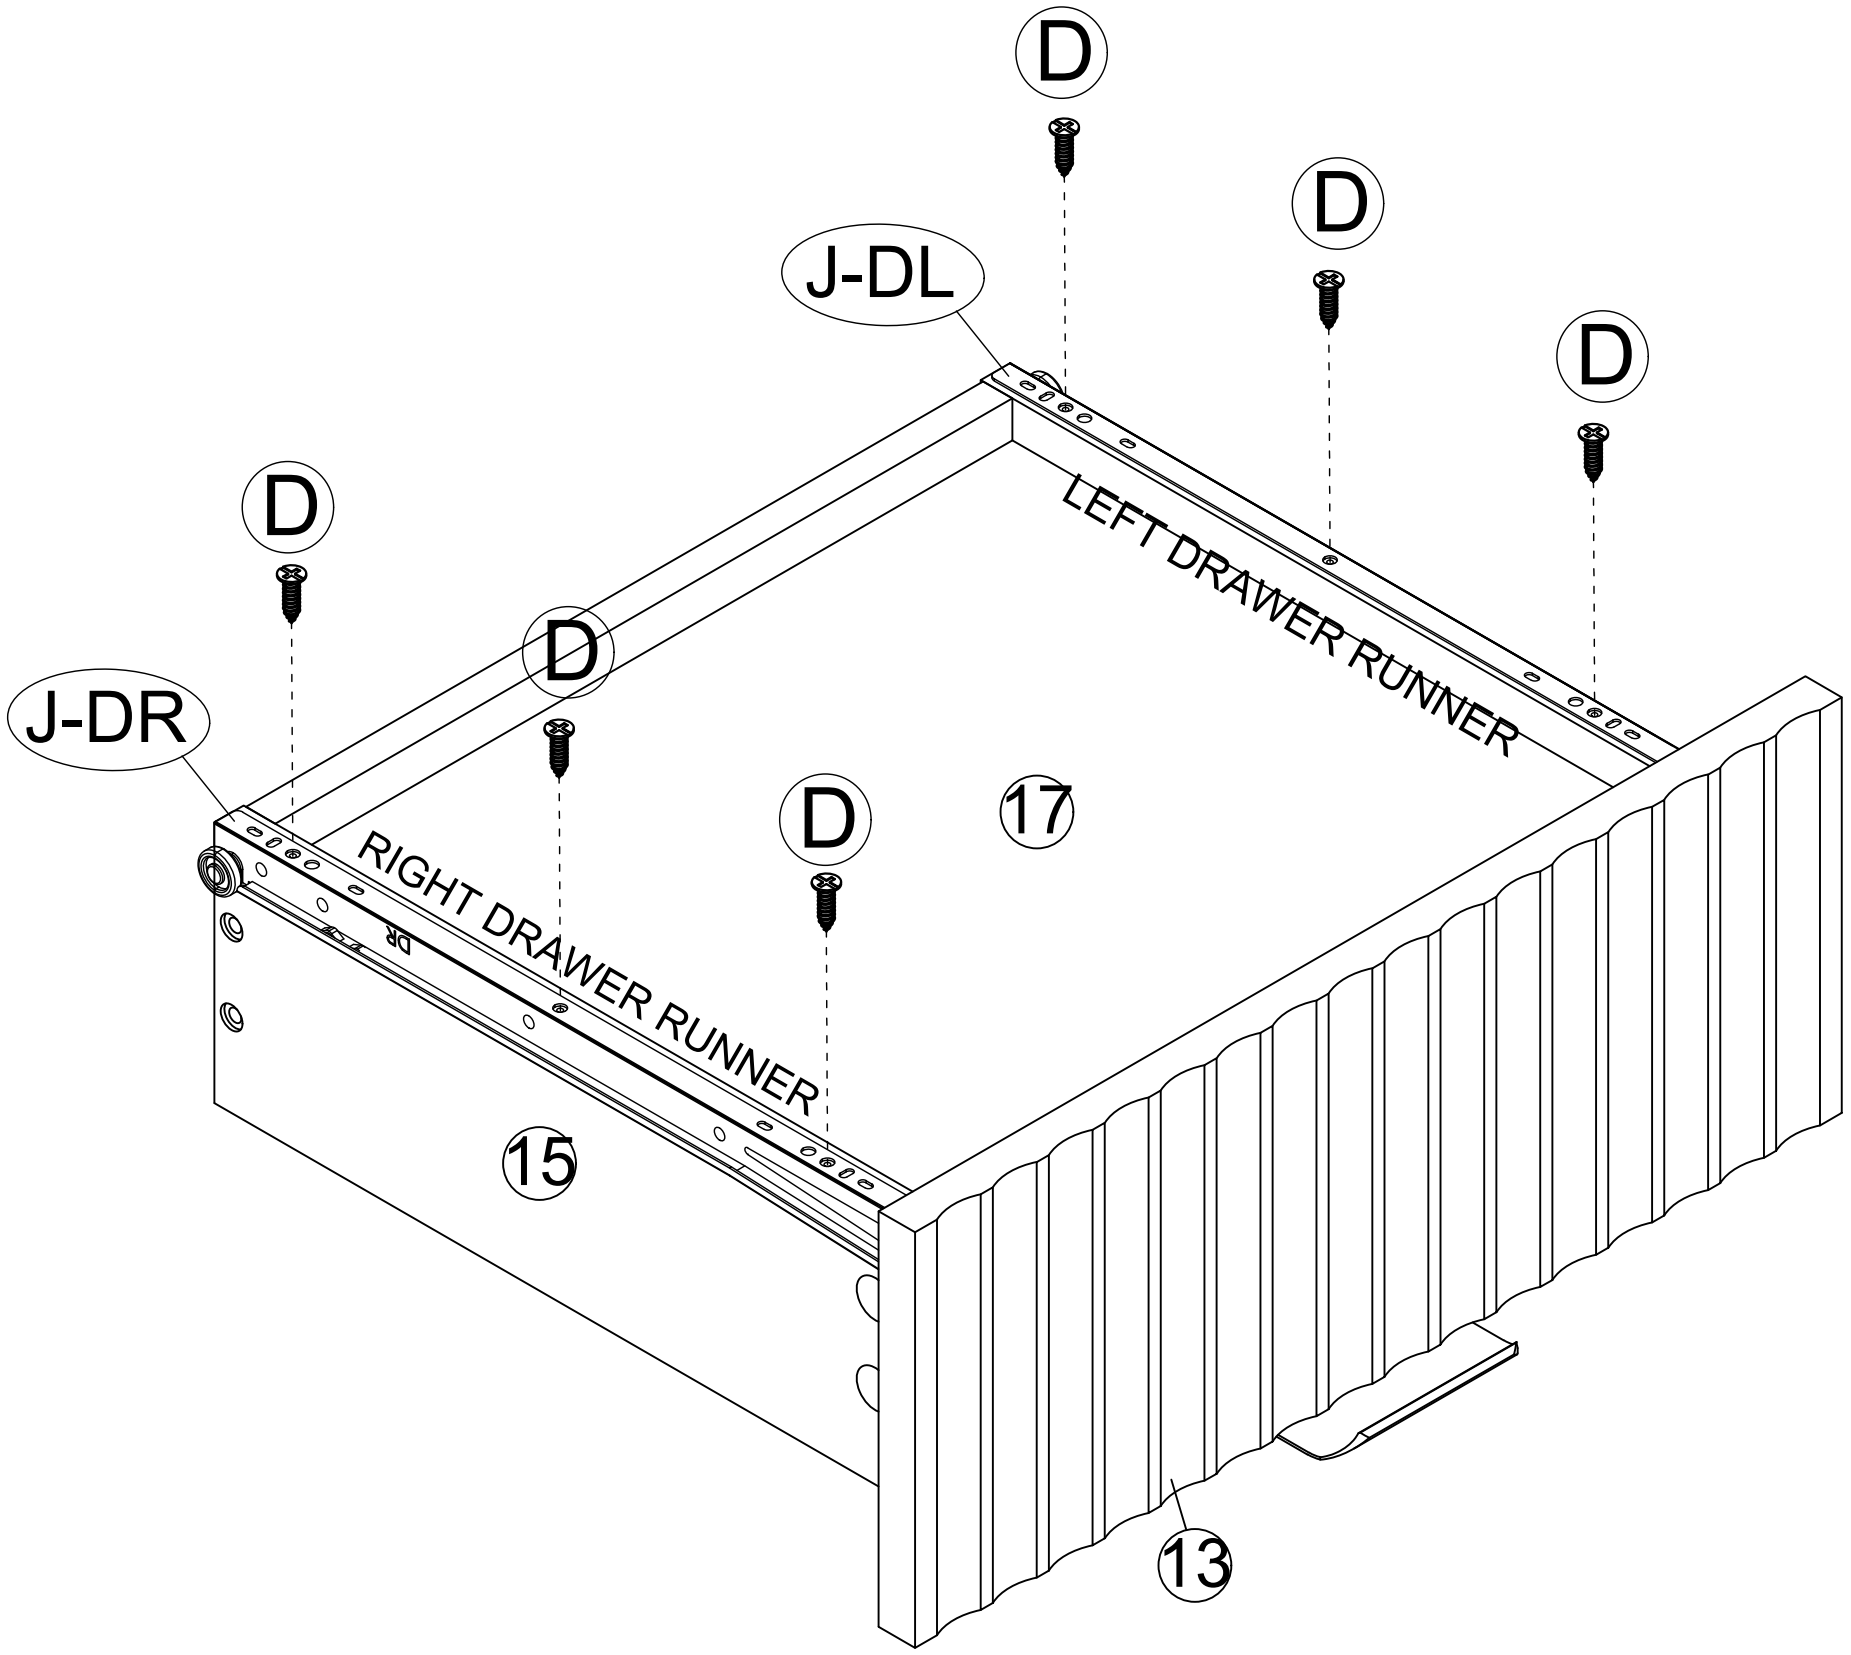

D
J-DL
D
D
D
D
J-DR
D
17
LEFT DRAWER RUNNER
RIGHT DRAWER RUNNER
15
13


STEP4

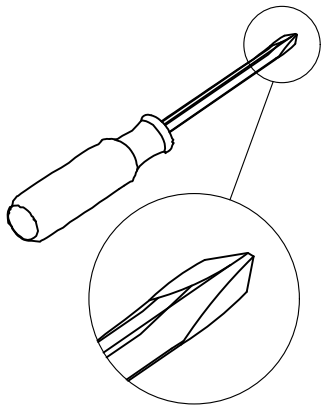

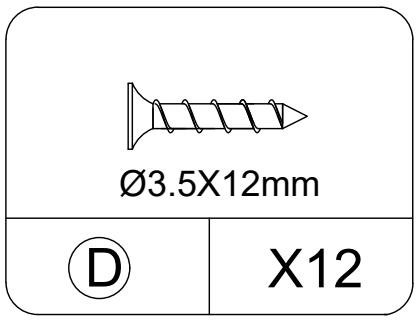
Ø3.5X12mm
D
X12

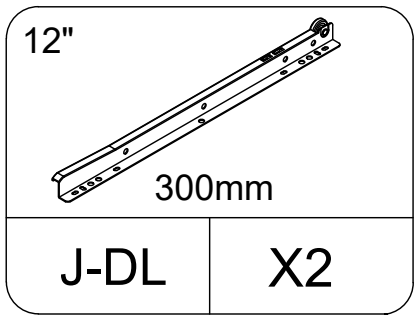

12"
300mm
J-DL
X2

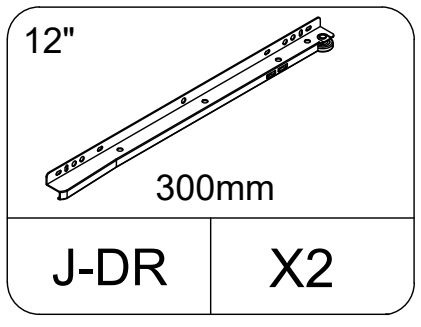

12"
300mm
J-DR
X2

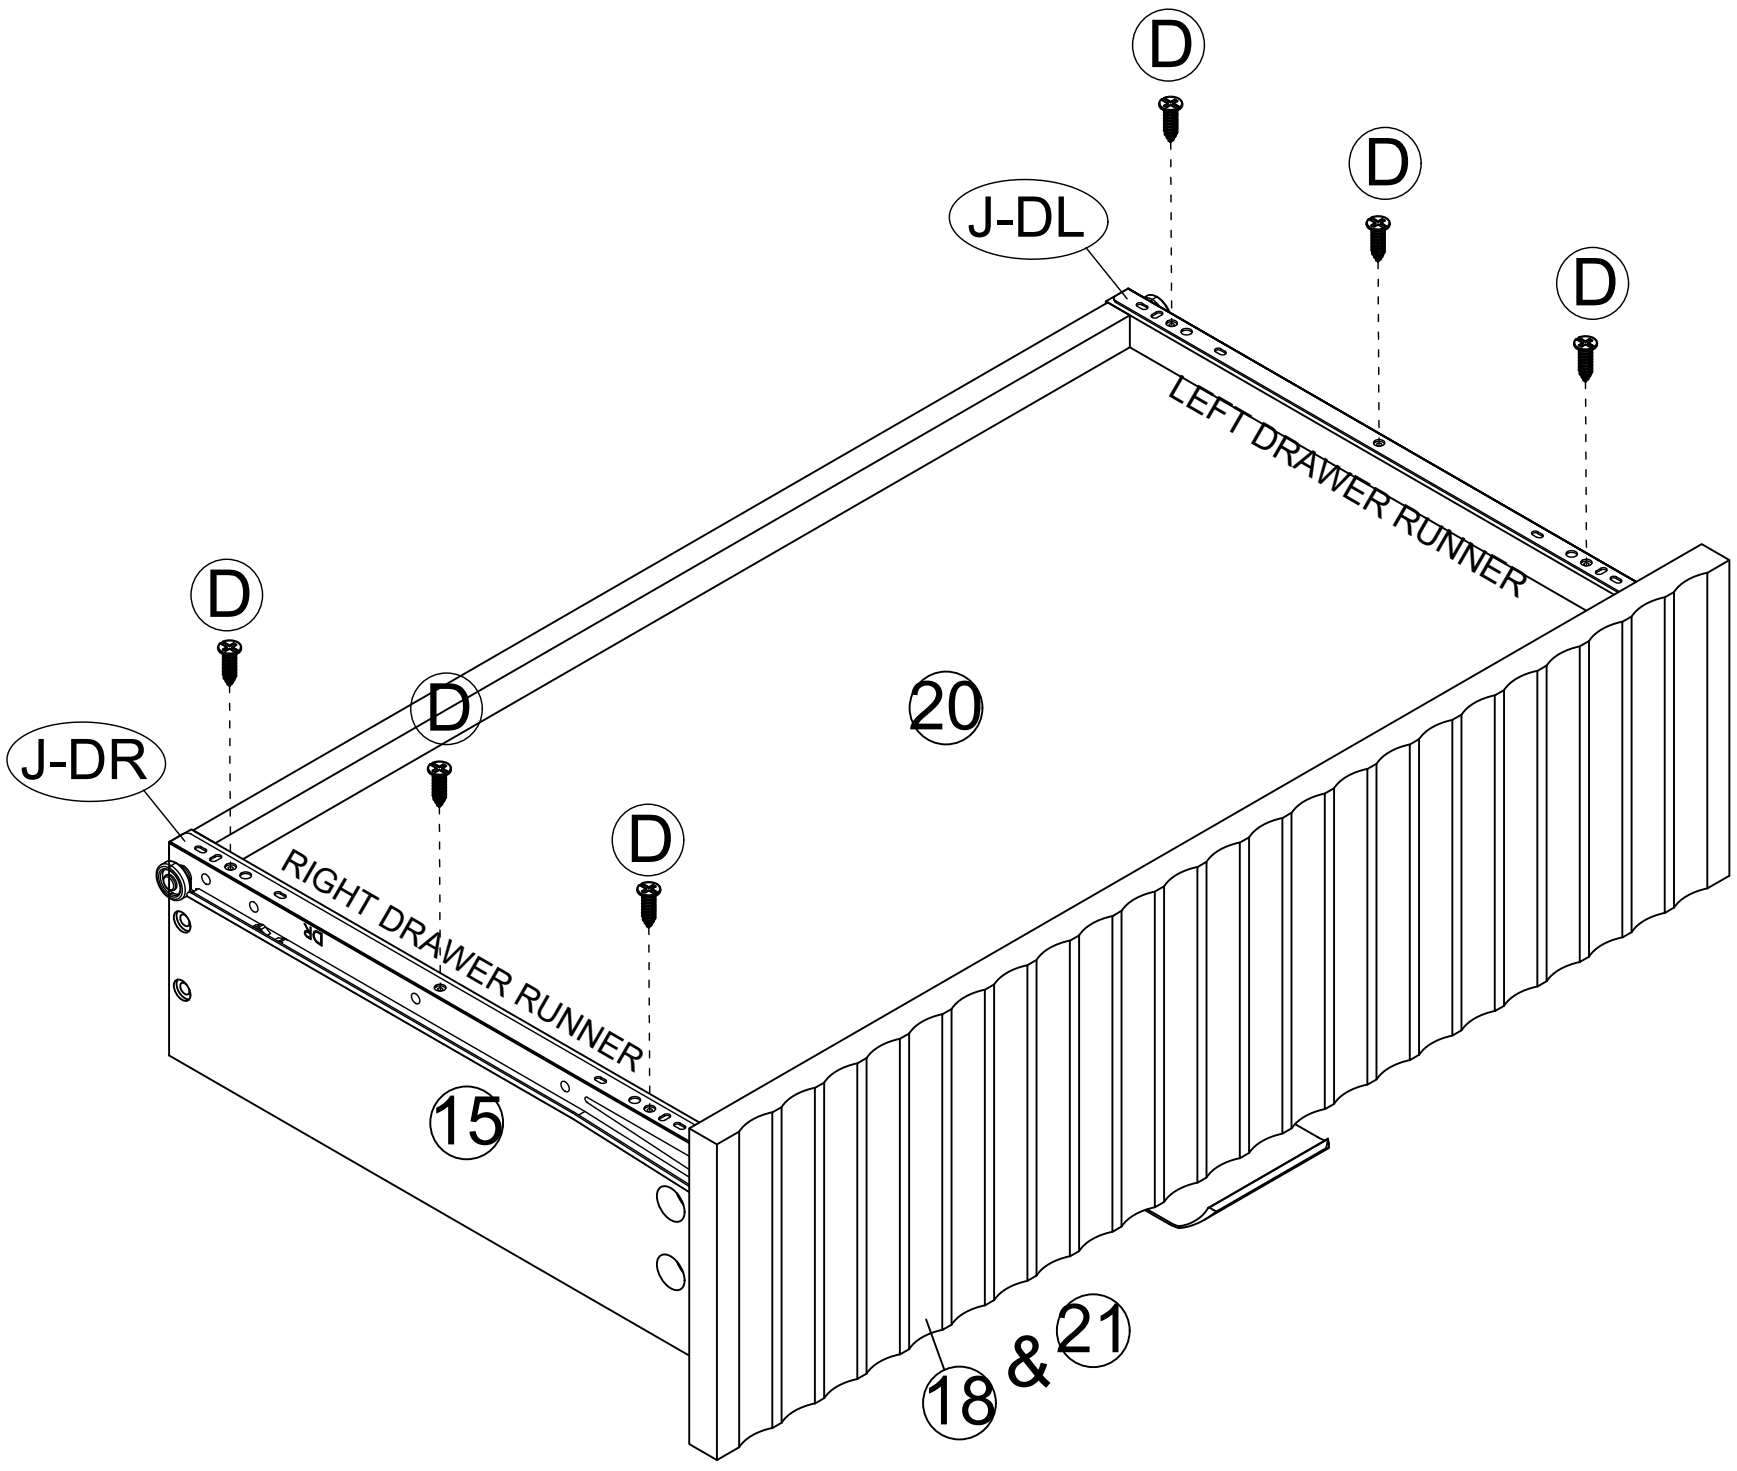

D
D
D
J-DL
LEFT DRAWER RUNNER
D
D
D
J-DR
RIGHT DRAWER RUNNER
20
15
18 & 21


X2


STEP5

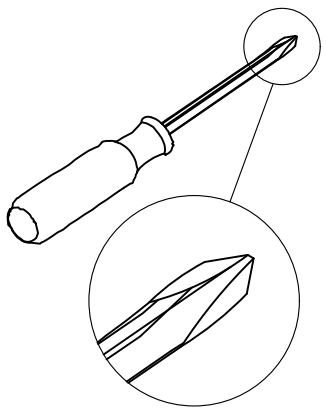


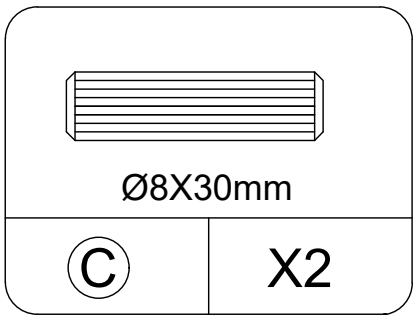
Ø8X30mm
C
X2

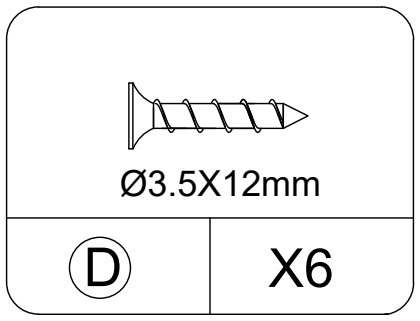

Ø3.5X12mm
D
X6

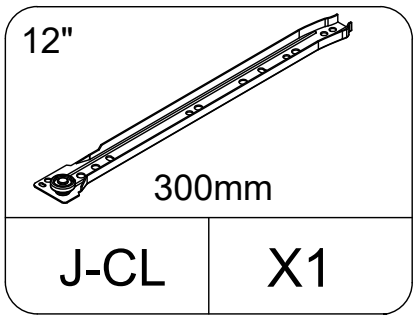

12"
300mm
J-CL
X1

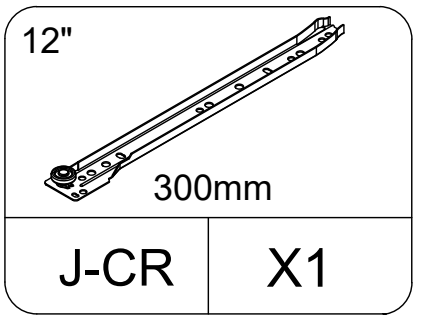

12"
300mm
J-CR
X1

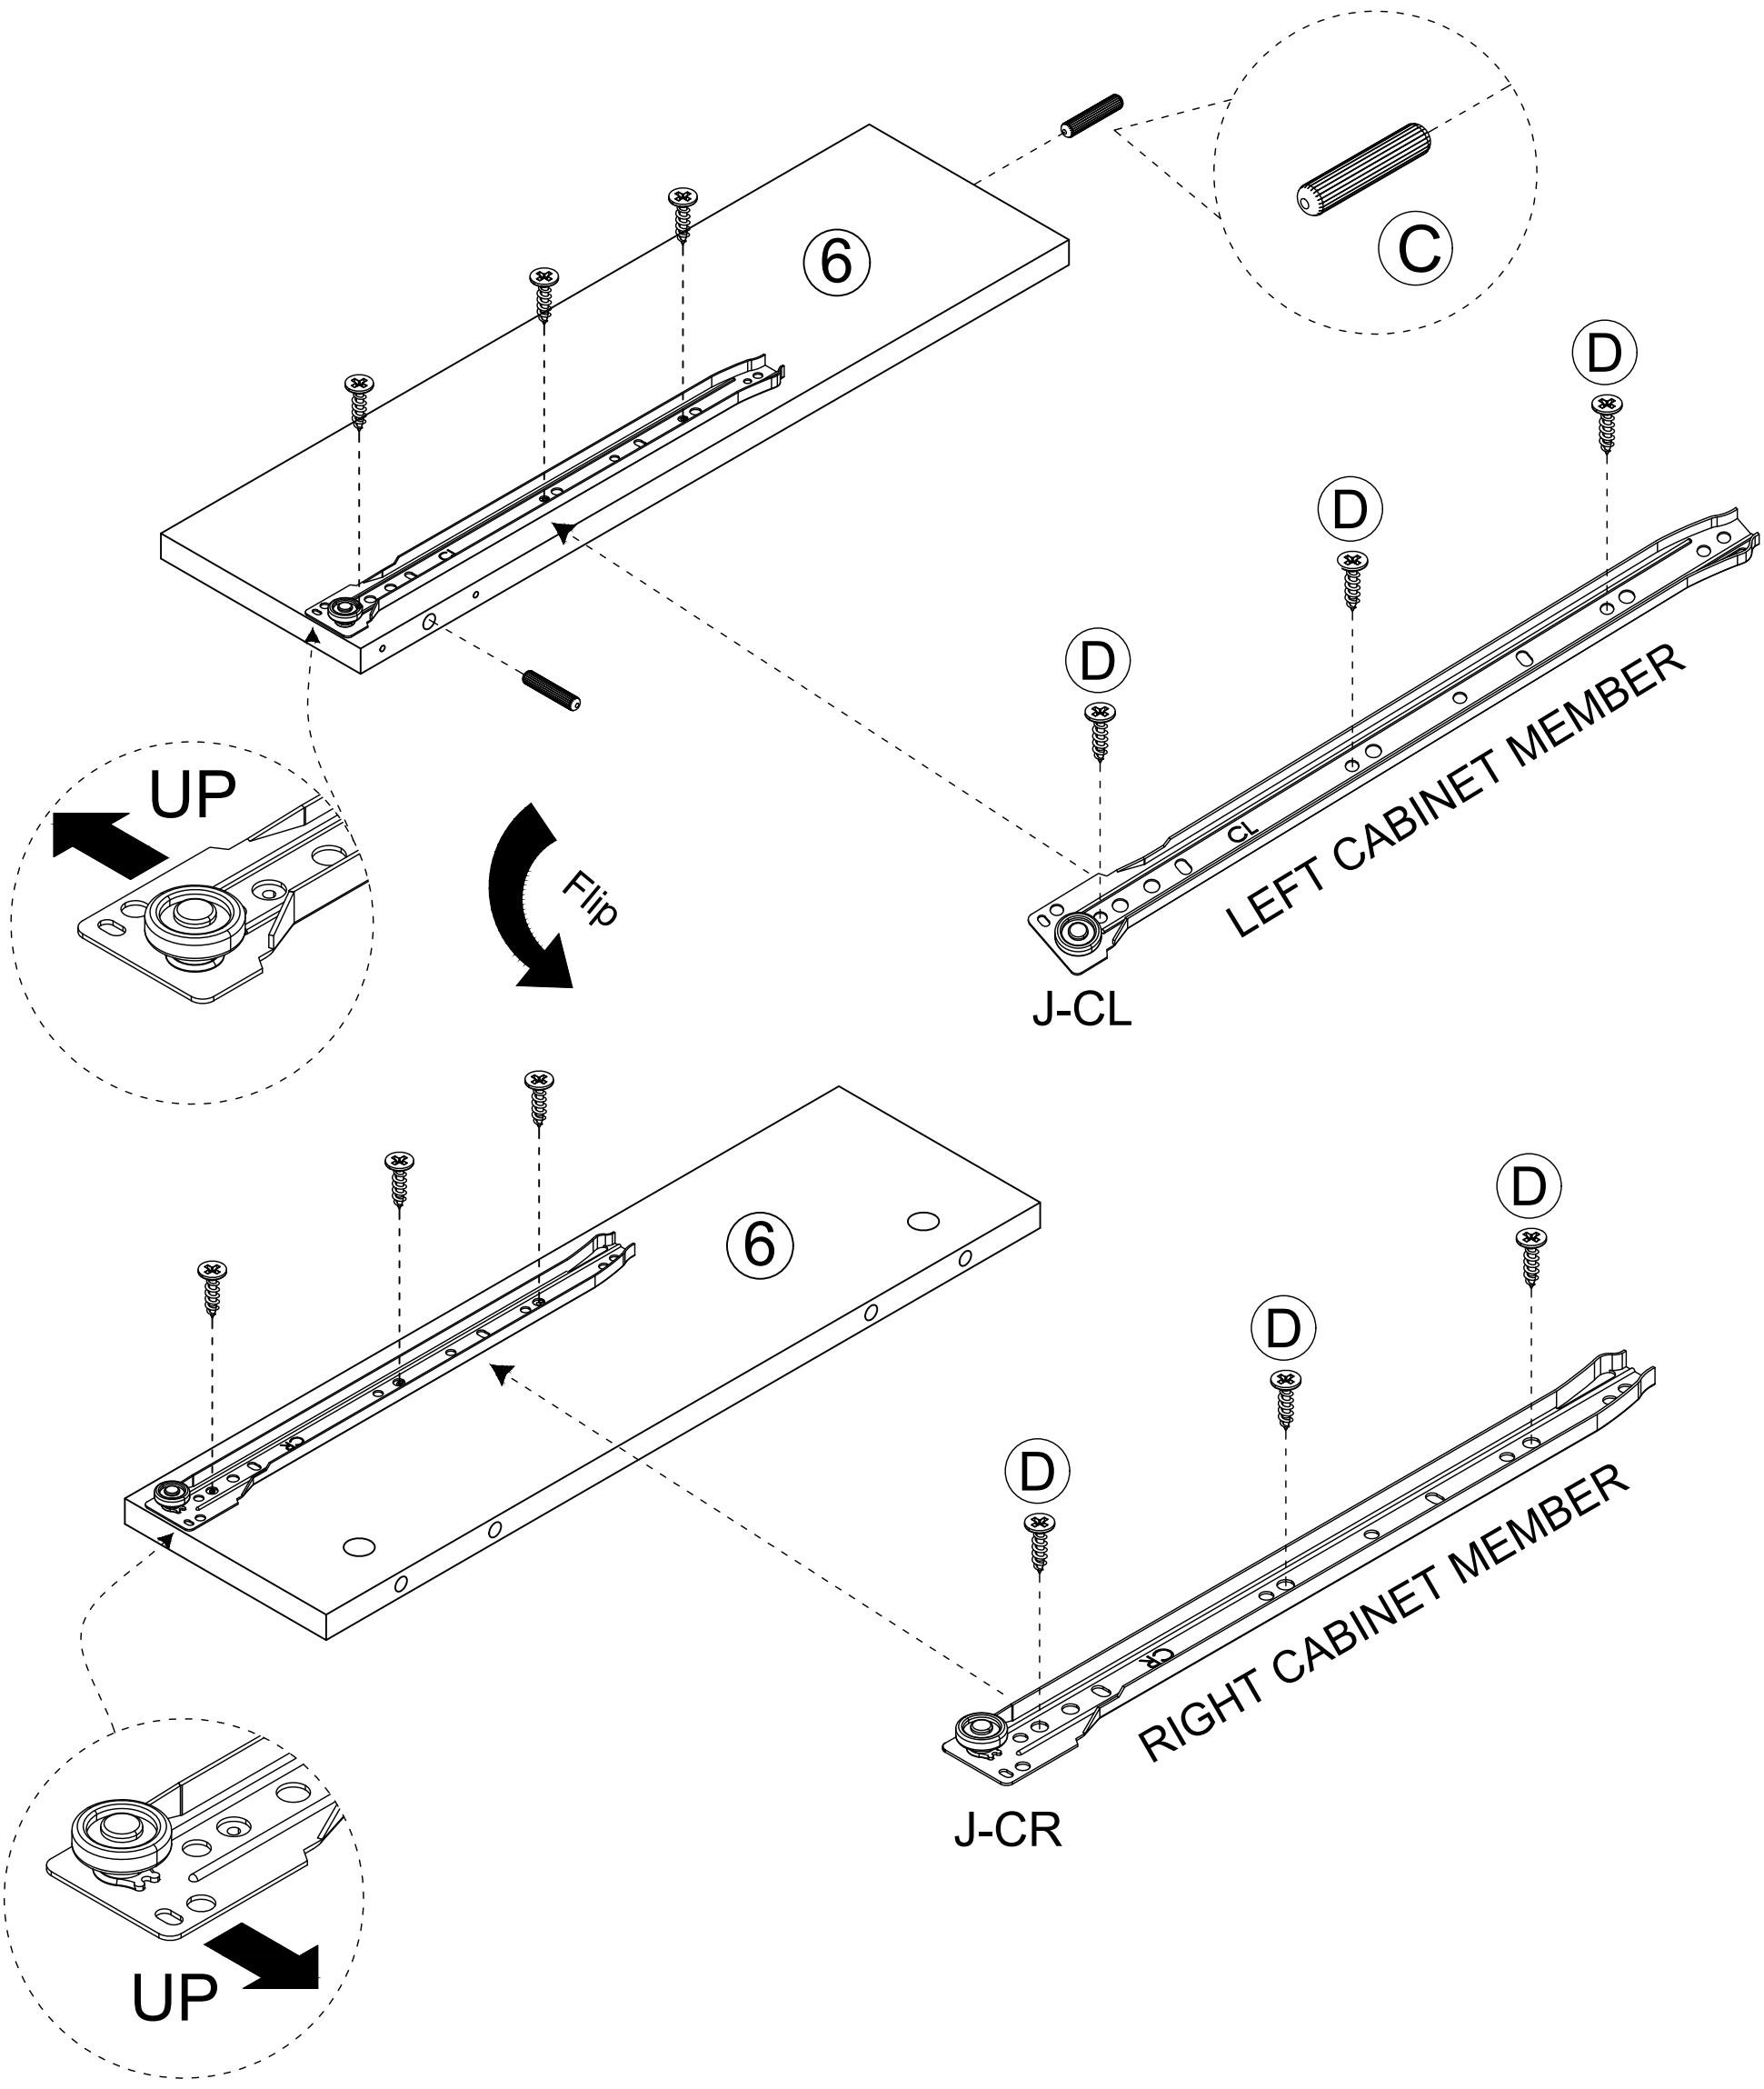
6
C
D
D
D
LEFT CABINET MEMBER
CL
J-CL
UP
Flip
6
D
D
D
RIGHT CABINET MEMBER
CR
J-CR
UP


STEP6

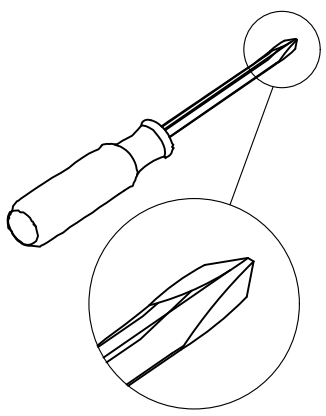

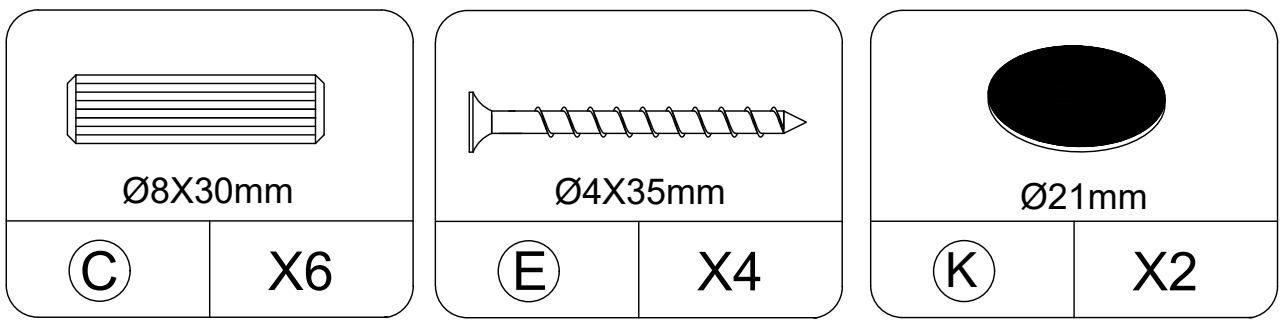

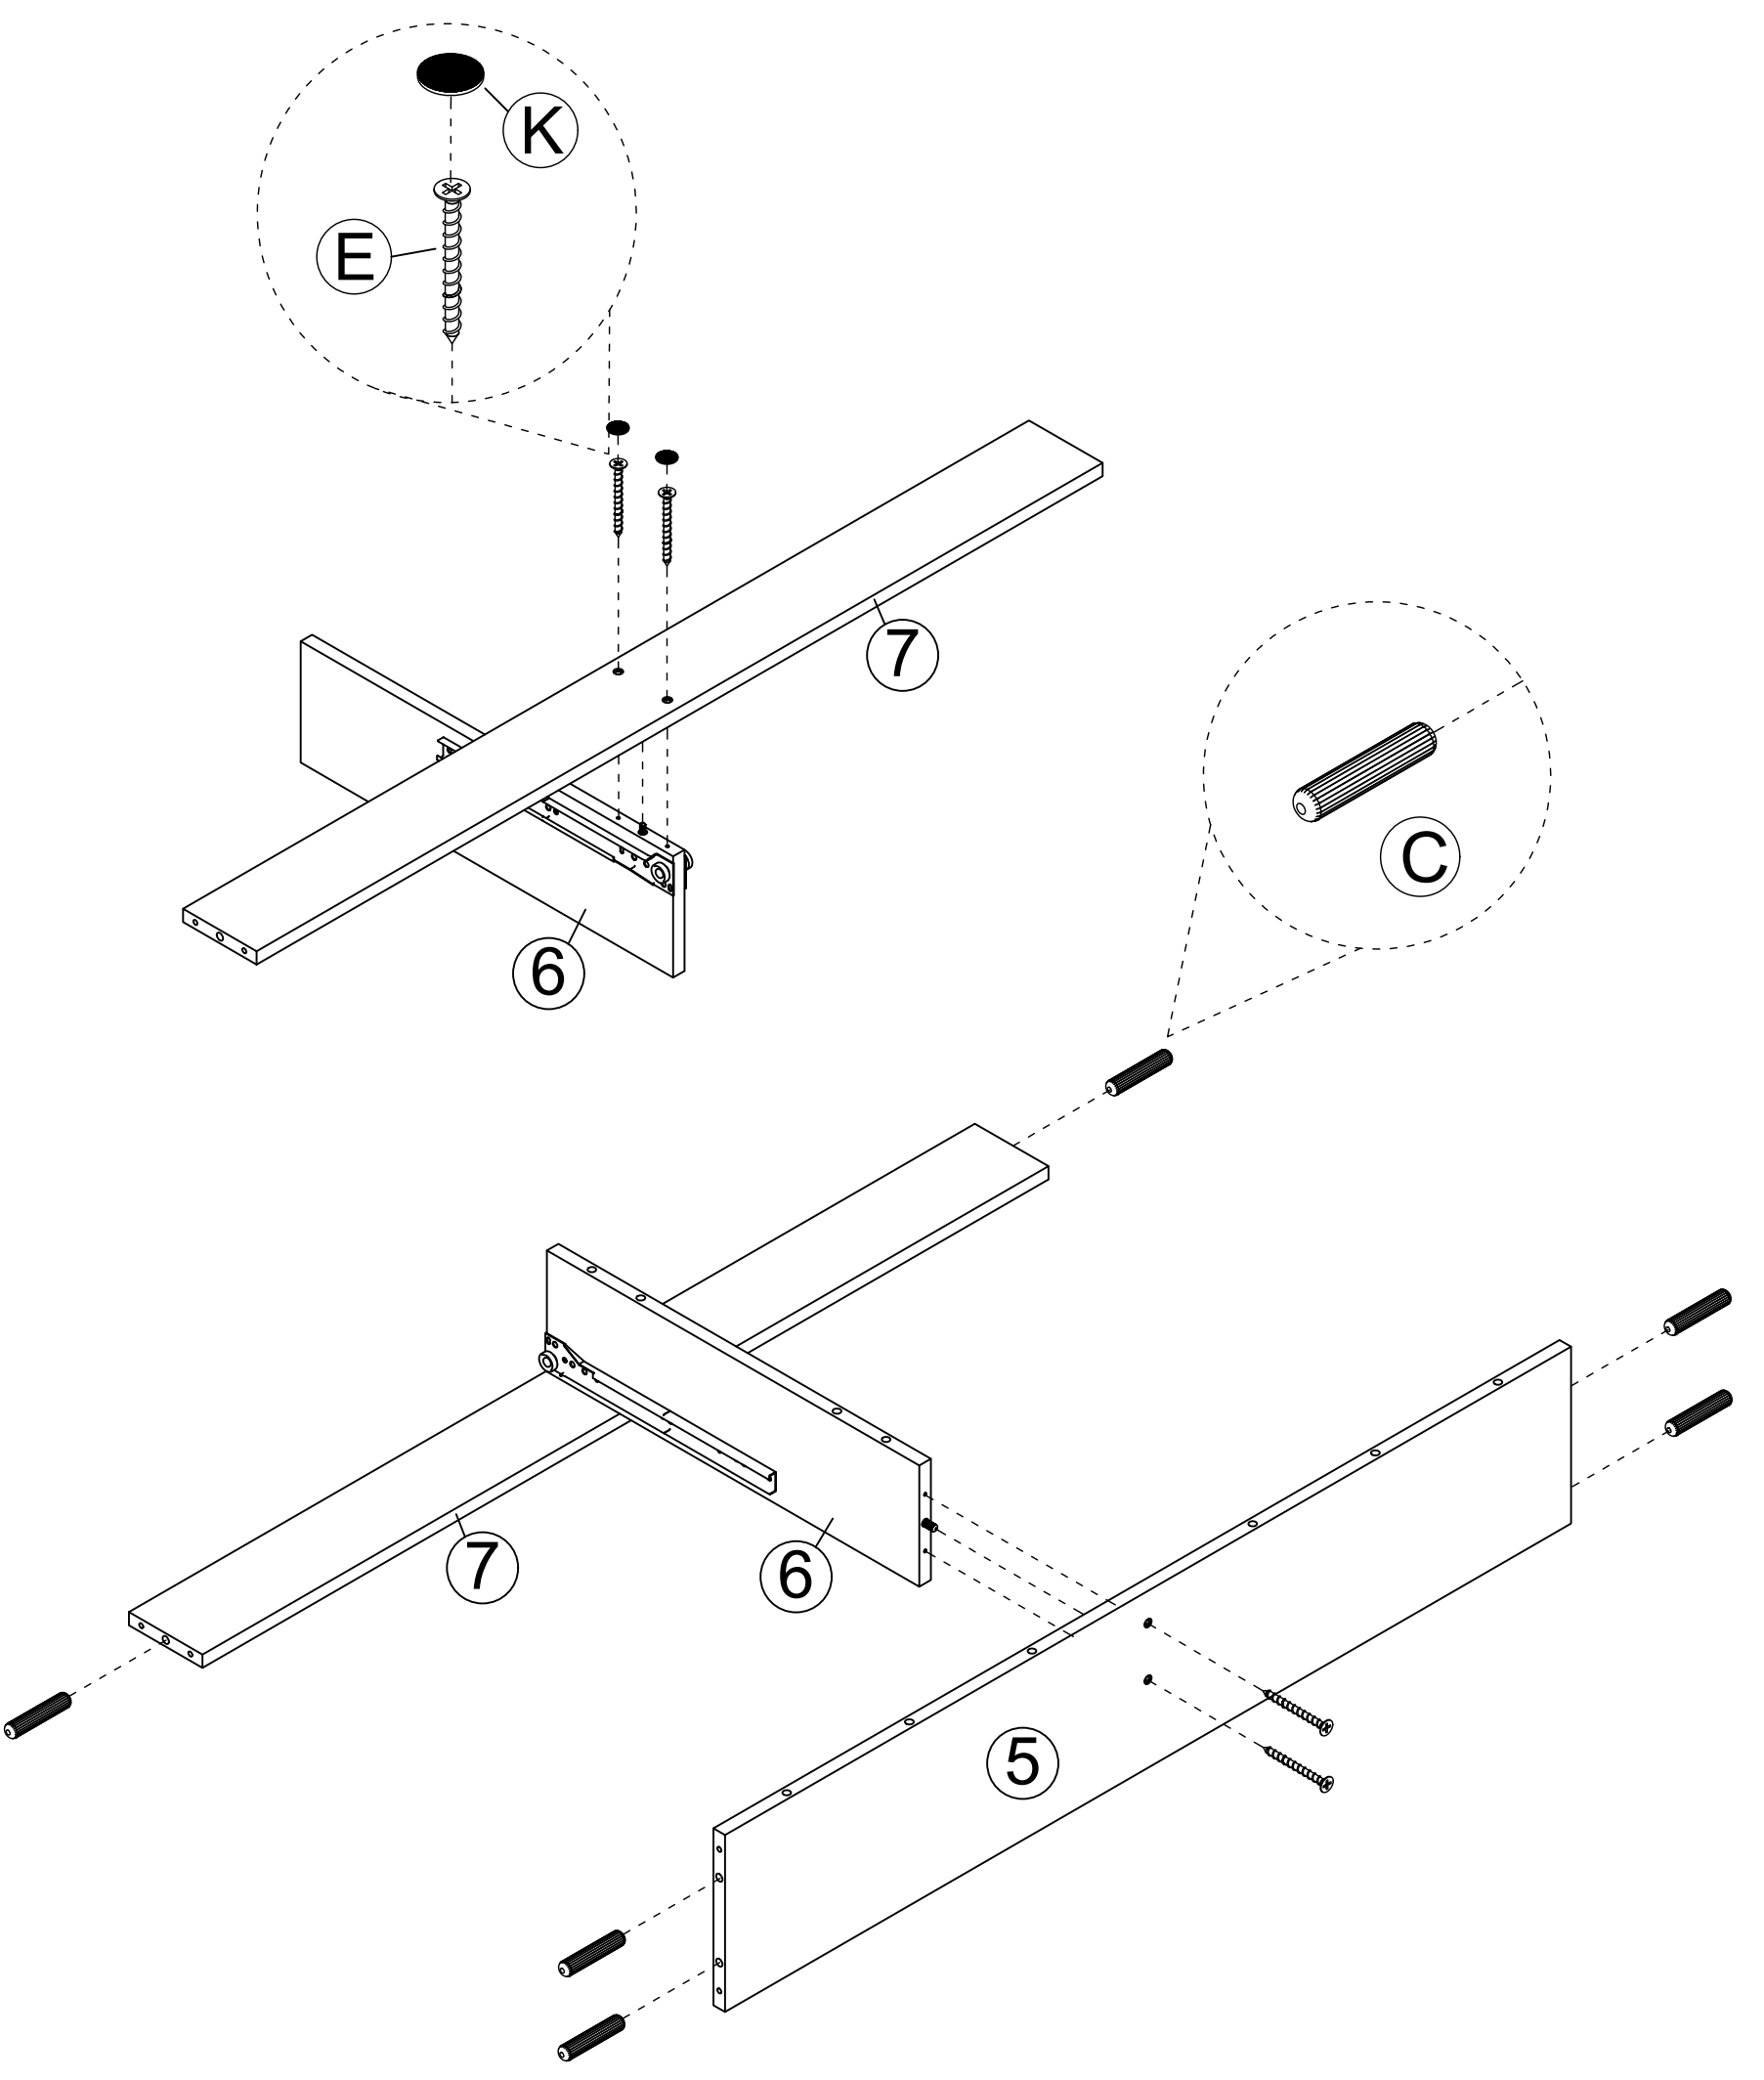


STEP7

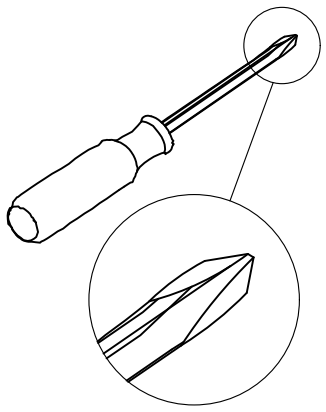


Ø3.5X12mm	
D	X6


12" 300mm	
J-CL	X1


12" 300mm	
J-CR	X1

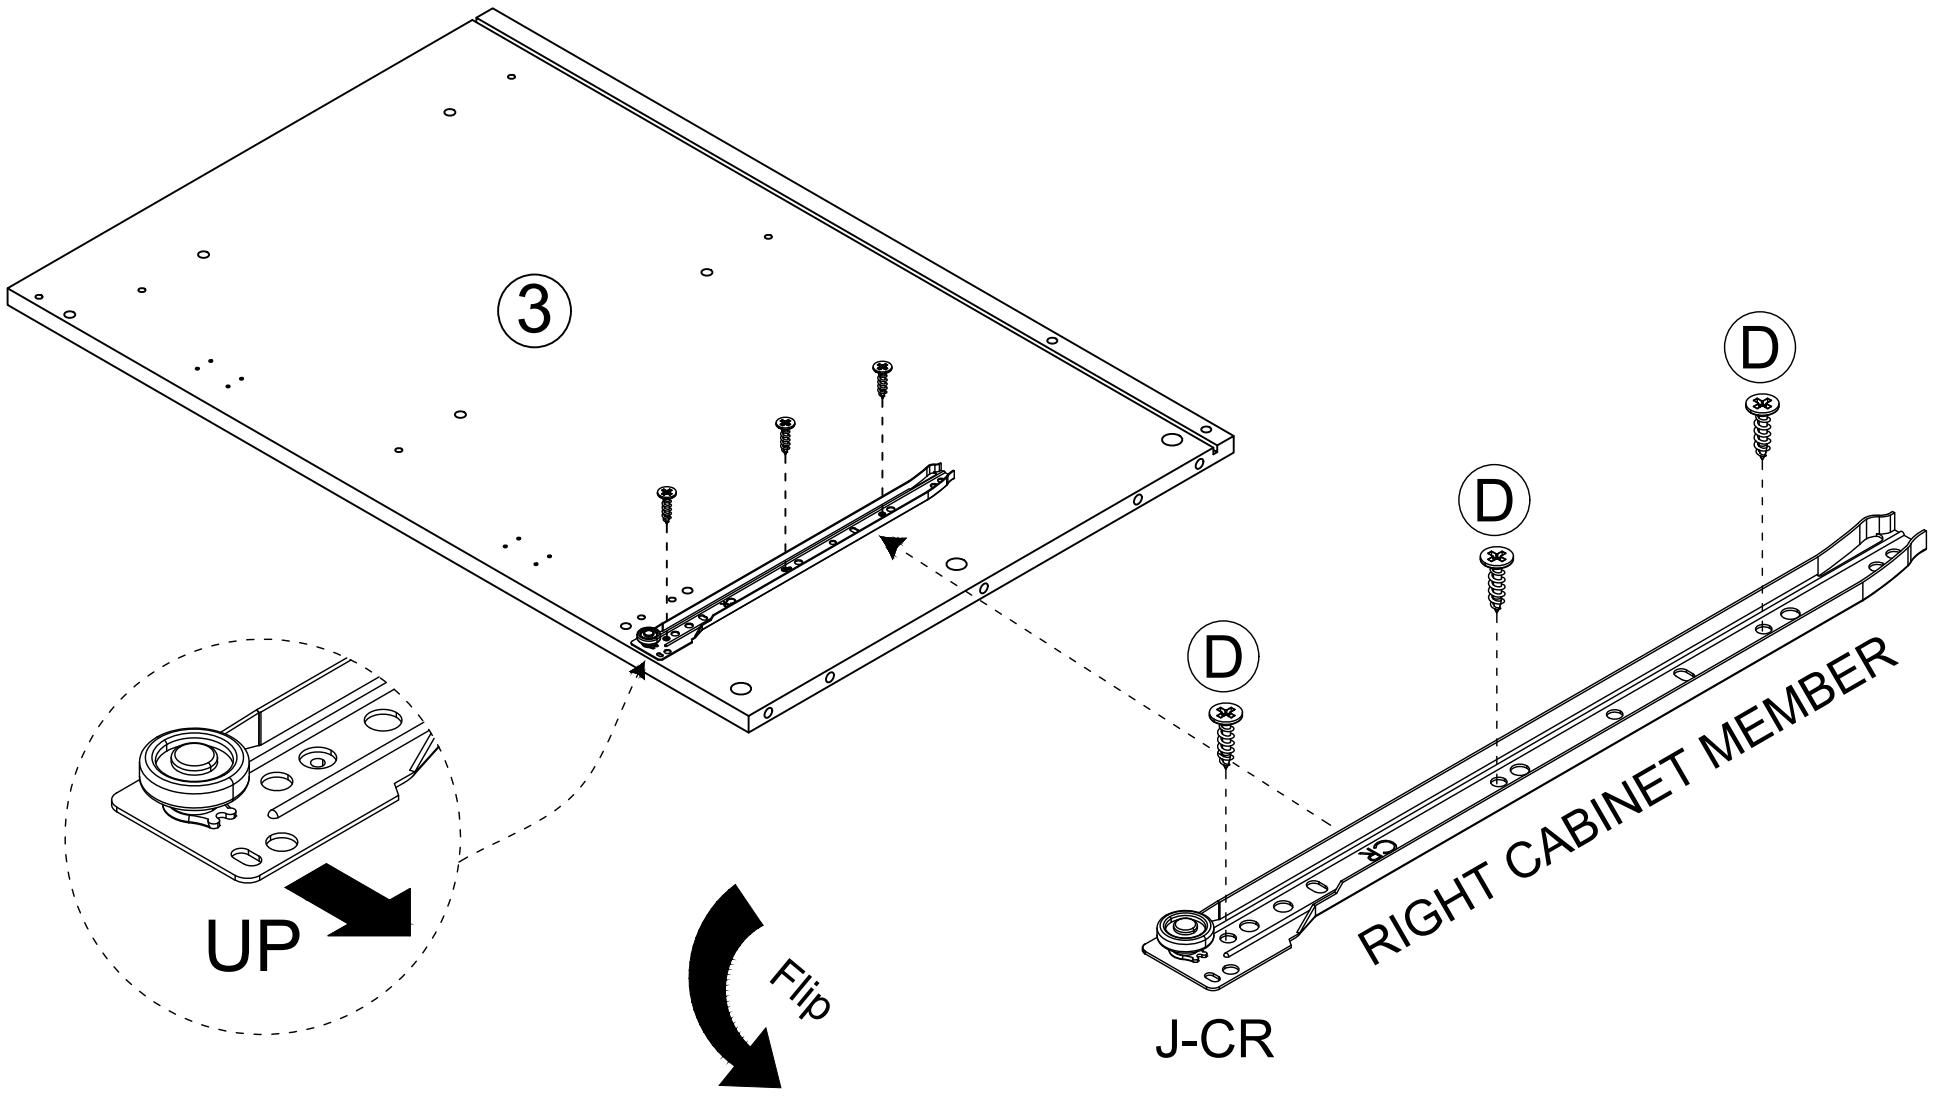


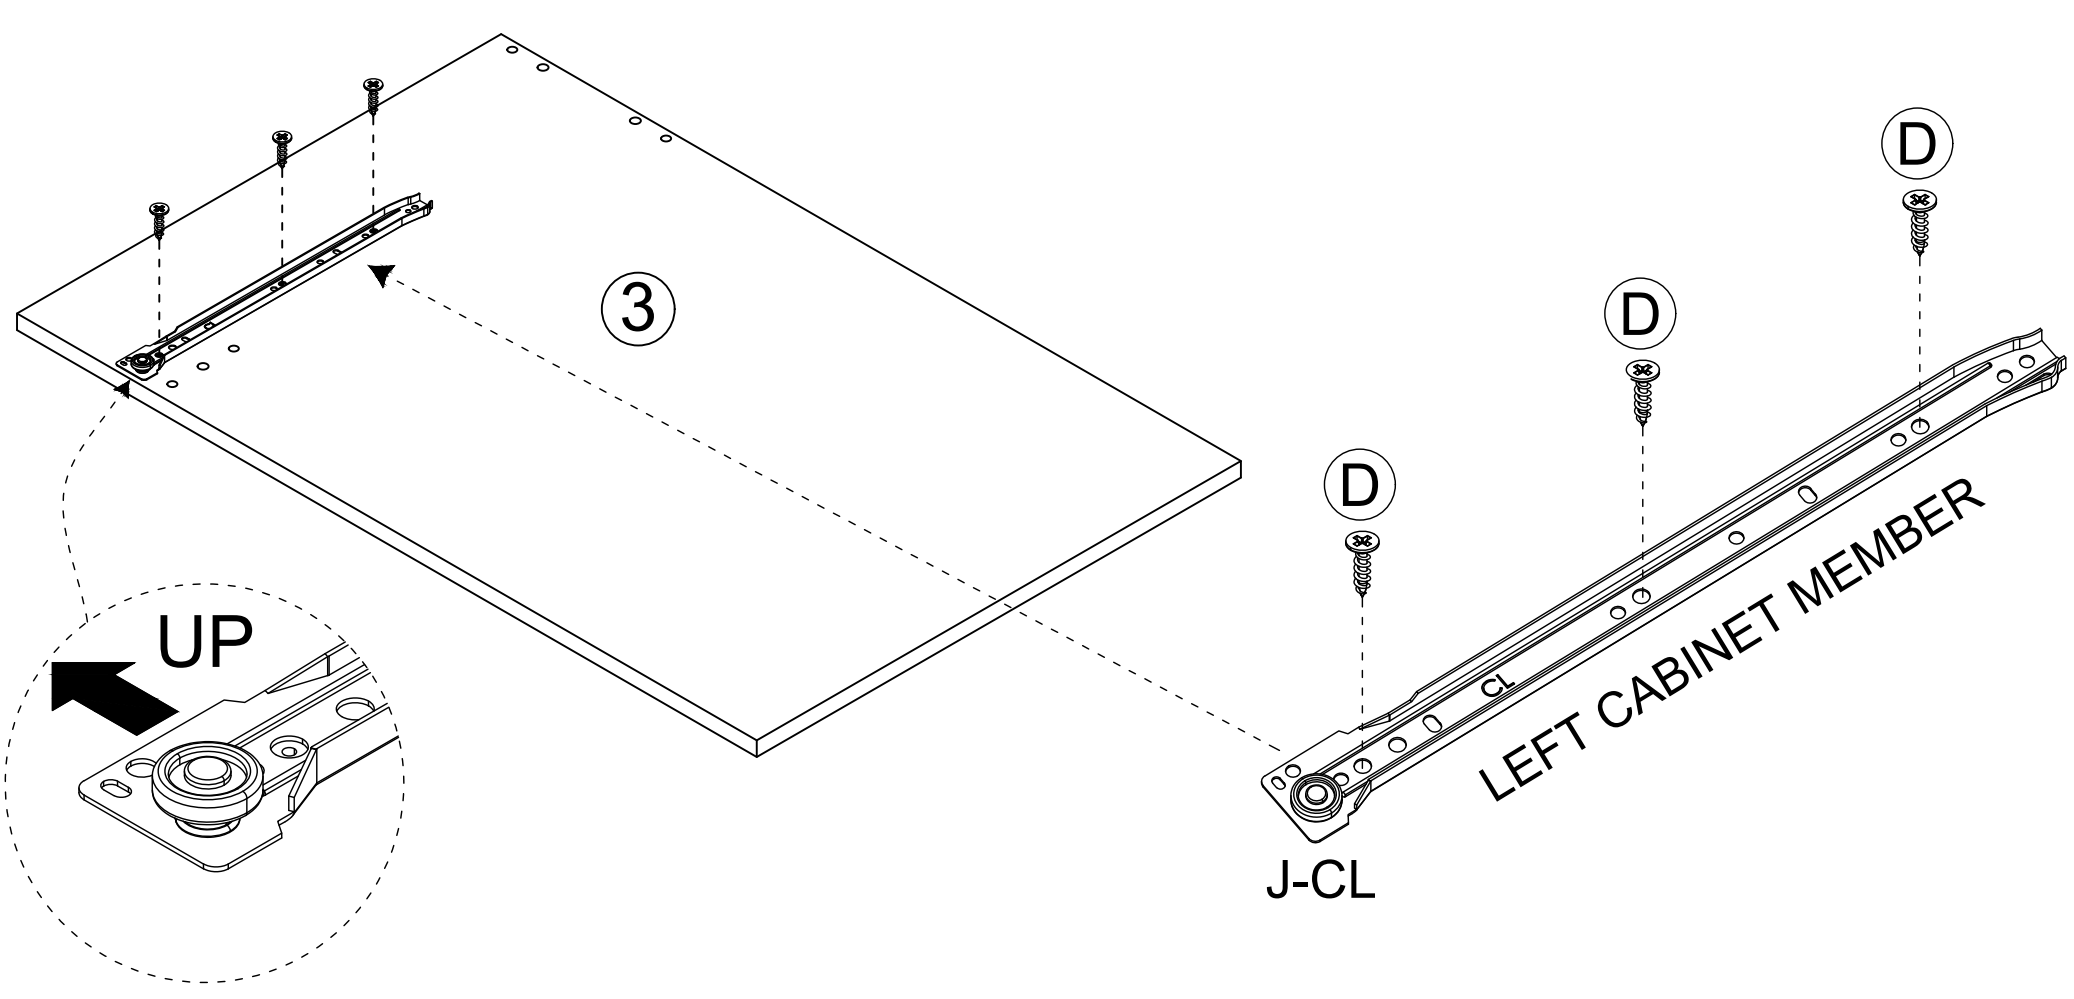



STEP8

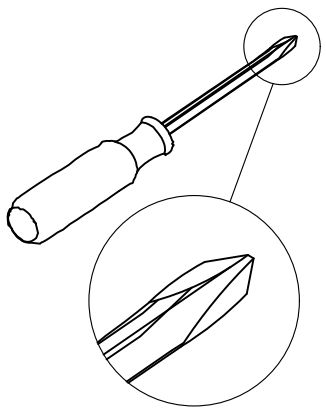

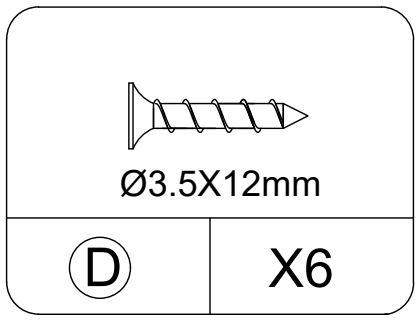

Ø3.5X12mm
D
X6

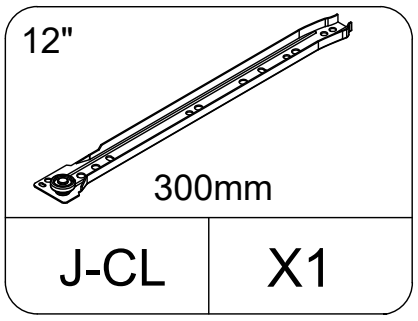

12"
300mm
J-CL
X1

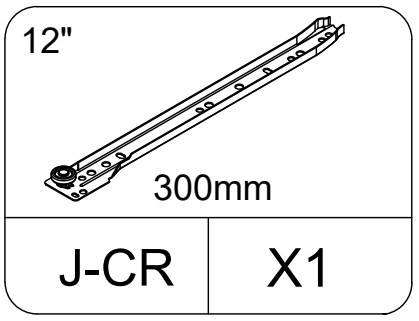

12"
300mm
J-CR
X1

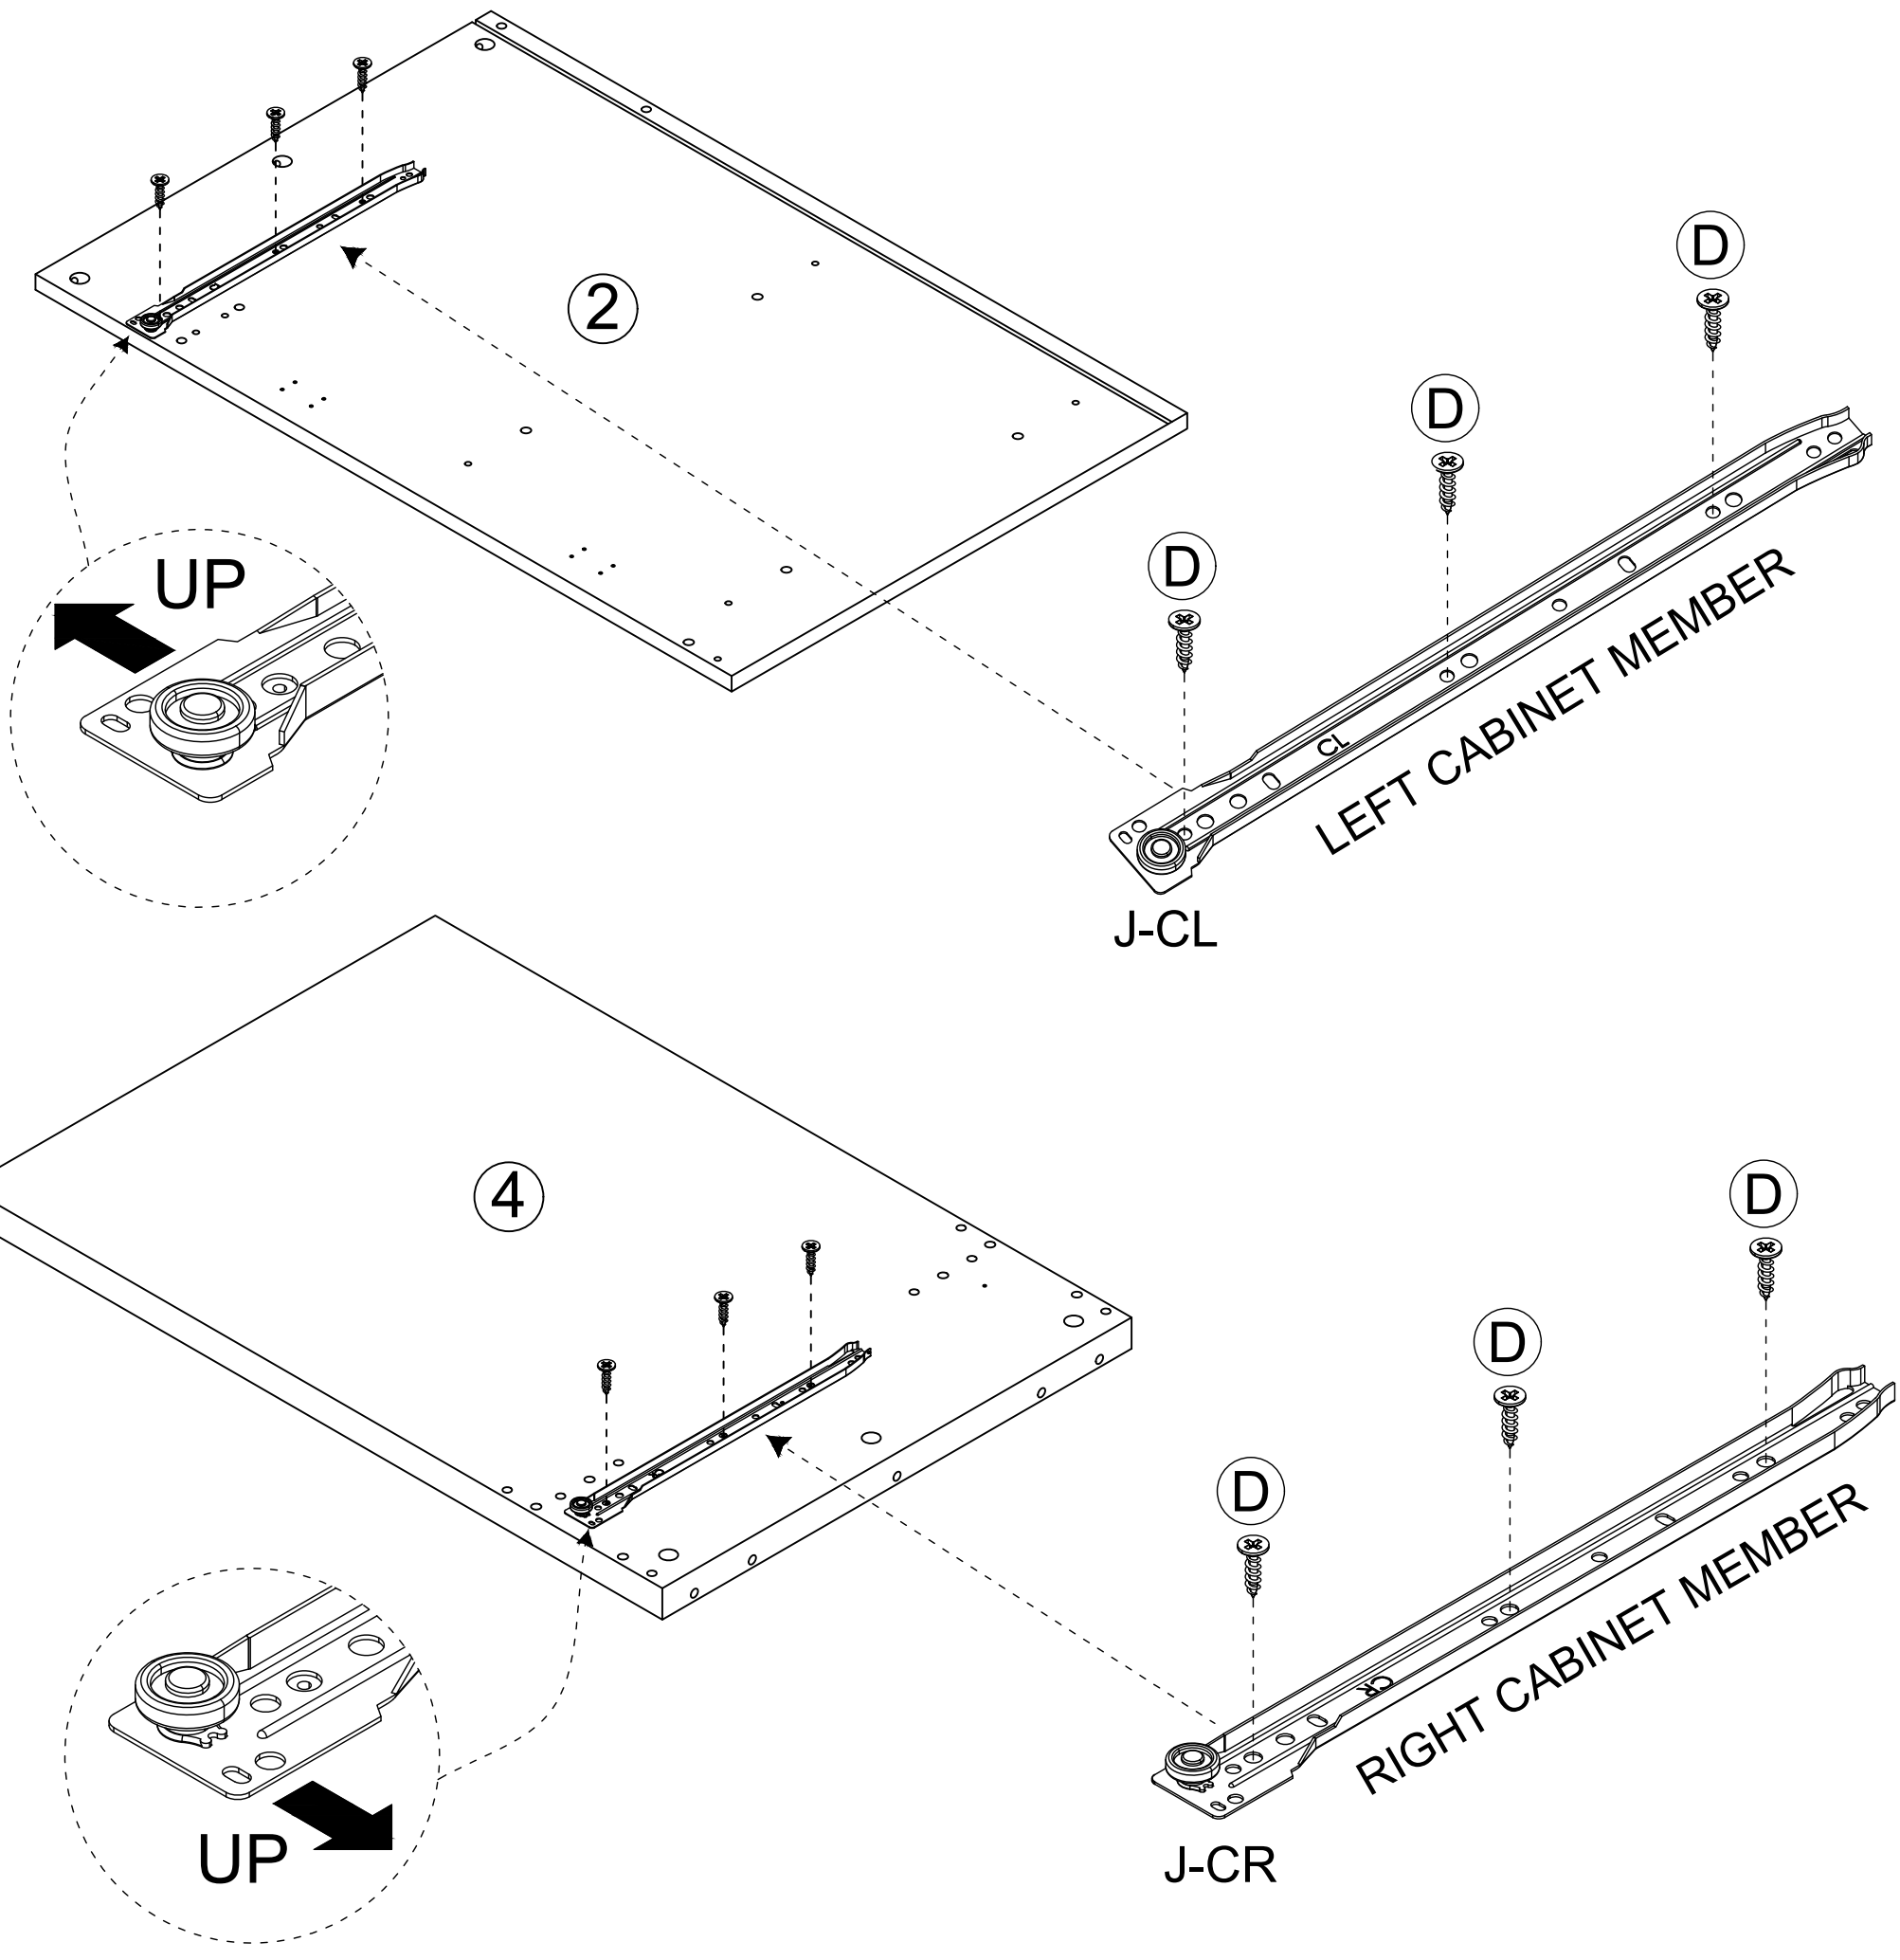

2
UP
D
D
D
LEFT CABINET MEMBER
CL
J-CL
4
UP
D
D
D
RIGHT CABINET MEMBER
CR
J-CR


STEP9

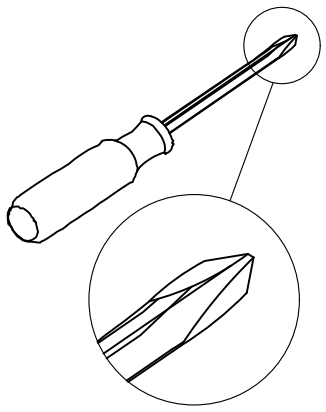

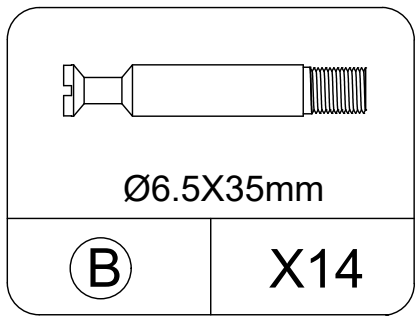


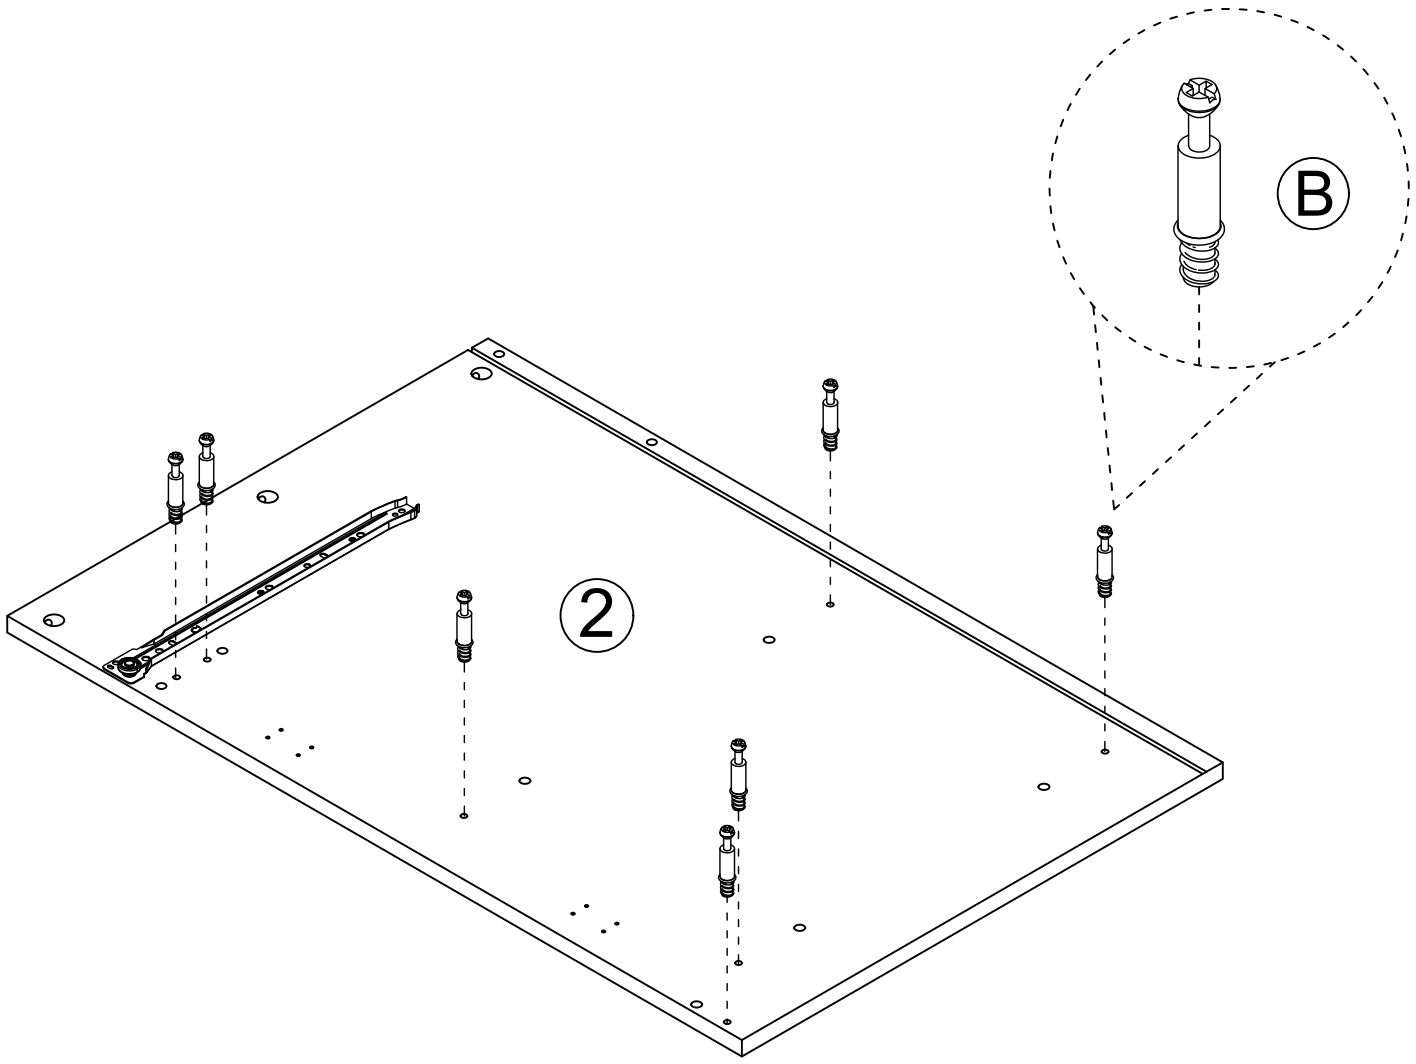


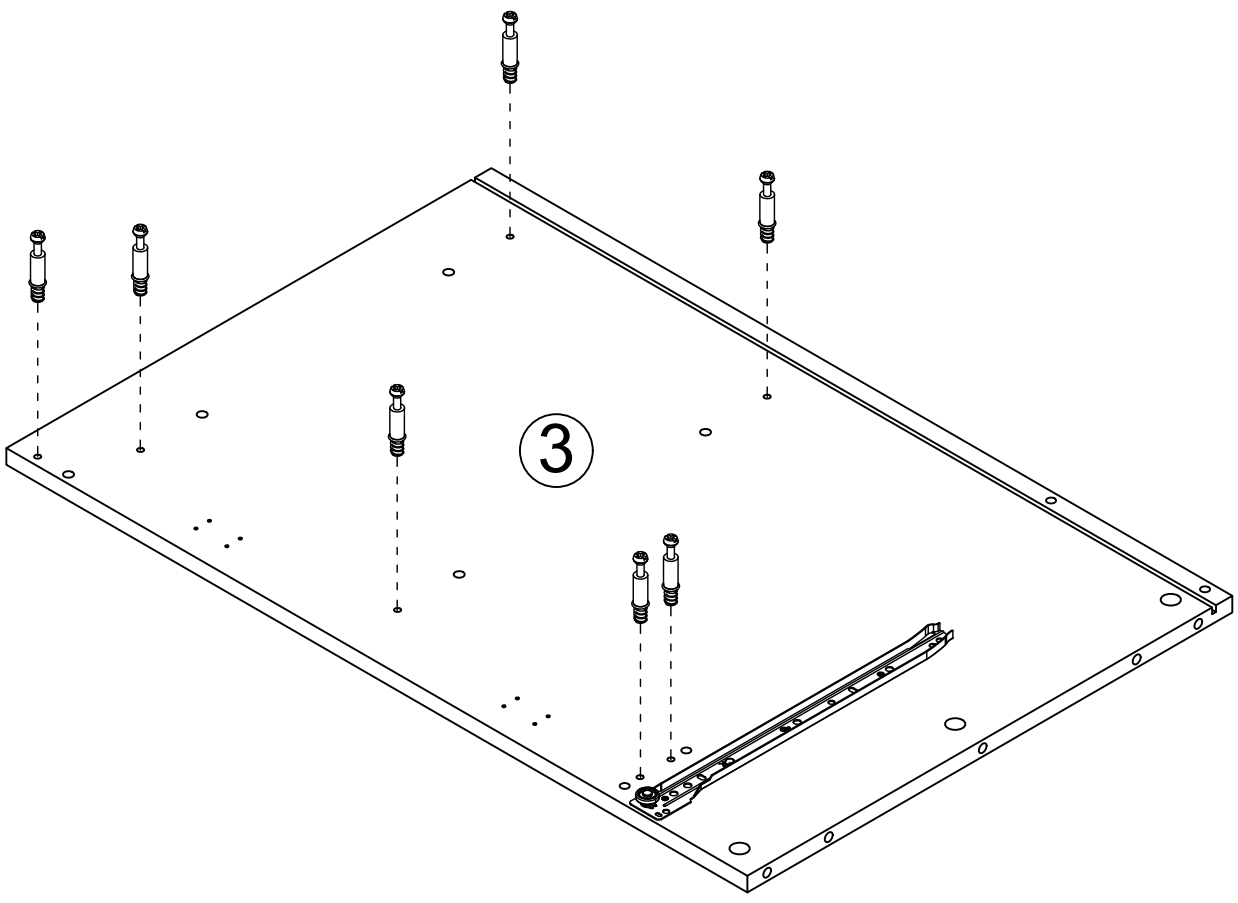


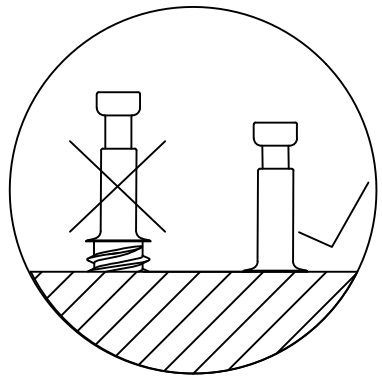


STEP10

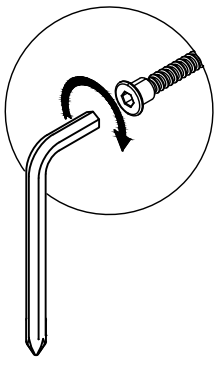


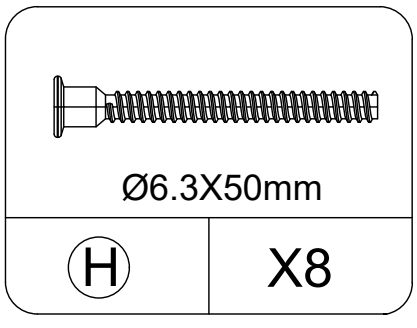


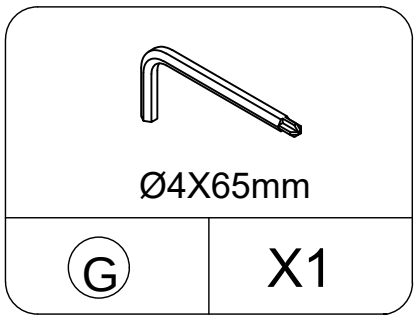

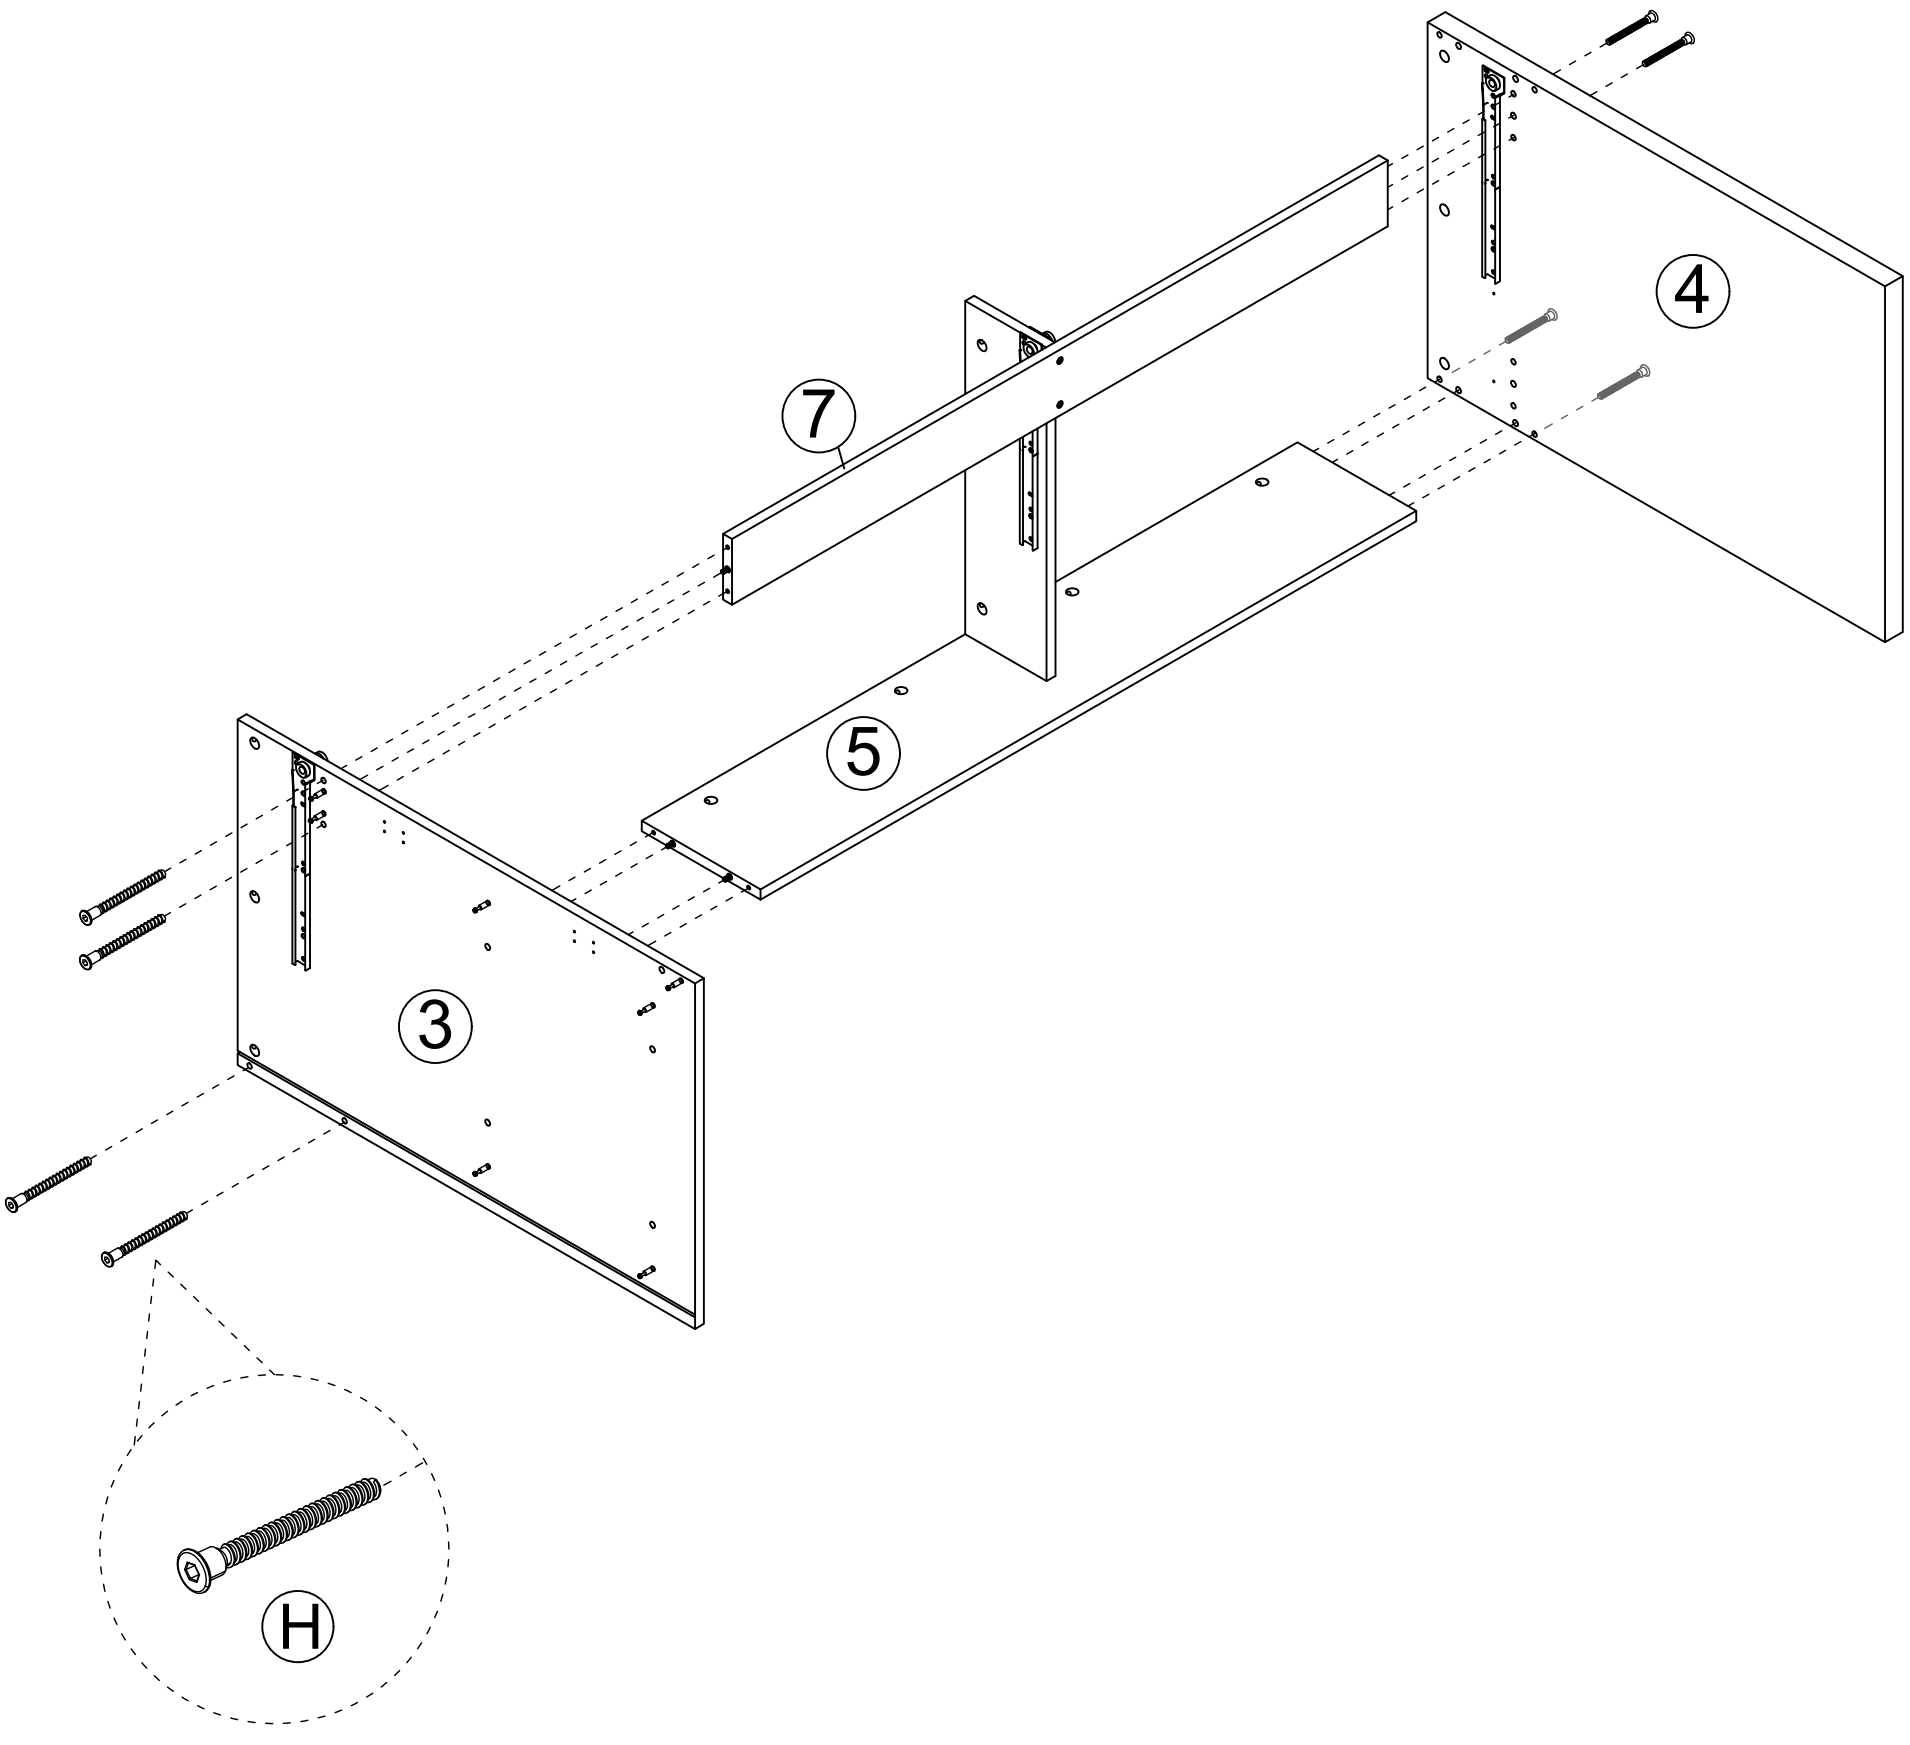


STEP11

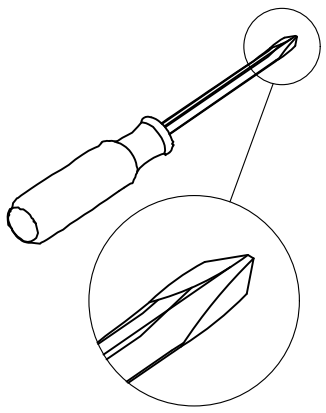

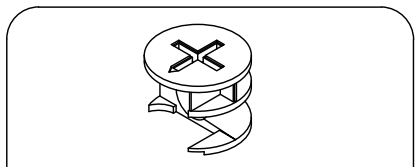


Ø15X9.5mm

A	X2




Ø6.5X35mm


B	X2





Ø8X30mm


C	X12

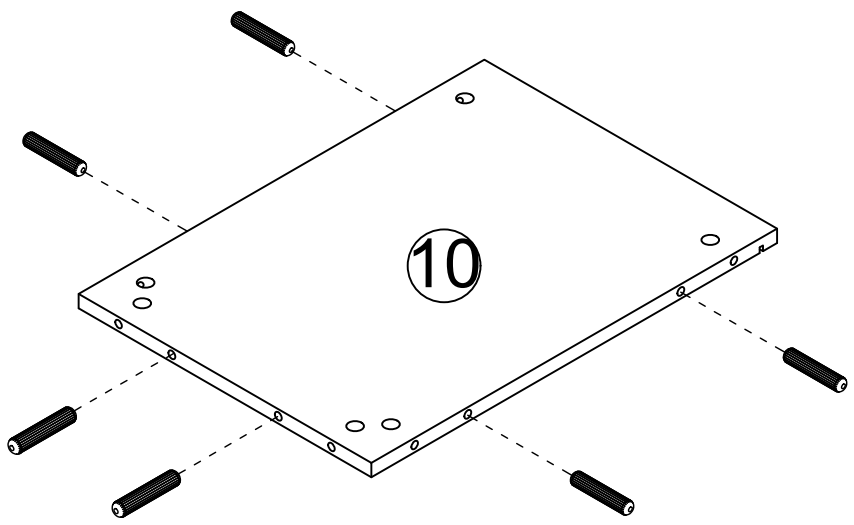

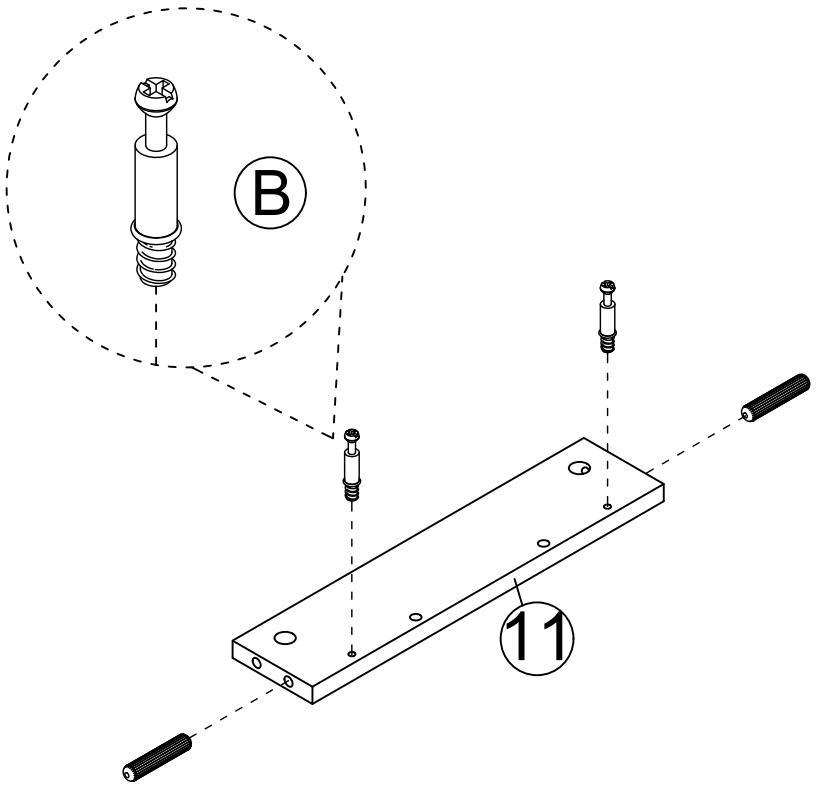


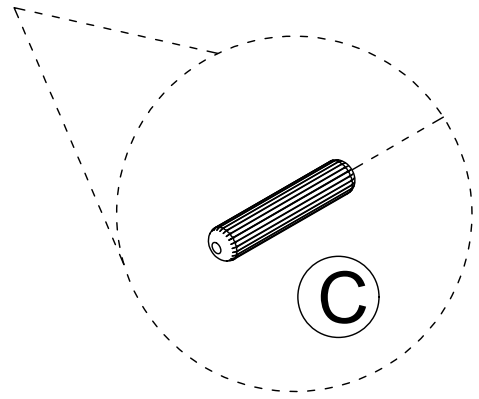

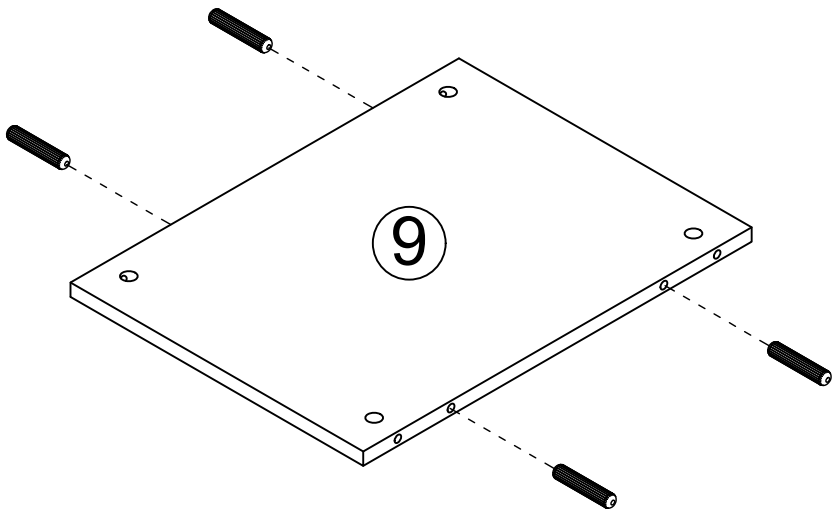


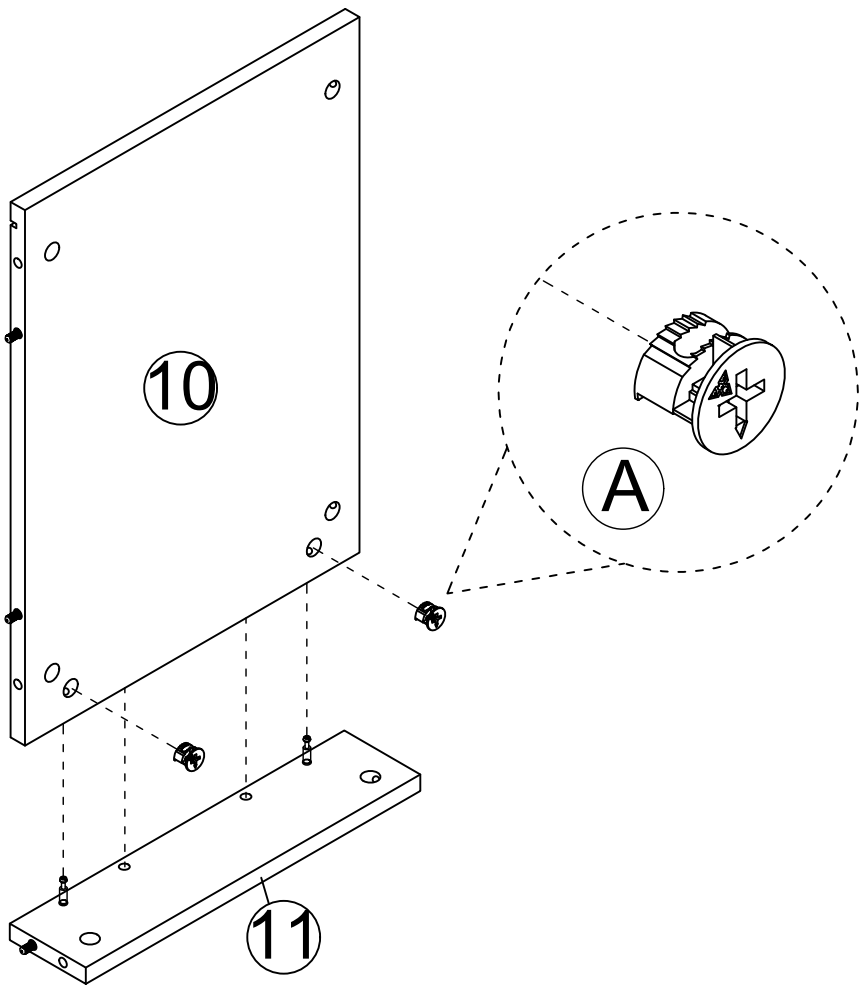


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

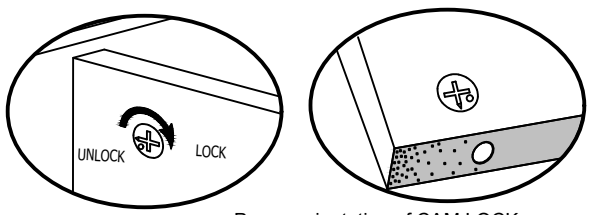



Proper orientation of CAM LOCK

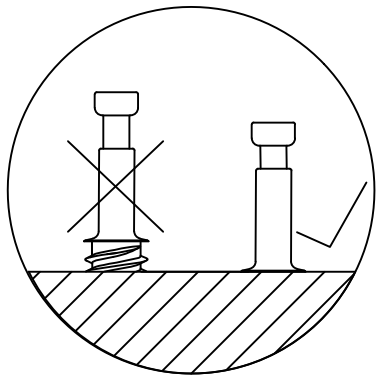


STEP12

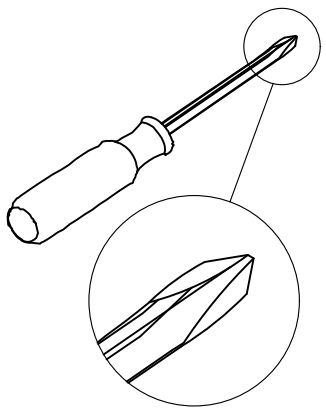


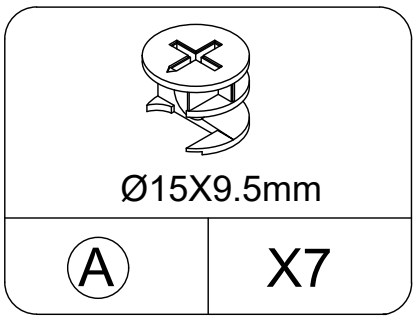

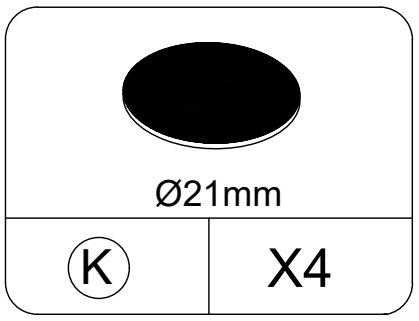

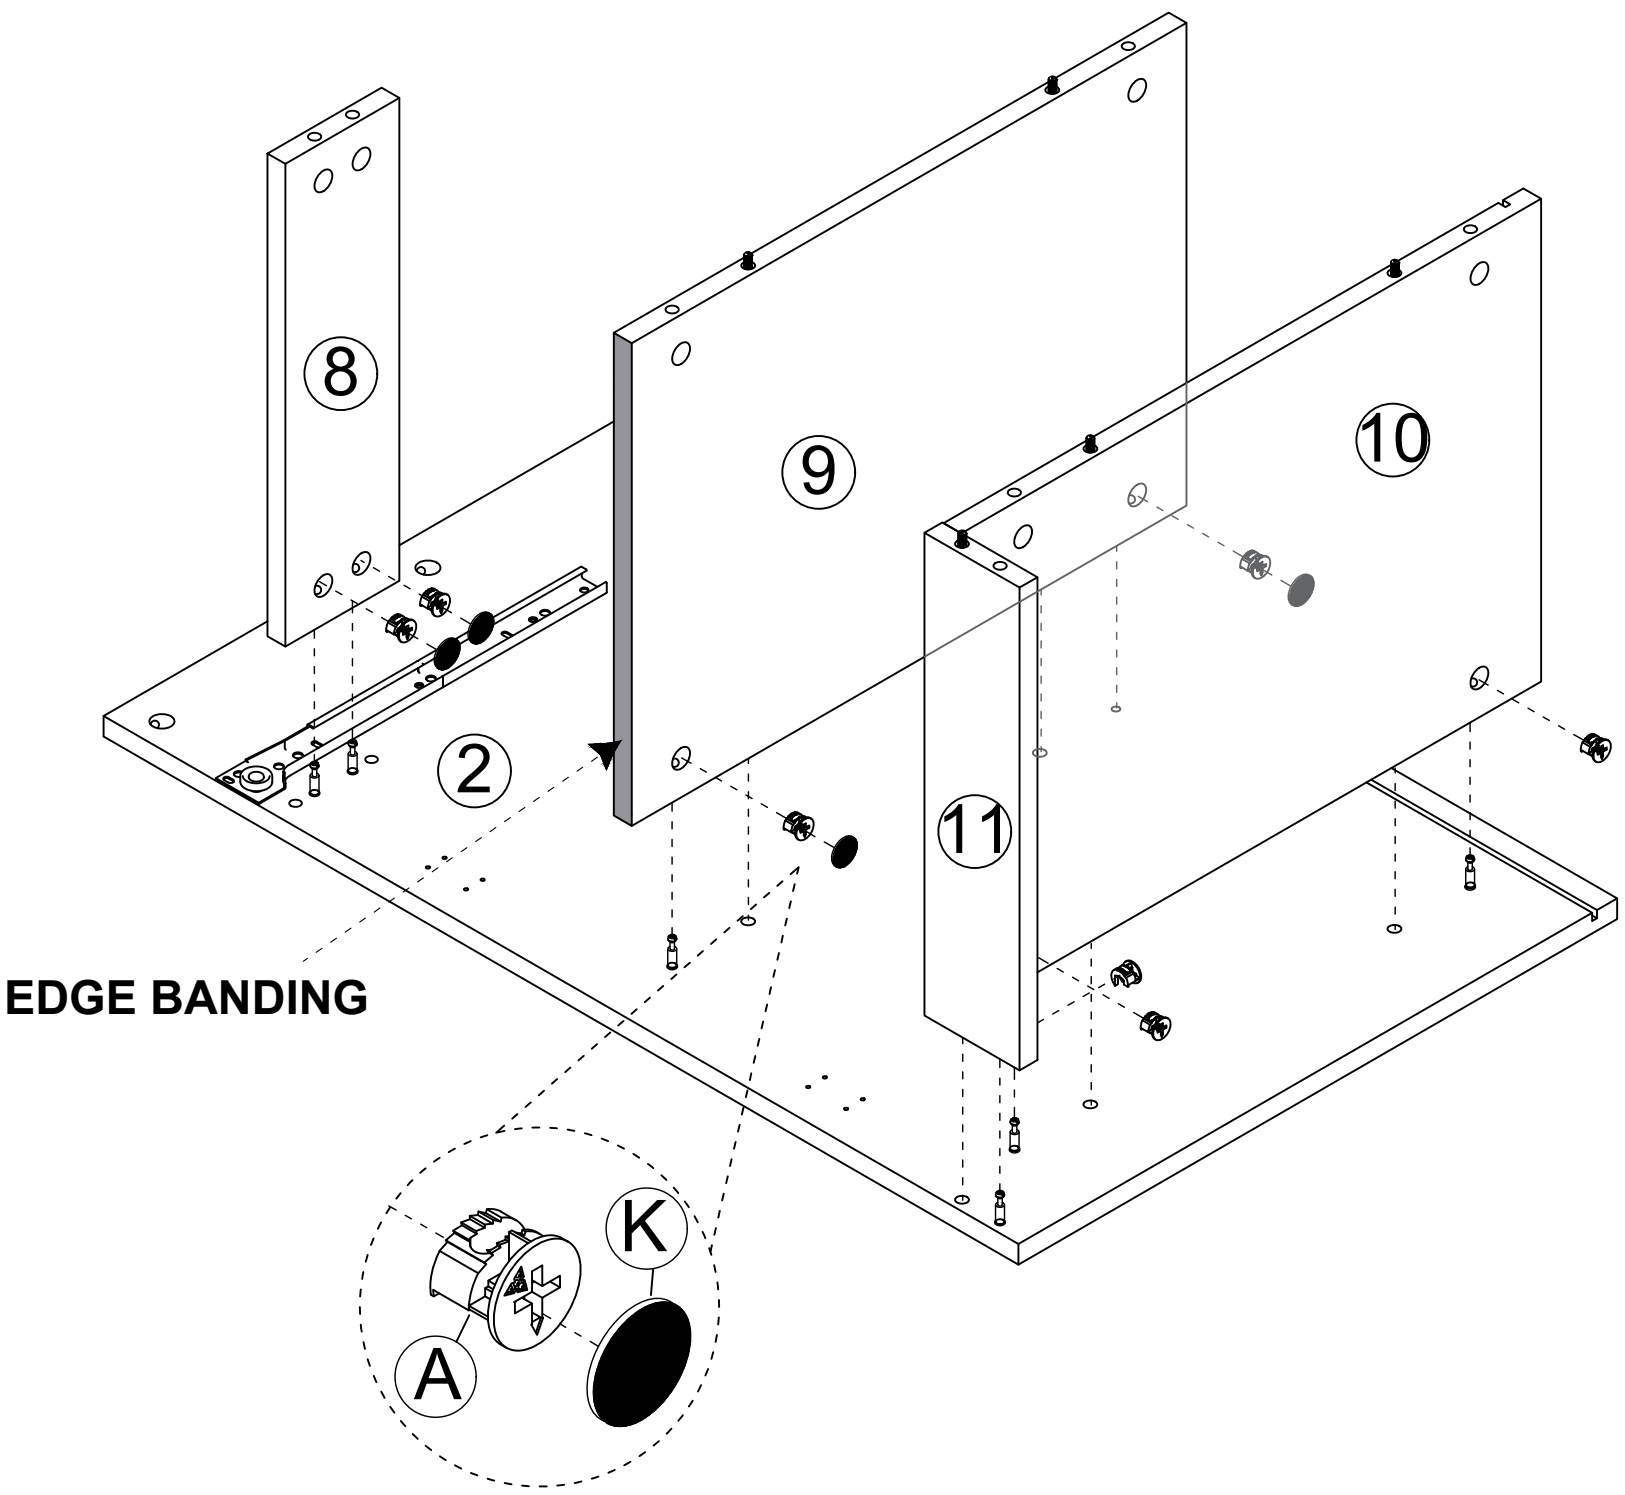



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

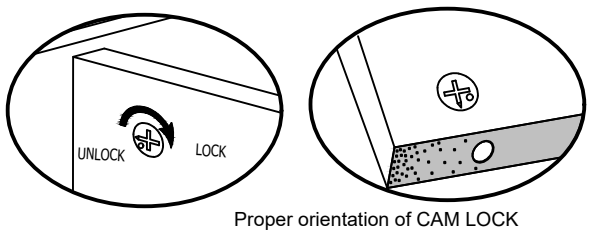

Proper orientation of CAM LOCK


STEP13

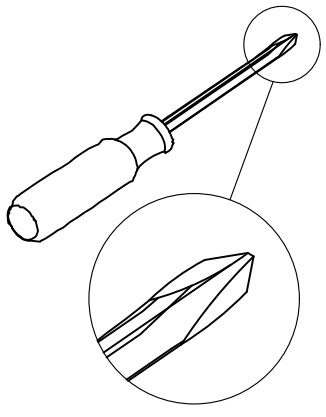

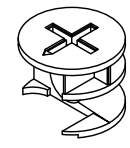


Ø15X9.5mm

A	X7

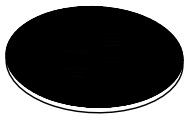

Ø21mm


K	X4

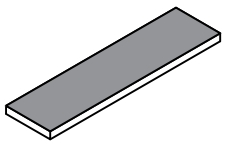

40X13X2mm

L	X6


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

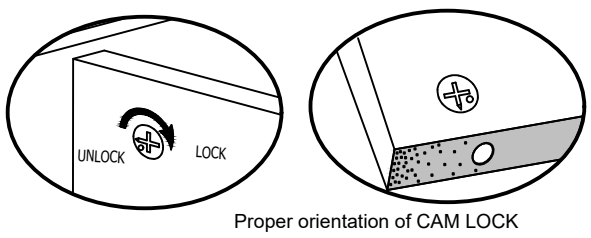


Proper orientation of CAM LOCK


Tear off the protective film on the back of the part L and stick it to the bottom of the plate.


STEP14

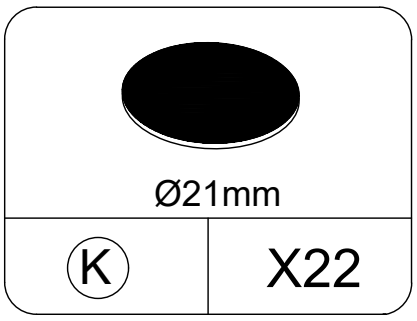

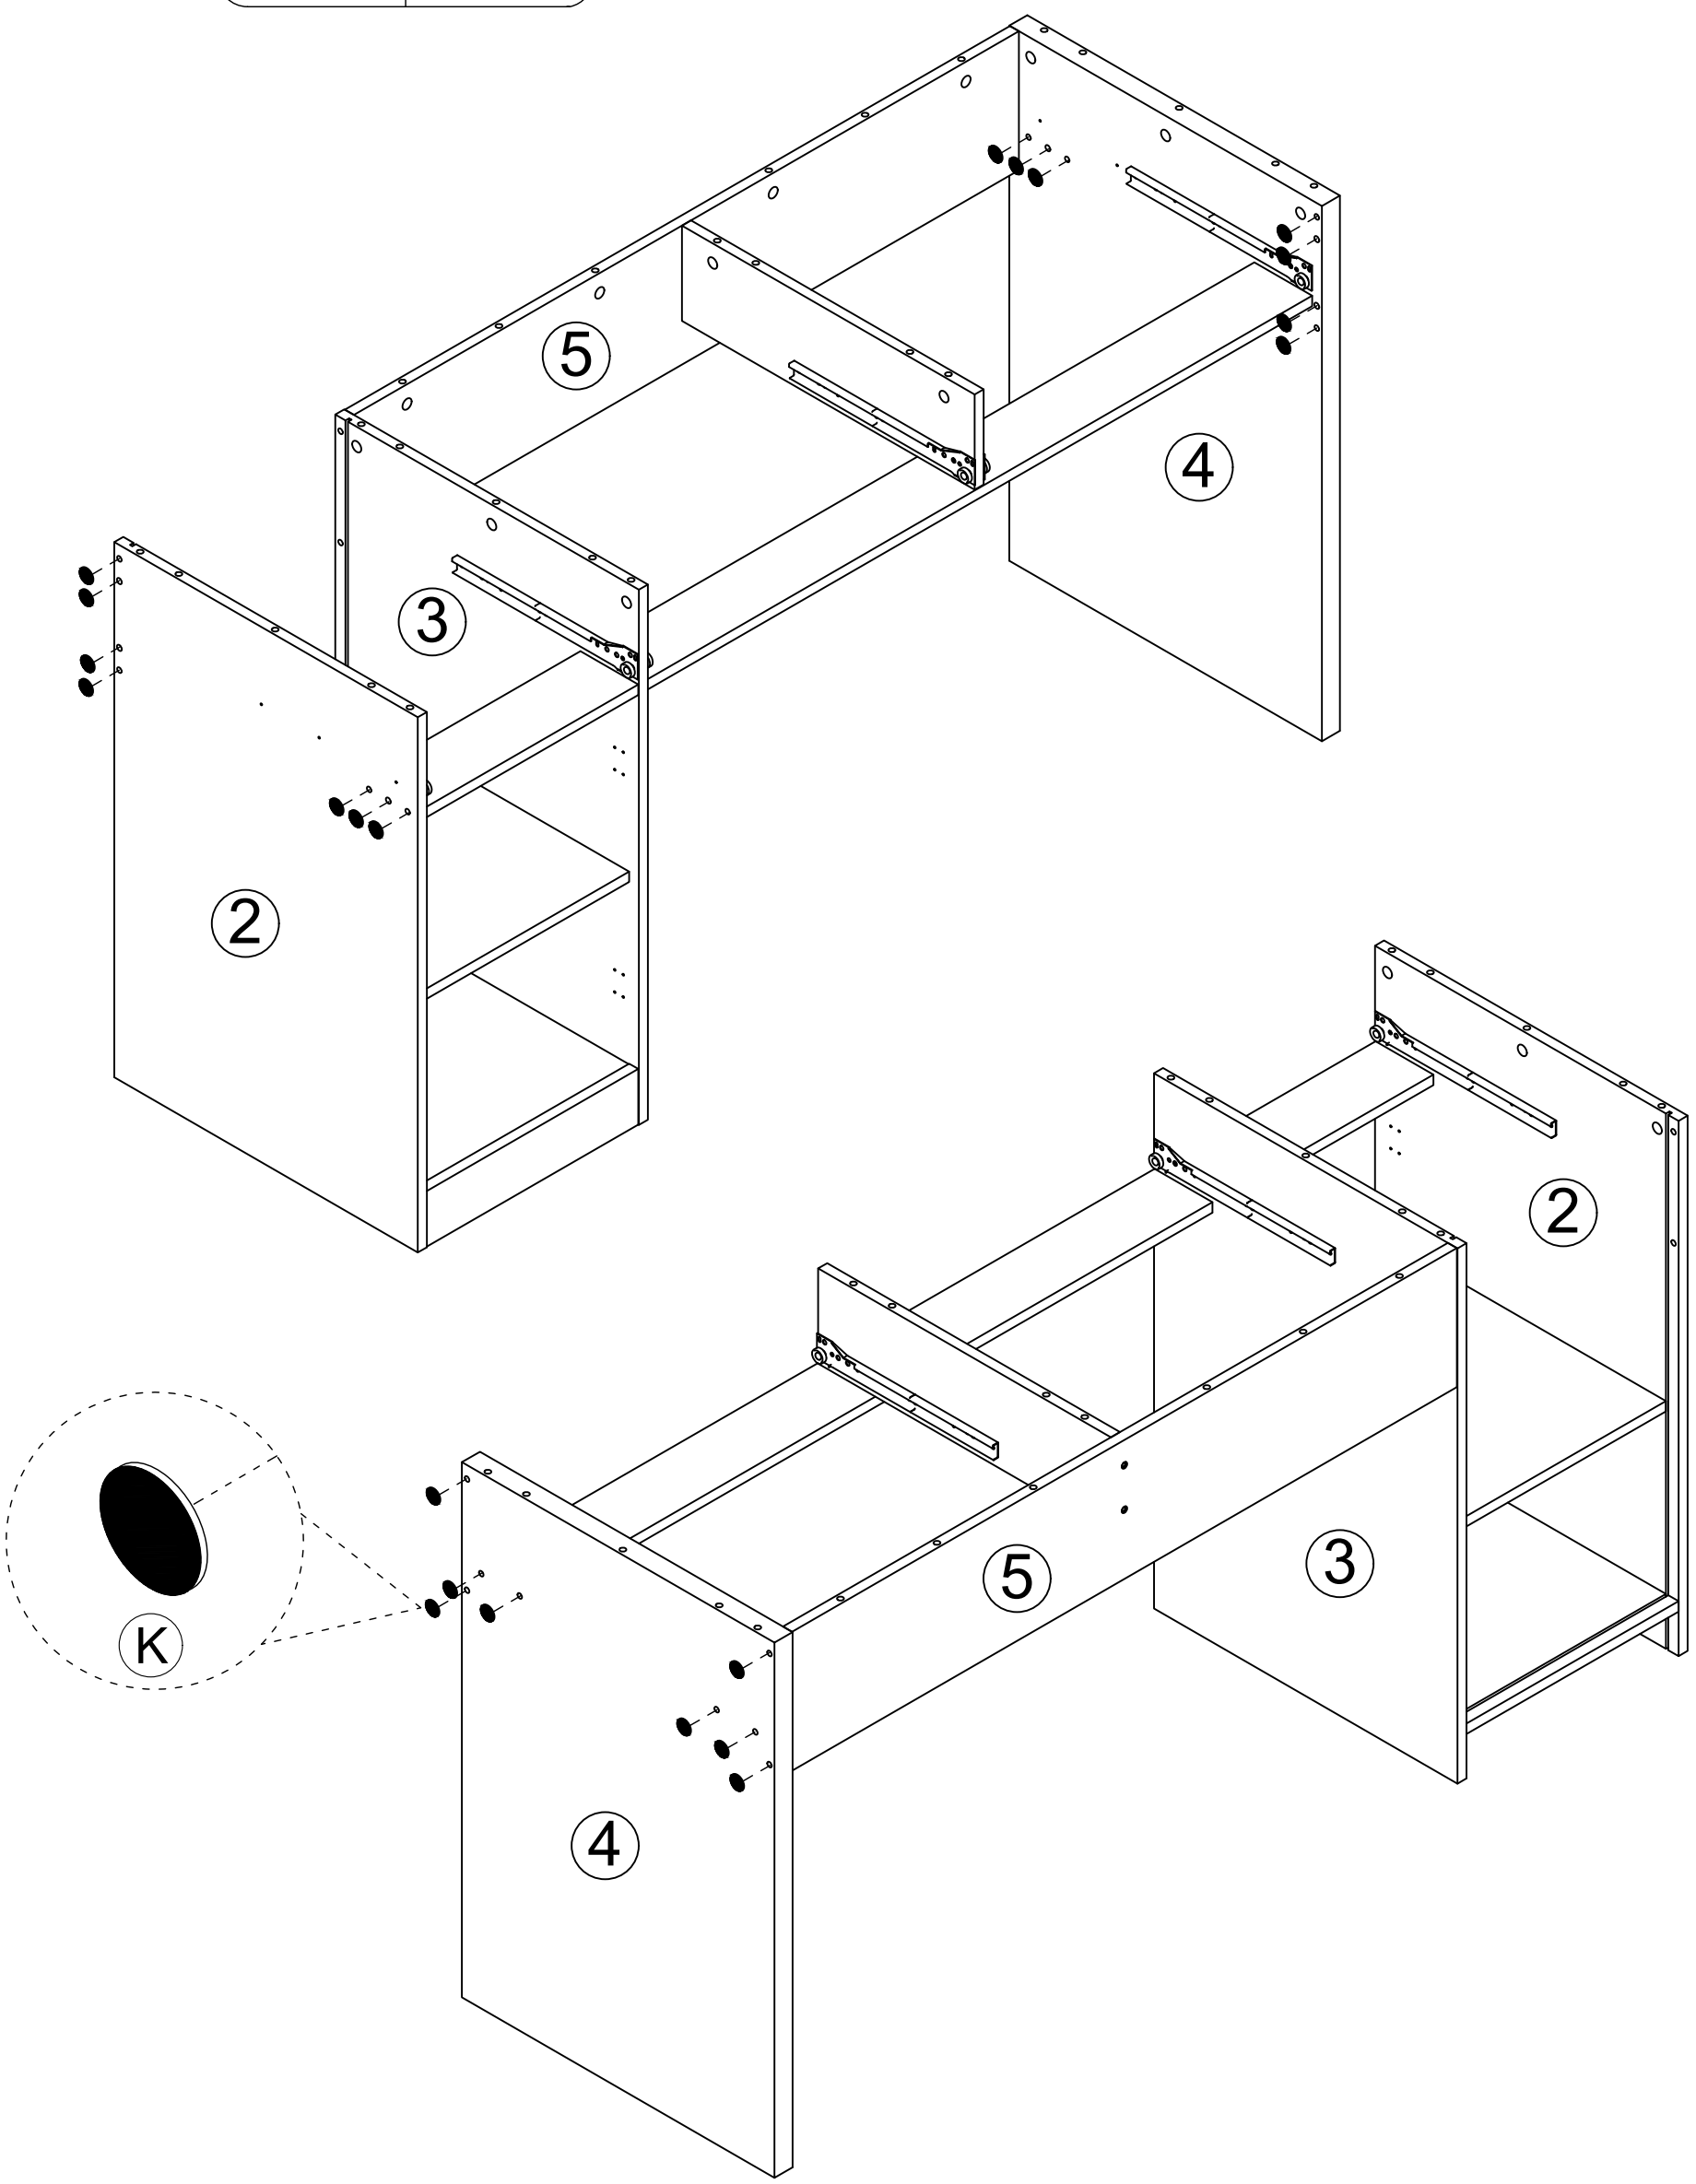



STEP15

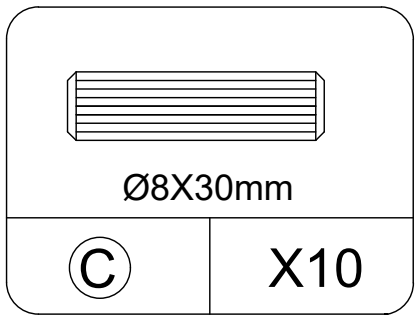


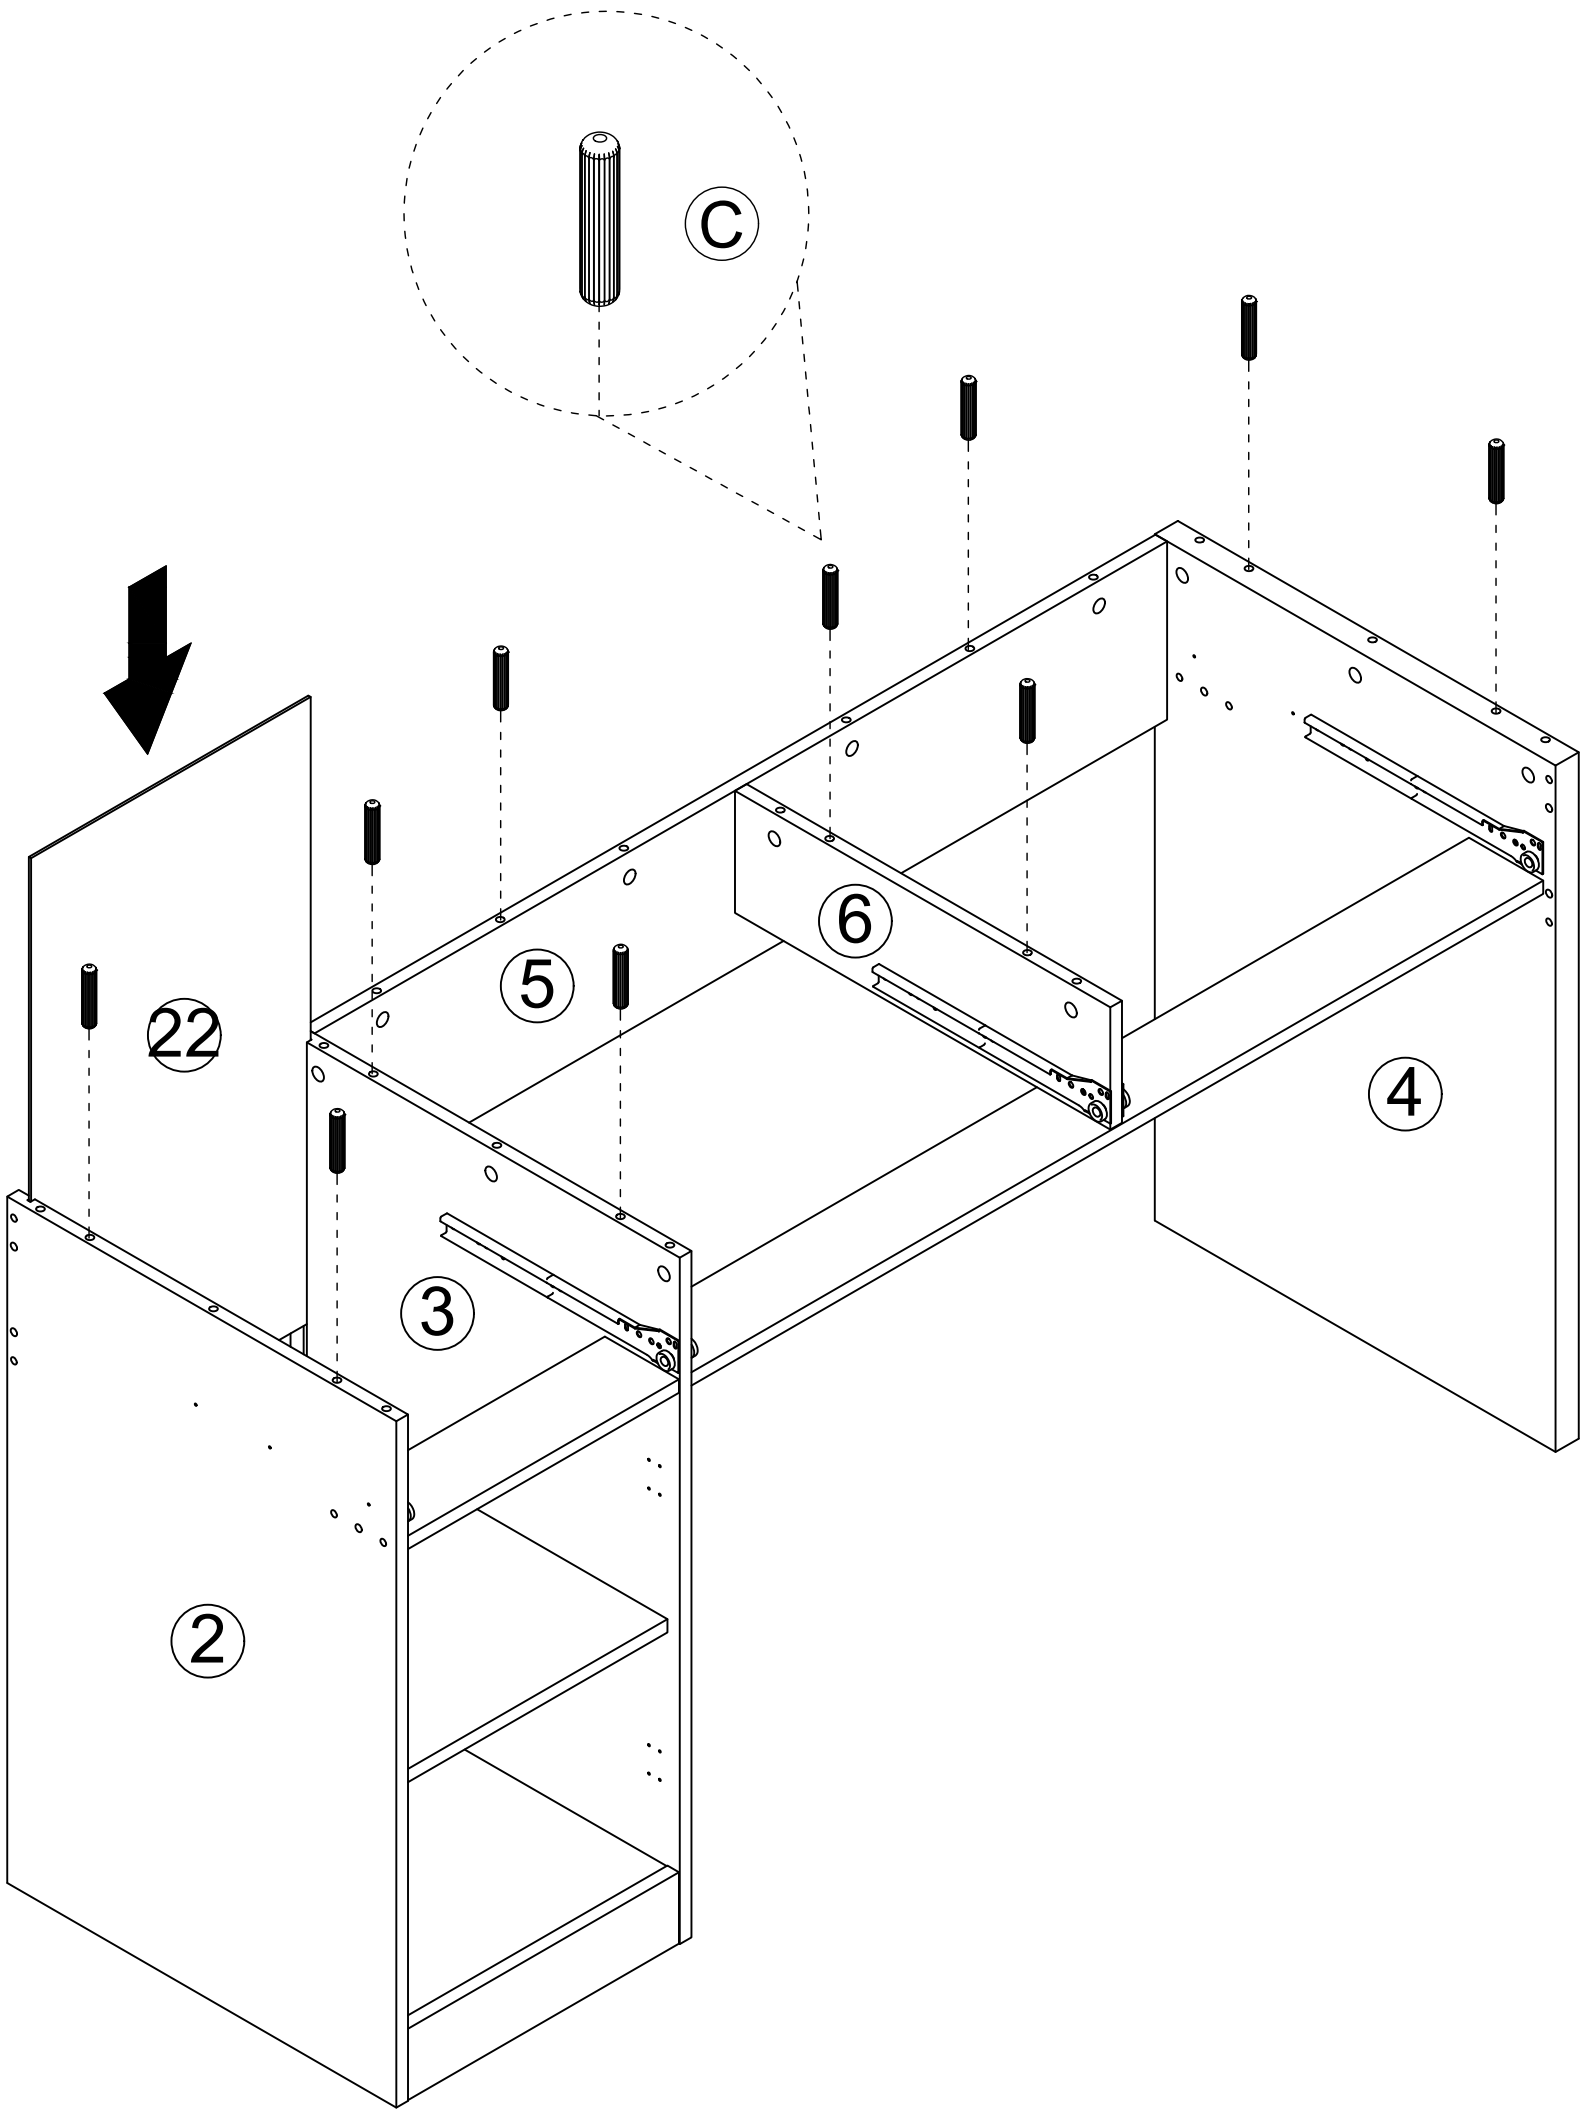


STEP16

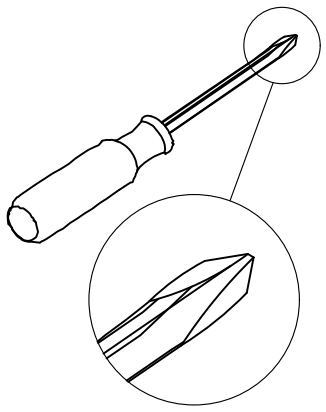


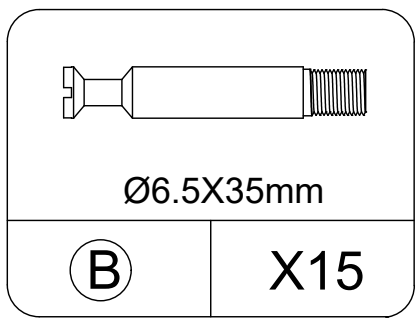


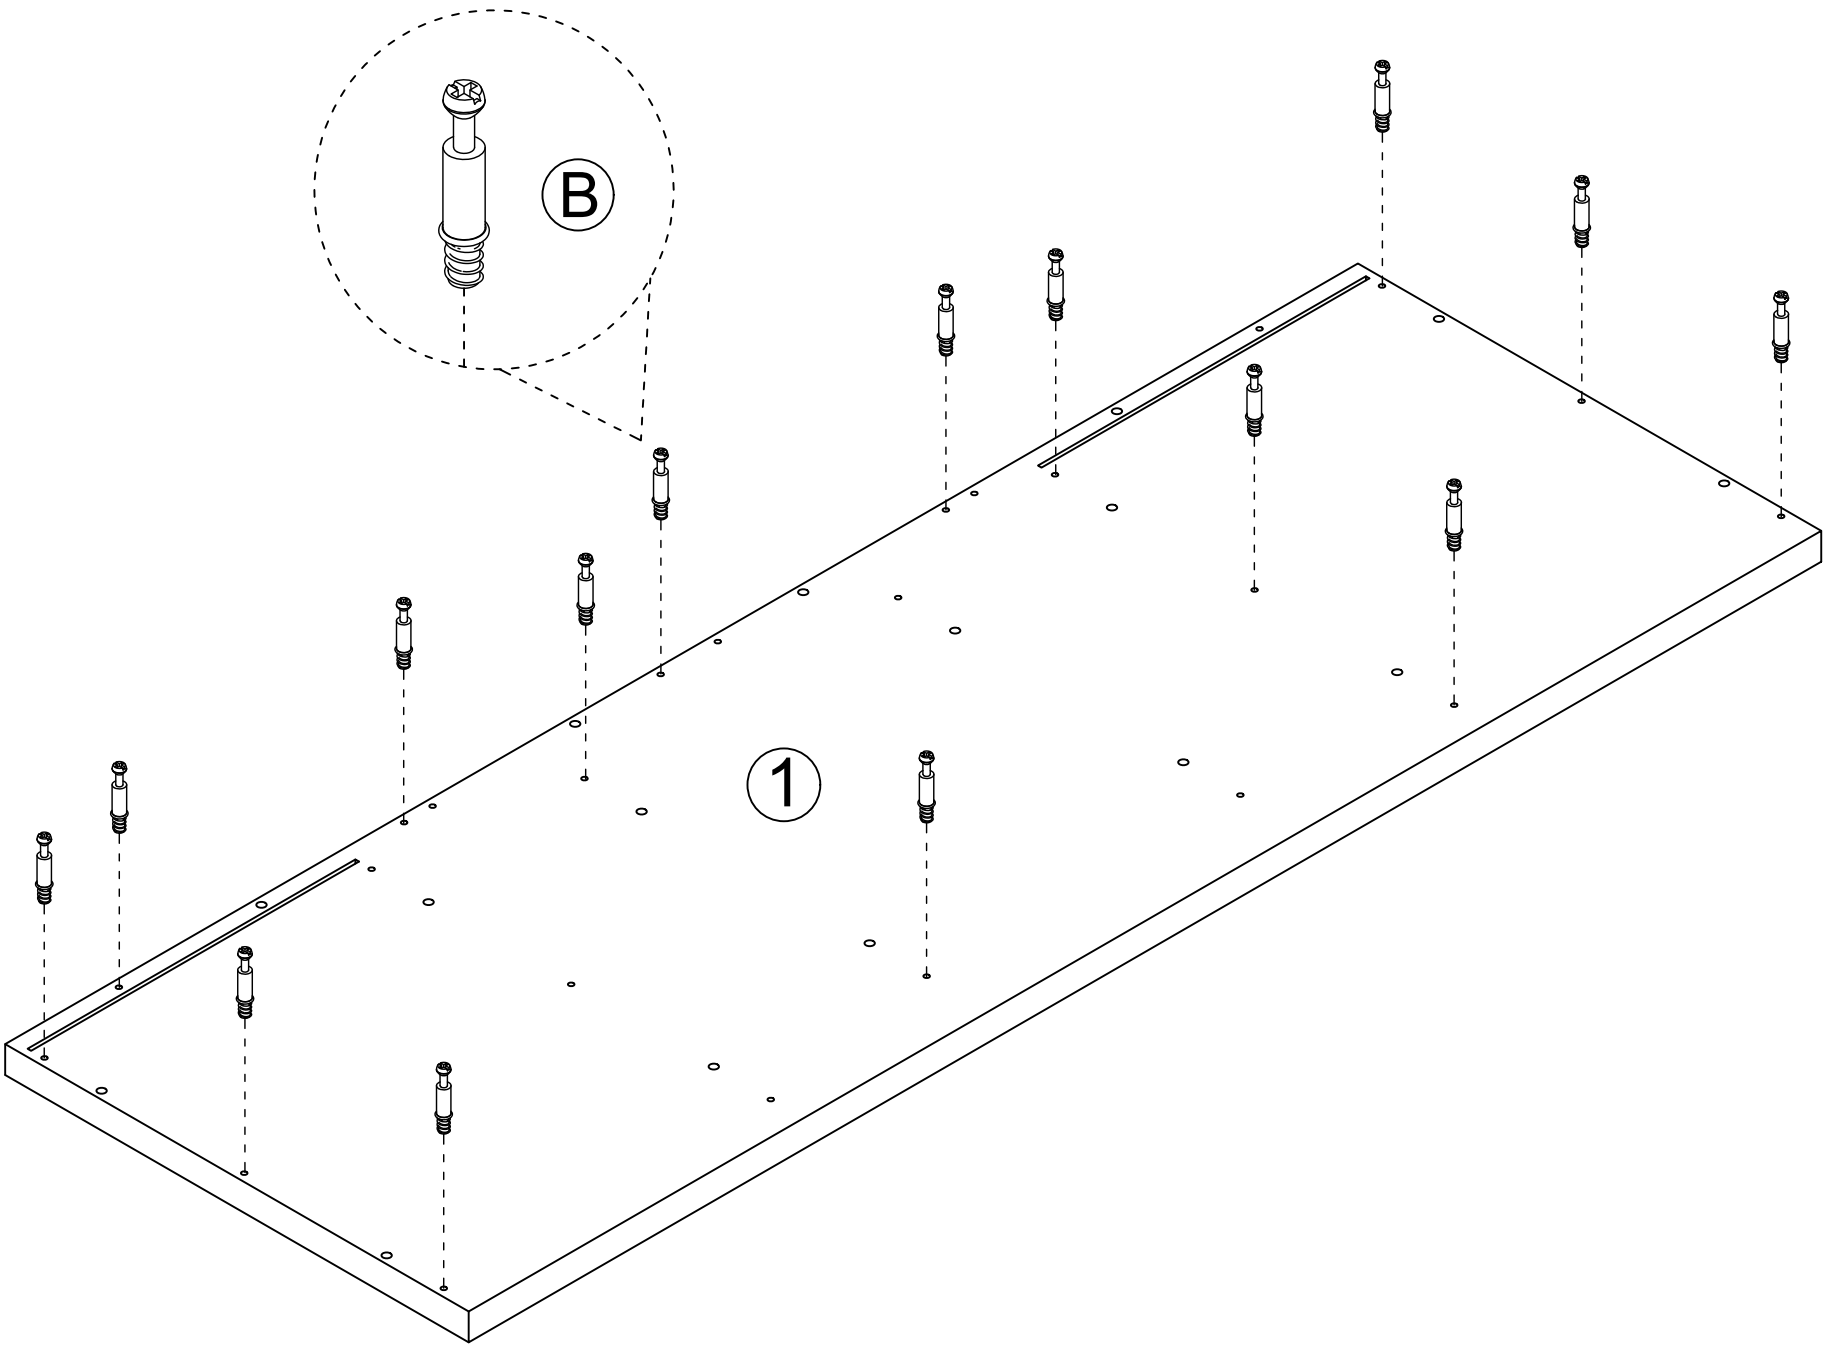


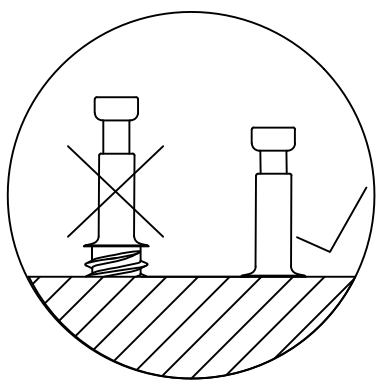


STEP17

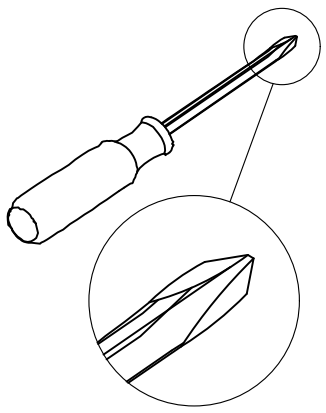


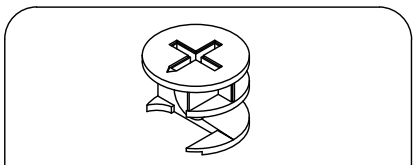

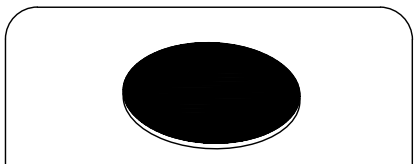

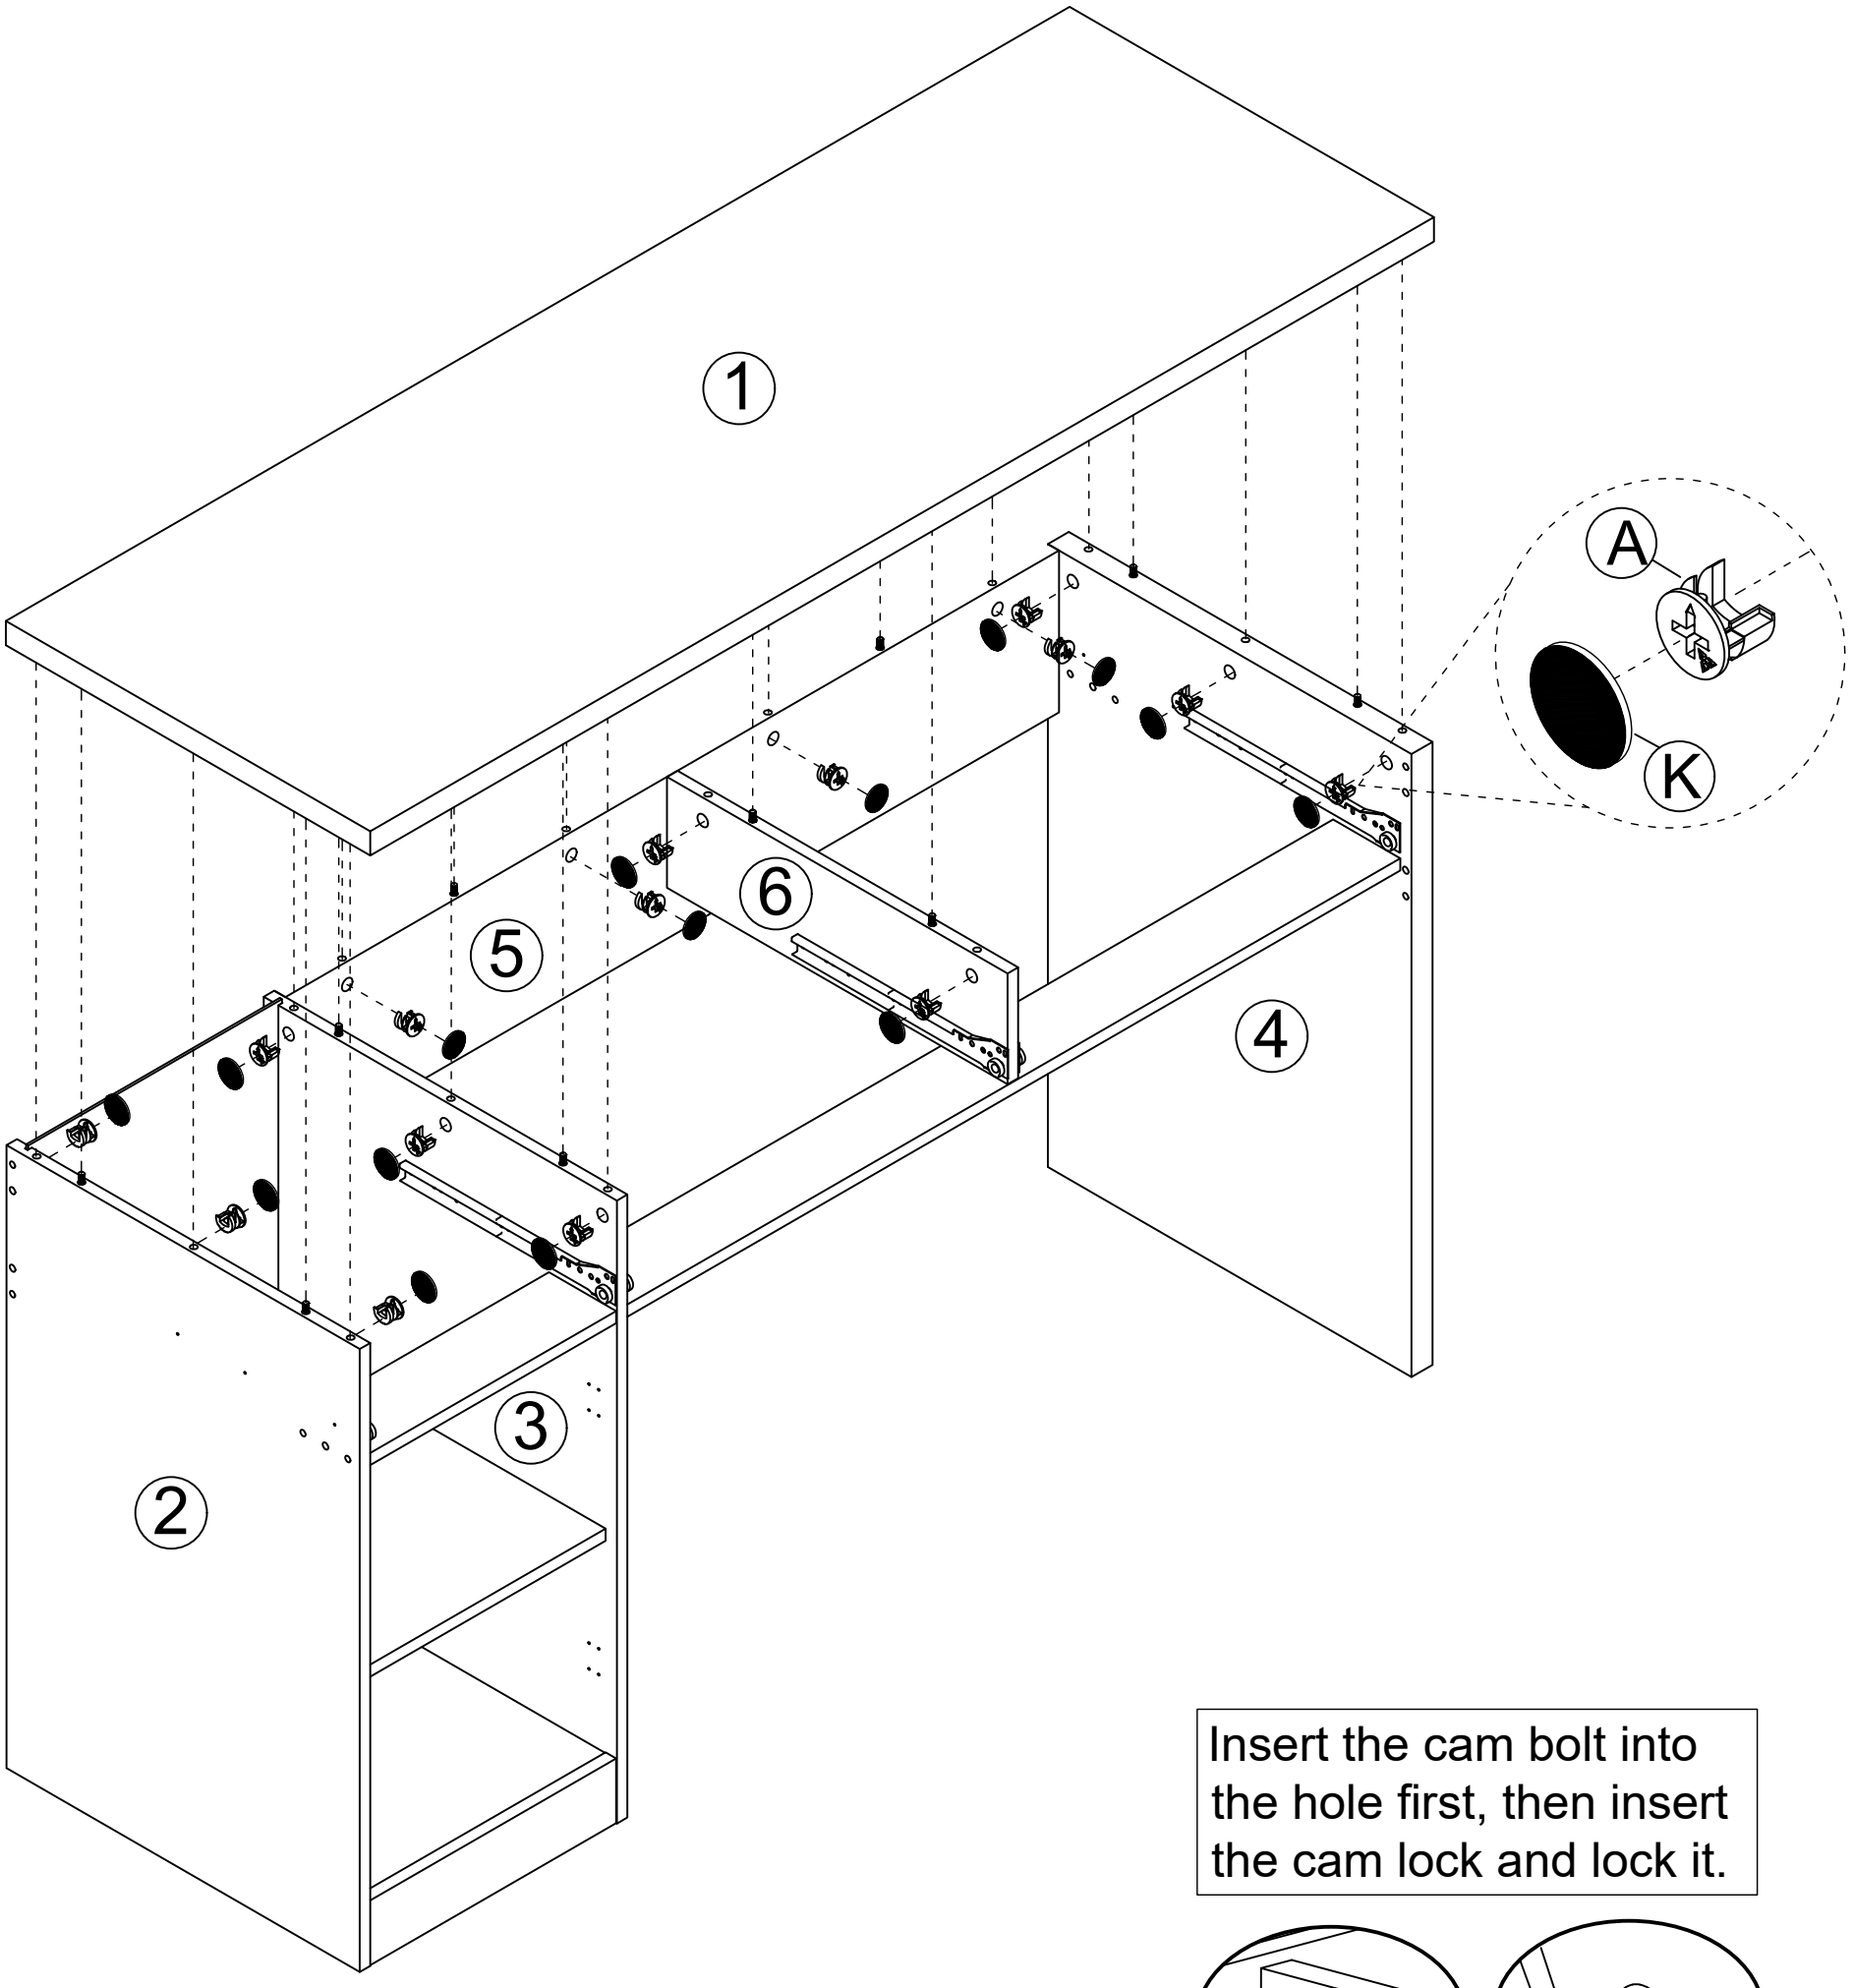


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

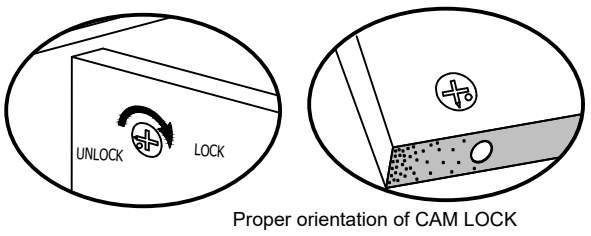

Proper orientation of CAM LOCK

STEP18

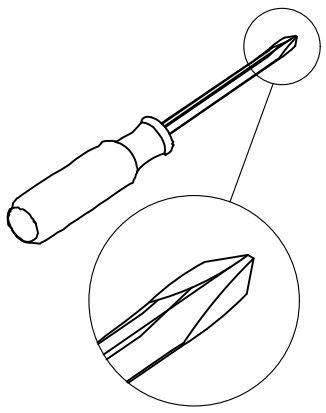


Ø3.5X12mm	
D	X12


WHITE Ø3X12mm	
F	X2


80X40X18mm	
I	X1

Ø35mm	
M	X2

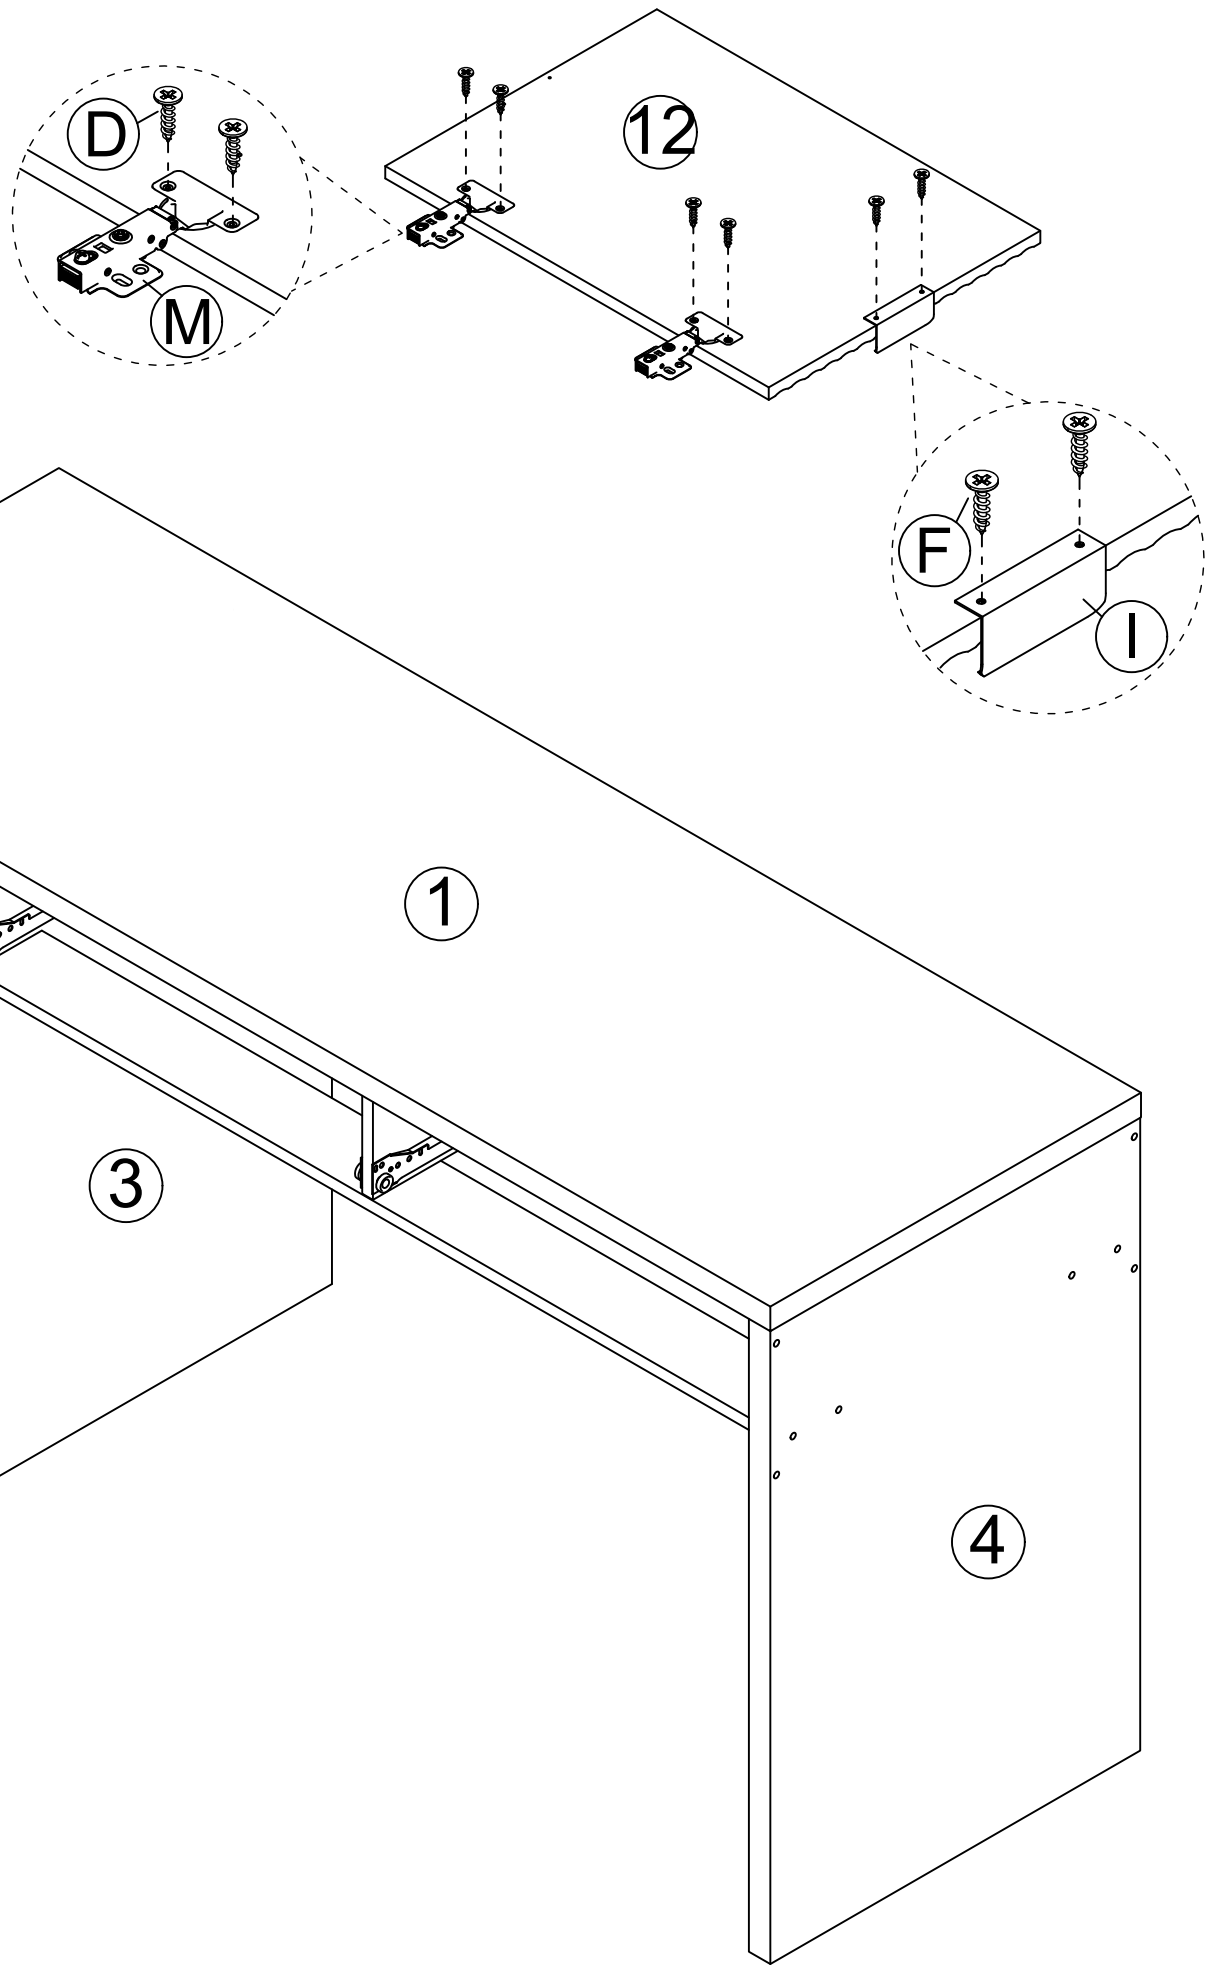


STEP19

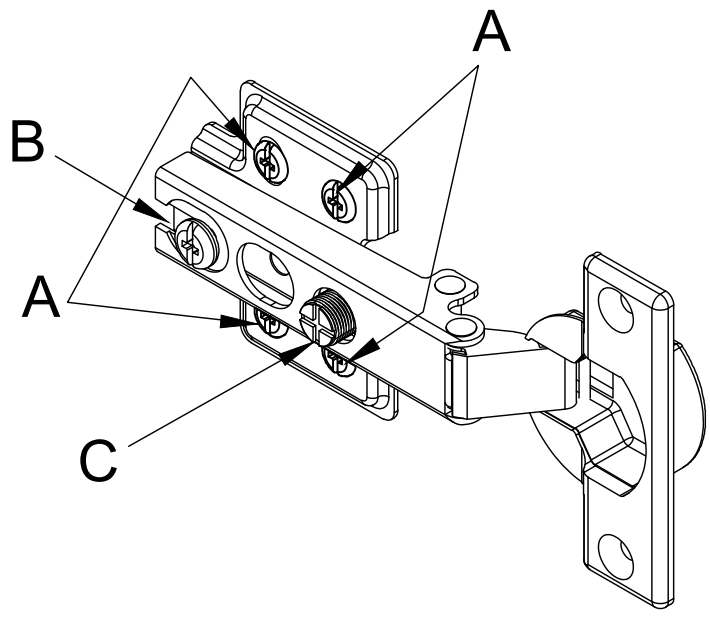


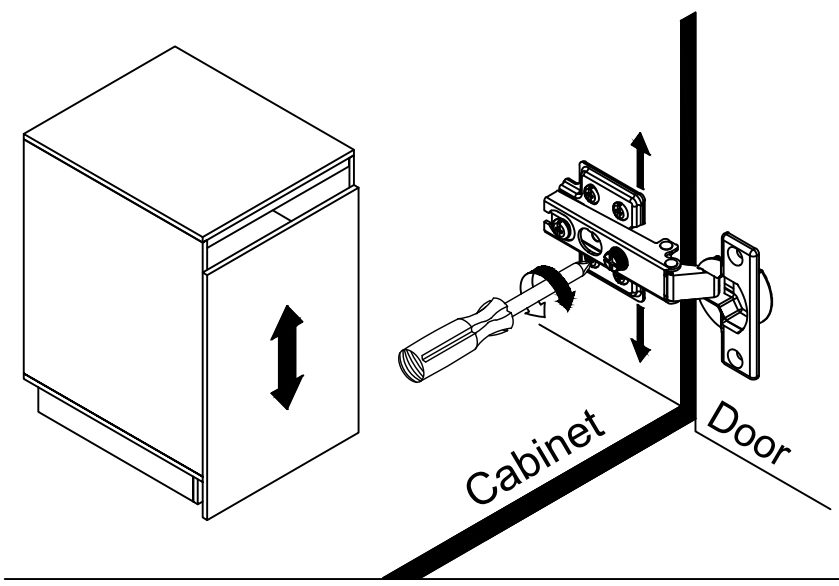

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

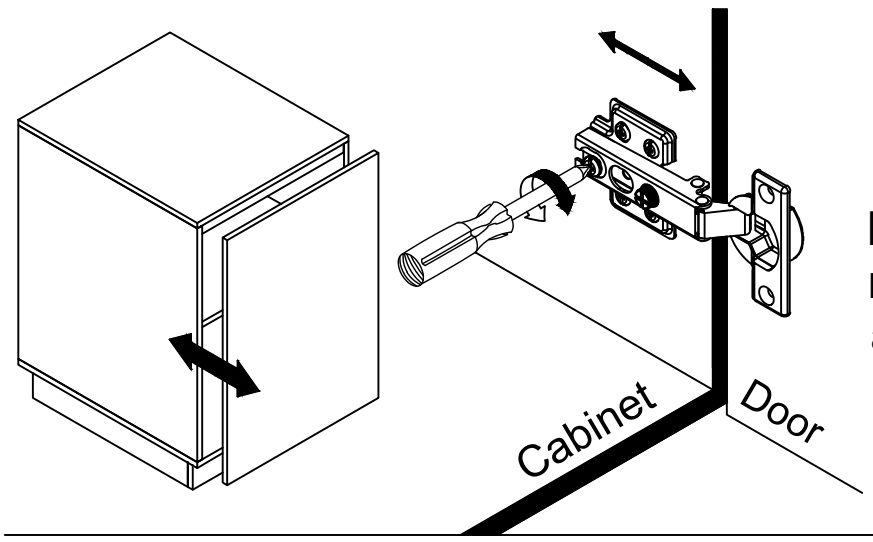



To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

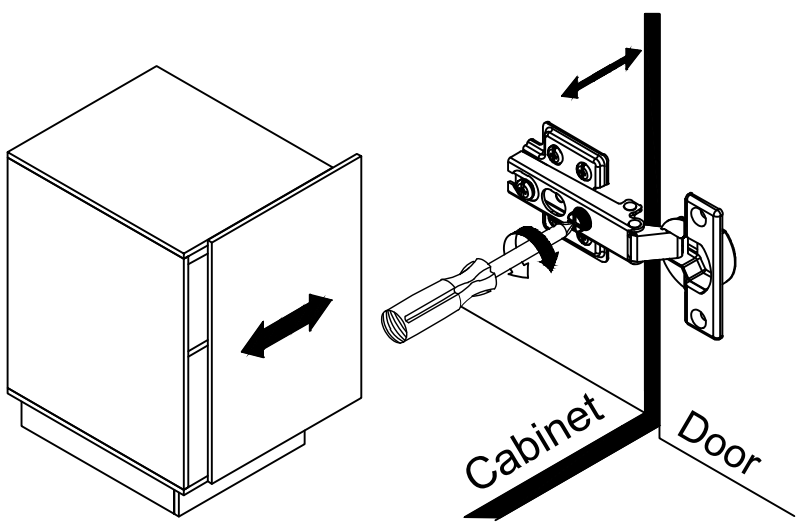


To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

STEP20

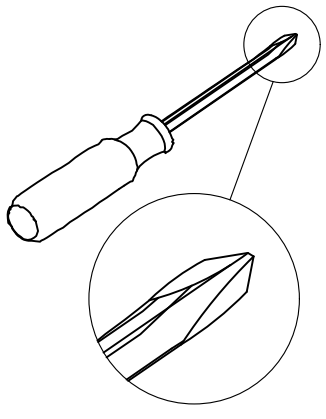


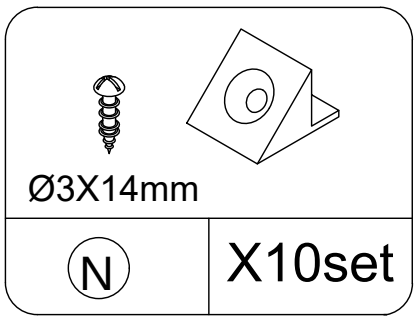

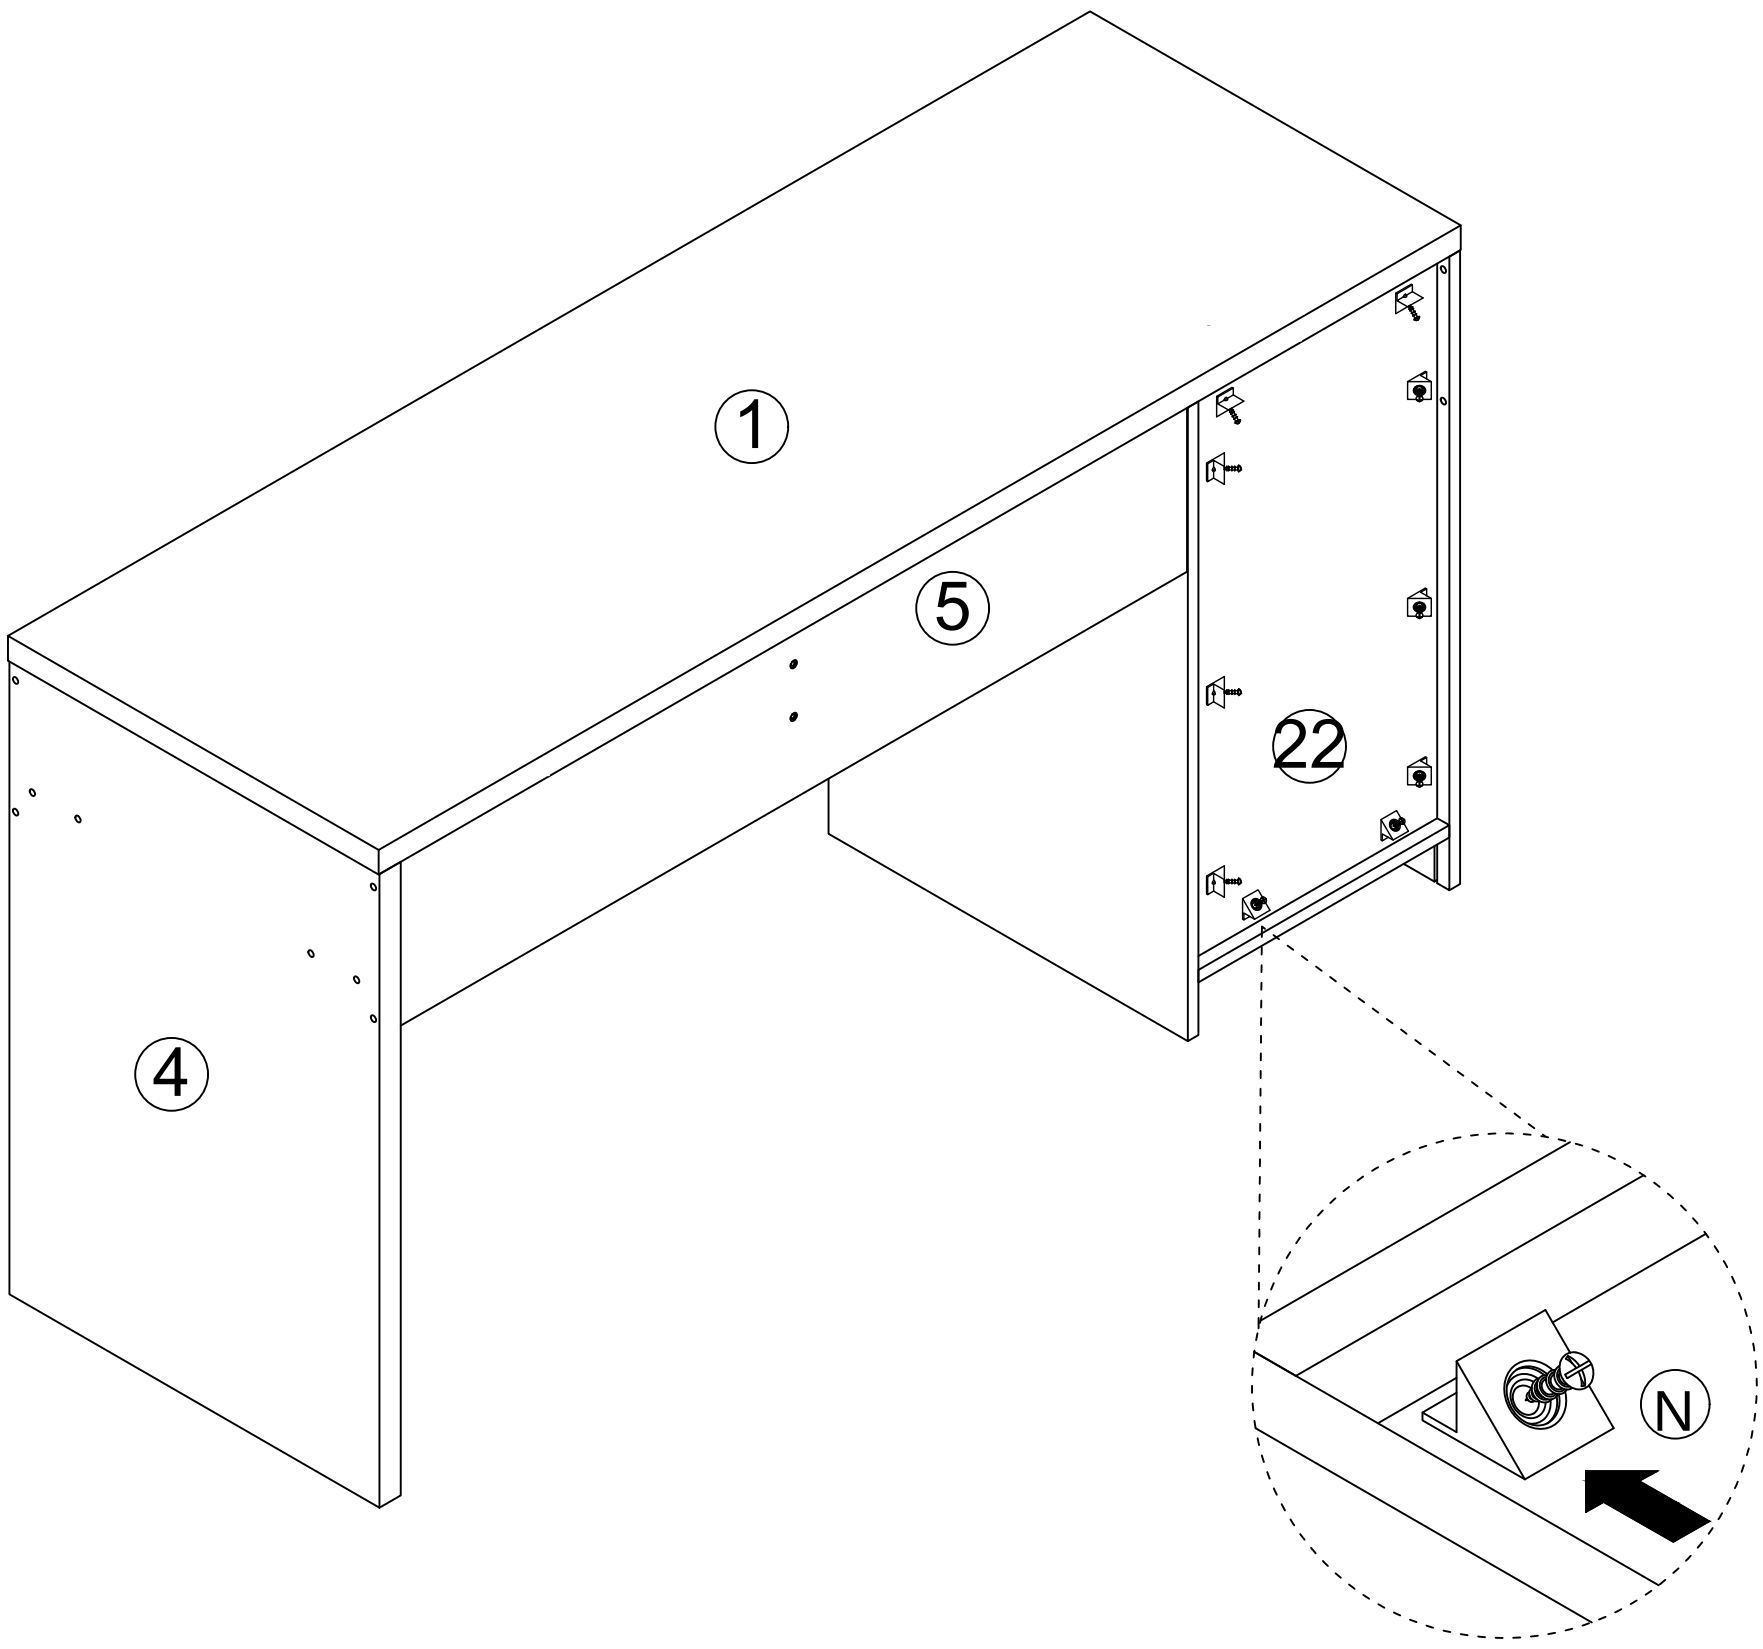


Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.


STEP21

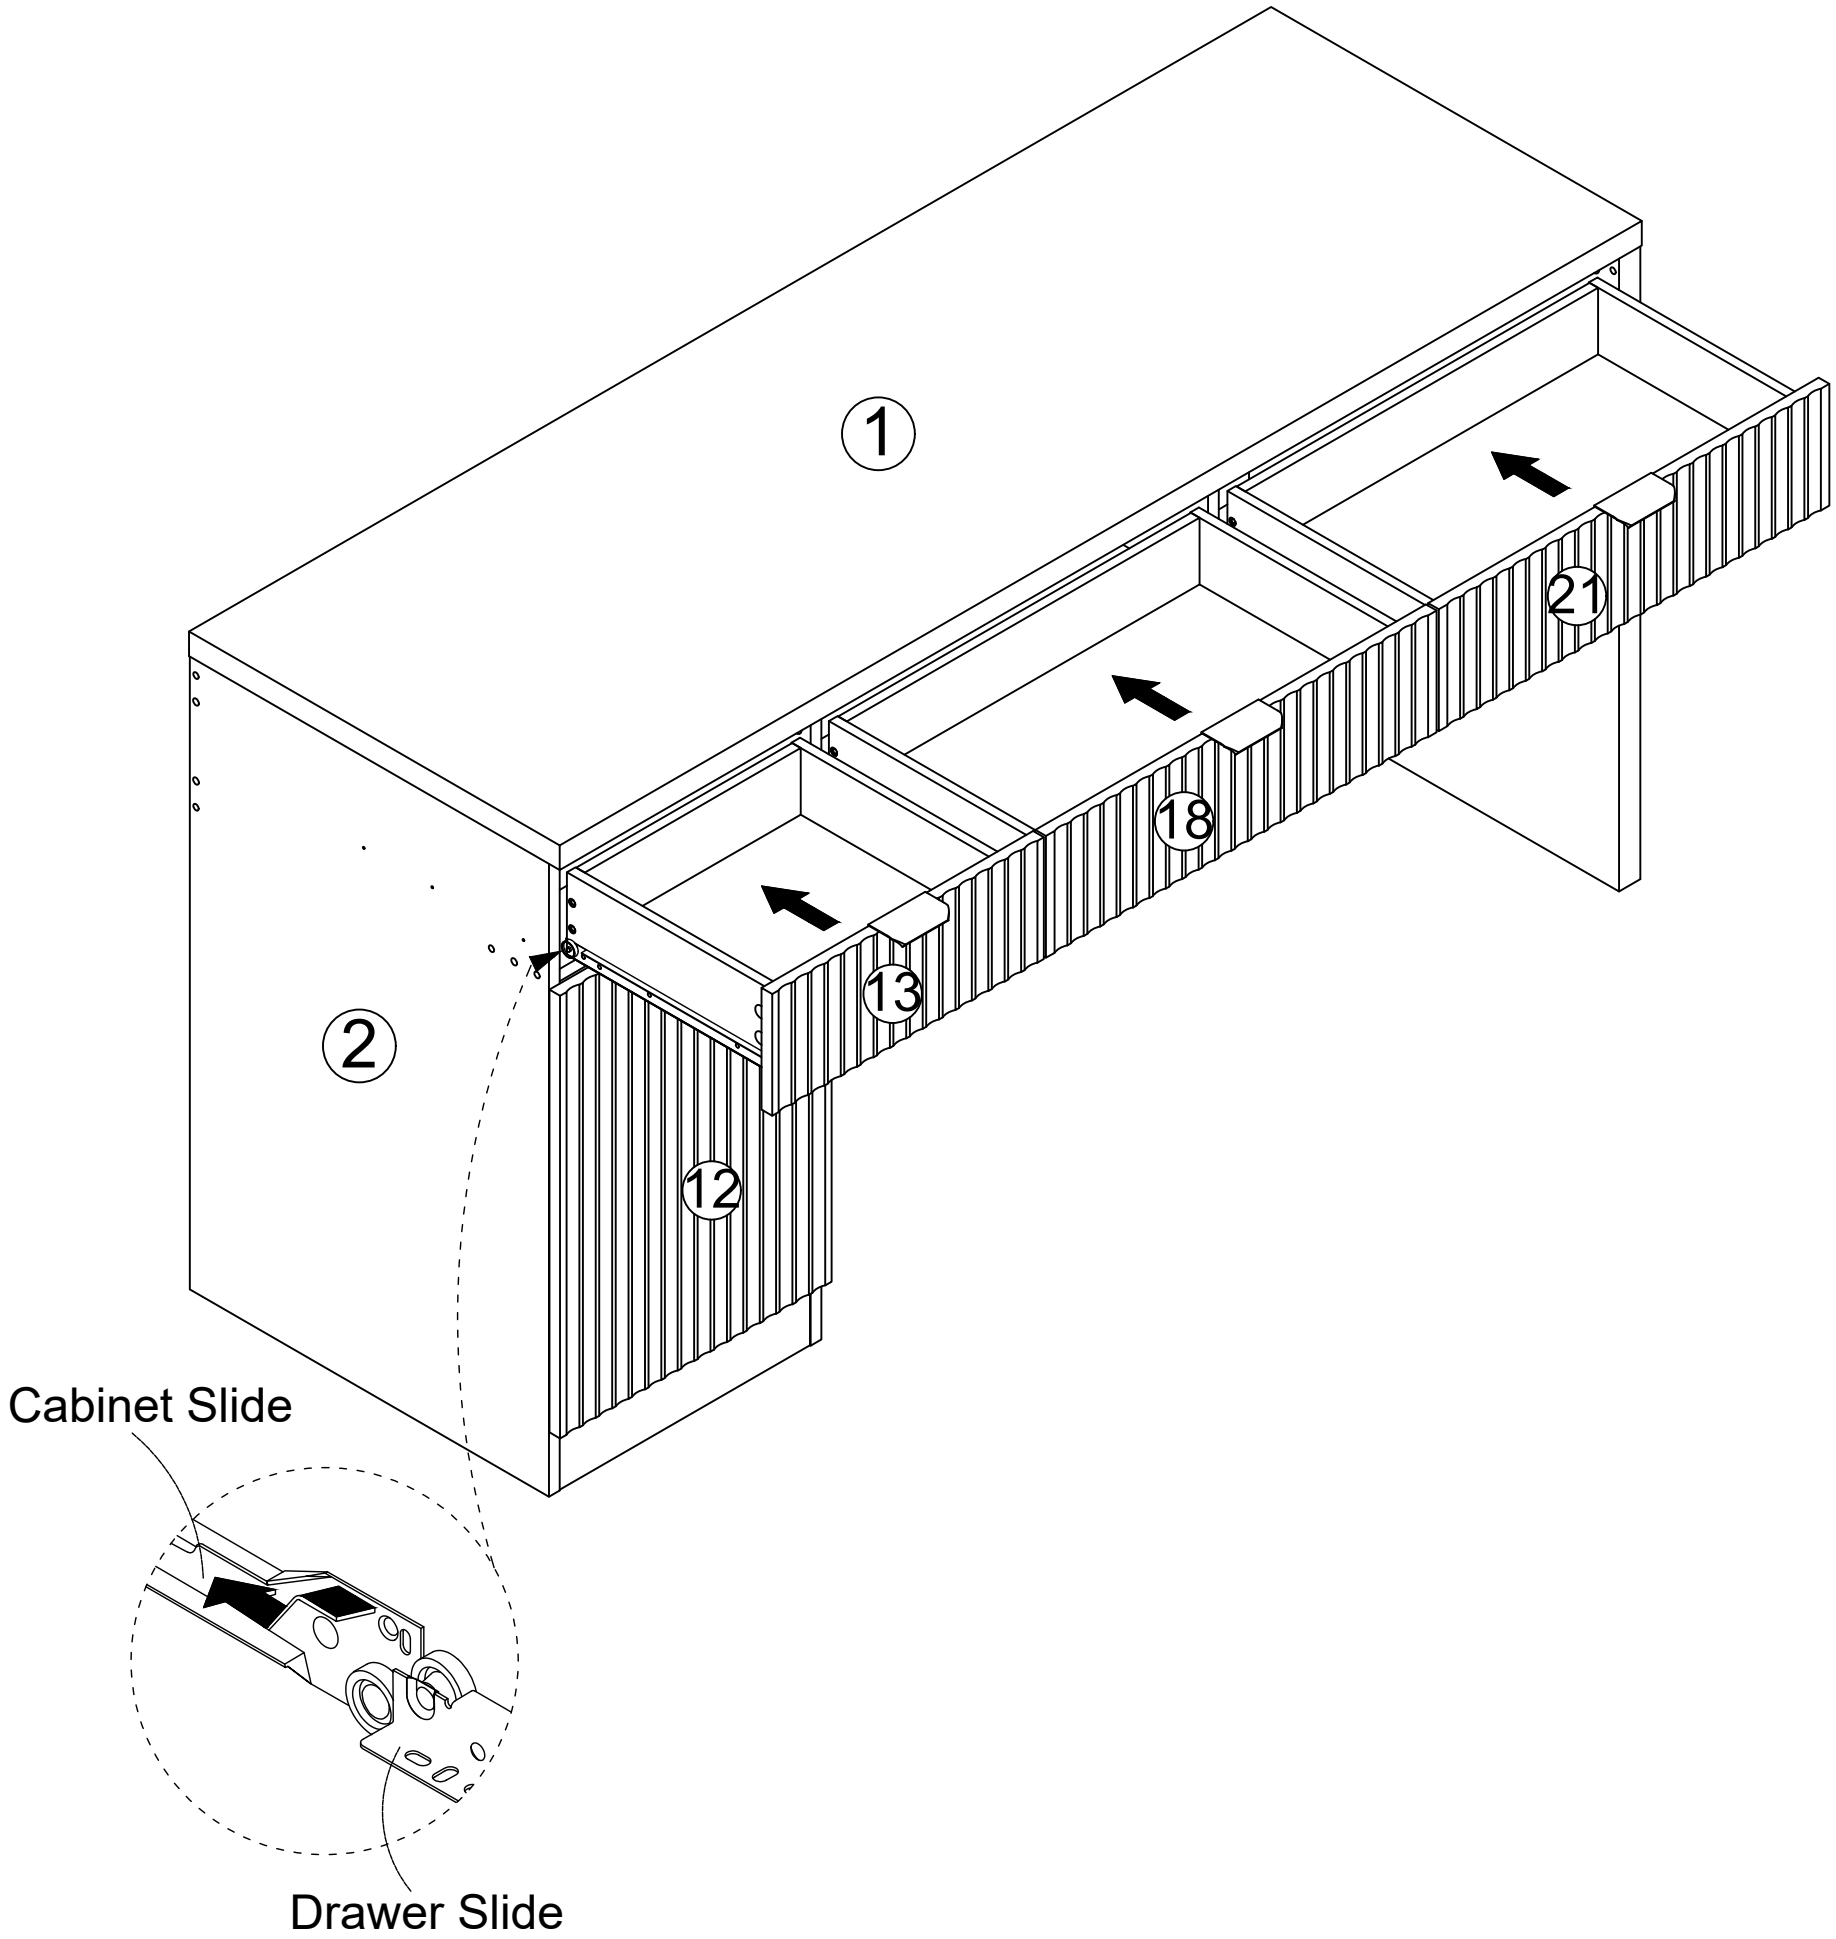



STEP21

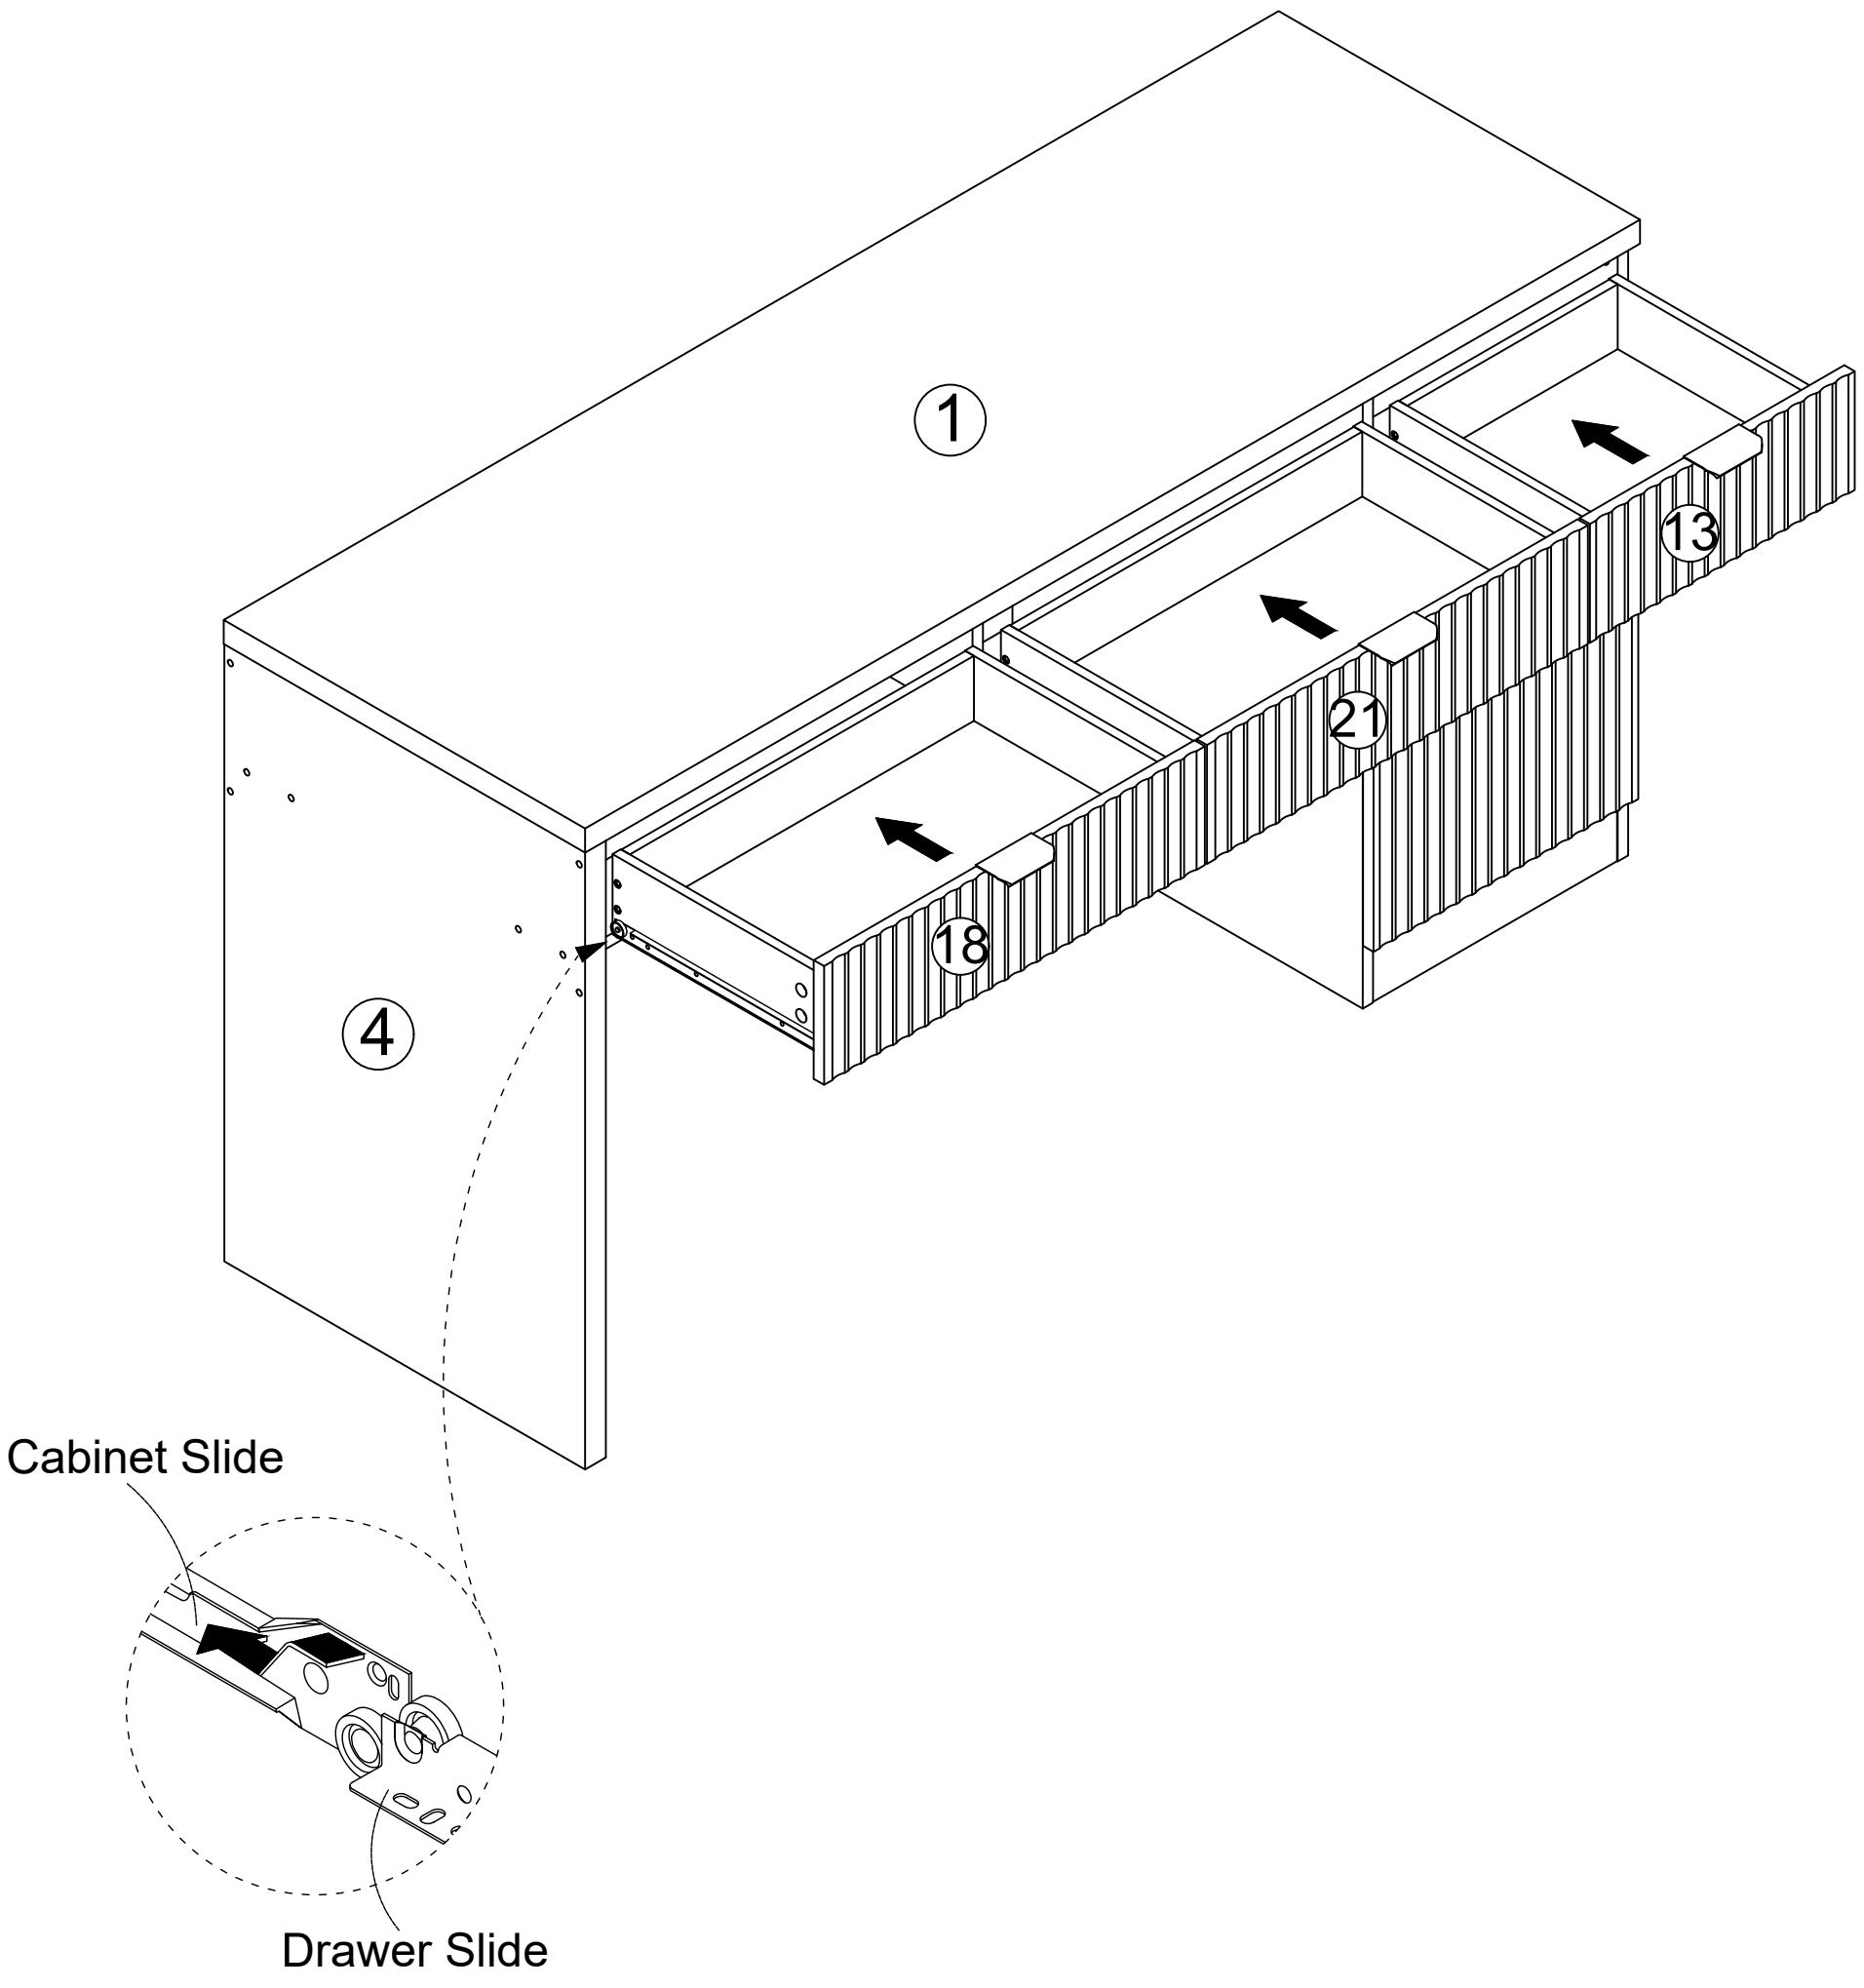

STEP20

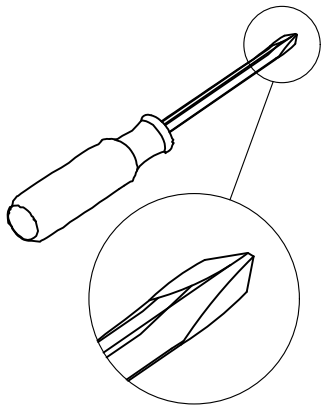


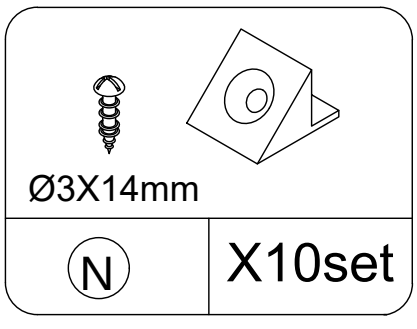


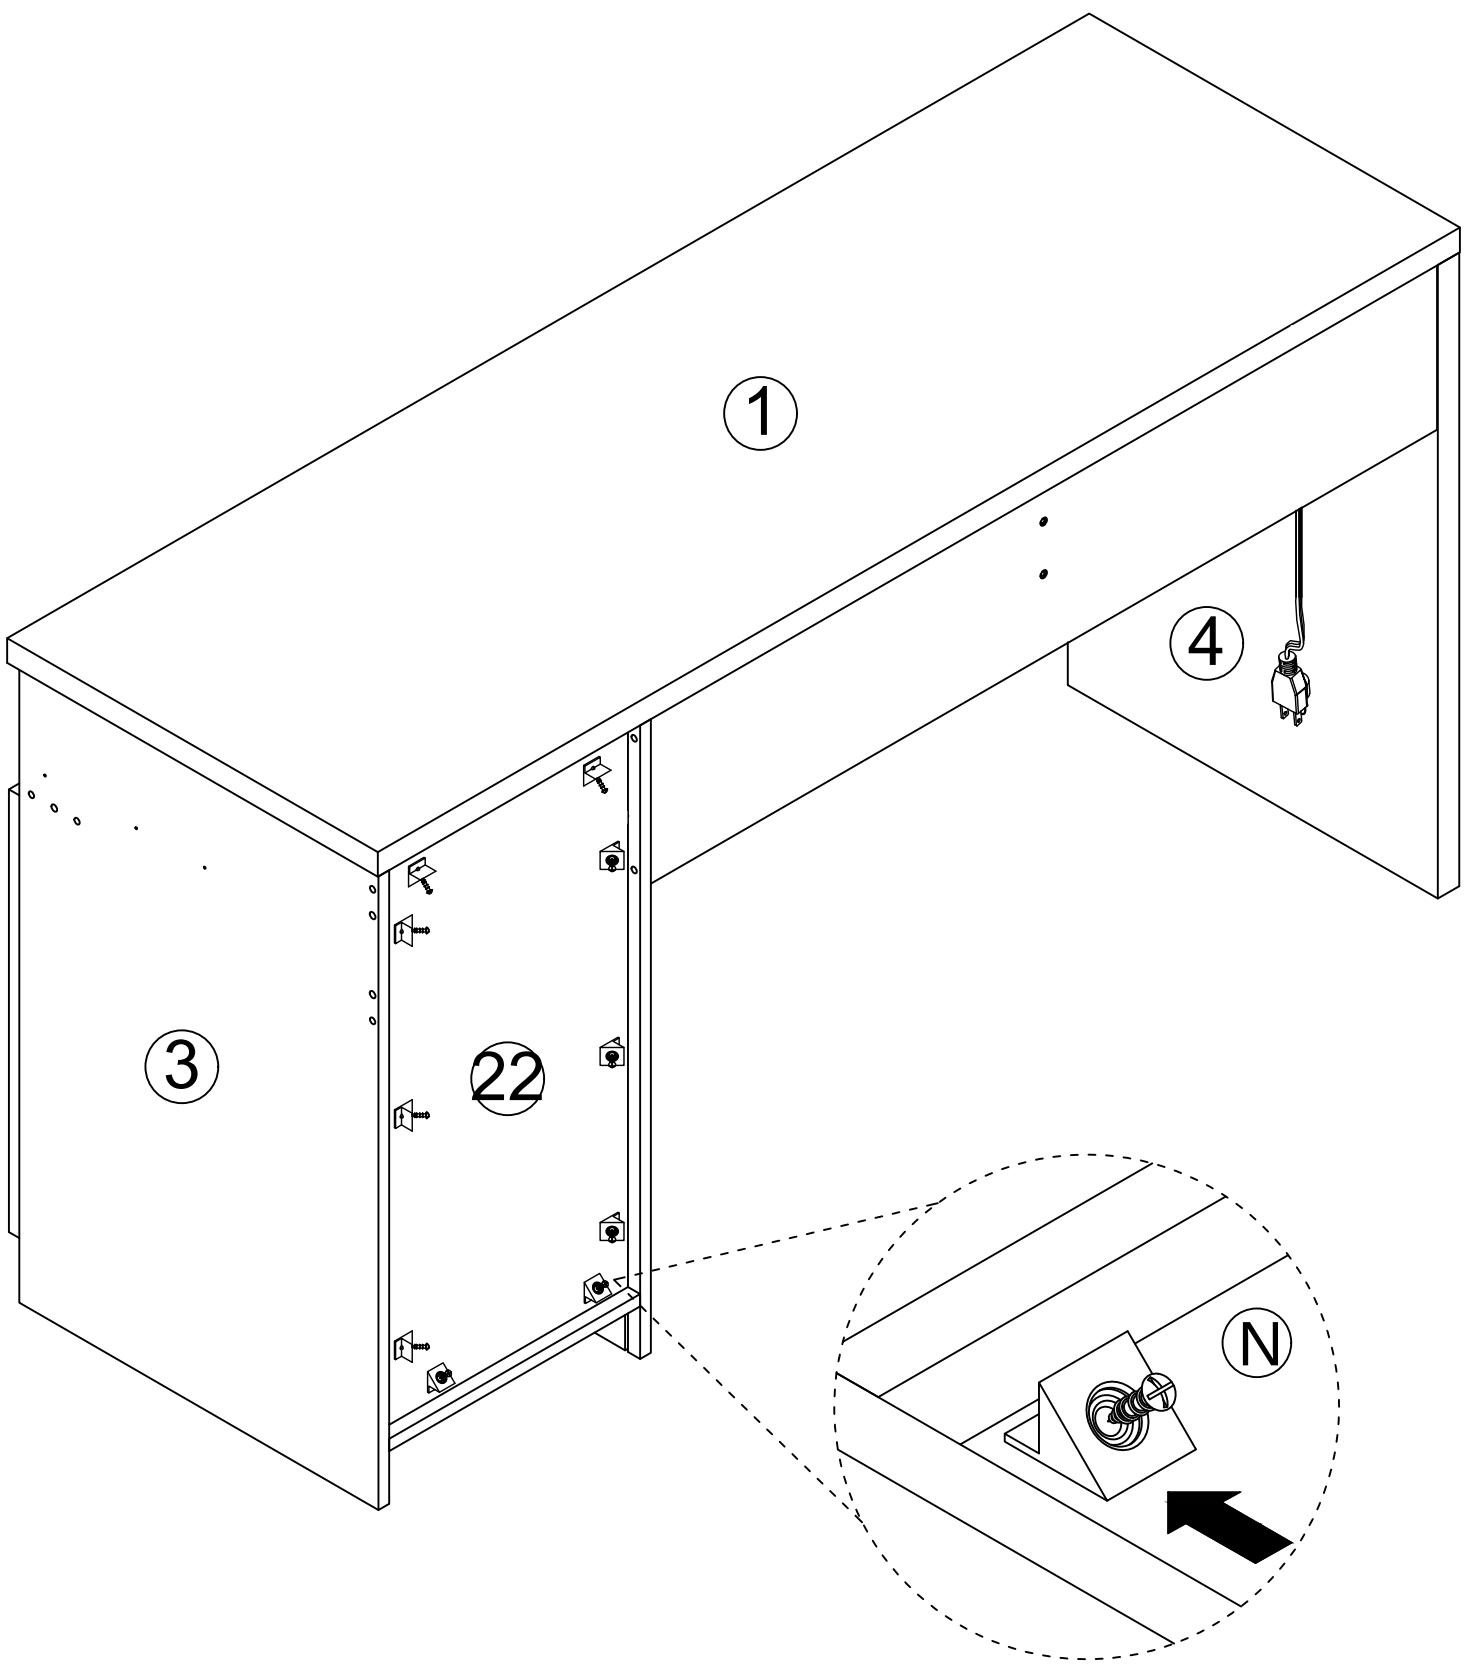


Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.

STEP19

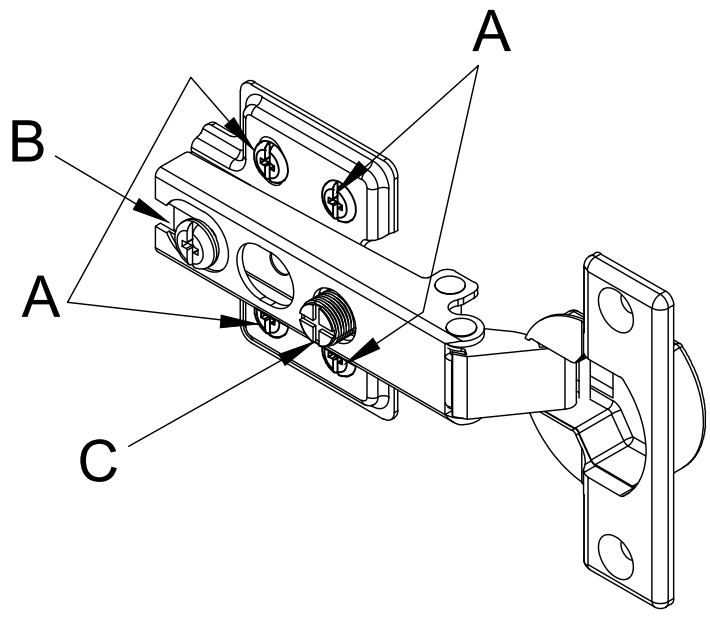


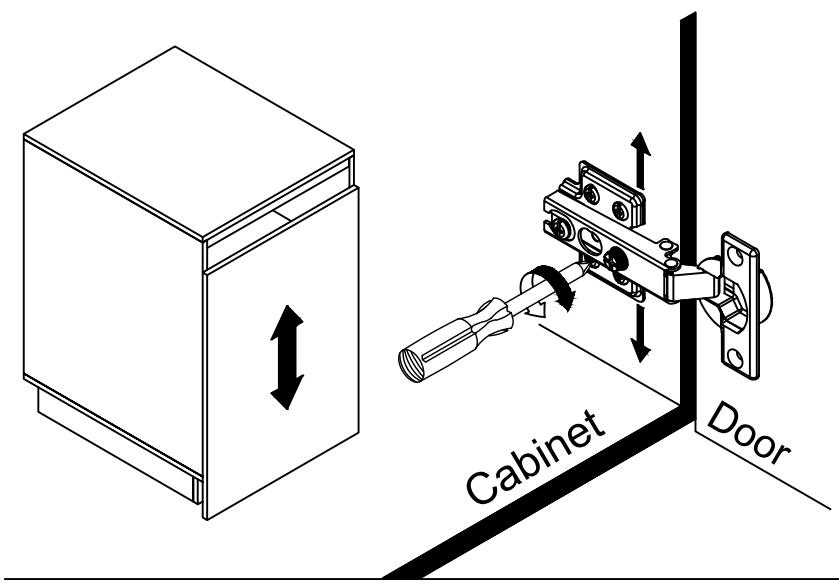

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

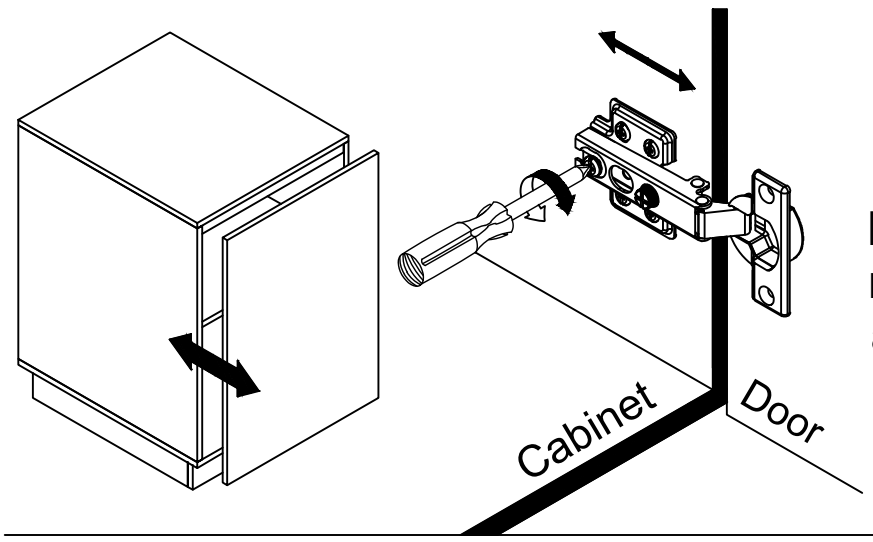


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

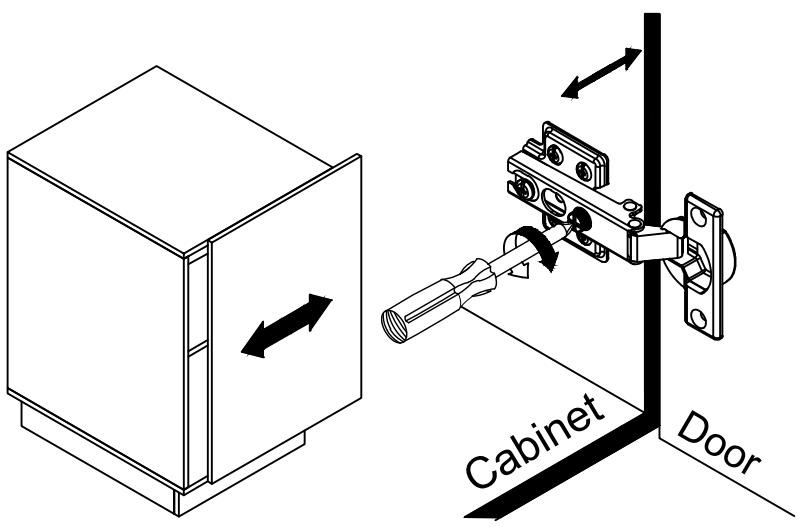

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

STEP18

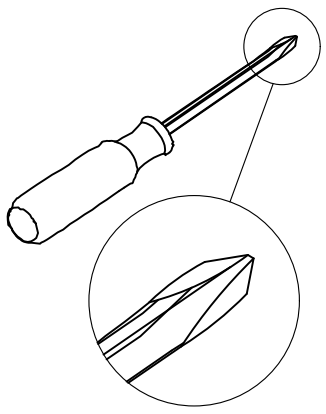


Ø3.5X12mm	
D	X12


WHITE Ø3X12mm	
F	X2


80X40X18mm	
I	X1


Ø35mm	
M	X2

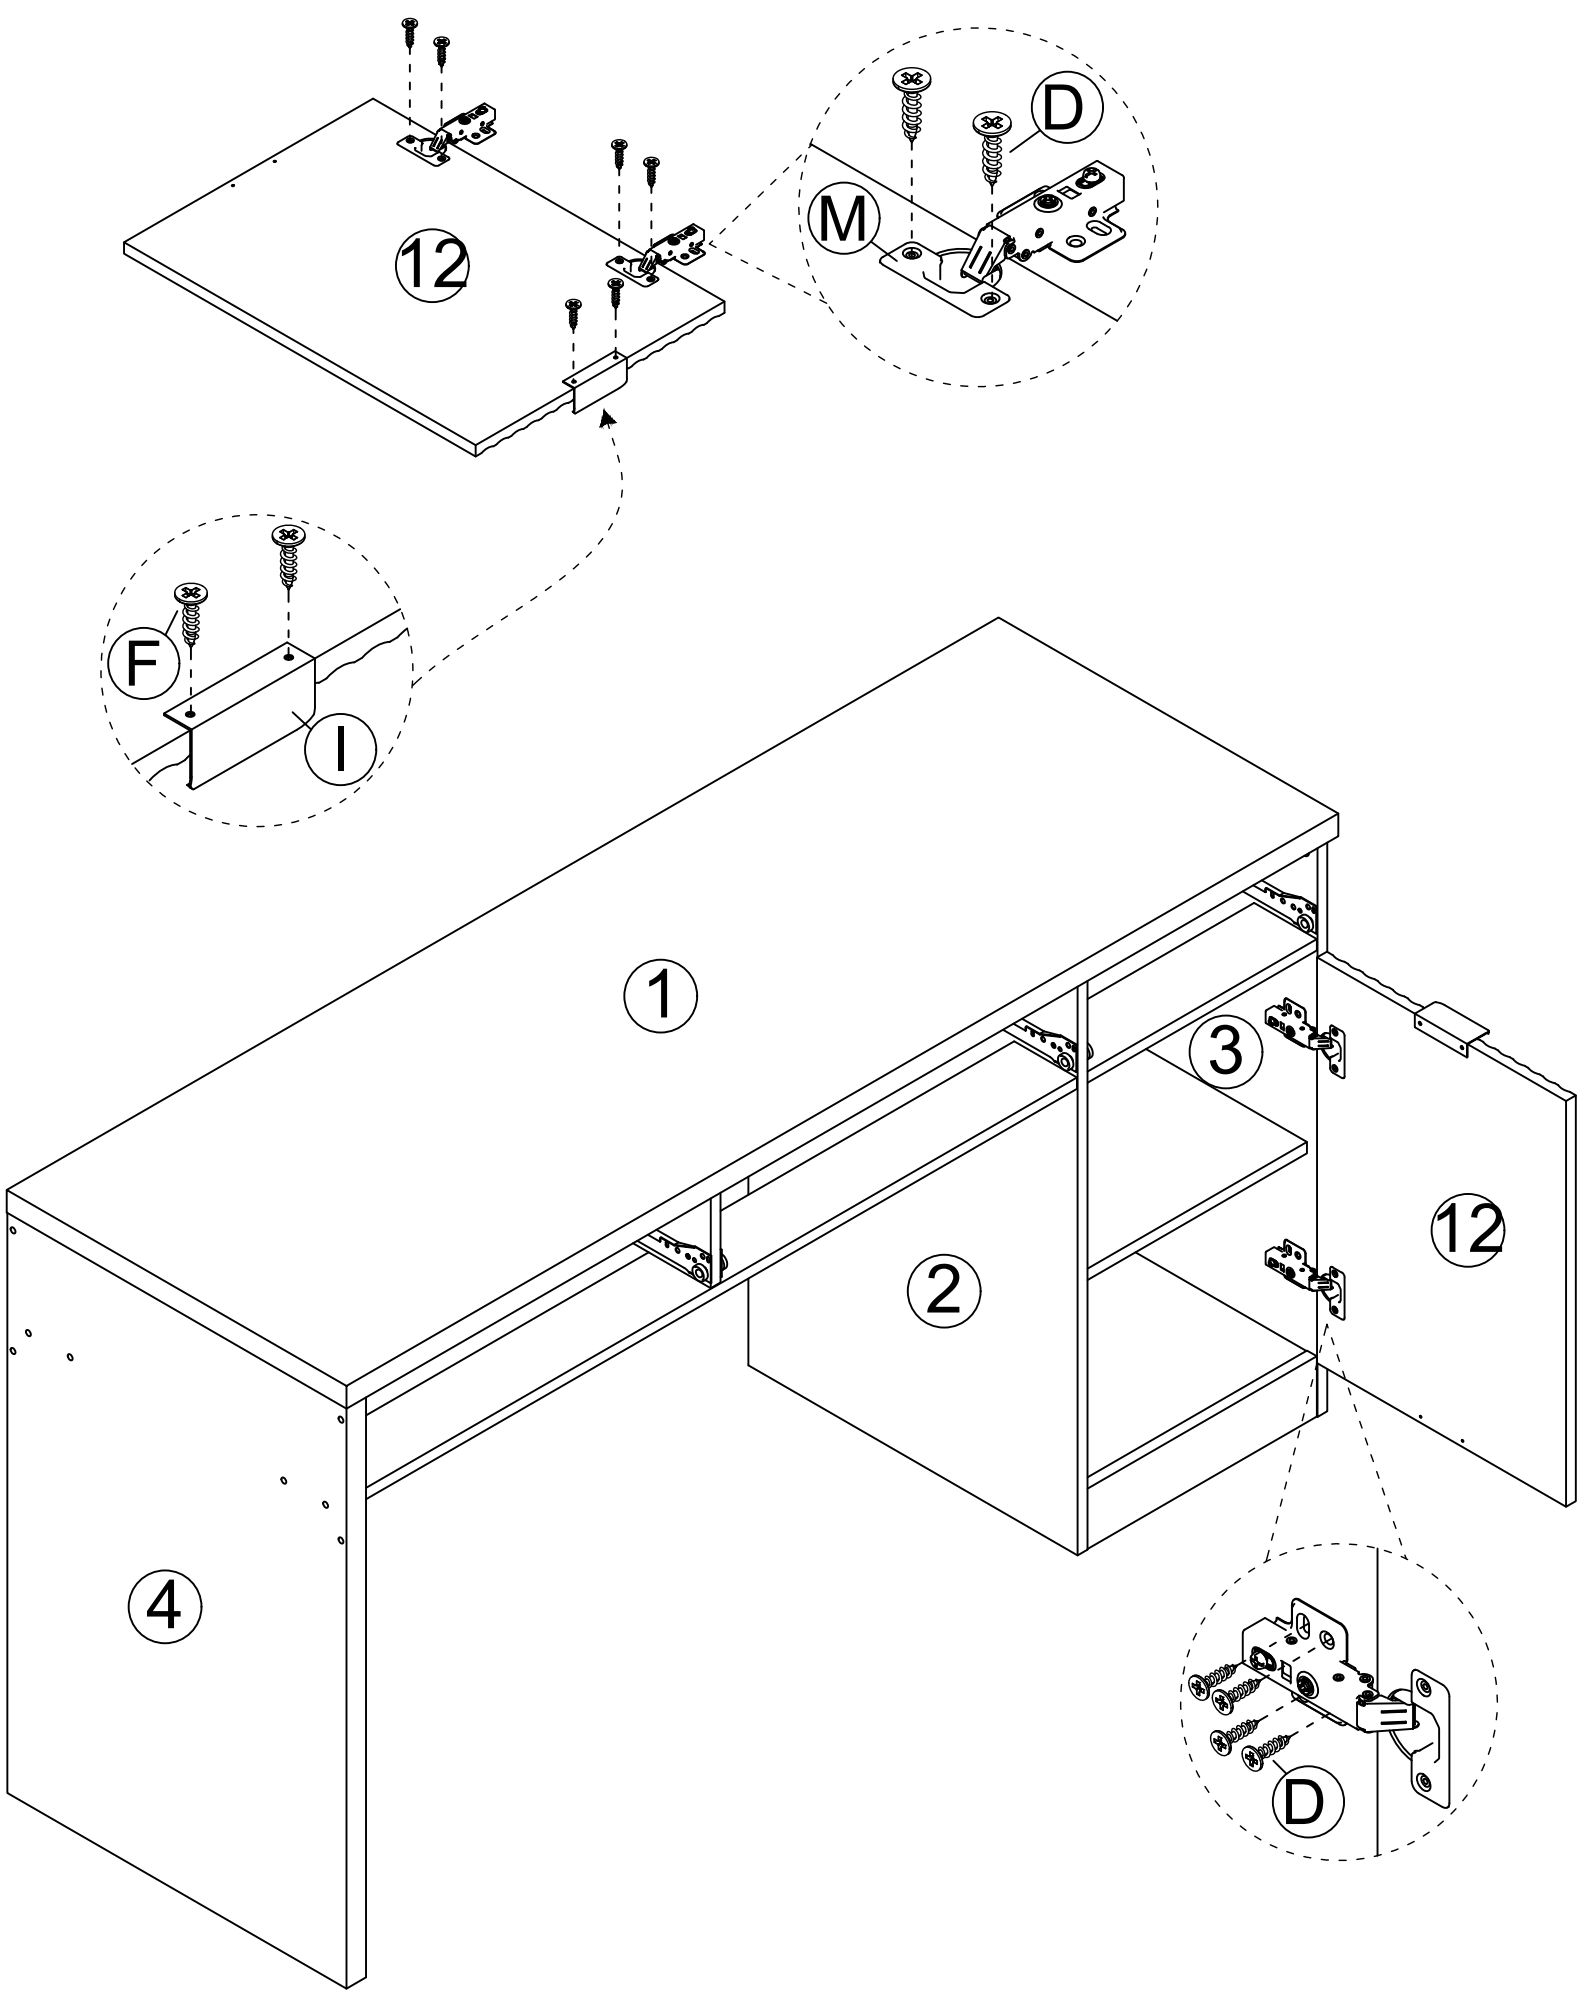


STEP17

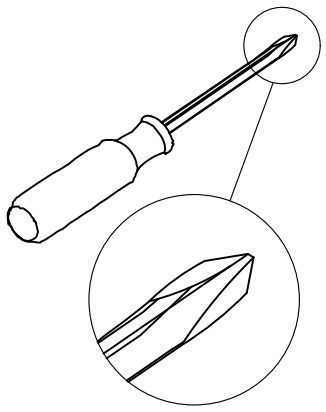


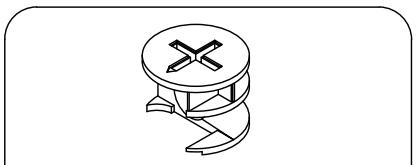

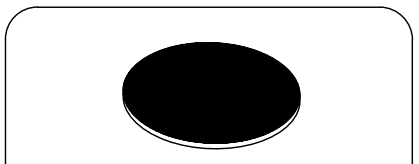

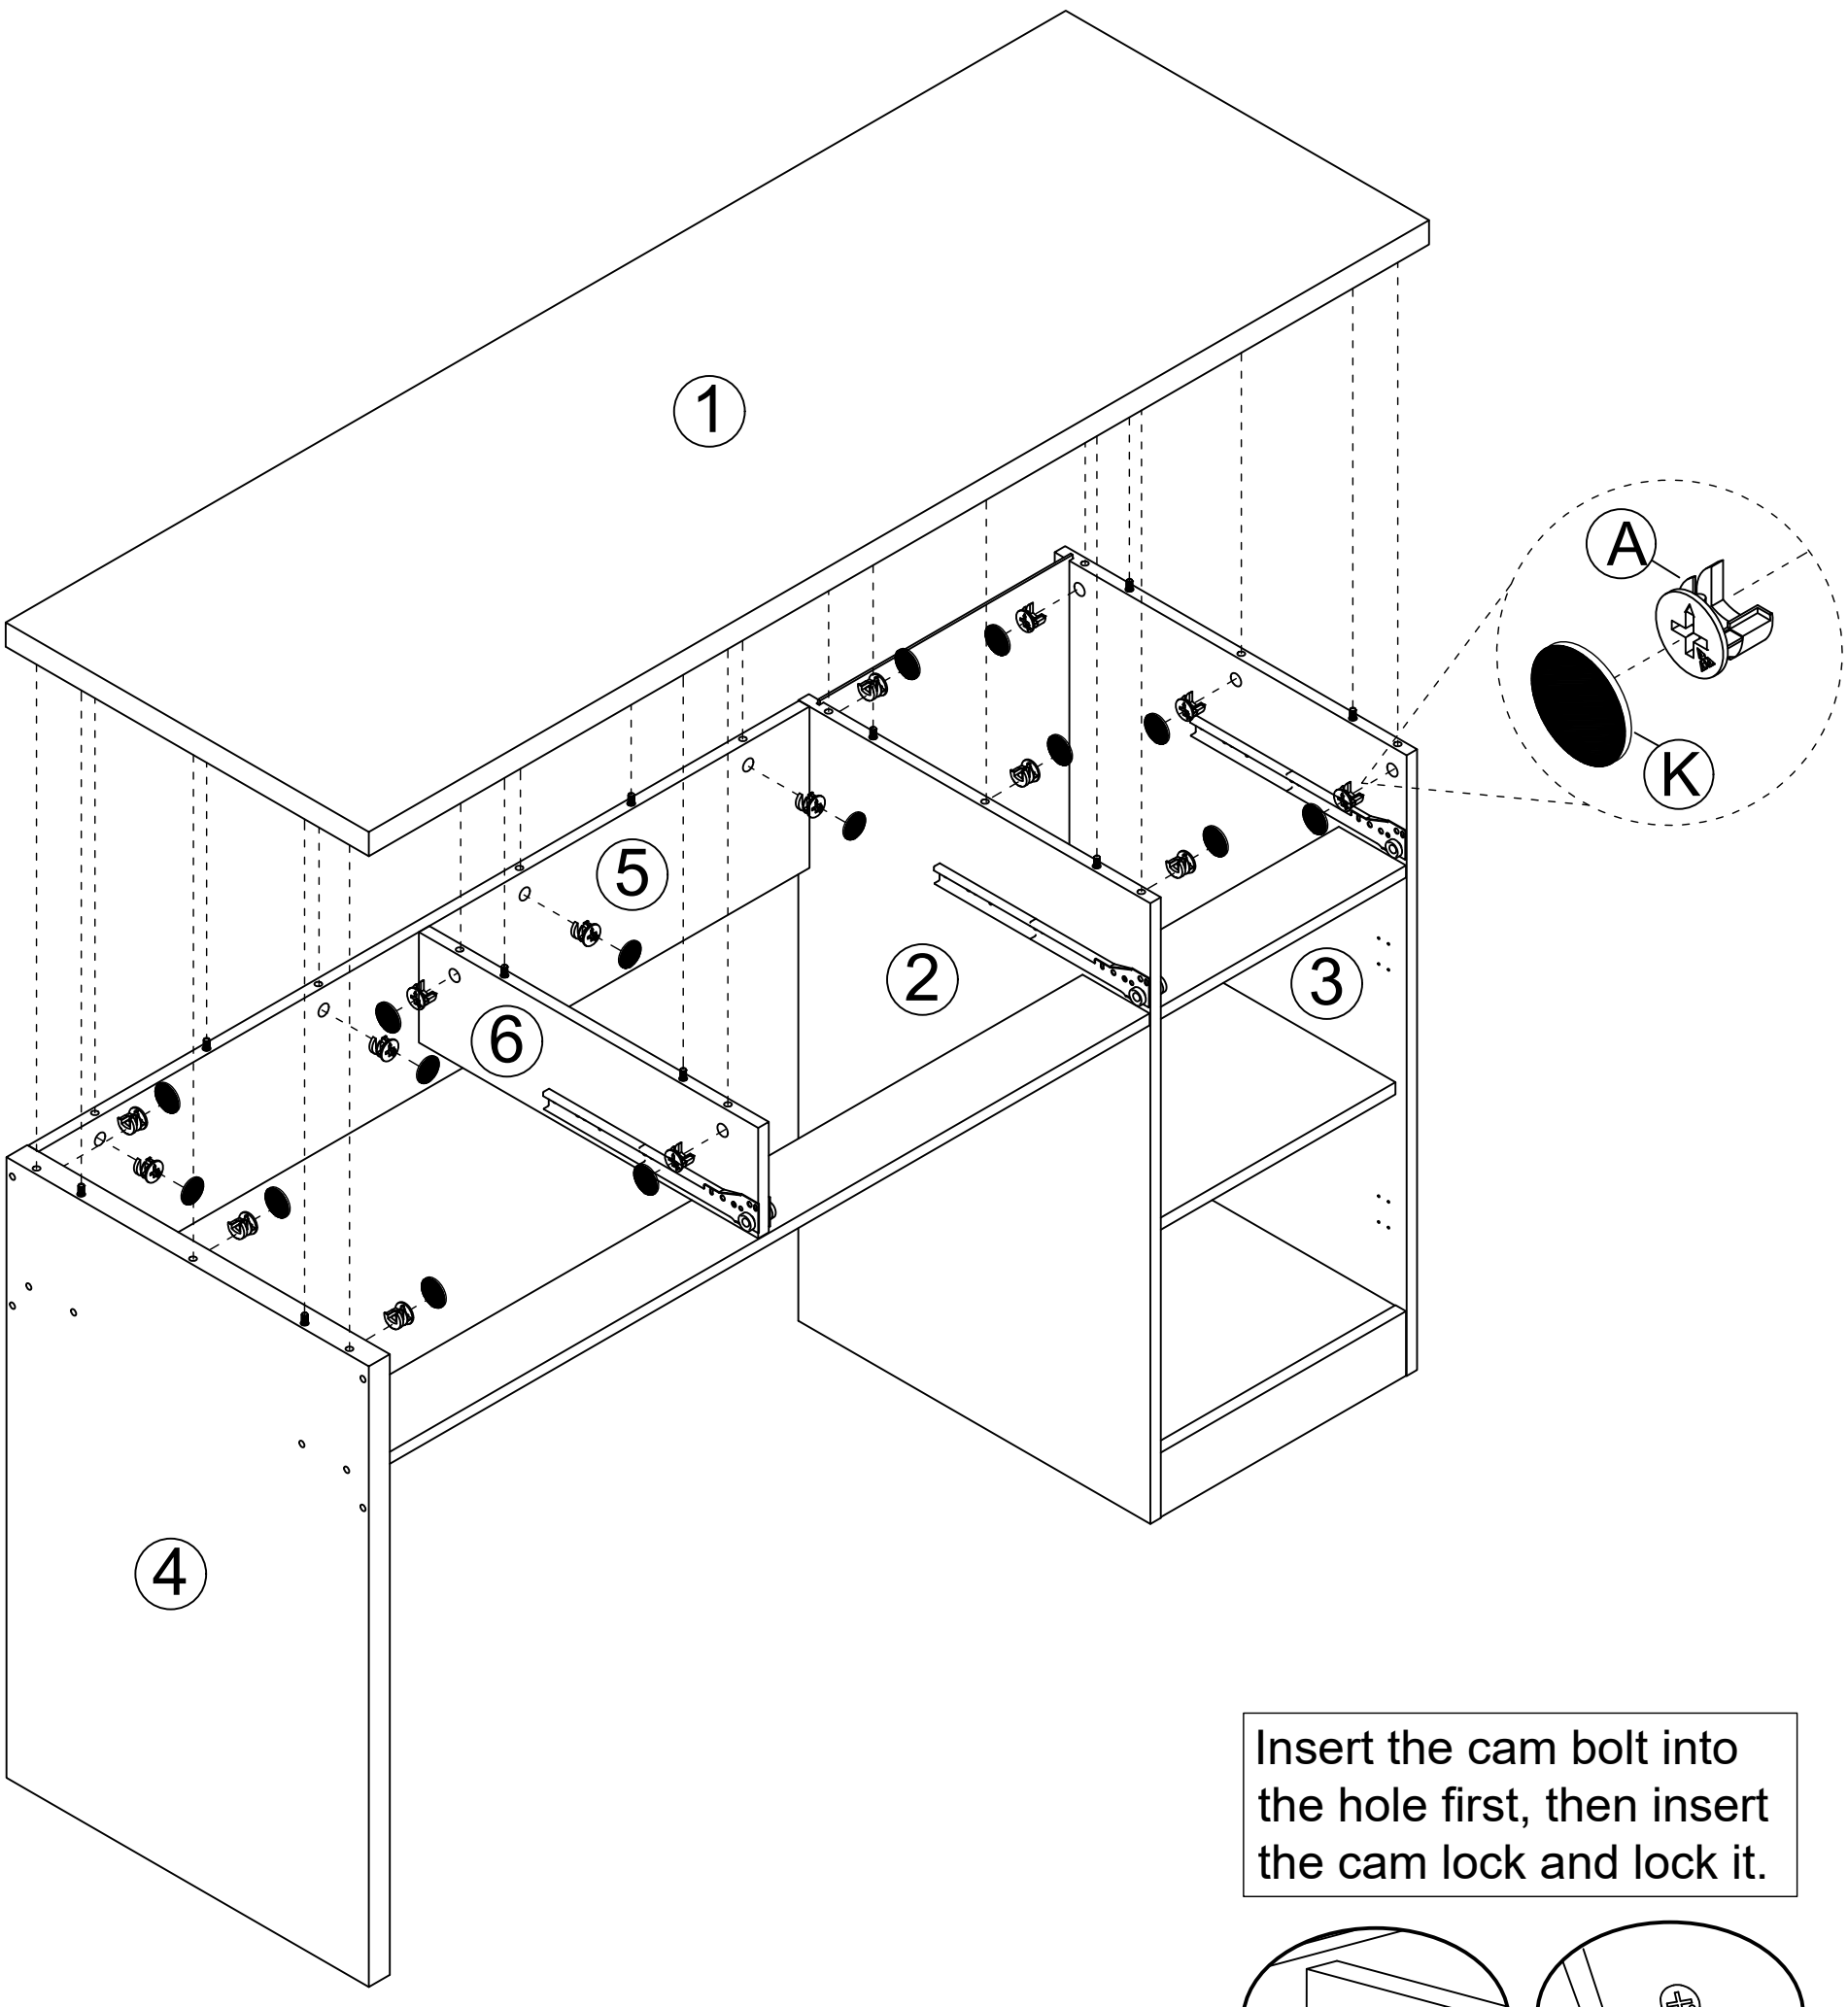



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

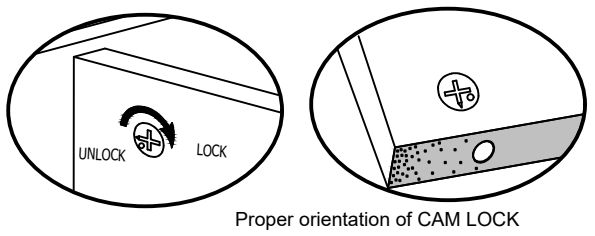



Proper orientation of CAM LOCK

STEP16

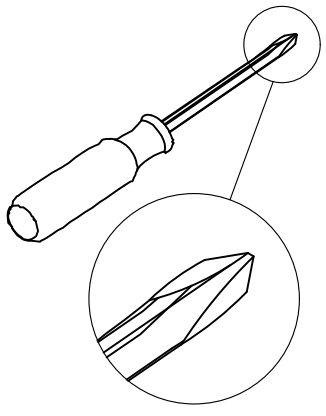


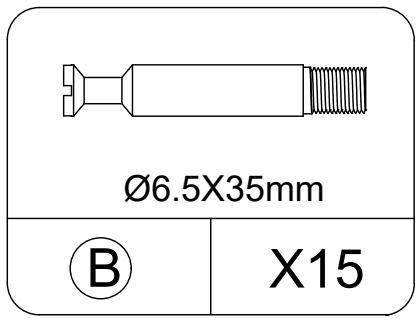


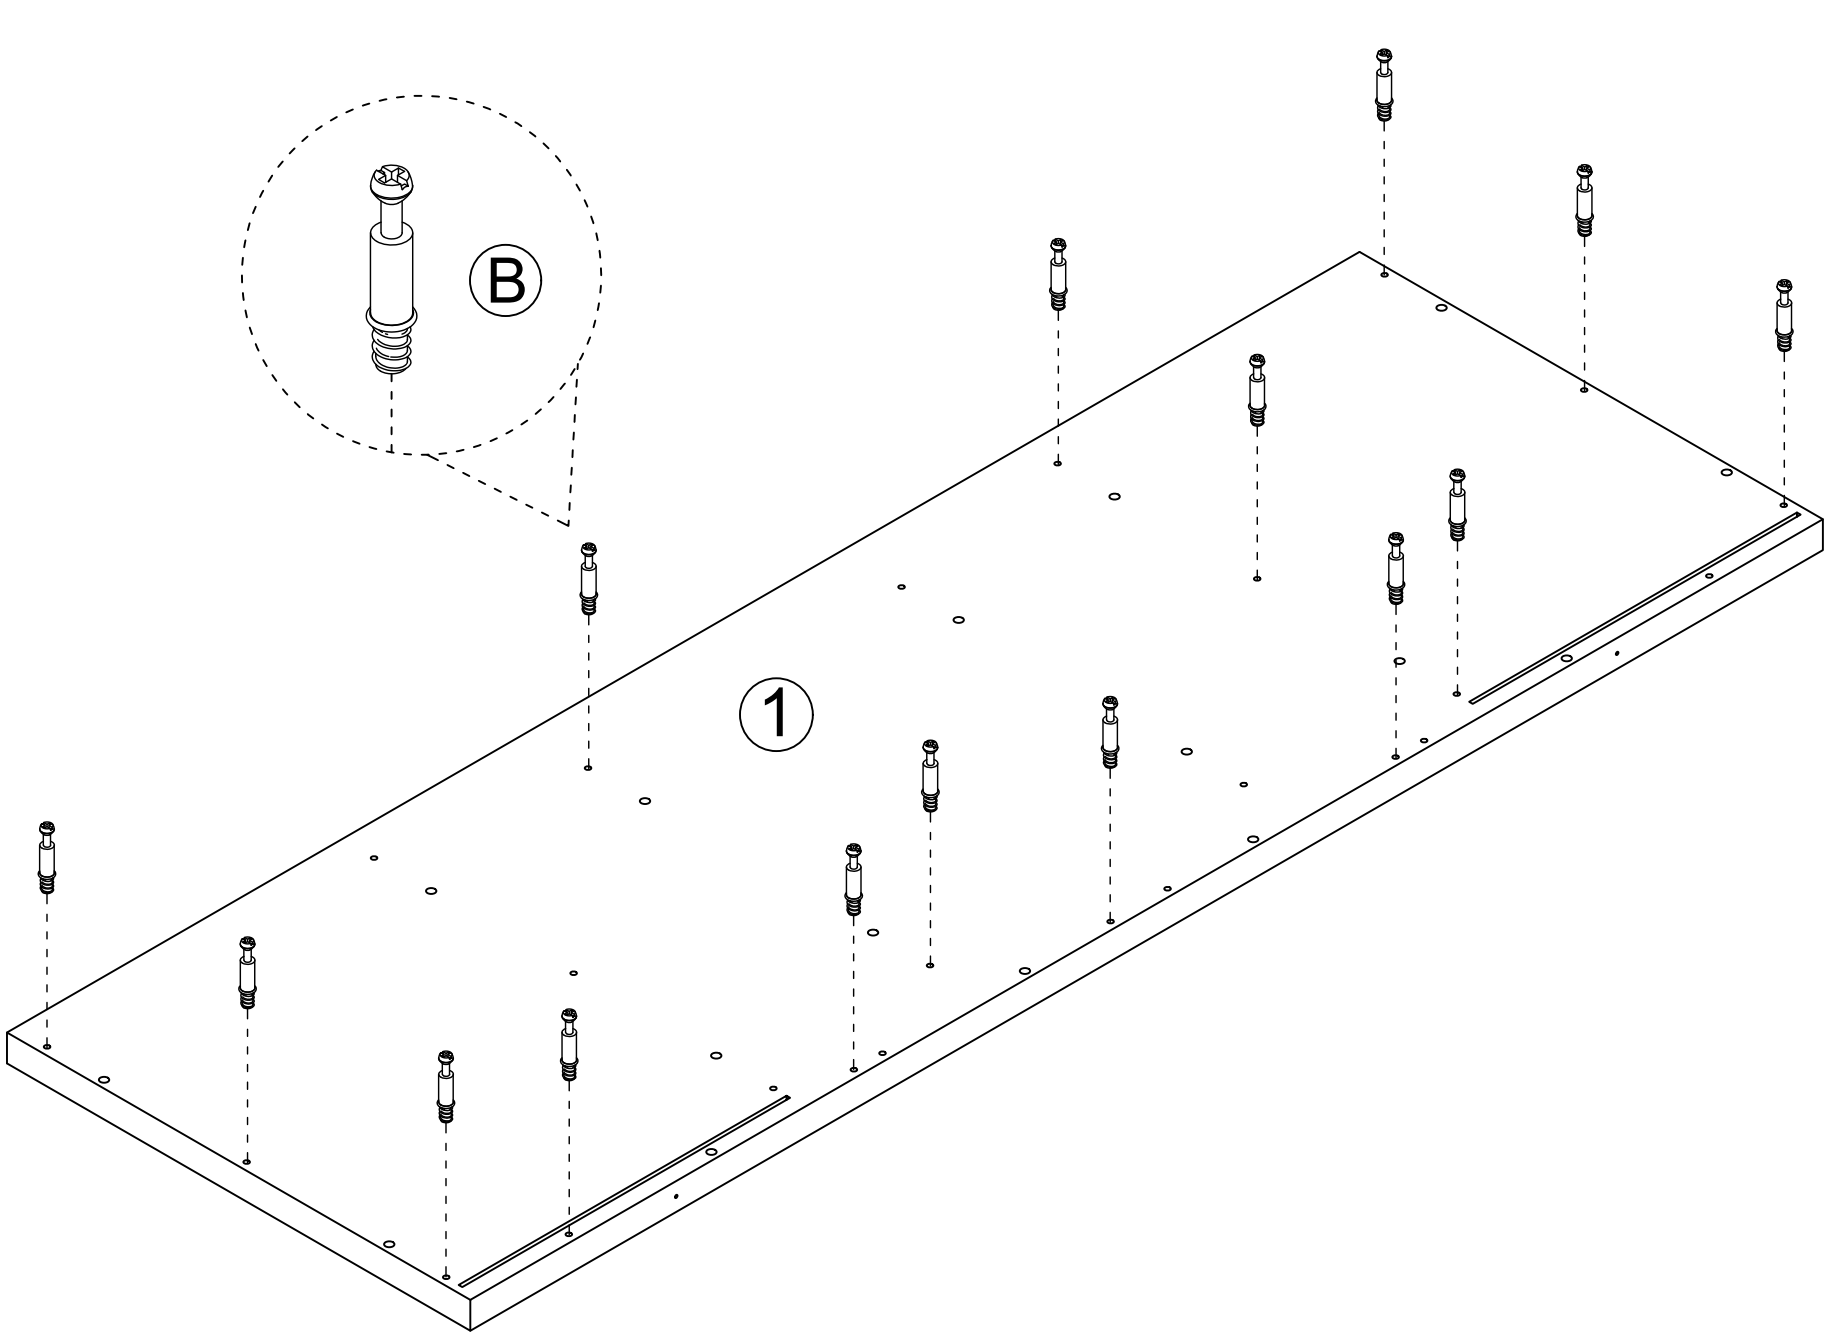

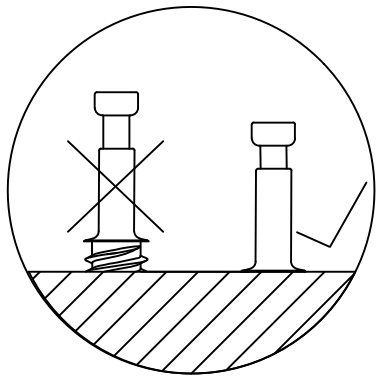



STEP15

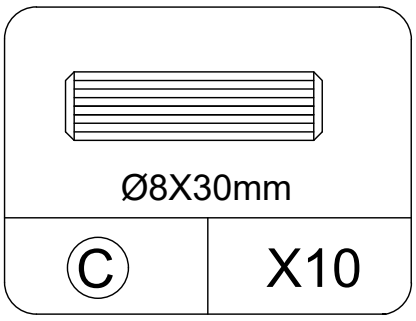


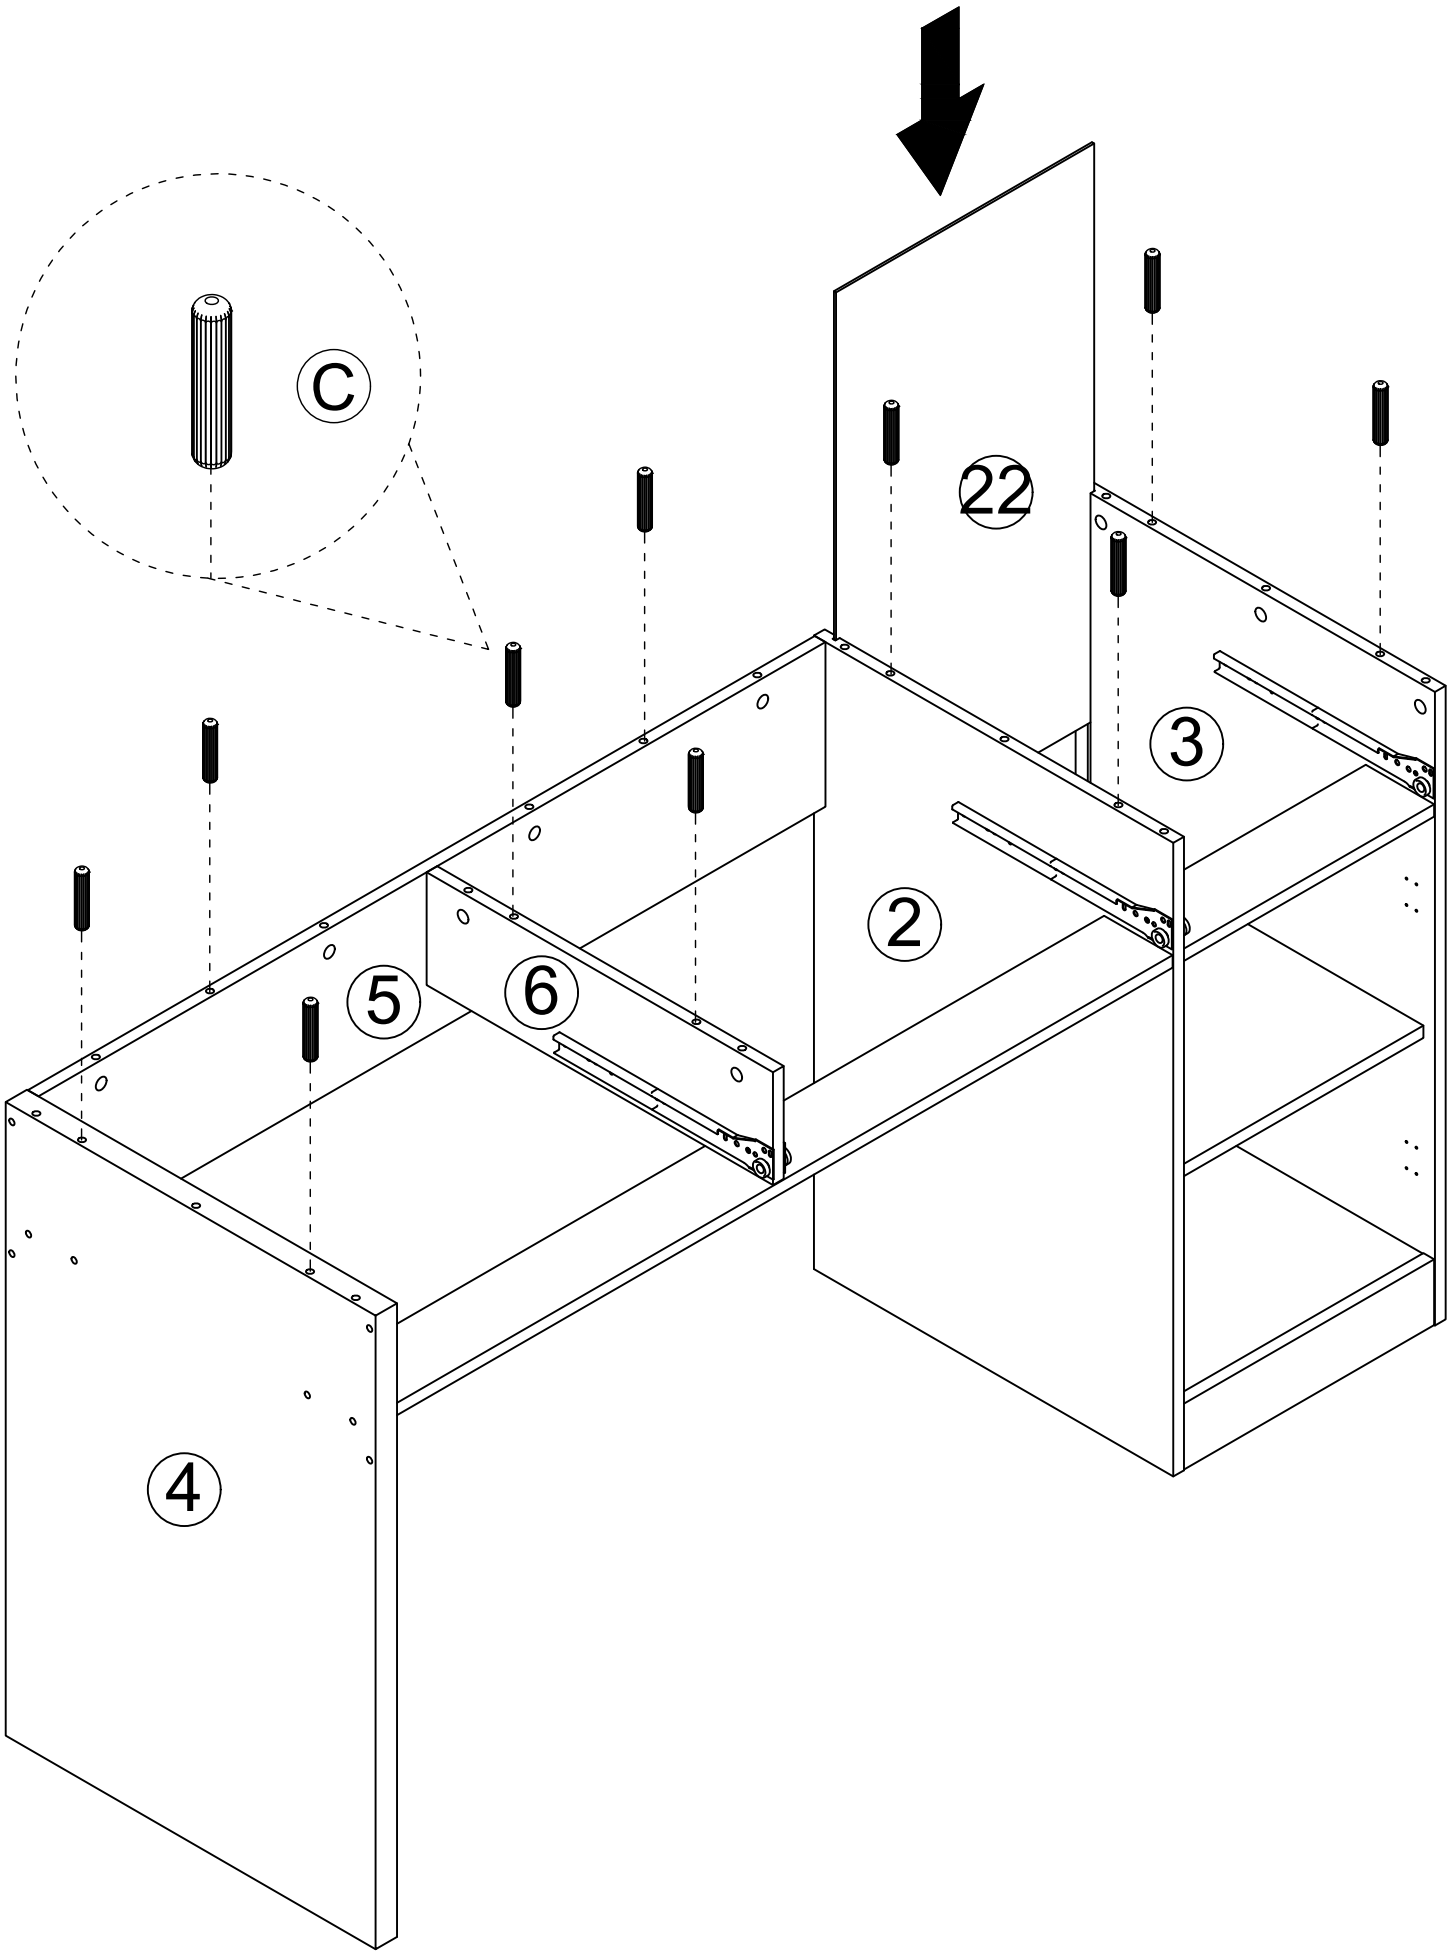


STEP14

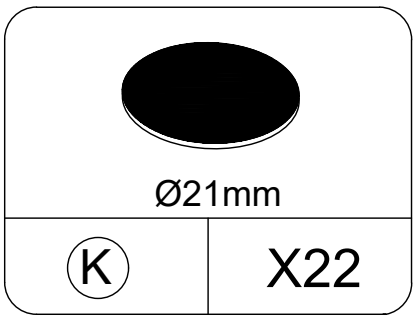


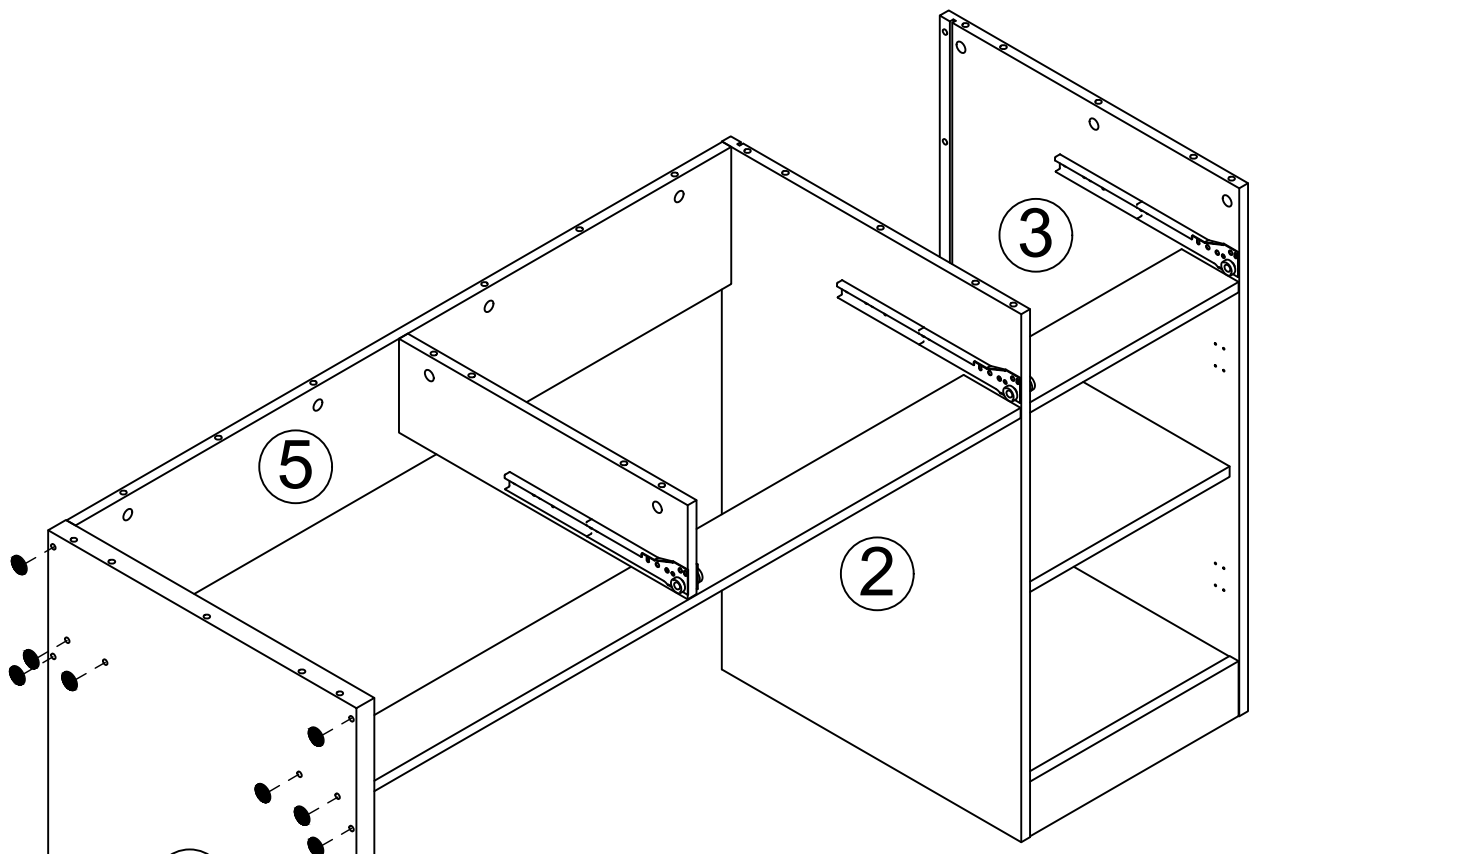


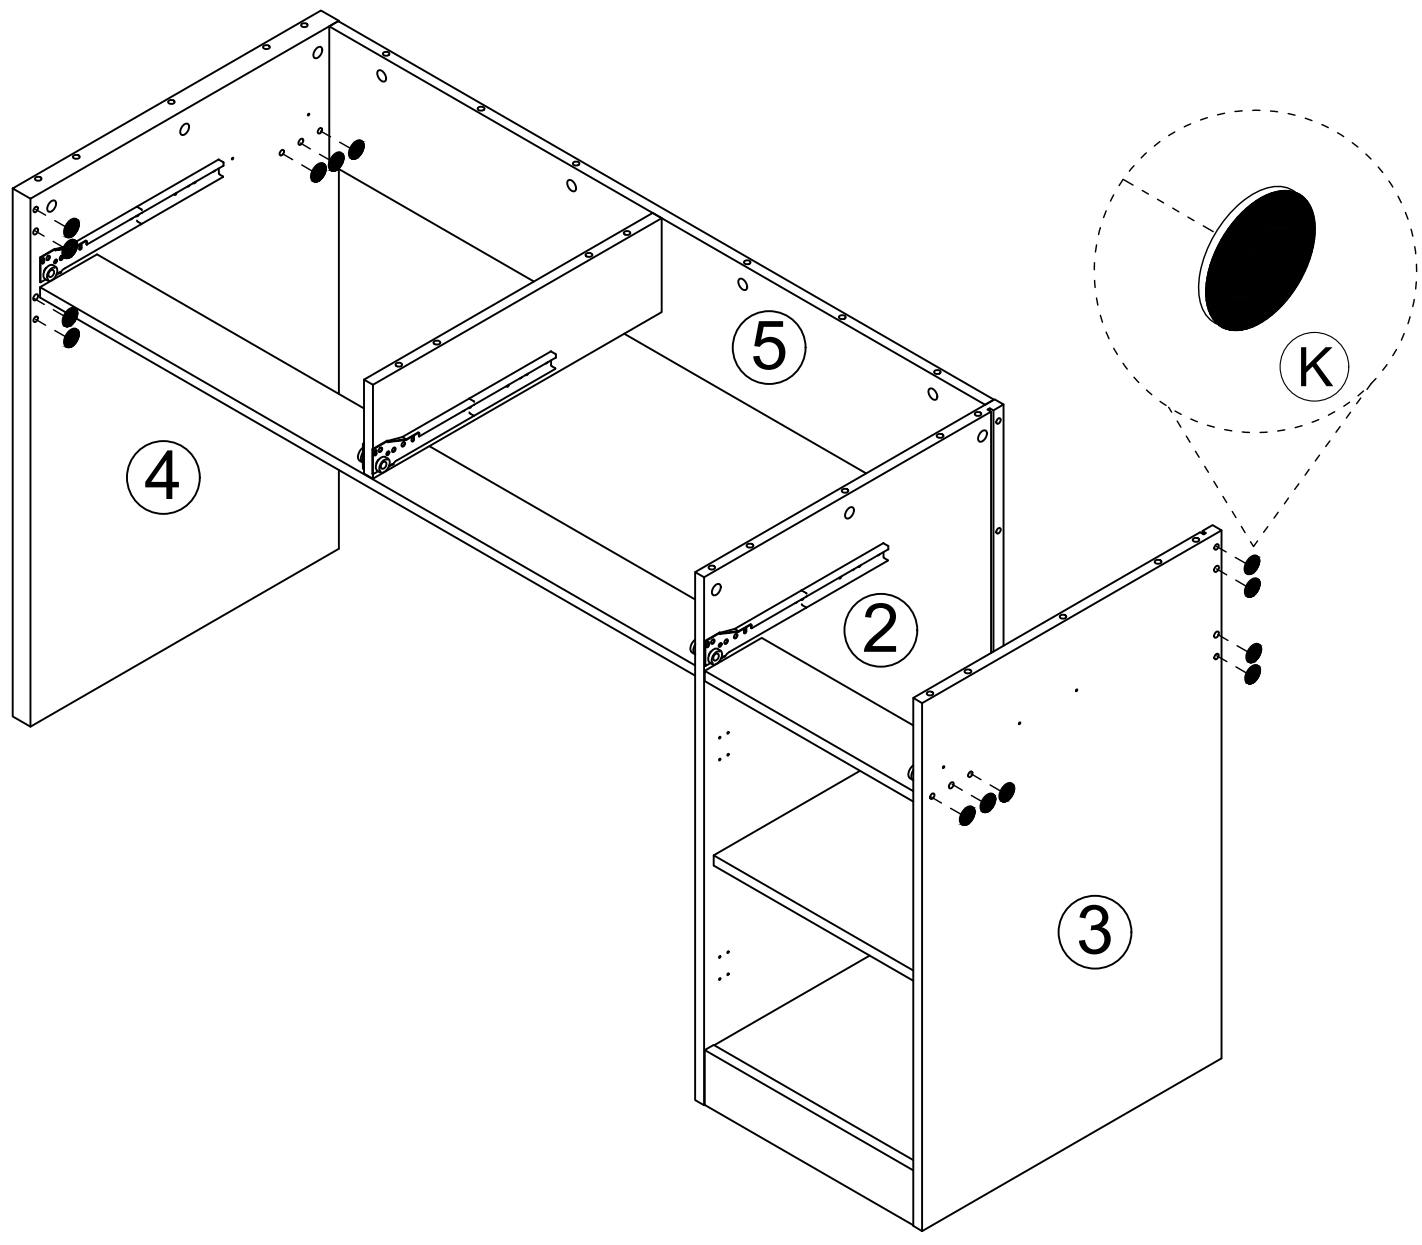



STEP13

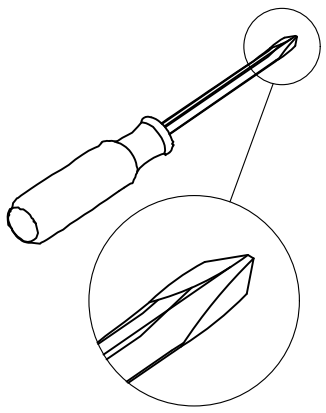


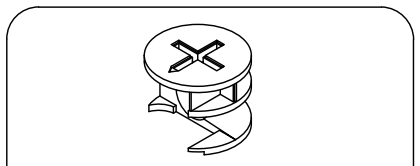


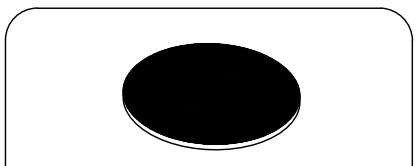

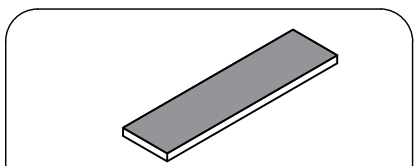


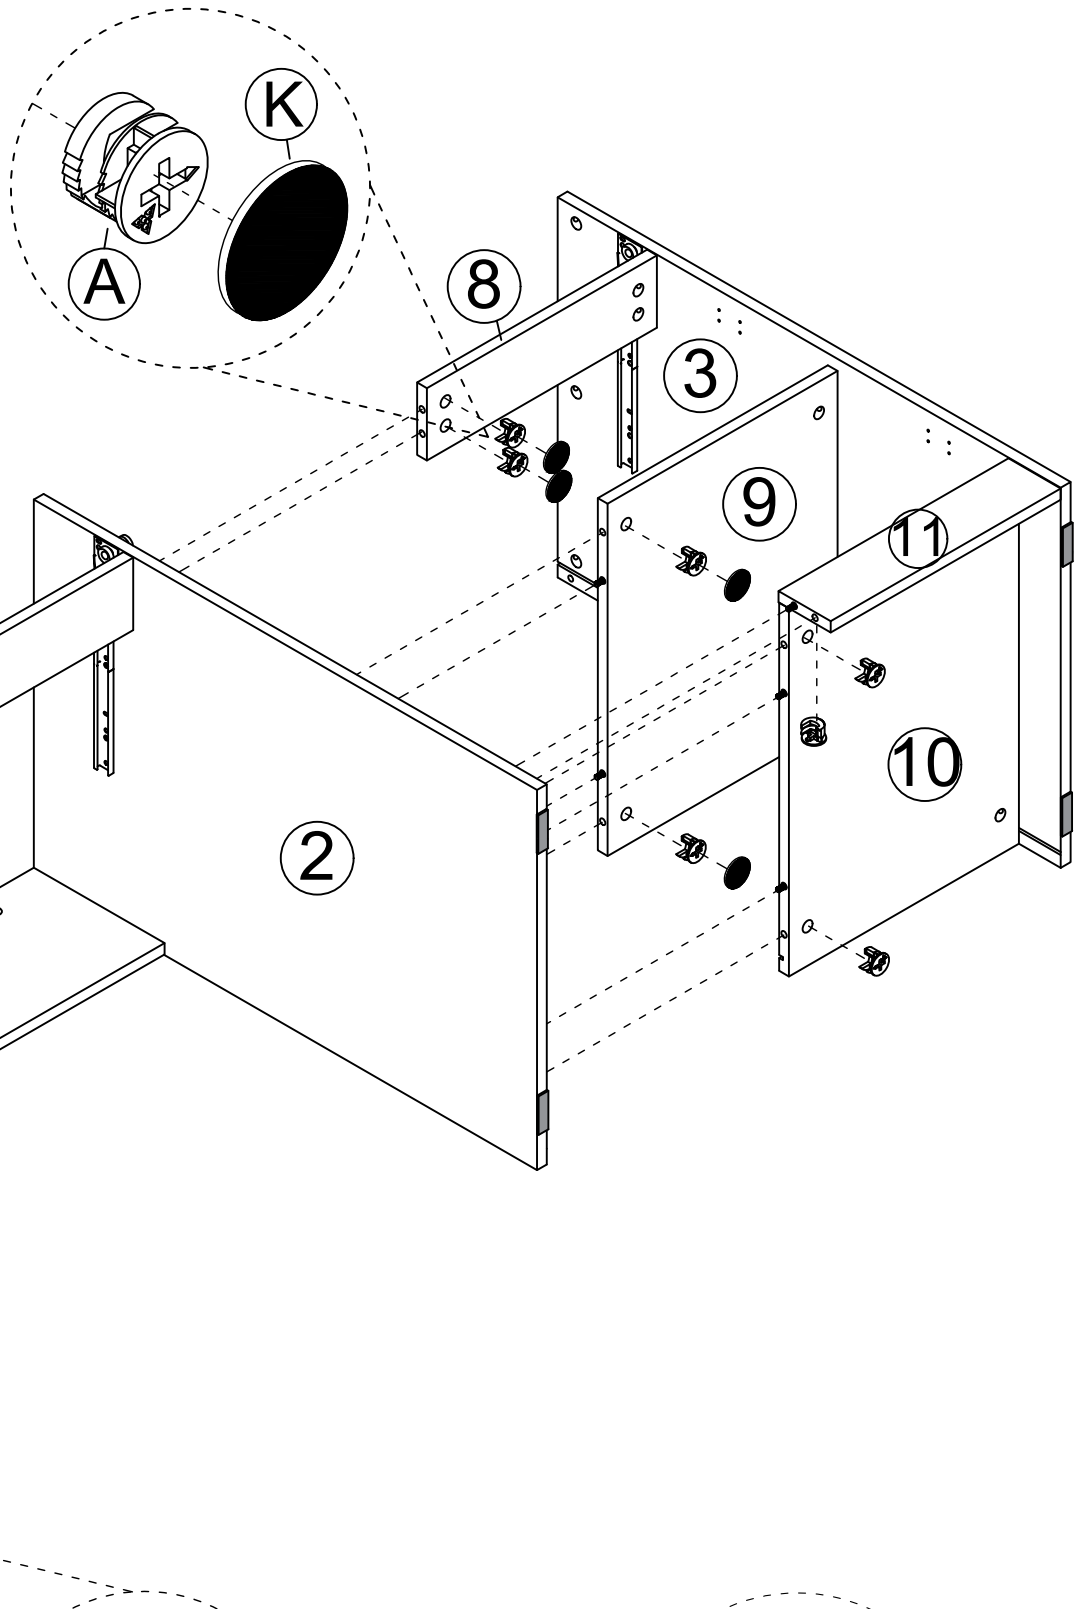

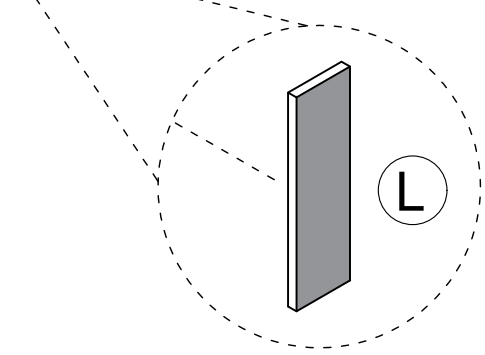

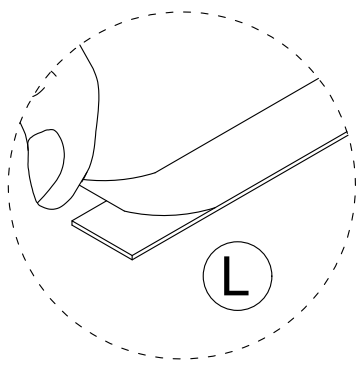


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

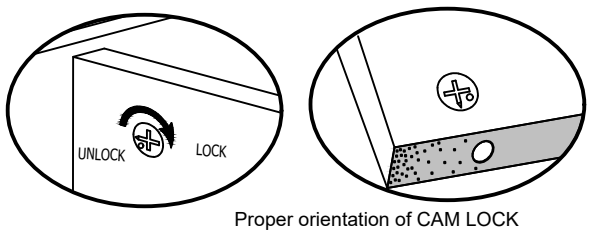



Proper orientation of CAM LOCK


Tear off the protective film on the back of the part L and stick it to the bottom of the plate.

STEP12

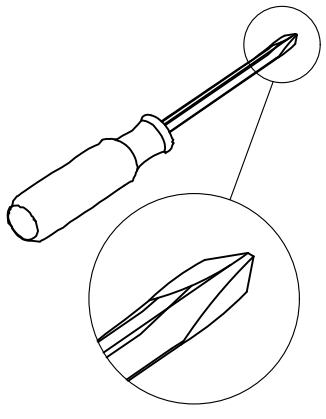


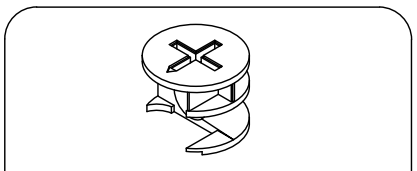

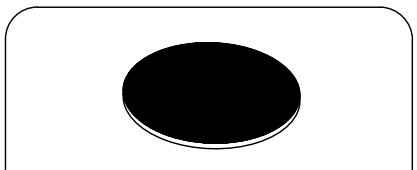

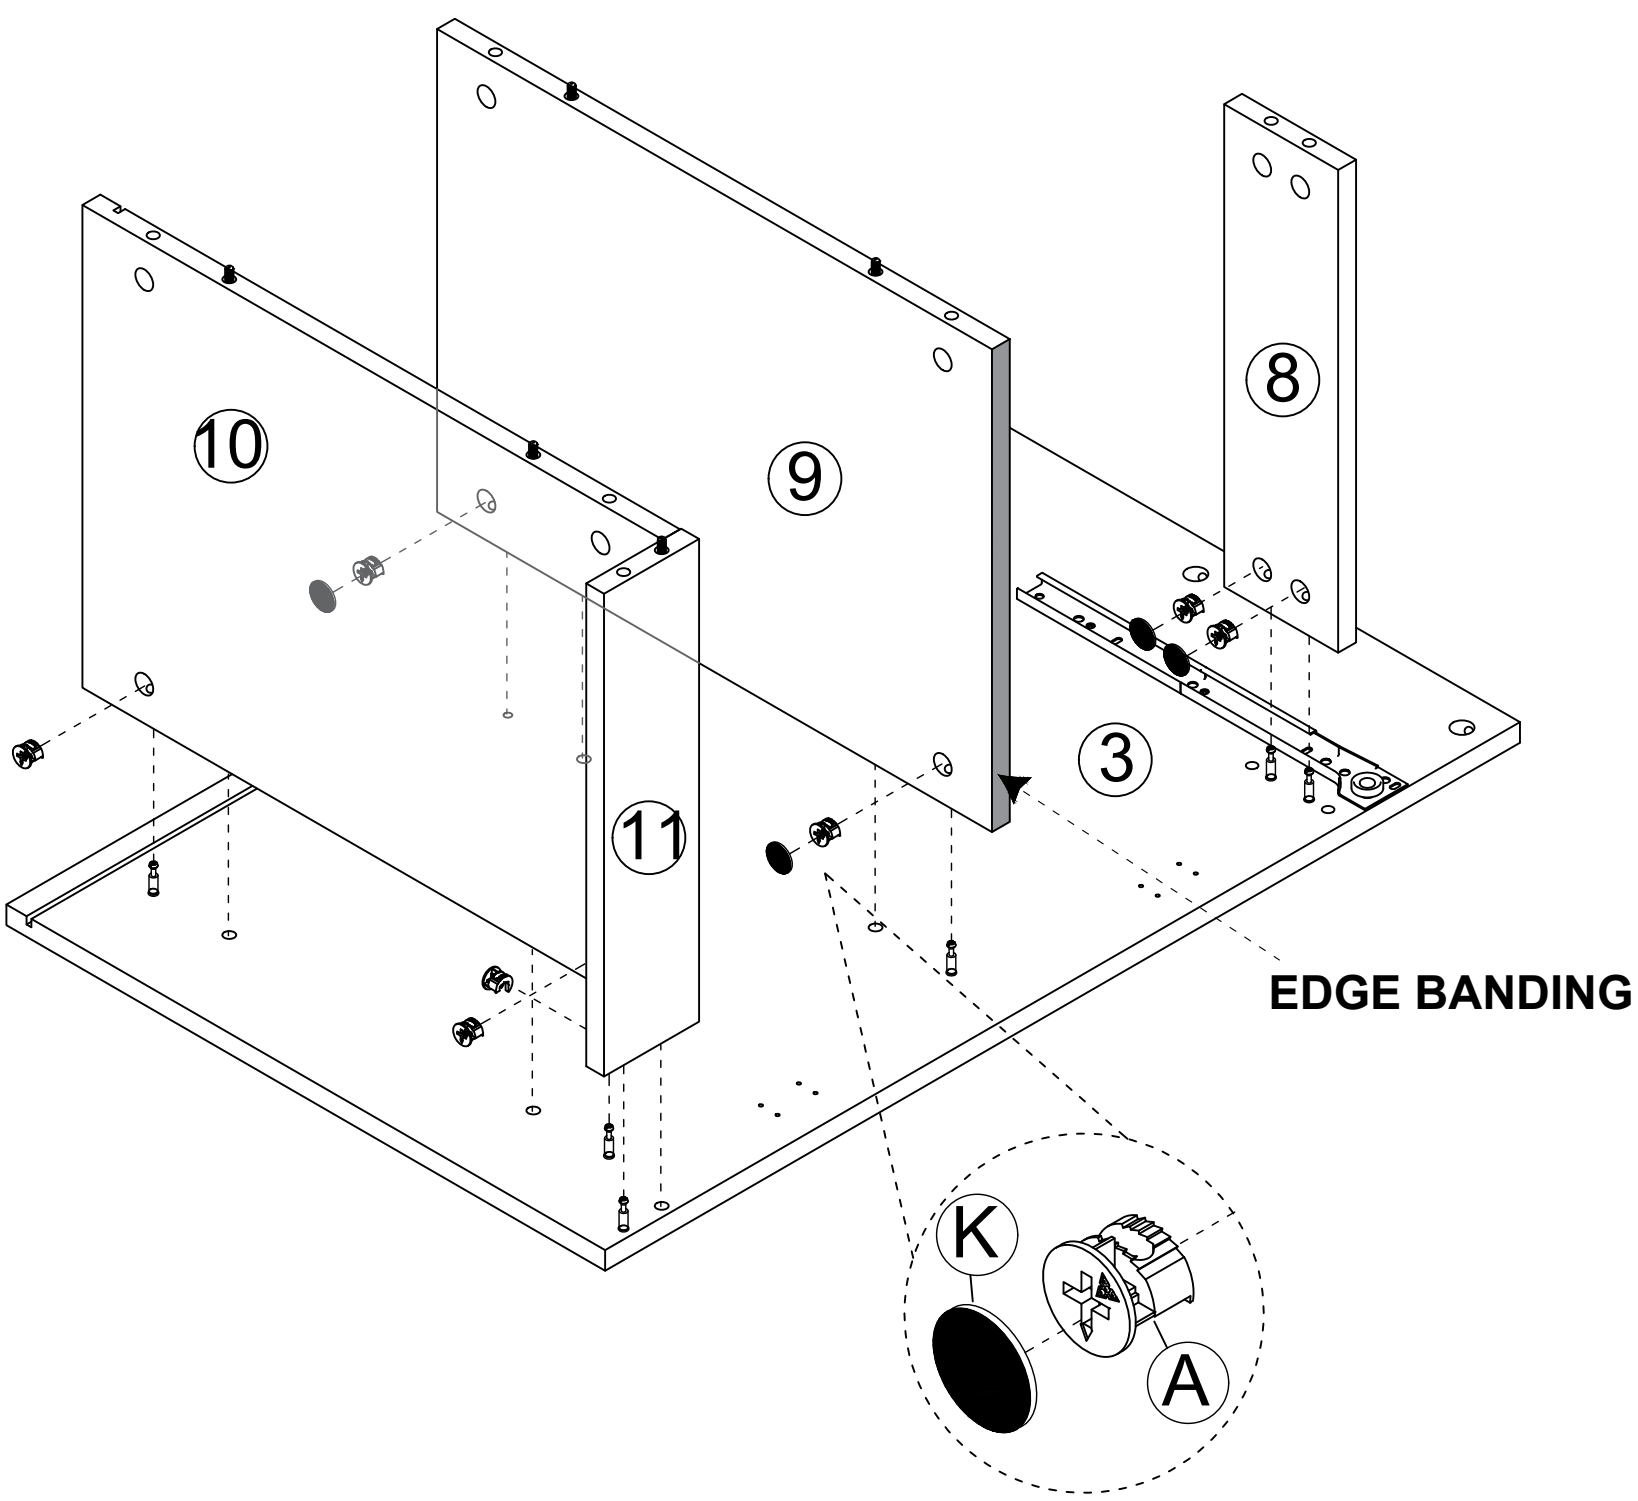



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

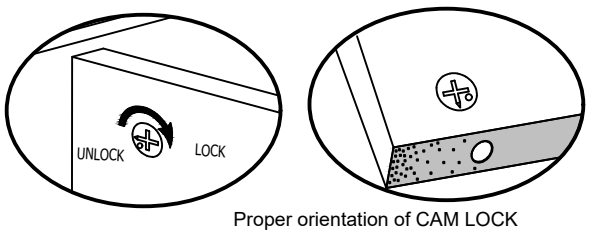

Proper orientation of CAM LOCK


STEP11

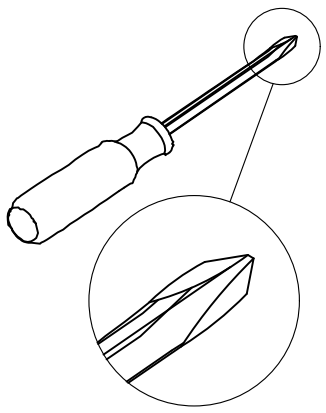

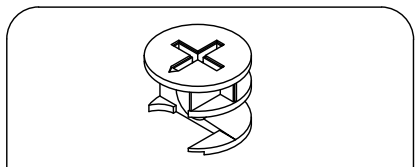


Ø15X9.5mm

A	X2




Ø6.5X35mm


B	X2





Ø8X30mm


C	X12

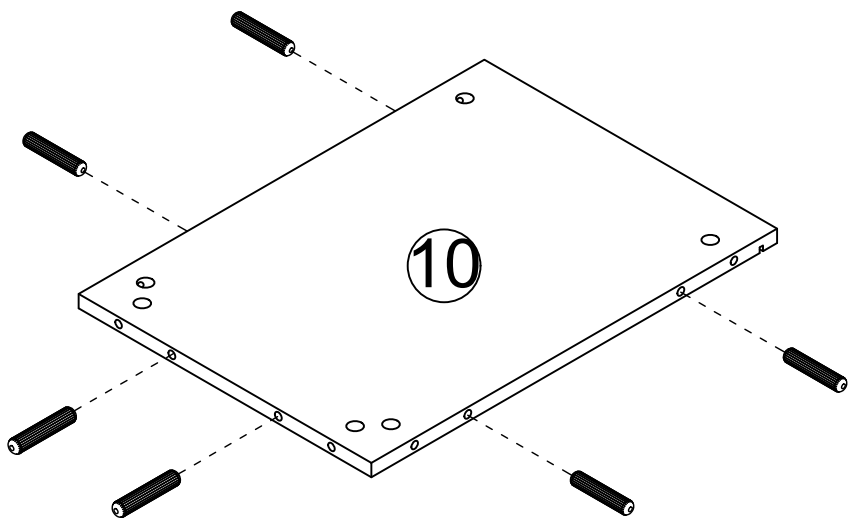

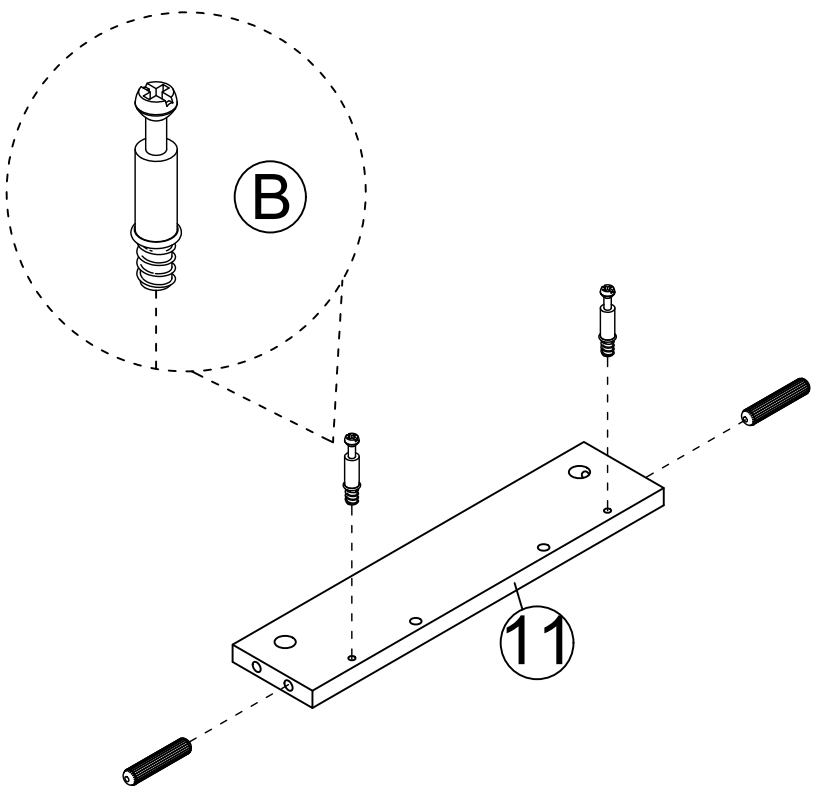


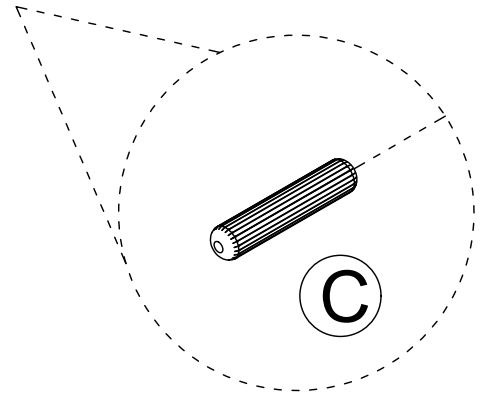

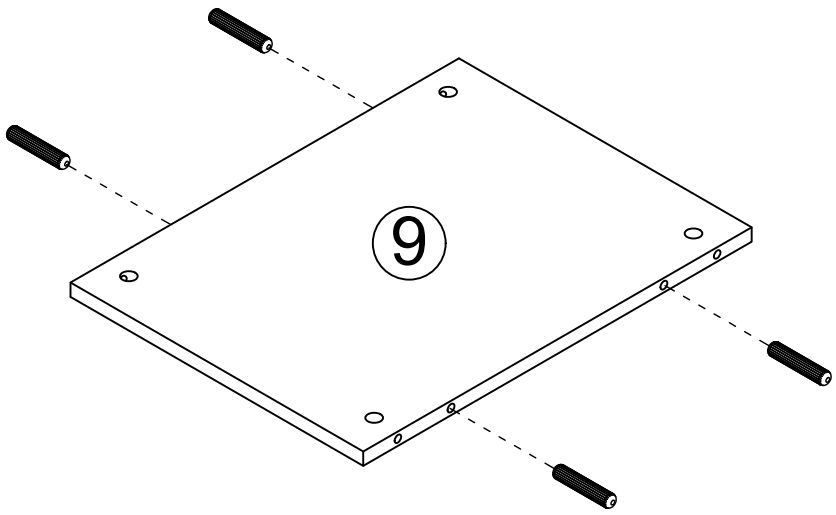


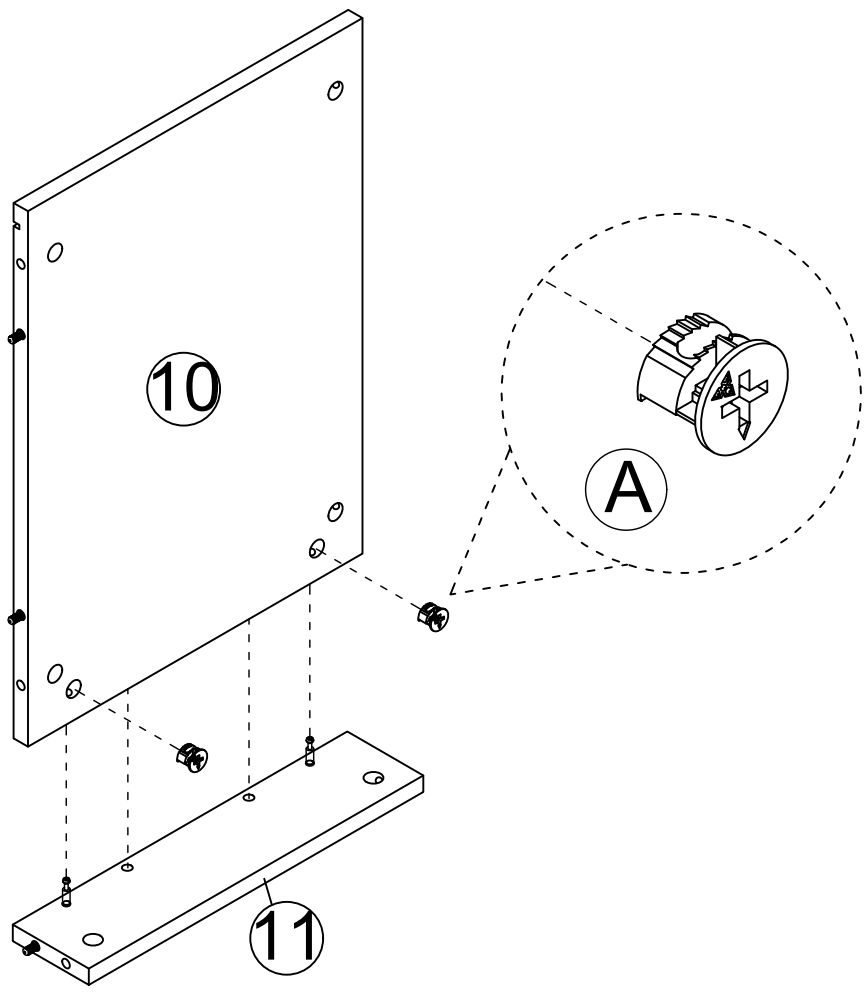


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

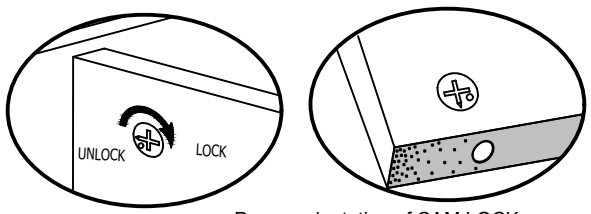


Proper orientation of CAM LOCK

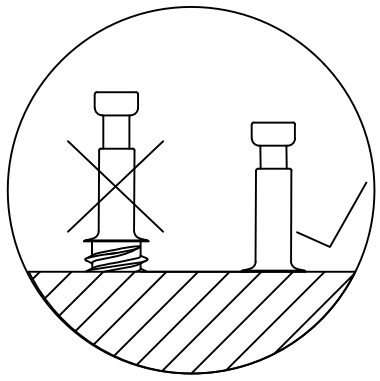

STEP10

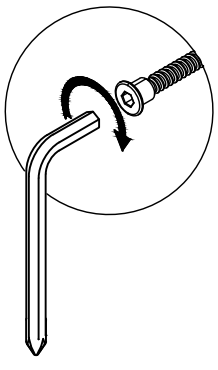

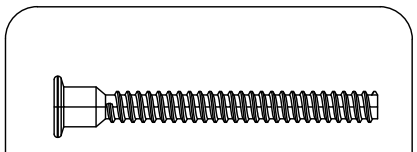

Ø6.3X50mm


H	X8





Ø4X65mm


G	X1


STEP9

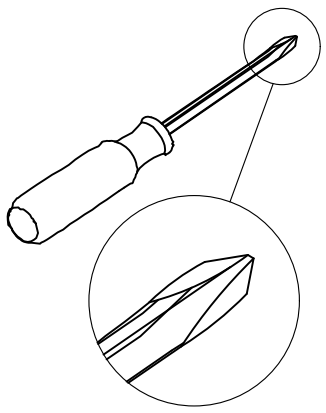

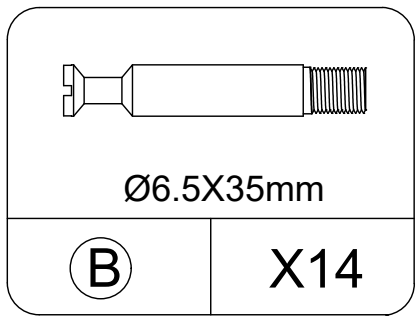


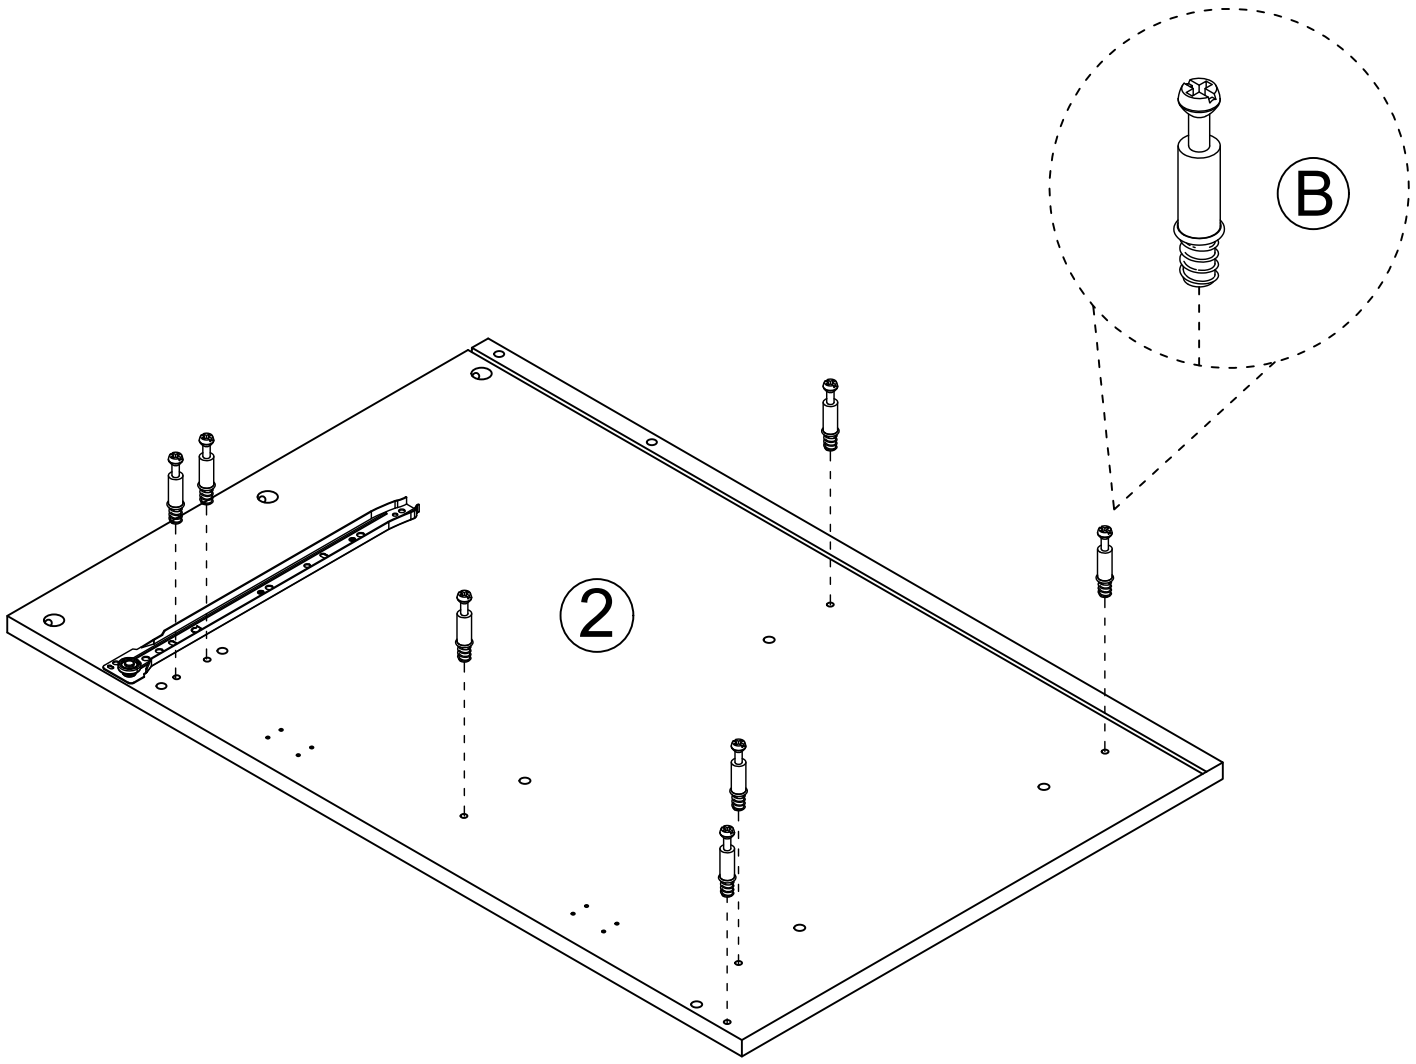

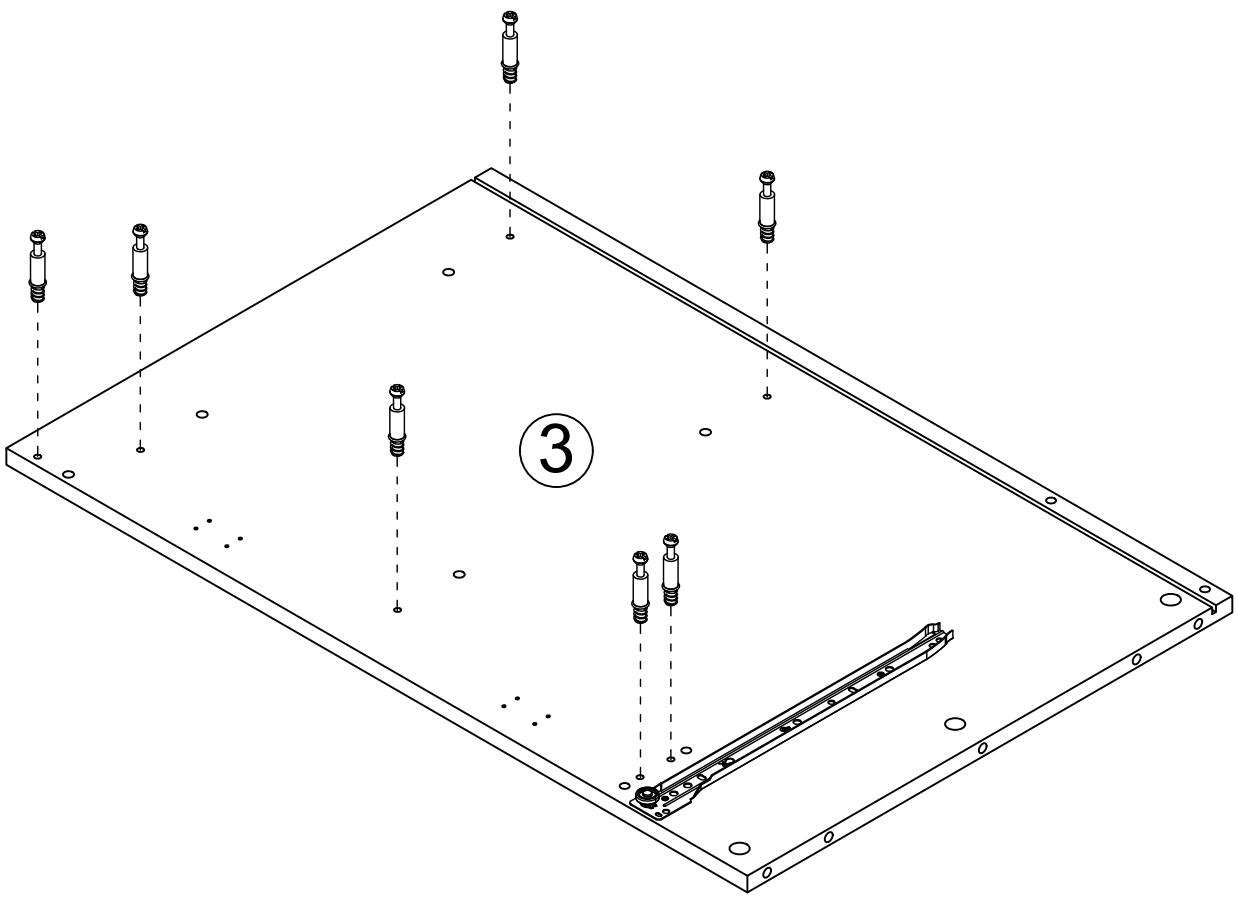

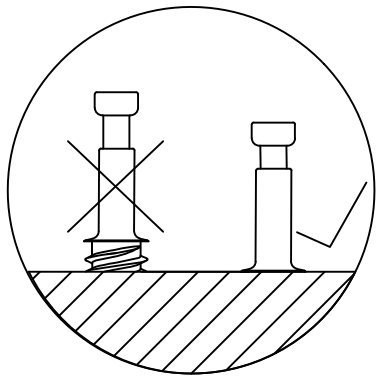


STEP8

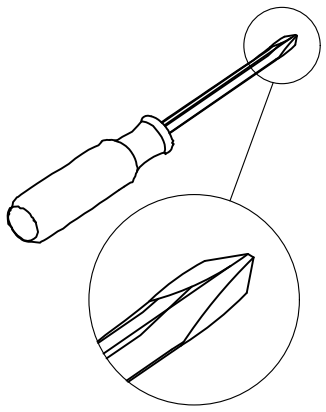


Ø3.5X12mm	
D	X6

12" 300mm	
J-CL	X1

12" 300mm	
J-CR	X1

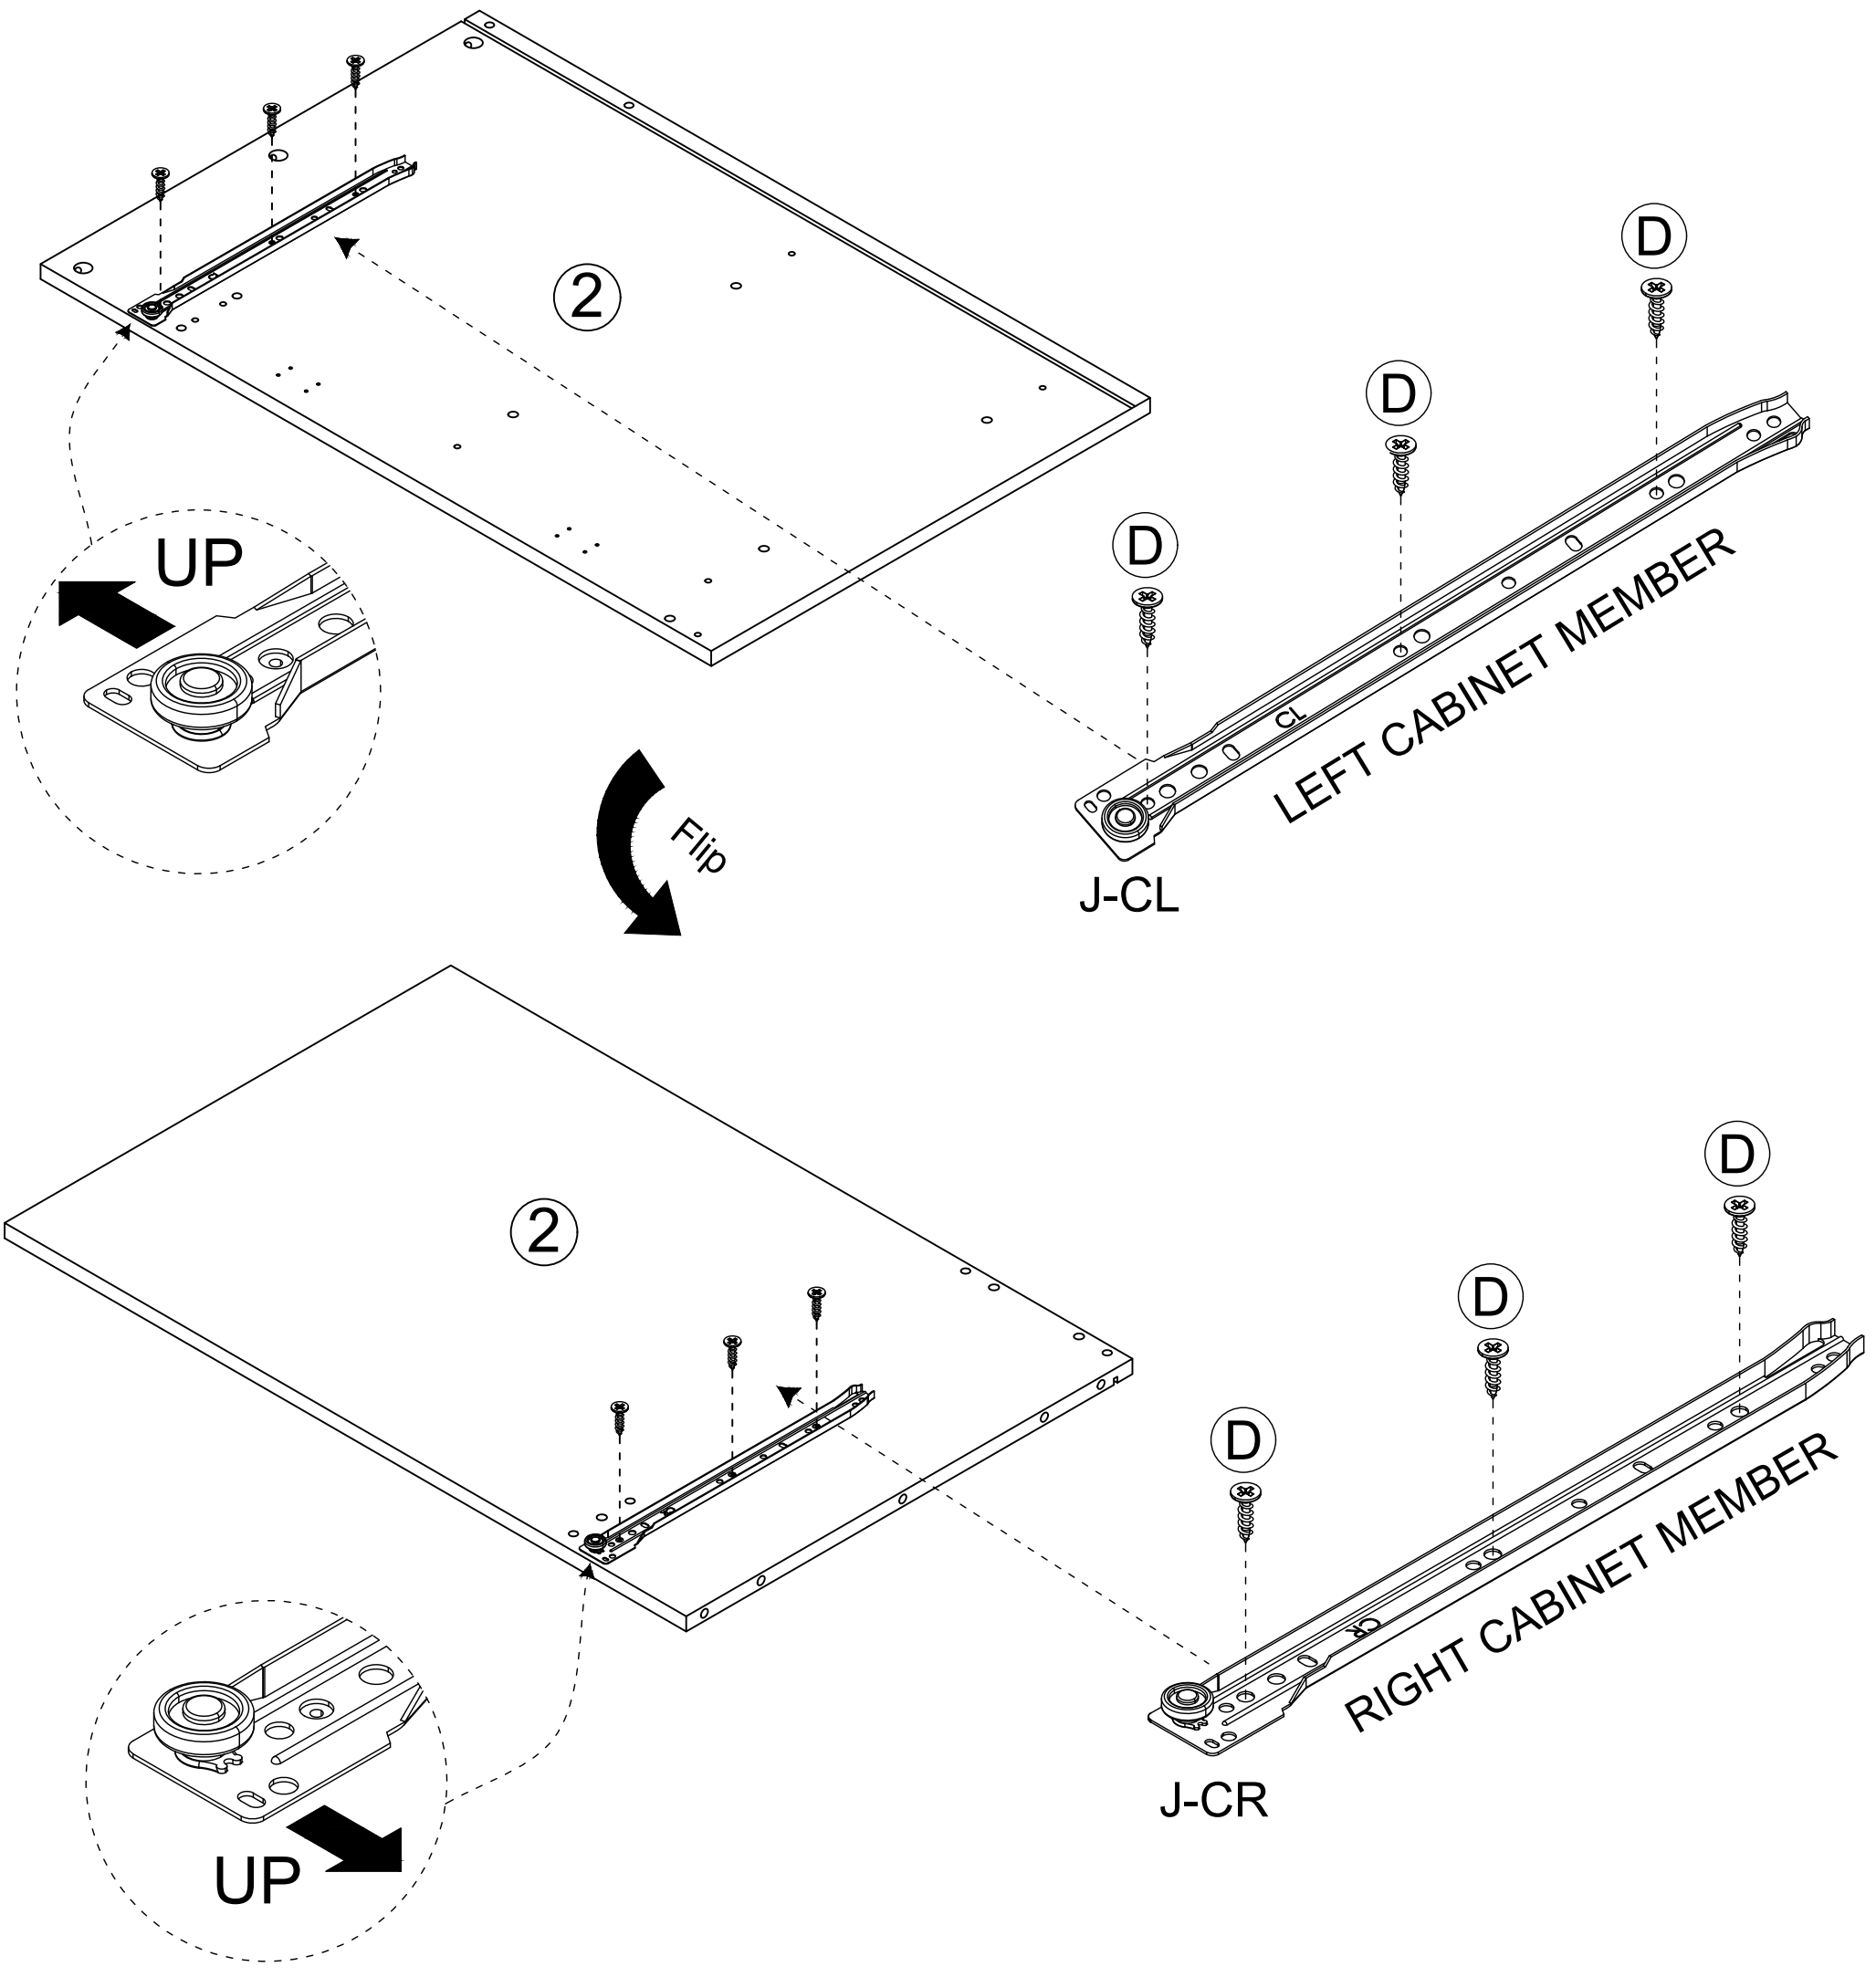


STEP7

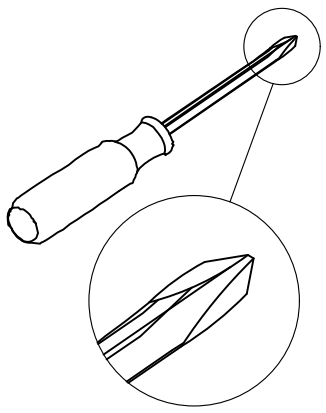


Ø3.5X12mm	
D	X6


12" 300mm	
J-CL	X1


12" 300mm	
J-CR	X1

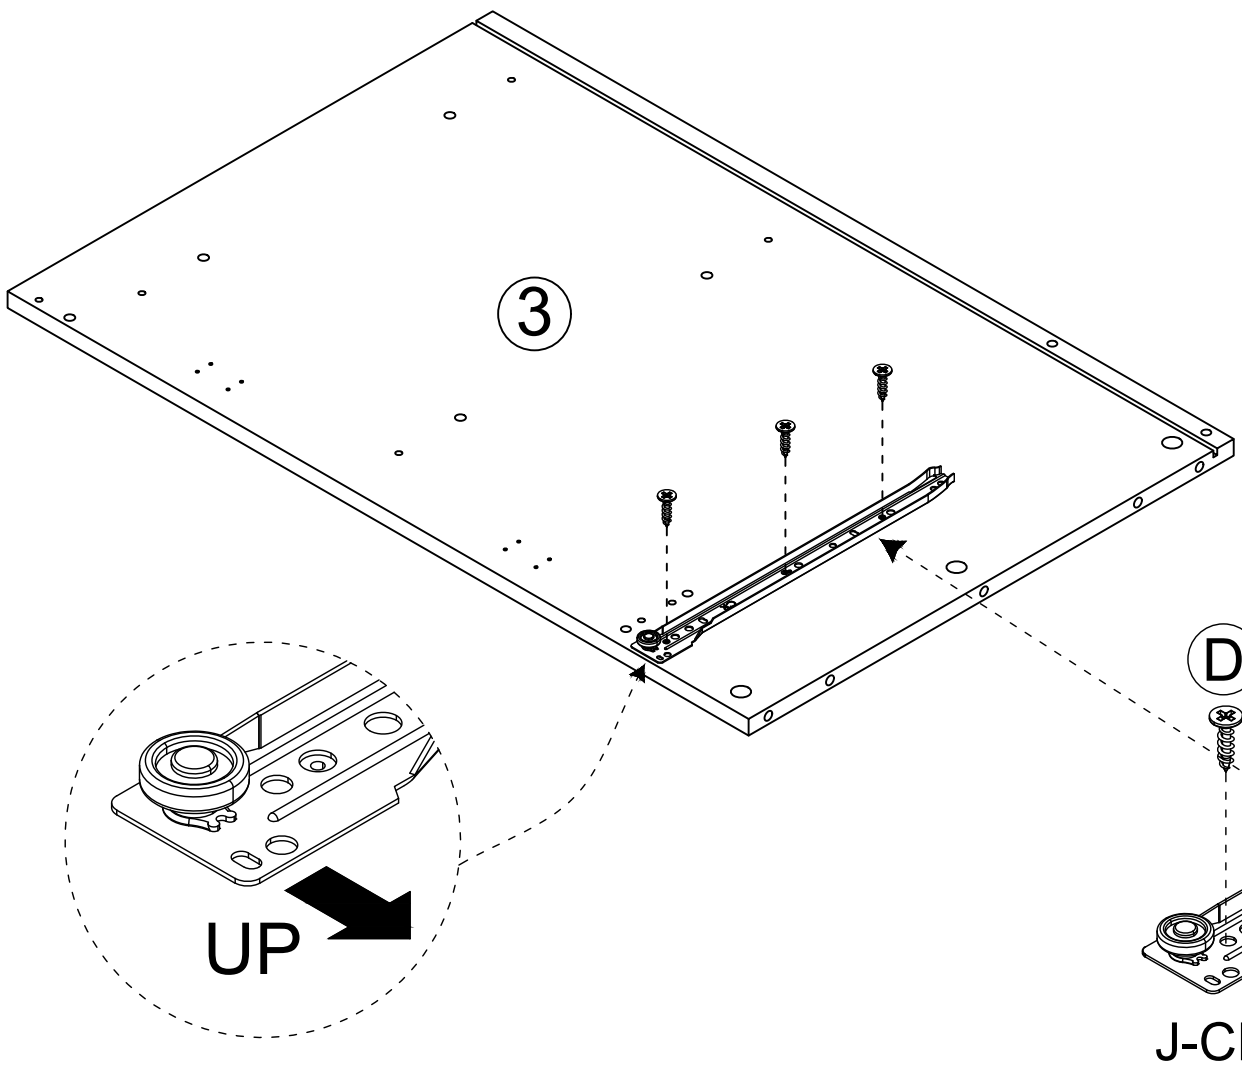


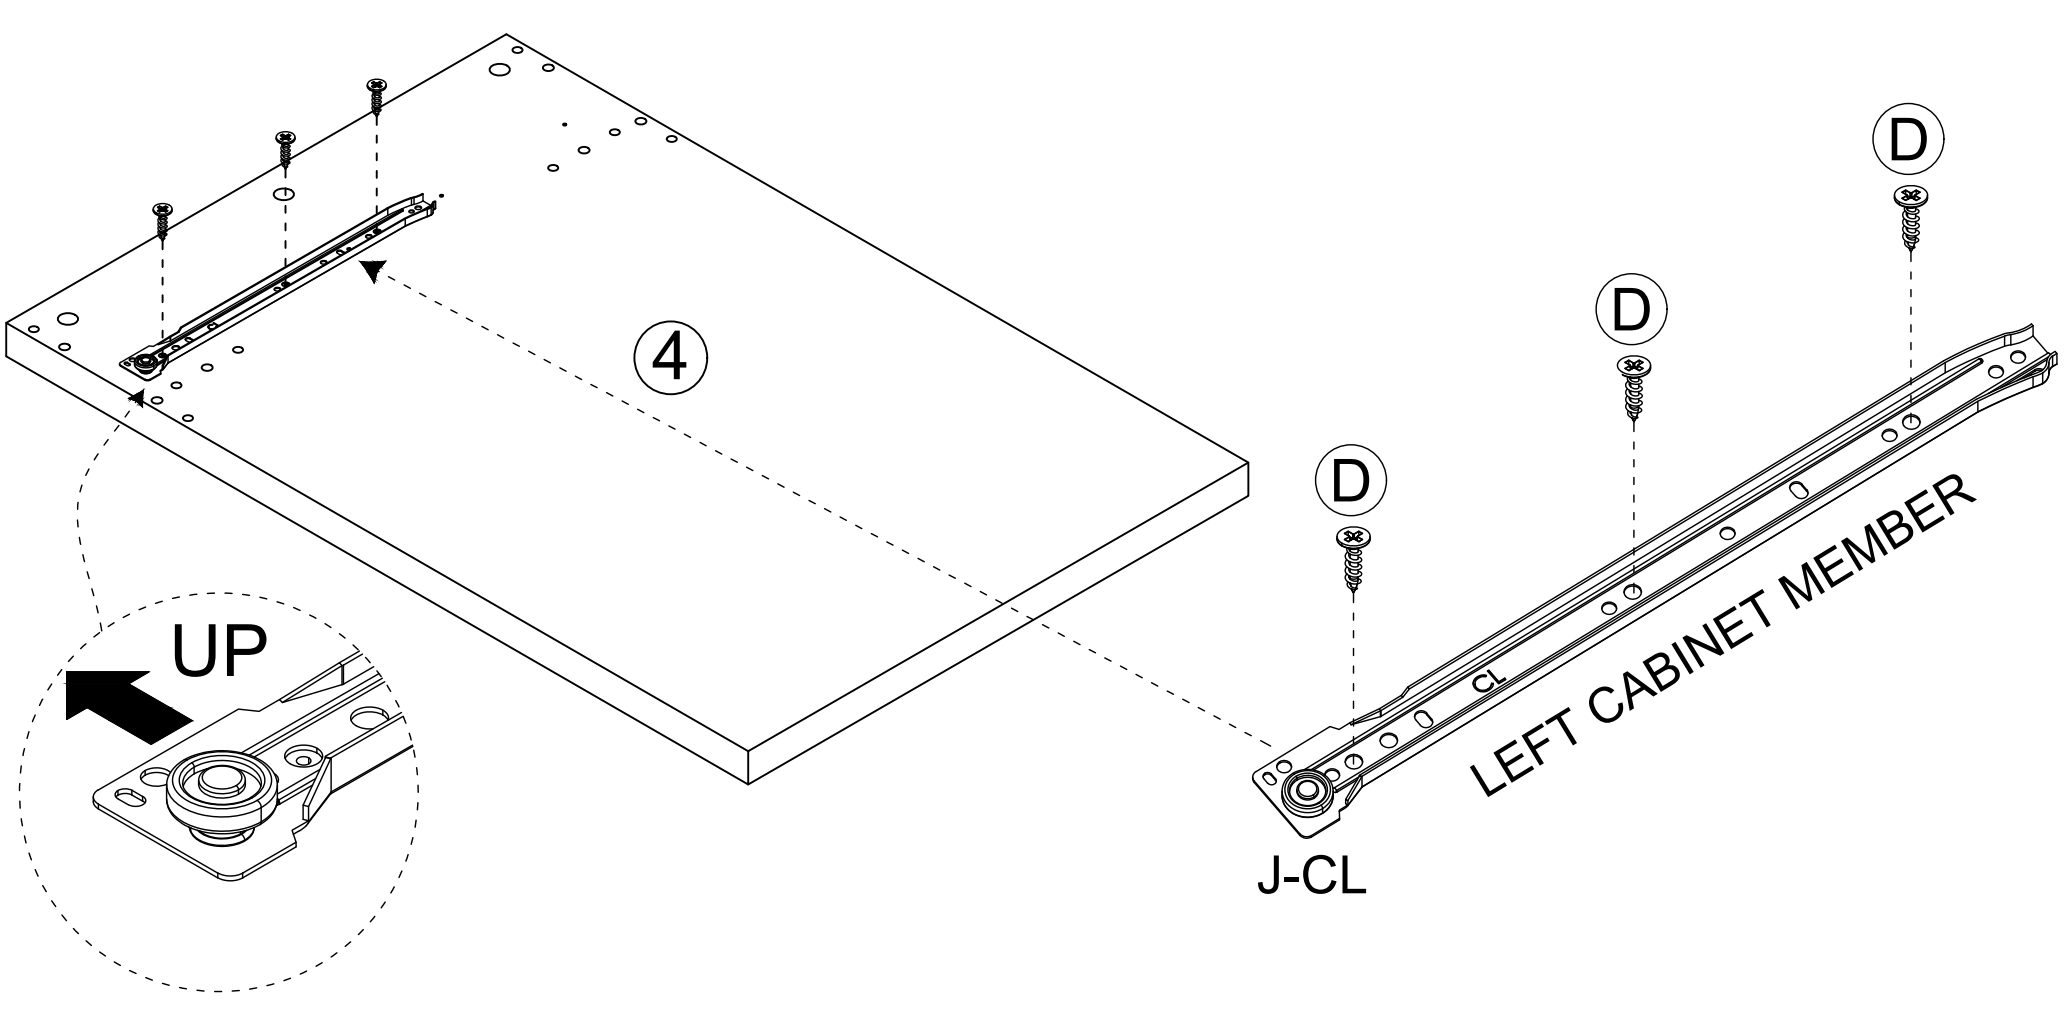


STEP6

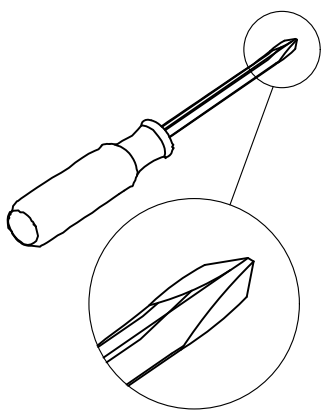

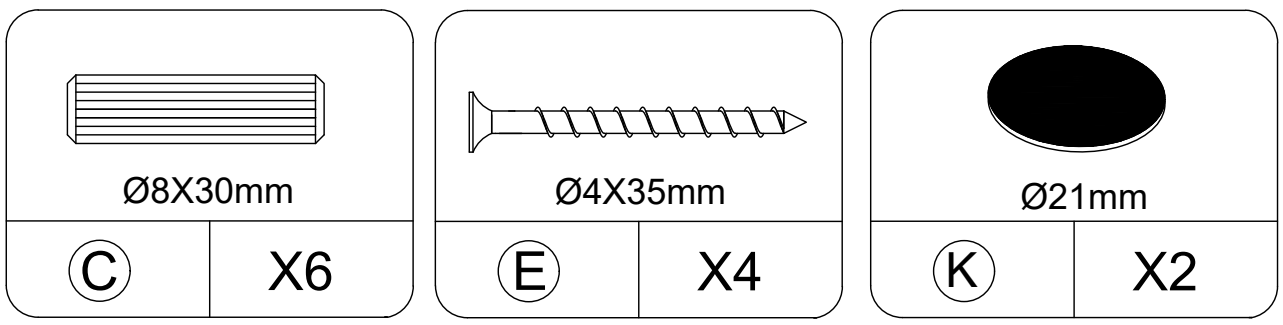


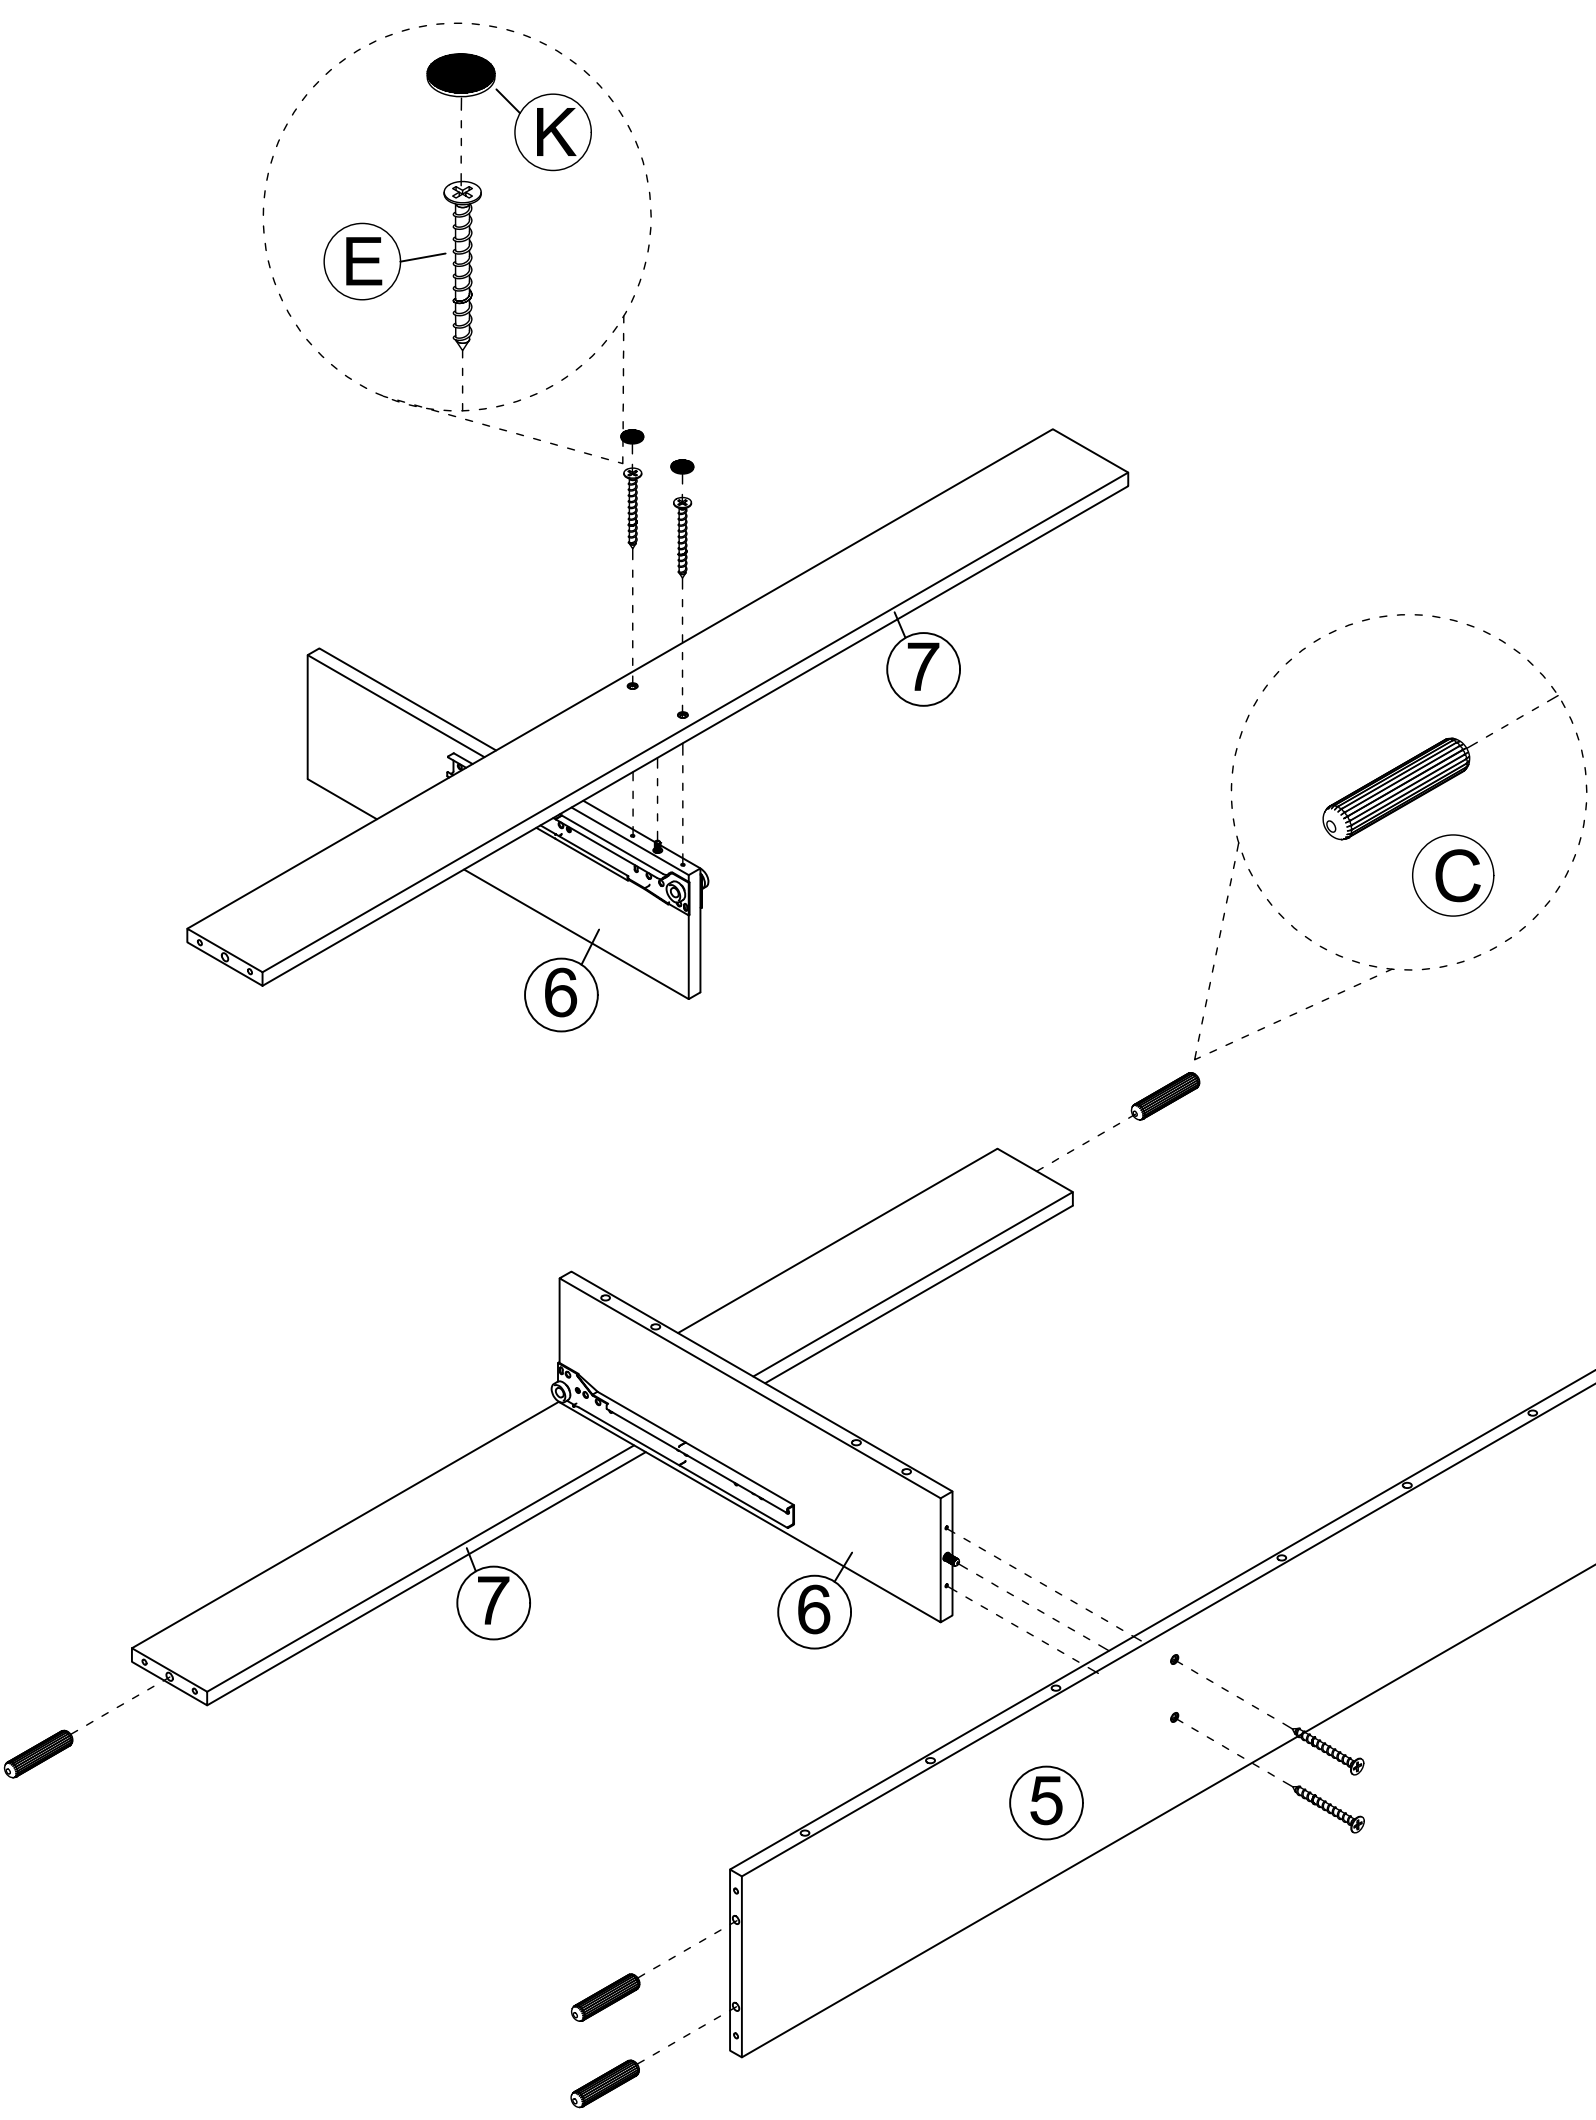


STEP5

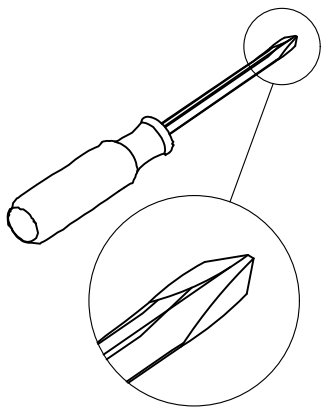



Ø8X30mm	Ø3.5X12mm	12" 300mm	12" 300mm
C X2	D X6	J-CL X1	J-CR X1

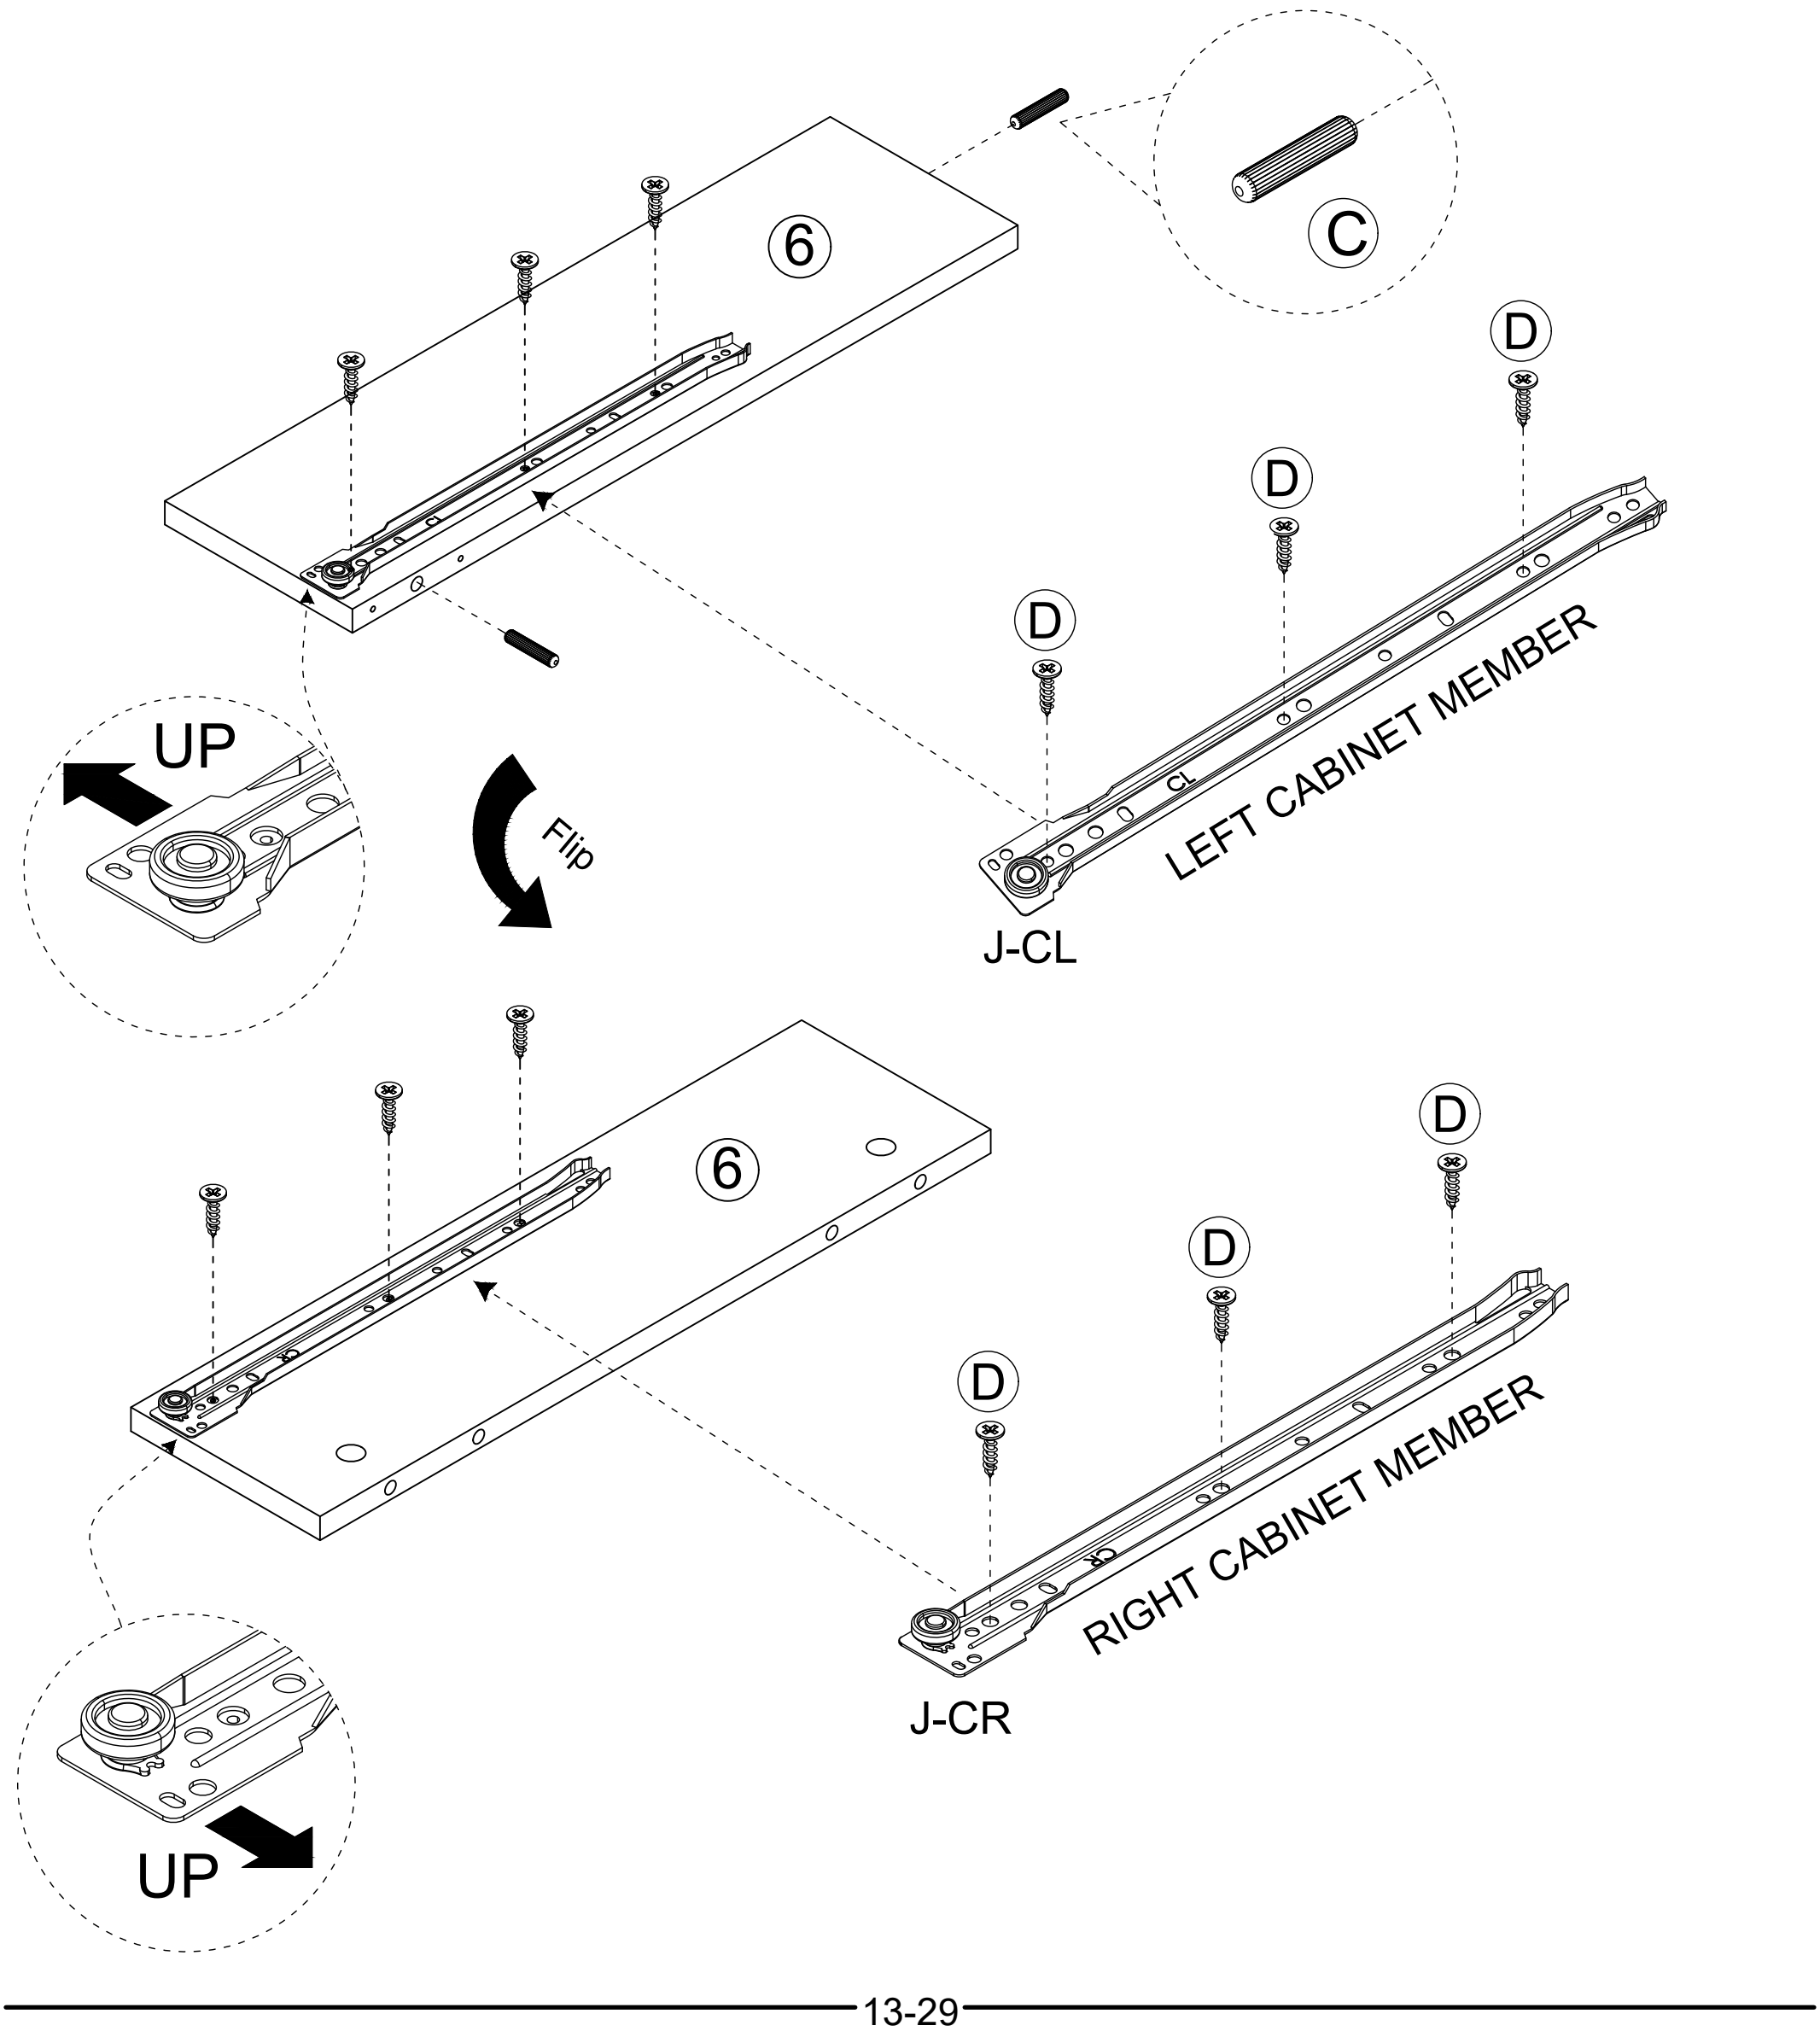



STEP4

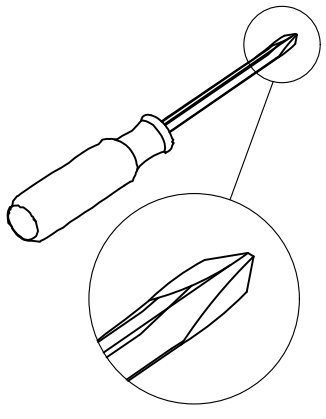

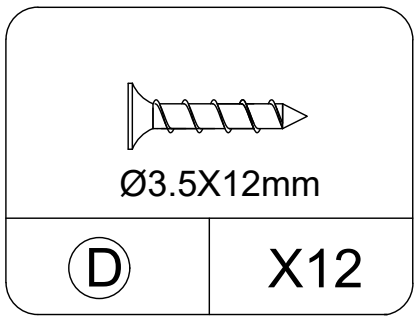
Ø3.5X12mm
D
X12

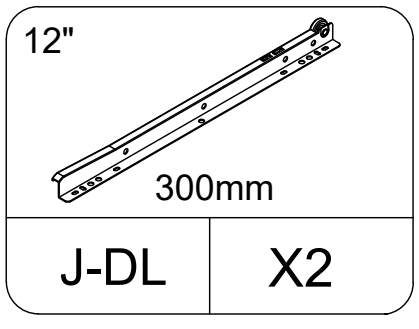

12"
300mm
J-DL
X2

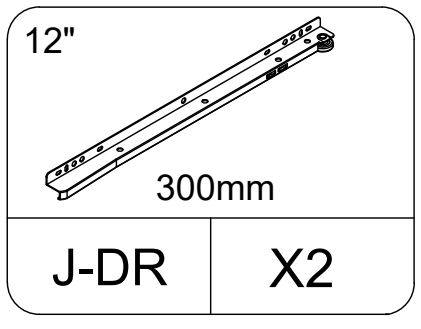

12"
300mm
J-DR
X2

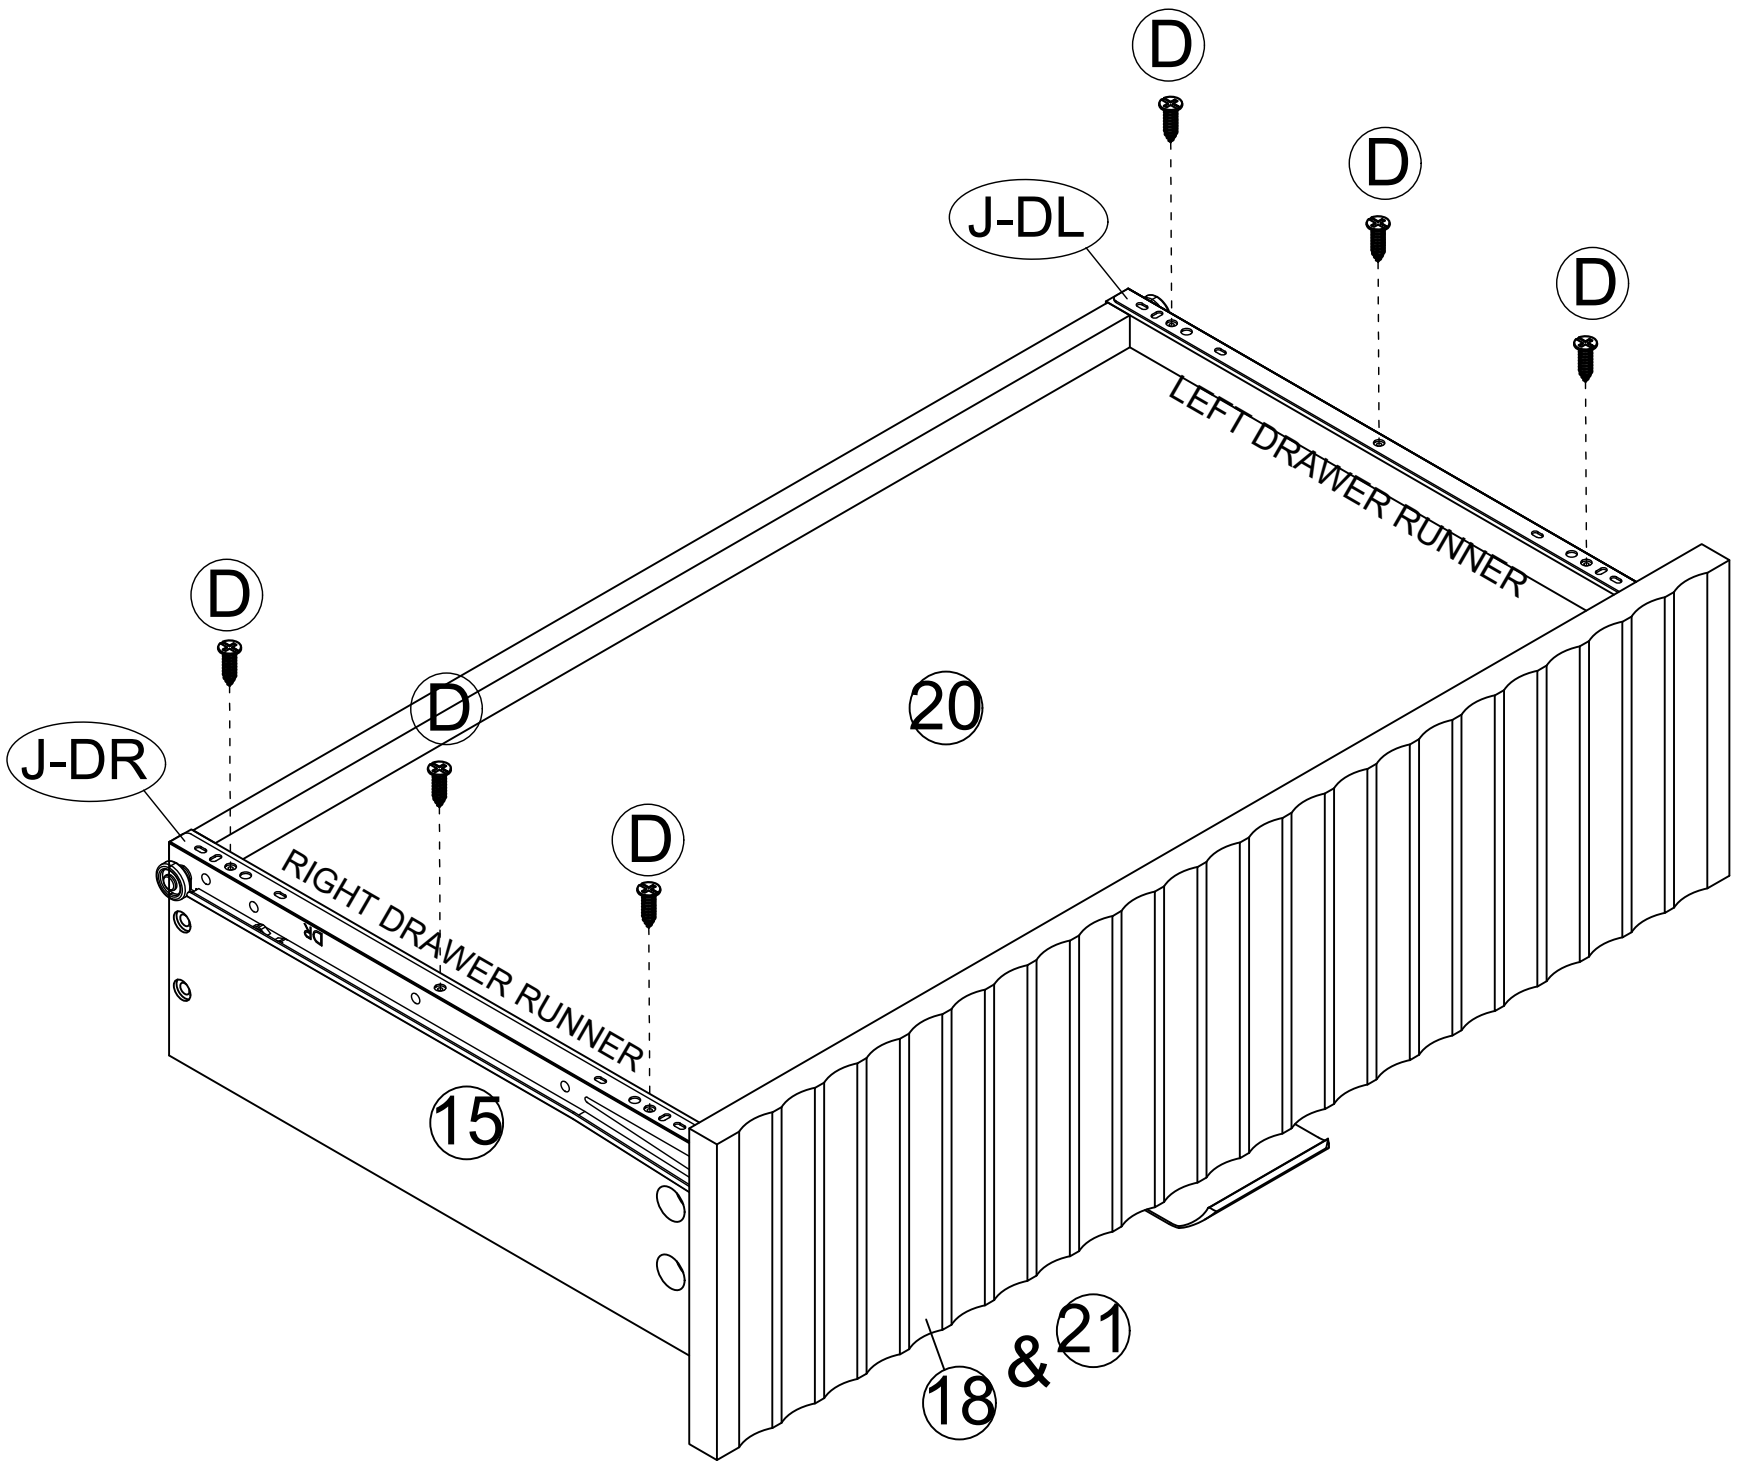

D
D
D
J-DL
LEFT DRAWER RUNNER
D
D
D
J-DR
RIGHT DRAWER RUNNER
20
15
18 & 21


X2


STEP3

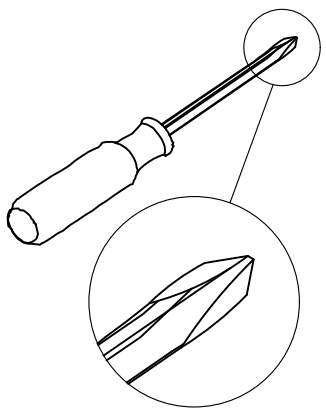

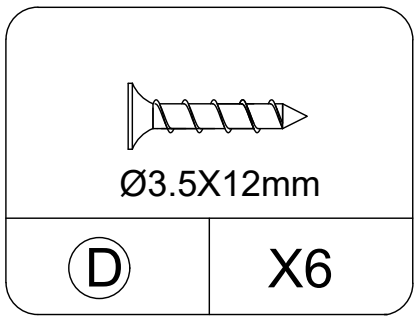

Ø3.5X12mm
D
X6

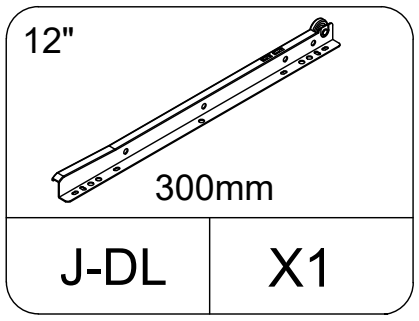
12"
300mm
J-DL
X1

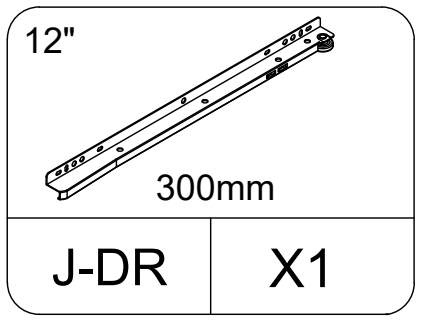

12"
300mm
J-DR
X1

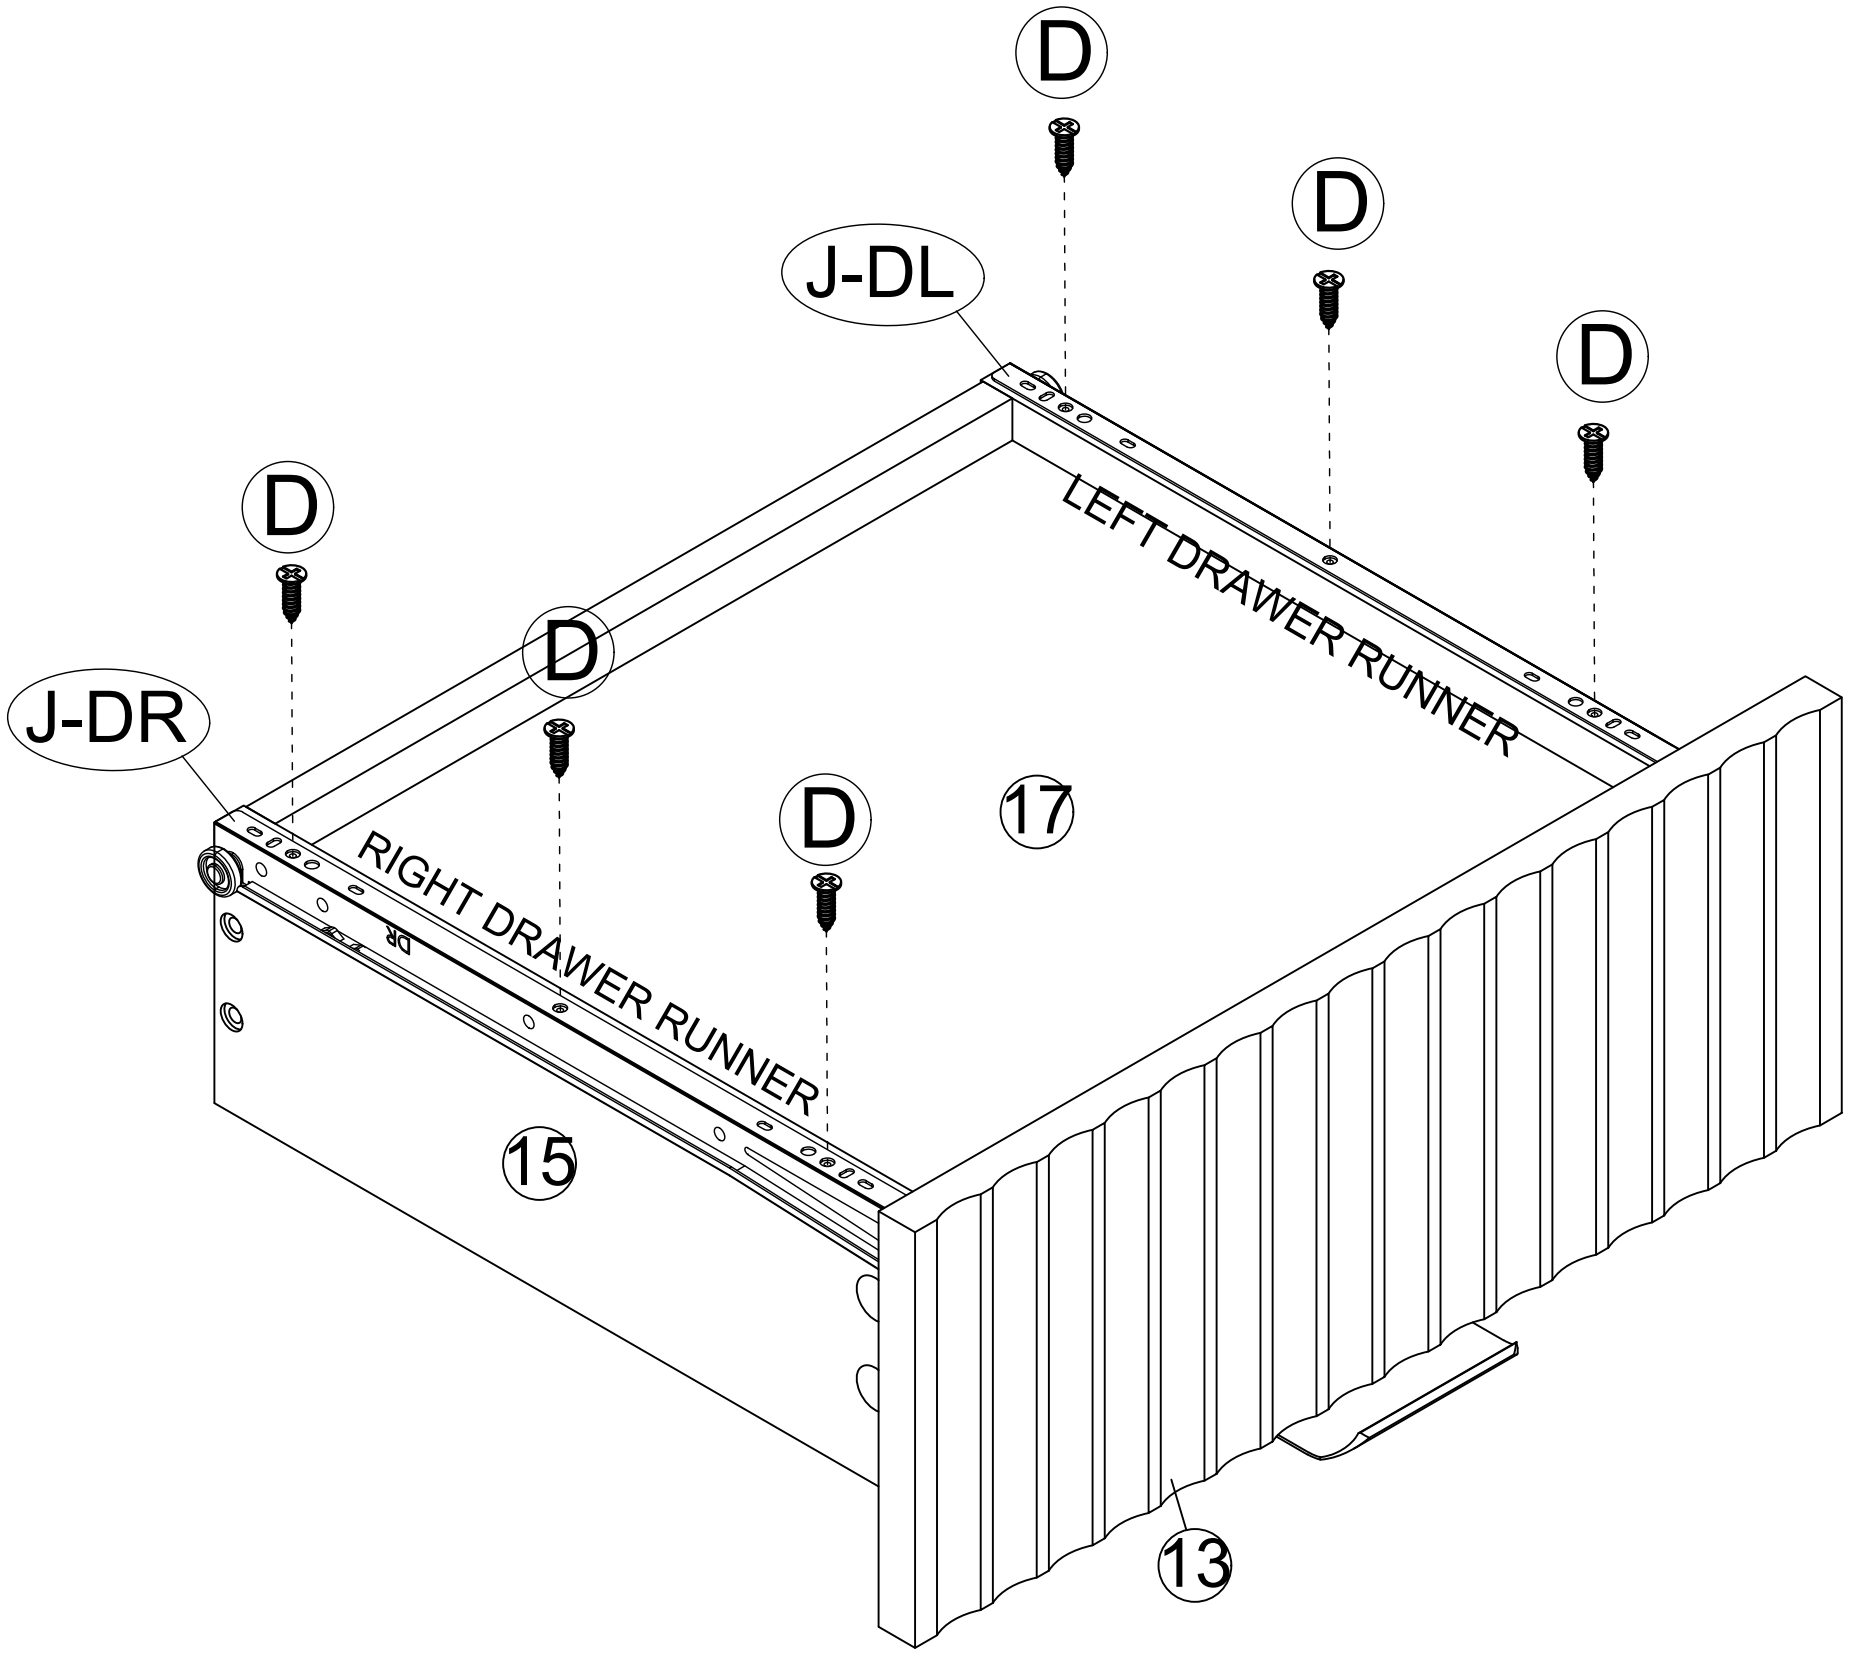
D
J-DL
D
D
D
D
J-DR
LEFT DRAWER RUNNER
RIGHT DRAWER RUNNER
17
15
13


STEP2

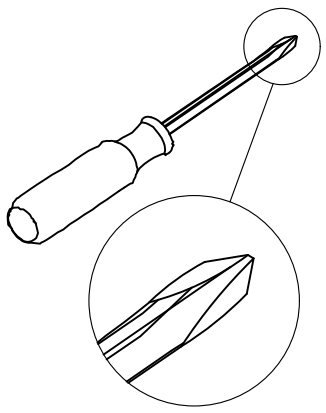

Ø15X9.5mm	
A	X8

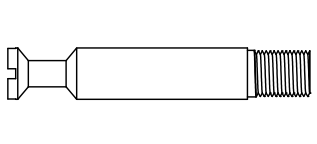


Ø6.5X35mm	
B	X8




Ø4X35mm	
E	X8


WHITE




Ø3X12mm	
F	X4




80X40X18mm	
I	X2

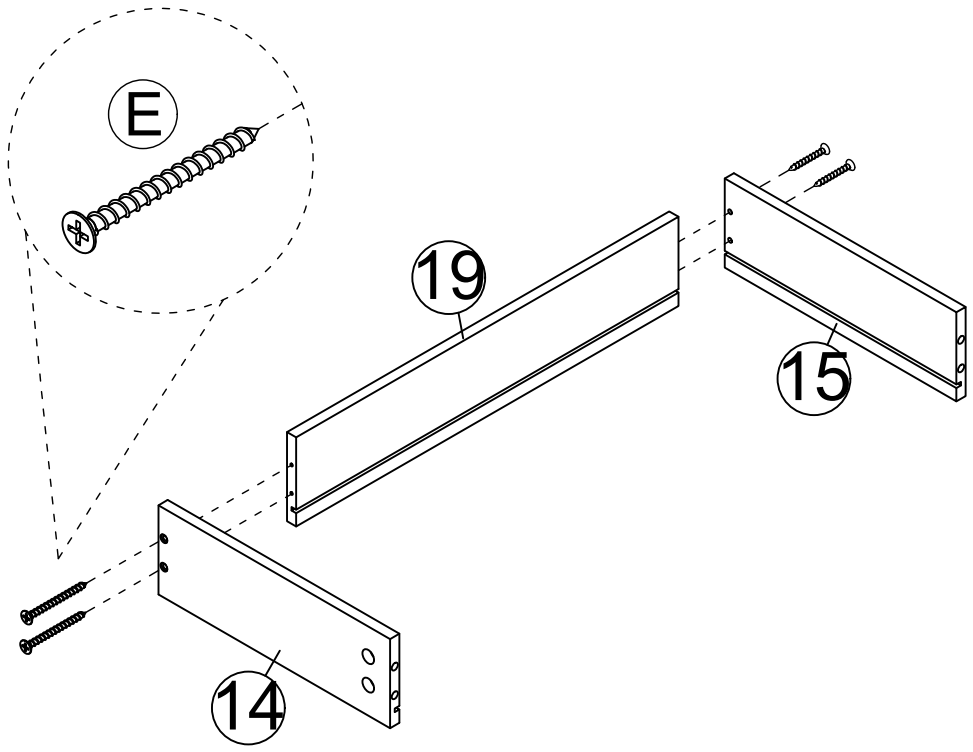


Step 1

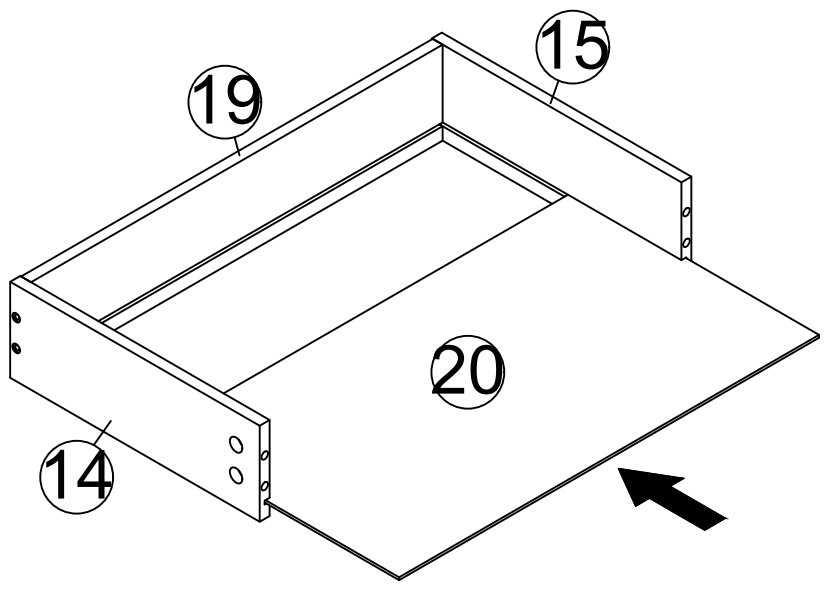



Step 2

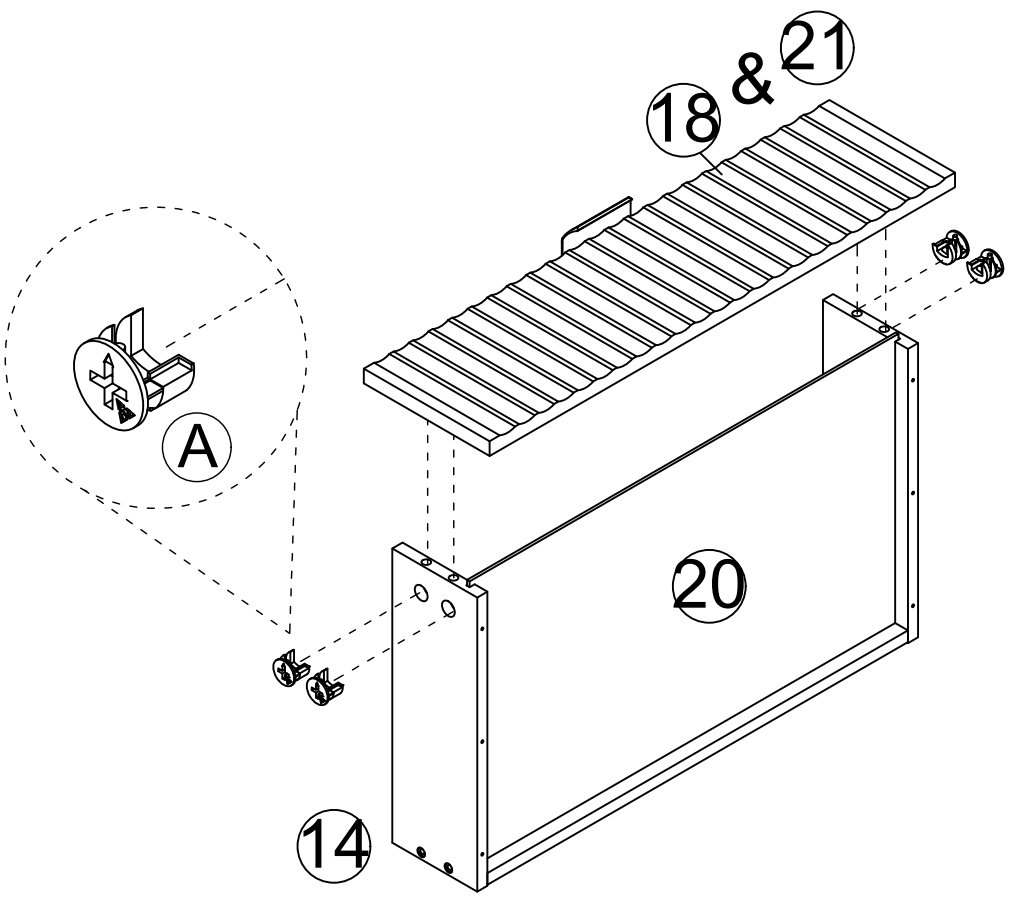

Step 3

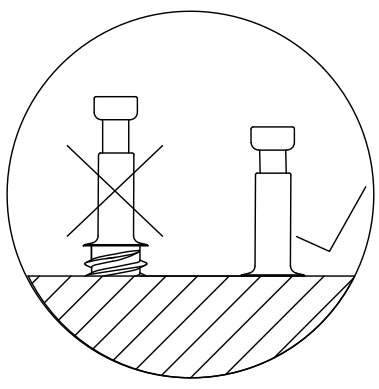

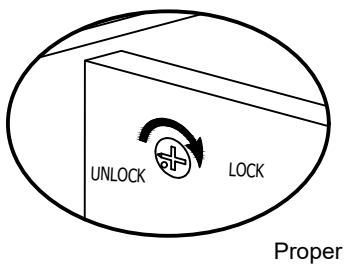

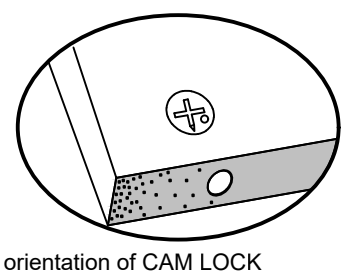


Proper orientation of CAM LOCK

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

X2


STEP1

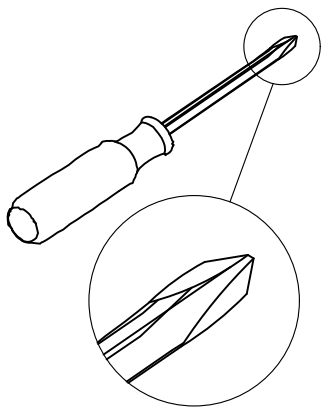




Ø15X9.5mm

A	X4



Ø6.5X35mm


B	X4



Ø4X35mm


E	X4

WHITE




Ø3X12mm

F	X2




80X40X18mm


I	X1

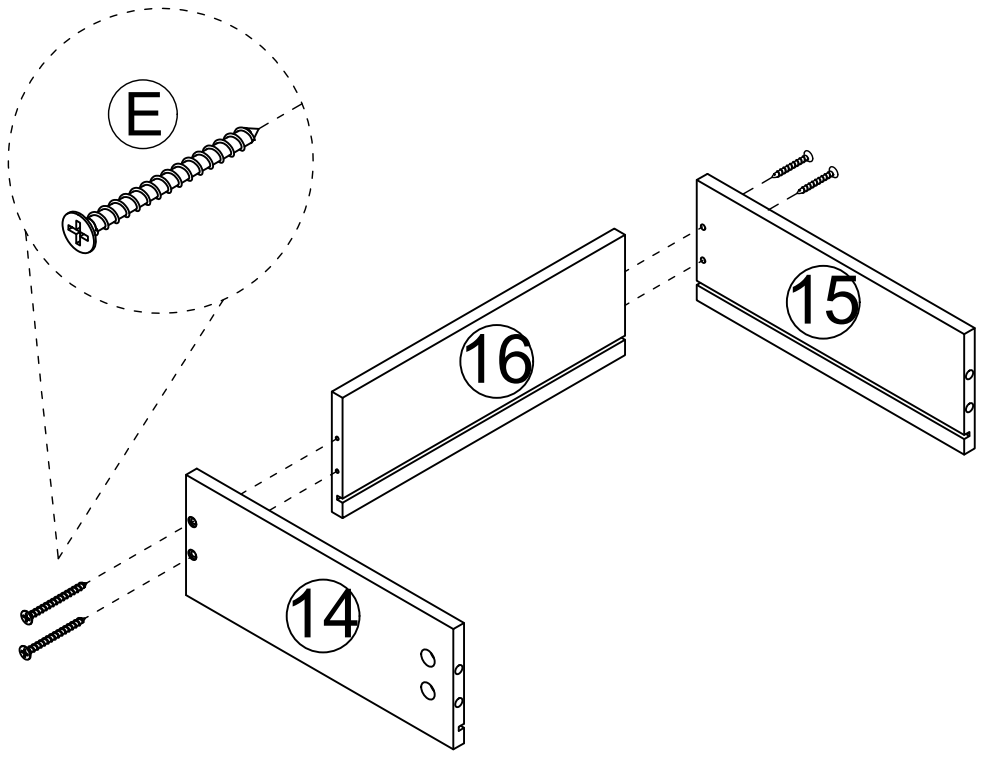


Step 1

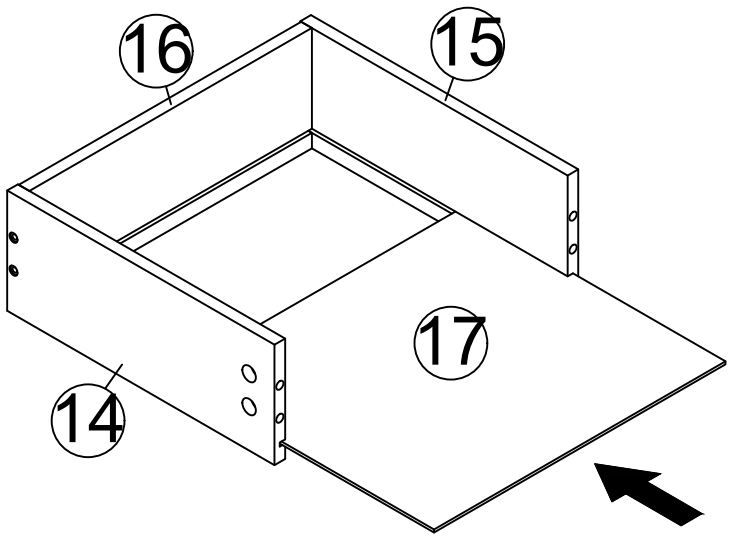



Step 2

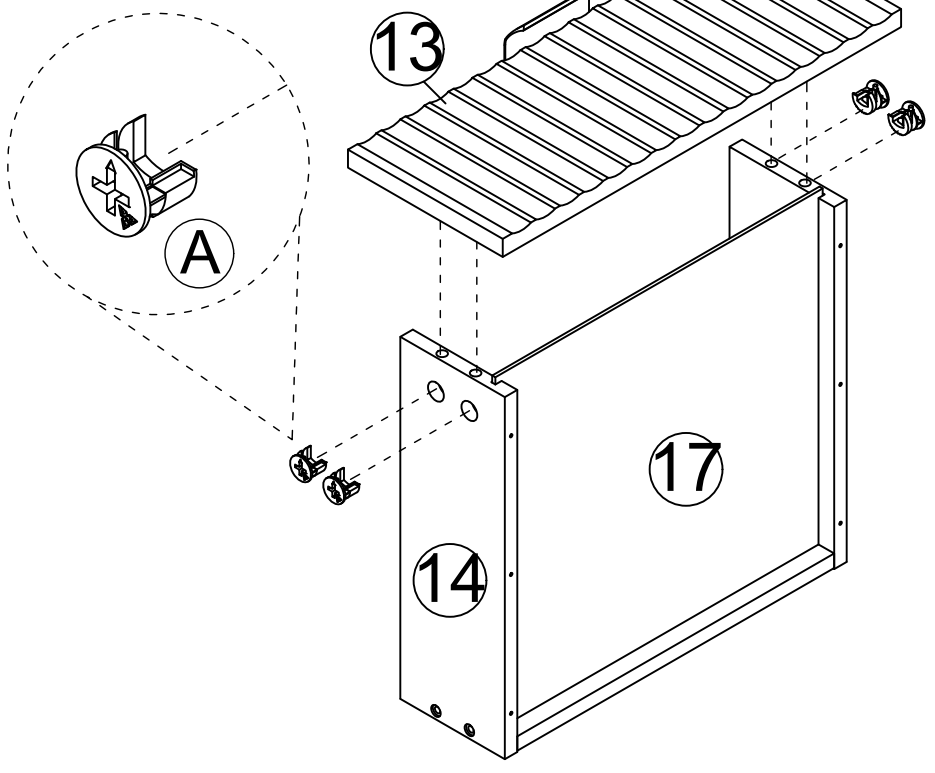

Step 3

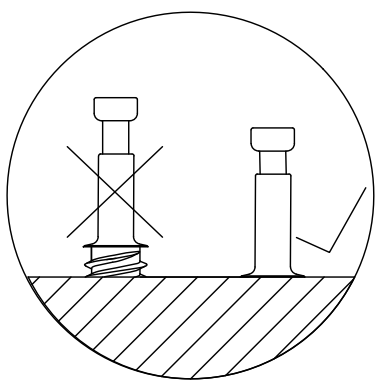

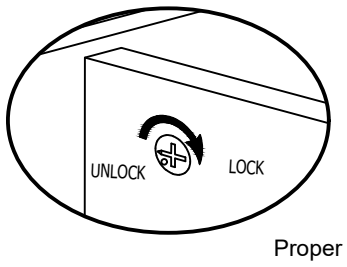

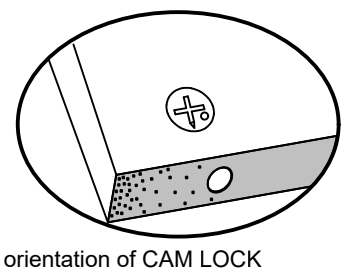


Proper orientation of CAM LOCK

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

Board Identification

Not actual size

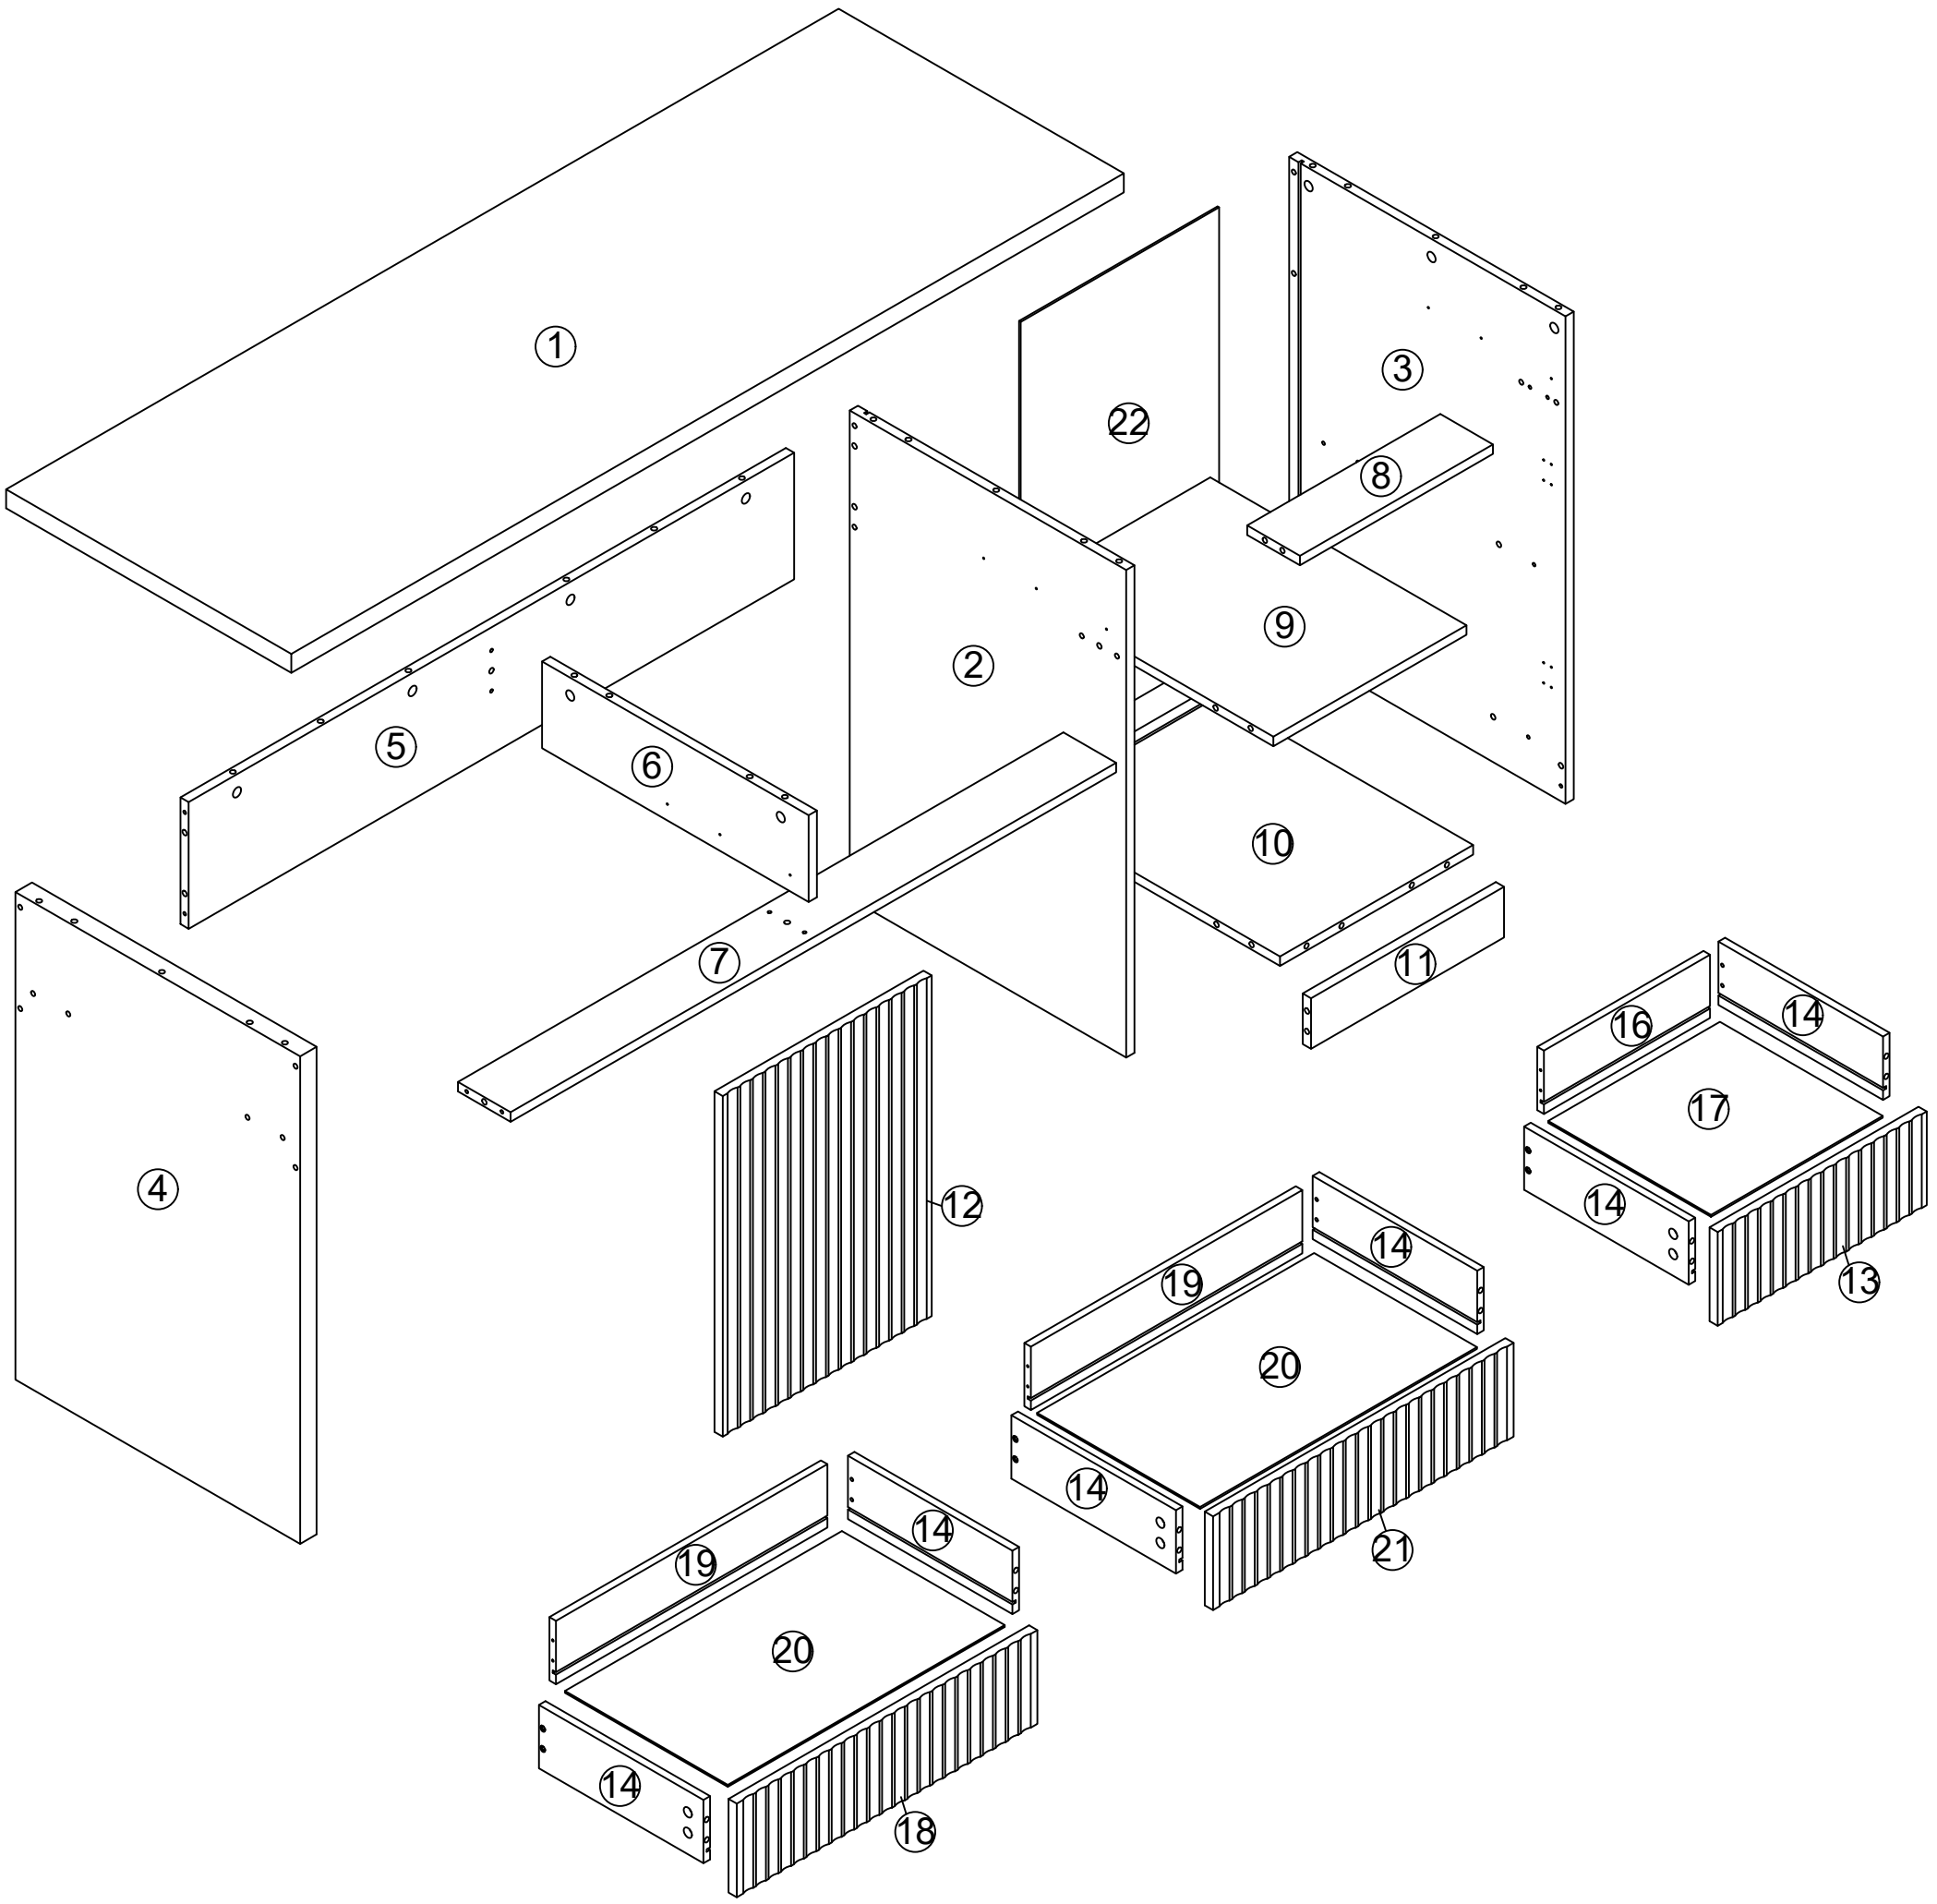


Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


Part List

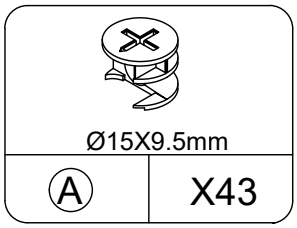


CAM LOCK
spare:3

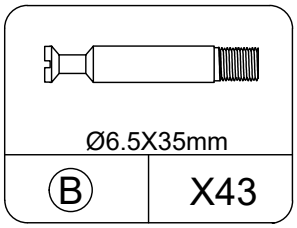


CAM BOLT
spare:3

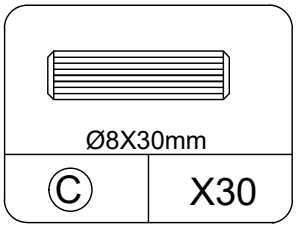


WOOD DOWEL
spare:3

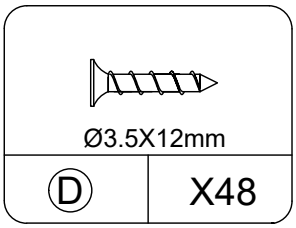


SCREW
spare:3

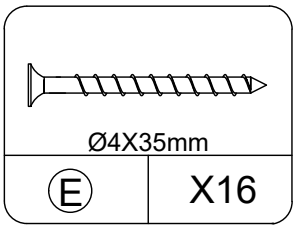


SCREW
spare:1

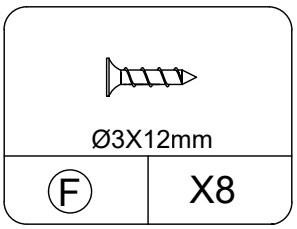


SCREW
spare:1

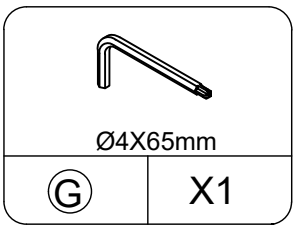


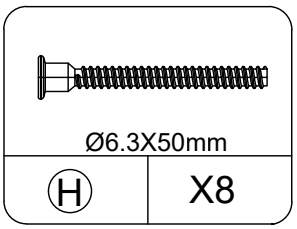


SCREW
spare:1

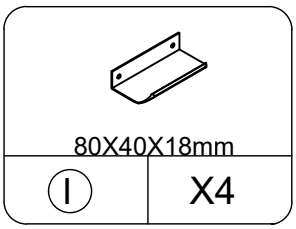


HANDLE

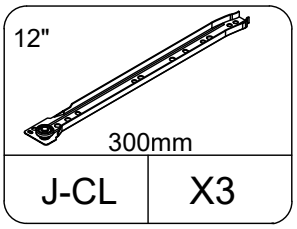


LEFT CABINET MEMBER

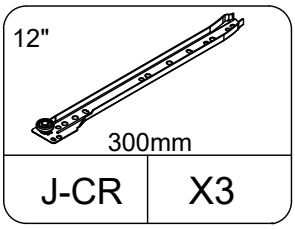


RIGHT CABINET MEMBER

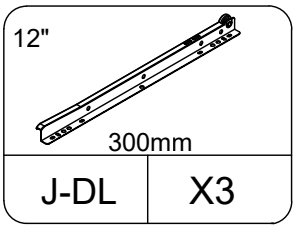


LEFT DRAWER RUNNER

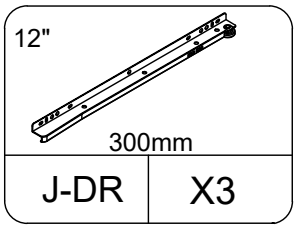


RIGHT DRAWER RUNNER

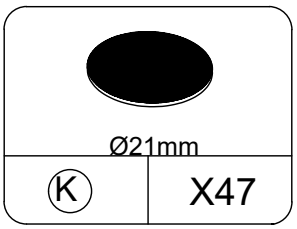


PERFECT STICKER
spare:3

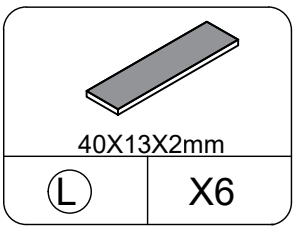

NON SLIP MATS
spare:1

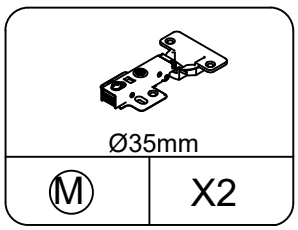


HINGE

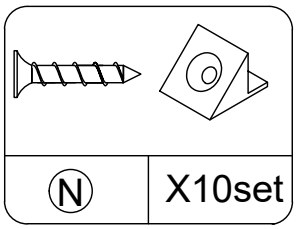

BACK PANEL BUCKLE
spare:1


Board Identification

Not actual size

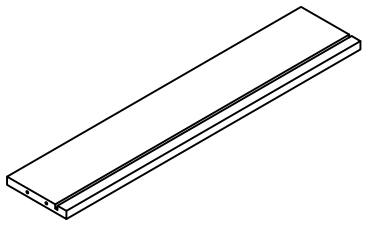


19

DRAWER BACK
Qty:2

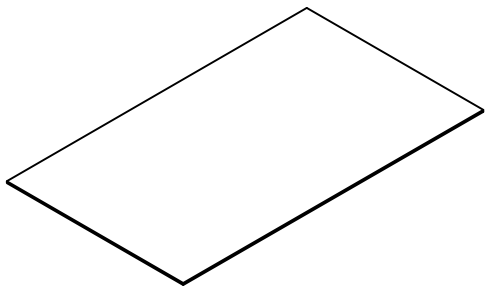


20

DRAWER BOTTOM
Qty:2

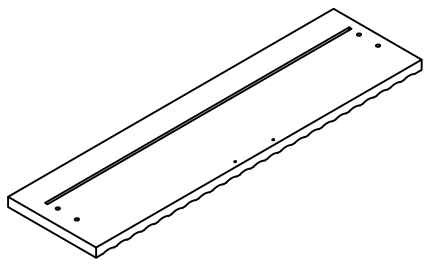

21

DRAWER FRONT
Qty:1

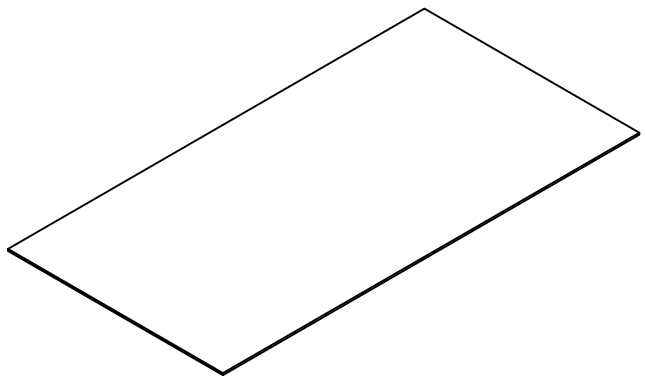


22

BACK PANEL
Qty:1


Board Identification

Not actual size

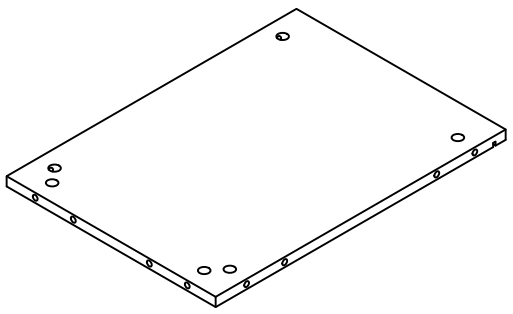


10

BOTTOM
Qty:1

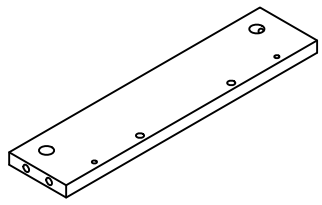


11

STOOL BACK APRON
Qty:1

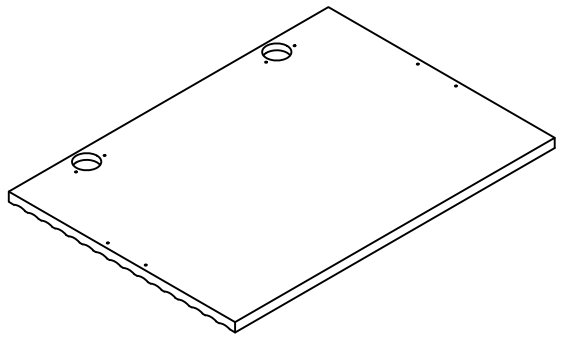


12

DOOR
Qty:1

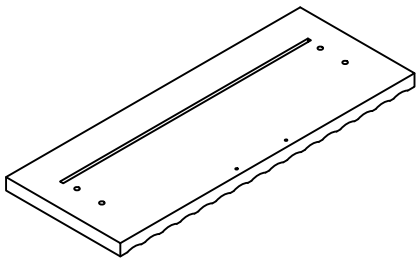


13

DRAWER FRONT
Qty:1

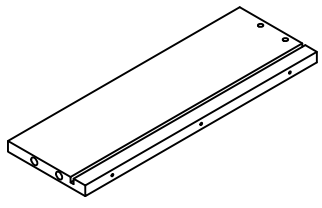


14

LEFT DRAWER SIDE
Qty:3

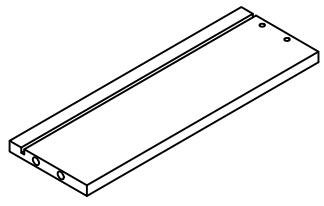


15

RIGHT DRAWER SIDE
Qty:3

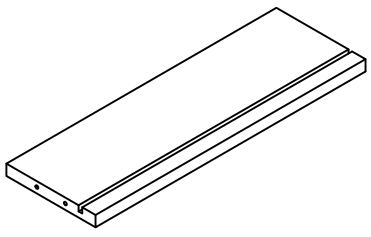


16

DRAWER BACK
Qty:1

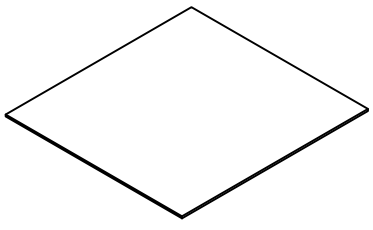

17

DRAWER BOTTOM
Qty:1

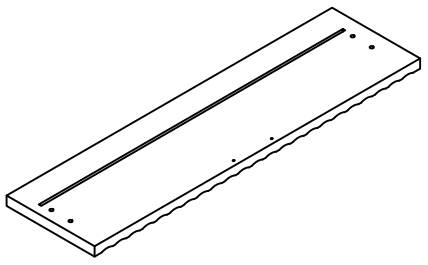


18


DRAWER FRONT
Qty:1

Board Identification


Not actual size

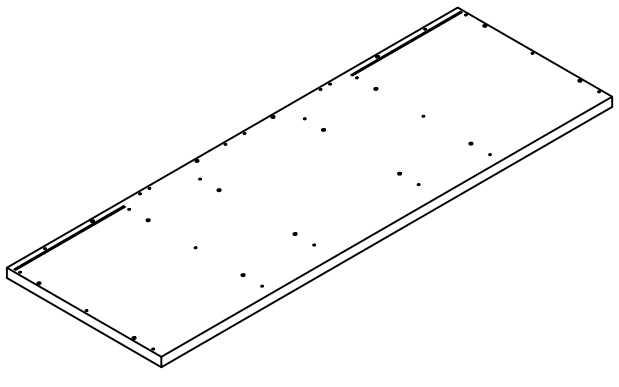


① DESK TOP
Qty:1

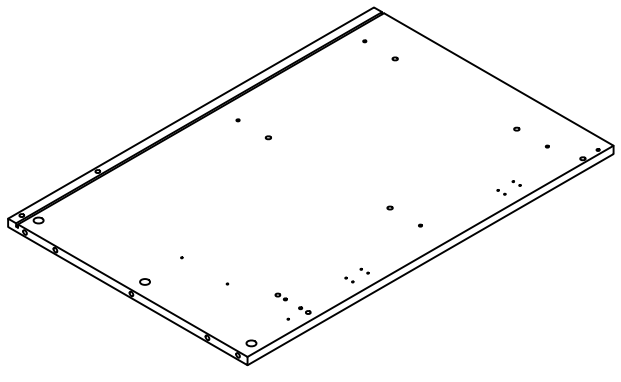


② LEFT SIDE PANE
Qty:1

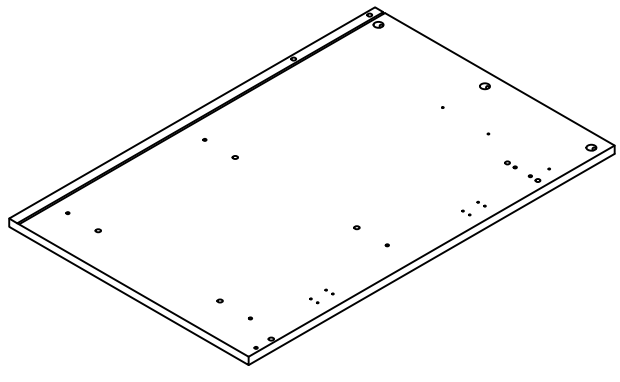


③ MIDDLE SIDE PANE
Qty:1

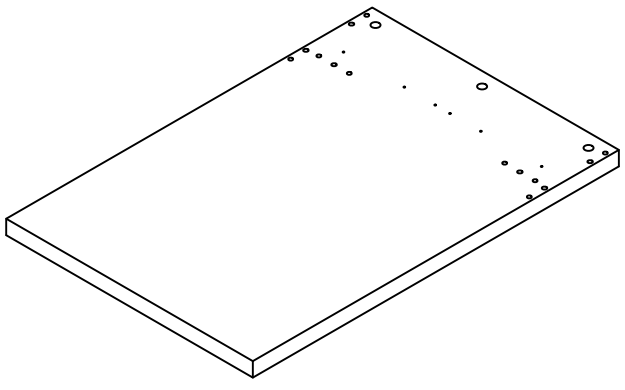


④ RIGHT SIDE PANEL
Qty:1

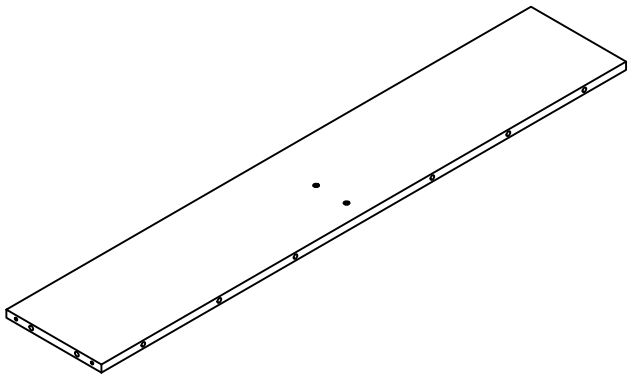


⑤ BACK SLAT
Qty:1

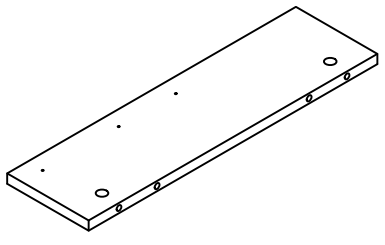


⑥ PARTITION
Qty:1

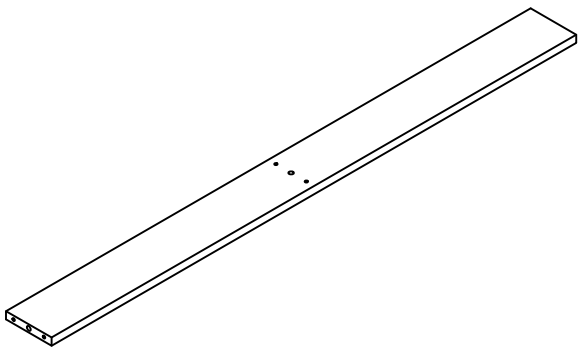

⑦ FRONT SLAT
Qty:1

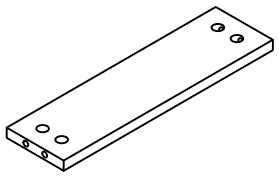


⑧ LEFT FRONT RAIL
Qty:1

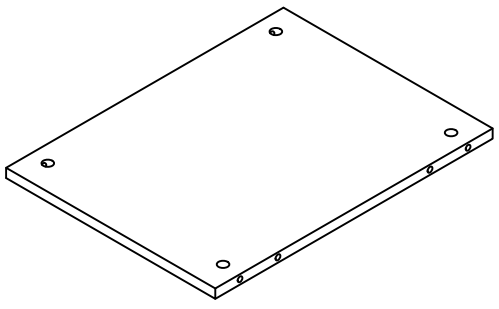

⑨ FIXED SHELF
Qty:1

Before You Start

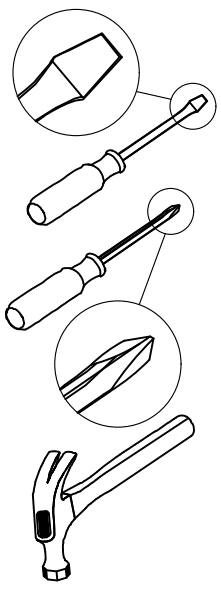


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**


- Open your item in the area you plan to keep it to avoid excessive heavy lifting.

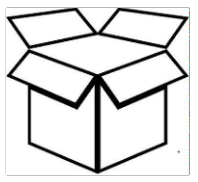

- Identify, sort and count the parts before attempting assembly.




- Compression dowels are lightly tapped in with a hammer.

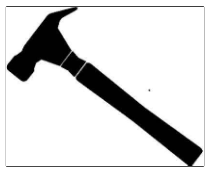


- Slides are labeled with an **R** (right) and **L** (left) for proper placement.


- Make sure to always face the point on the top of the Cam Lock towards the outer edge.

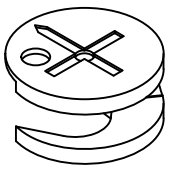

- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.

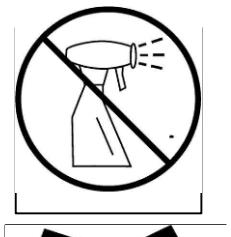

-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.

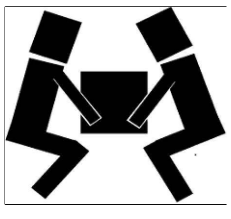


- Do NOT use harsh chemicals or abrasive cleaners on this item.

- Never push, pull, or drag your furniture.

DA0301

There are two ways to choose to mount the door on the right side. If you want to mount the cabinet door to the left side, check the installation steps on the other side of the manual.

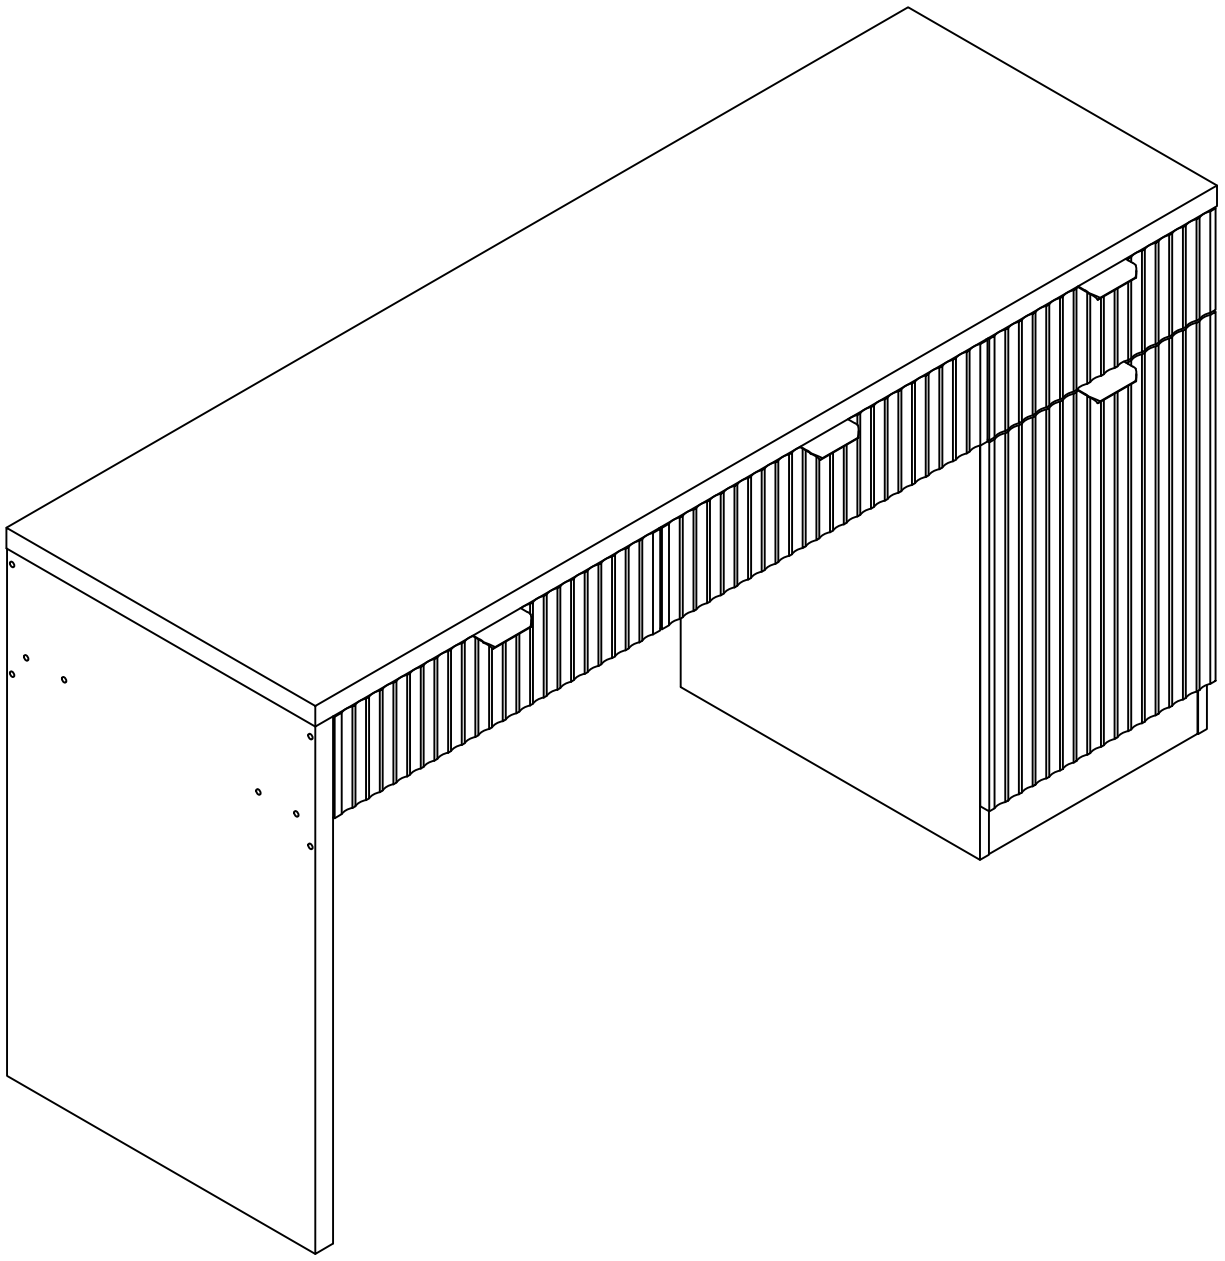

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.