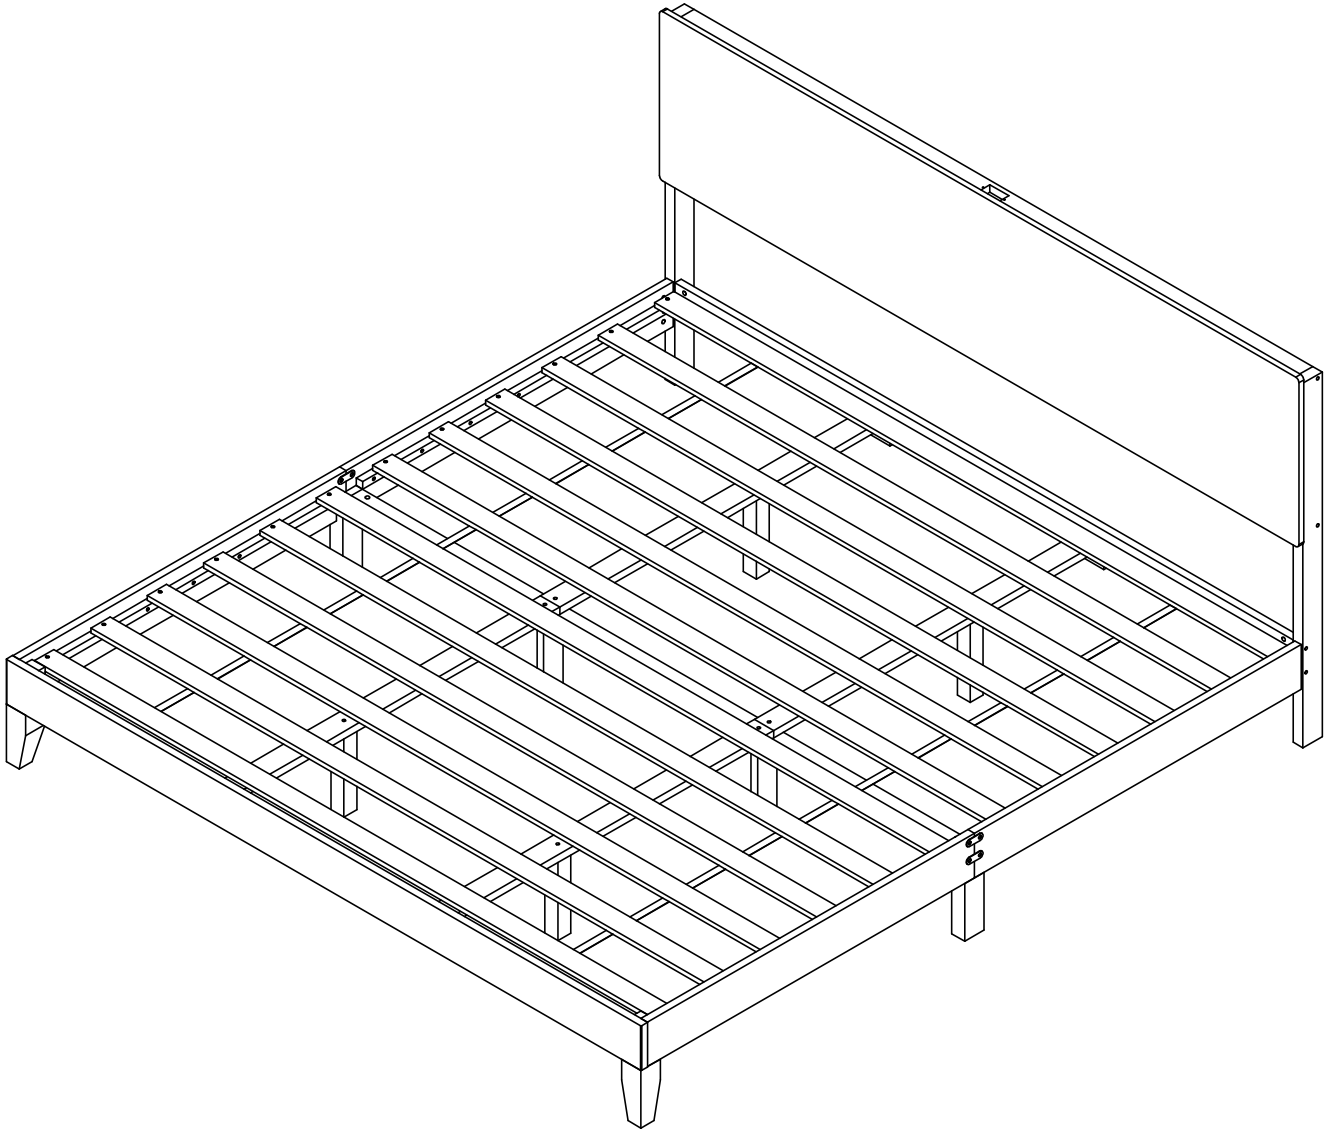
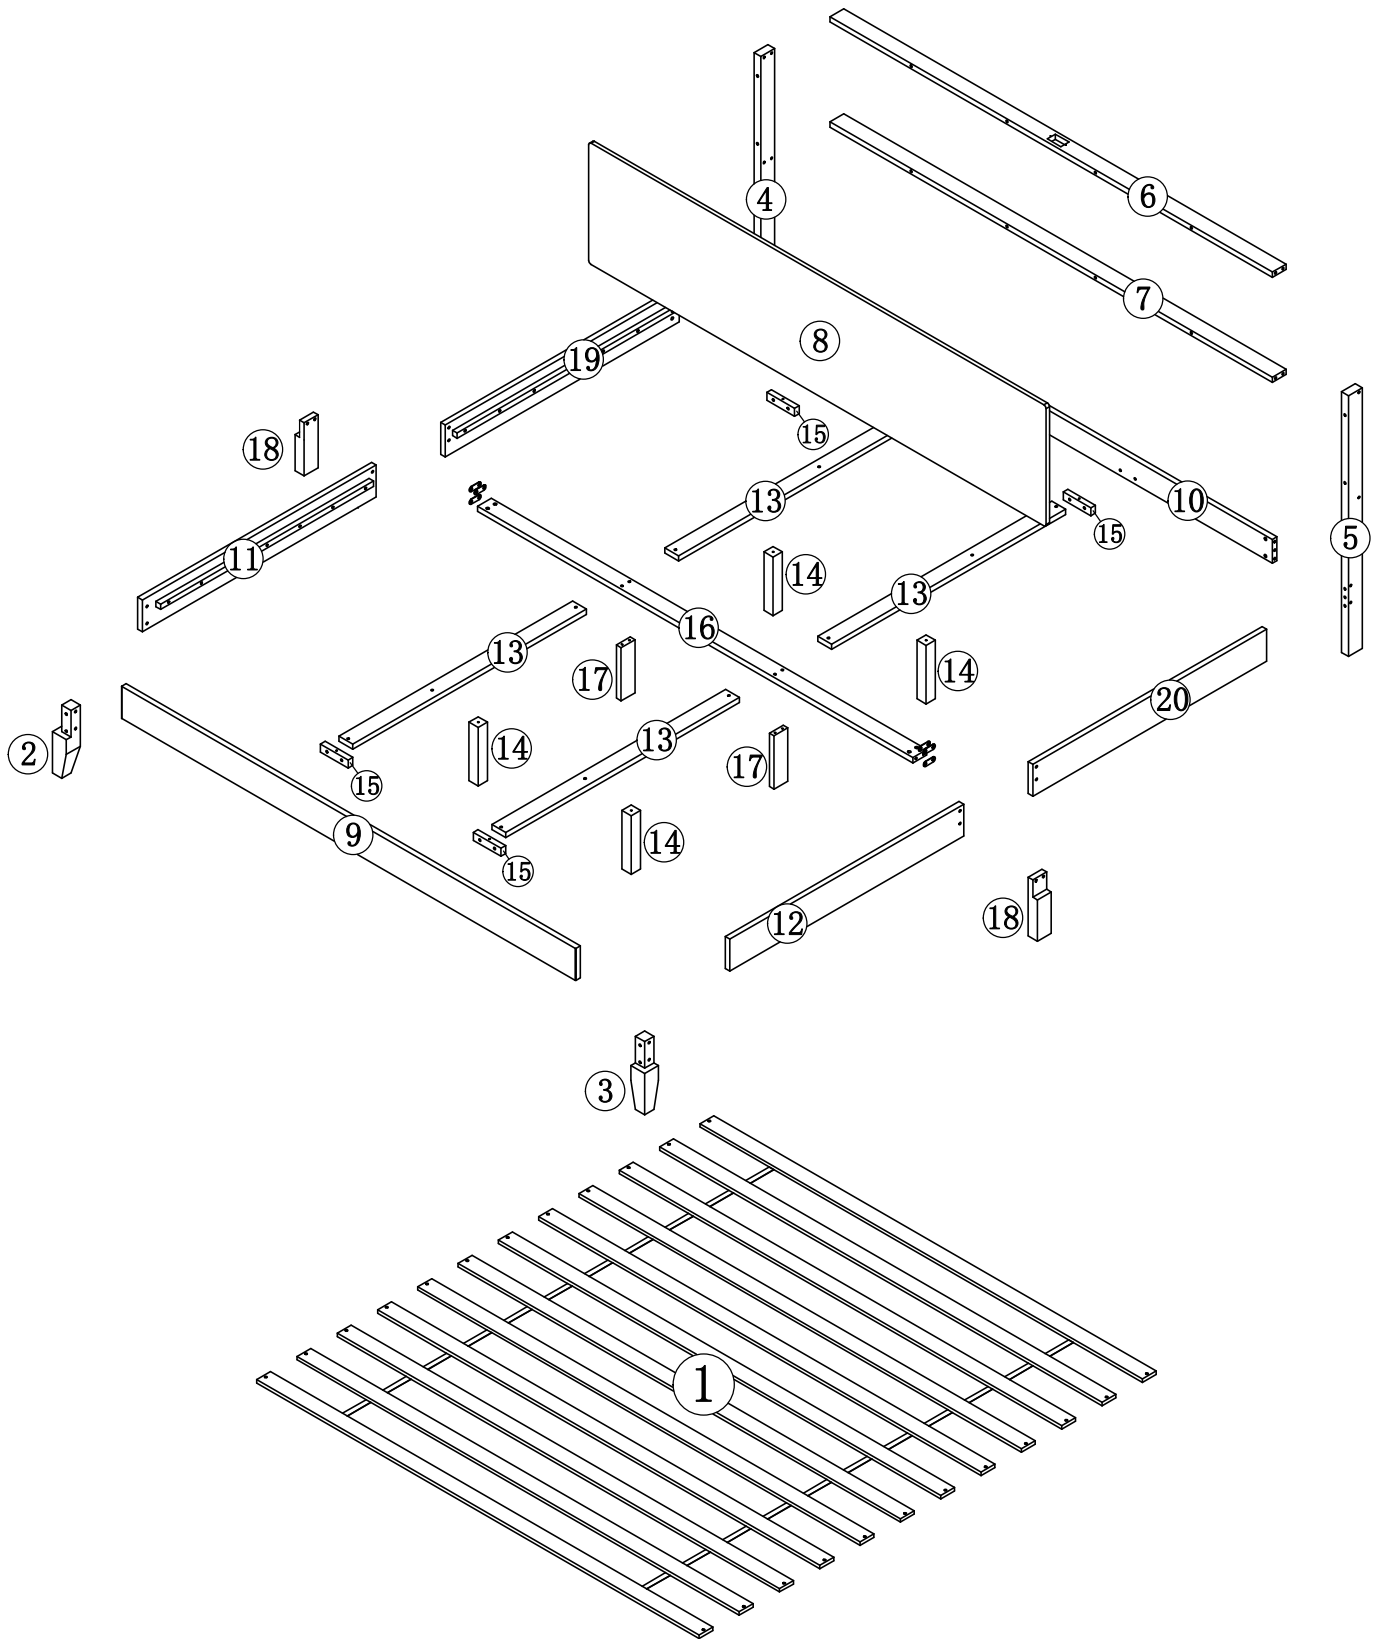


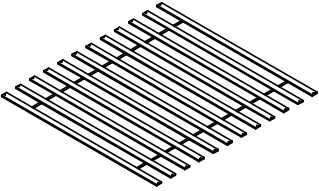


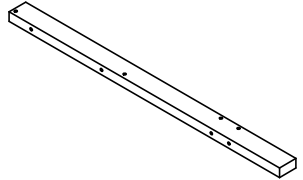
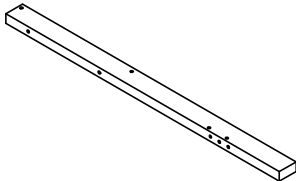
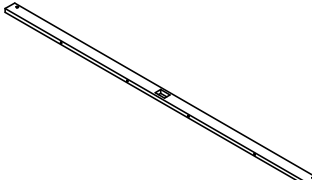
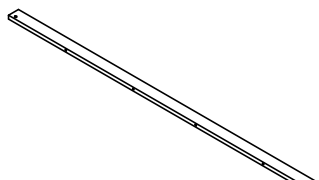
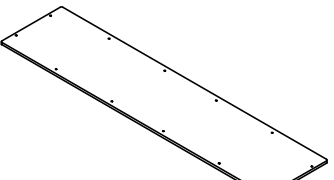
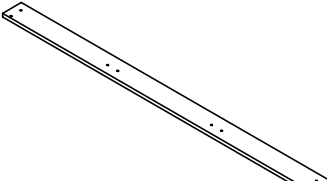
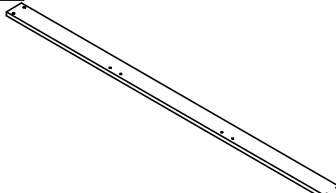
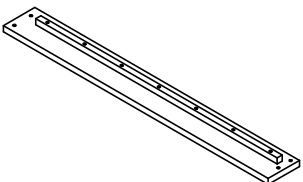
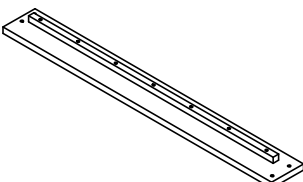
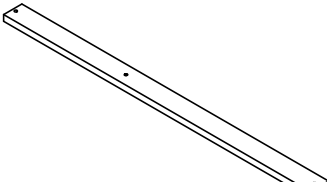
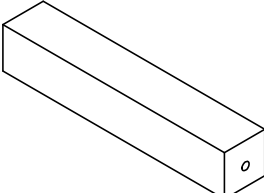
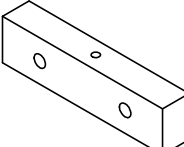
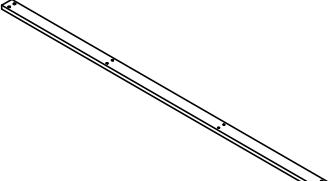
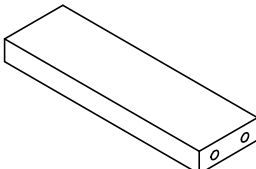
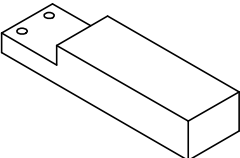
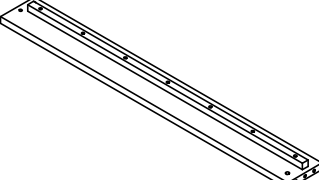
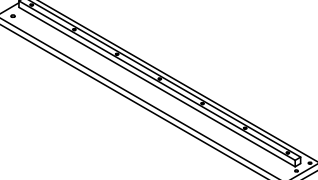
Assembly Instruction















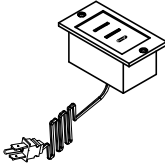
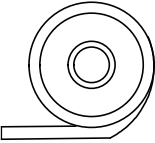



NOTE:

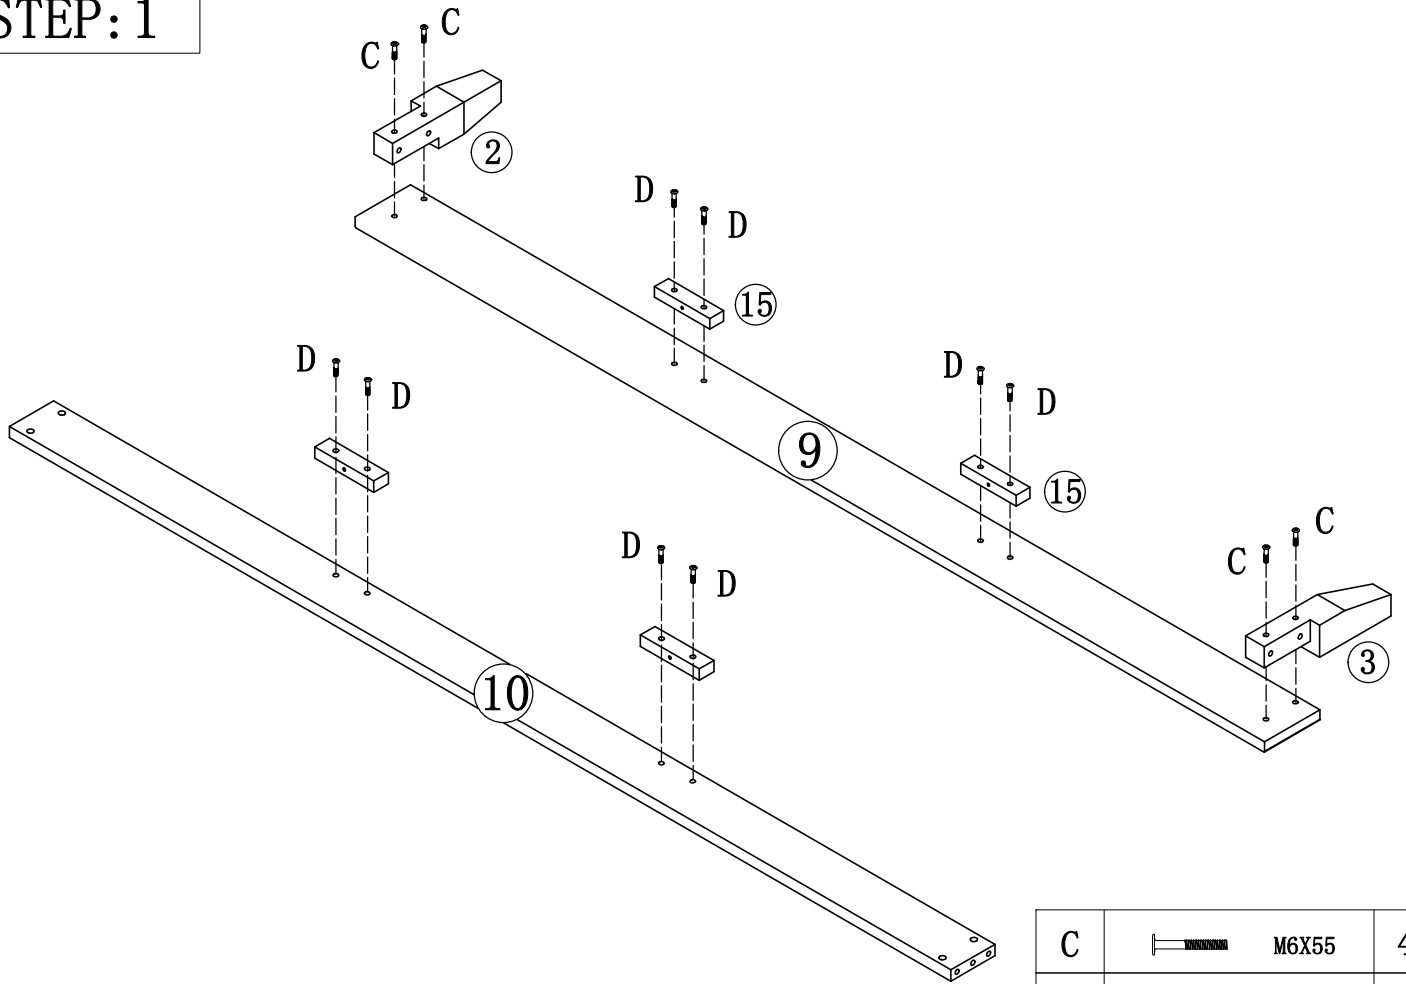
1. When receiving the goods, please confirm the product according to the instructions. Once you find less pieces, please provide relevant pictures to contact us. We will deal with it in the time.
2. Please install goods with the instruction manual.
3. It is recommended that the installation should not be too tight to adjust easily. After the structure is installed, firm the interface for more stability.
4. Warning: Do not jump off / on or hang from this loft/Bunk bed; The surface of the mattress must be at least 5" below the upper edge of the guardrails for safety reason



<p>1</p>  <p>1930X60X13=12 1PC</p>	<p>2</p>  <p>255X60X60 1PC</p>	<p>3</p>  <p>255X60X60 1PC</p>	<p>4</p>  <p>980X60X30 1PC</p>
<p>5</p>  <p>980X60X30 1PC</p>	<p>6</p>  <p>1920X60X20 1PC</p>	<p>7</p>  <p>1920X60X20 1PC</p>	<p>8</p>  <p>1985X455X15 1PC</p>
<p>9</p>  <p>1970X120X20 1PC</p>	<p>10</p>  <p>1920X90X20 1PC</p>	<p>11</p>  <p>1015X120X40 1PC</p>	<p>12</p>  <p>1015X120X40 1PC</p>
<p>13</p>  <p>1015X60X20 4PCS</p>	<p>14</p>  <p>220X40X40 4PCS</p>	<p>15</p>  <p>120X30X20 4PCS</p>	<p>16</p>  <p>1890X60X20 1PC</p>
<p>17</p>  <p>200X60X20 2PCS</p>	<p>18</p>  <p>220X60X40 2PCS</p>	<p>19</p>  <p>1015X120X40 1PC</p>	<p>20</p>  <p>1015X120X40 1PC</p>

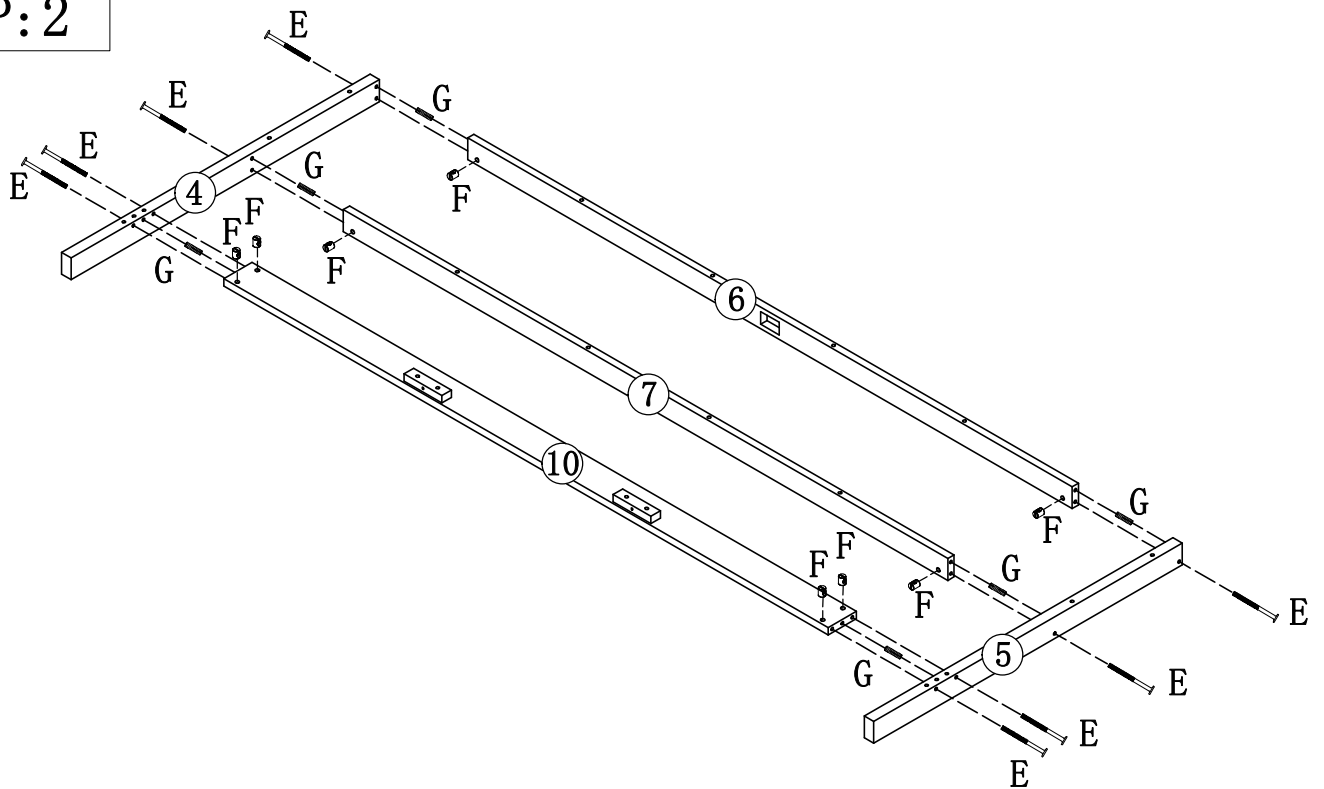
<p>A-8PCS</p>  <p>ϕ 7x50</p>	<p>B-4PCS</p>  <p>ϕ 7x70</p>	<p>C-8PCS</p>  <p>M6x55</p>	<p>D-8PCS</p>  <p>M6x35</p>
<p>E-20PCS</p>  <p>M6x70</p>	<p>F-16PCS</p>  <p>ϕ 10x13</p>	<p>G-8PCS</p>  <p>ϕ 8x30</p>	<p>H-4PCS</p>  <p>M6x100</p>
<p>I-4PCS</p>  <p>M6x12</p>	<p>J-4PCS</p>  <p>M6x20</p>	<p>K-2PCS</p>  <p>ϕ 3x14</p>	<p>L-6PCS</p> 
<p>M-4PCS</p>  <p>M6x80</p>	<p>N-24PCS</p>  <p>ϕ 4x30</p>	<p>O-1PC</p> 	<p>P-2PCS</p> 
<p>Q-2PCS</p>  <p>M4</p>			

STEP: 1



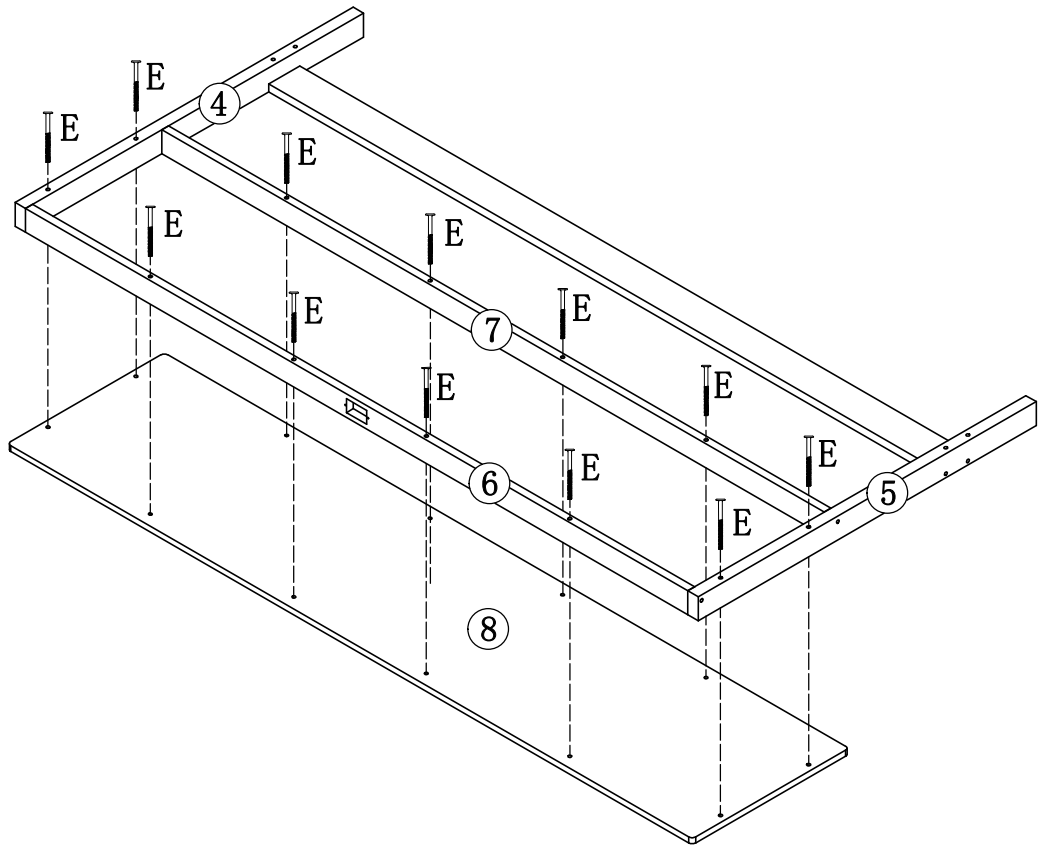
C		M6X55	4
D		M6X35	8

STEP: 2



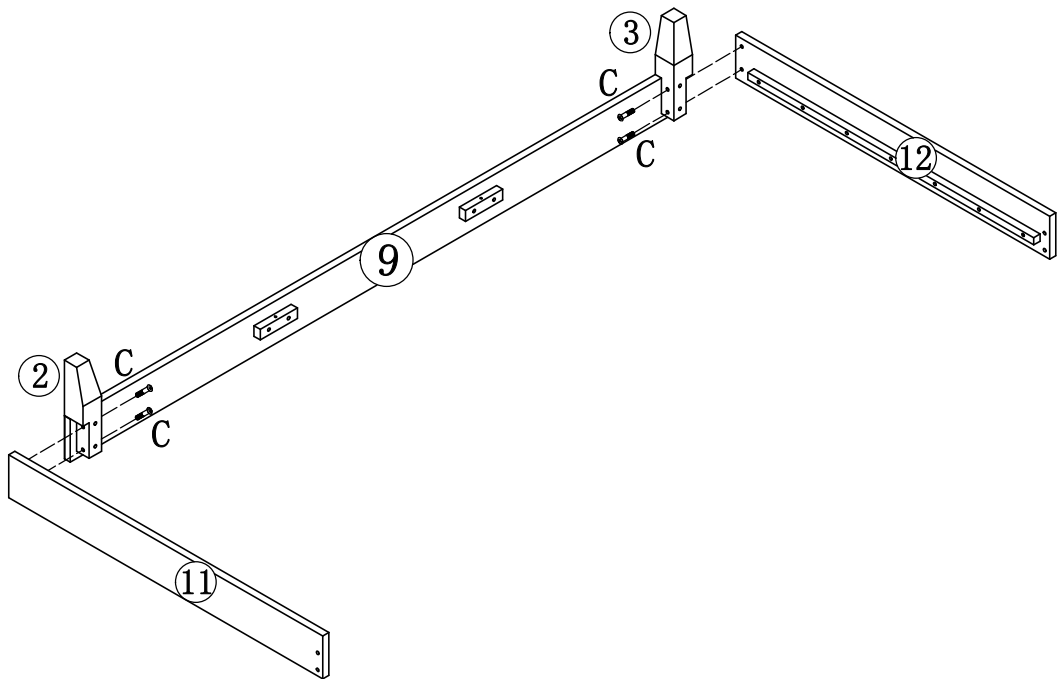
E		M6X70	8
F		φ 10X13	8
G		φ 8x30	6

STEP: 3



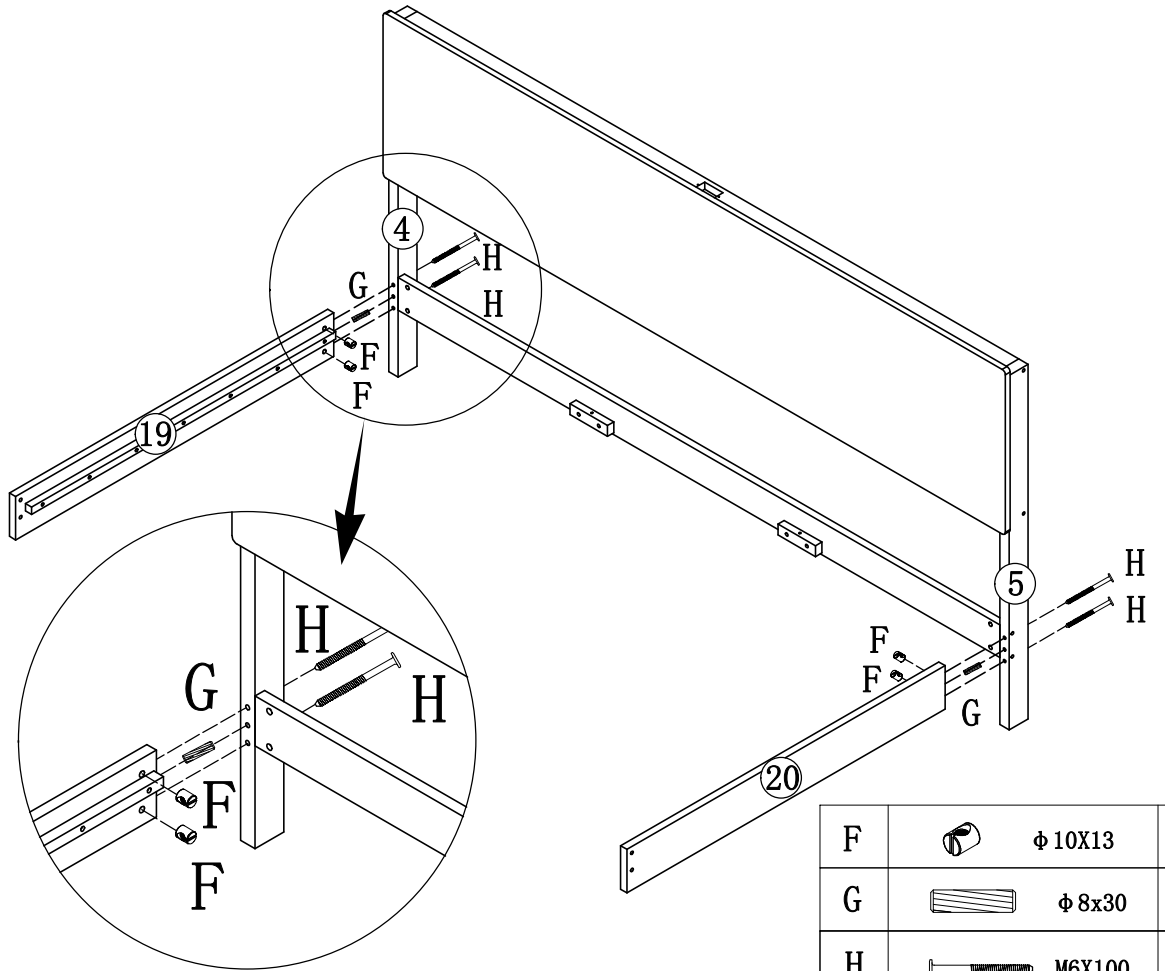
E		M6X70	12
---	---	-------	----

STEP: 4



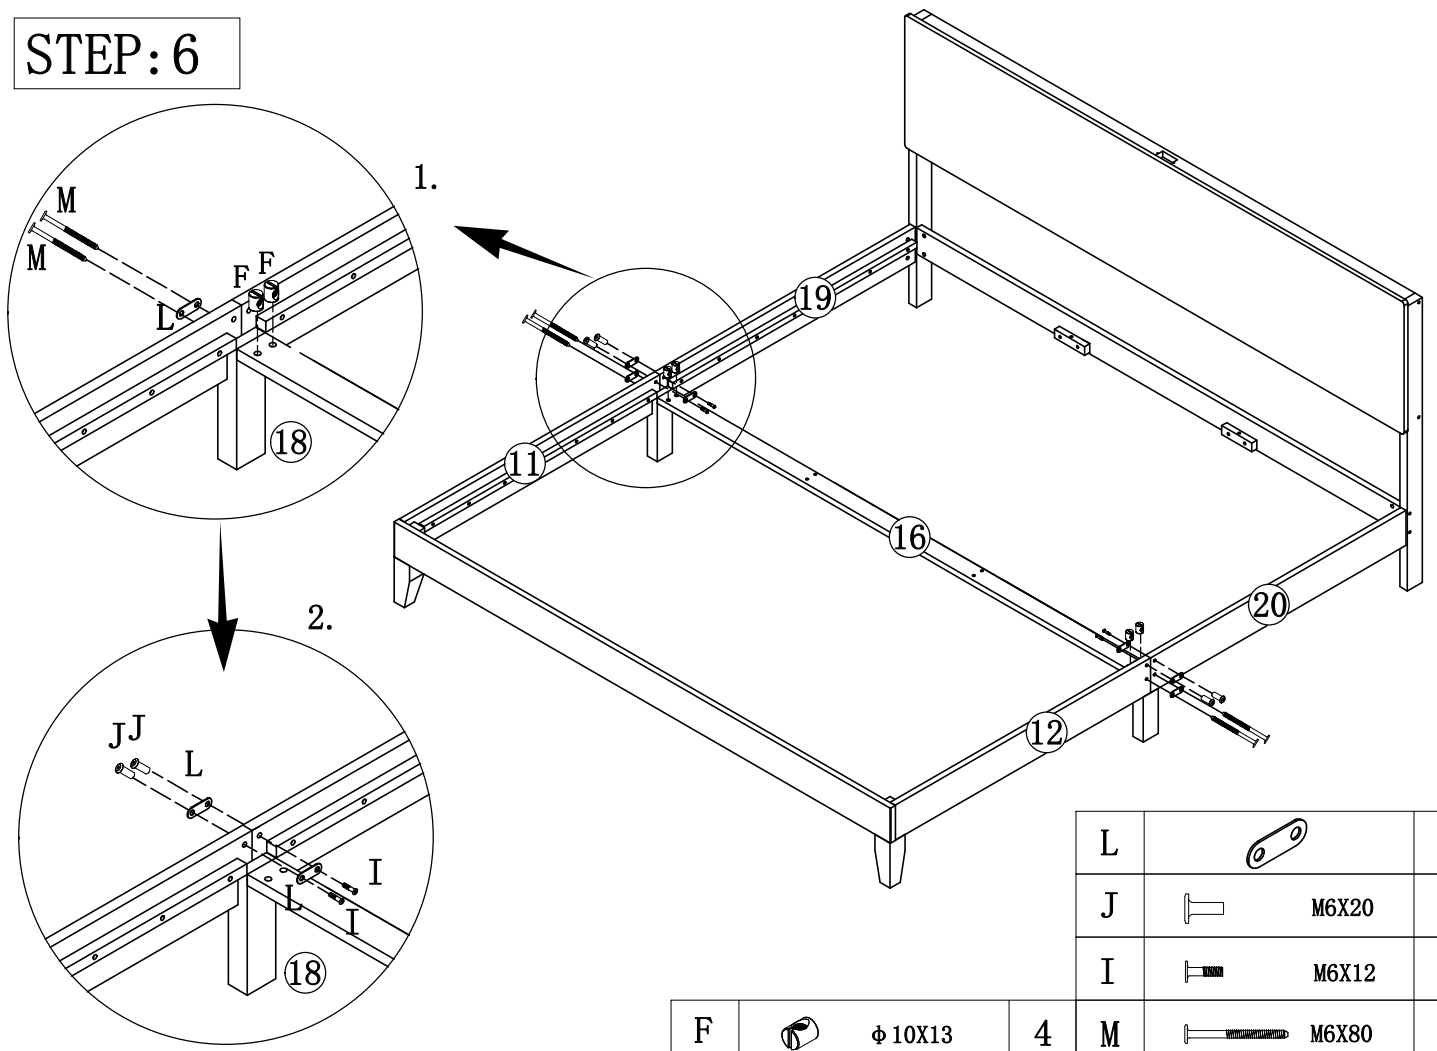
C		M6X55	4
---	---	-------	---

STEP: 5



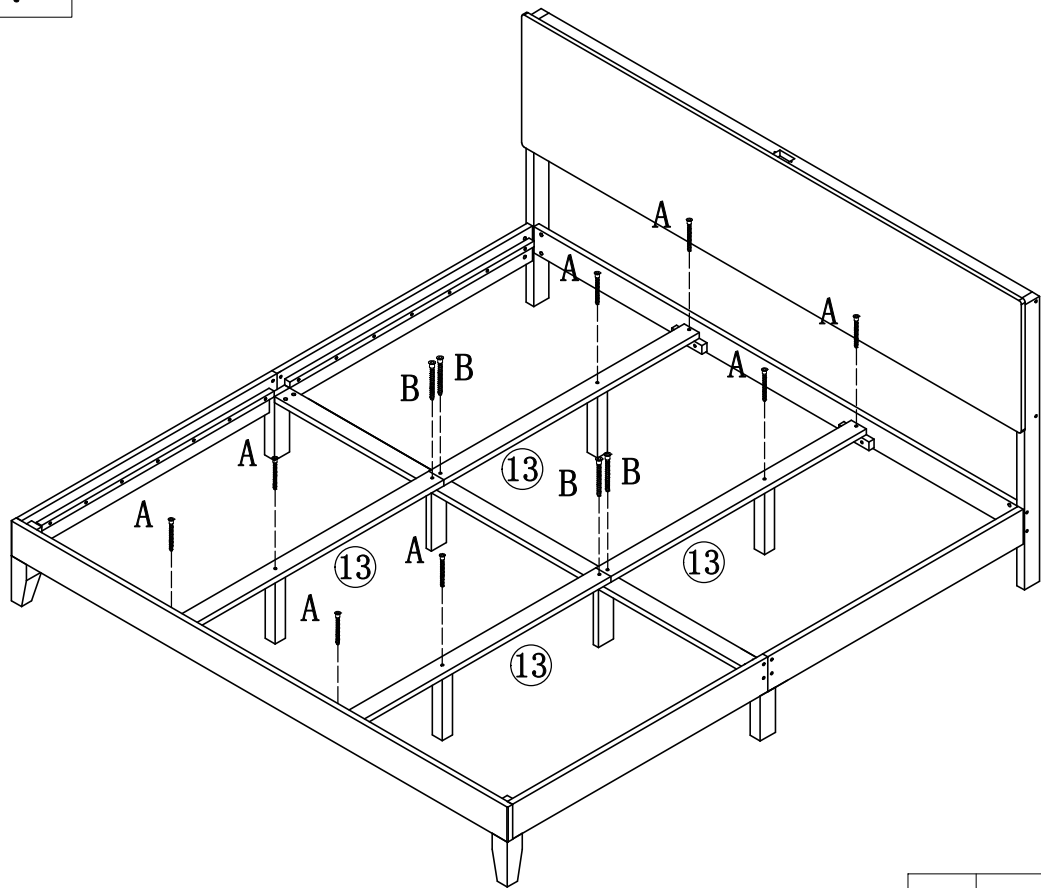
F		φ 10X13	4
G		φ 8x30	2
H		M6X100	4



STEP: 6



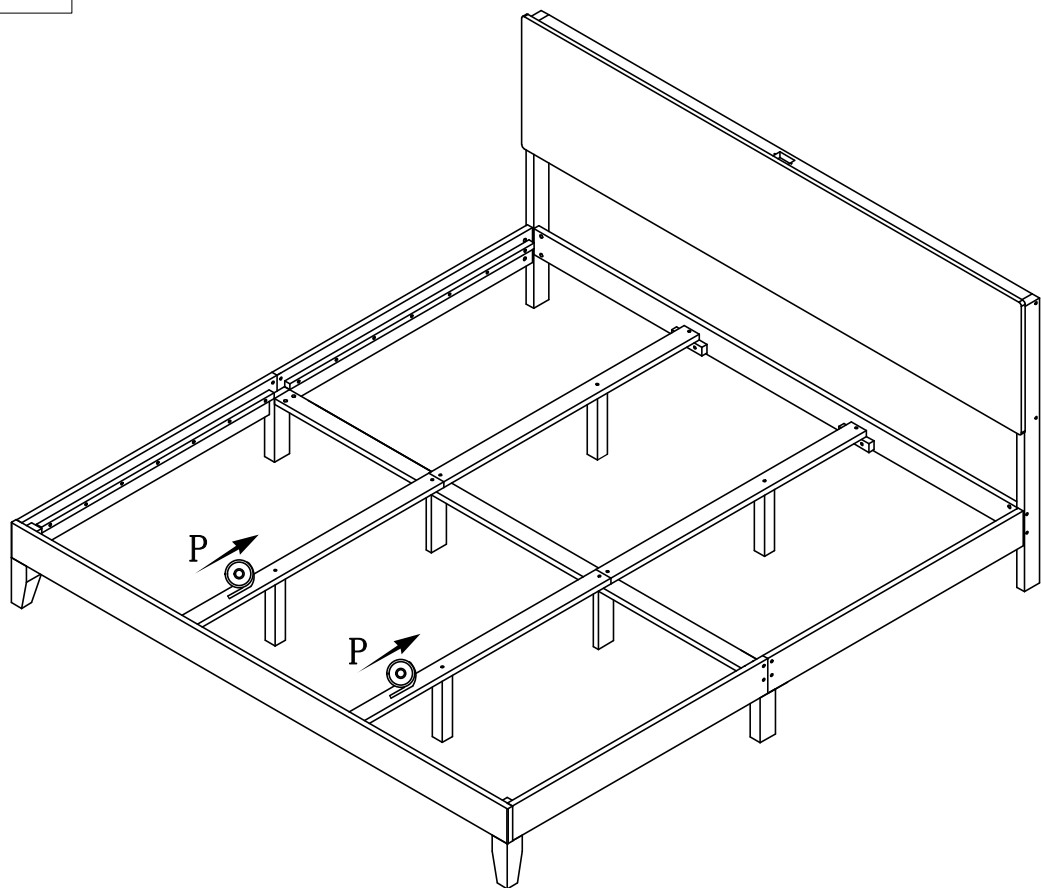
L			6
J		M6X20	4
I		M6X12	4
F		φ 10X13	4
M		M6X80	4


STEP: 7



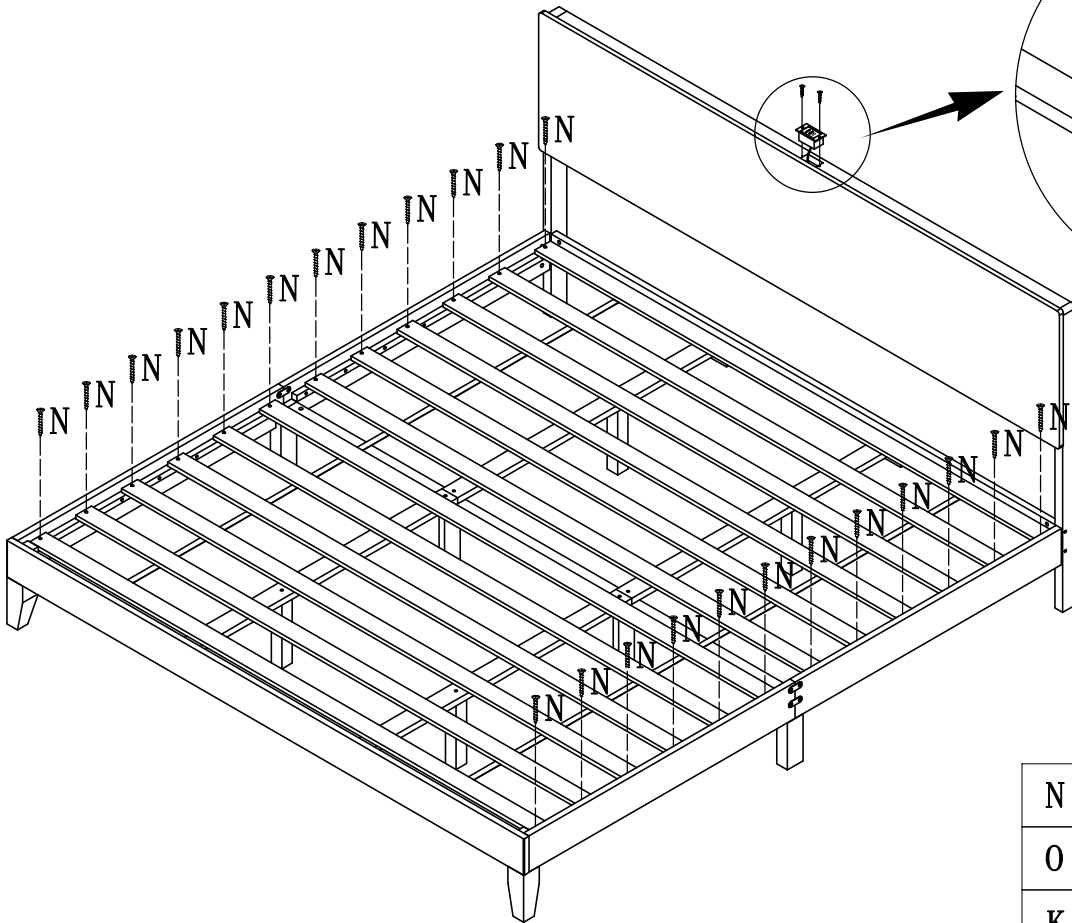
A	 $\phi 7 \times 50$	8
B	 $\phi 7 \times 70$	4




STEP: 8

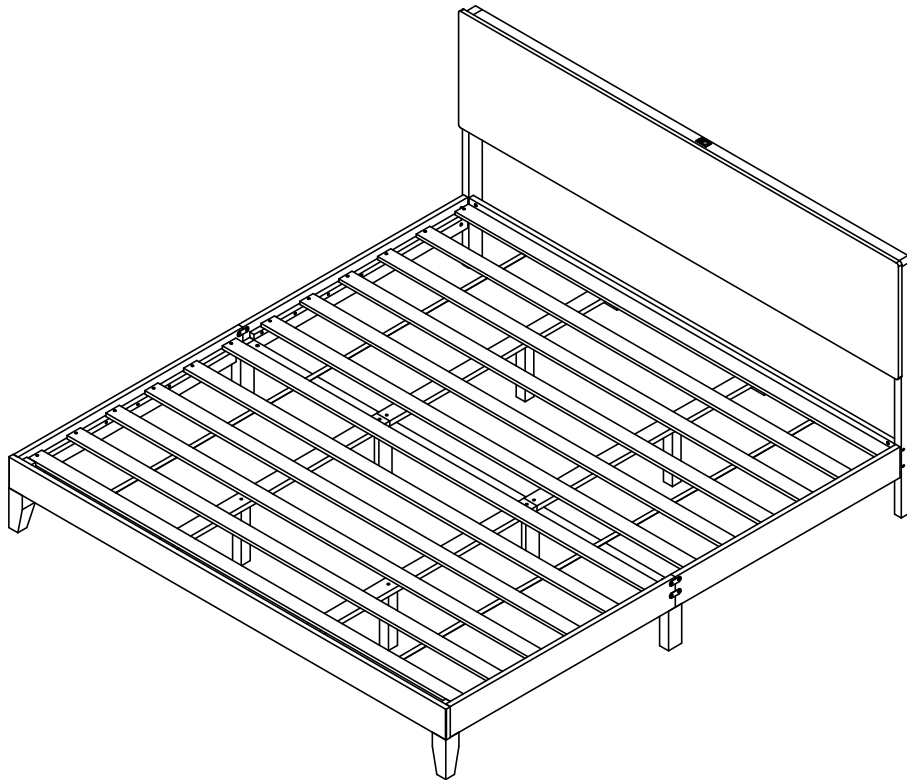


P		2
---	---	---

STEP: 9



N	 ϕ 4x30	24
O		1
K	 ϕ 3x14	2



CA WARNING: This product can expose you to chemicals including Wood Dust, which is known to the State of California to cause cancer. For more information go to <https://www.P65Warnings.ca.gov>