


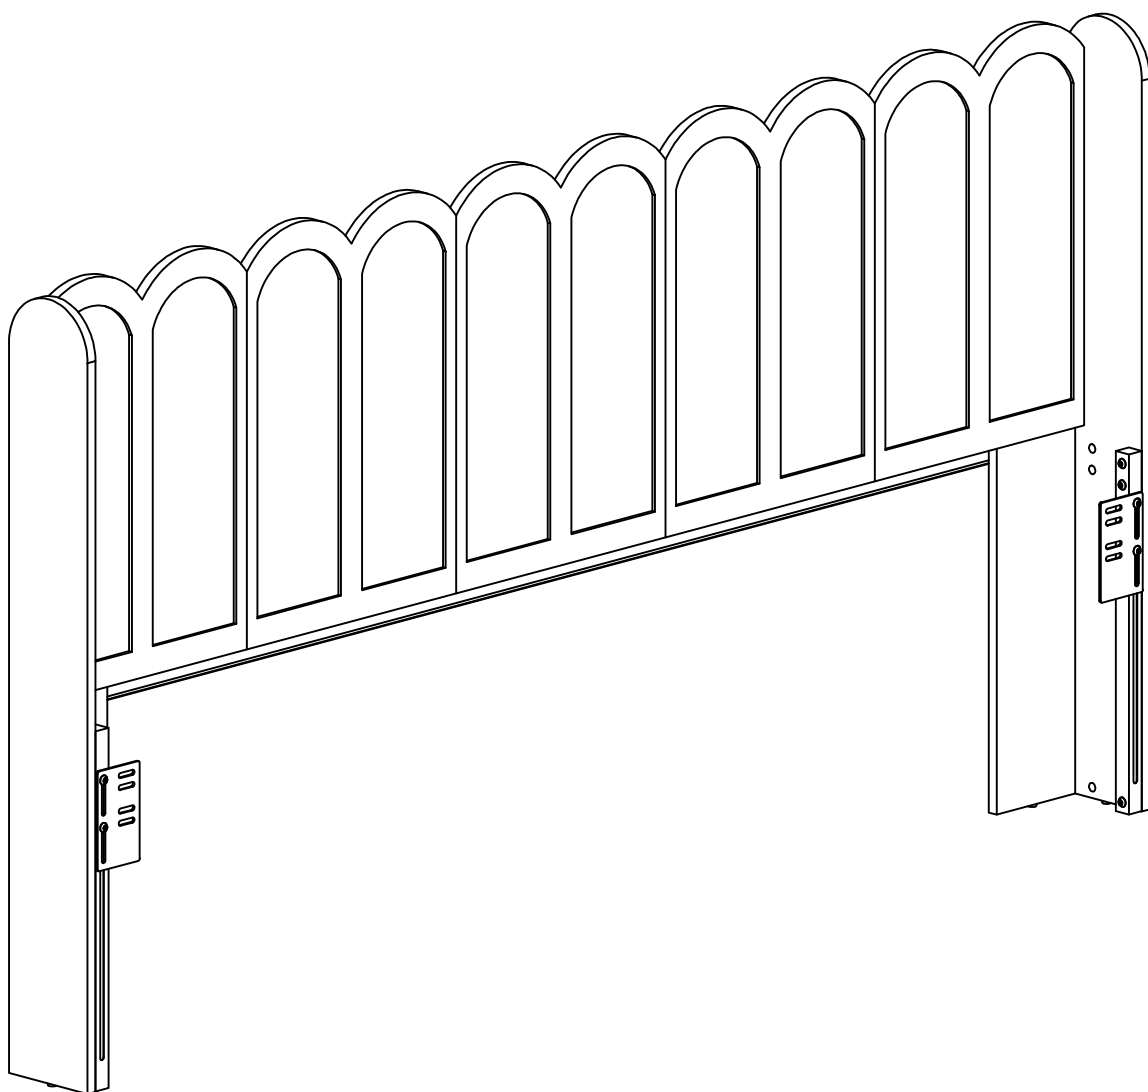
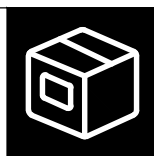
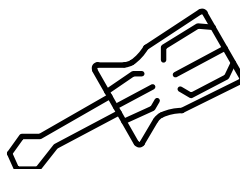
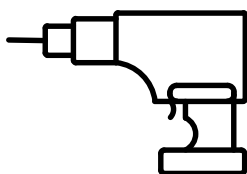



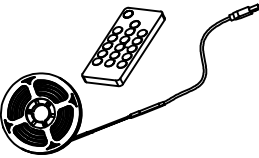




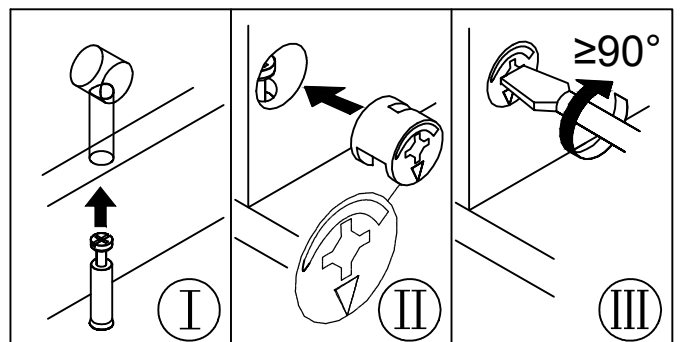

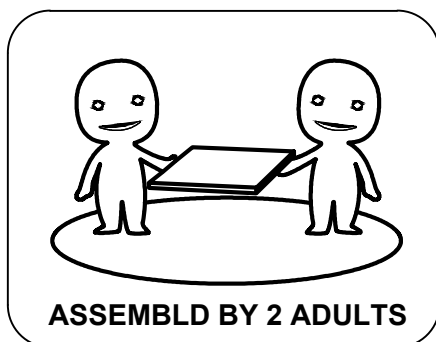


A×8PCS	B×8PCS	C×20PCS	D×28PCS	E×10PCS
 M6×35mm	 Ø15×12mm	 Ø6×30mm	 M6×23mm	 M6×35mm
F×4PCS	G×4PCS	H×1PC	I×1PC	J×1PC
 6mm	 M6mm		 M4mm	
K×4PCS	L×13PCS	M×4PCS	N×8PCS	
 M6×12mm			 Ø3×12mm	

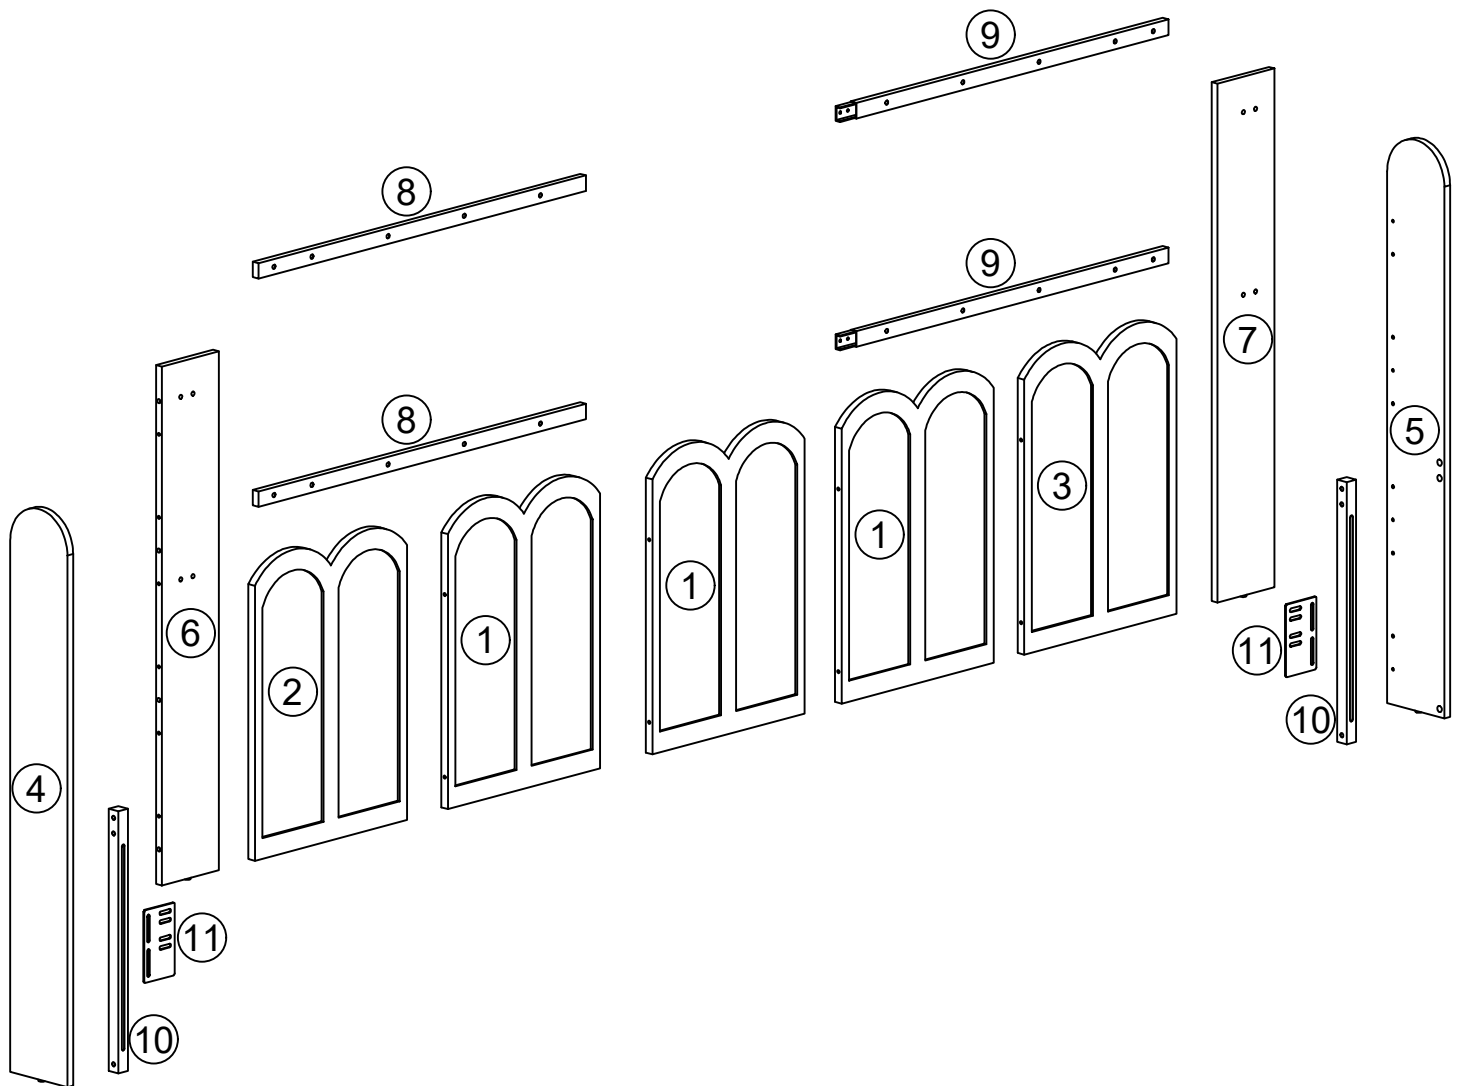

C×8PCS


Ø6×30mm

1.

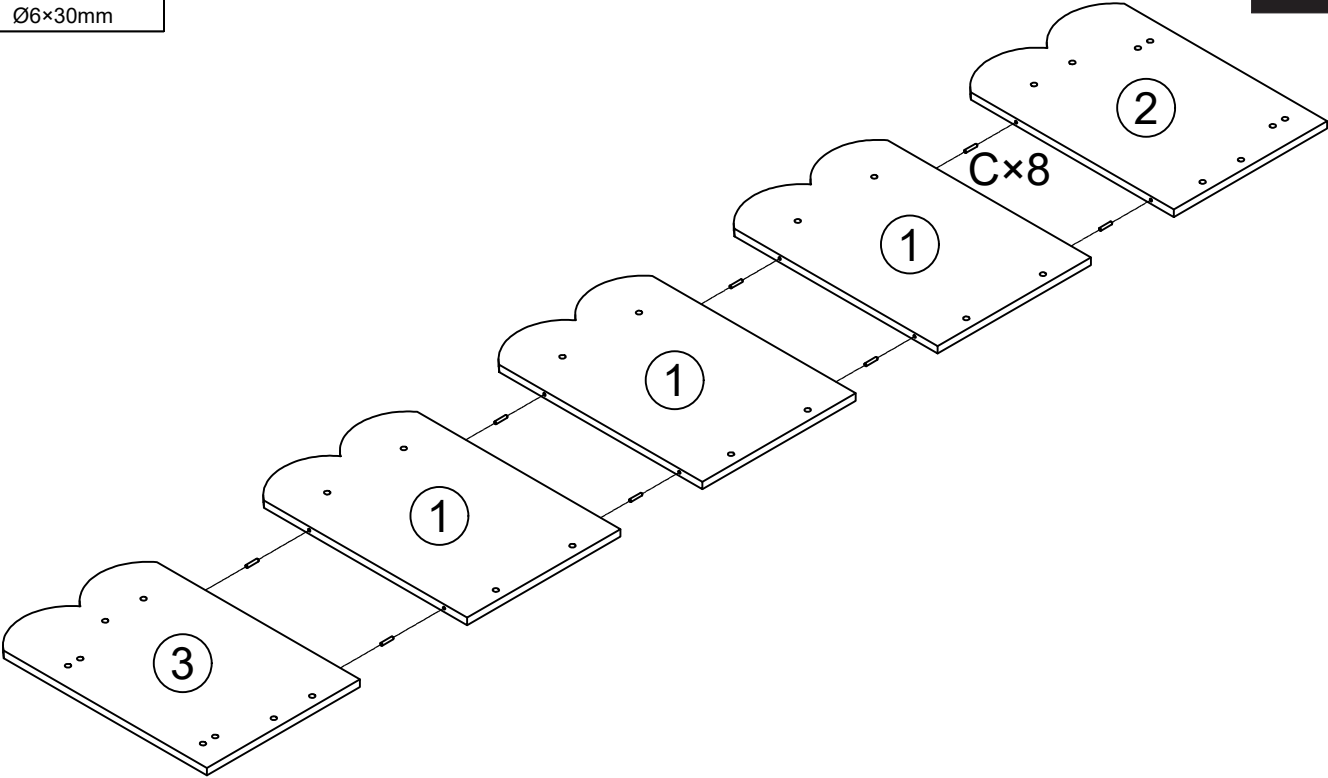

K×4PCS	I×1PC
	
M6×12mm	M4mm


2.

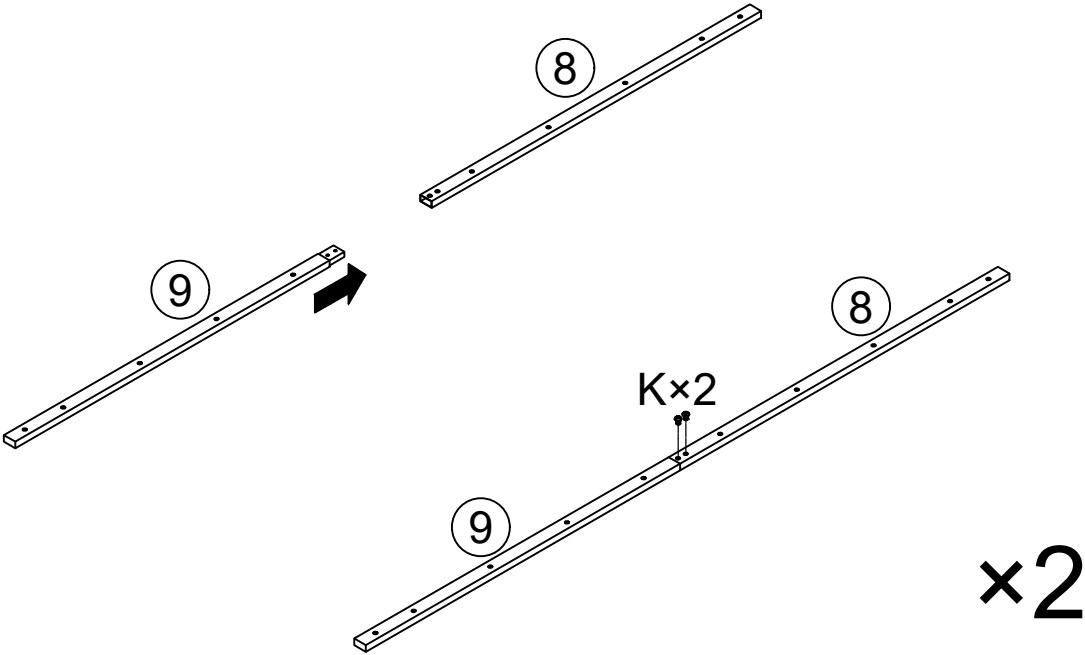


3.




Tips:All D screws are used here. The length of the D screws is 23mm. If E screws are used, it will cause damage to the wooden board.

D×20PCS	I×1PC
	
M6×23mm	M4mm

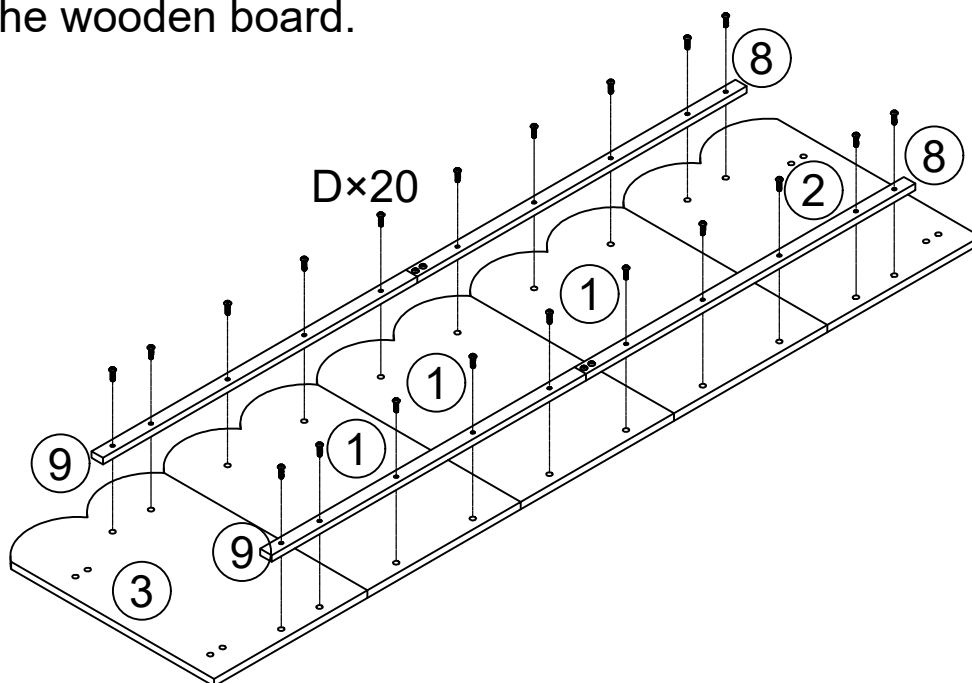


4.

A×8PCS	B×8PCS	C×12PCS	L×8PCS
			
M6×35mm	Ø15×12mm	Ø6×30mm	

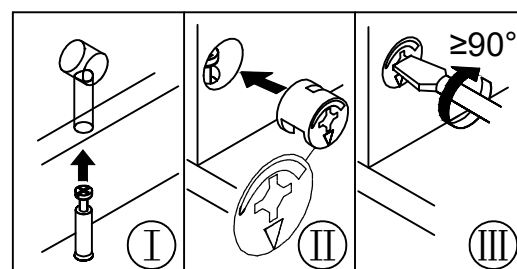
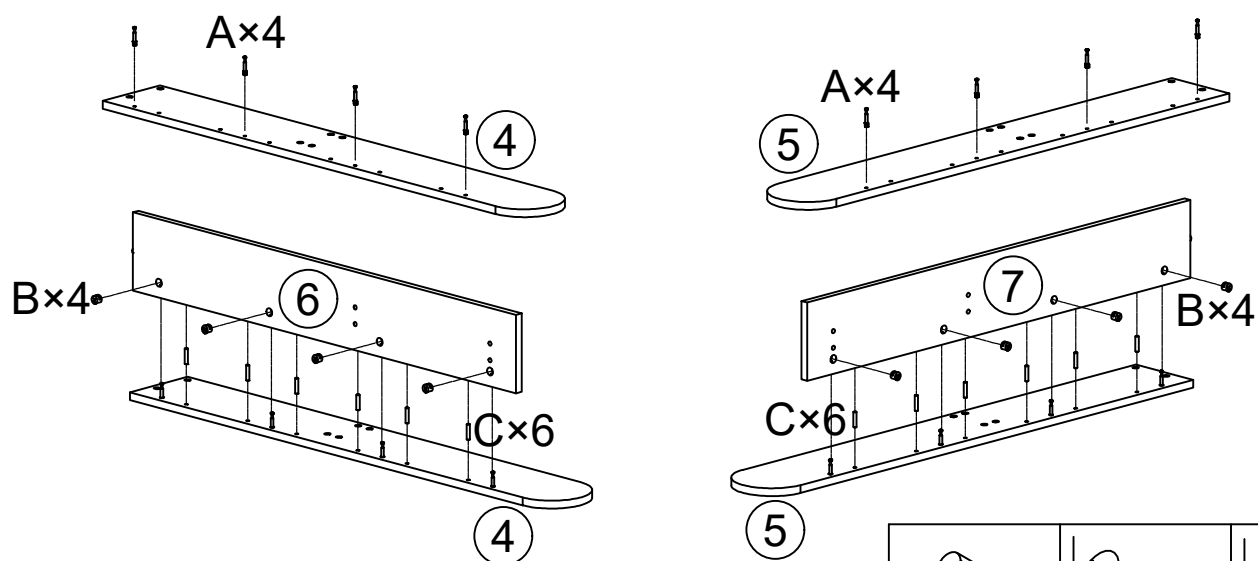


D×8PCS	I×1PC
	
M6×23mm	M4mm



5.

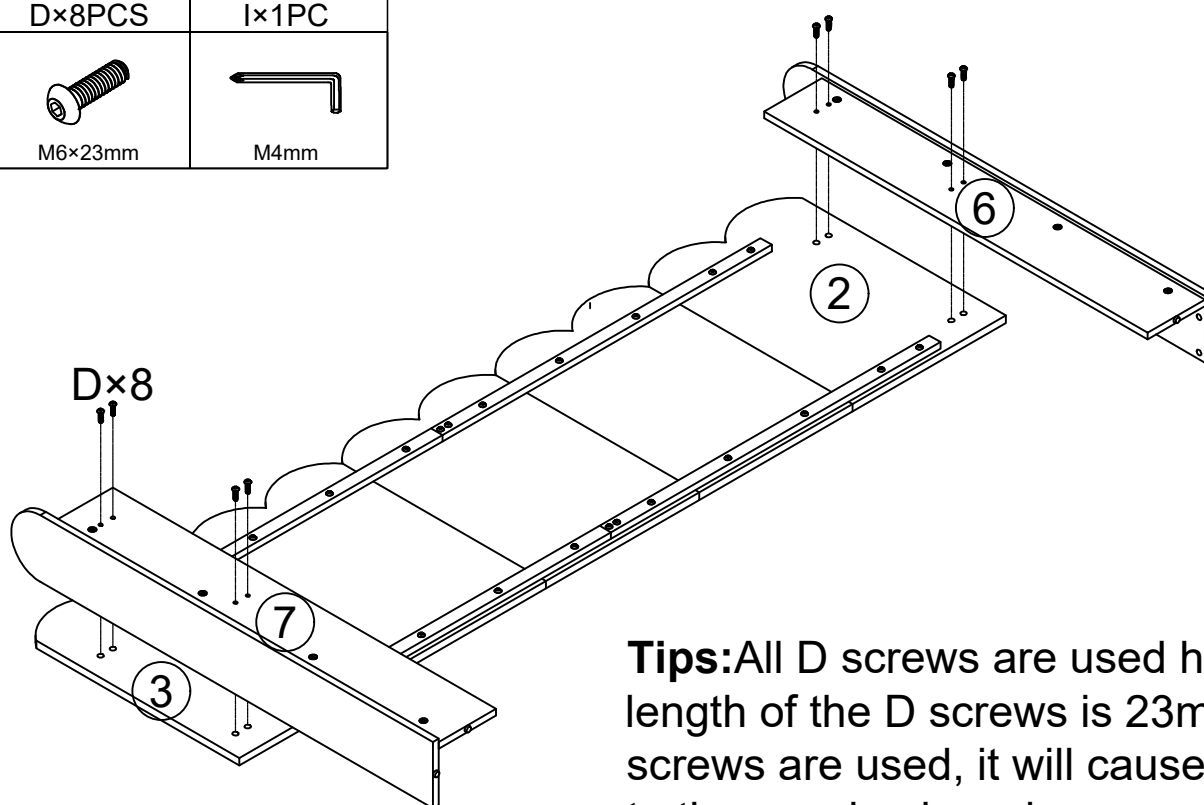

Tips:All D screws are used here. The length of the D screws is 23mm. If E screws are used, it will cause damage to the wooden board.

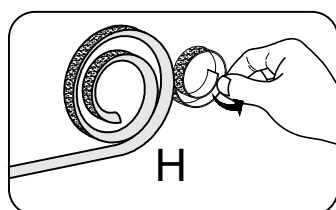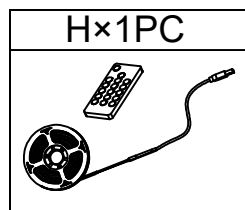


6.

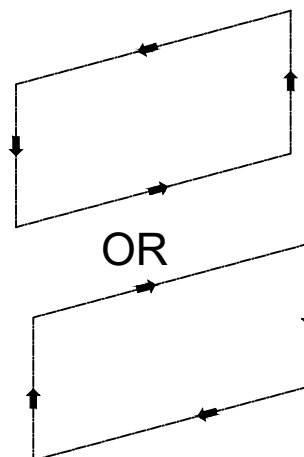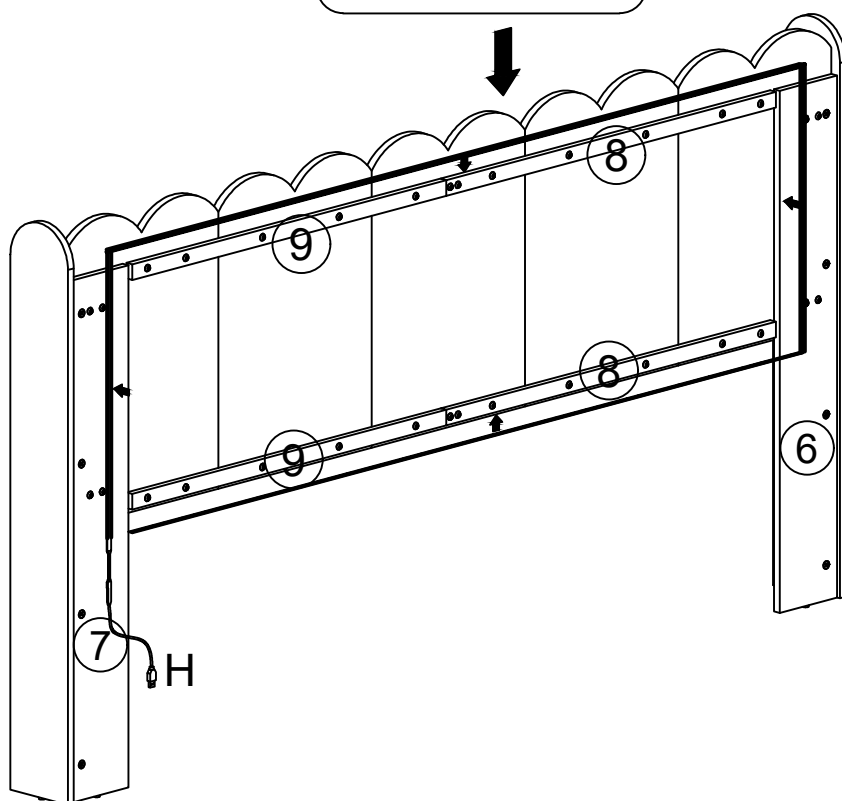

Tips:If there is a need to use a light strip, please install this light strip, otherwise please proceed to the next step.


7.

×4

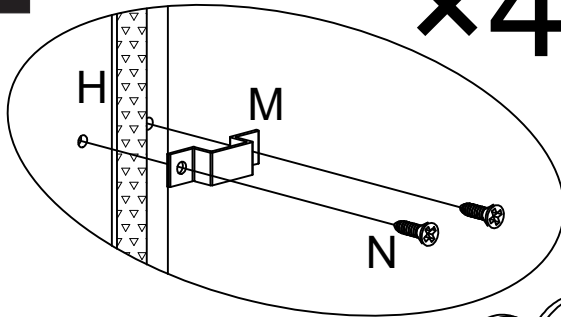


M×4PCS

N×8PCS



Ø3×12mm

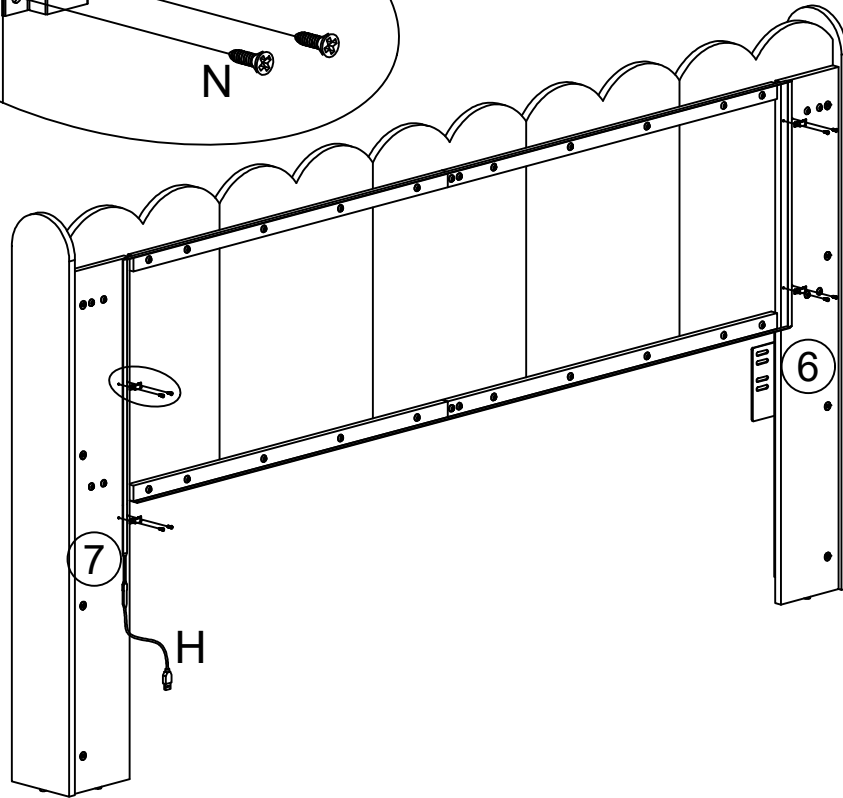

8.


E×4PCS

F×4PCS

G×4PCS

I×1PC

J×1PC



M6×35mm







6mm




M6mm



M4mm

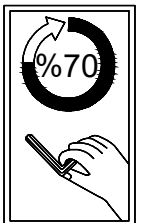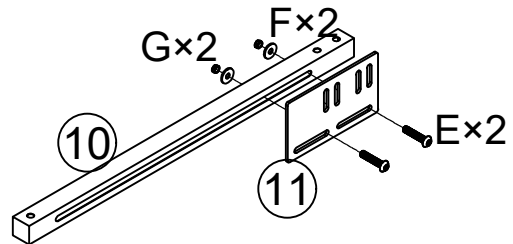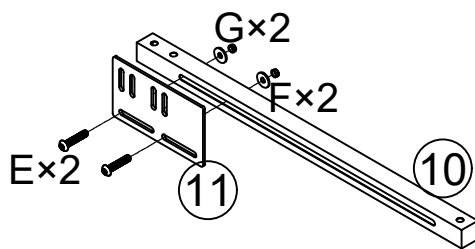

E×6PCS	I×1PC	L×3PCS
 M6×35mm	 M4mm	

9.

Tips: This step requires you to determine the installation position of the 10th iron plate based on the bed frame. To ensure the aesthetic appearance of the product, you can use L-shaped accessory stickers to cover the excess holes.

