



Nylon plug caps



1. as shown in the photo above



2. Find & screwdriver to remove the plug caps as is the photo
ST8 self-tapping screw

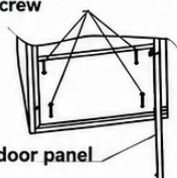

door panel

3. Start by attaching the door panel. Secure the bottom panel to the floor by installing ST8 self-tapping screws inserted through the expansion tube plugs, as shown as the photo

5. Re-position the Parcel Box and insert the screws and washers so that it is tightly fixed to the ground.(pic.2)

Pic.1



Pic.2




Accessory

A	Foot pad	30x10xM6	4pcs
B	Screw, metal and plastic	M5X60	4pcs
C	Plastic expand tube	8x60	4pcs

BH-100

Parcel drop box 39.4"

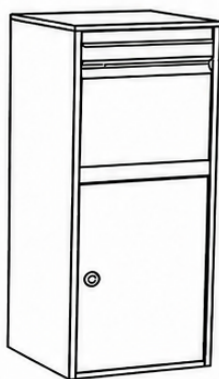


Installation Instructions

Installation Instructions

Pre-set code : 000

Installation will require 2 people , and you will need a pencil,drill ,hammer and spanner.


1. Install 4 foot pads on the bottom of the box shown by below picture , , adjusts and make sure the

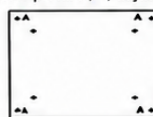

Foot pad

2. Set the Parcel Box in the desired location.Place the box on the ground and mark each location through the bottom of the box in each corner.

3. Remove the Parcel box and drill 4 hole on the ground according to below scheme.The hole diameter

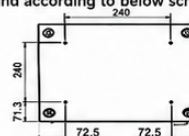

is 8mm and the depth is 70mm .

4. Using the hammer to plug 4pcs 8 x 60 plastic expanding tubes into the hole on the ground. (pic.1)