

Instruction


SKU:WL-BC009

Parts List

Part	PICS	QTY	Part	PICS	QTY
A		1	K		1
B		1	aa		1
C		1	L		8
D		1	N		6
E		1	R		2
F		1	Q		2
J		1			


How To Install

1

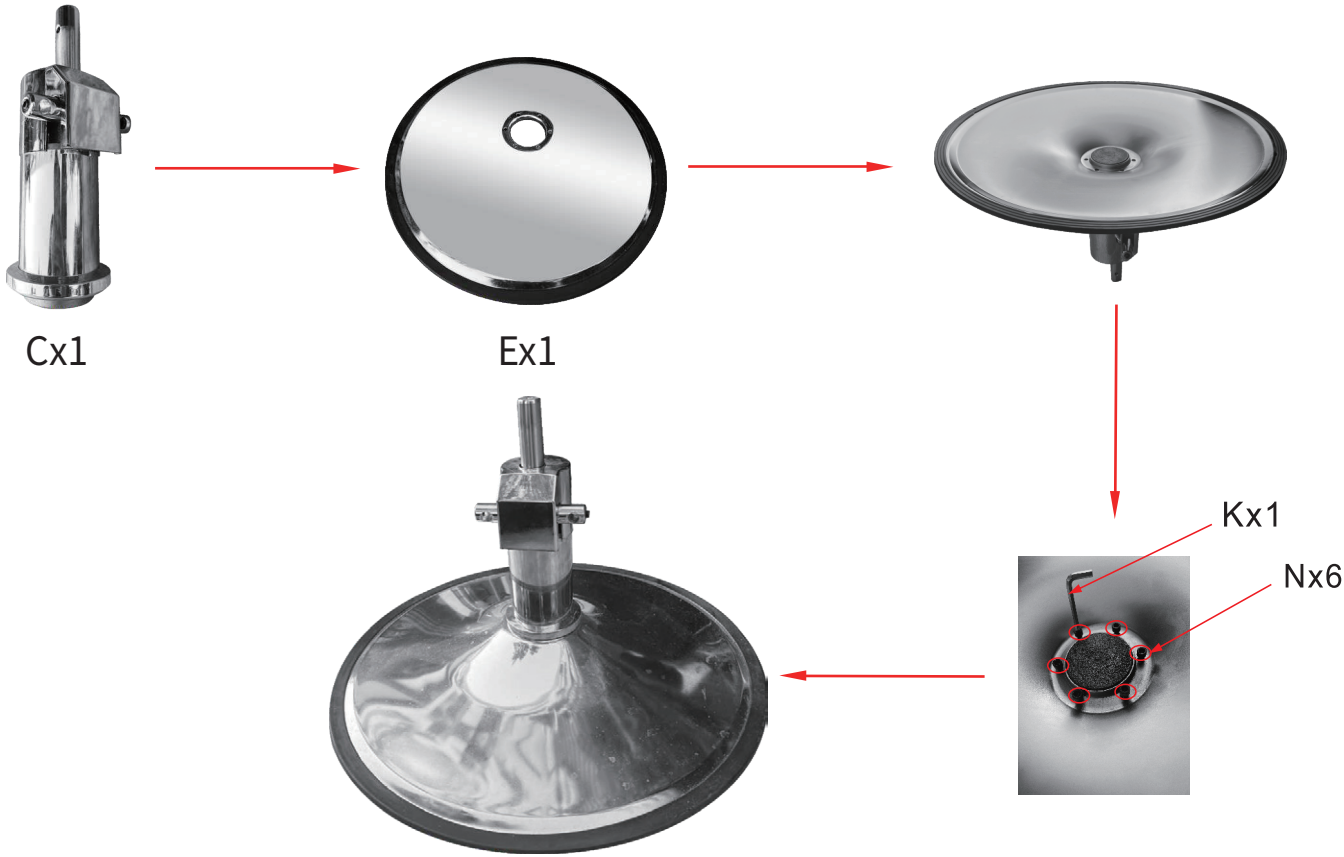


1. Install hydraulic pump (C) on chassis (E). Then insert the screws (N) into the holes and tighten with a large wrench (K).

2

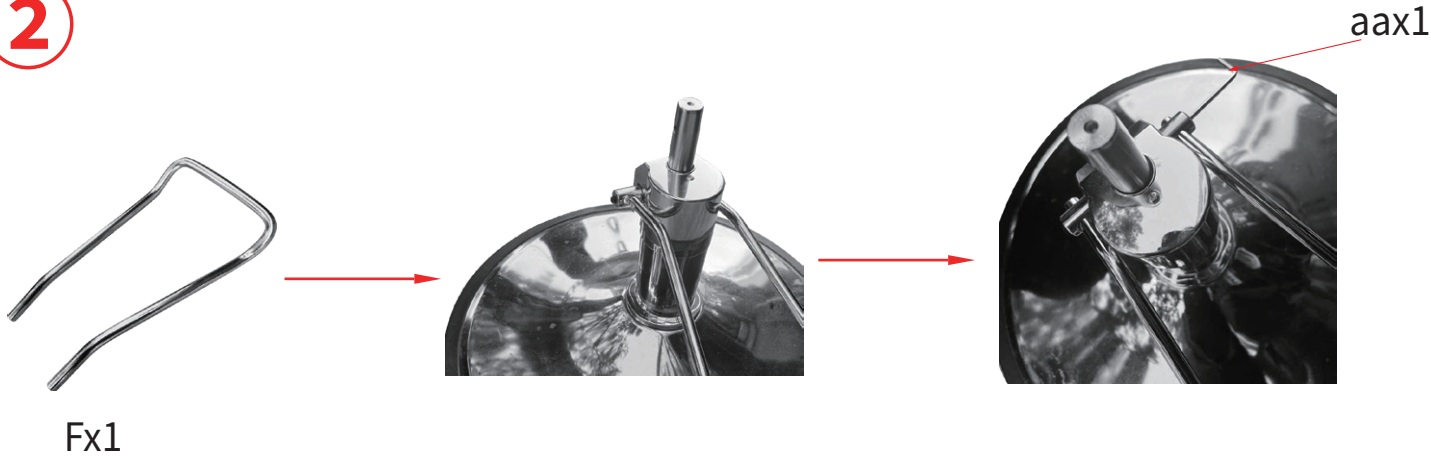


2. Insert hydraulic rod (F) into top of hydraulic pump (C) and tighten with small wrench (aa).

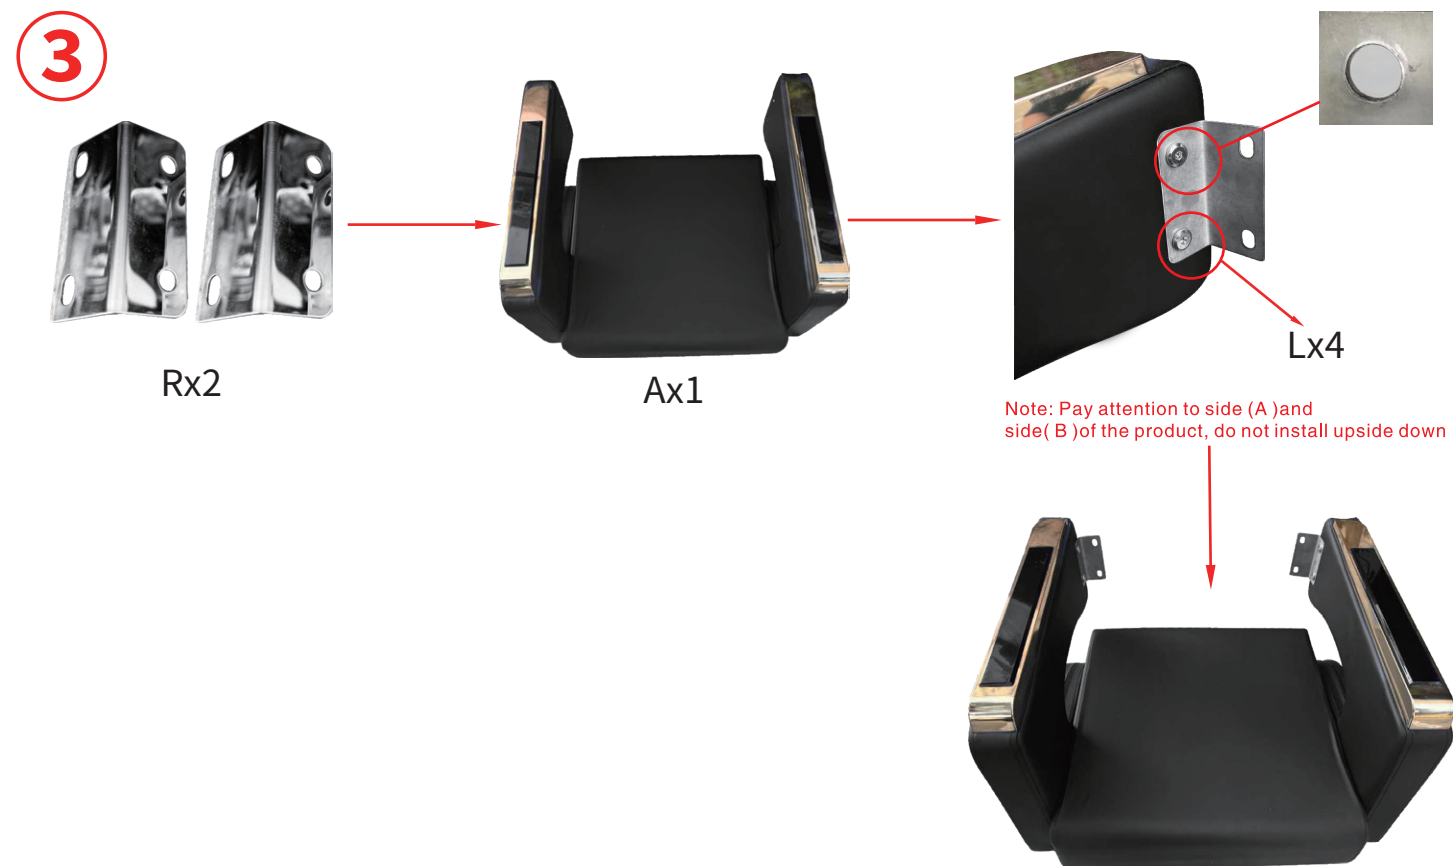

3. Attach one side of the connector (R) to the handrail (A) and tighten with the screw (L). Please note: The round holes correspond to the mounting holes of the armrest (A).



4. Install the backrest (B) with the oval hole of the connector as shown in the figure. Then tighten with screws (L).

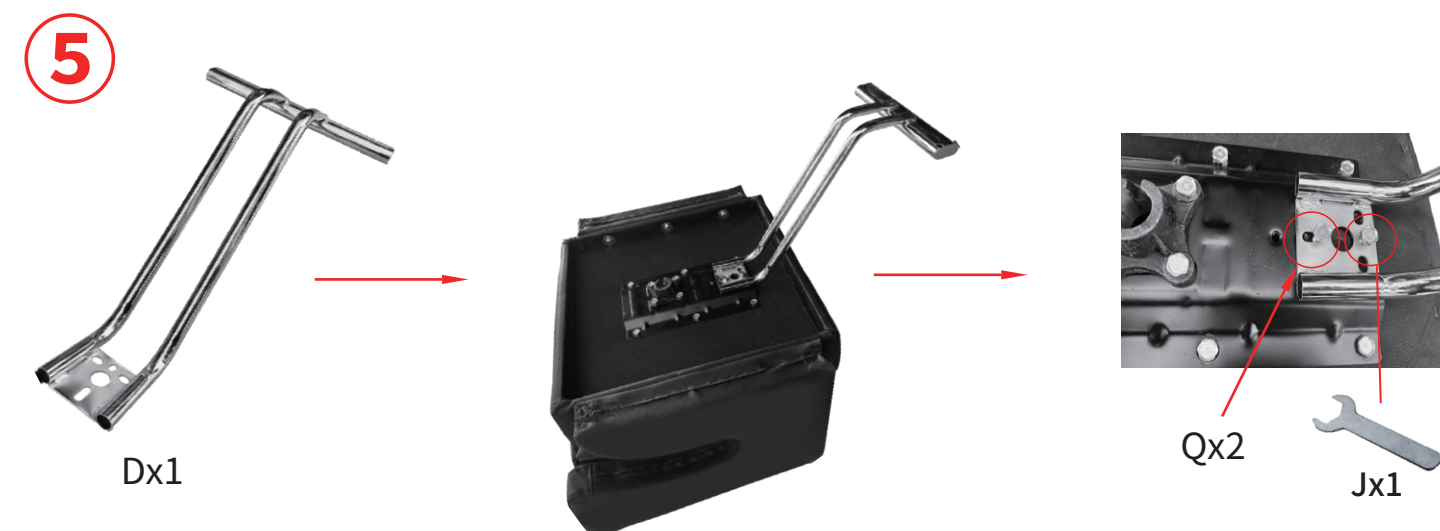

5. Attach footrest (D) to seat cushion (A) as shown. Then secure with screws (Q).



6. Insert directly the products assembled in step 5 (seat cushion and backrest) into the products assembled in step2 (hydraulic pump and base), and the installation is completed.