





## C50916 ASSEMBLY INSTRUCTIONS

### Parts:

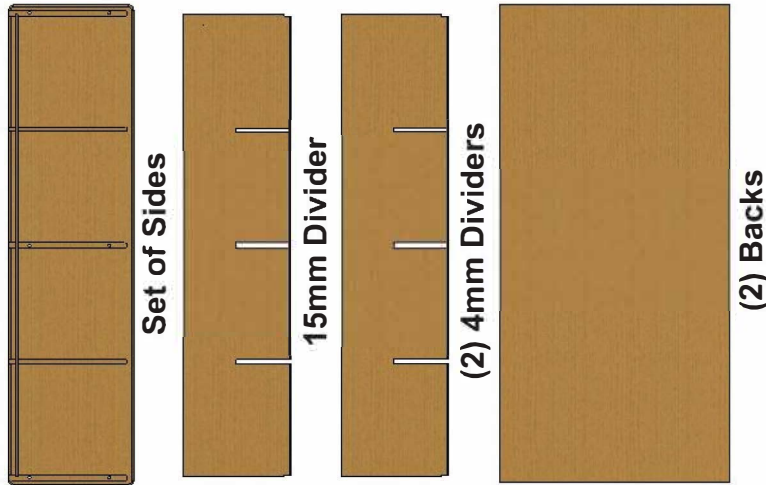


### 15mm Shelf

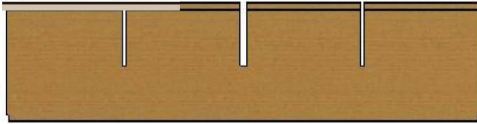

### (1) Top and Bottom



### (2) 4mm Shelves




### Hardware:

(16) Hex screws



(1) Allen wrench

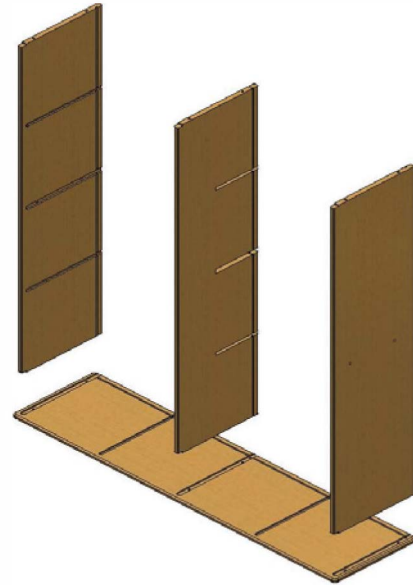

**Step 1: Attach Top, Bottom, and 15mm Shelf into a Side piece** using (6) supplied hex screws and allen wrench. Back grooves in top and bottom, -cuts that go all the way through from short end to short end, align with 3/8" deep back groove in side component. Back grooves face inwards towards middle of side. Slots in 15mm shelf also point towards 3/8" deep back groove in side.




**Step 2: Slide 4mm Shelves into place** in grooves of Side. Slots will face same way as 15mm shelf. No hardware required in this step.


**For assistance, call: Customer Service 1-800-247-8465**




**Step 3: Slide 15mm Divider into place** using slots in 15mm shelf and dados in top and bottom. Back face of divider sits flush with back face of shelves. Attach divider to top and bottom using (4) hex screws and allen wrench.

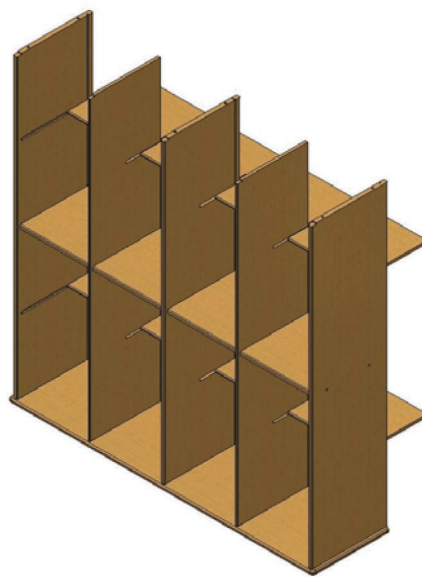

**Step 4: Slide 4mm Dividers into place** using slots in shelves and dados in top and bottom. Back face of dividers sit flush with back face of shelves. No hardware required in this step.

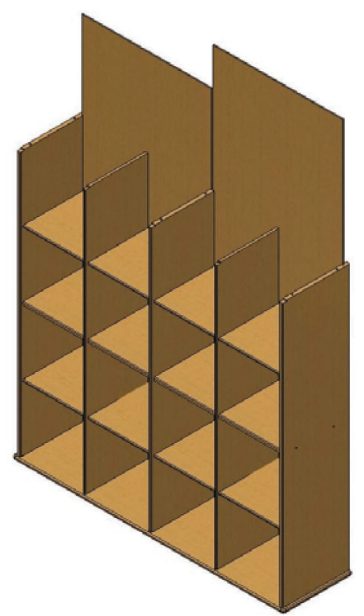

**Step 5: Guide Backs into grooves** of top, bottom, and 15mm shelf. Slide all the way down until backs rest in 3/8" deep groove of side component. Backs will overhang past top, bottom, and shelves on open end. No hardware required in this step.

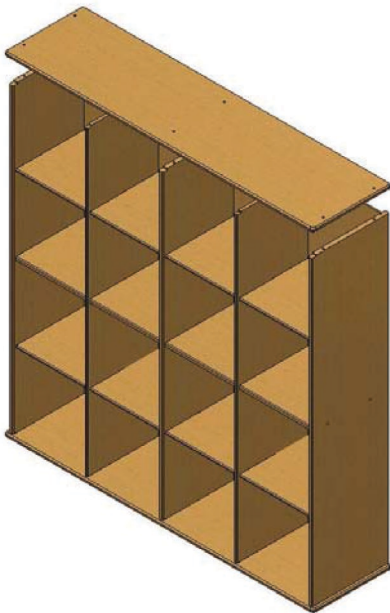

**Step 6: Attach second Side component.** Be sure to align all previously assembled components into grooves of unsecured side before assembling. Attach using (6) hex screws and allen wrench.



**Step 7: Set unit upright, resting edges of sides on floor. Tighten all screws snugly. DO NOT OVER-TIGHTEN. DO NOT DRILL.** Assembly is now complete.

**For assistance, call: Customer Service 1-800-247-8465**