













ASSEMBLY INSTRUCTION

NO	PART LIST	QTY
1	 CUSHION SEAT	1PC
2	 LEG (RIGHT)	2PCS
3	 LEG (LEFT)	2PCS
4	 STRETCHER (LONG)	2PCS
5	 STRETCHER (SHORT)	2PCS
NO	HARDWARE LIST	QTY
A	 JCBC SCREW M6 x 60mm	8PCS
B	 SPRING WASHER	8PCS
C	 FLAT WASHER	8PCS
D	 L-KEY M4 x 65mm	1PC
E	 PAN HAED SCREW M4 x 38mm	8PCS


STEP 1

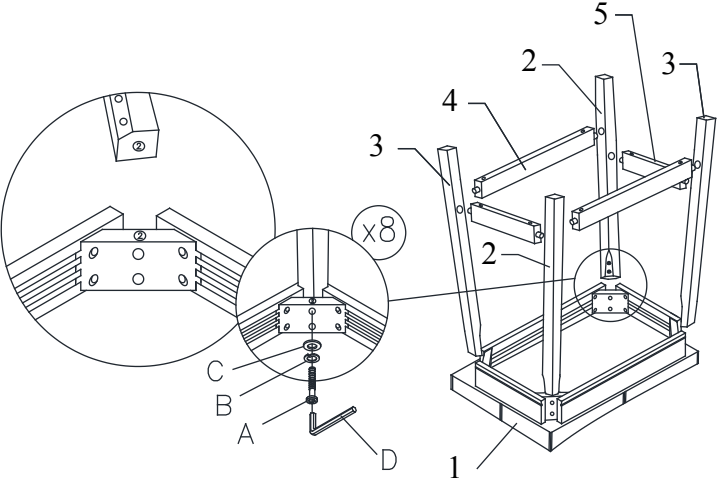

STEP 2

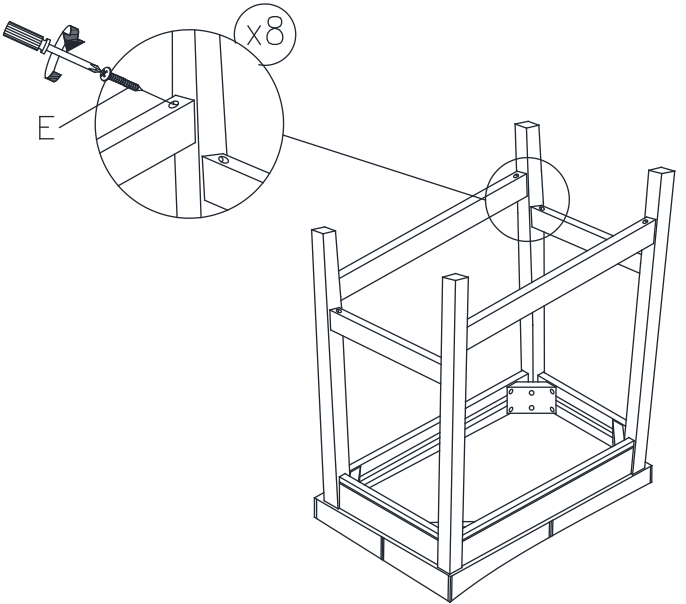

STEP 3

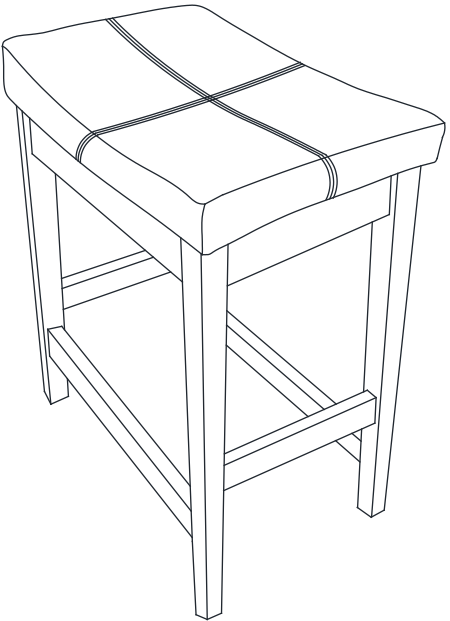

ASSEMBLY
COMPLETED

NOTE: AFTER A FEW DAYS OF ASSEMBLY, IT WILL HAVE ACCLIMATIZED TO ENVIRONMENT. PLEASE TIGHTEN ALL HARDWARE. CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.