





Assembly Instruction Of Frosted Pane Wall Cabinet

Hardware List

ITEM	DESCRIPTION	PART	QTY
(A)	Camlock		4
(B)	Camlock Bolt		4
(C)	Wooden Dowel		12
(D)	Screw		2
(E)	Screw		11
(F)	Shelf Pin		4
(G)	Handle Bolt		2
(H)	Handle		1
(I)	Magnetic Bar		1
(J)	Magnetic Catch		1
(K)	Hinge		2
(L)	Plastic Anchor		2
(M)	paper Ruler		1


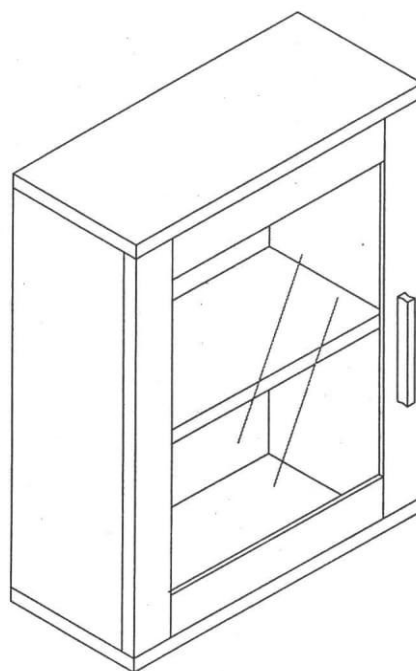


PART List


ITEM	DESCRIPTION	PART	QTY
(1)	Right Side Panel		1
(2)	Left Side Panel		1
(3)	Wooden Cross Bar		1
(4)	Top Panel		1
(5)	Back Panel		1
(6)	Bottom Panel		1
(7)	Adjustable Shelf		1
(8)	Door Panel		1

2


Insert Wooden Dowel(C) To Wooden Cross Bar(3), Then Connect With Left Side Panel(2) And Right Side Panel(1) As Shown.

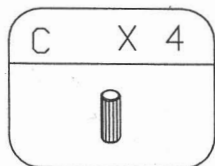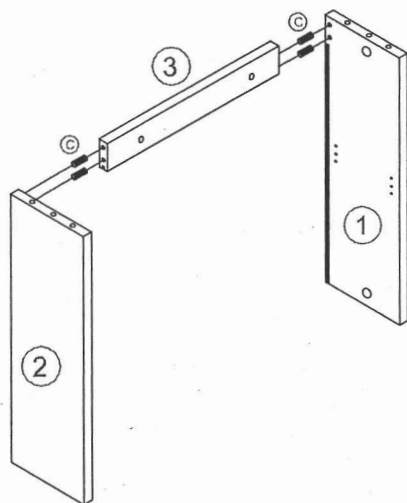

1


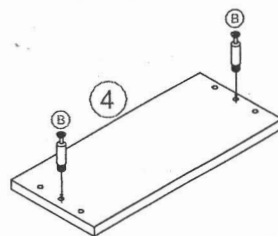


Assemble The Camlock Bolt(B) To Top Panel(4).

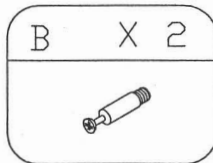


3

Assemble Top Panel(4) To Left Side Panel(2) And Right Side Panel(1) With Wooden Dowel(C) And Camlock(A) As Shown.

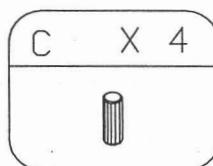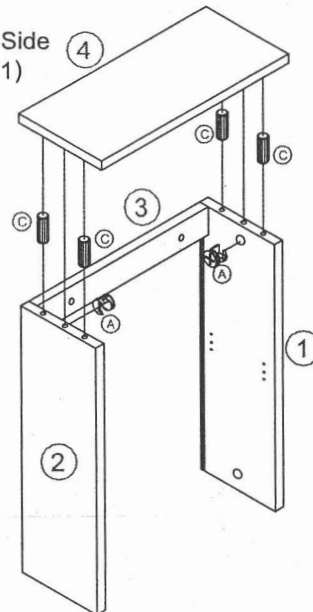



4

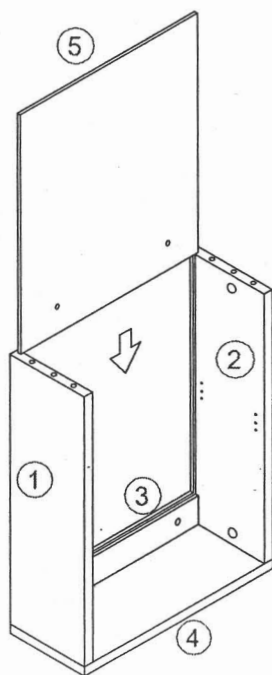

Insert Back Panel(5) To Assembled Unit As Shown.




5

Assemble Camlock Bolt(B) To Bottom Panel(6) As Shown.

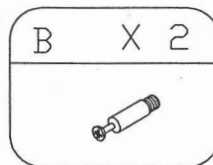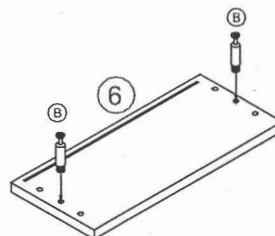


6

Assemble Bottom Panel(6) To Assembled Unit By Using Wooden Dowel(C) And Camlock(A) As Shown.

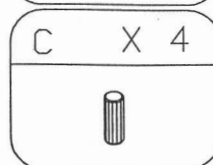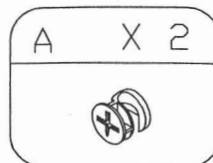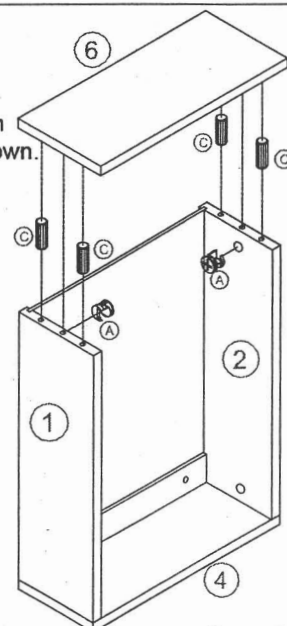


7

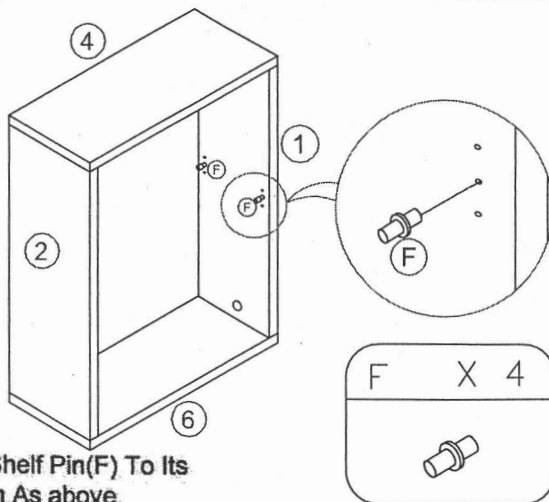

Insert Shelf Pin(F) To Its Position As above.



8

Insert The Adjustable Shelf(7) To Assembled Unit As Shown.

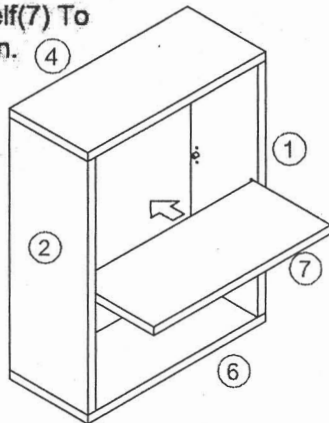





9

Attach Handle(H) To Door Panel(8) With Handle Bolt(G). Assemble Magnetic Bar(I) To Door Panel(8) By Using Screw(E) As Shown.

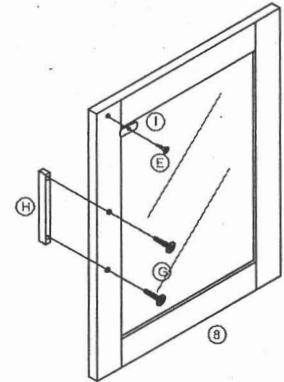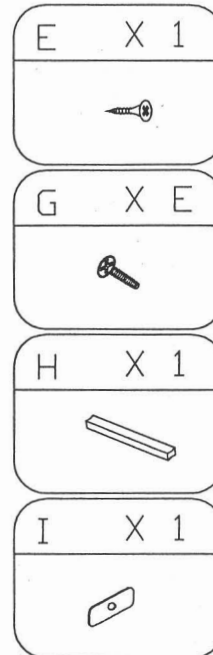



10

Attach Magnetic Catch(J) To Assembled Unit By using Screw(E). Assemble Door Panel(8) To Assembled Unit By using Hinge(K) And Screw(E).

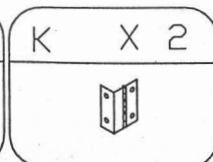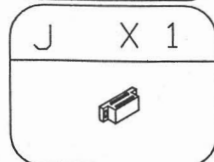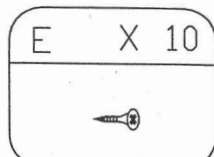
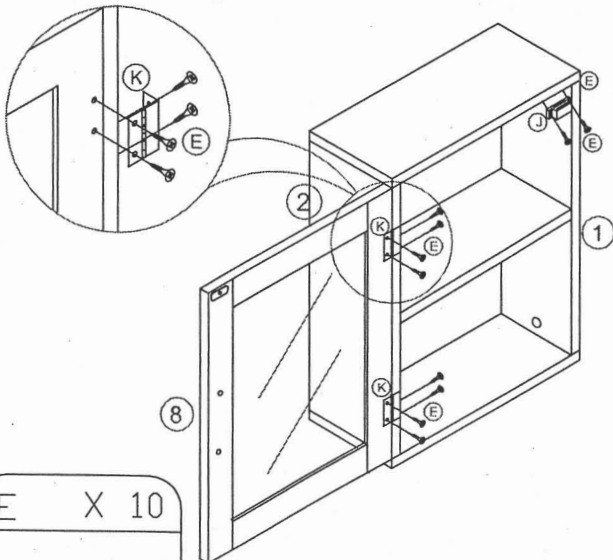


11

- 1 Position the paper ruler(M) on the wall, making sure it is parallel to the ground. Mark the two holes where shown, with pencil on the wall.
- 2 Pls use a 3/16" Dia drill bit to drill two holes into the wall according to your pencil markings.
- 3 Insert plastic Anchor(L) with hammer to the wall.

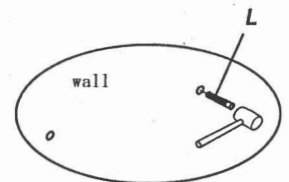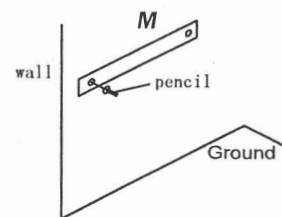

Important Notes:
One of the screw must be drilled directly to wood stud.

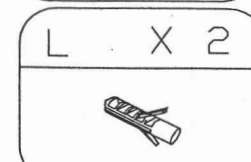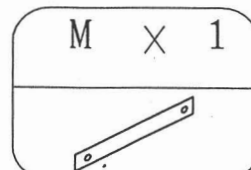

Assemble The Assembled Unit to The
plastic Anchor(L) with Screw (D) As
shown

