


# INSTALLATION INSTRUCTIONS

10x12 ft Storage Shed


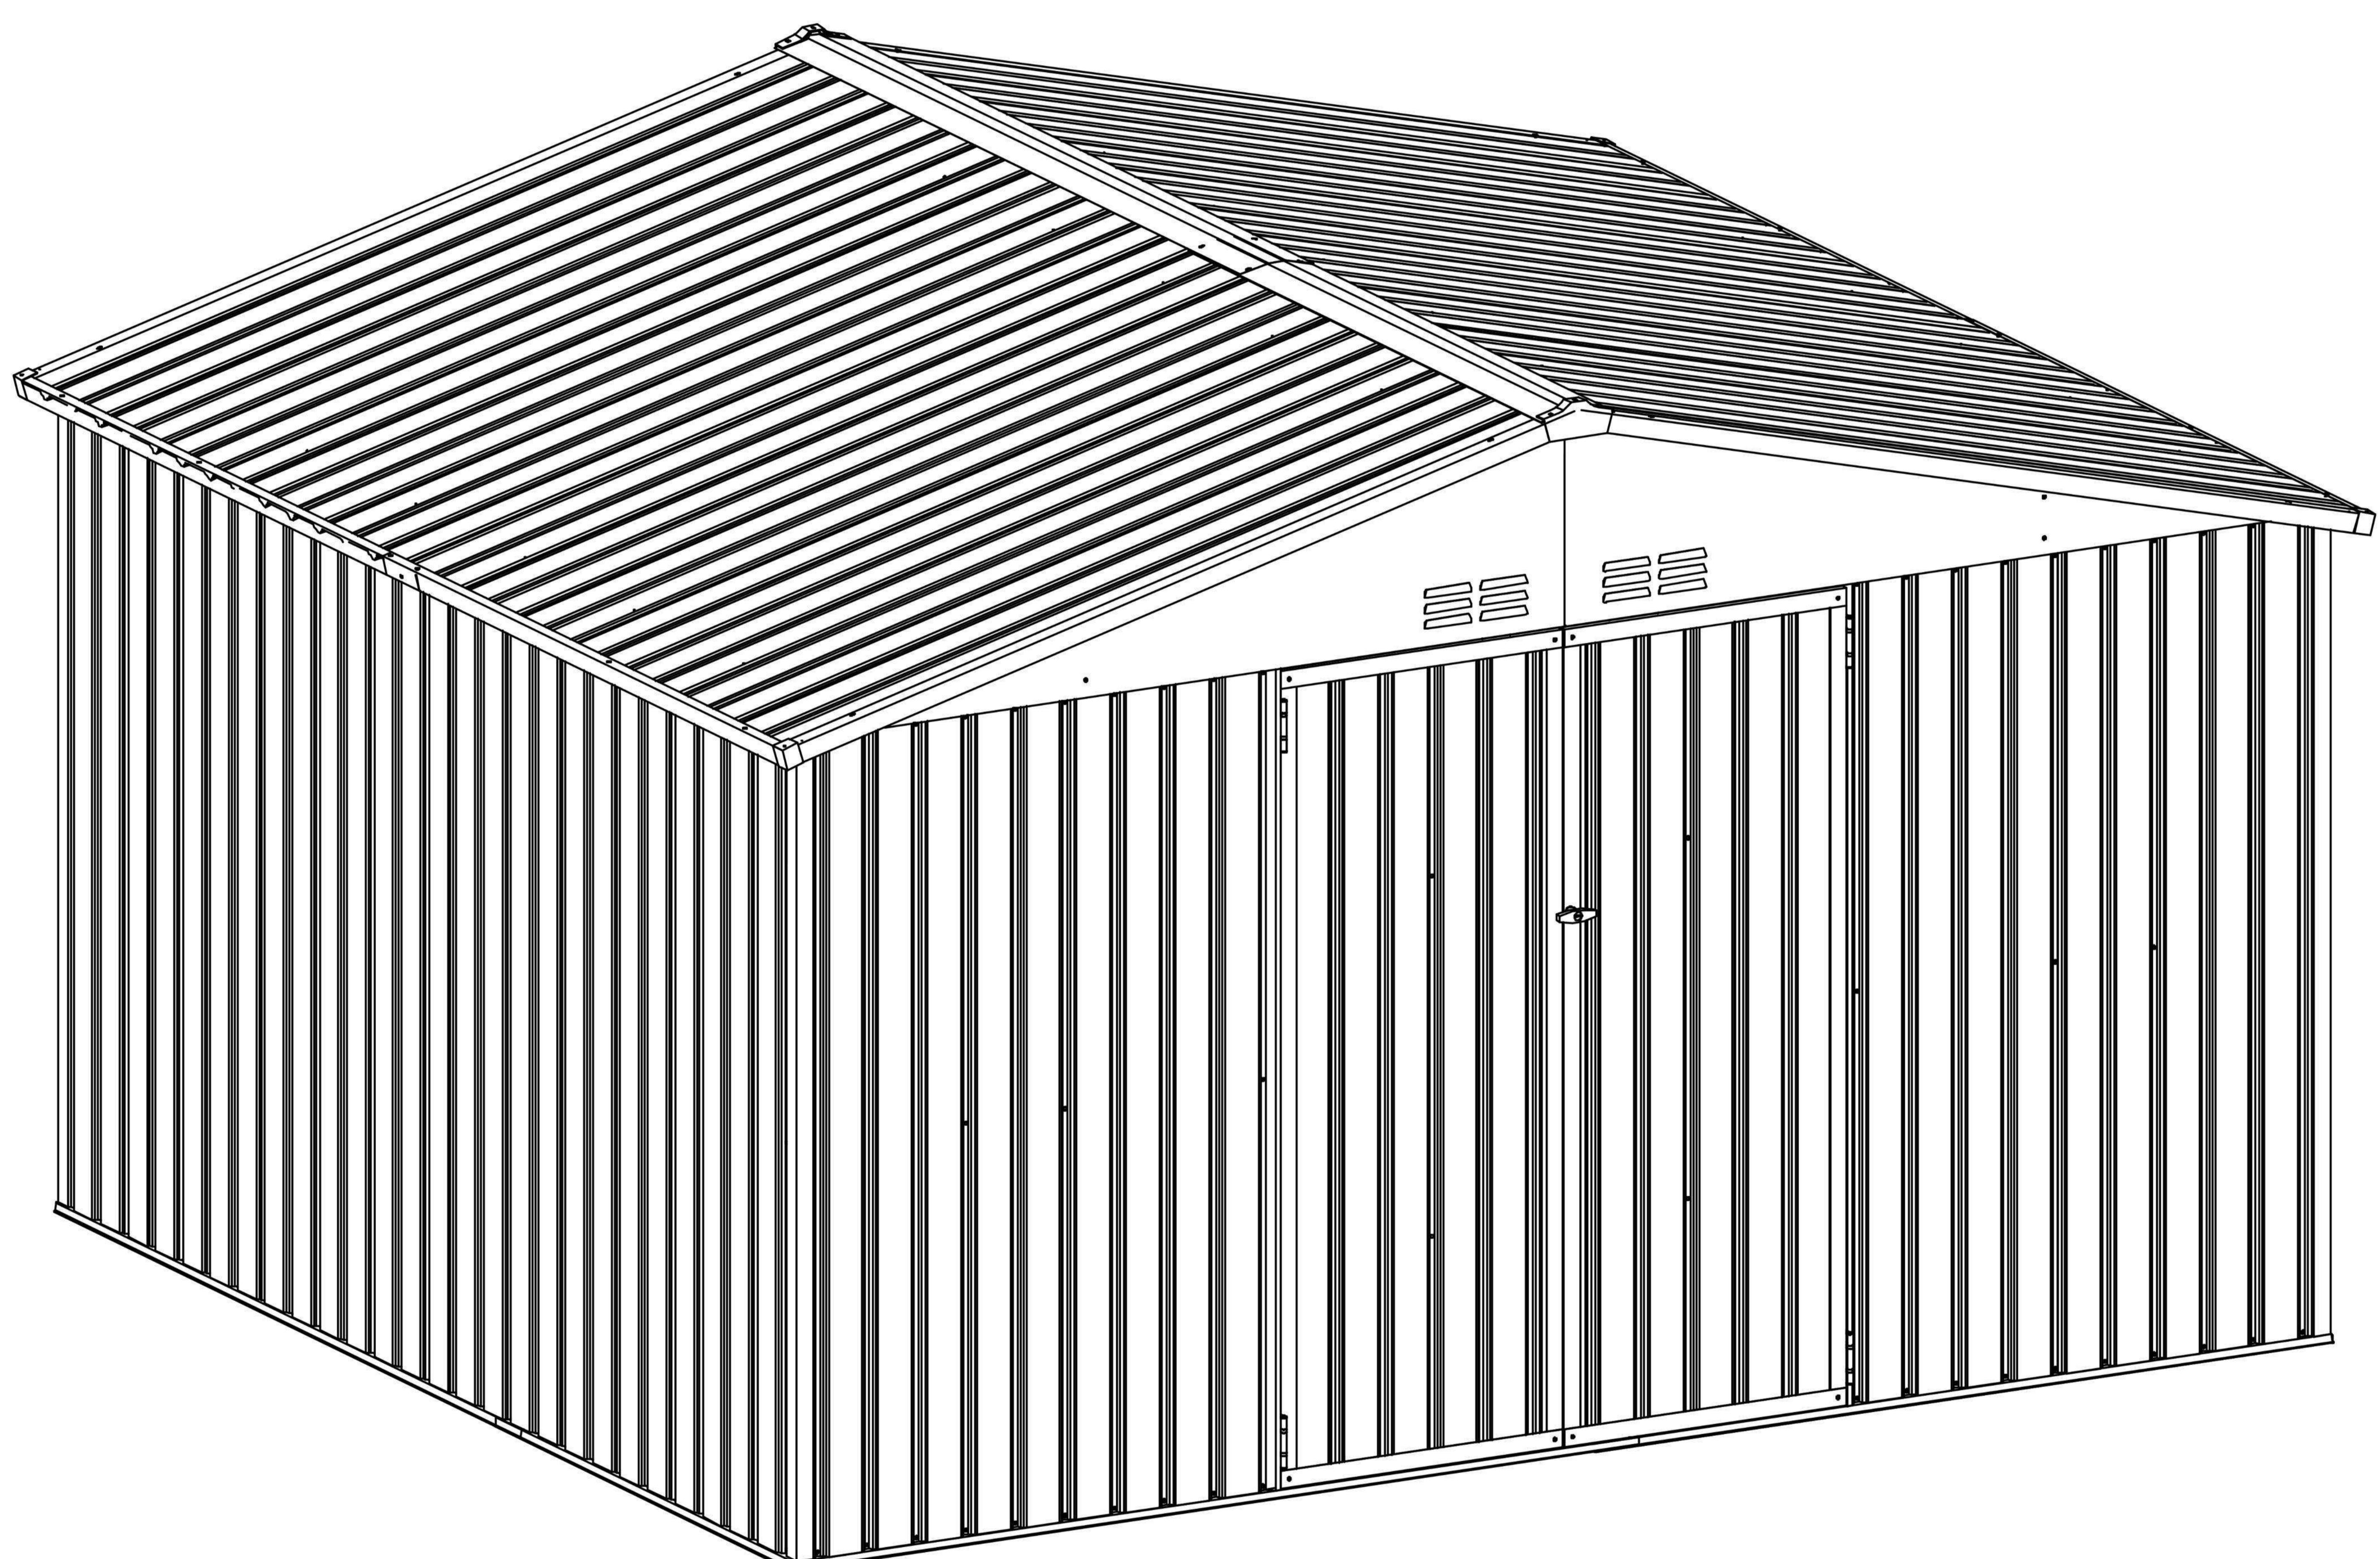


After opening the package, if you notice a slight deformation in the wall panels, there's no need for concern. Our material is flexible and can be manually bent back into place.

**Recommended to wear gloves to avoid scratches.**

Please read the instructions COMPLETELY before assembly.

# REQUIRED TOOLS
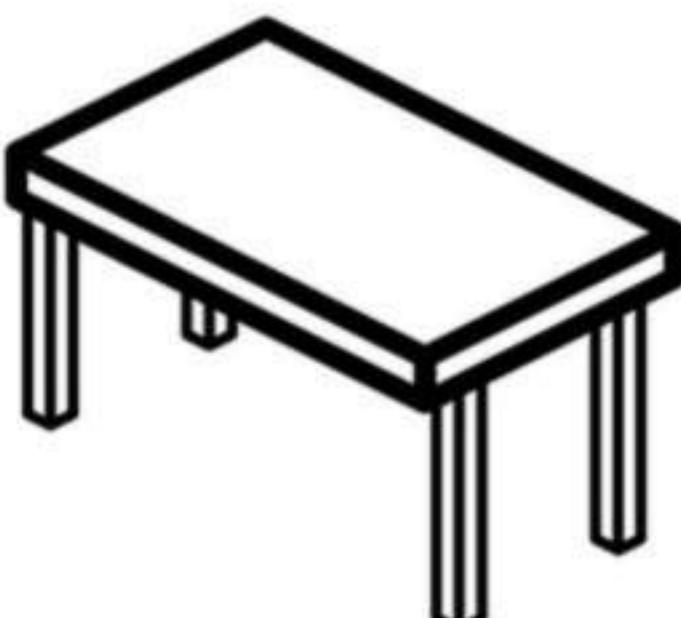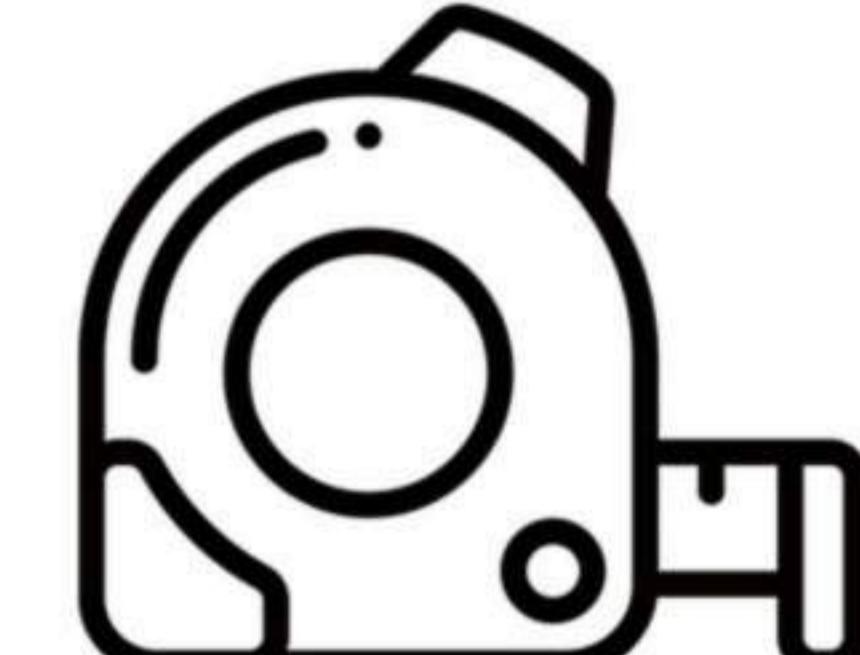
<b>Tools</b>			
	Gloves	Table	Ladder
			
	Power drill	Screw drive	Tape Measure


## ASSEMBLY TIPS

1. Clear a working area to allow access on all four sides. A raised work surface will make assembly easier. It is easier to install the wall panel on the table.
2. All parts are identified, so when working through the instructions page by page, the diagrams show where each part is positioned.
3. Before starting, to avoid any accidental injury, we recommend the use of gloves to protect your hands.
4. Please keep children away from your construction site.
5. Most assembly can be completed by one person, but assistance may be needed when you reach the erection stage.
6. Please note: Some local government authorities have rules & regulations on shed installation, and you may need approval to erect this shed.






## ASSEMBLY STEPS

1. Unpack all components from the carton and lay them out beside your work area. Check parts against the parts list.
2. Work through the assembly instructions page by page.
3. Once assembly is completed, place the shed in position and fix the anchor to the ground.
4. Clean up all metal pieces and screws.

K1012parts list(A)

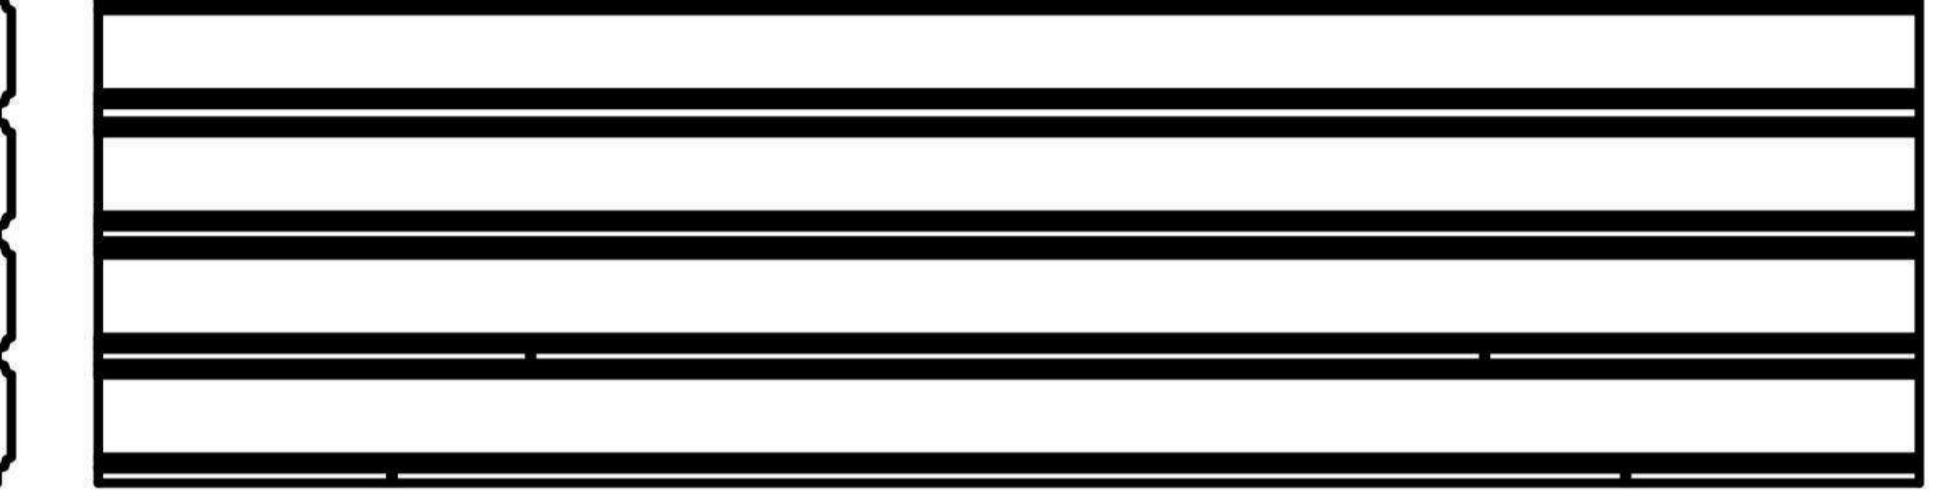PART	NO.	QTY.
	W5-KD	2
	W5-D	22


# K1012parts list (B)

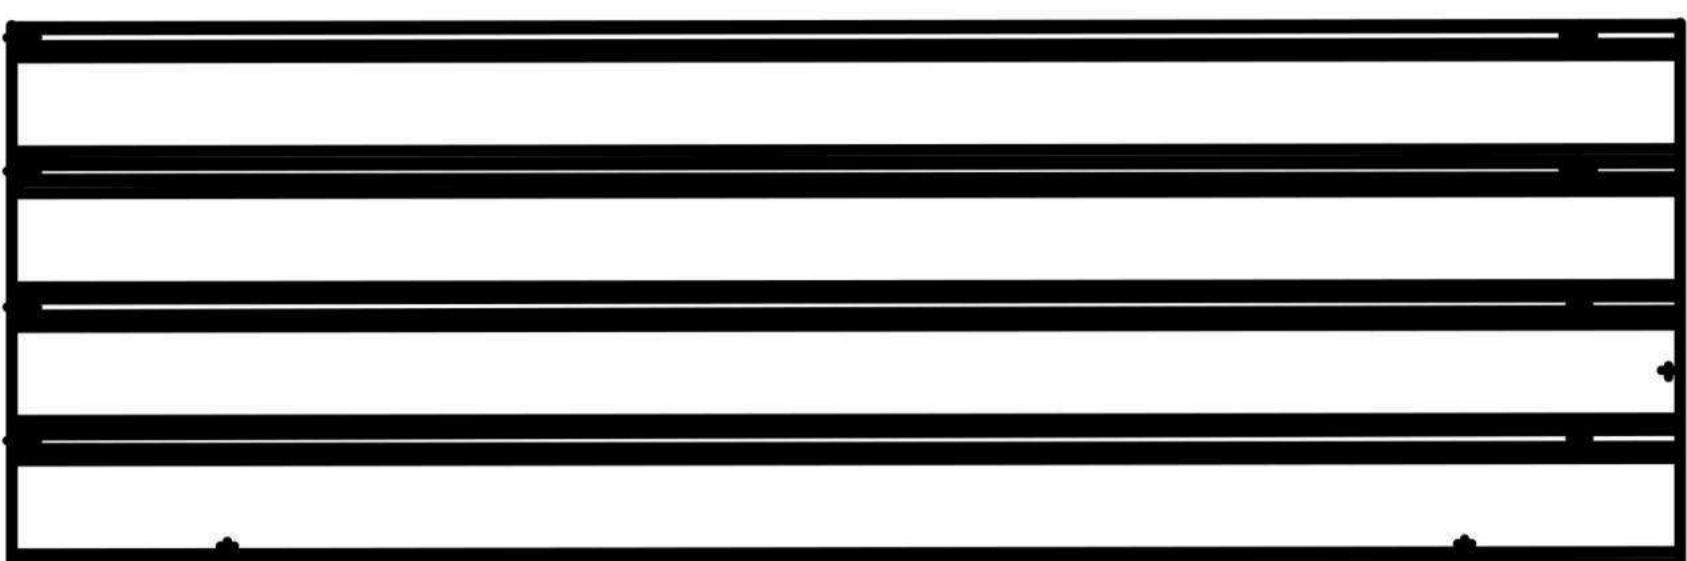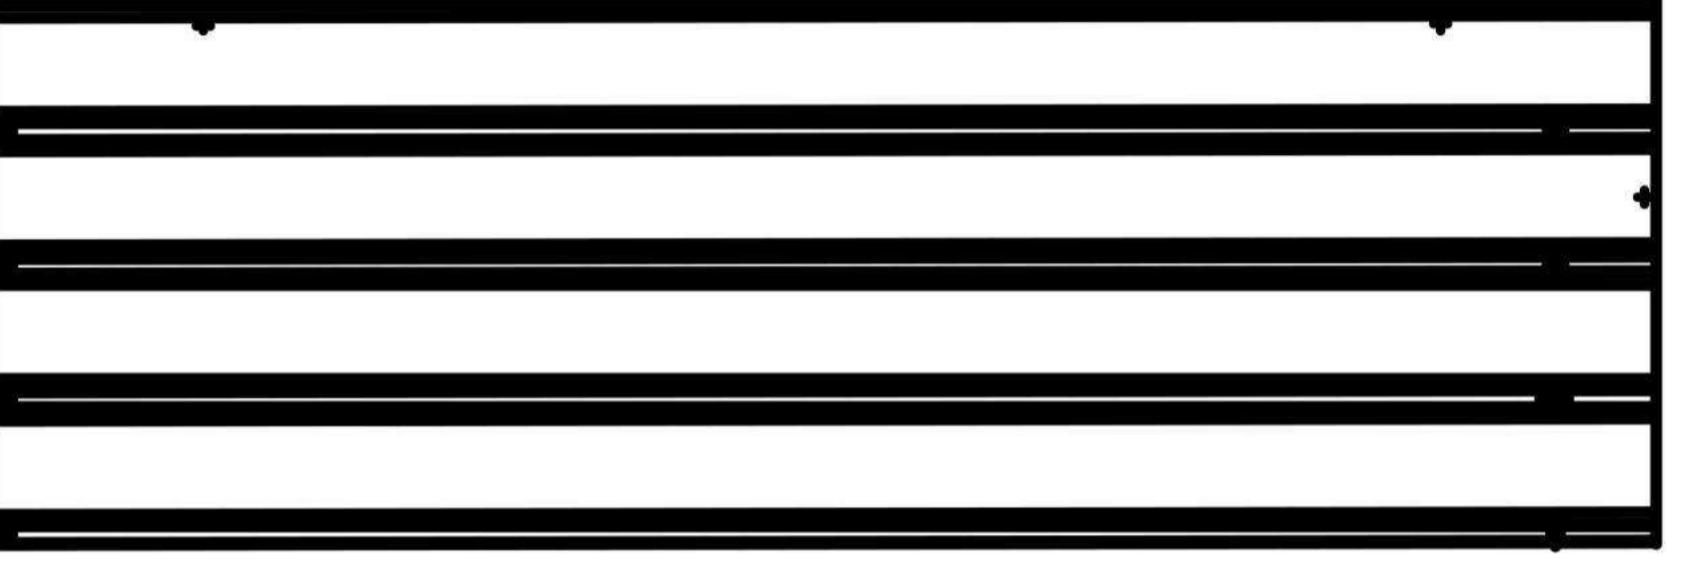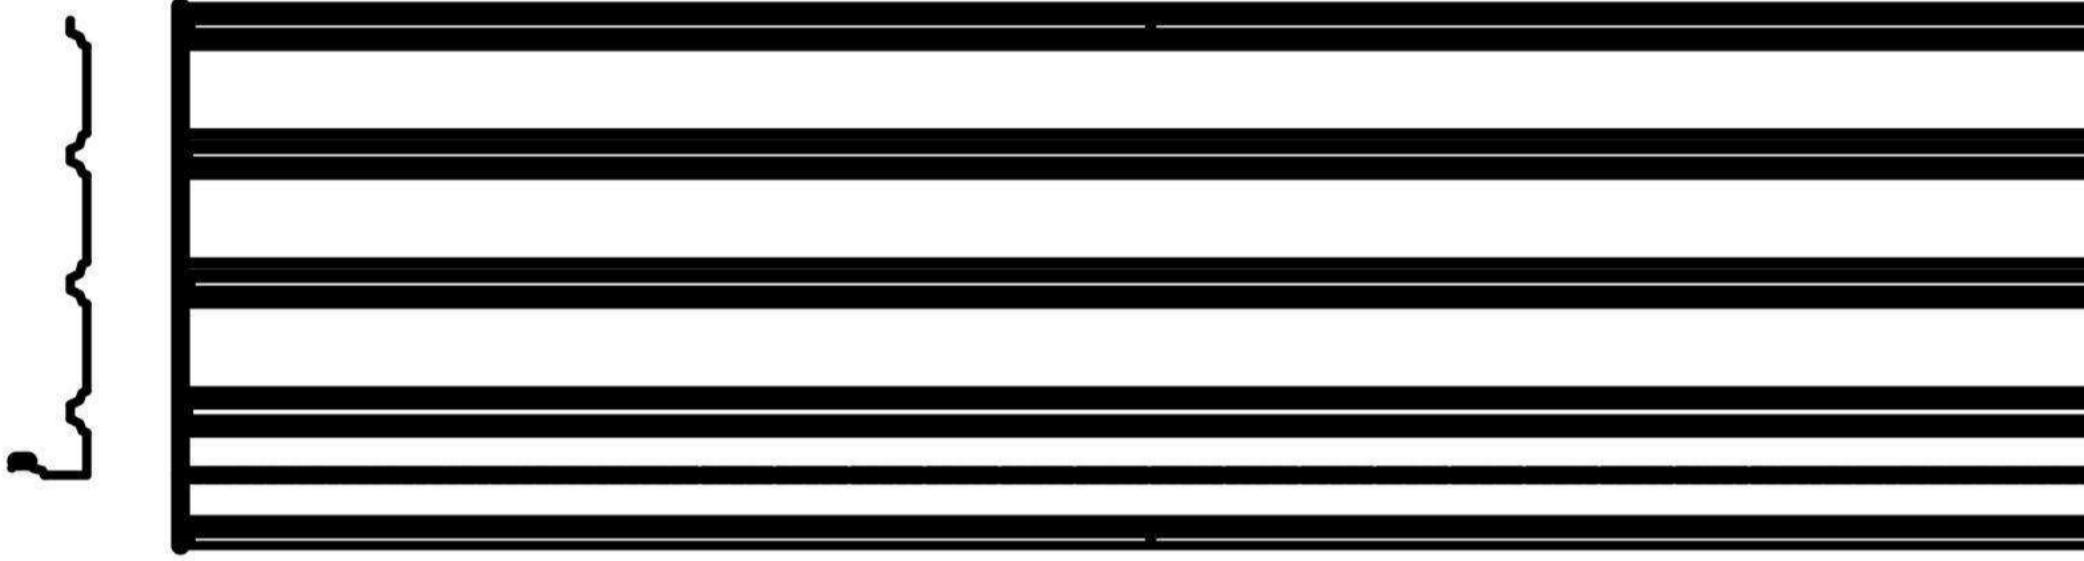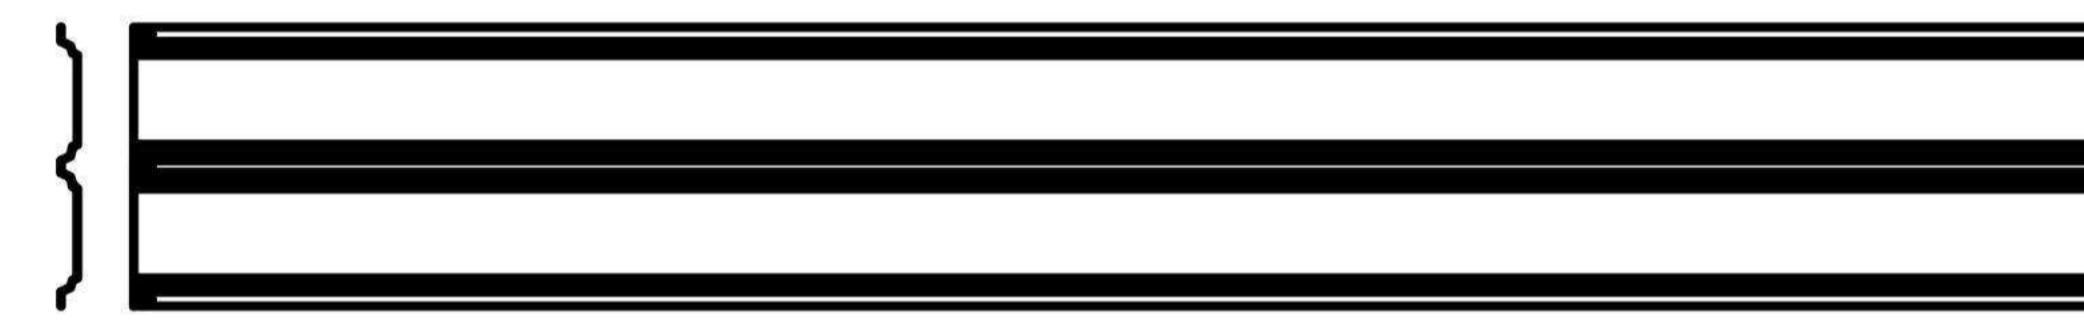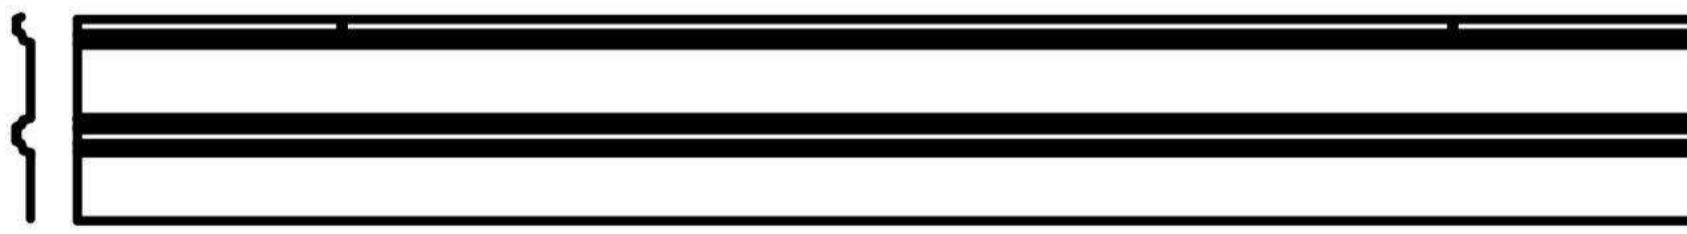PART	NO.	QTY.
	K1012-7L	2
	K1012-7M	10
	K1012-7R	2
	W5-CD	4
	W3-D	2
	W2-HLD	1
	W2-HRD	1


K1012parts list(c)

PART	NO.	QTY.
	K1012-1L	2
	K1012-1M	2
	K1012-1R	2
	K810-2	2
	K1012-2R	2
	K1012-3L	2
	K1012-3M	2
	K1012-3R	2
	K810-4	2
	K1012-4R	2
	K1012-5L	2
	K1012-5R	2
	K1010-6L	6
	K1010-6R	6
	K1012-8	8
	K1012-9L	2
	K1012-9R	2
	K810-10	1
	K1012-10R	1
	UAD	2
	C3	4
	K1012-11	8
	DAD	2
	DLAD	1


# Shed top panels

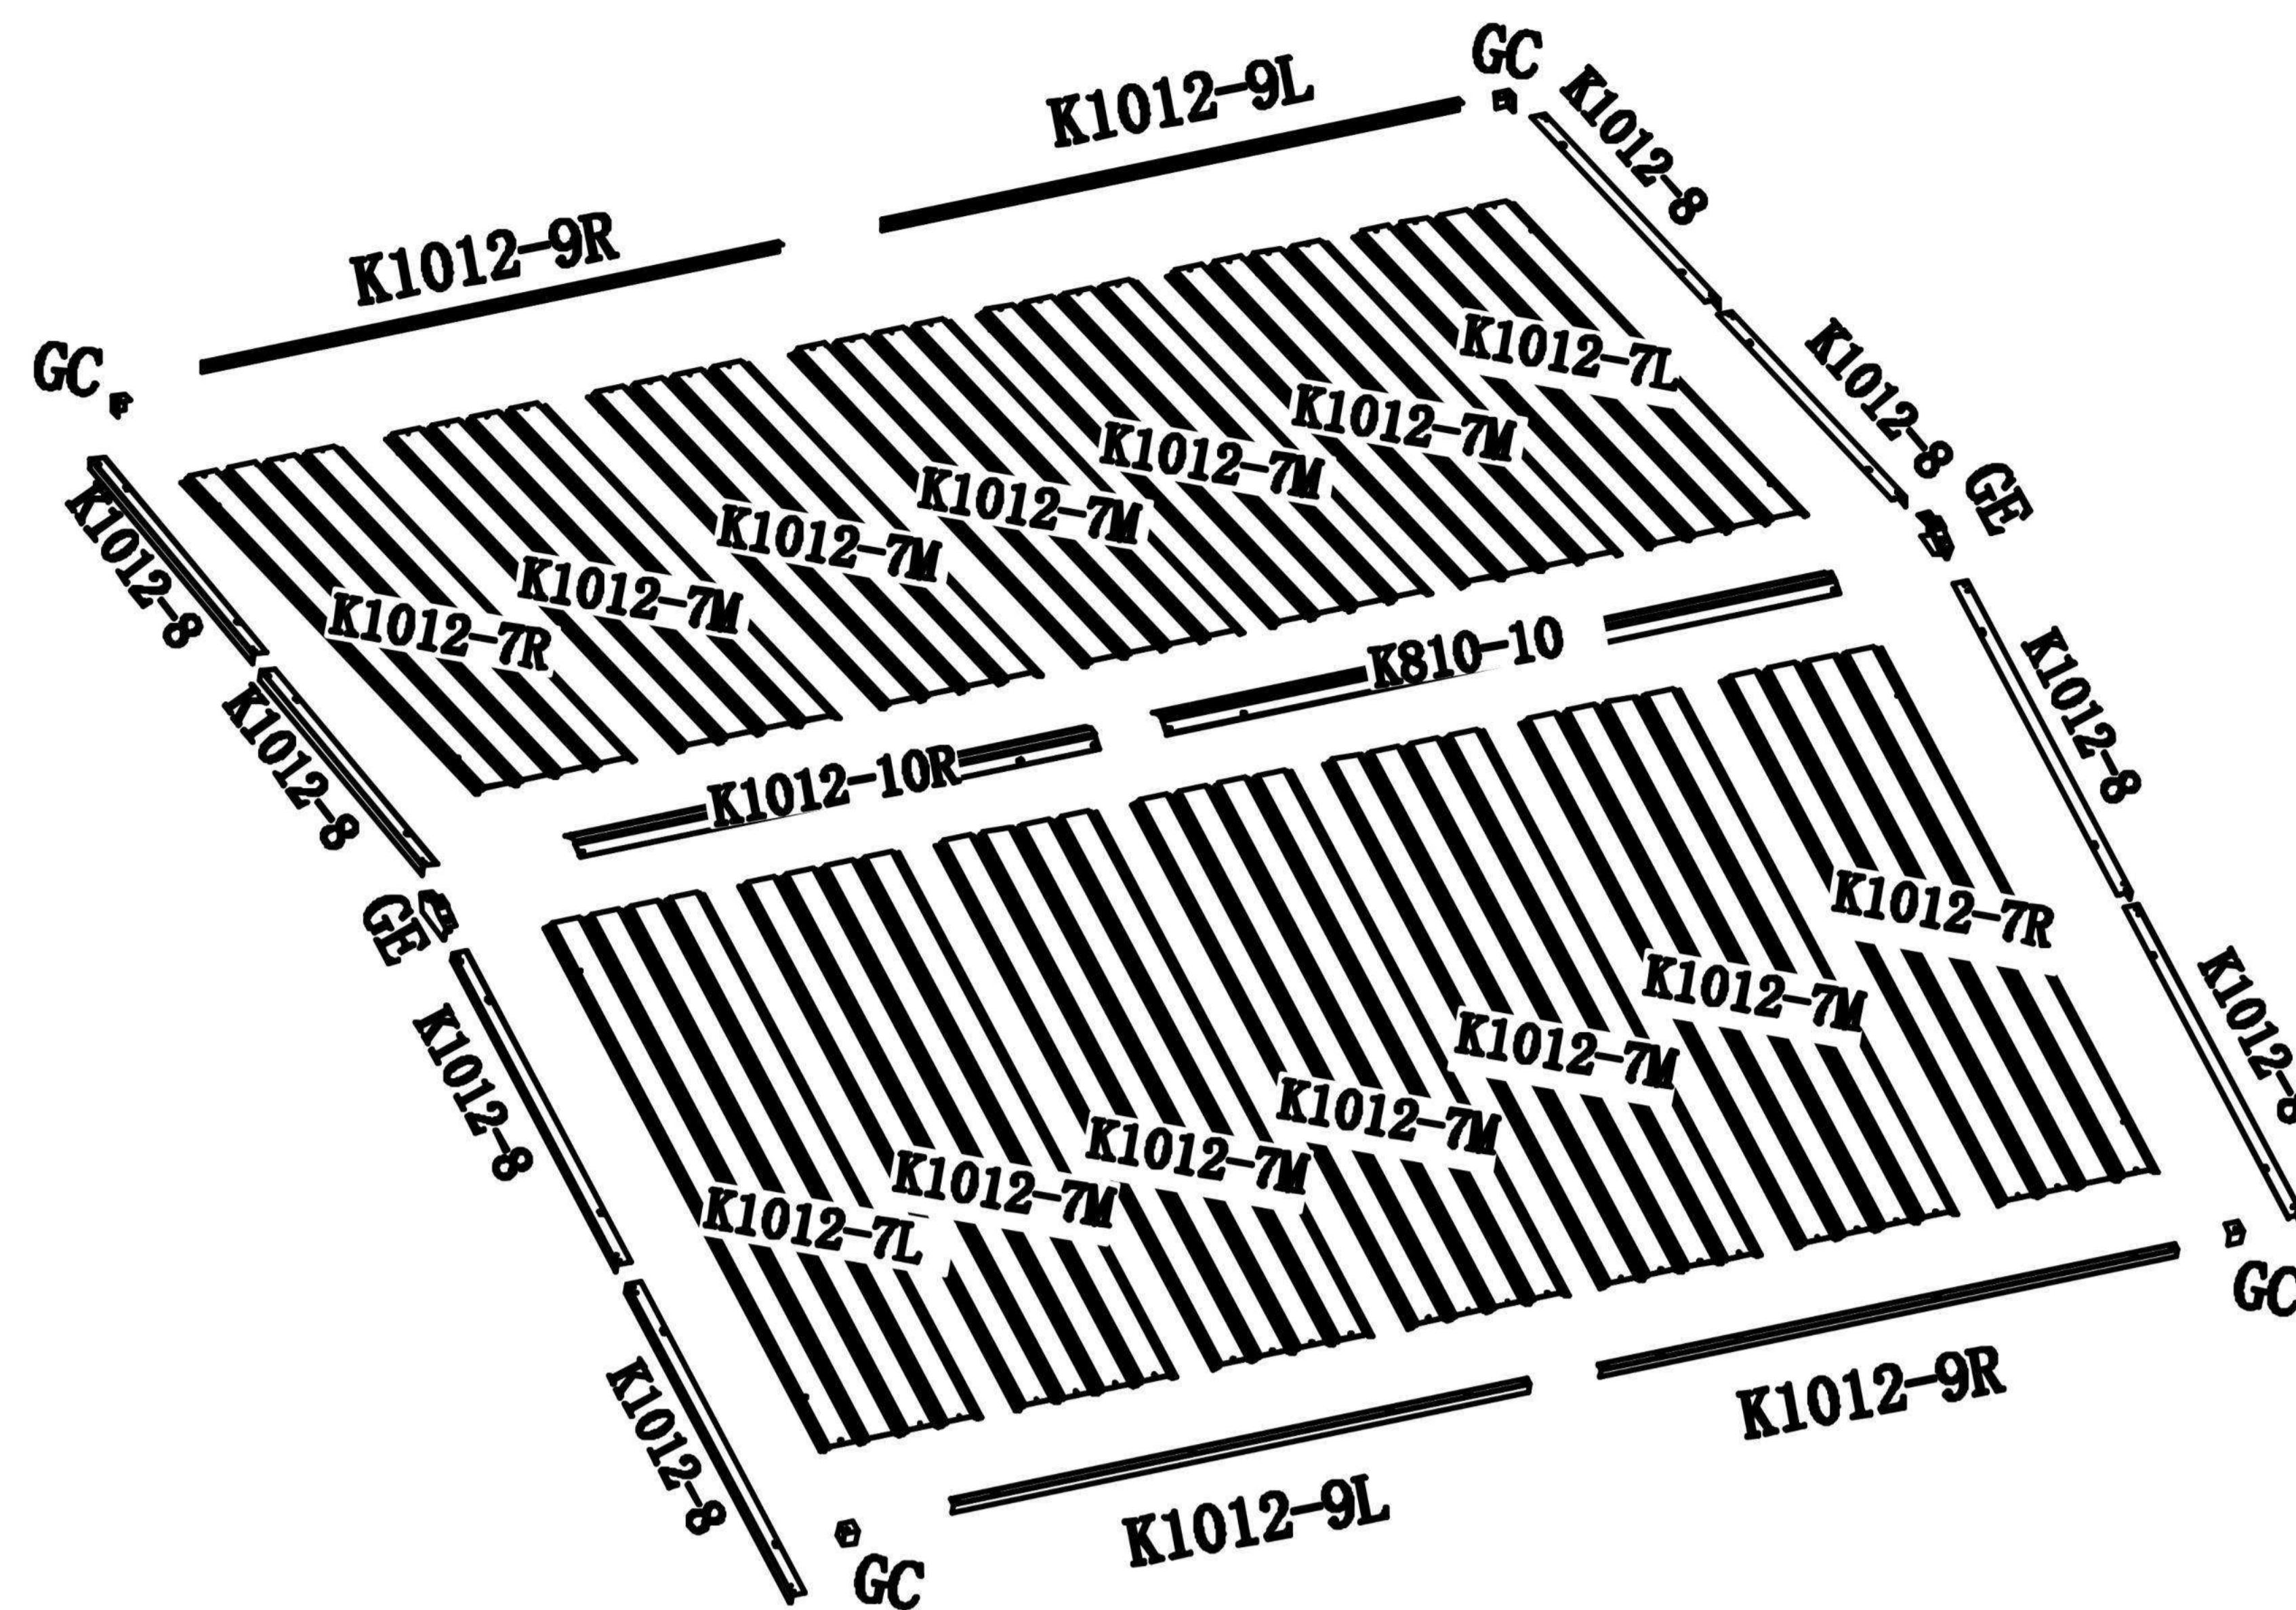

# Shed top frame

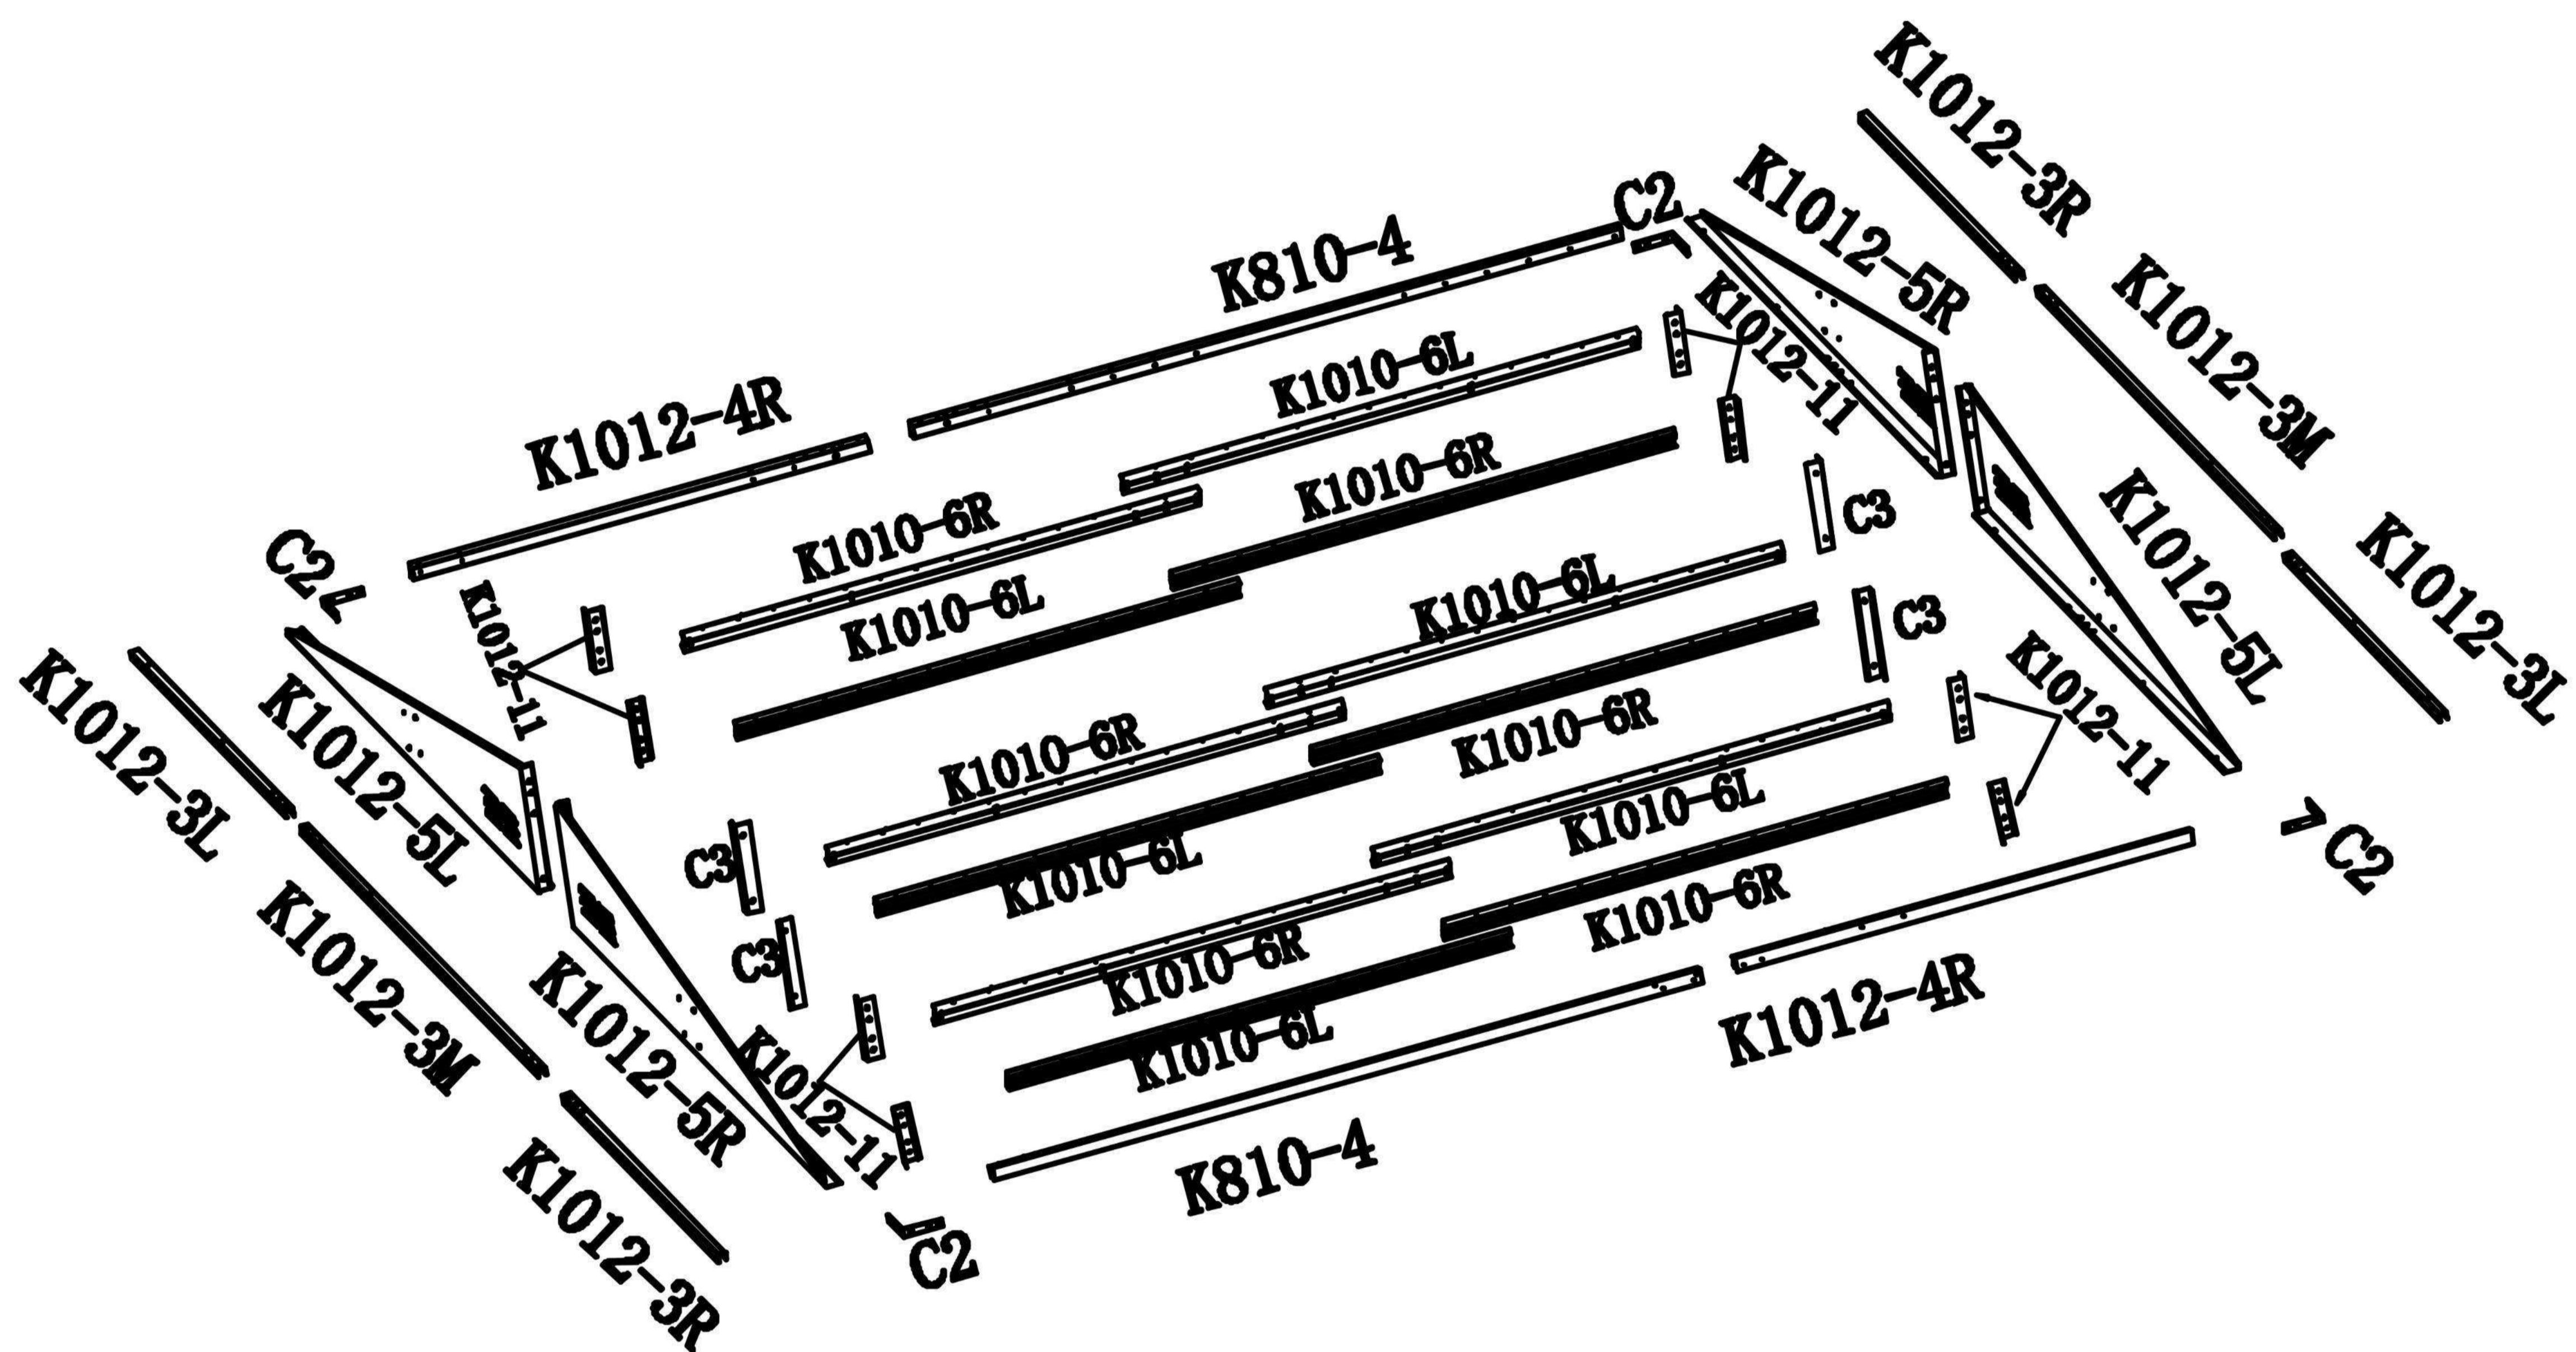


# Door and Shed base


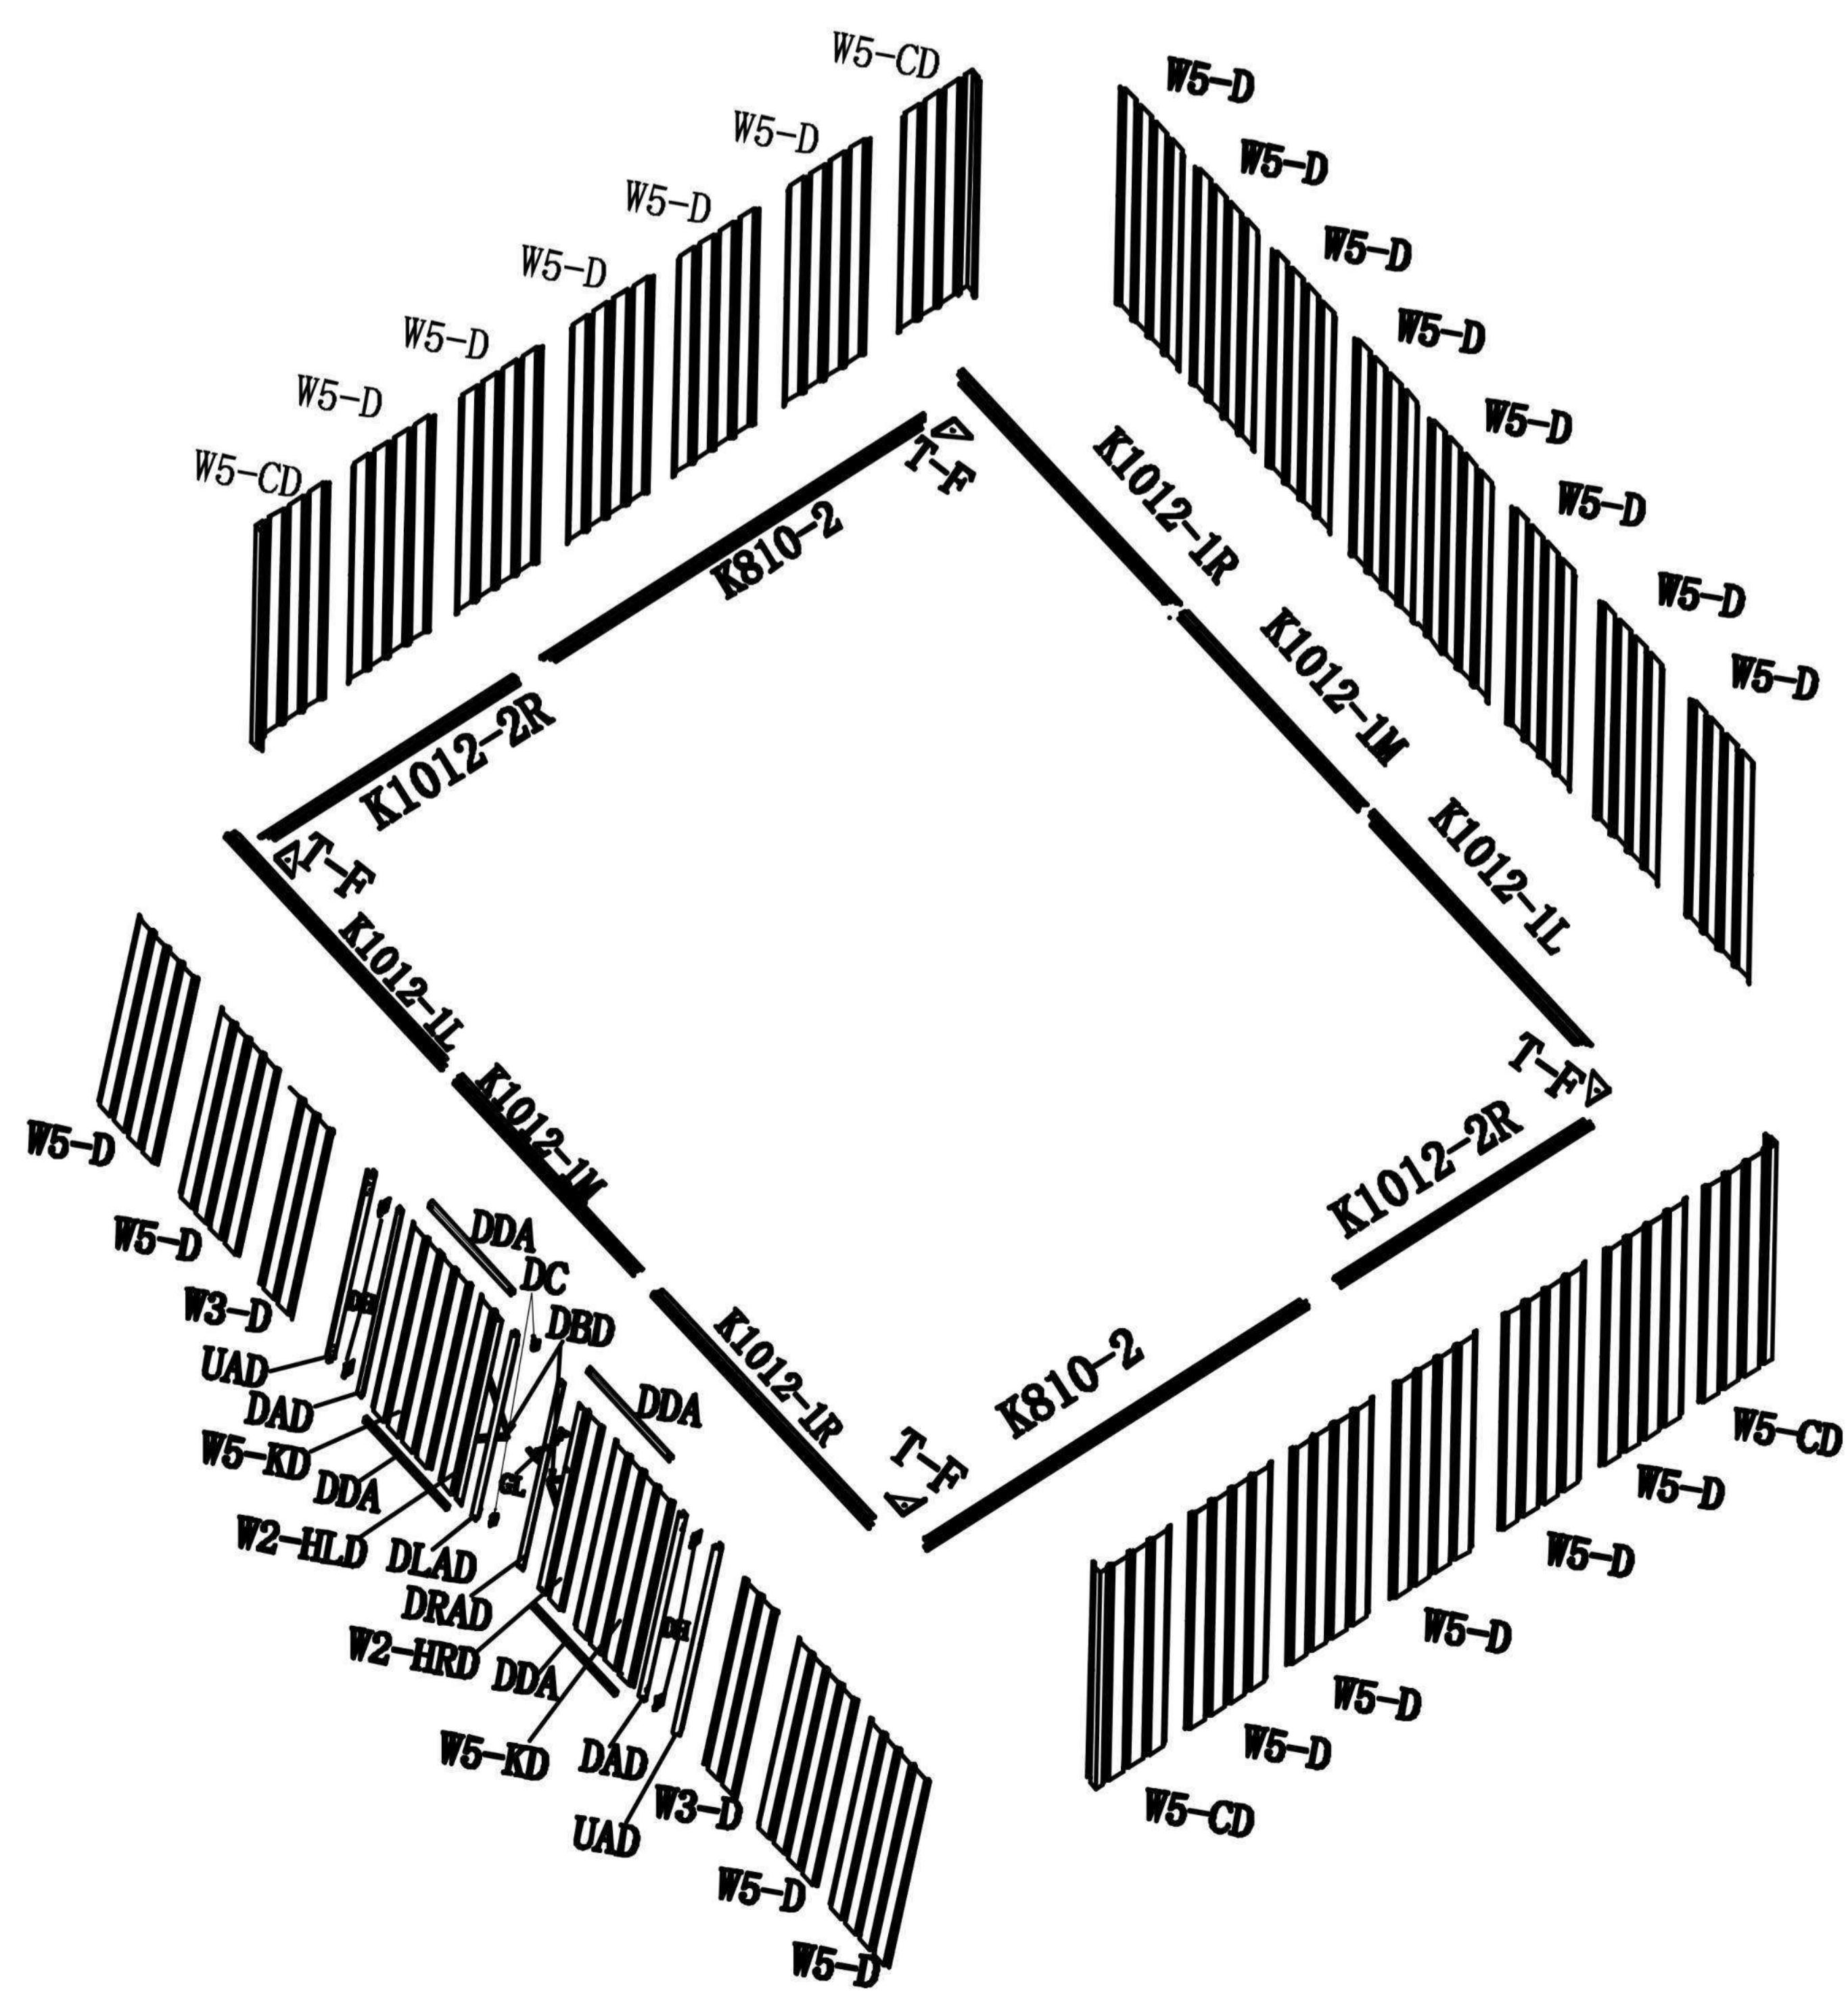


# Sort By Splicing




# Grain Mosaic of color coating plate

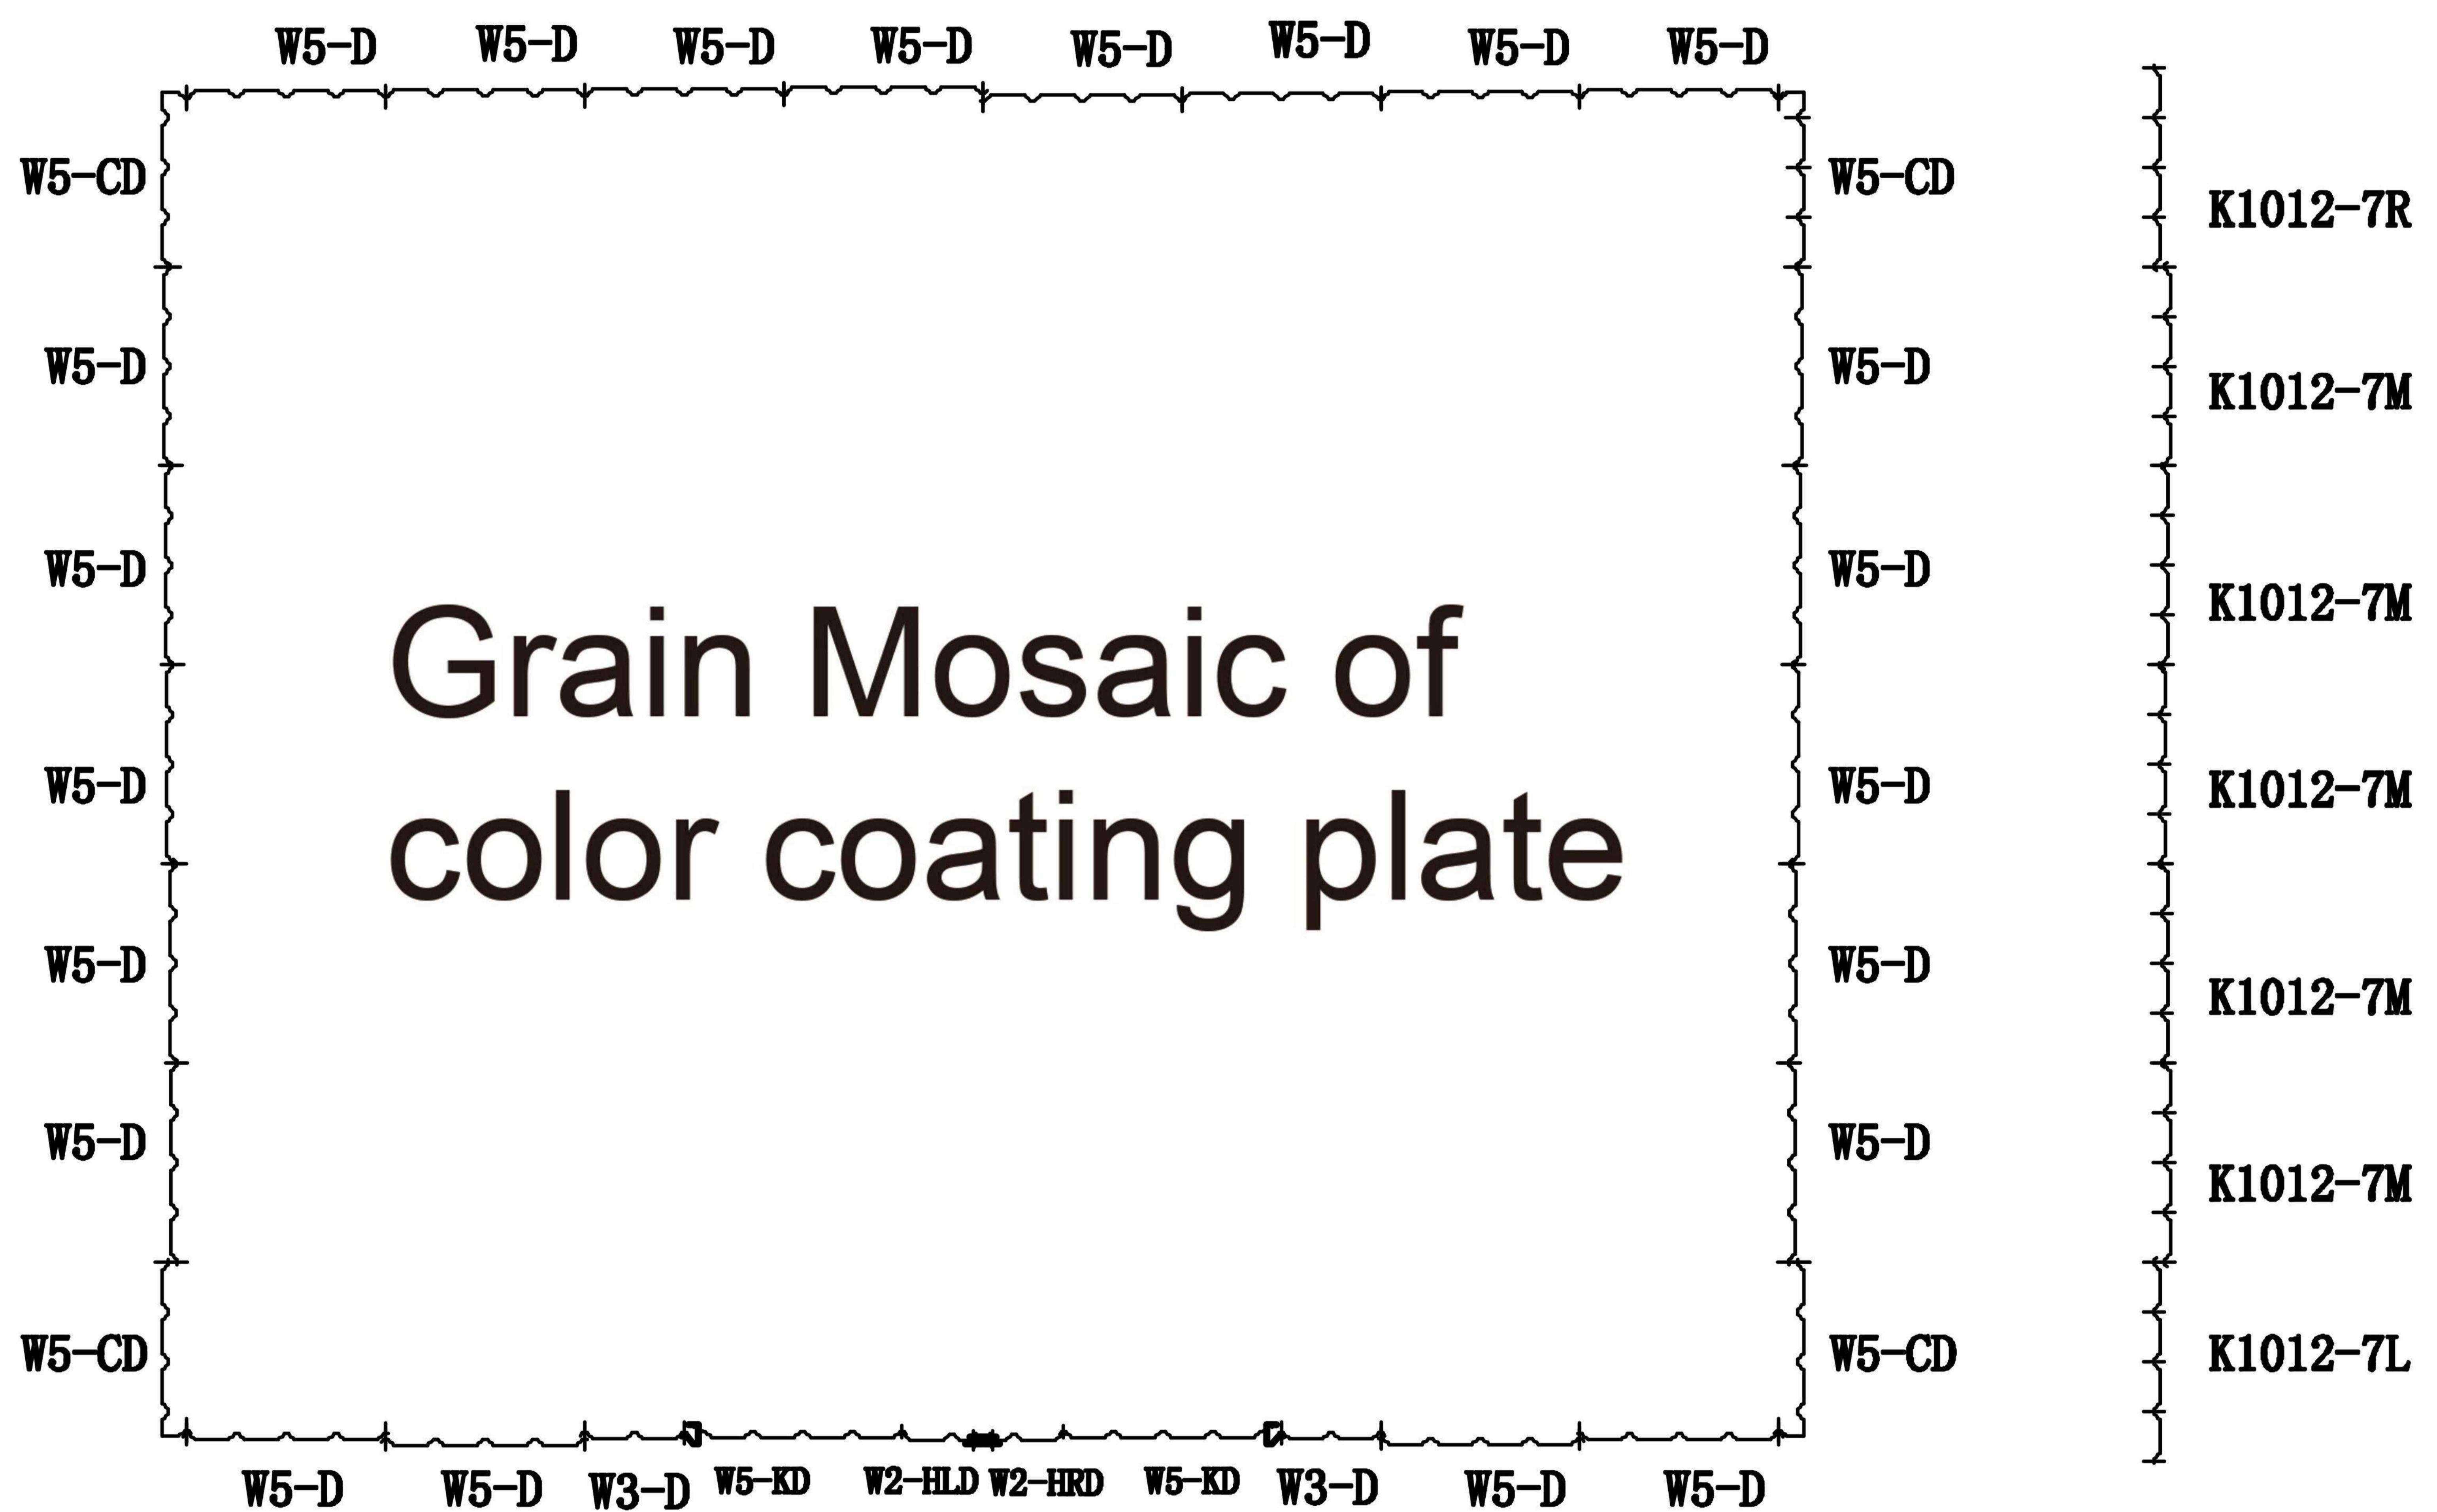

# STEP1

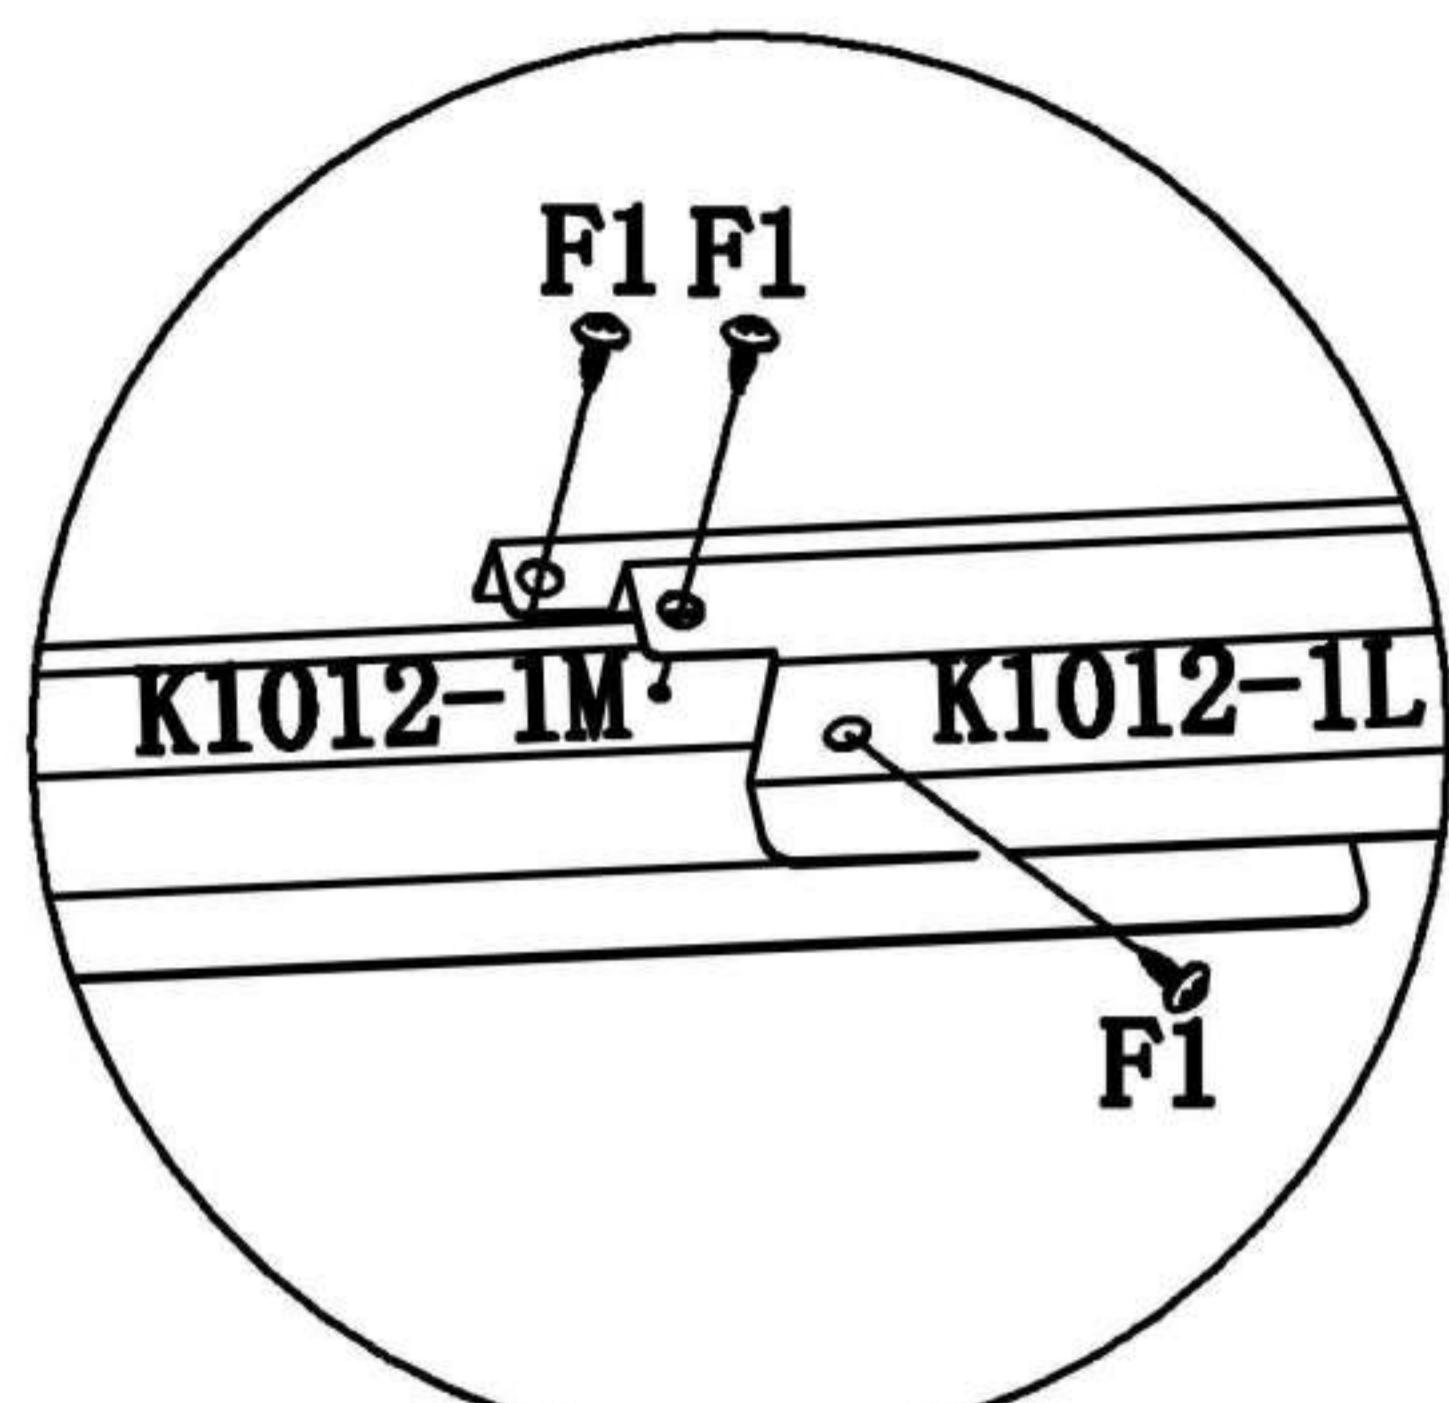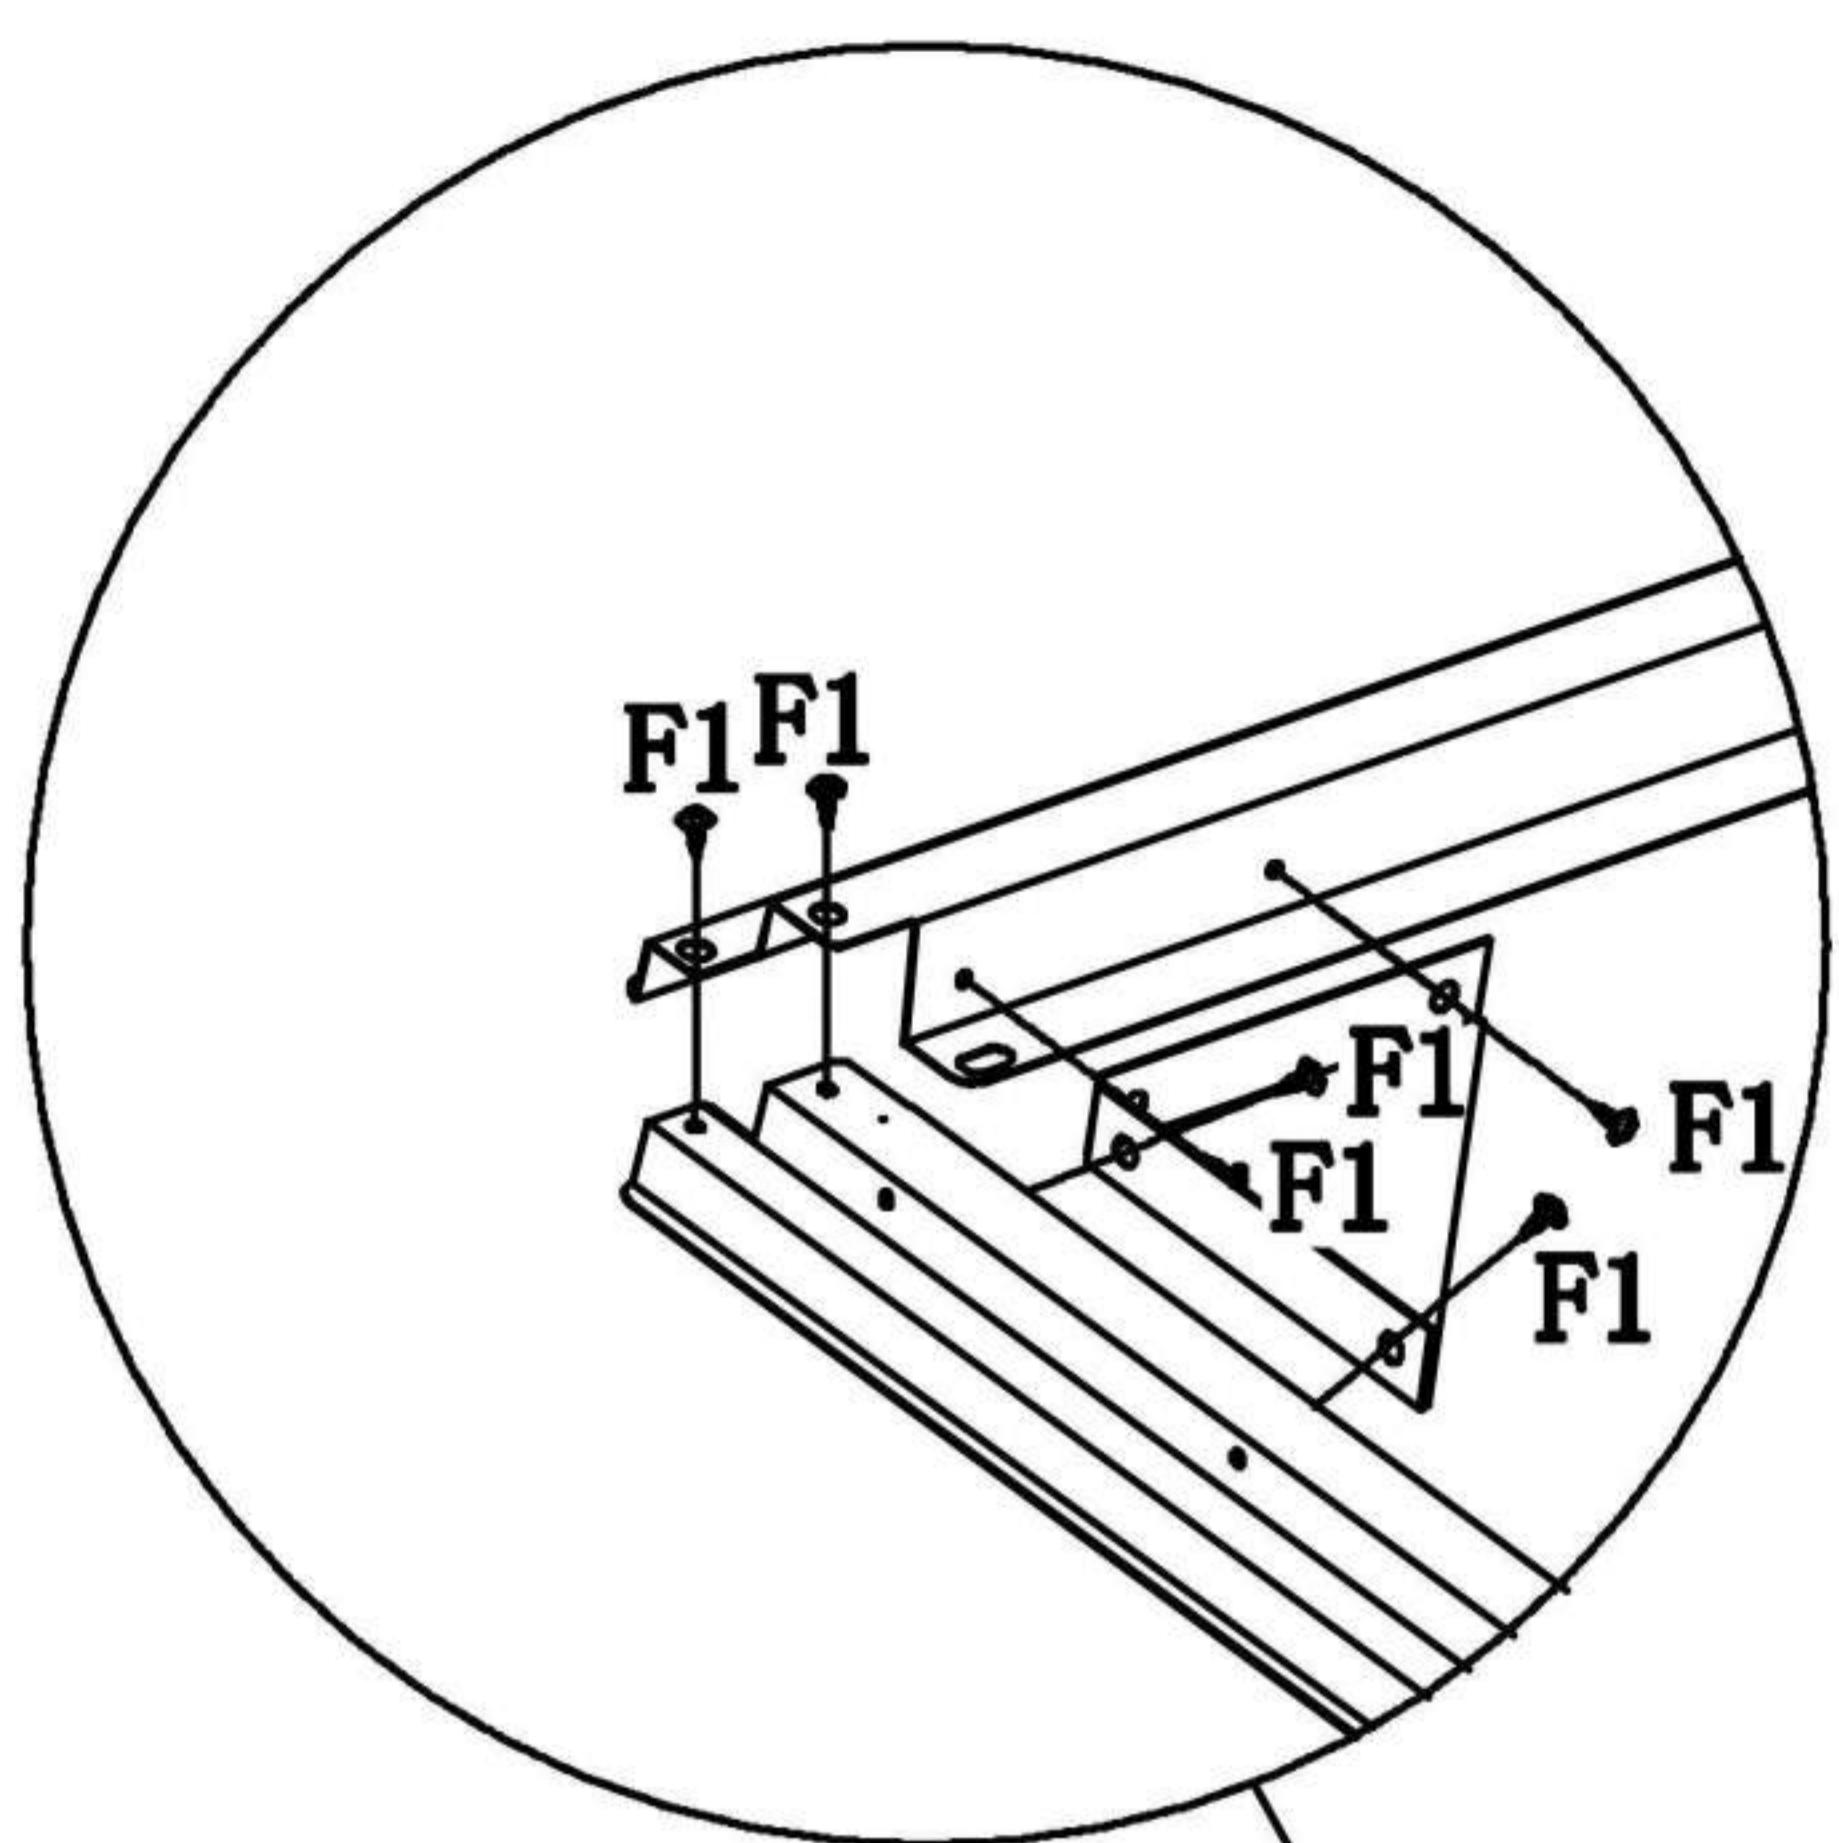


PART	NO.	QTY.
	K1012-1L	2
	K1012-1M	2
	K1012-1R	2
	K810-2	2
	K1012-2R	2
T-F		4
F1		42

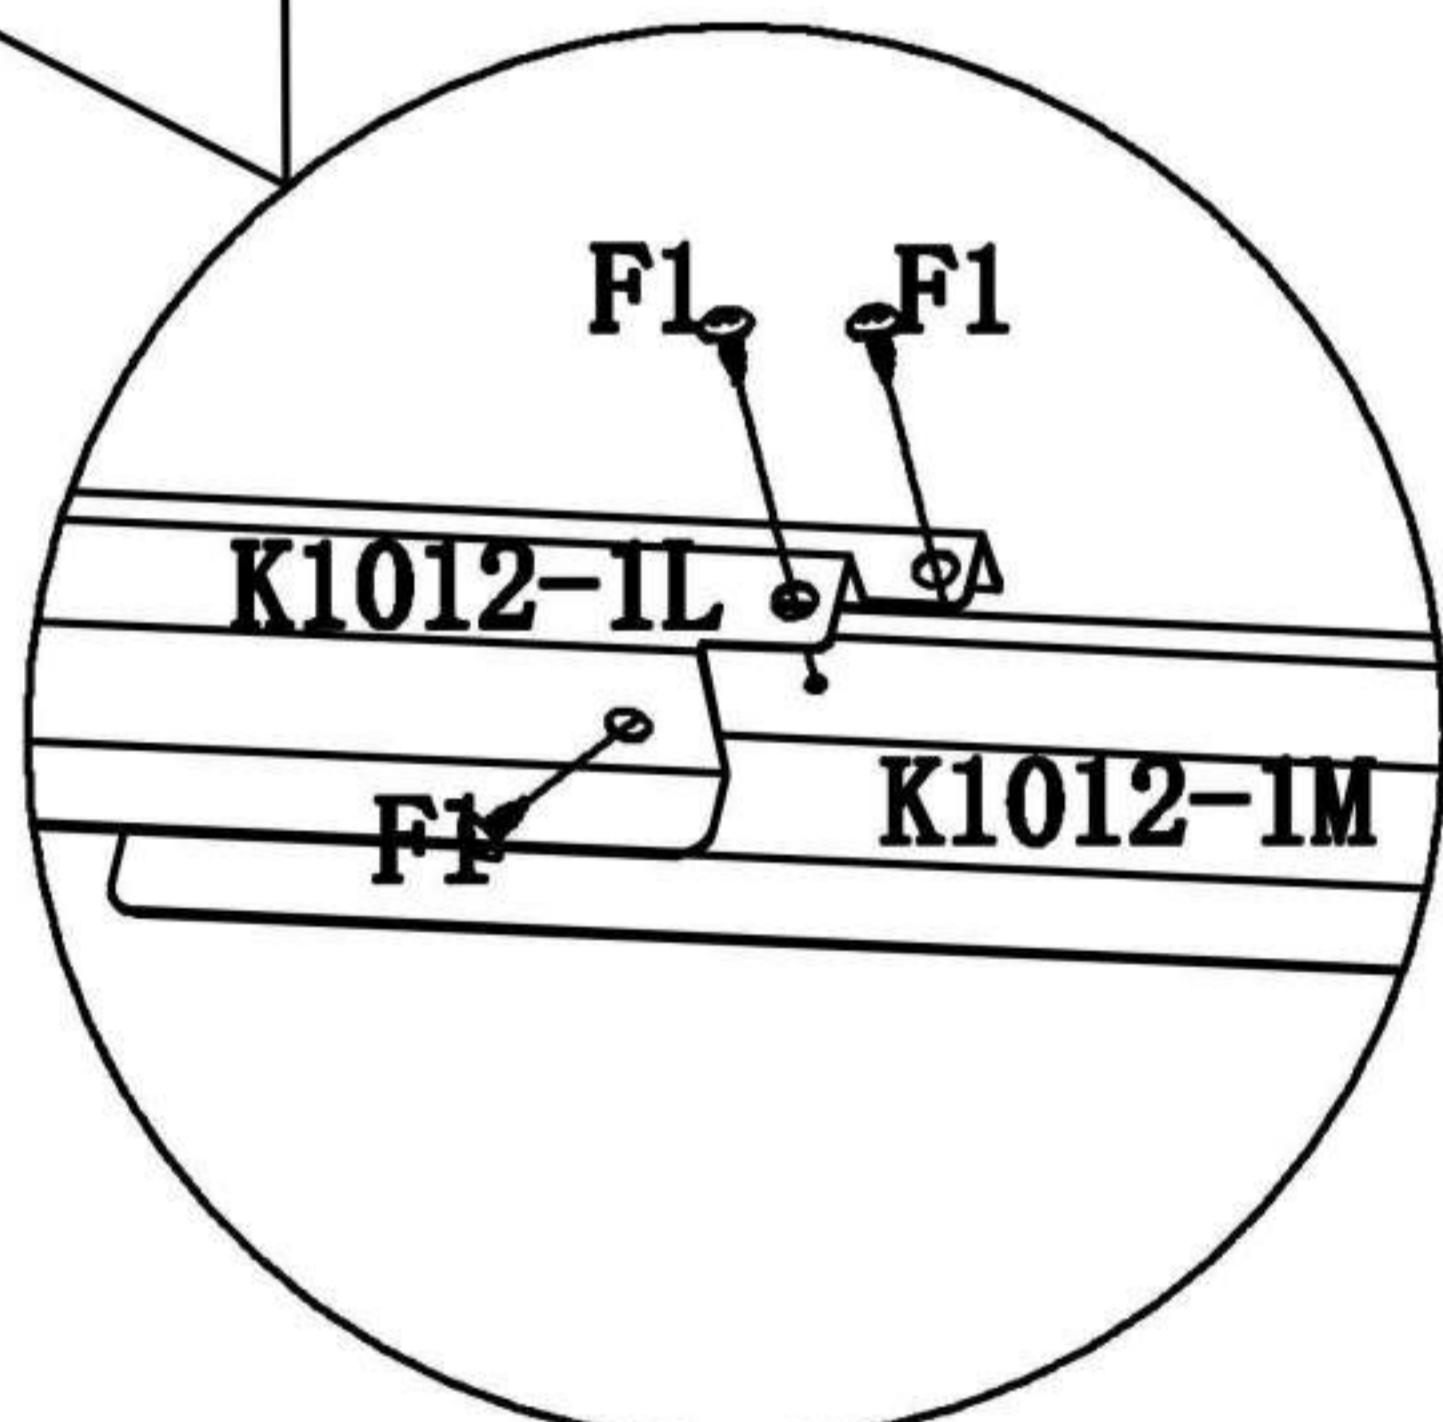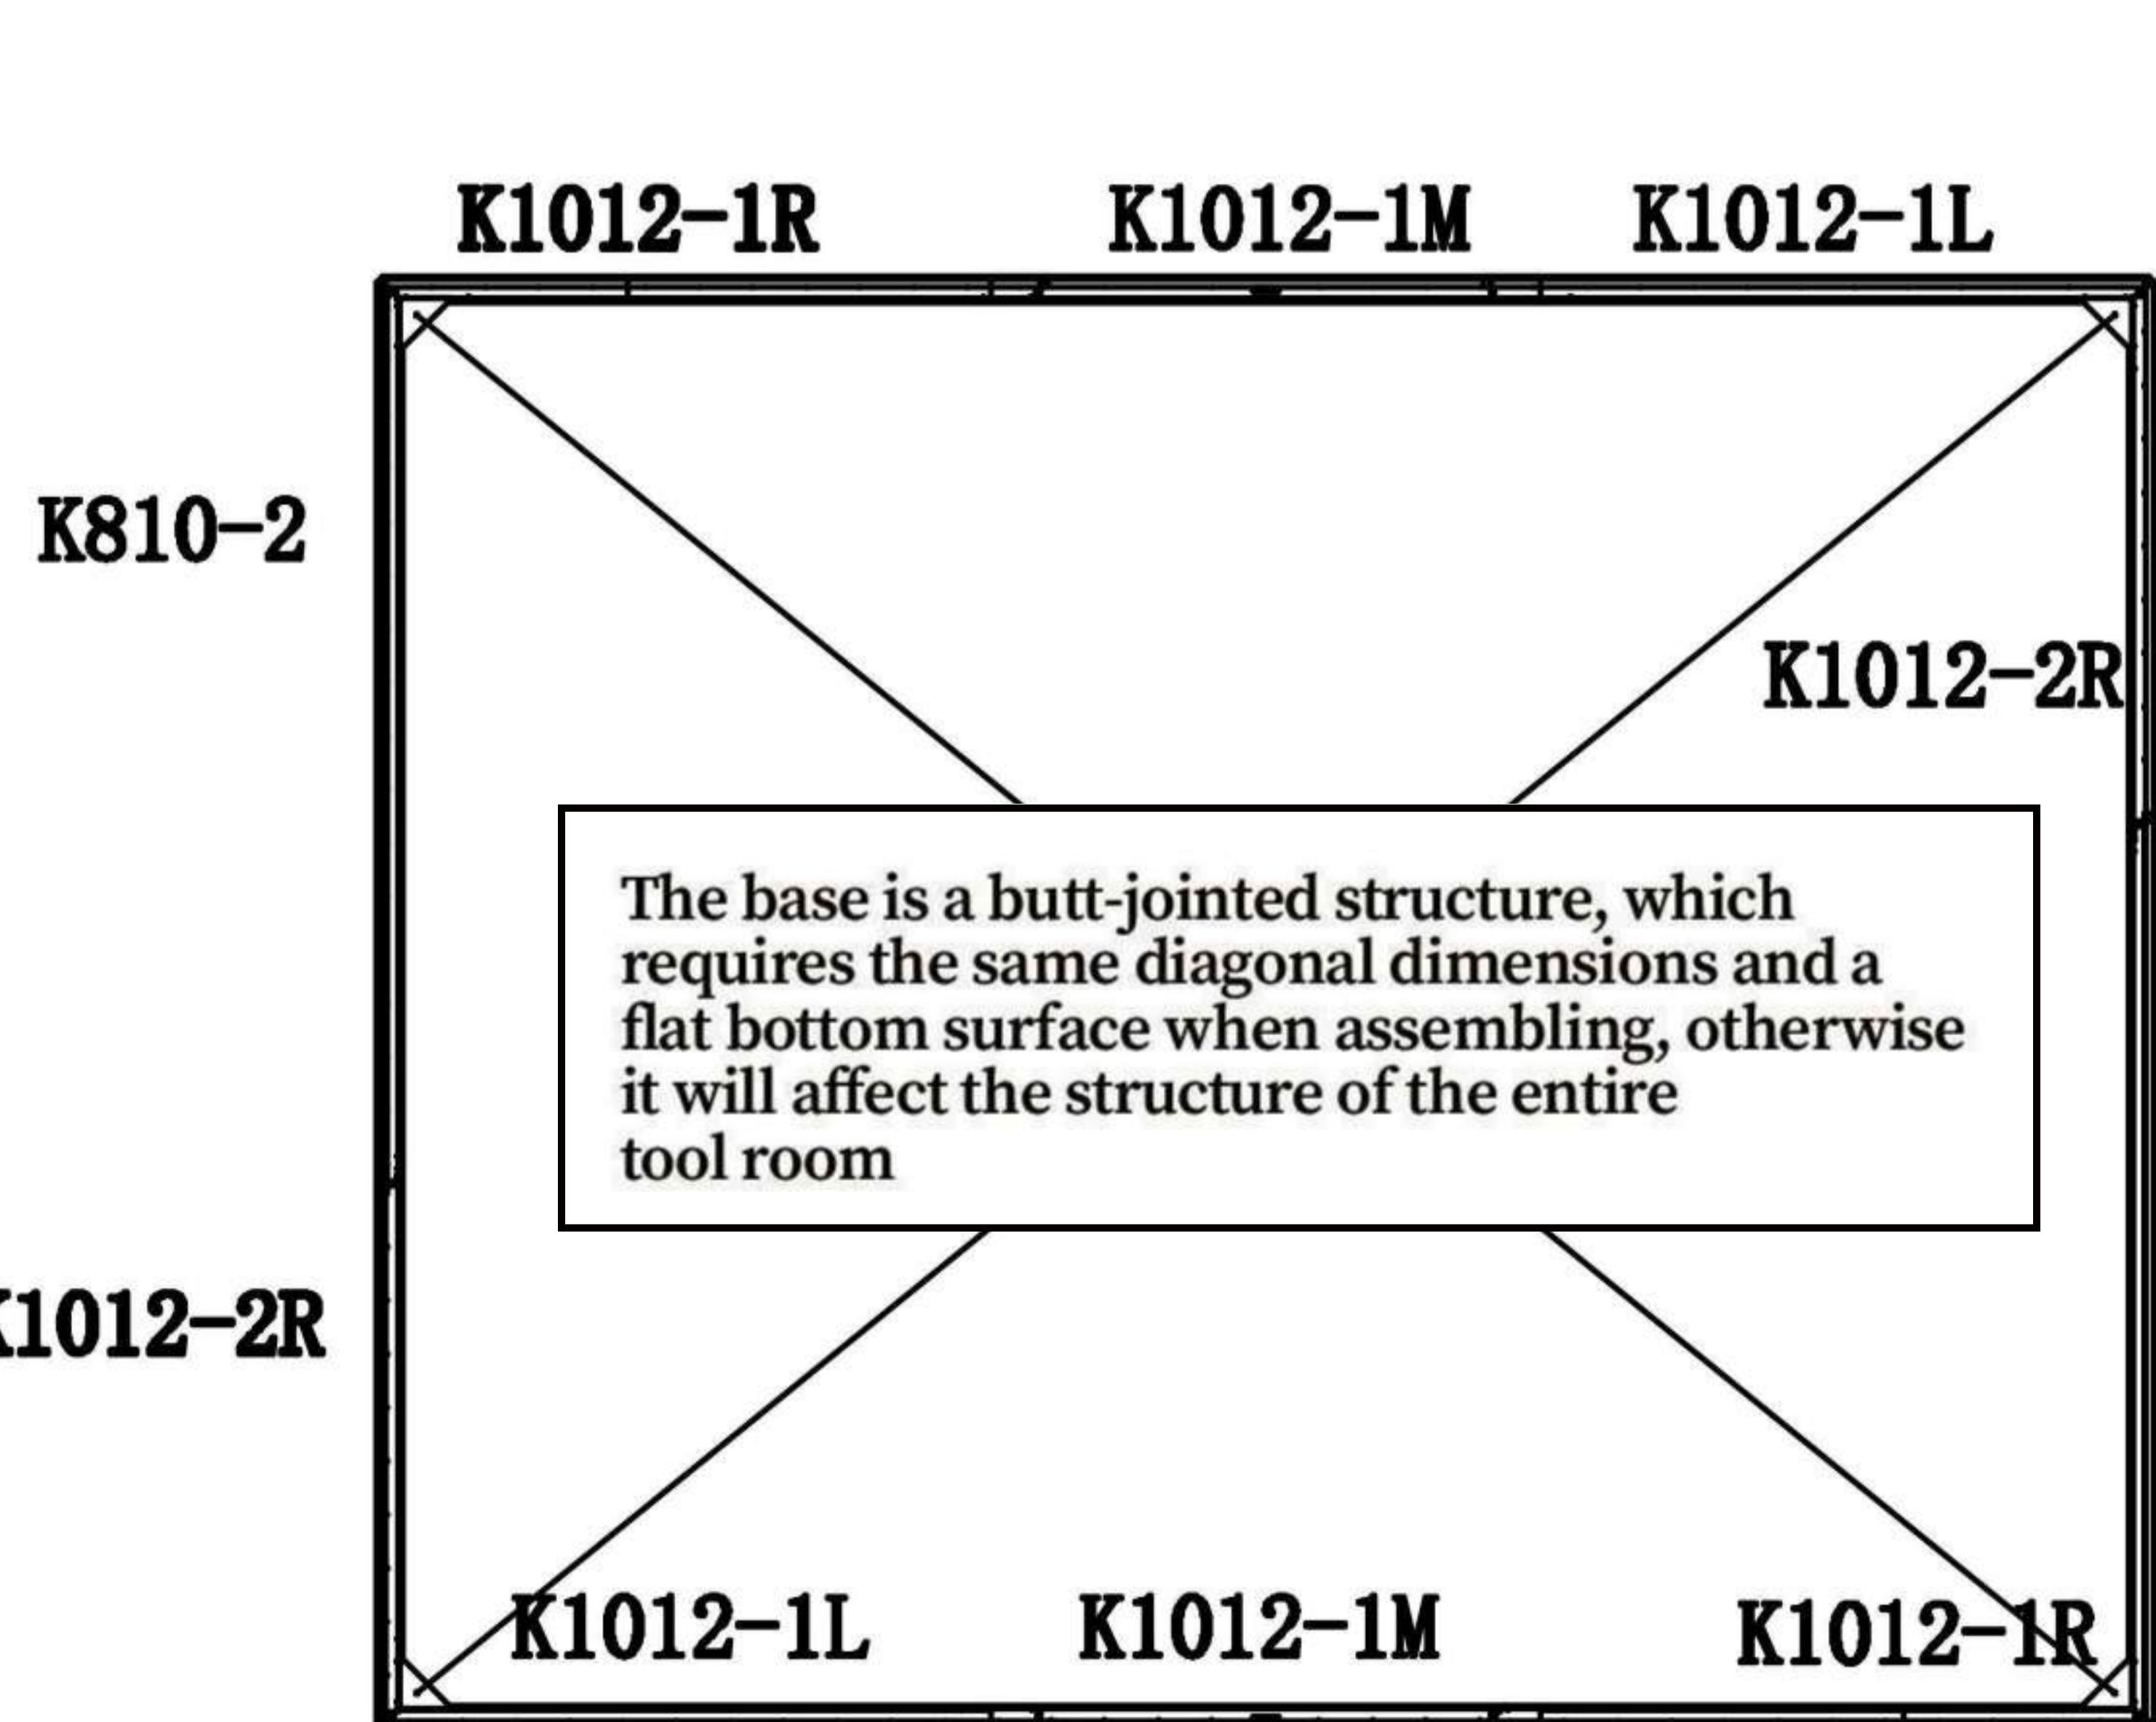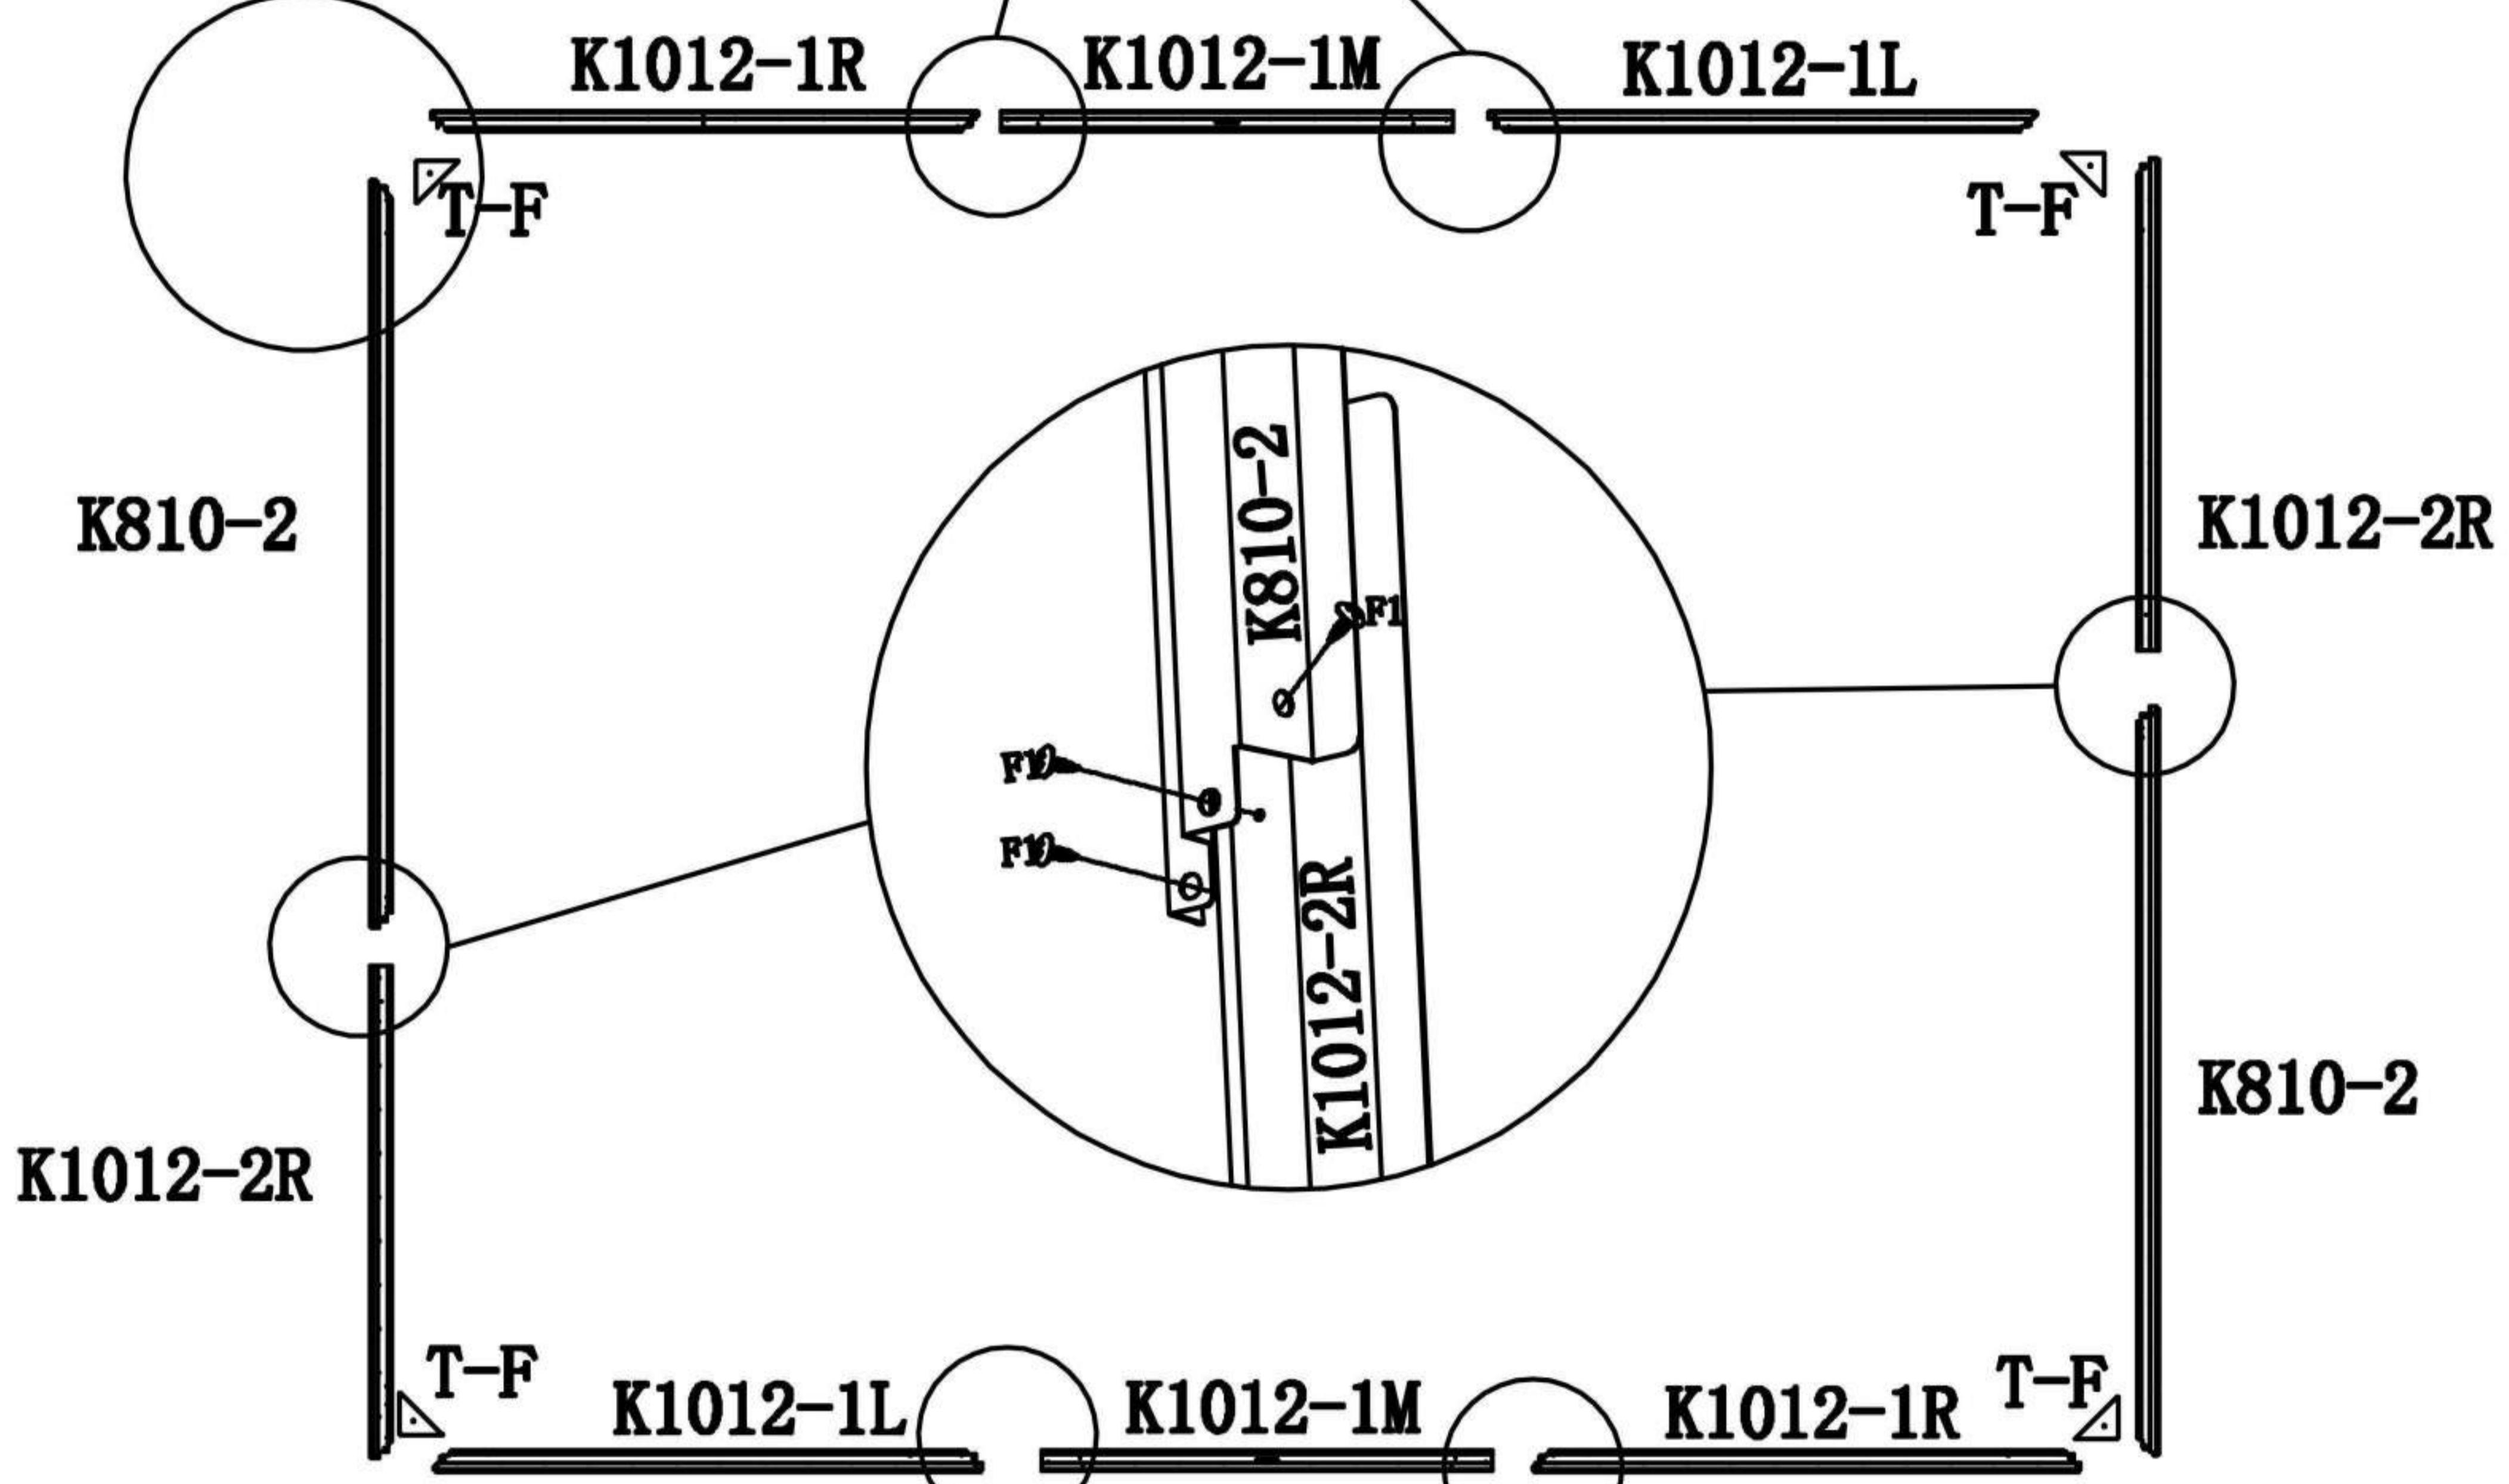


# STEP2

PART	NO.	QTY.
1	W5-CD	4
F1		12




# STEP3


PART	NO.	QTY.
	K1012-3L	2
	K1012-3R	2
	K1012-3M	2
	K810-4	2
	K1012-4R	2
F1	48	
C2	4	




# STEP4

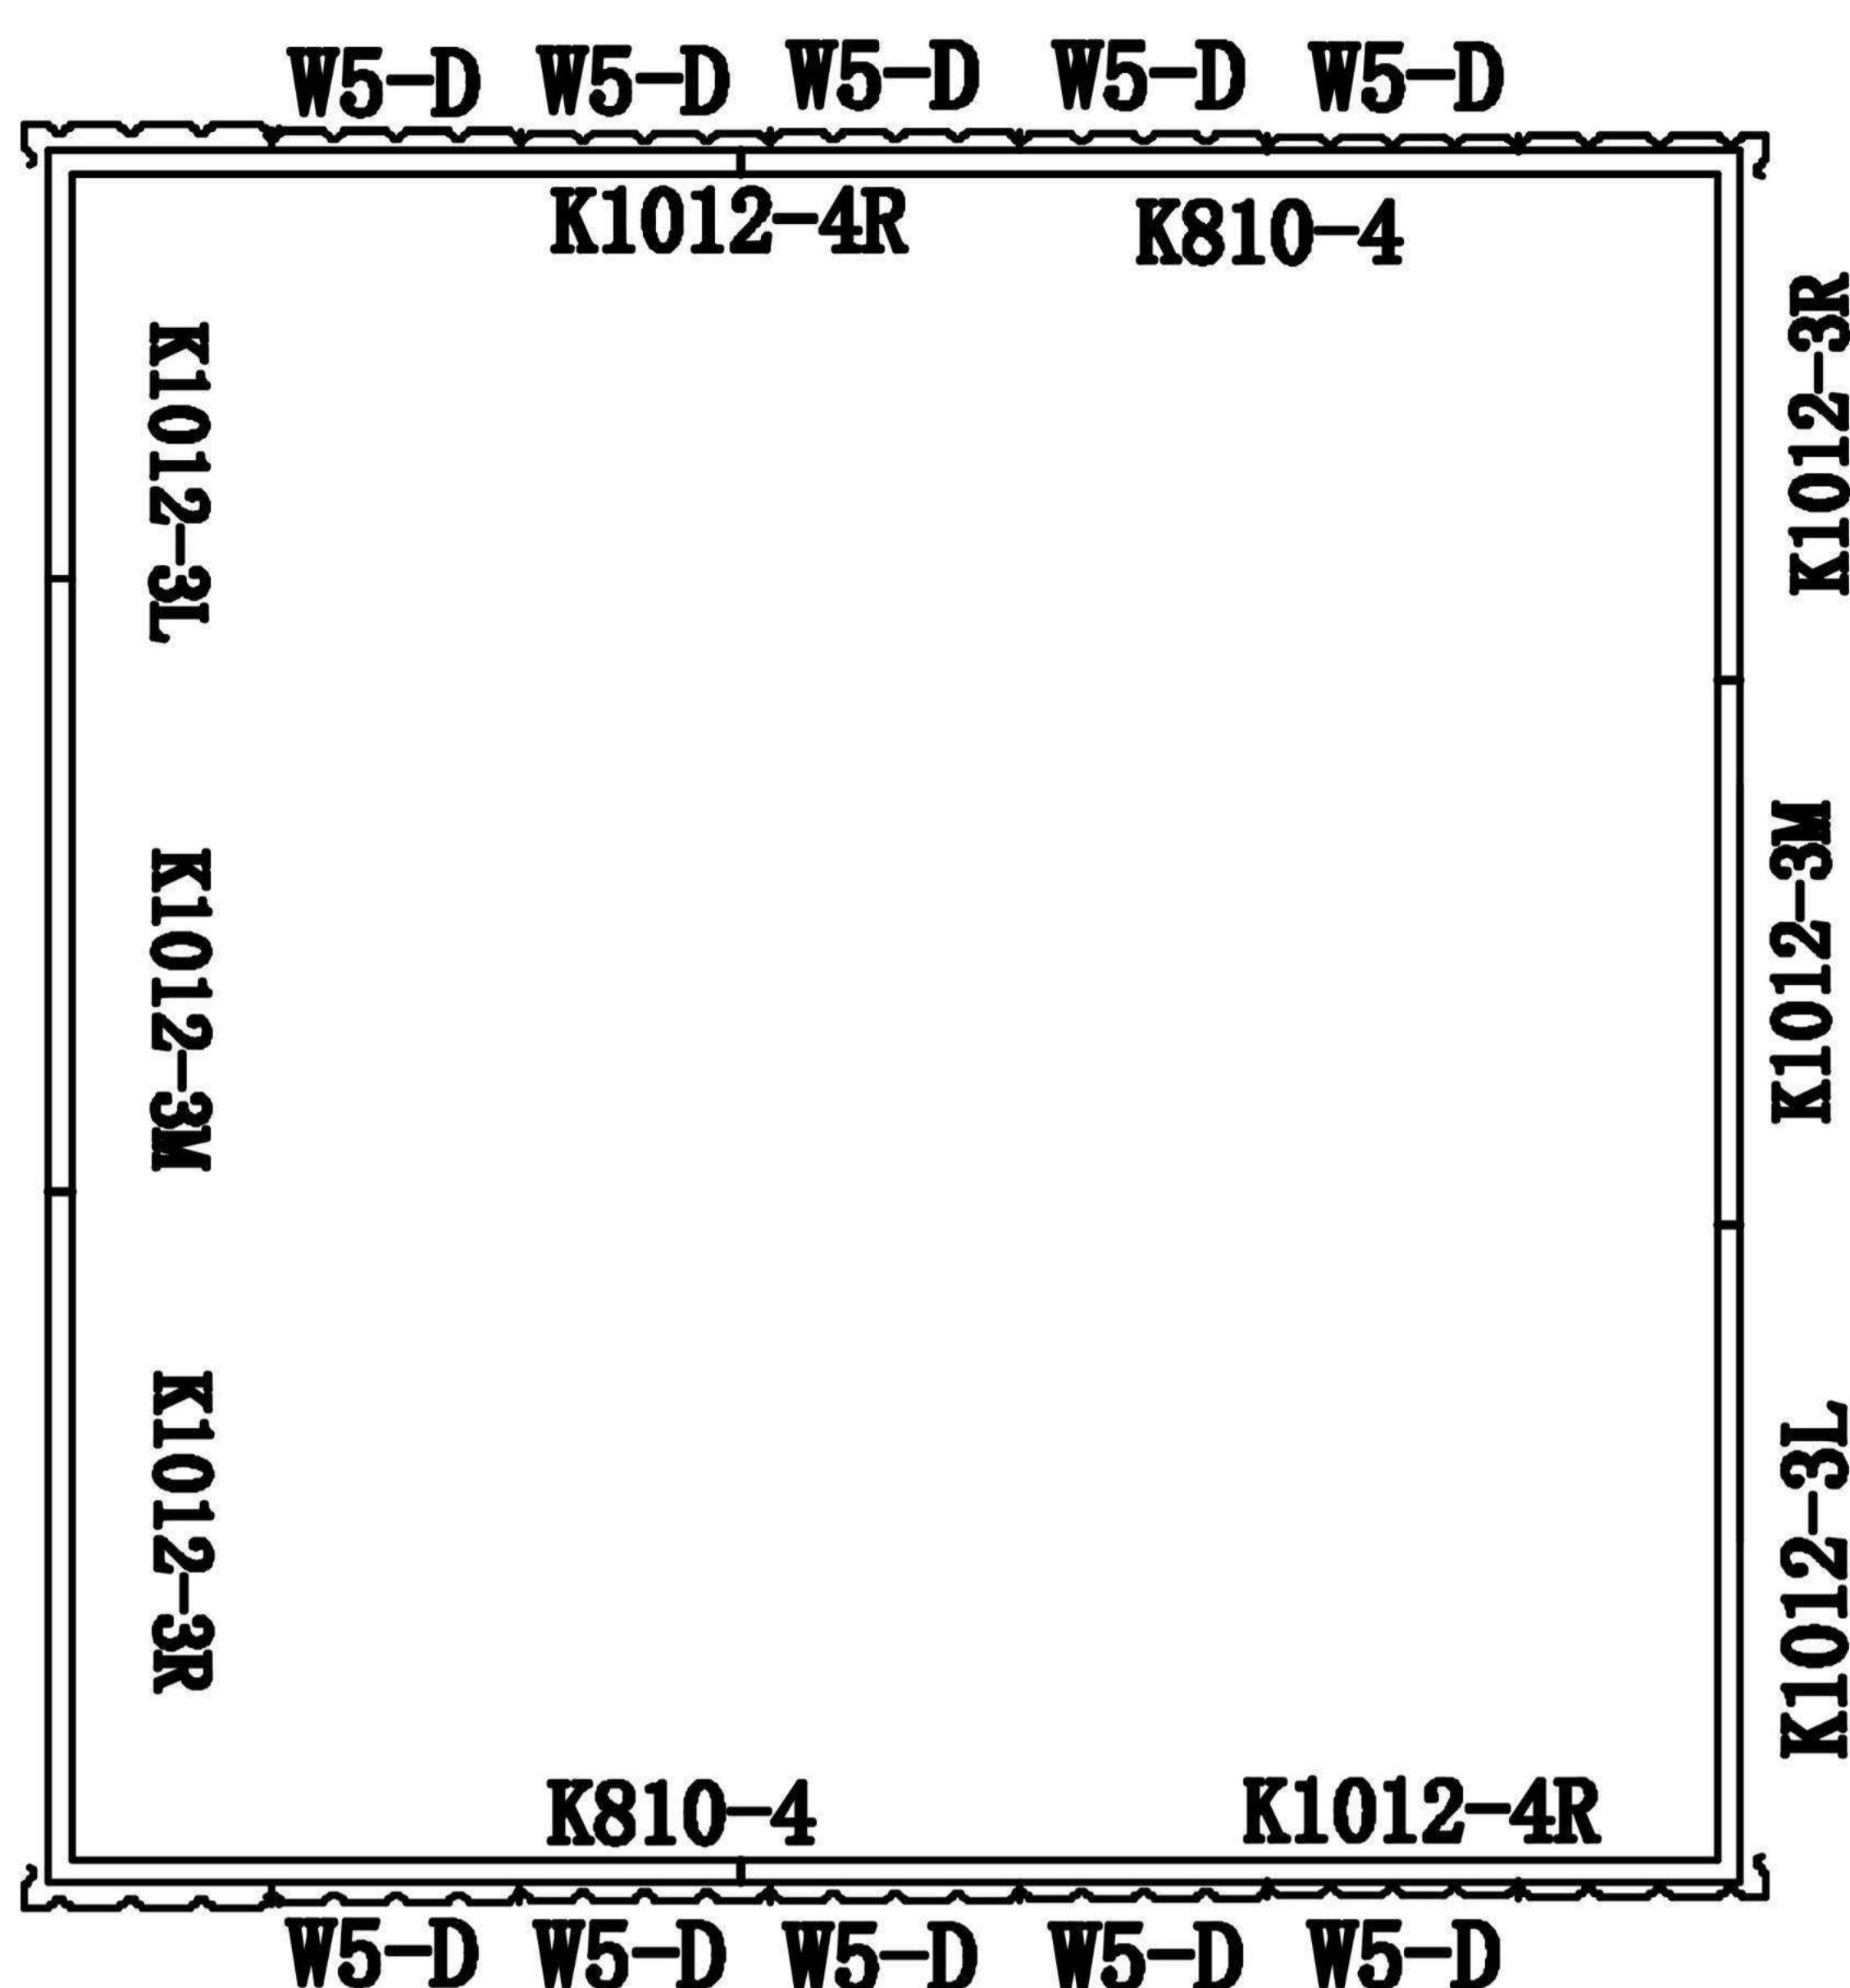


PART	NO.	QTY.
	W5-D	10
	F1	84
	F2	12

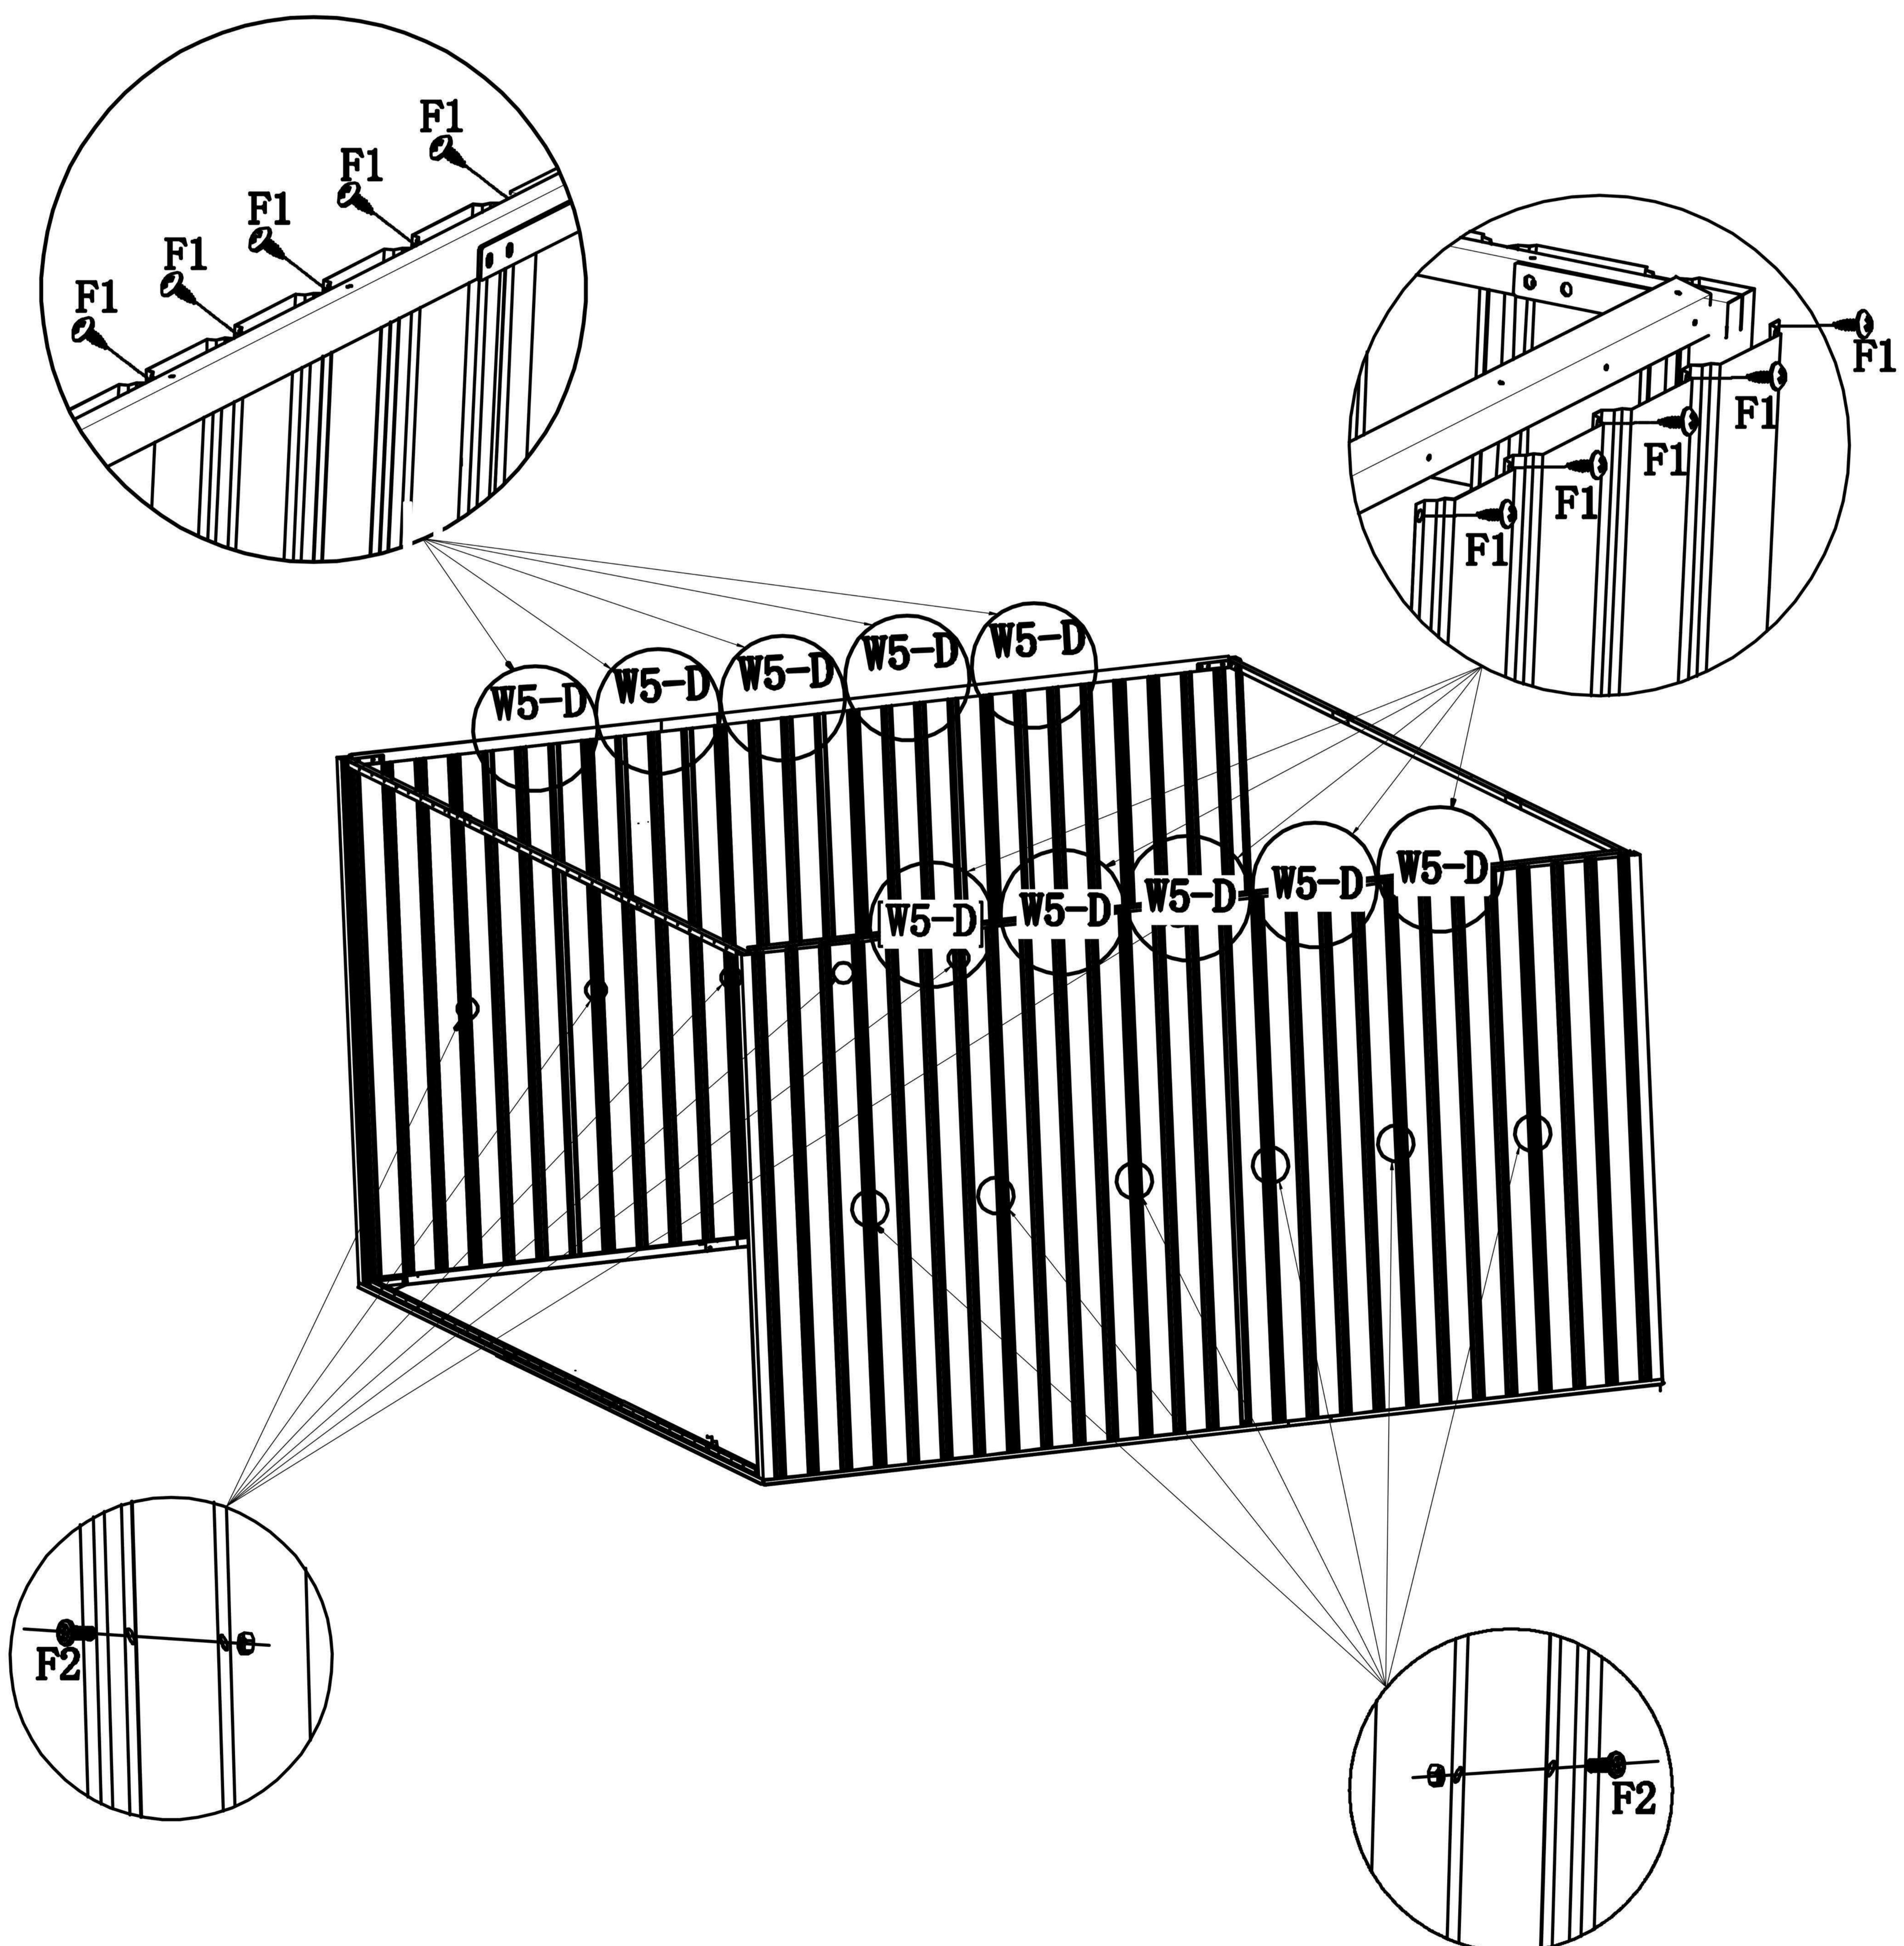

# STEP5


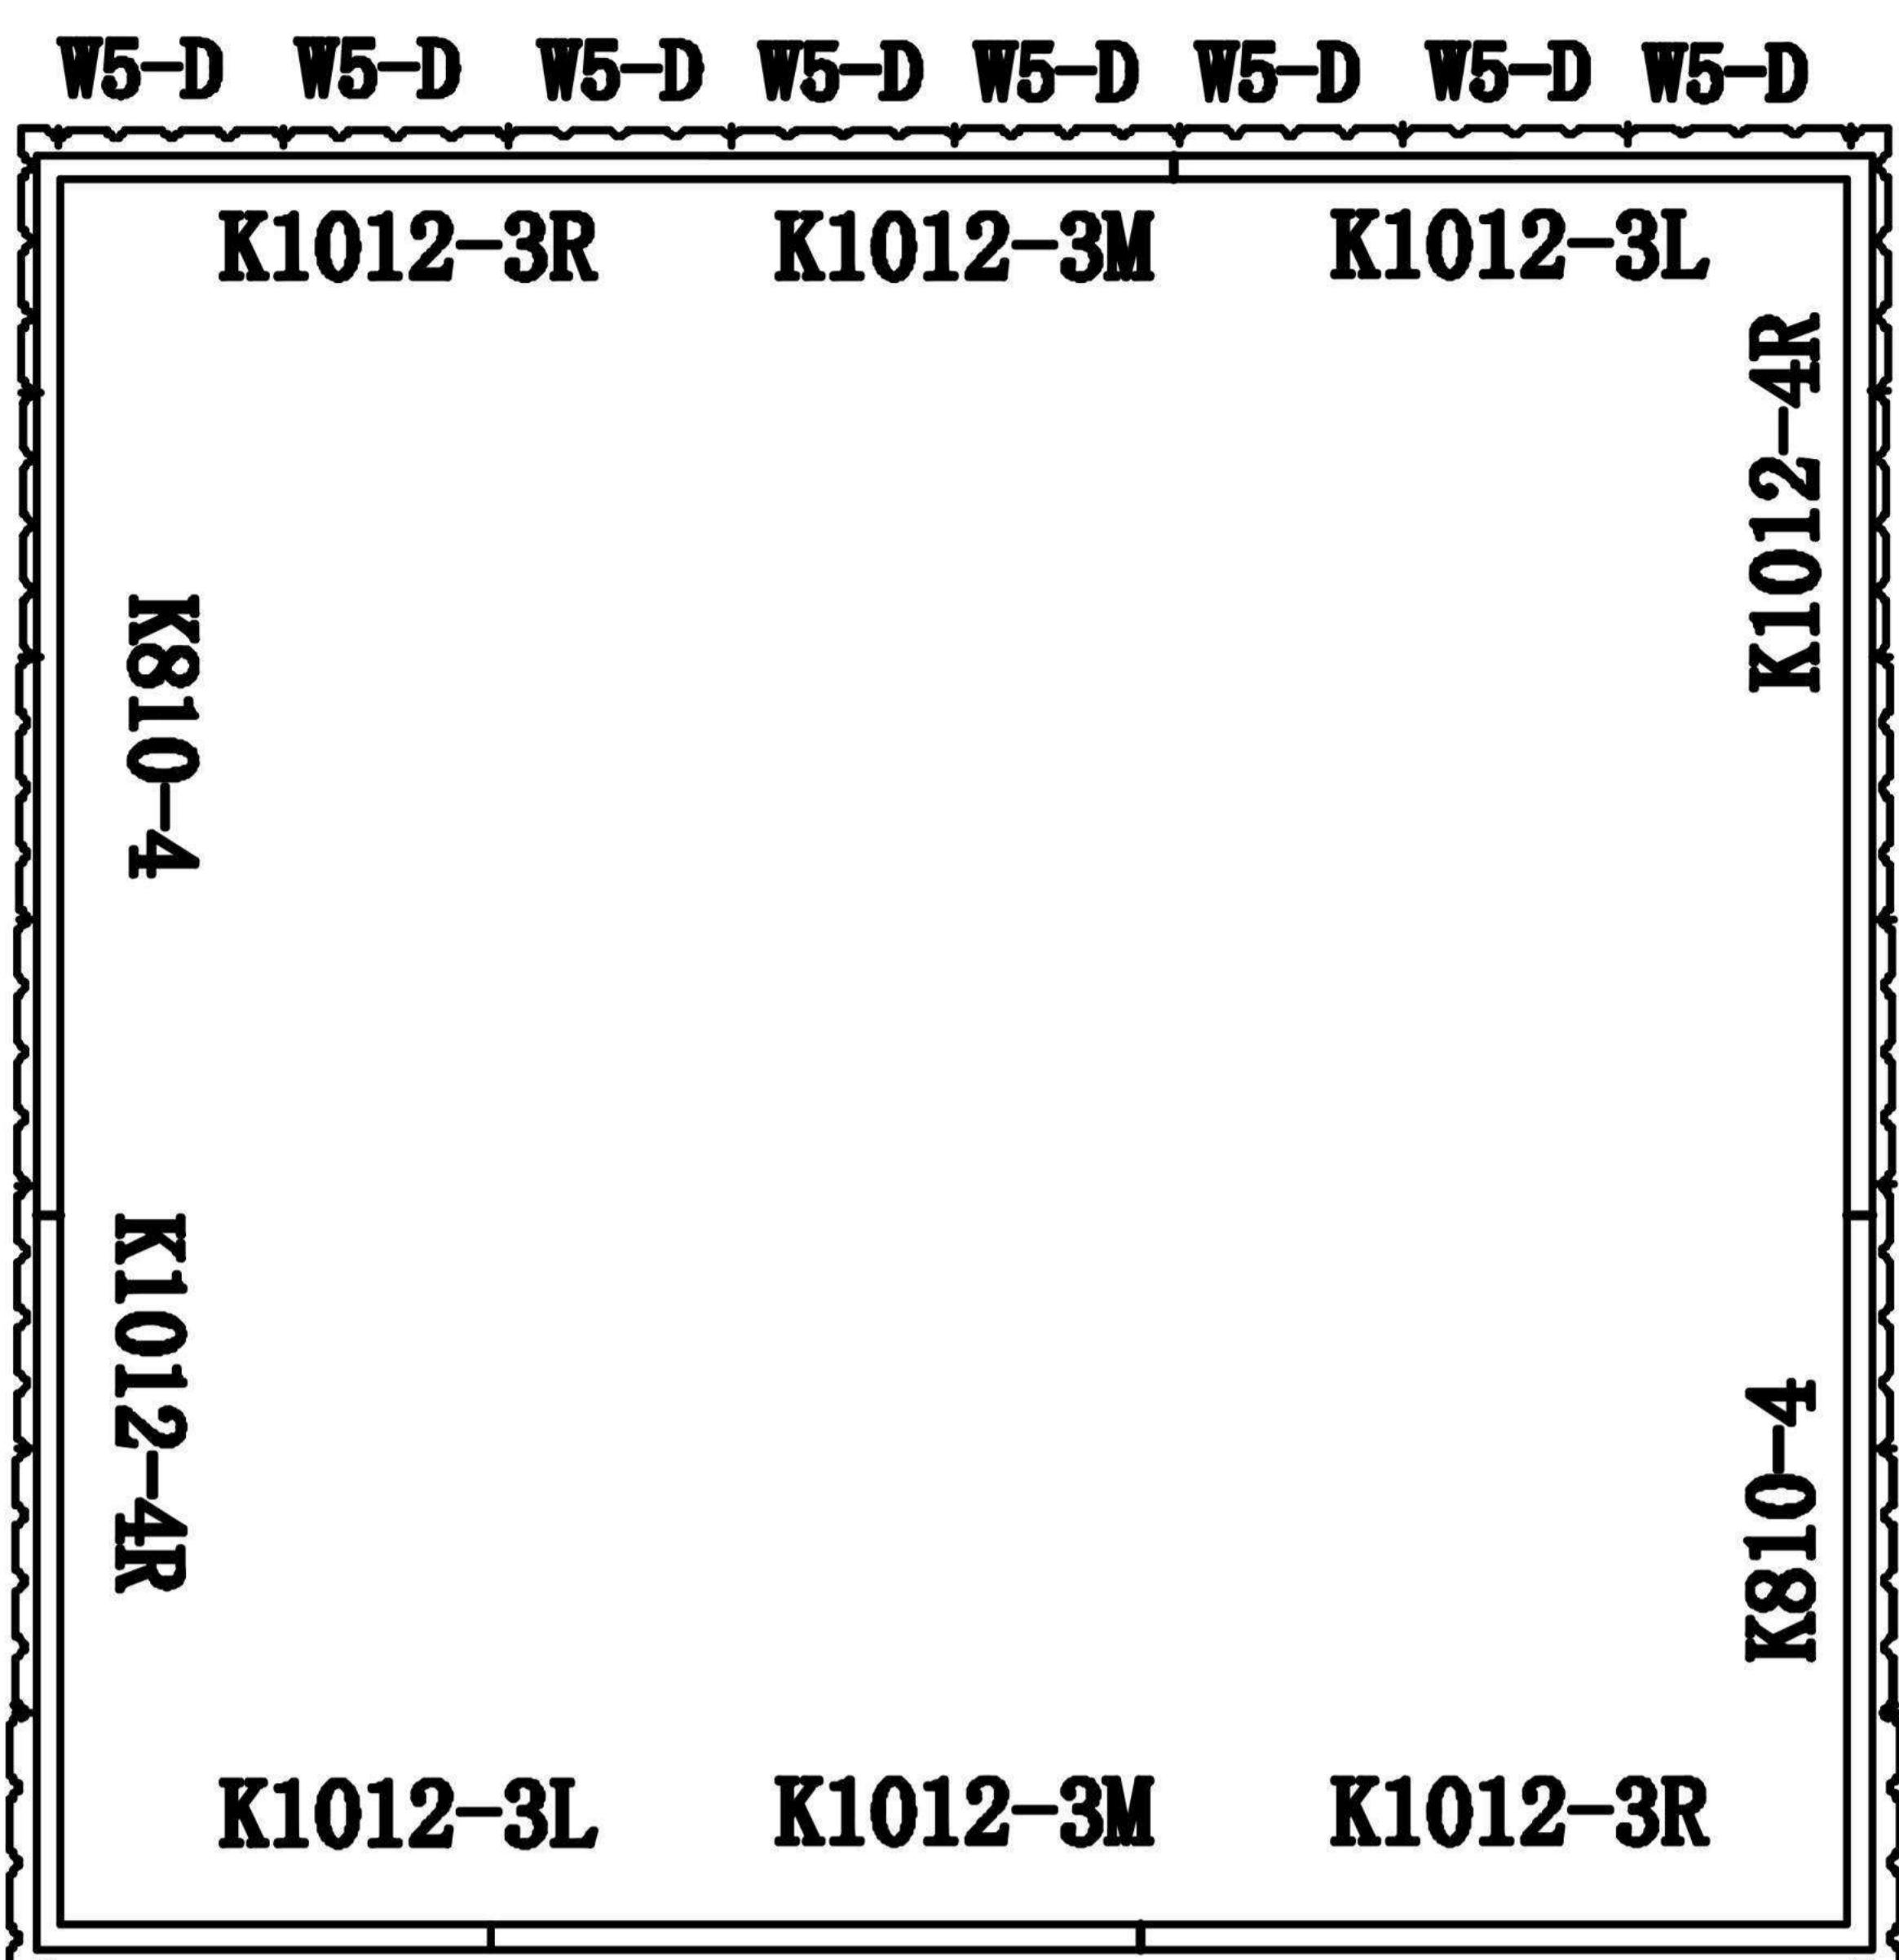


PART	NO.	QTY.
W5-D	W5-D	8
F1	F1	66
F2	F2	9

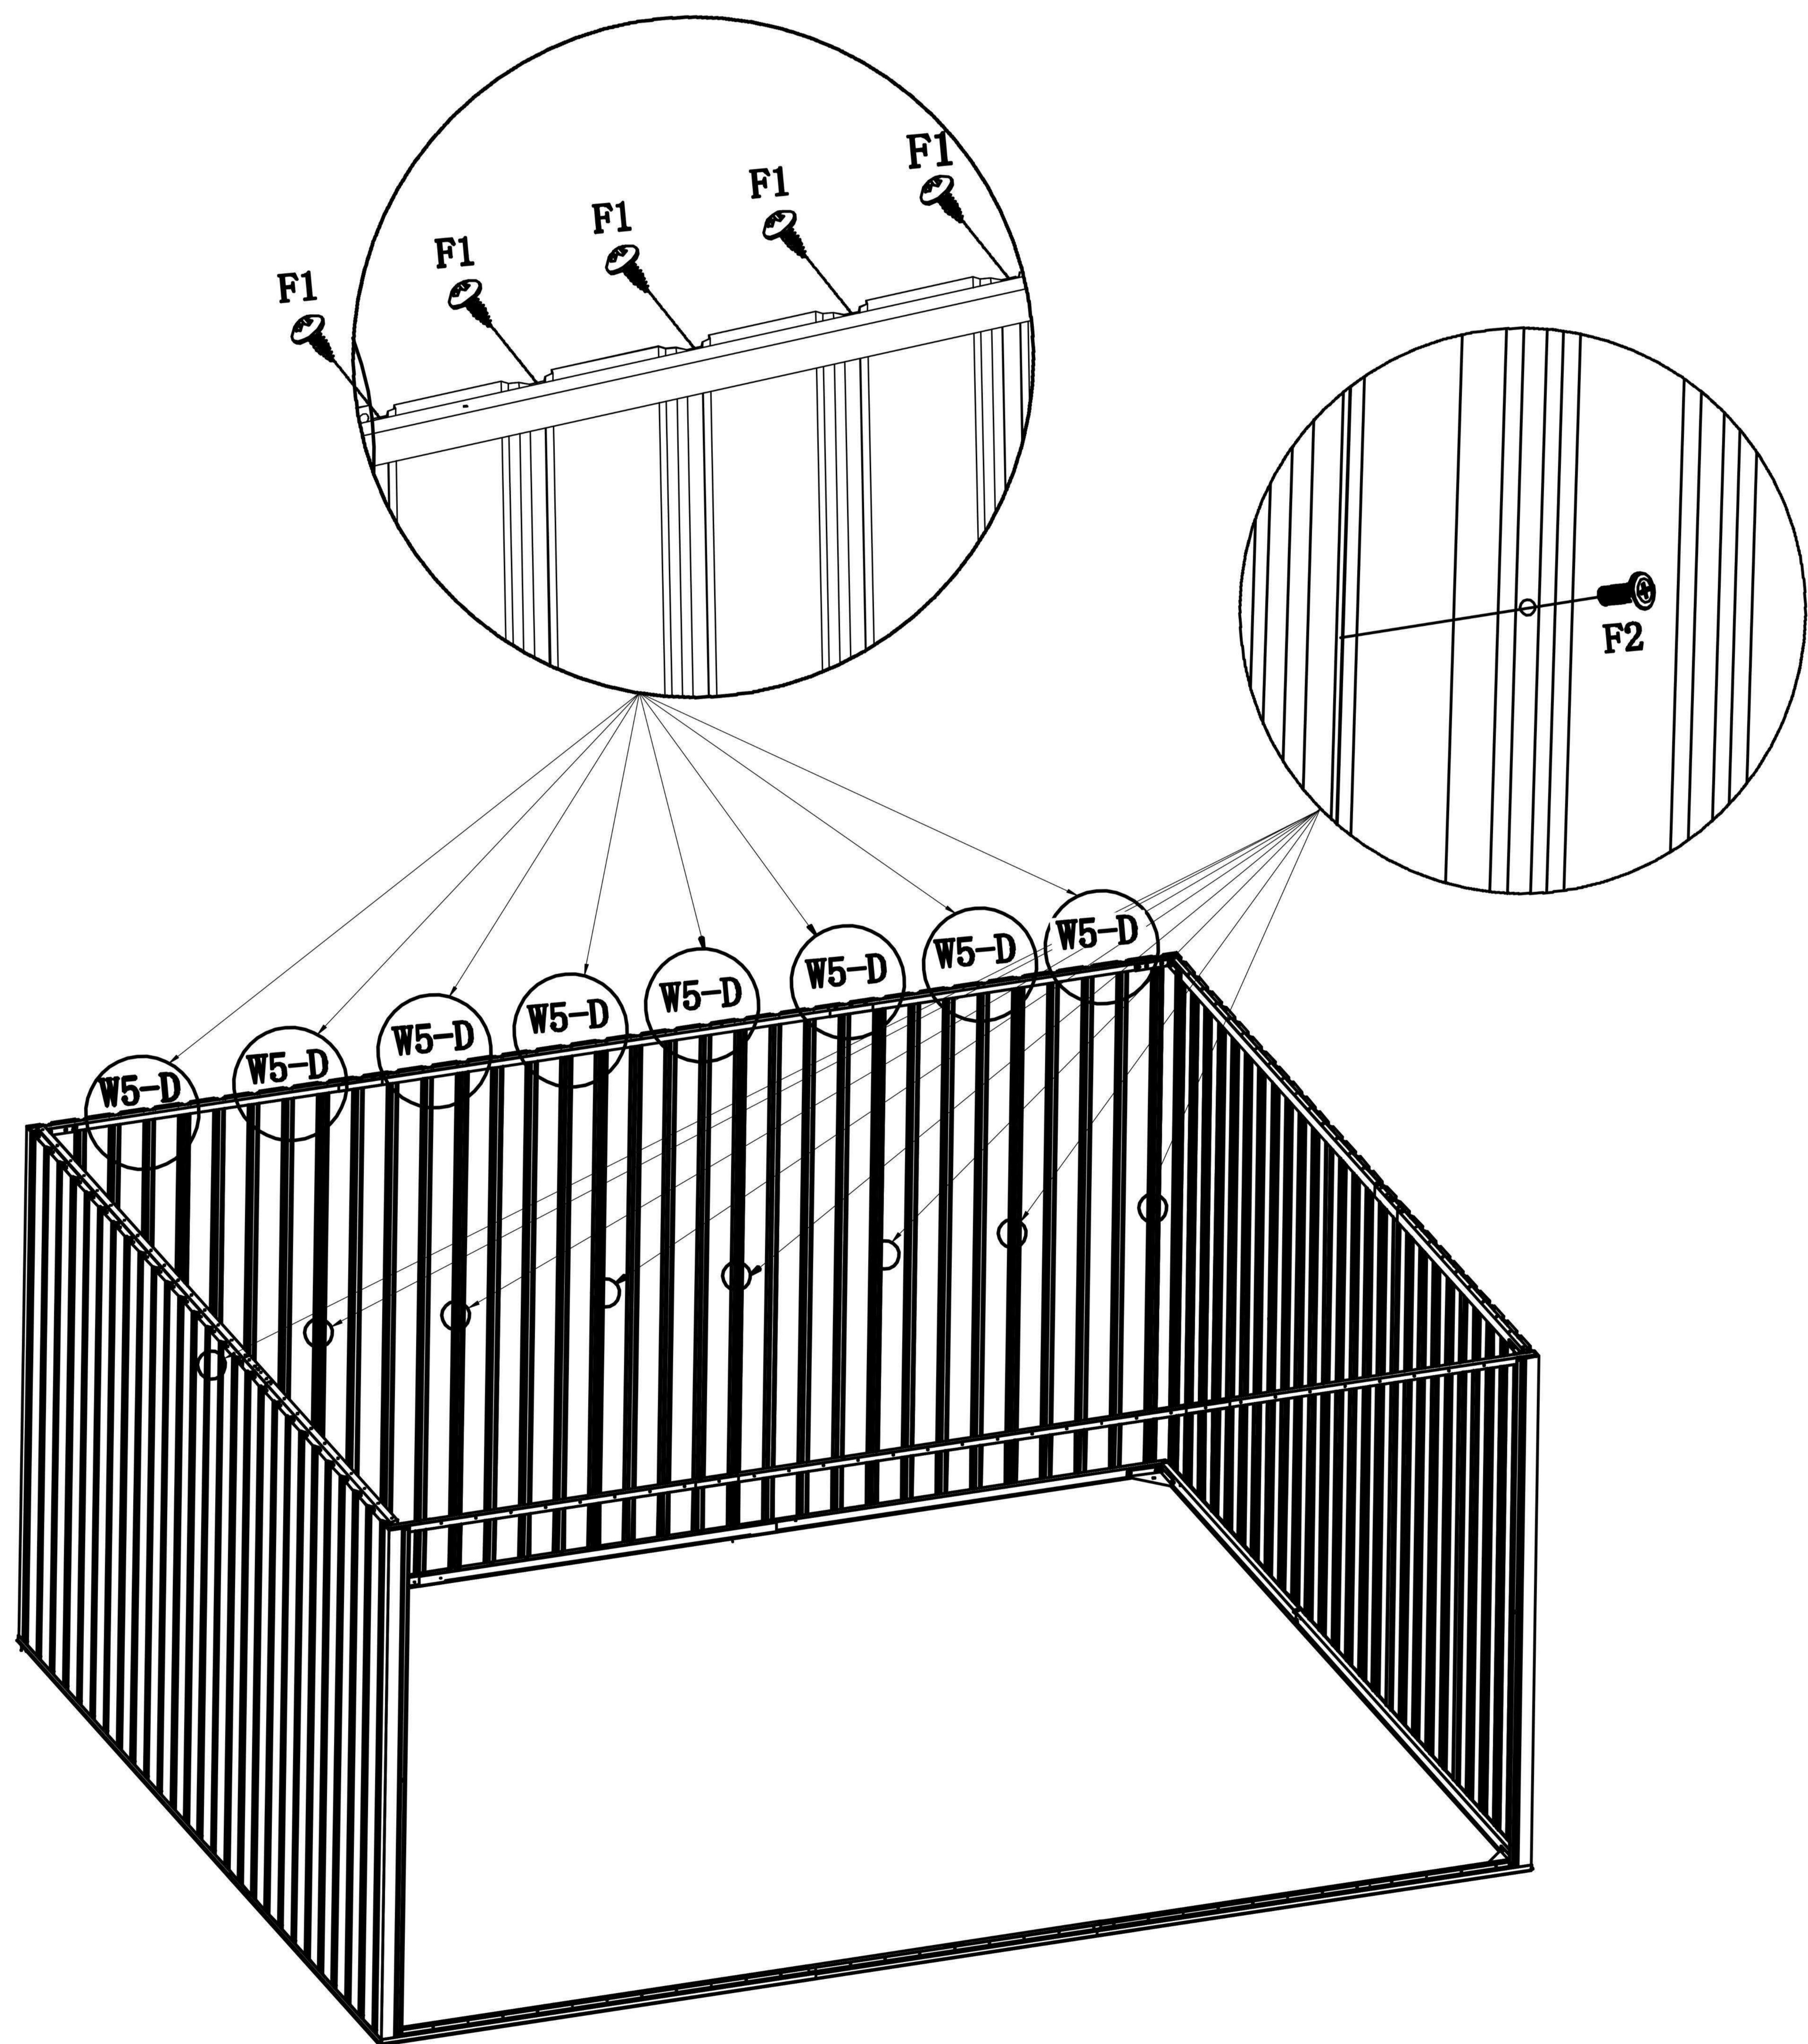



# STEP6

PART	NO.	QTY.
	W5-D	4
	W3-D	2
	F1	40
	F2	6

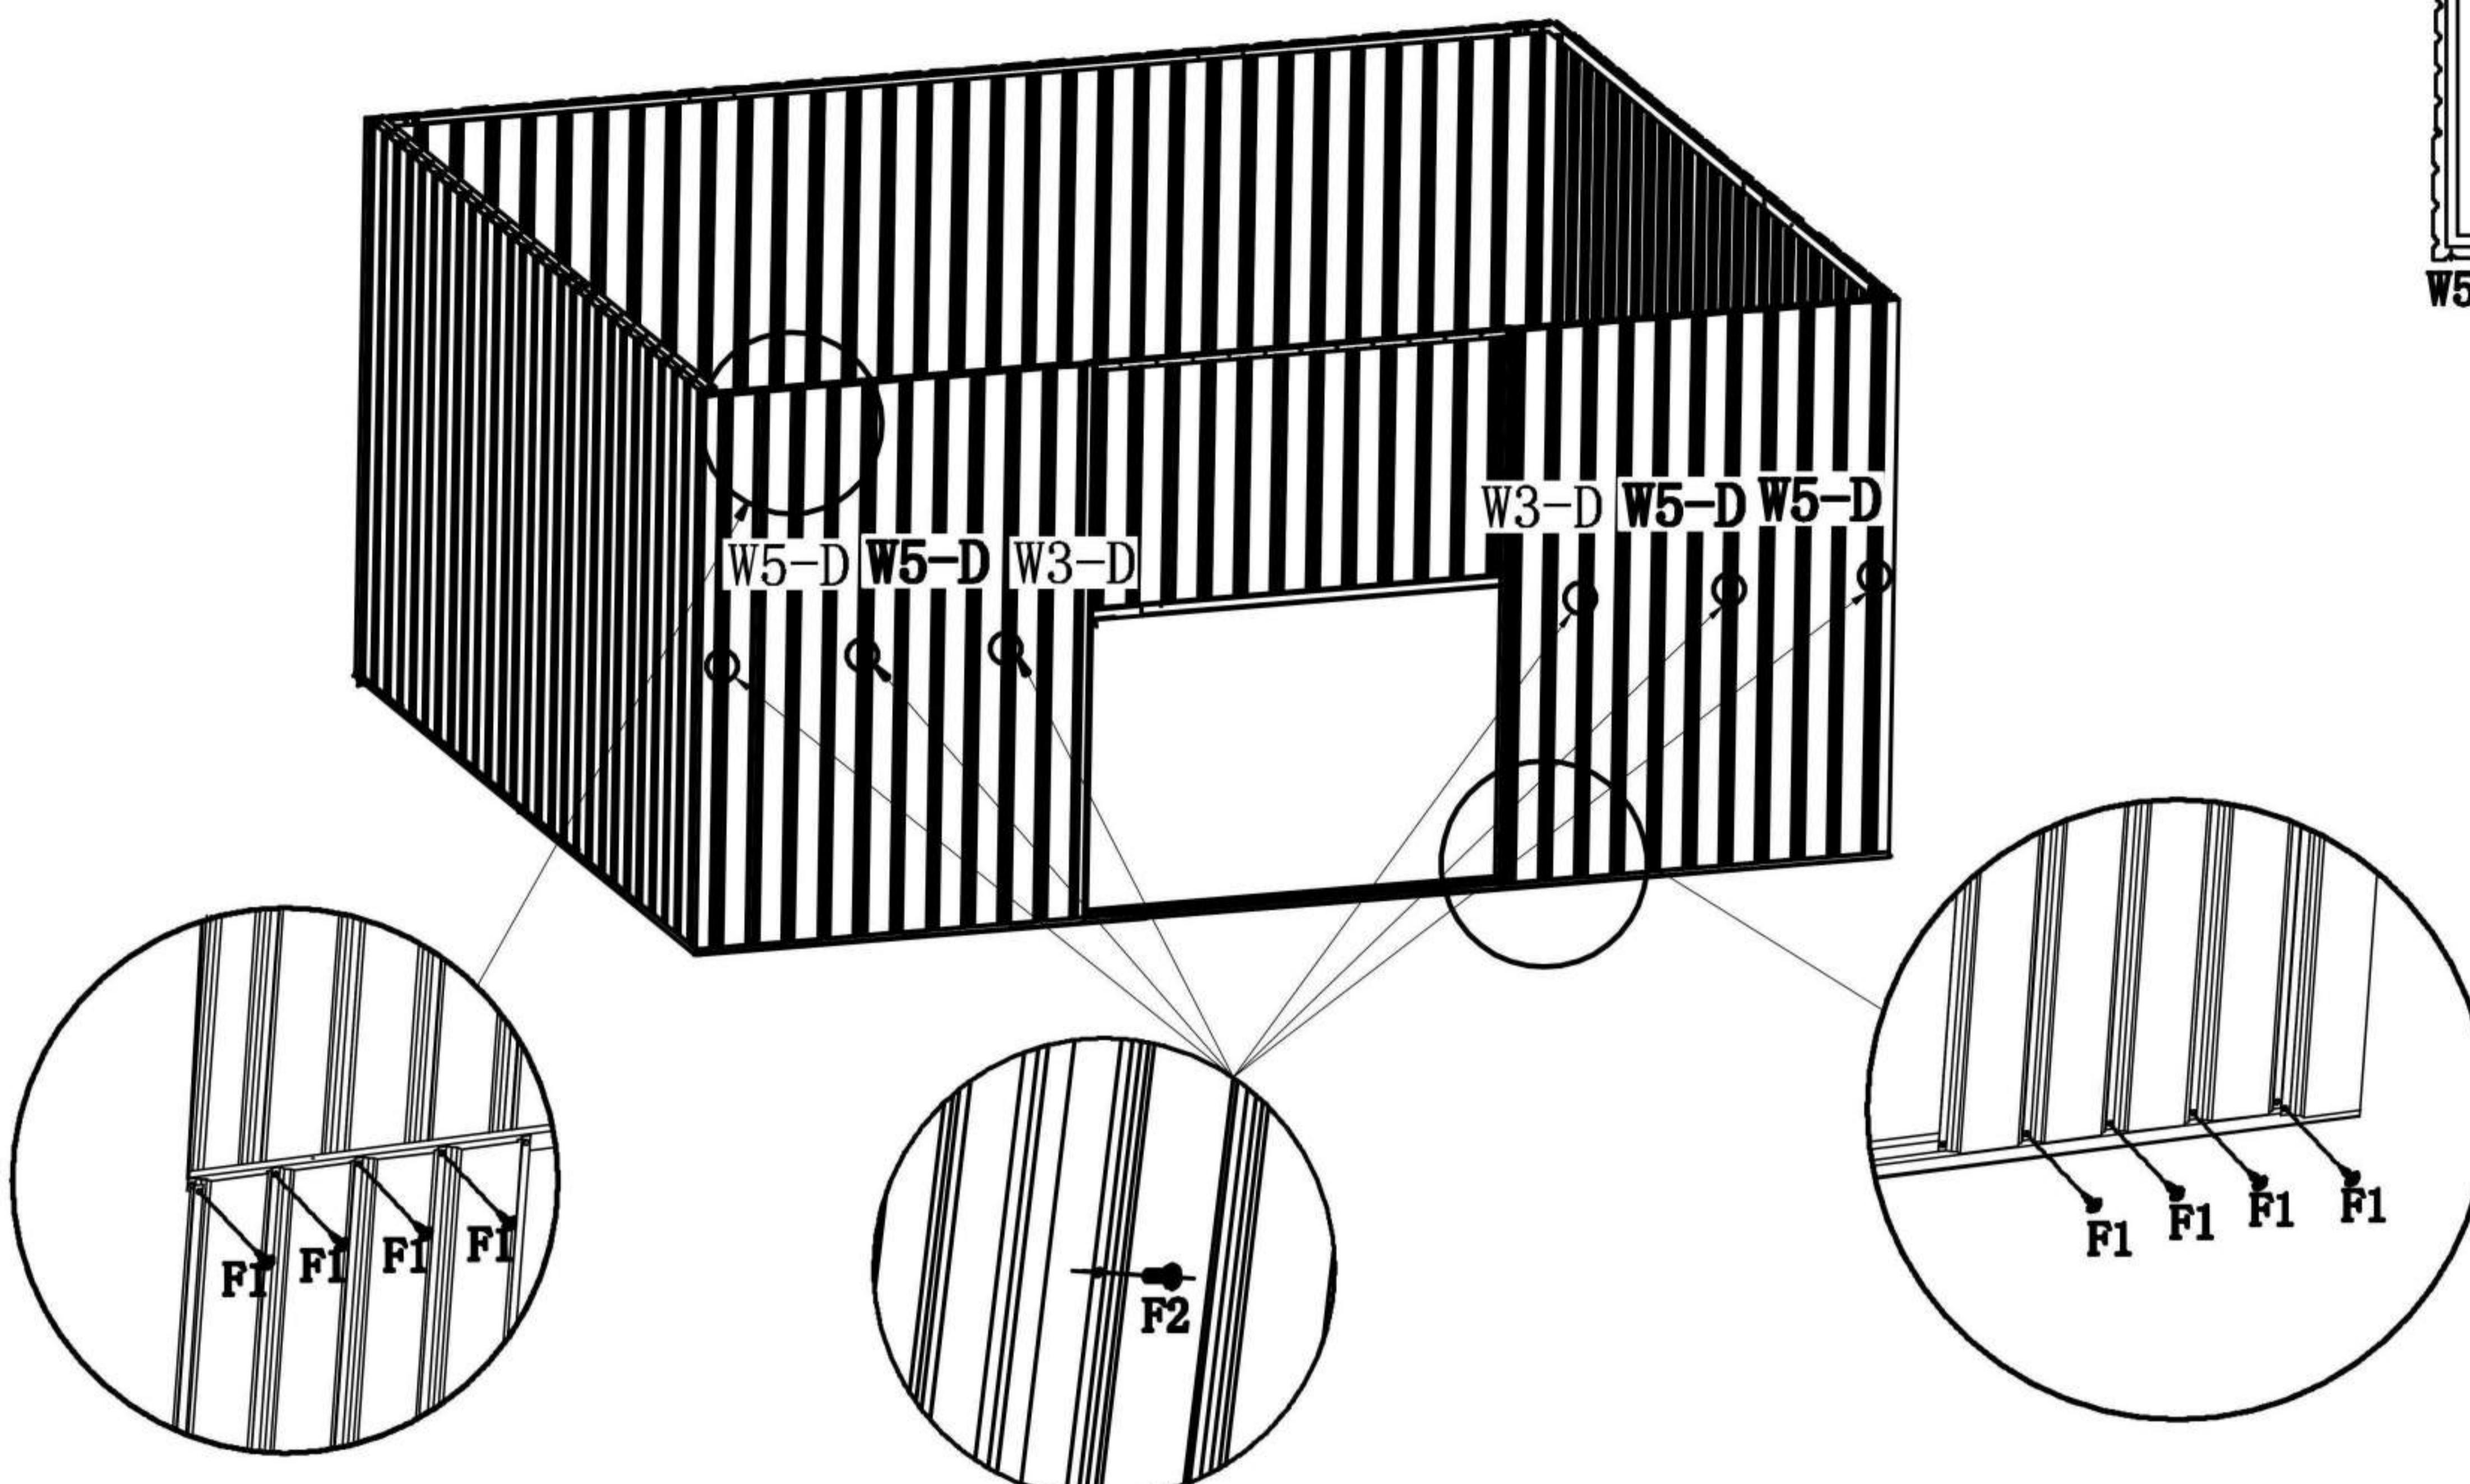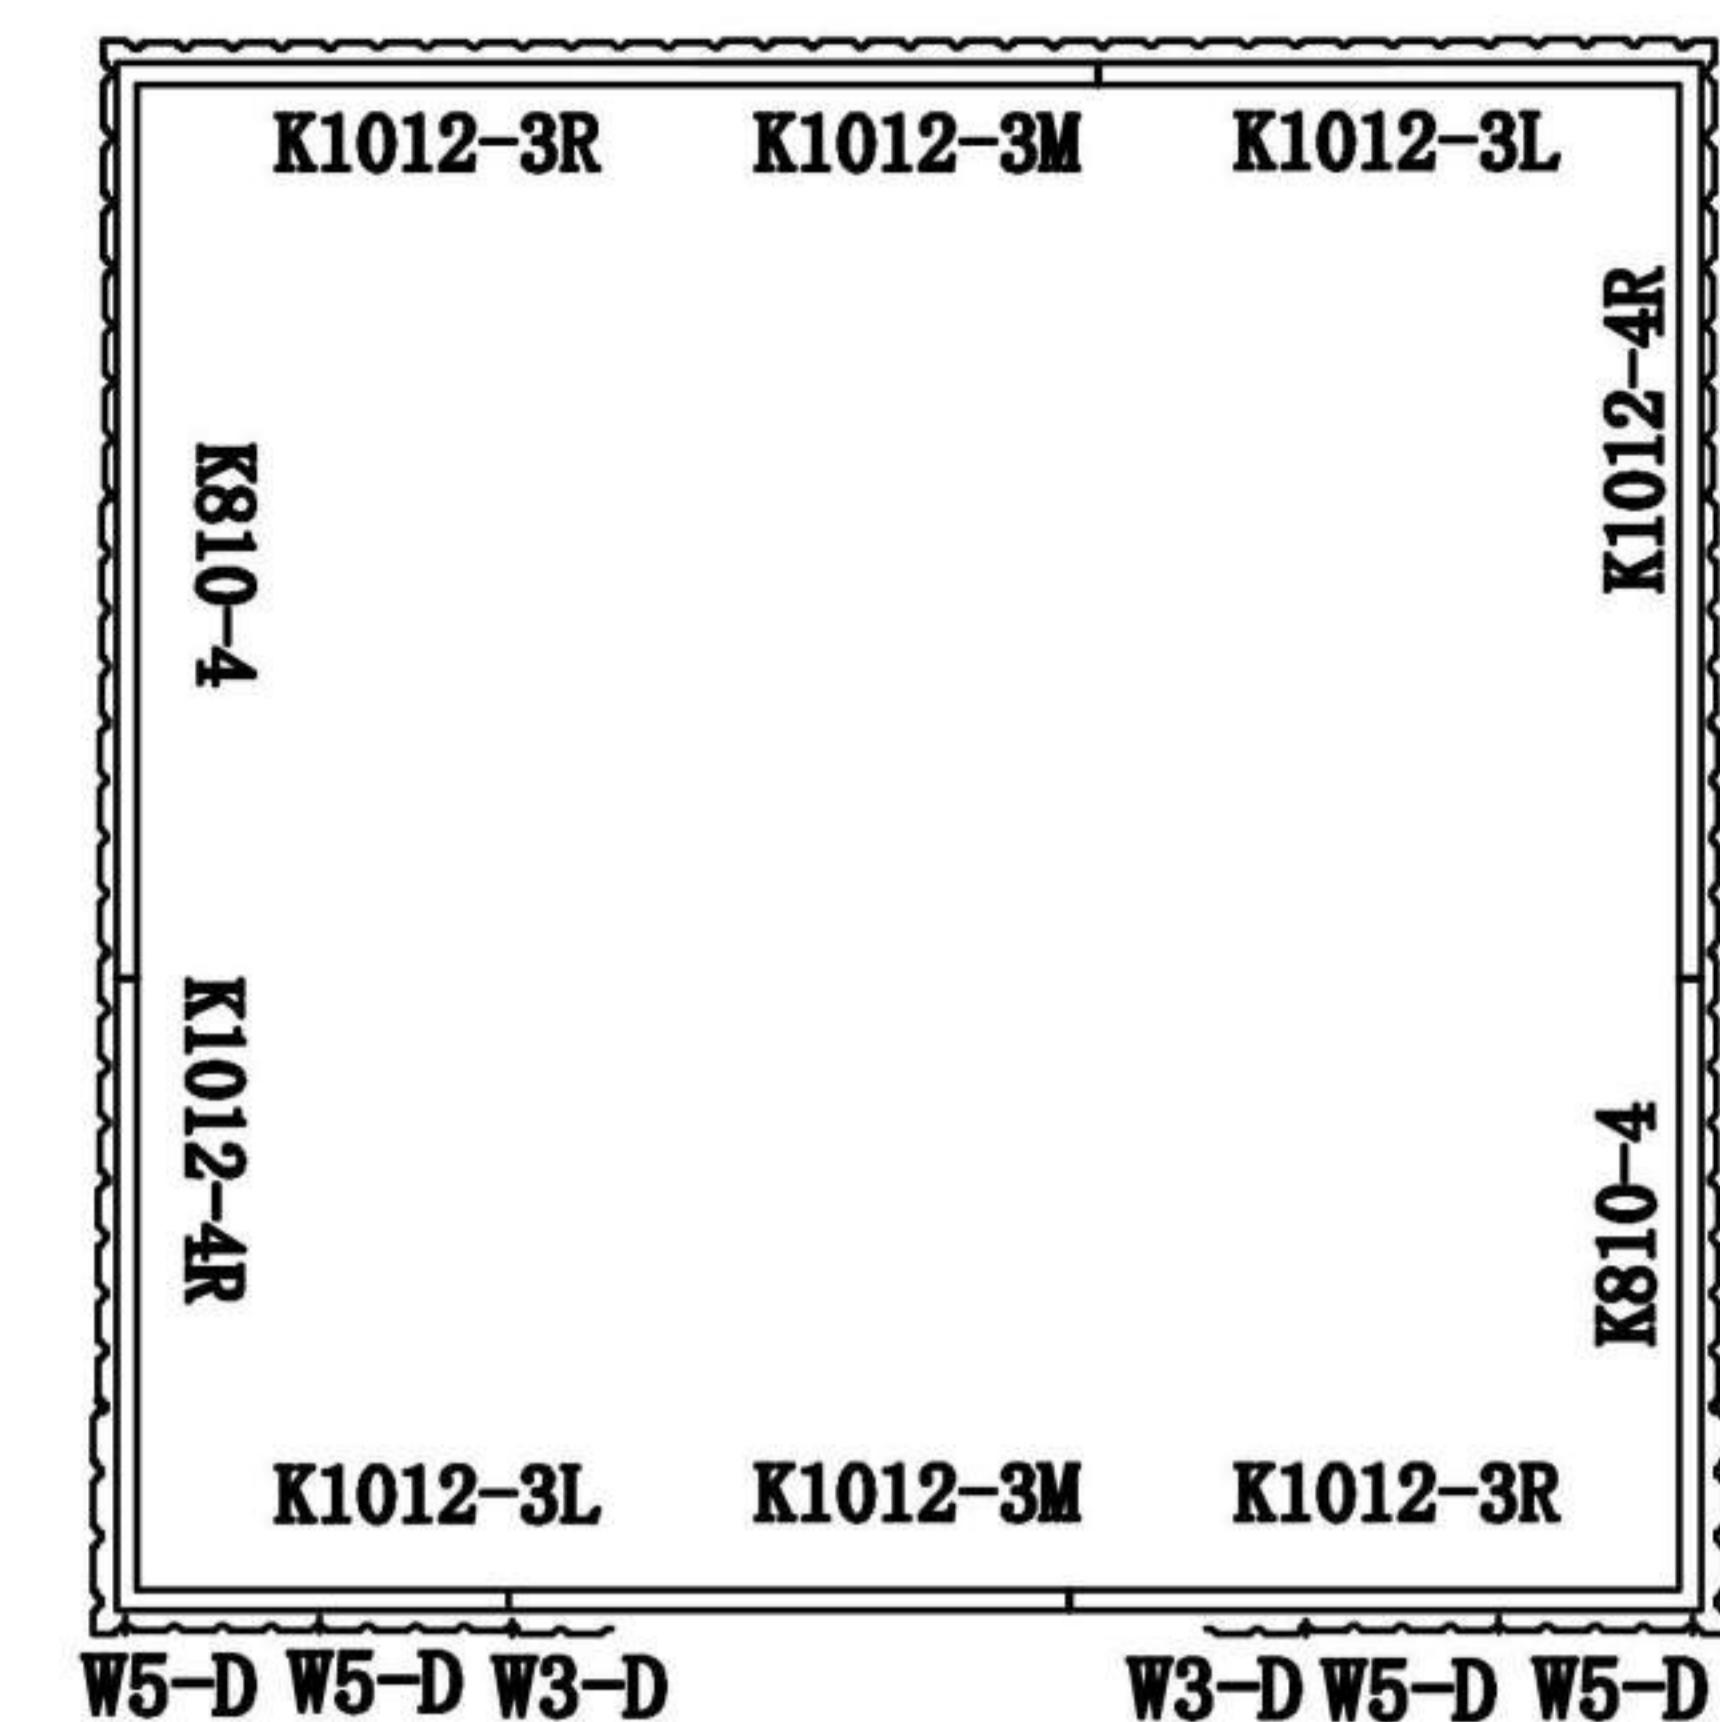


# STEP7

PART	NO.	QTY.
	UAD	2
	F1	8
	F2	2

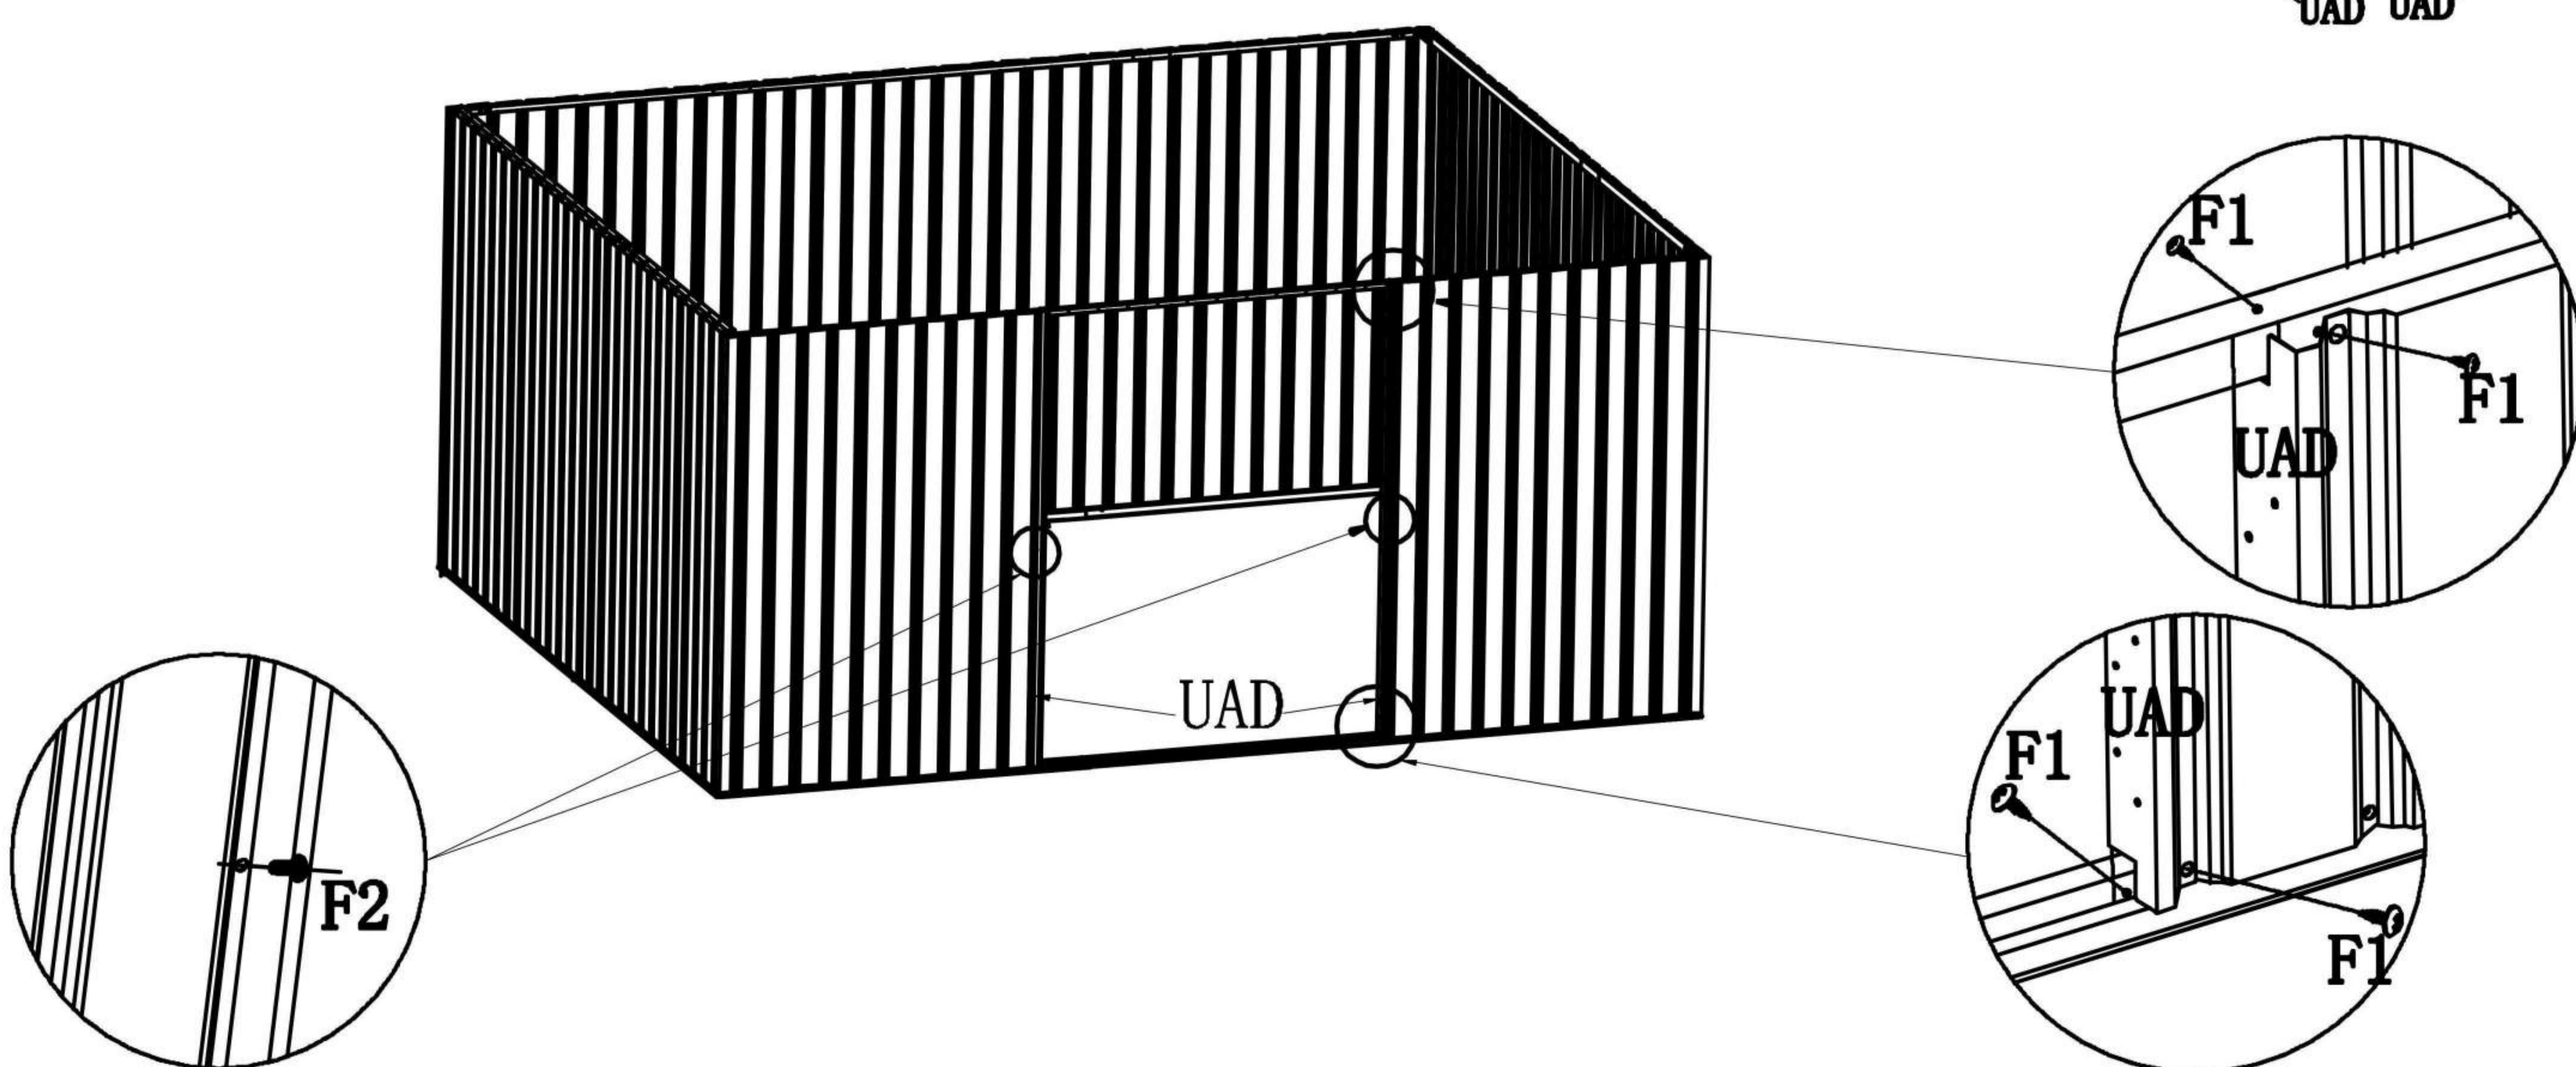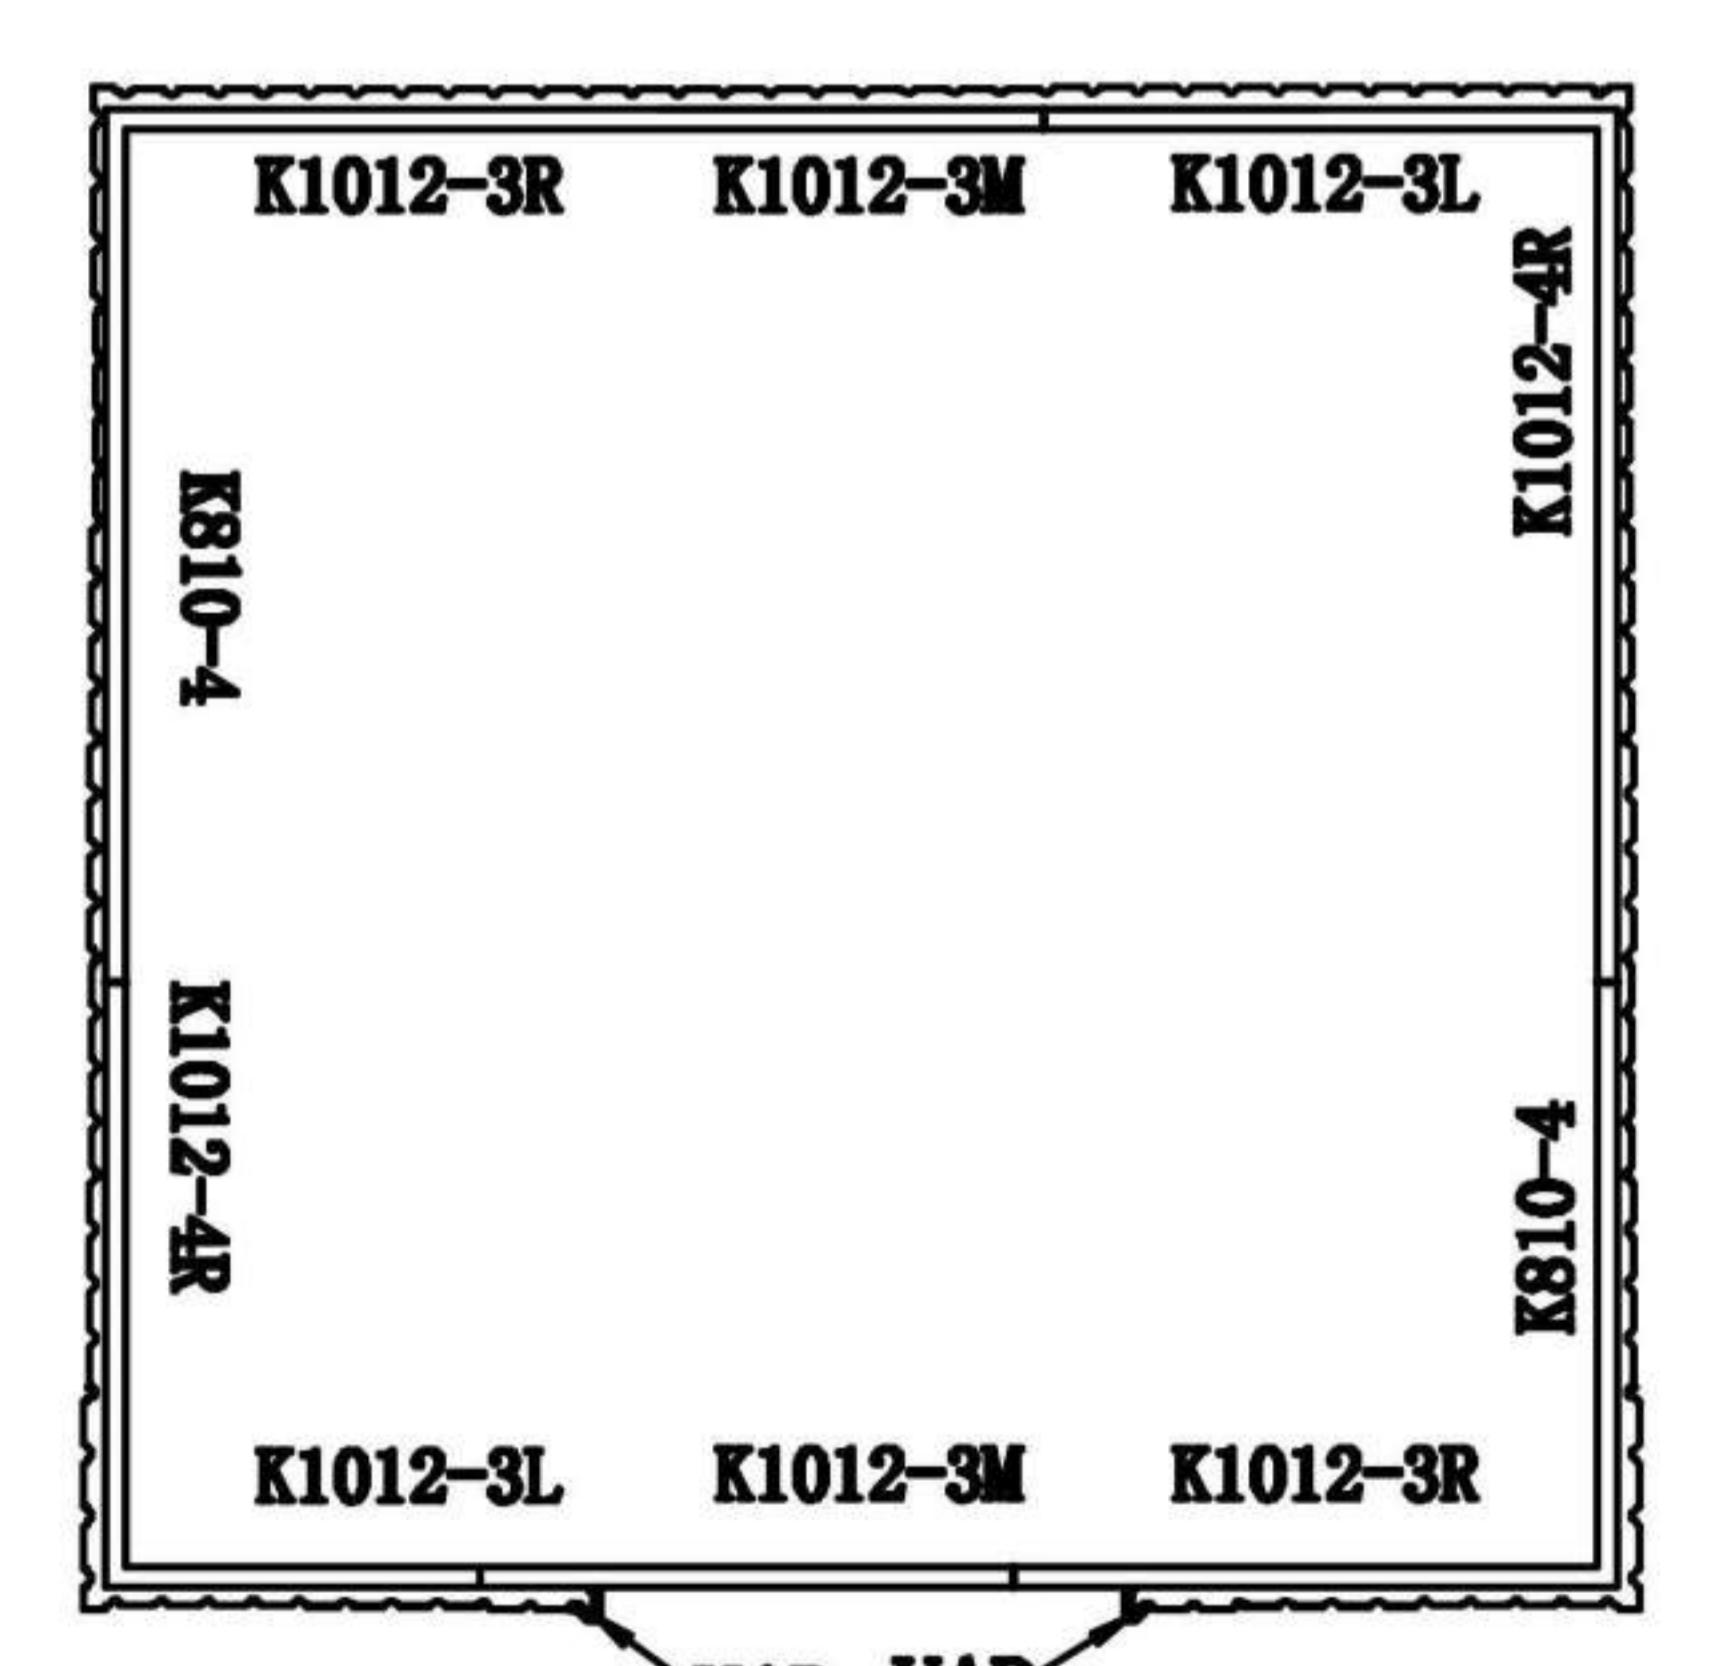



# STEP8

PART	NO.	QTY.
	K1012-5L	1
	K1012-5R	1
	F1	8
	V2	8




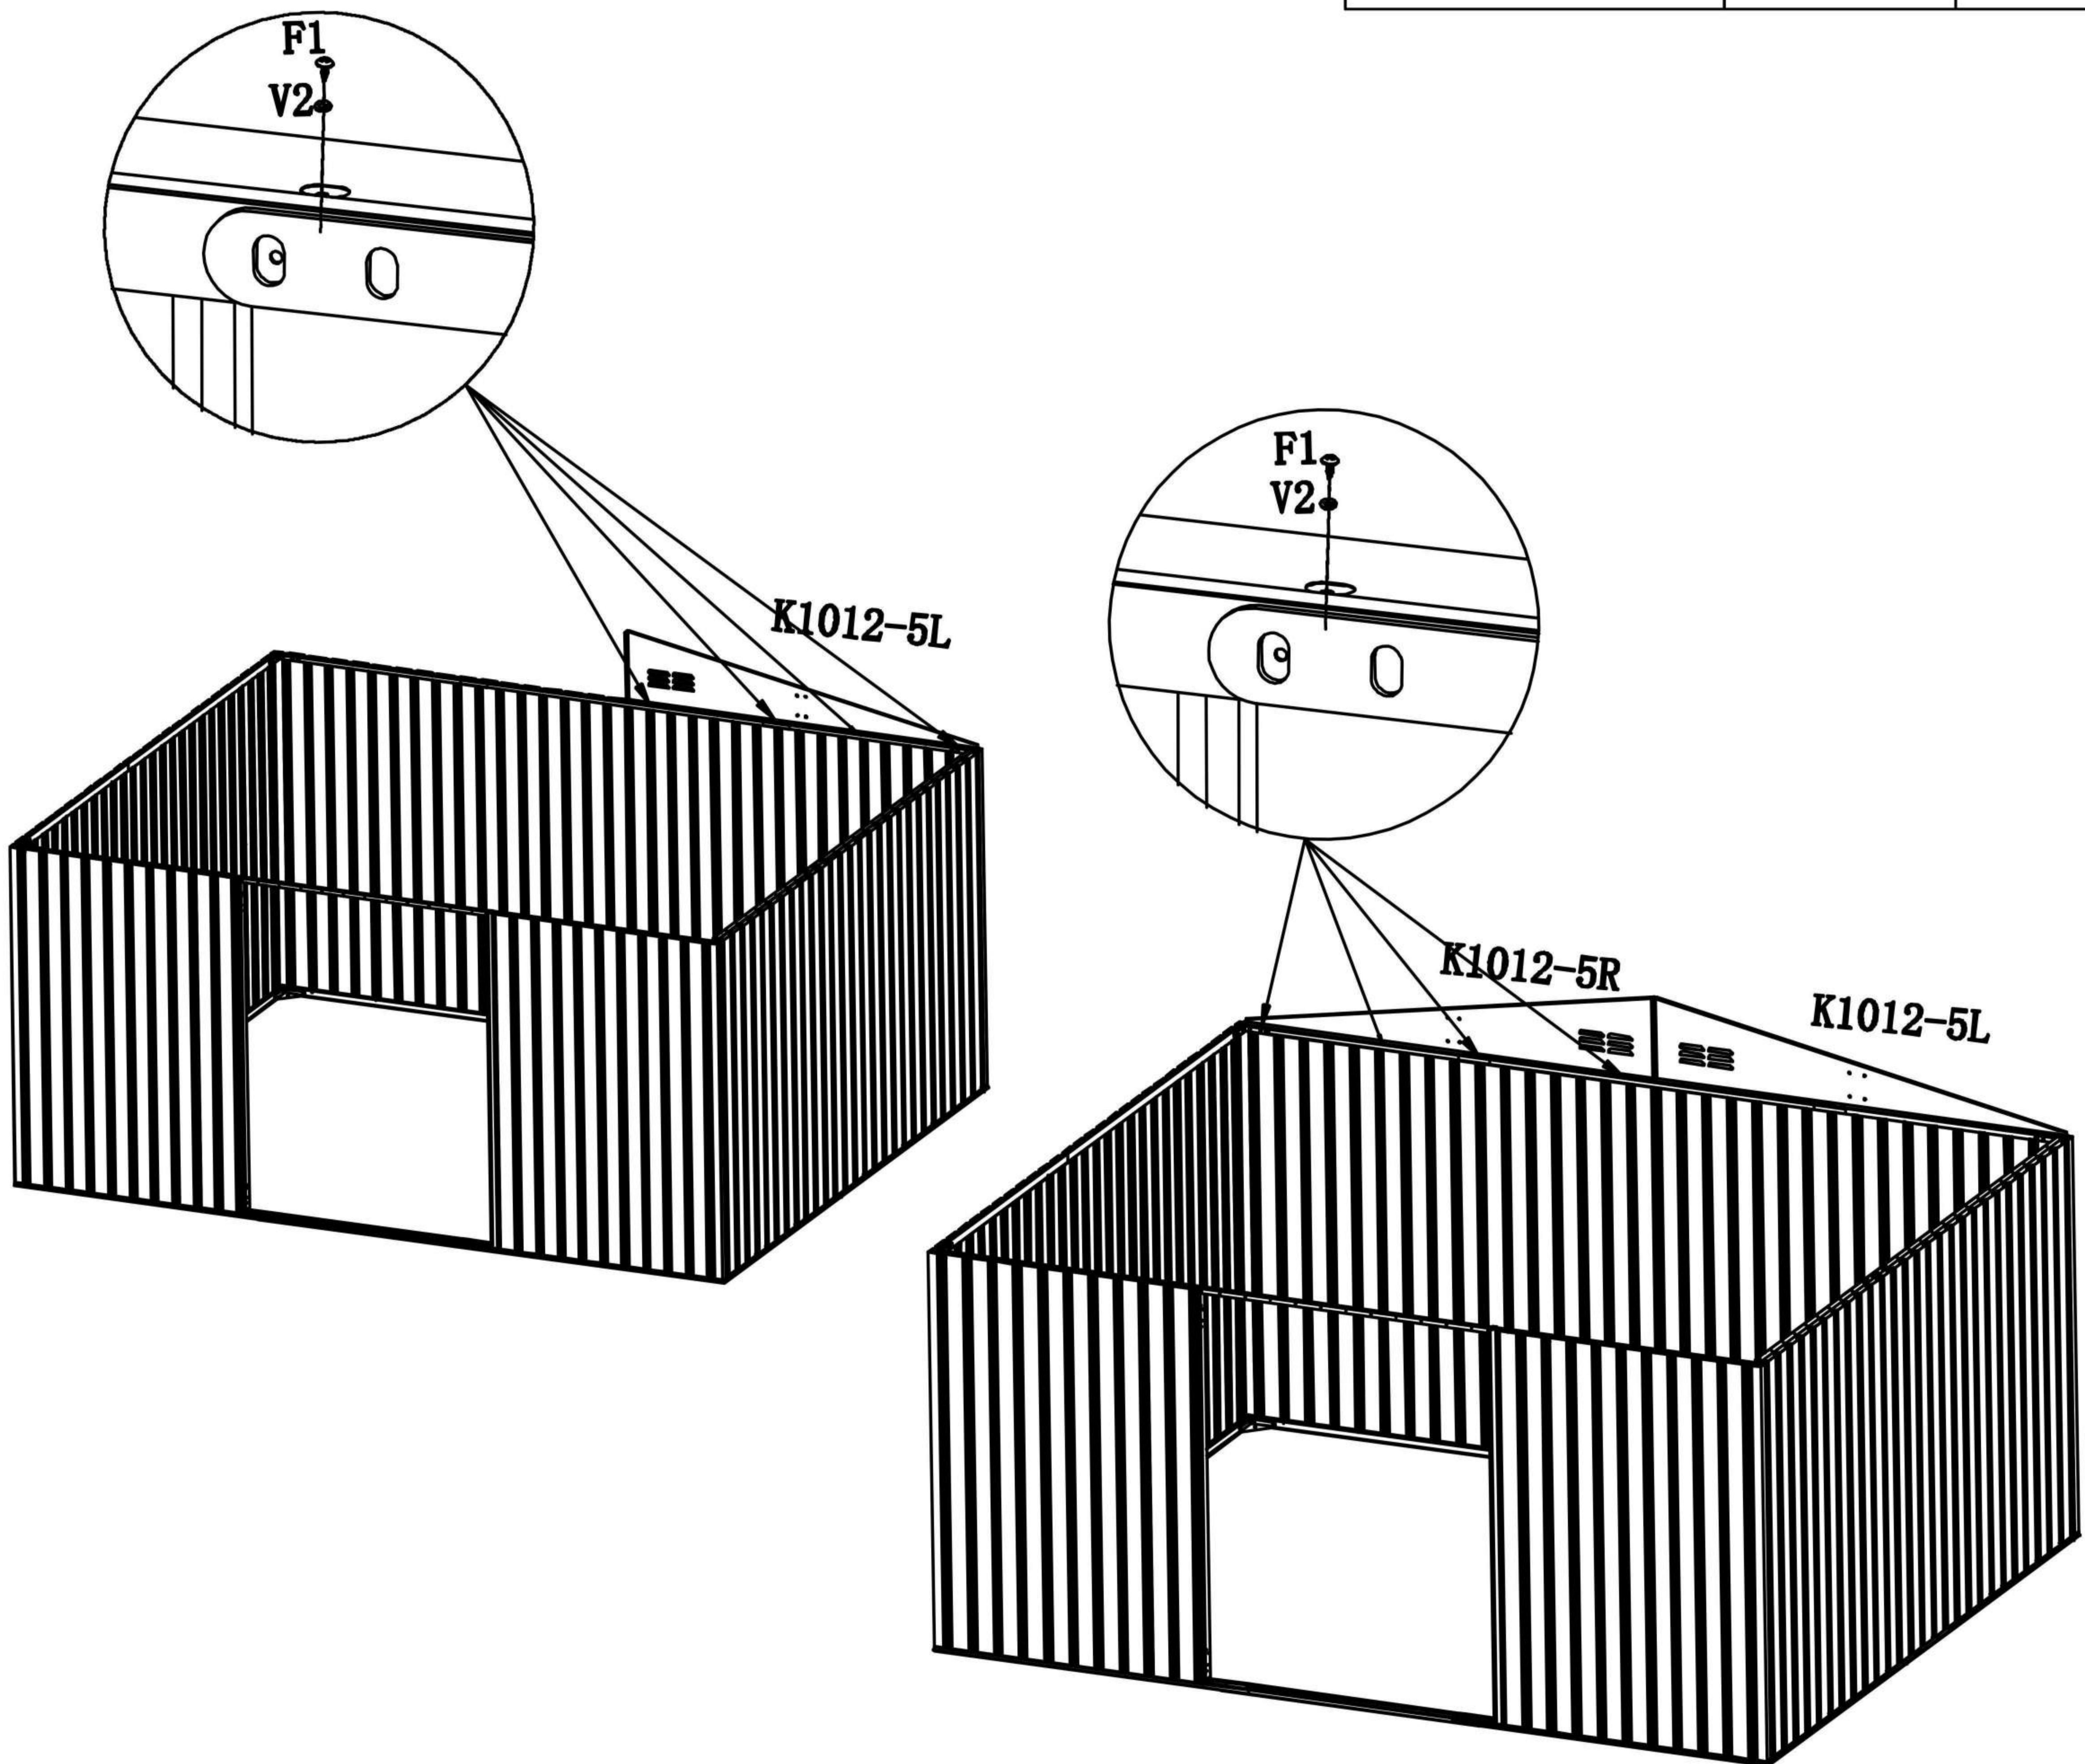



# STEP9

PART	NO.	QTY.
	K1012-5L	1
	K1012-5R	1
	F1	8
	V2	8

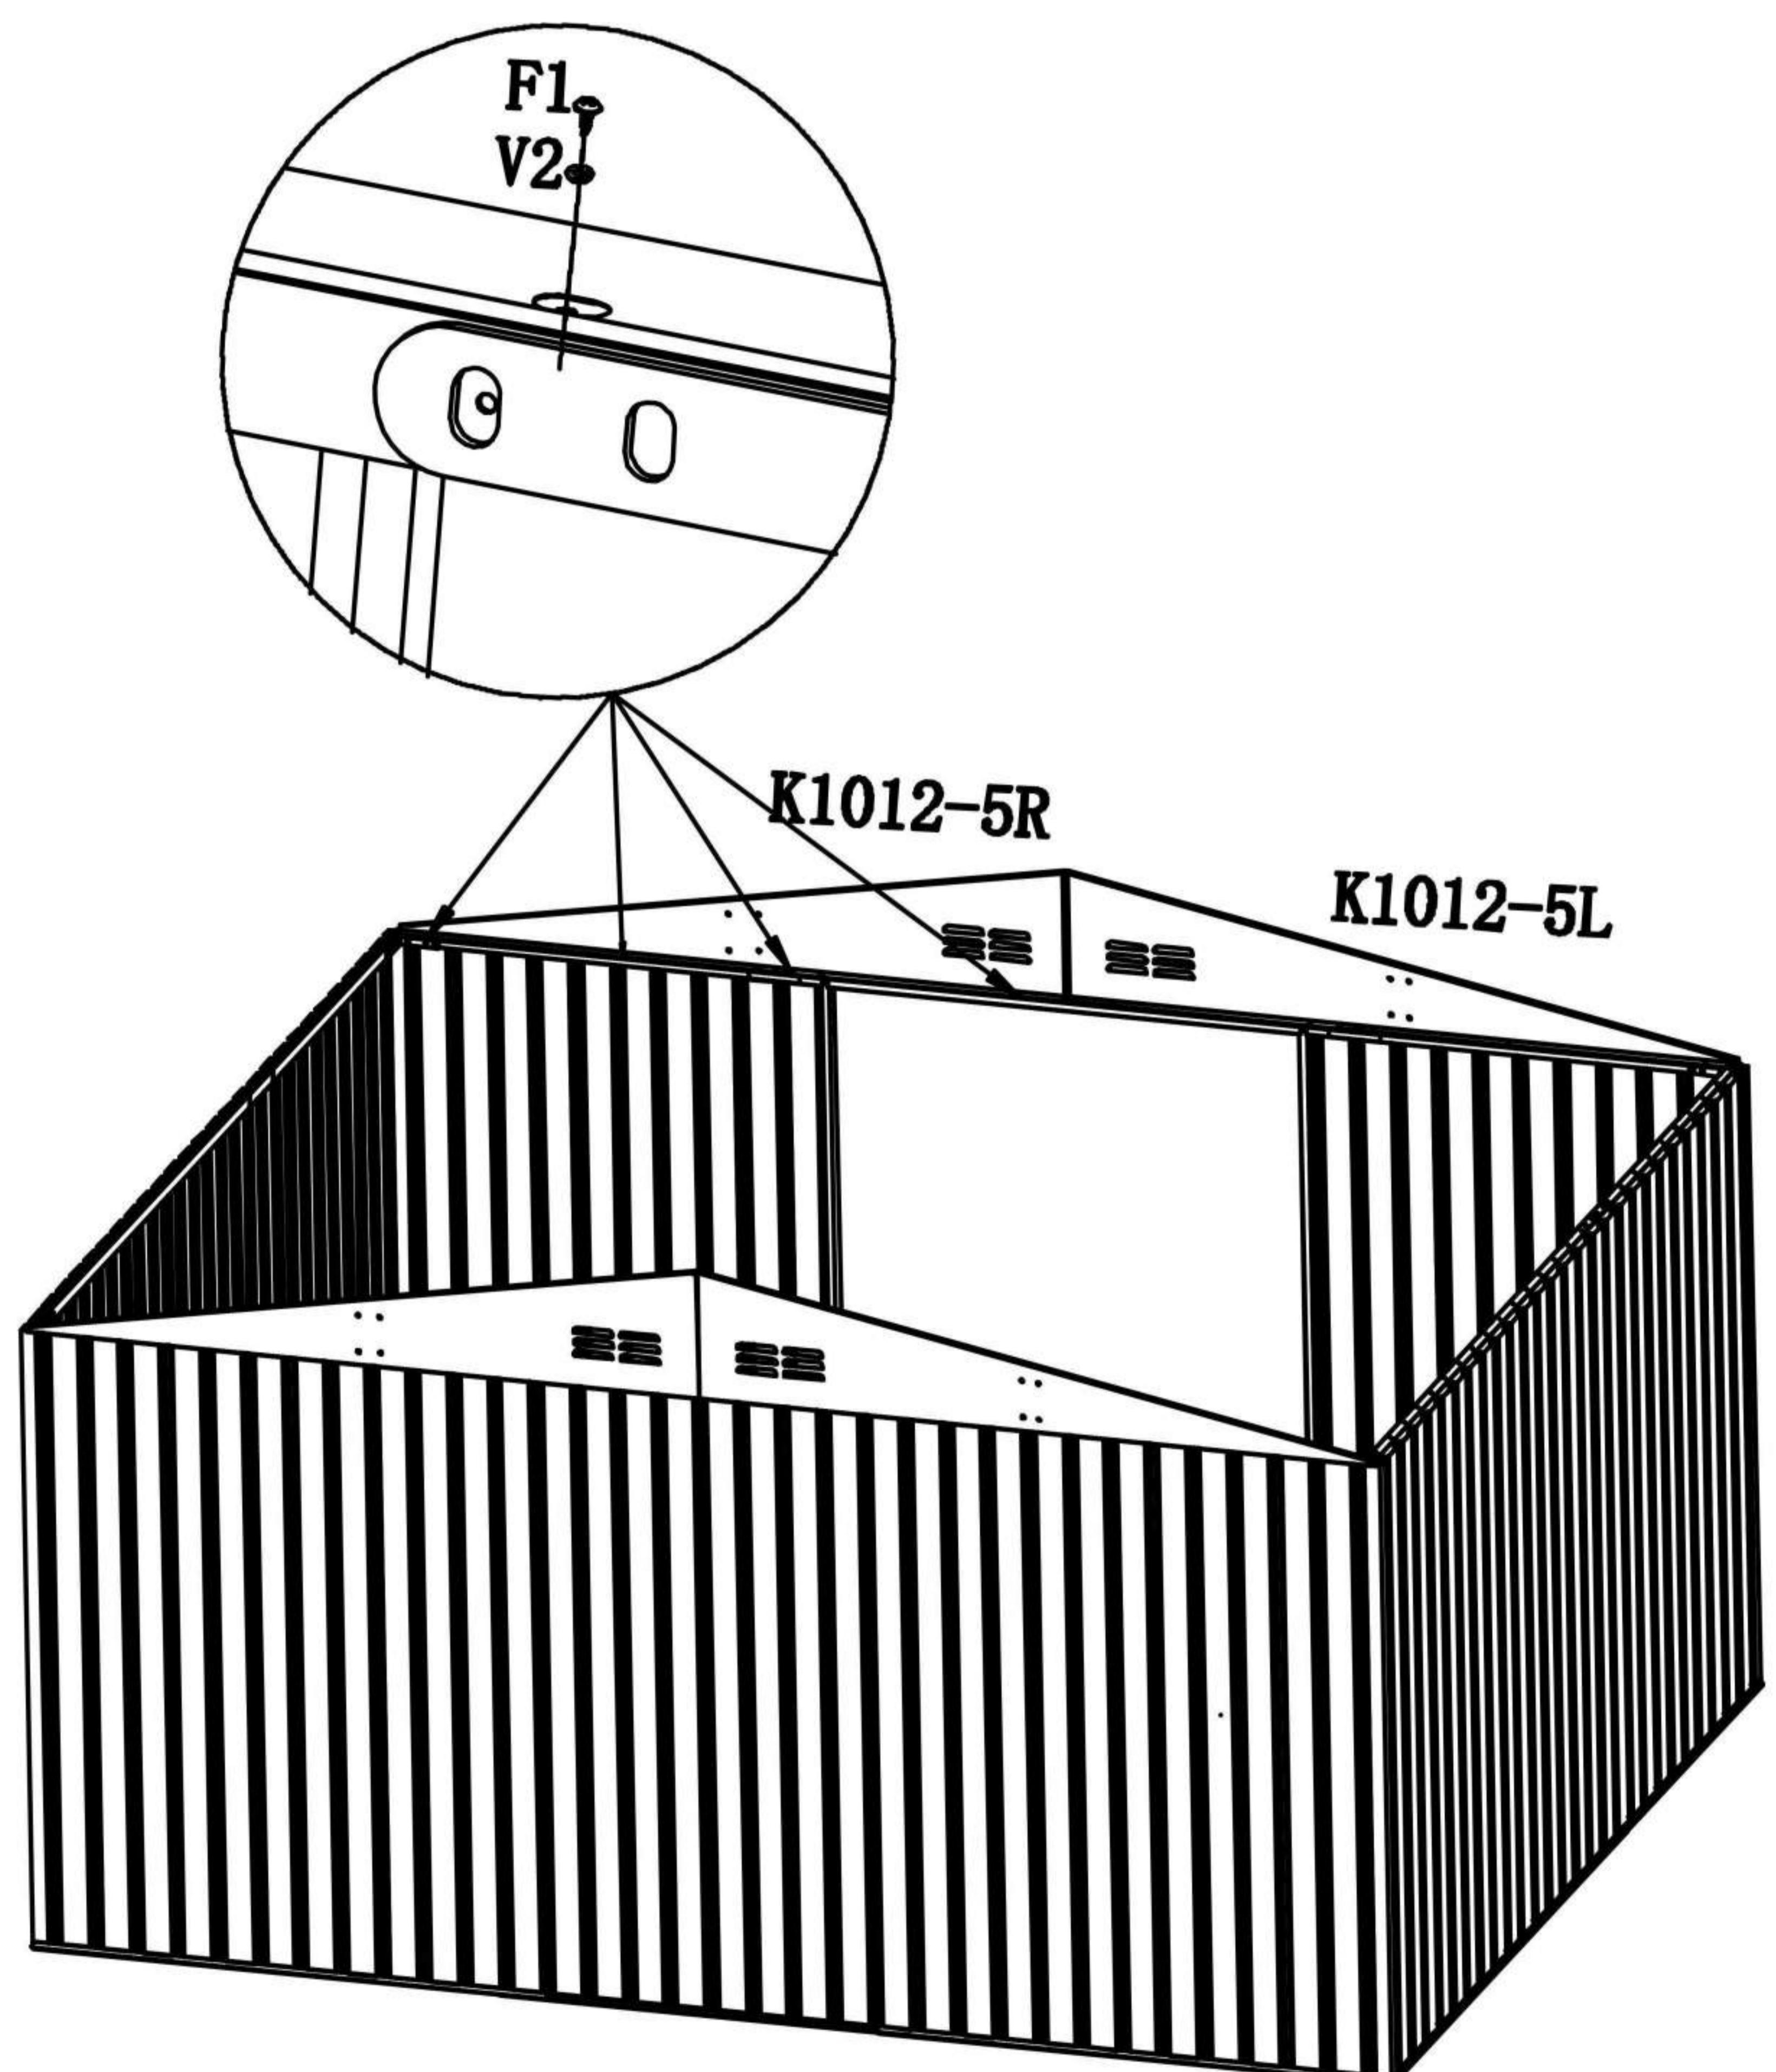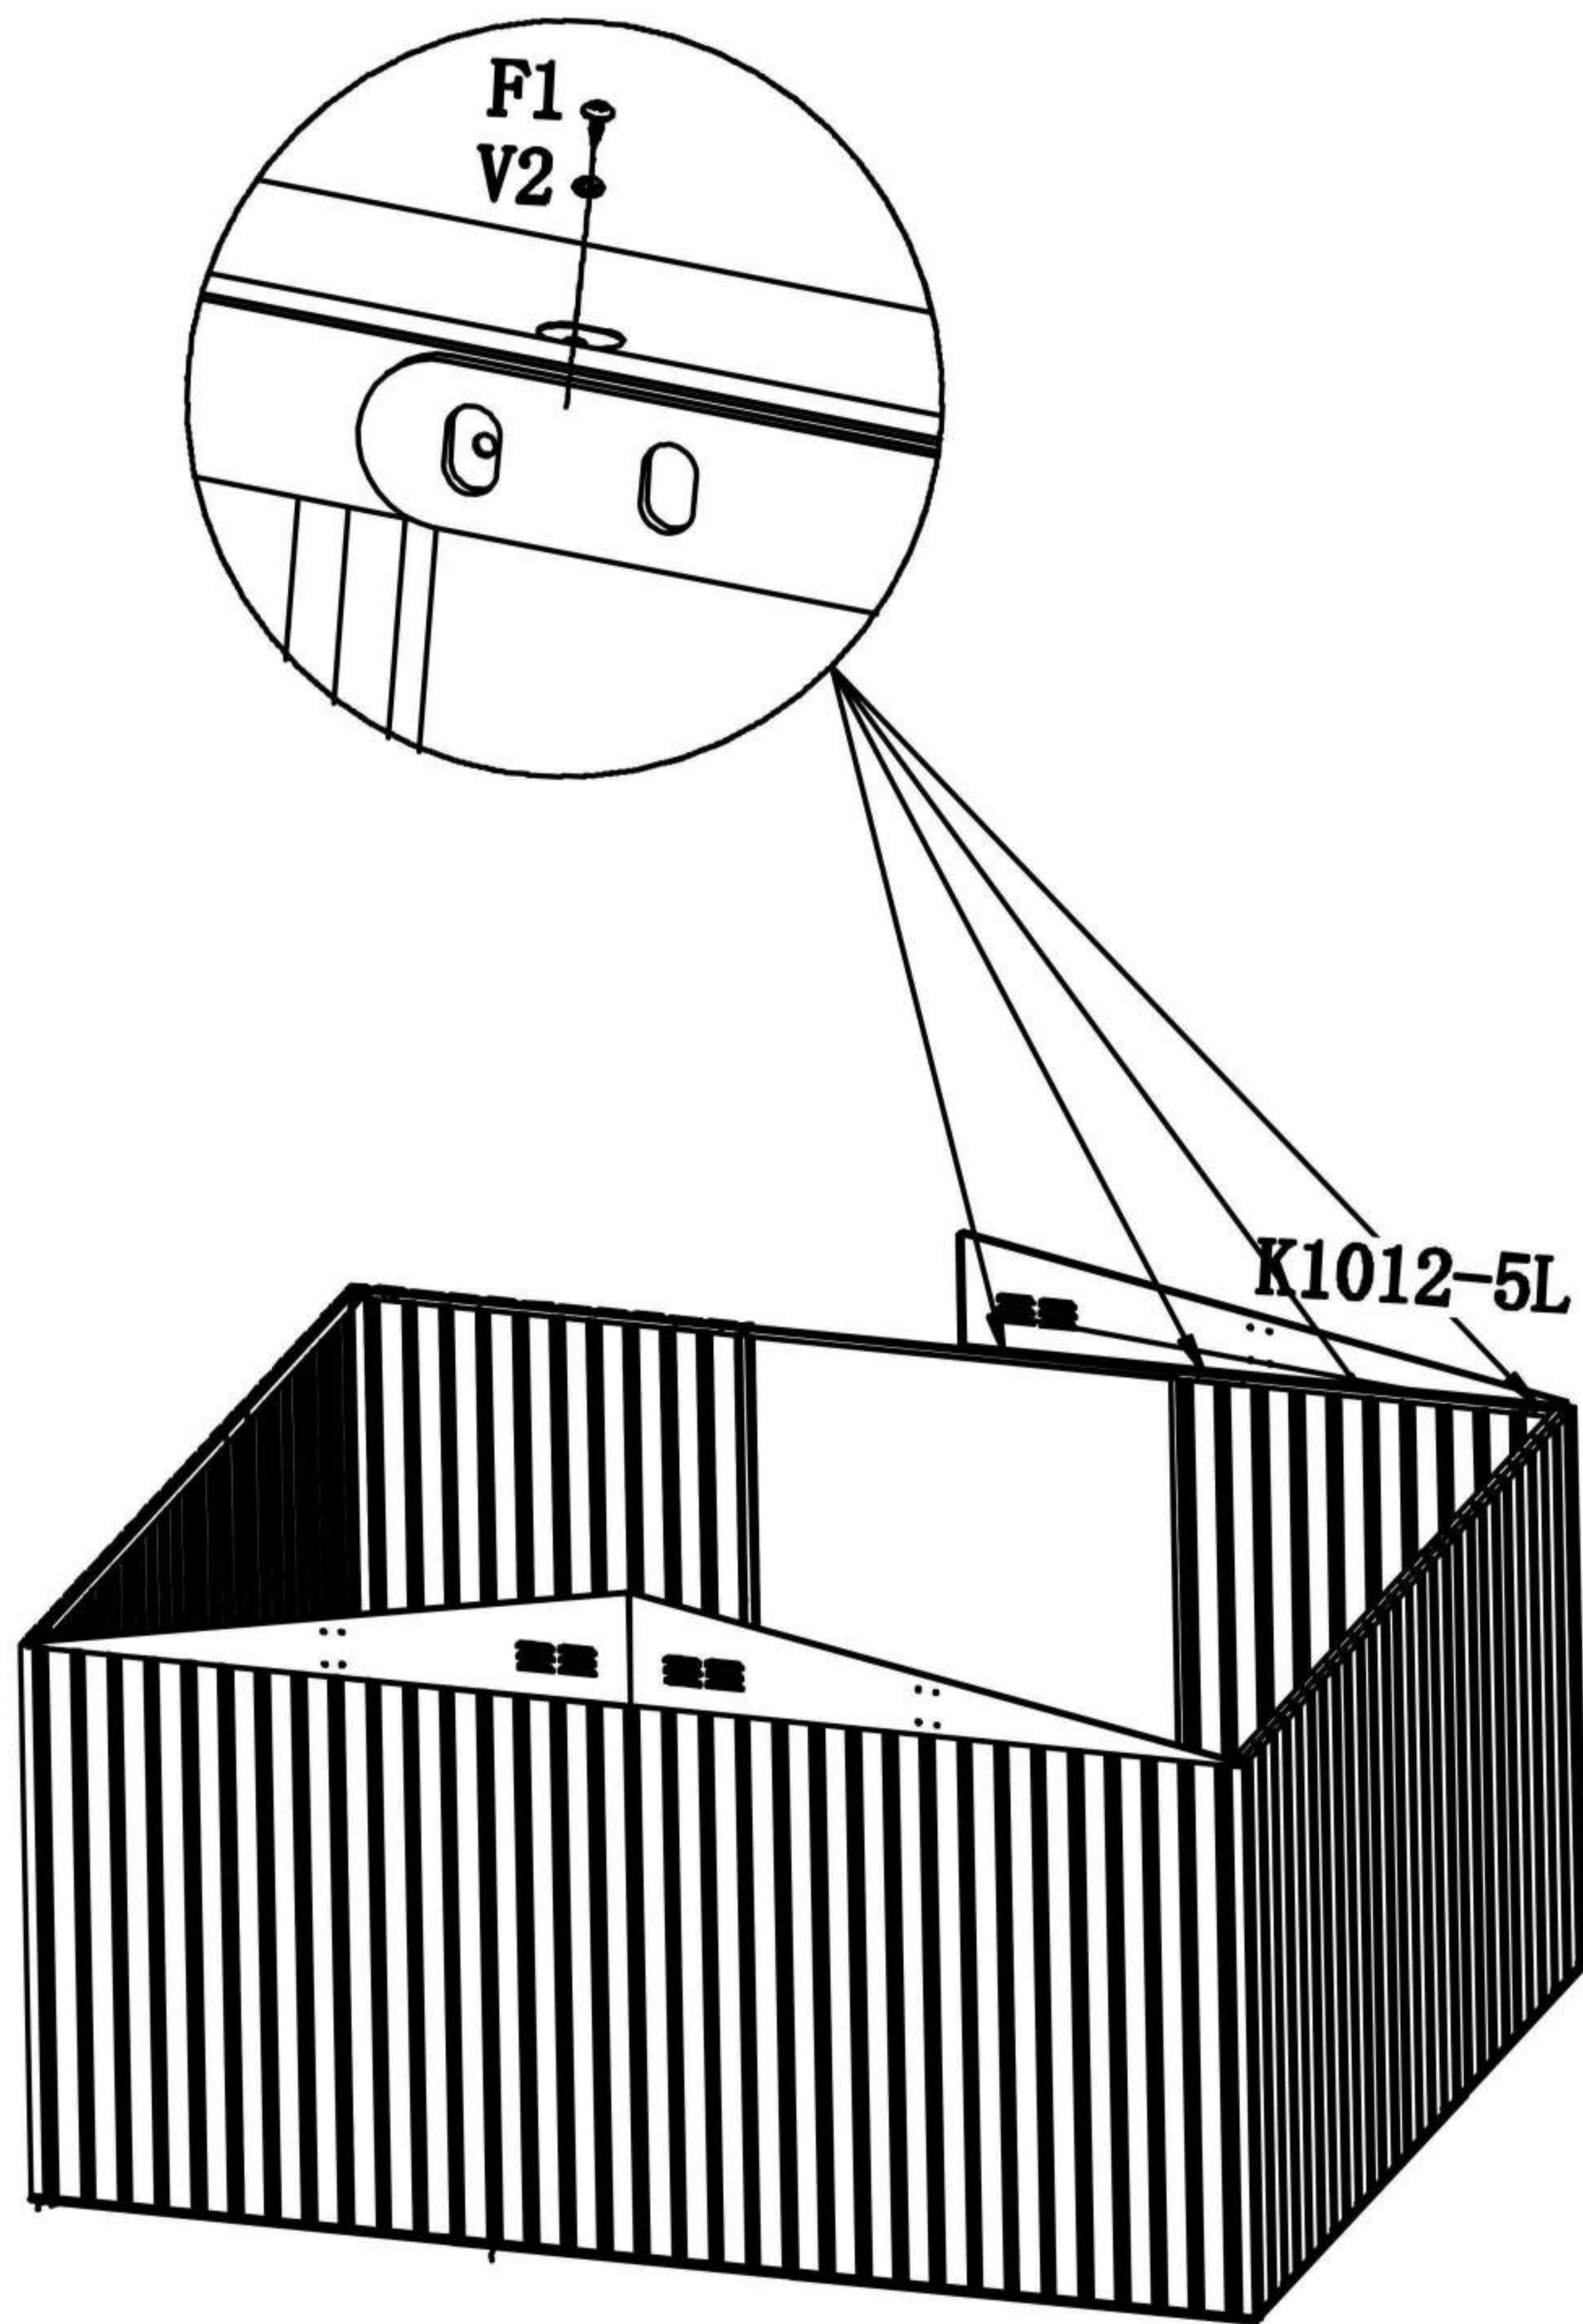


# STEP10

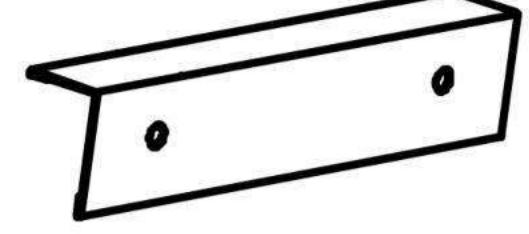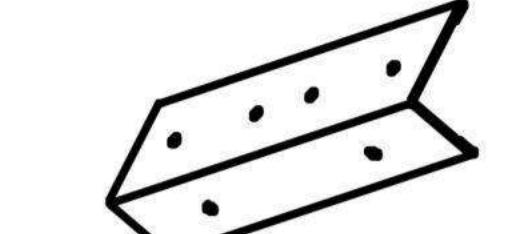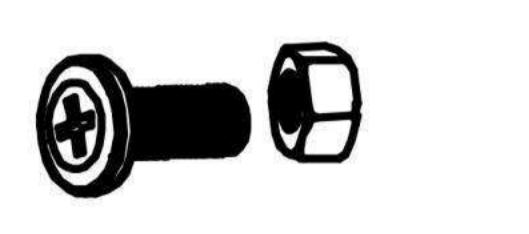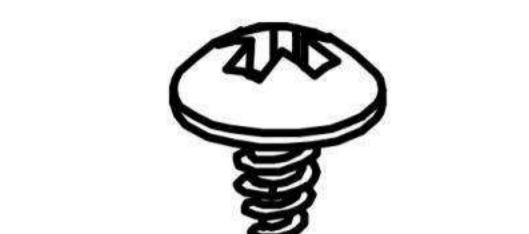PART	NO.	QTY.
	C3	4
	K1012-11	8
	F2	4
	F1	16


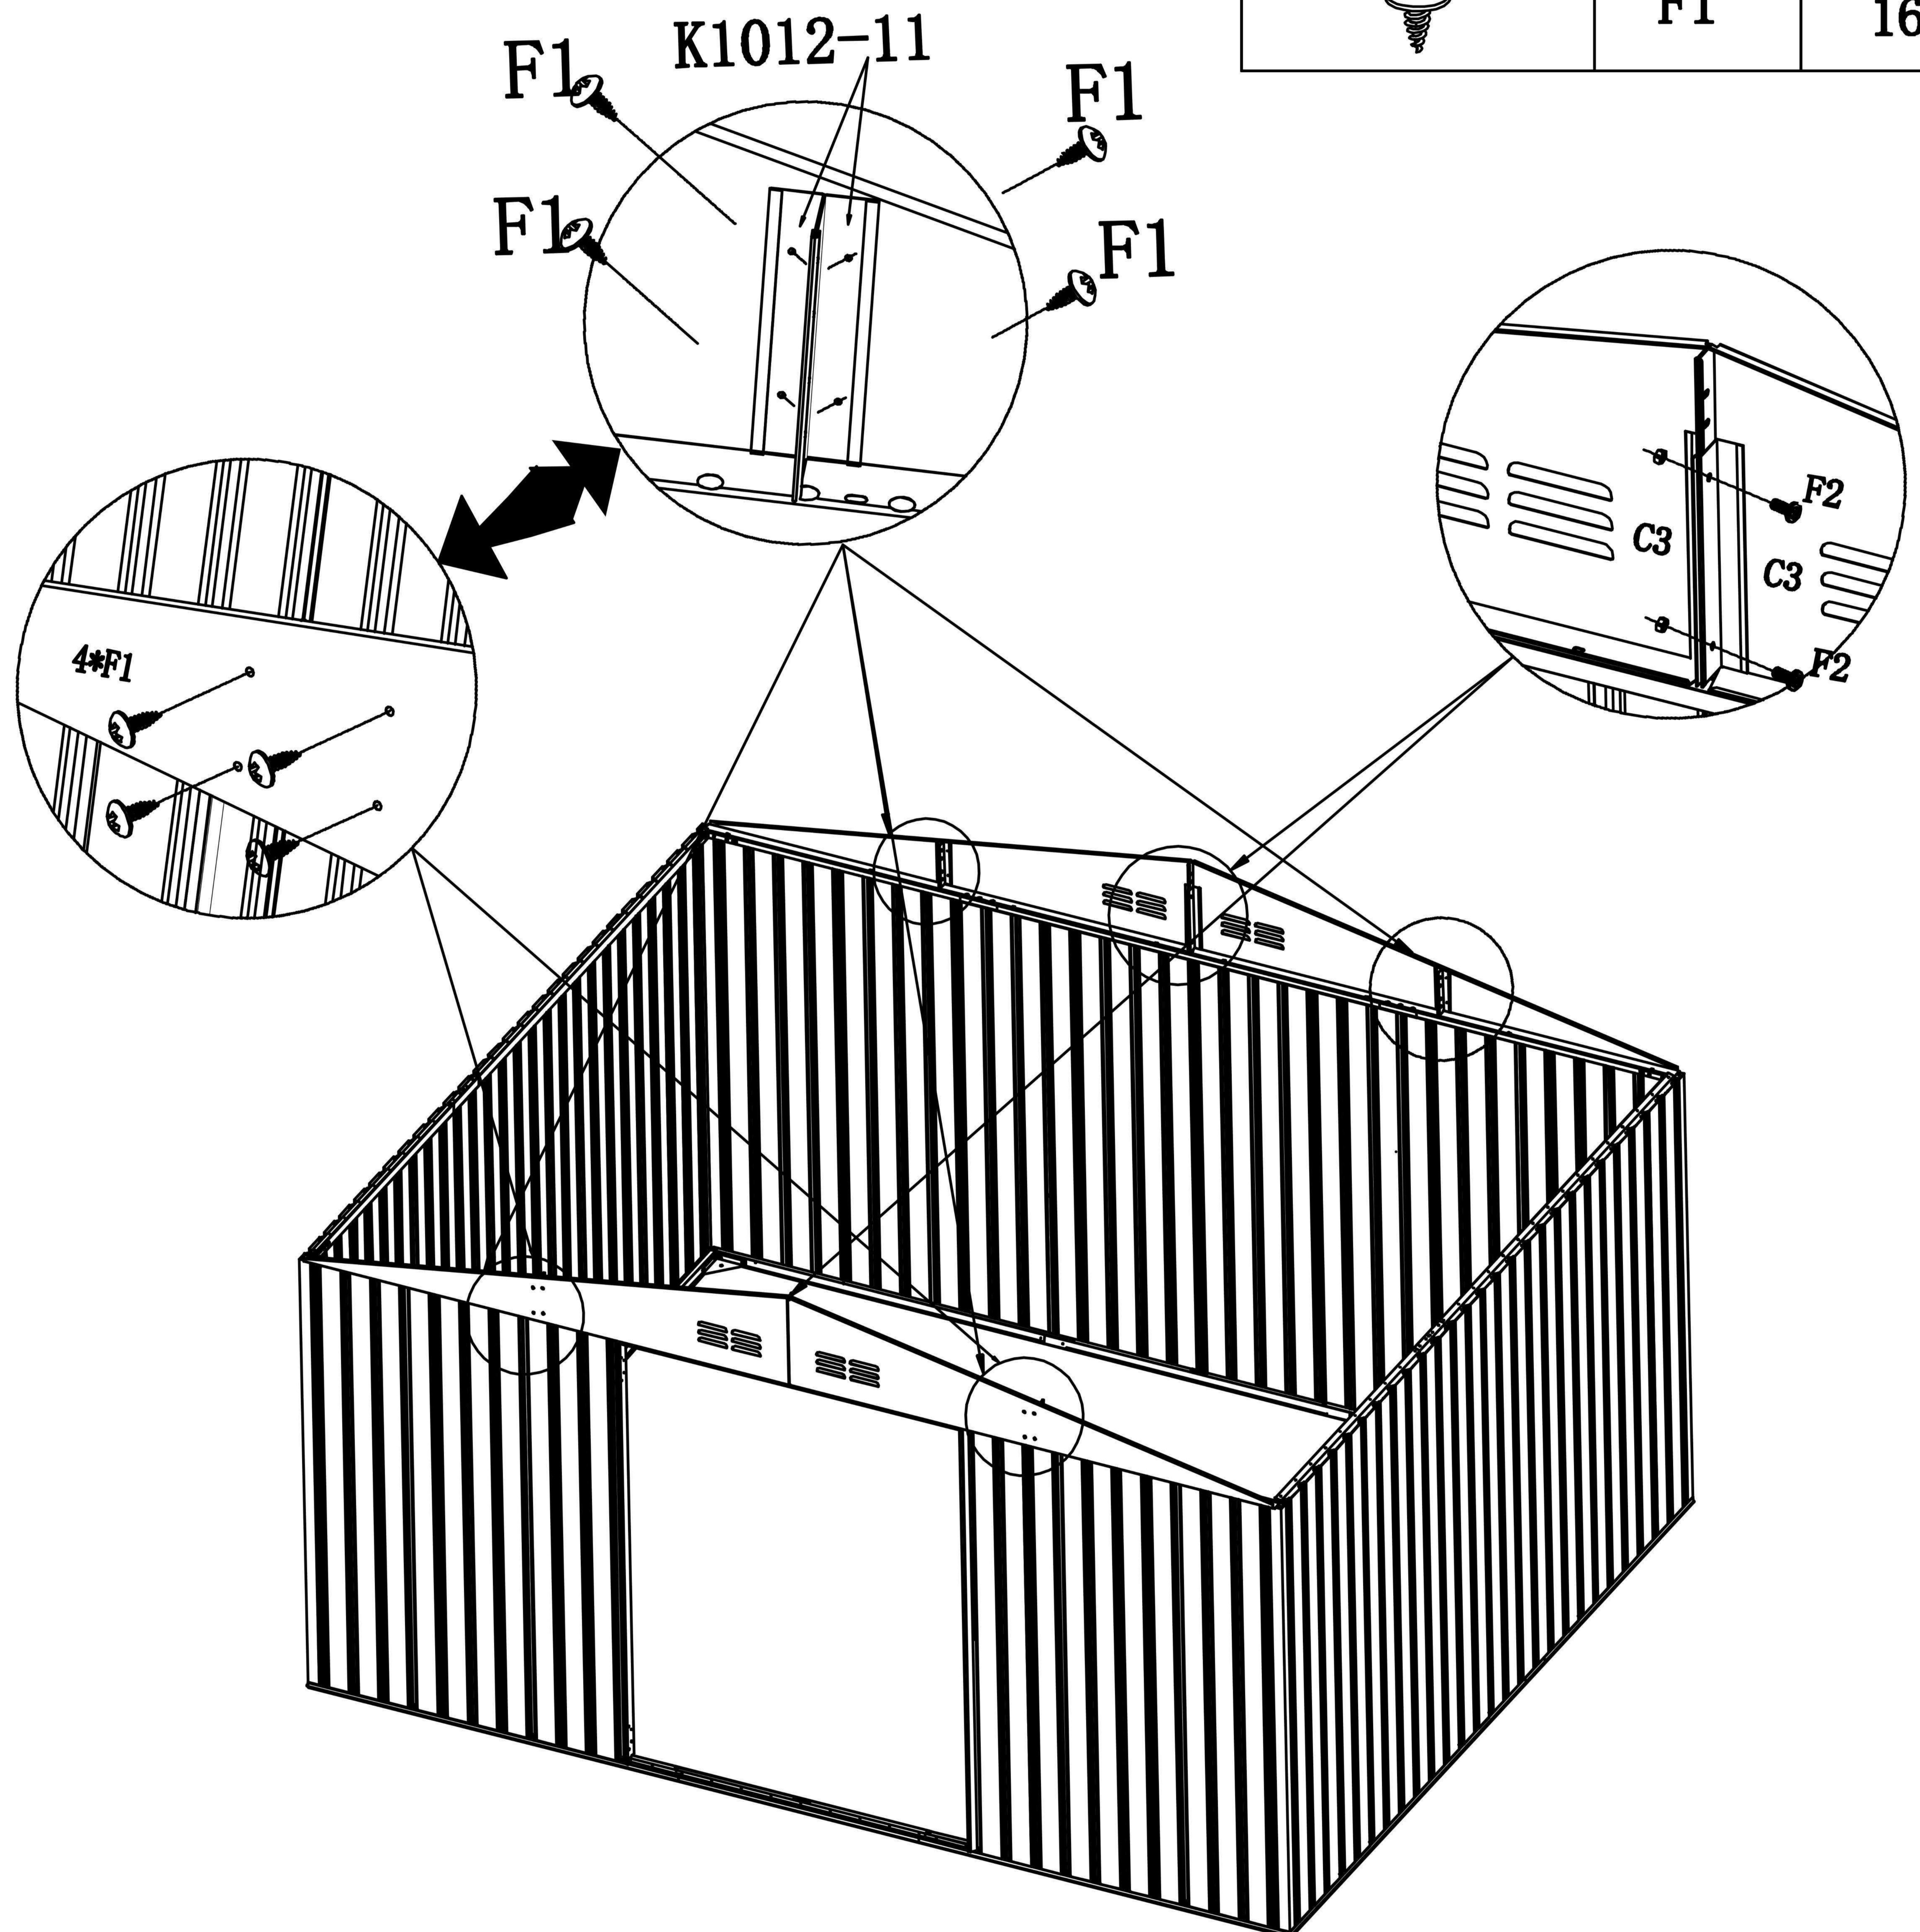


# STEP11



The K1010-6L is small enough in width to snap into the K1010-6R and align their holes.

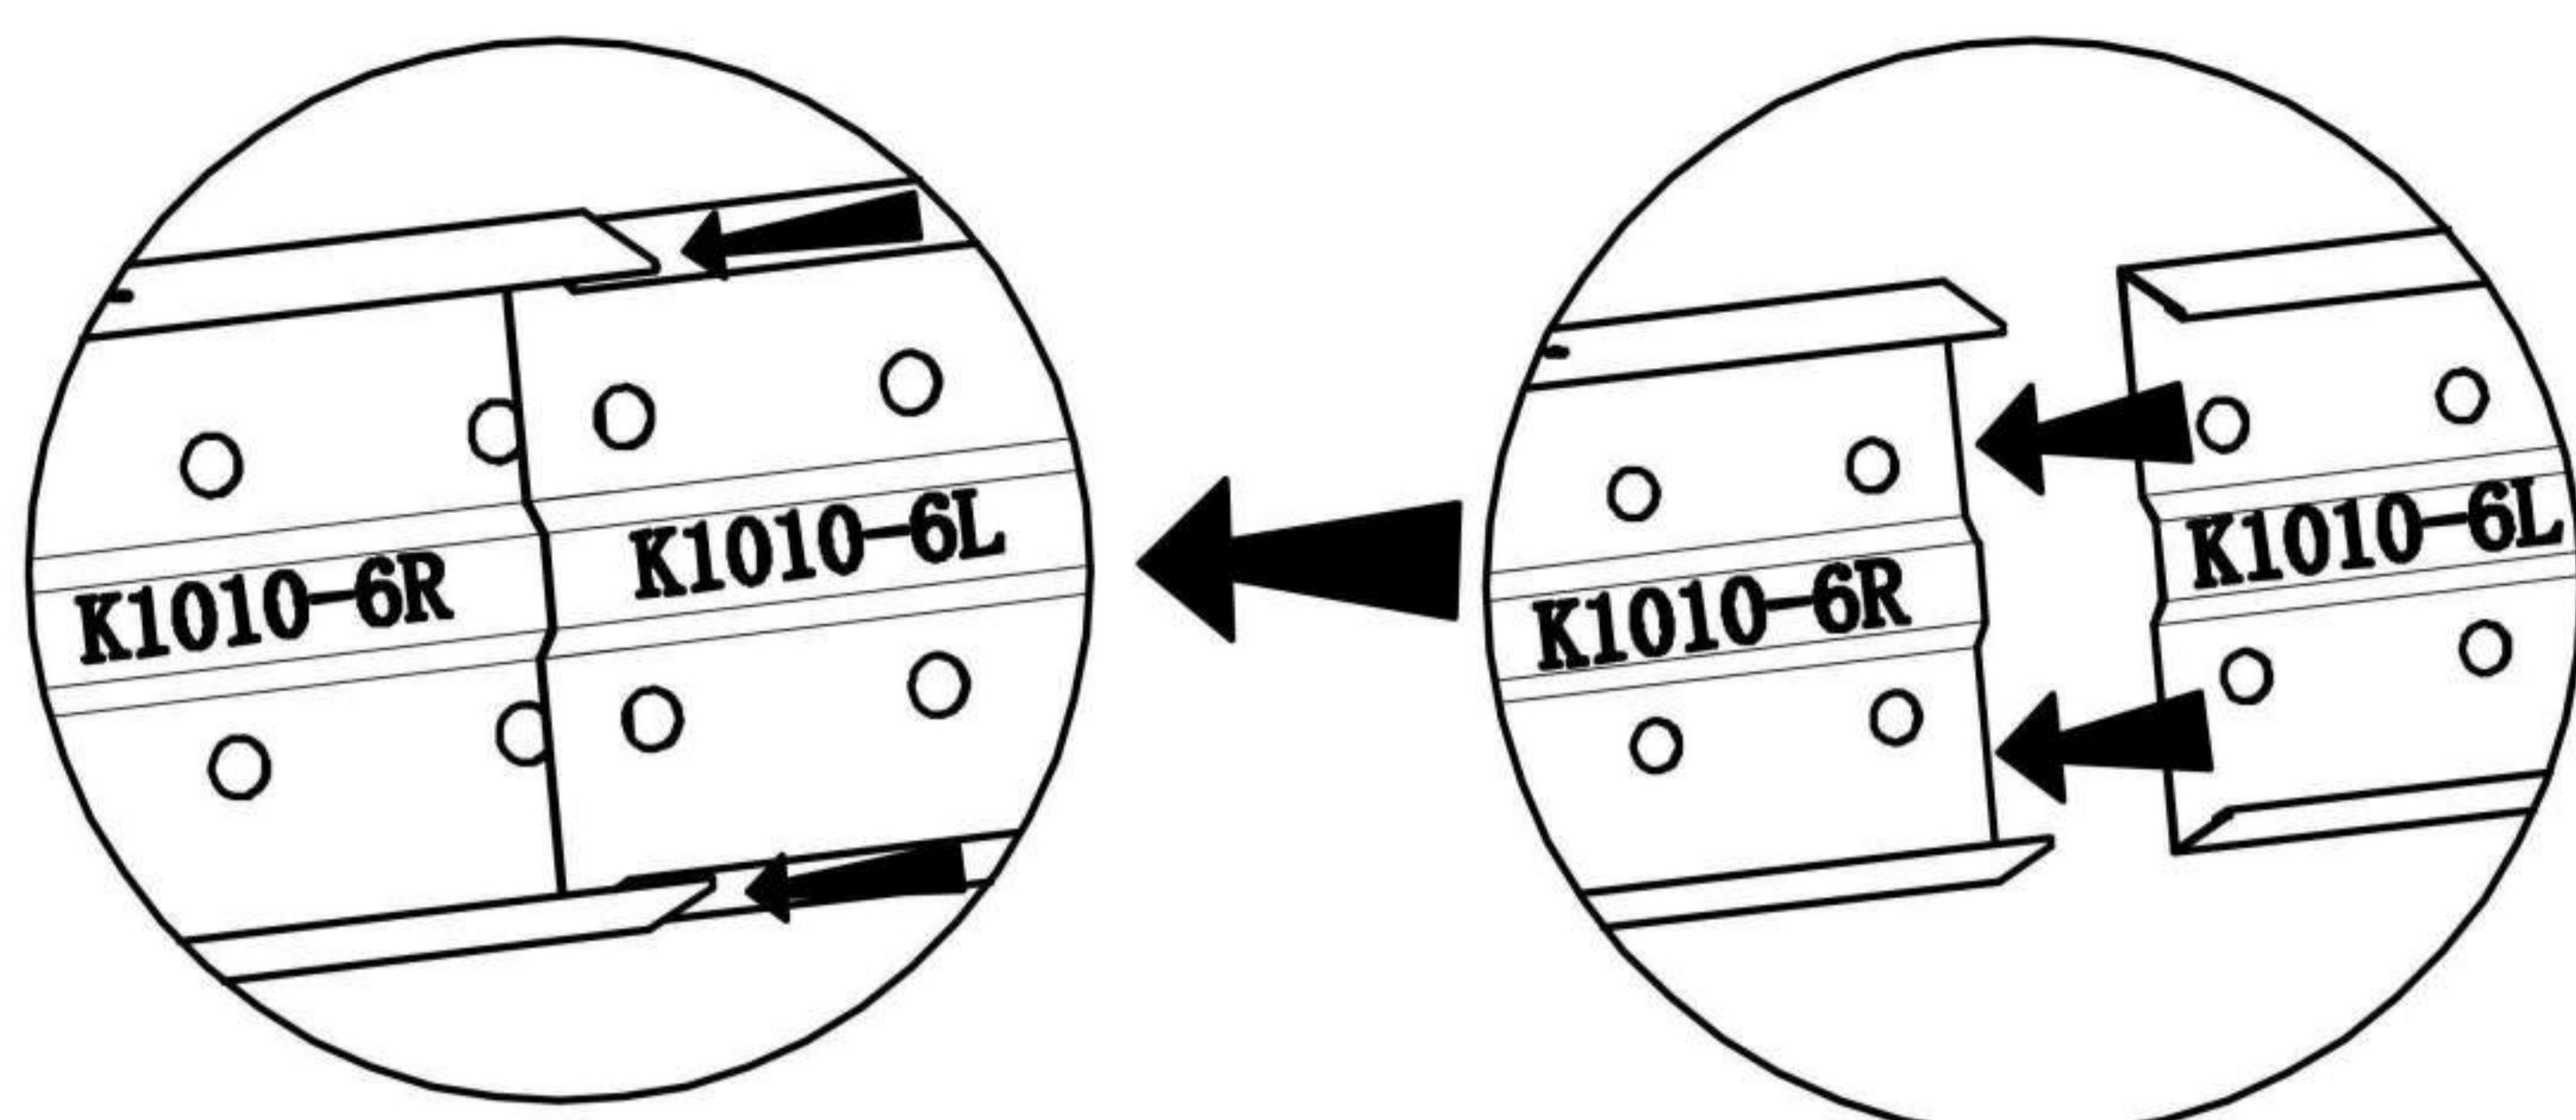


PART	NO.	QTY.
K1010-6L		6
K1010-6R		6
F2		30

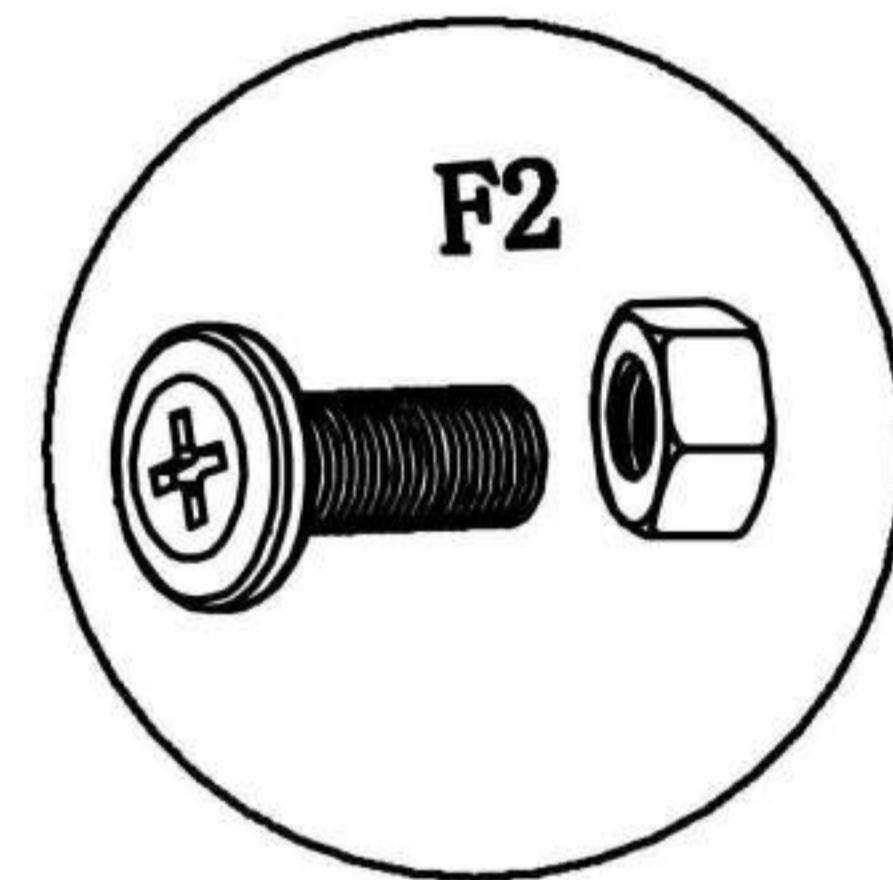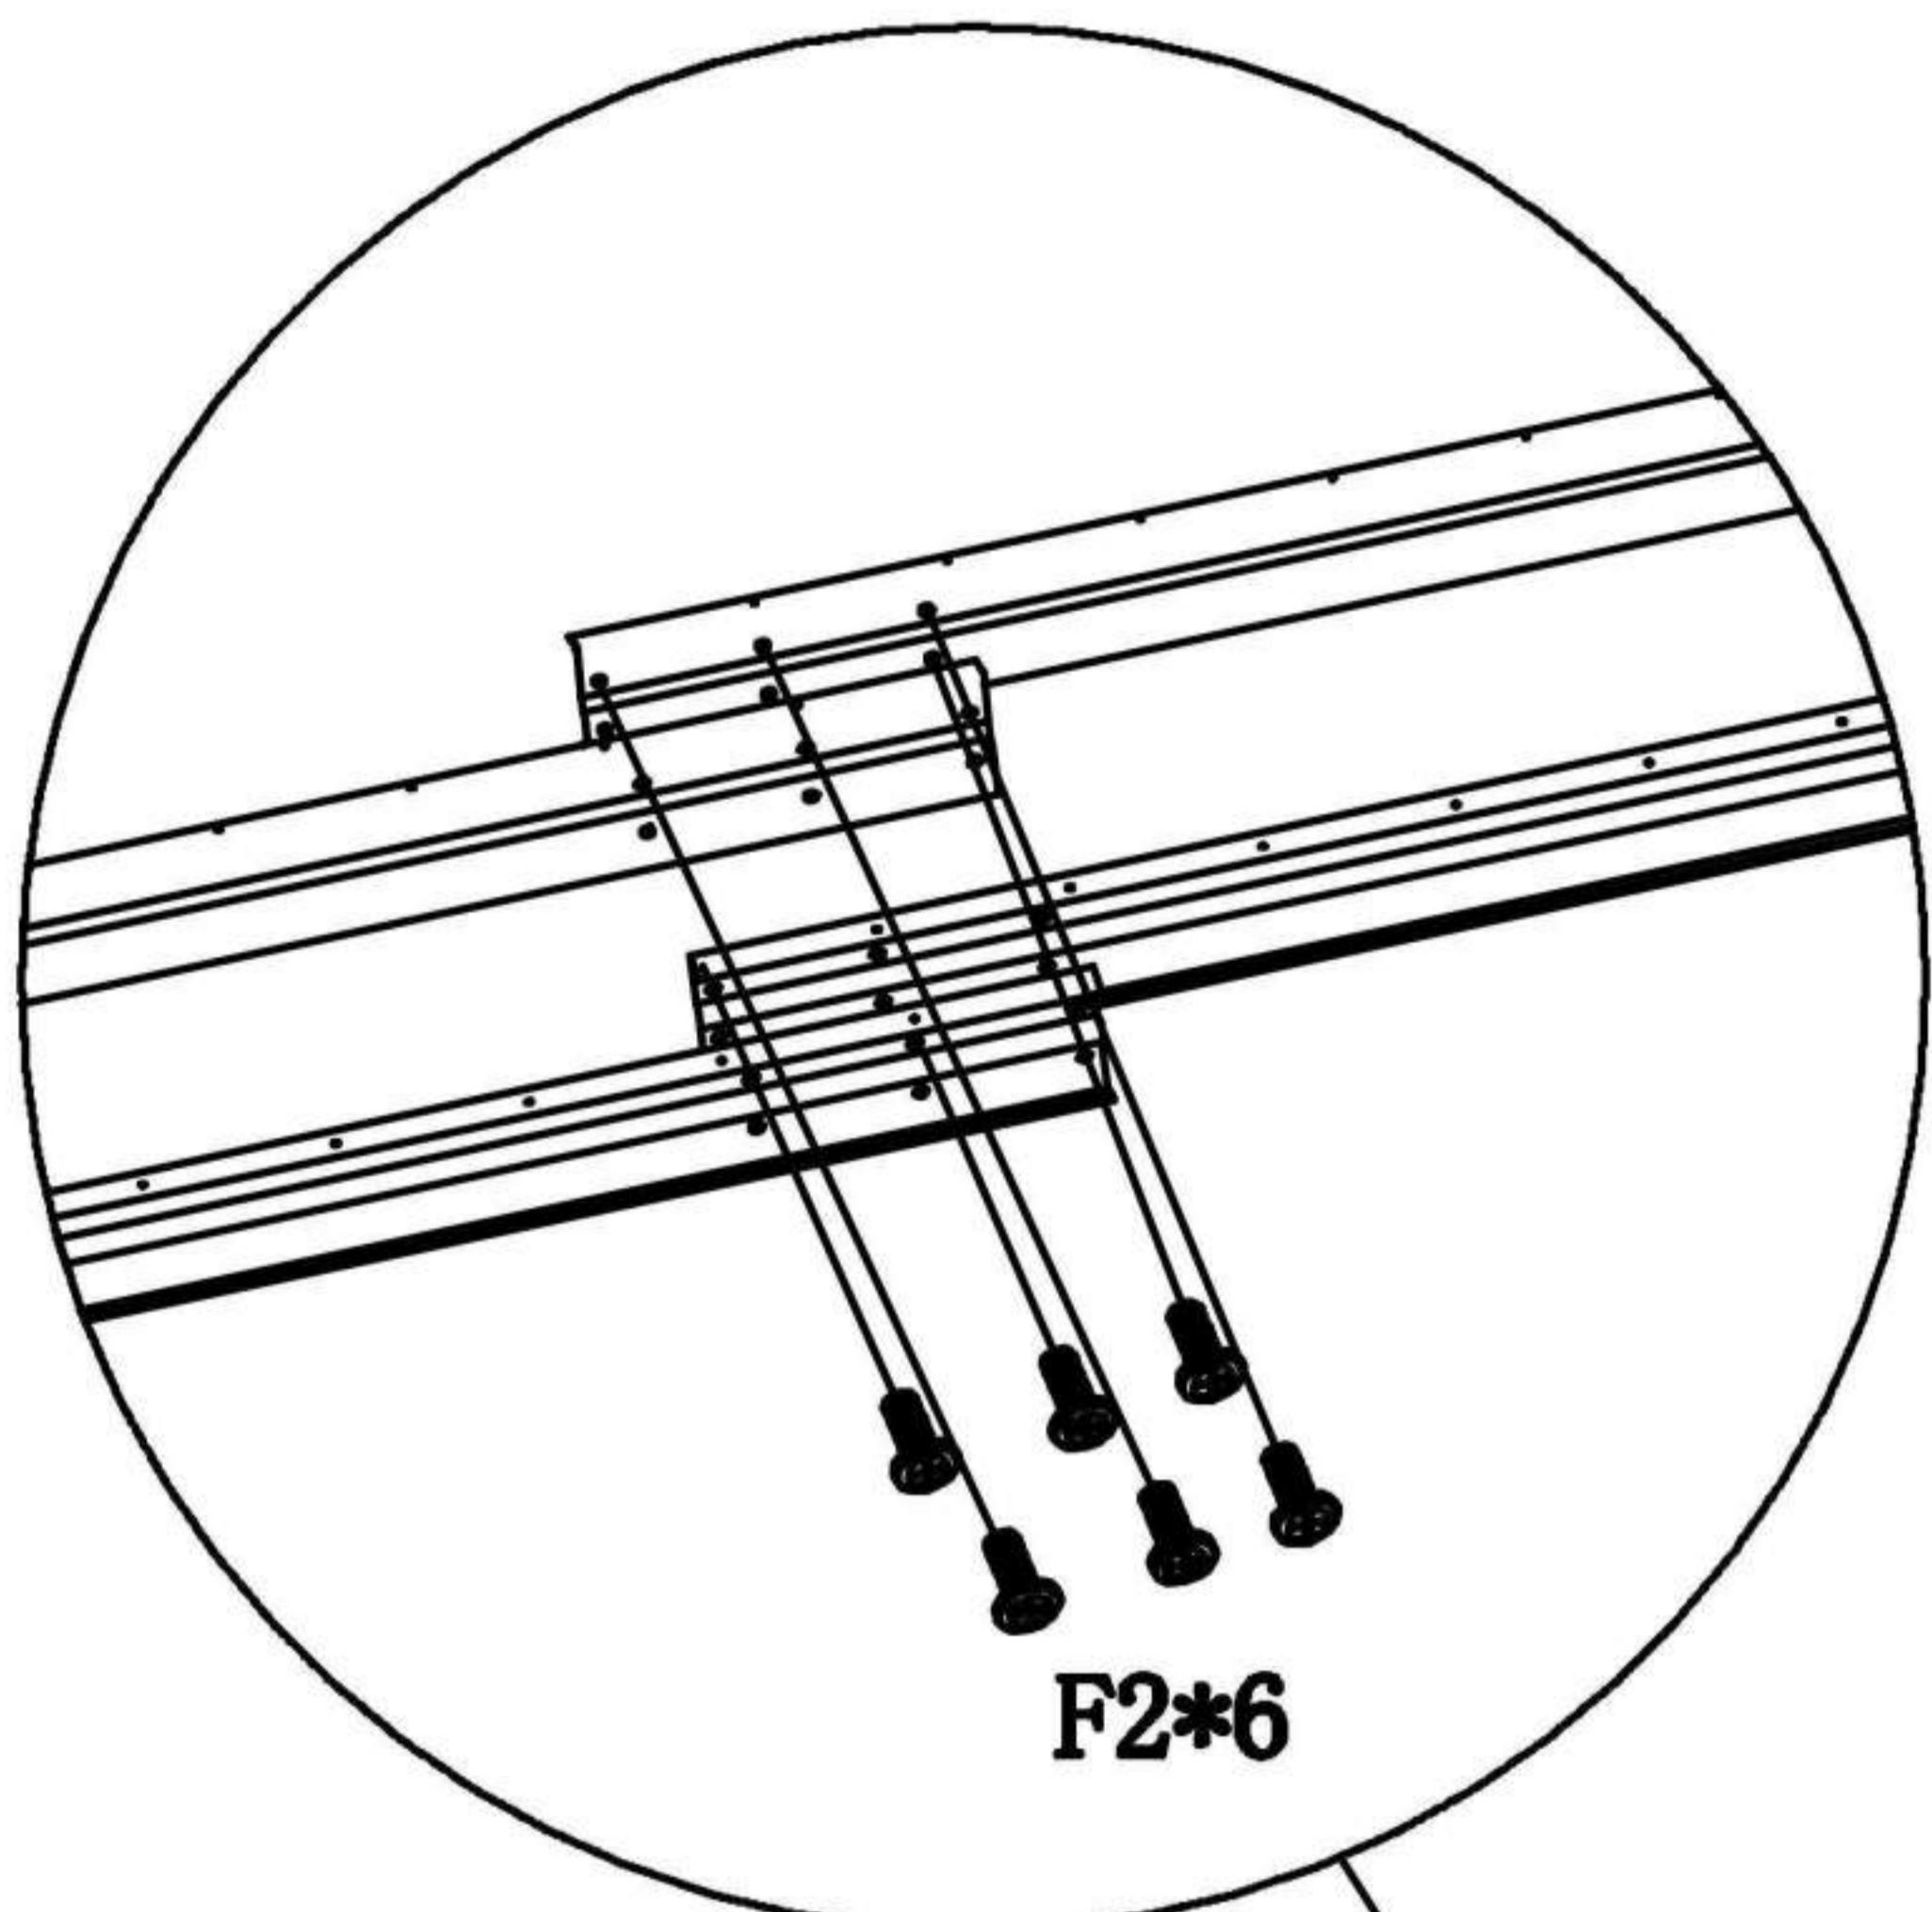


\*3

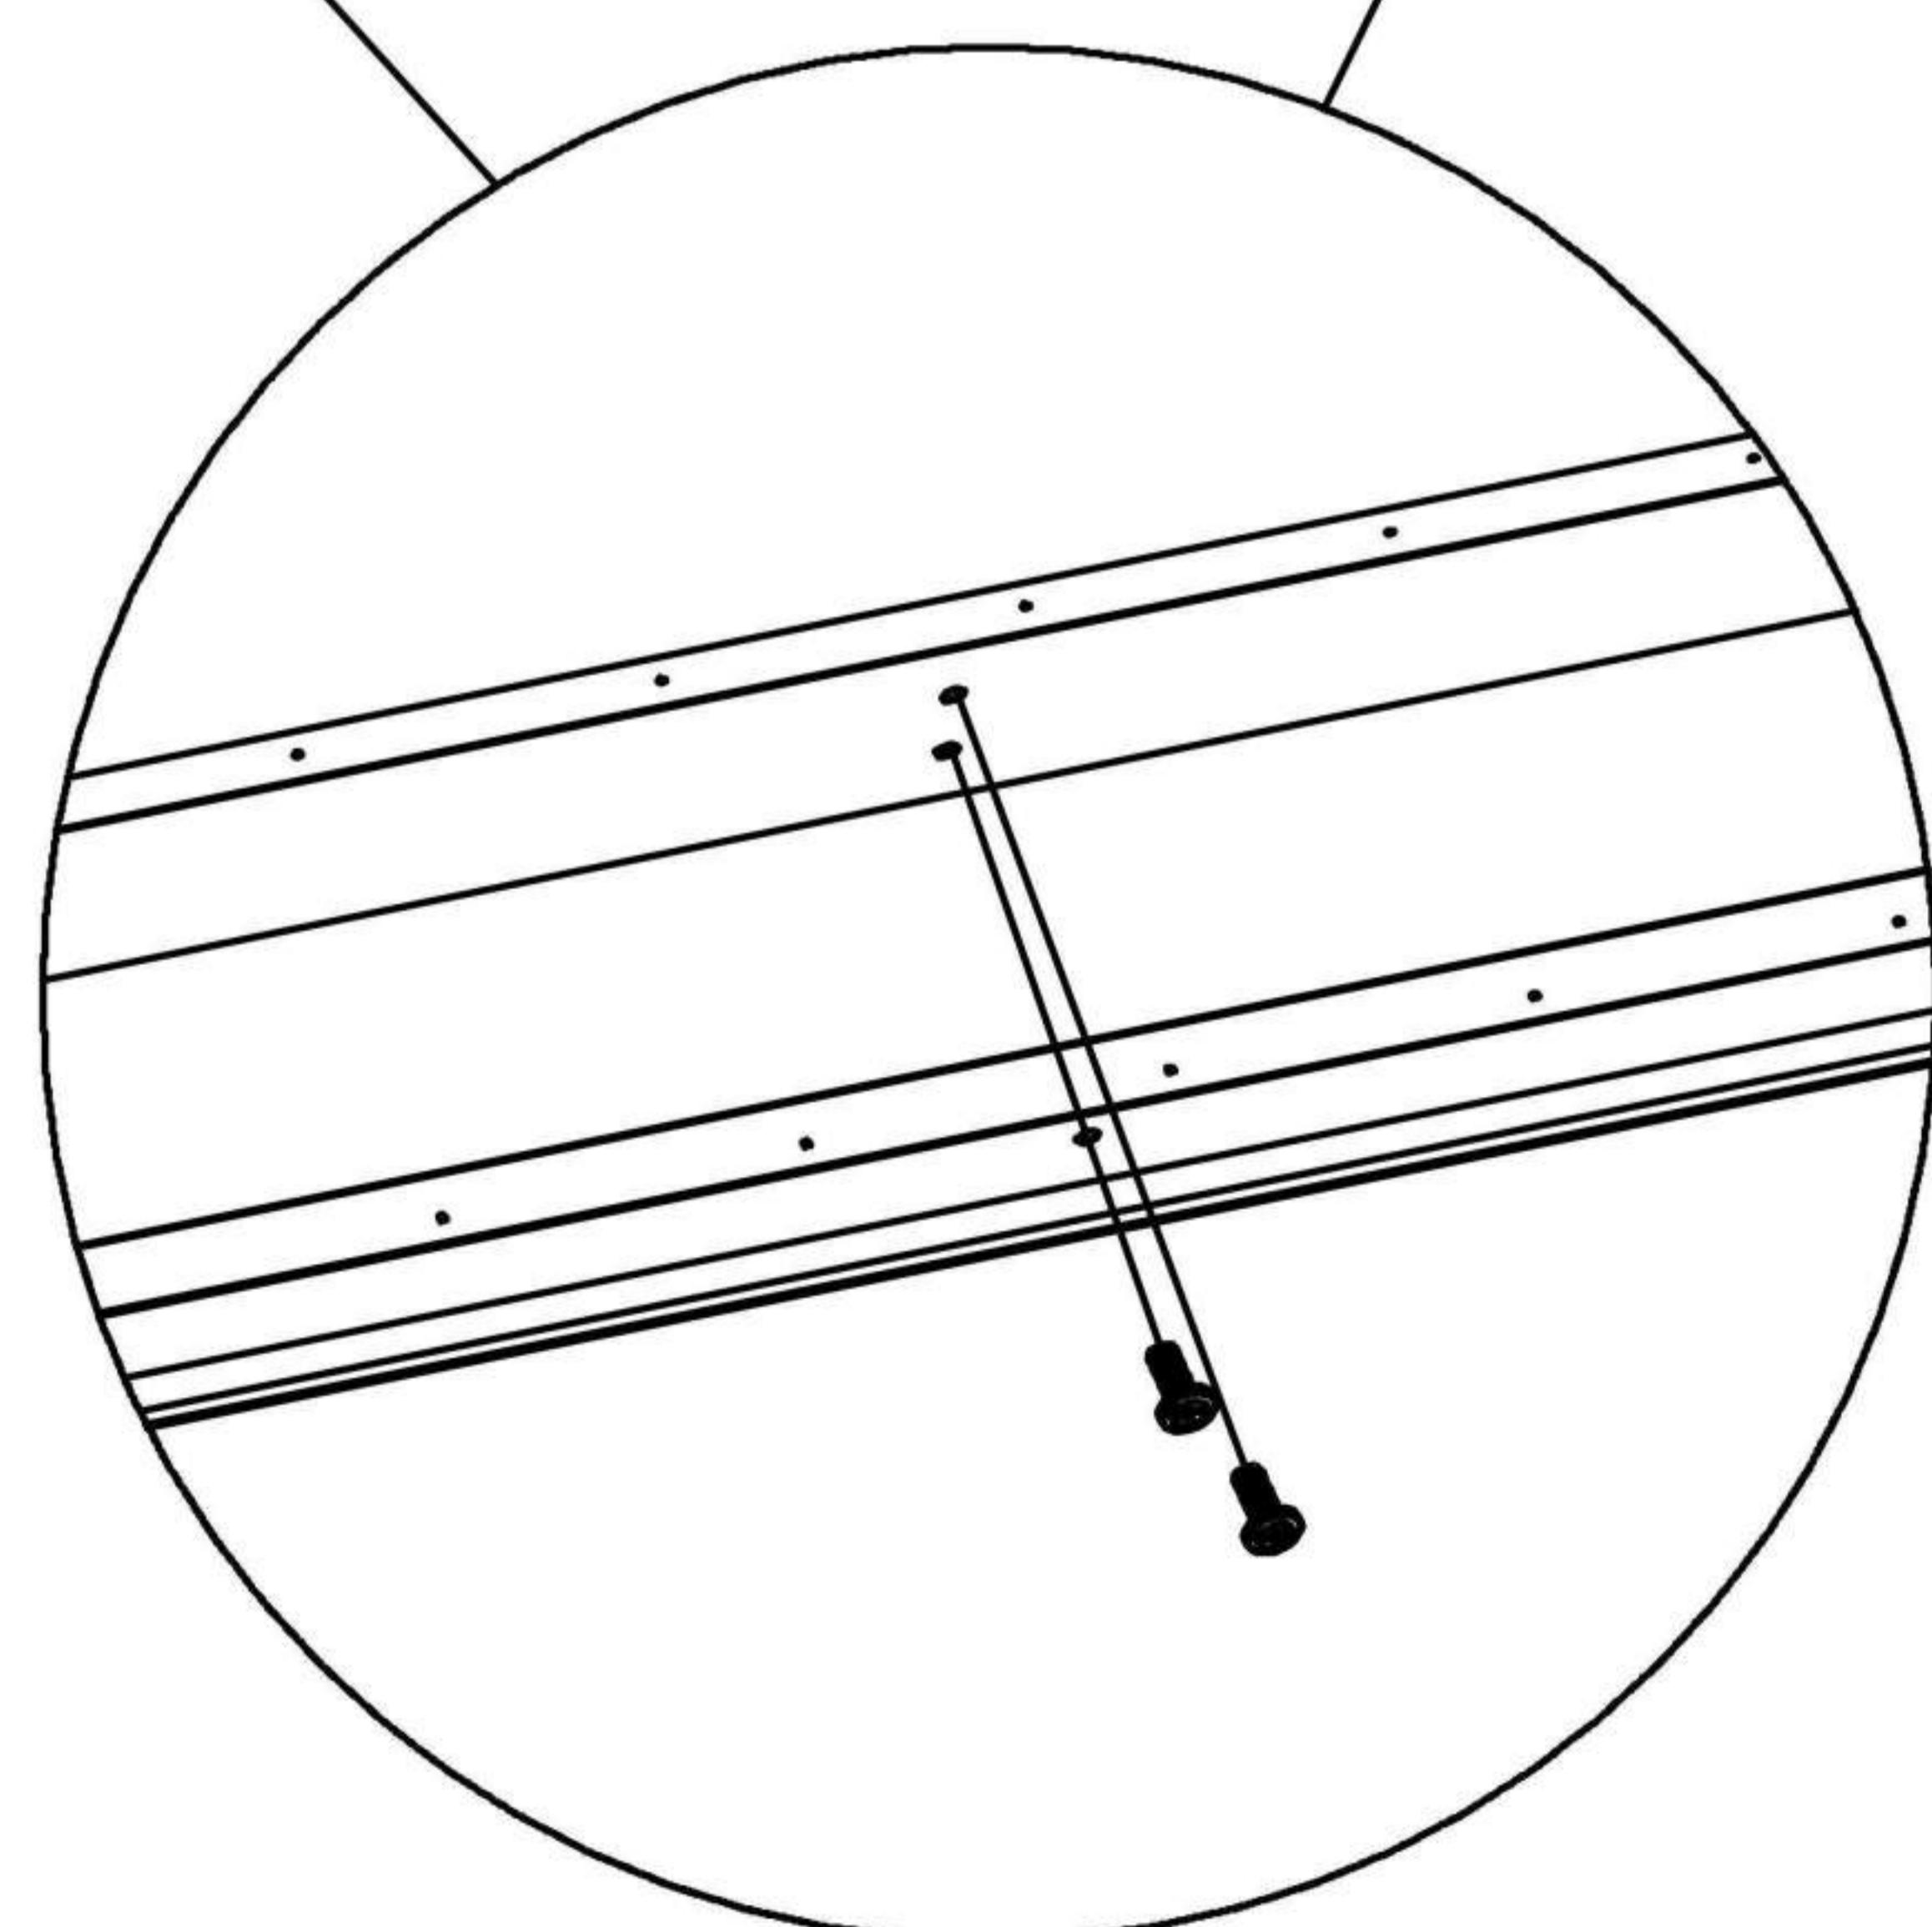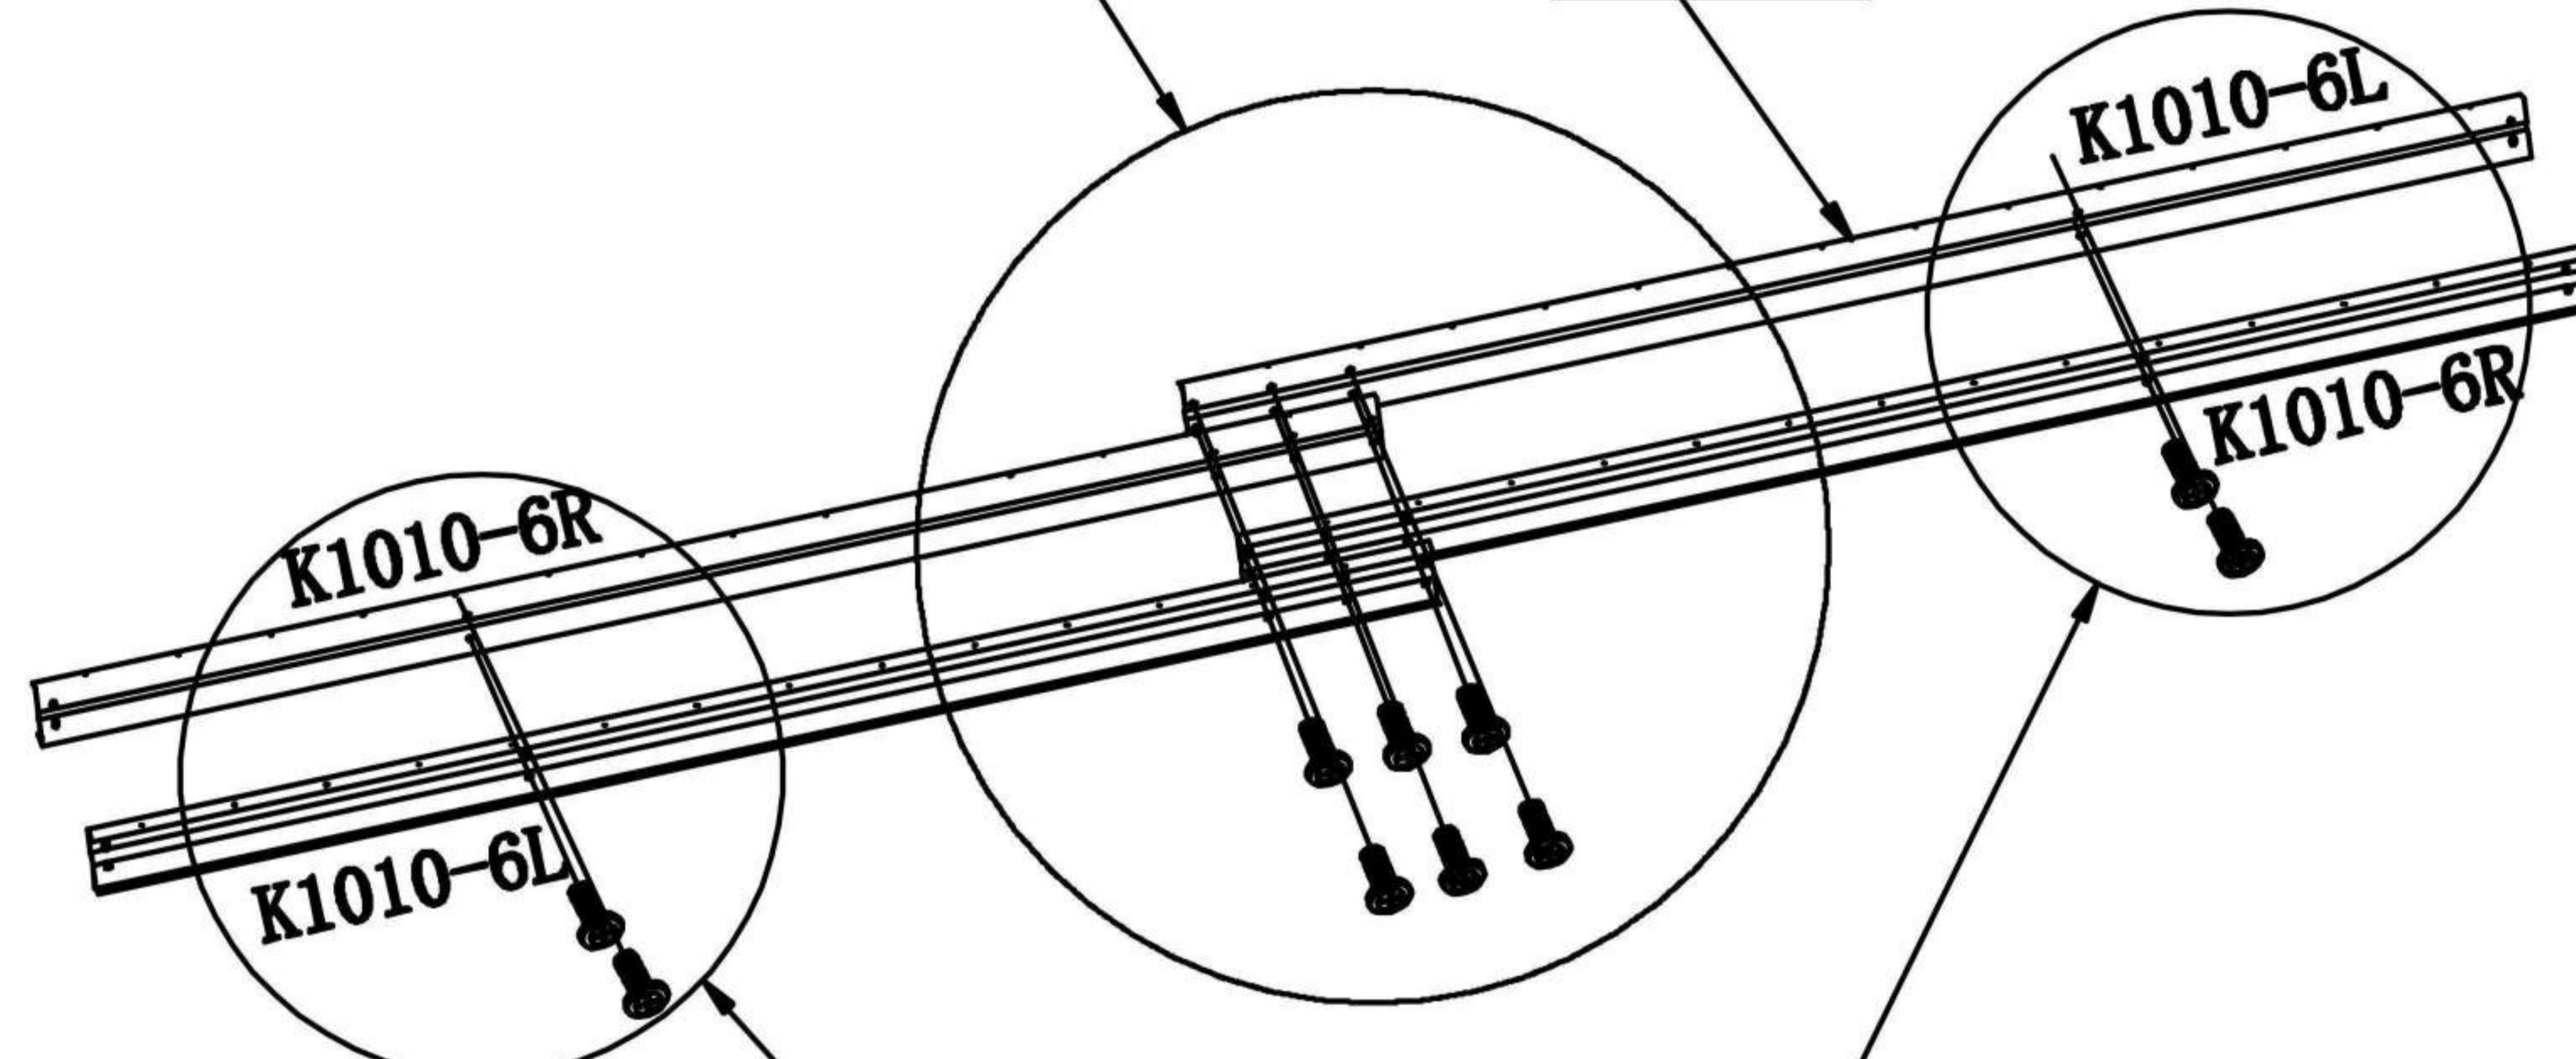


# STEP12

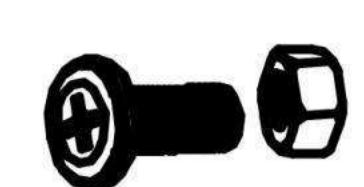
PART	NO.	QTY.
	F2	12

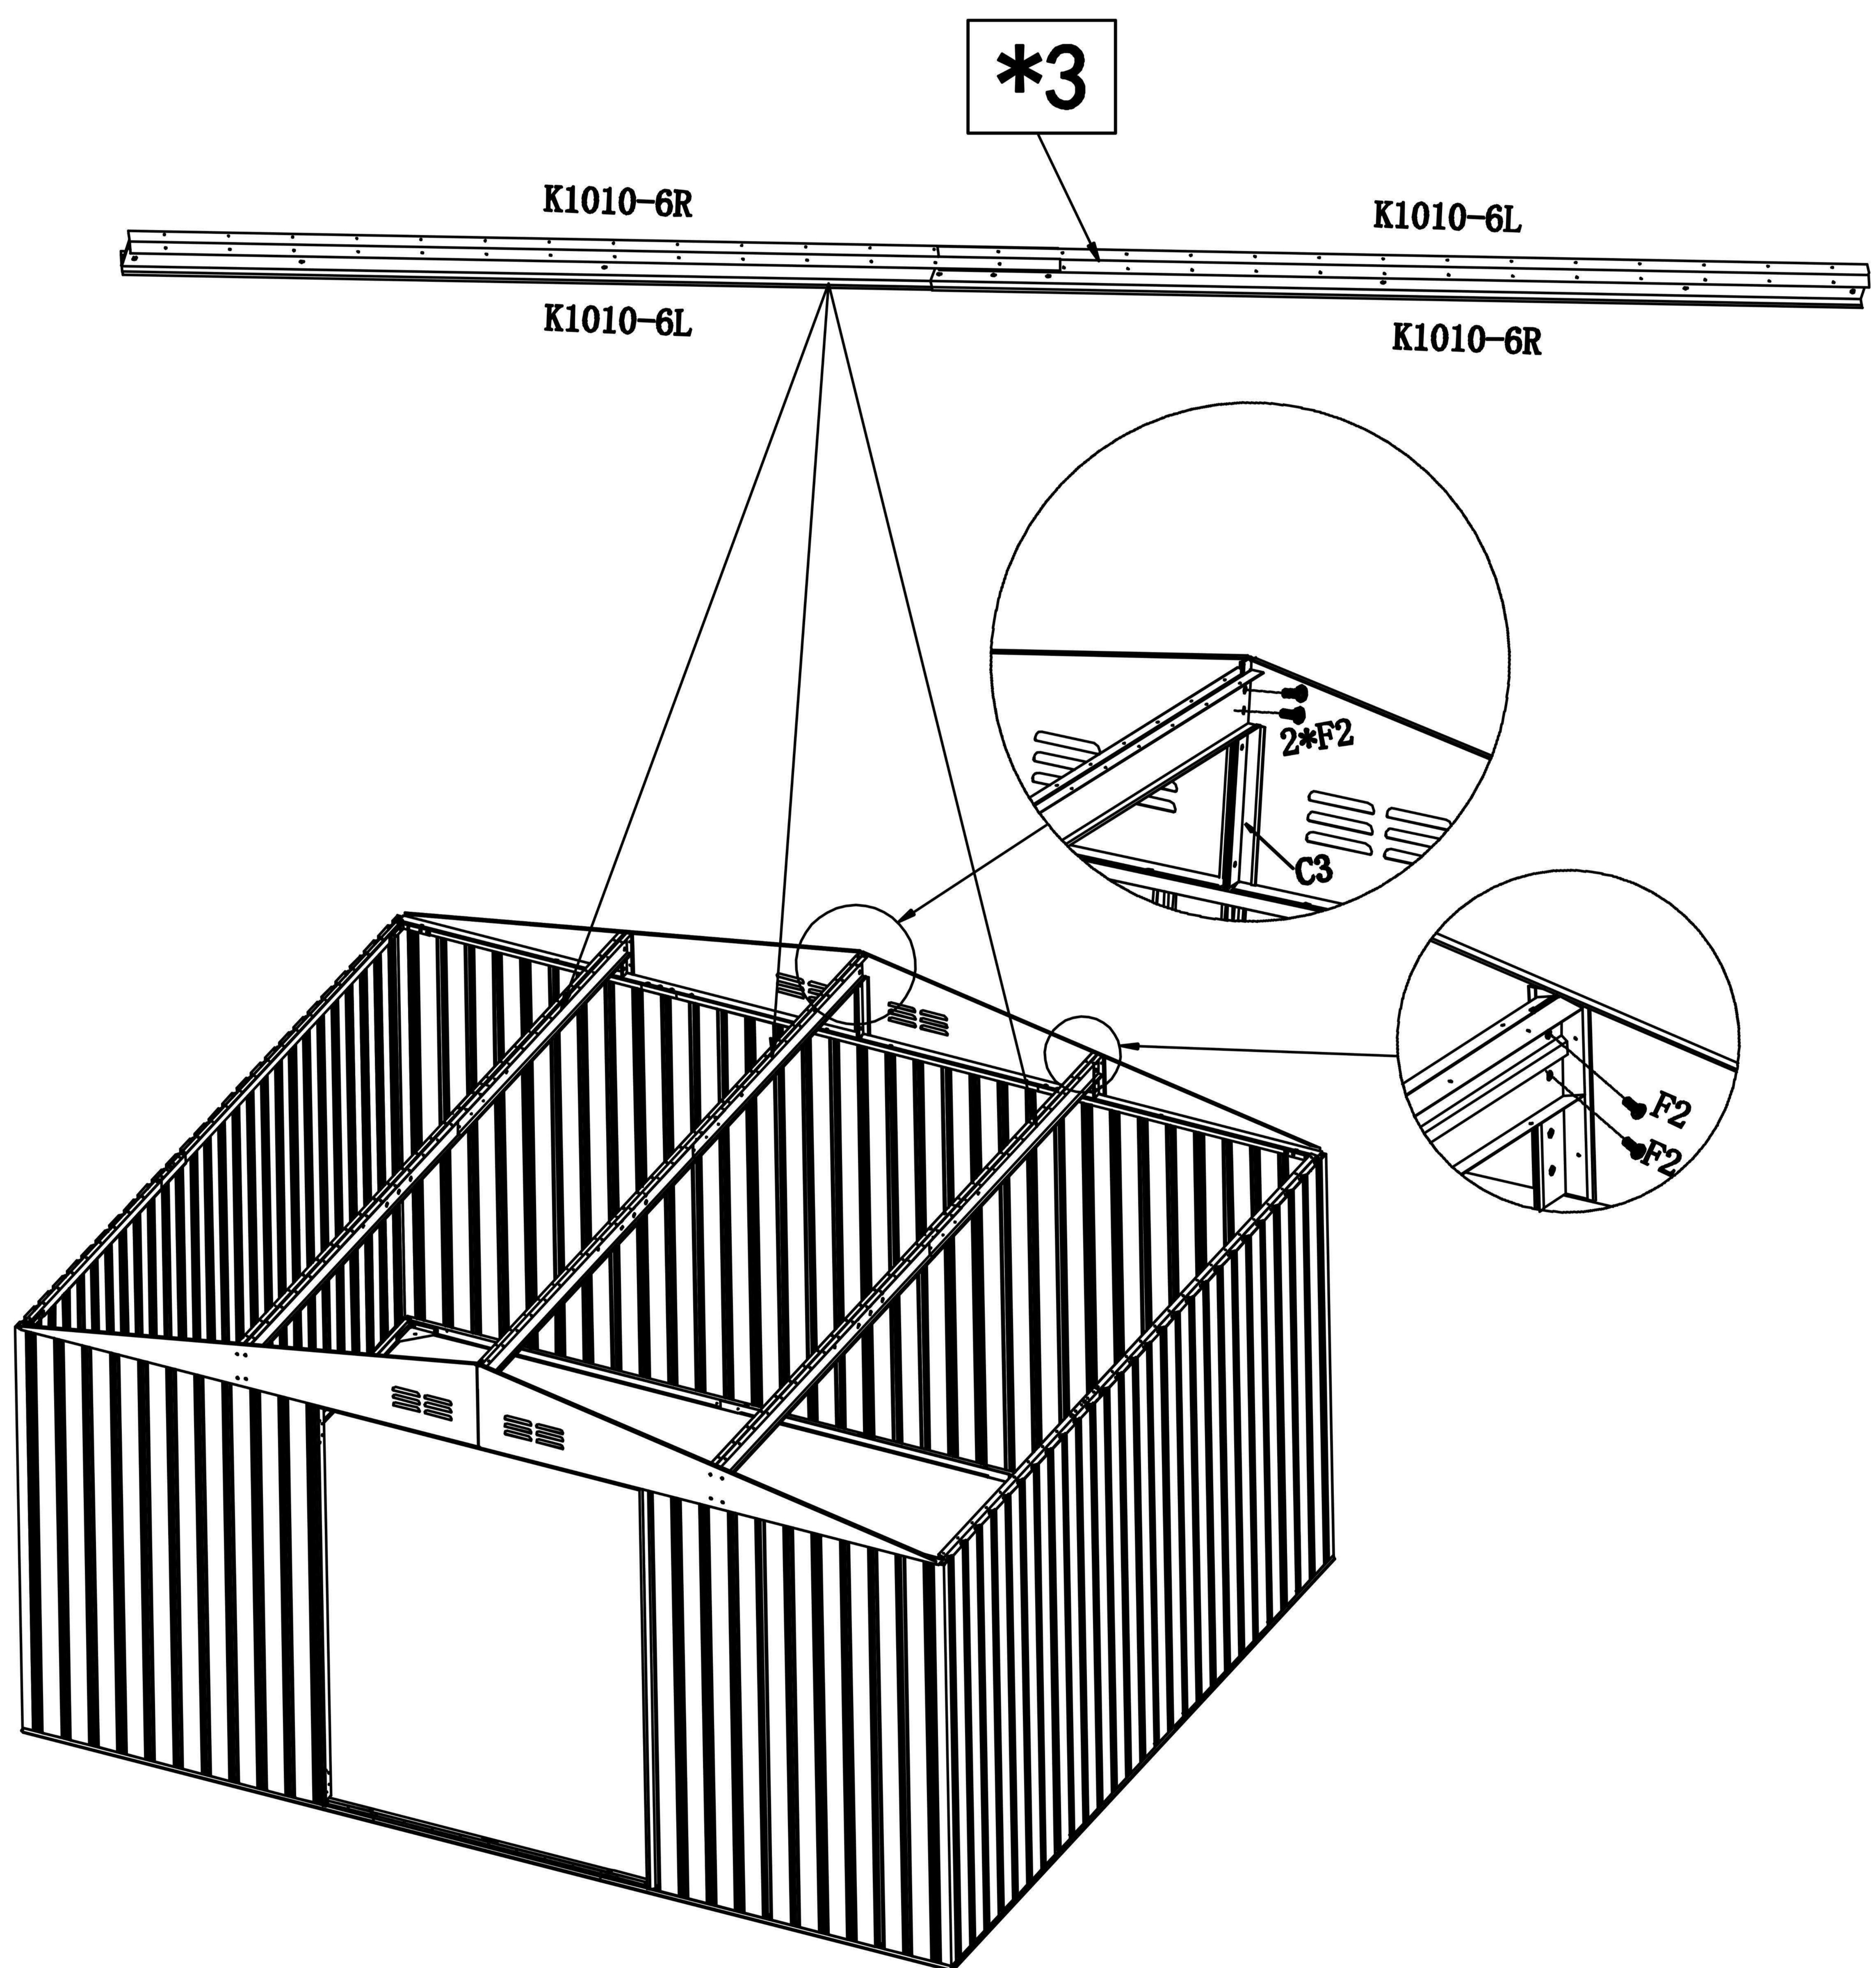

# STEP13

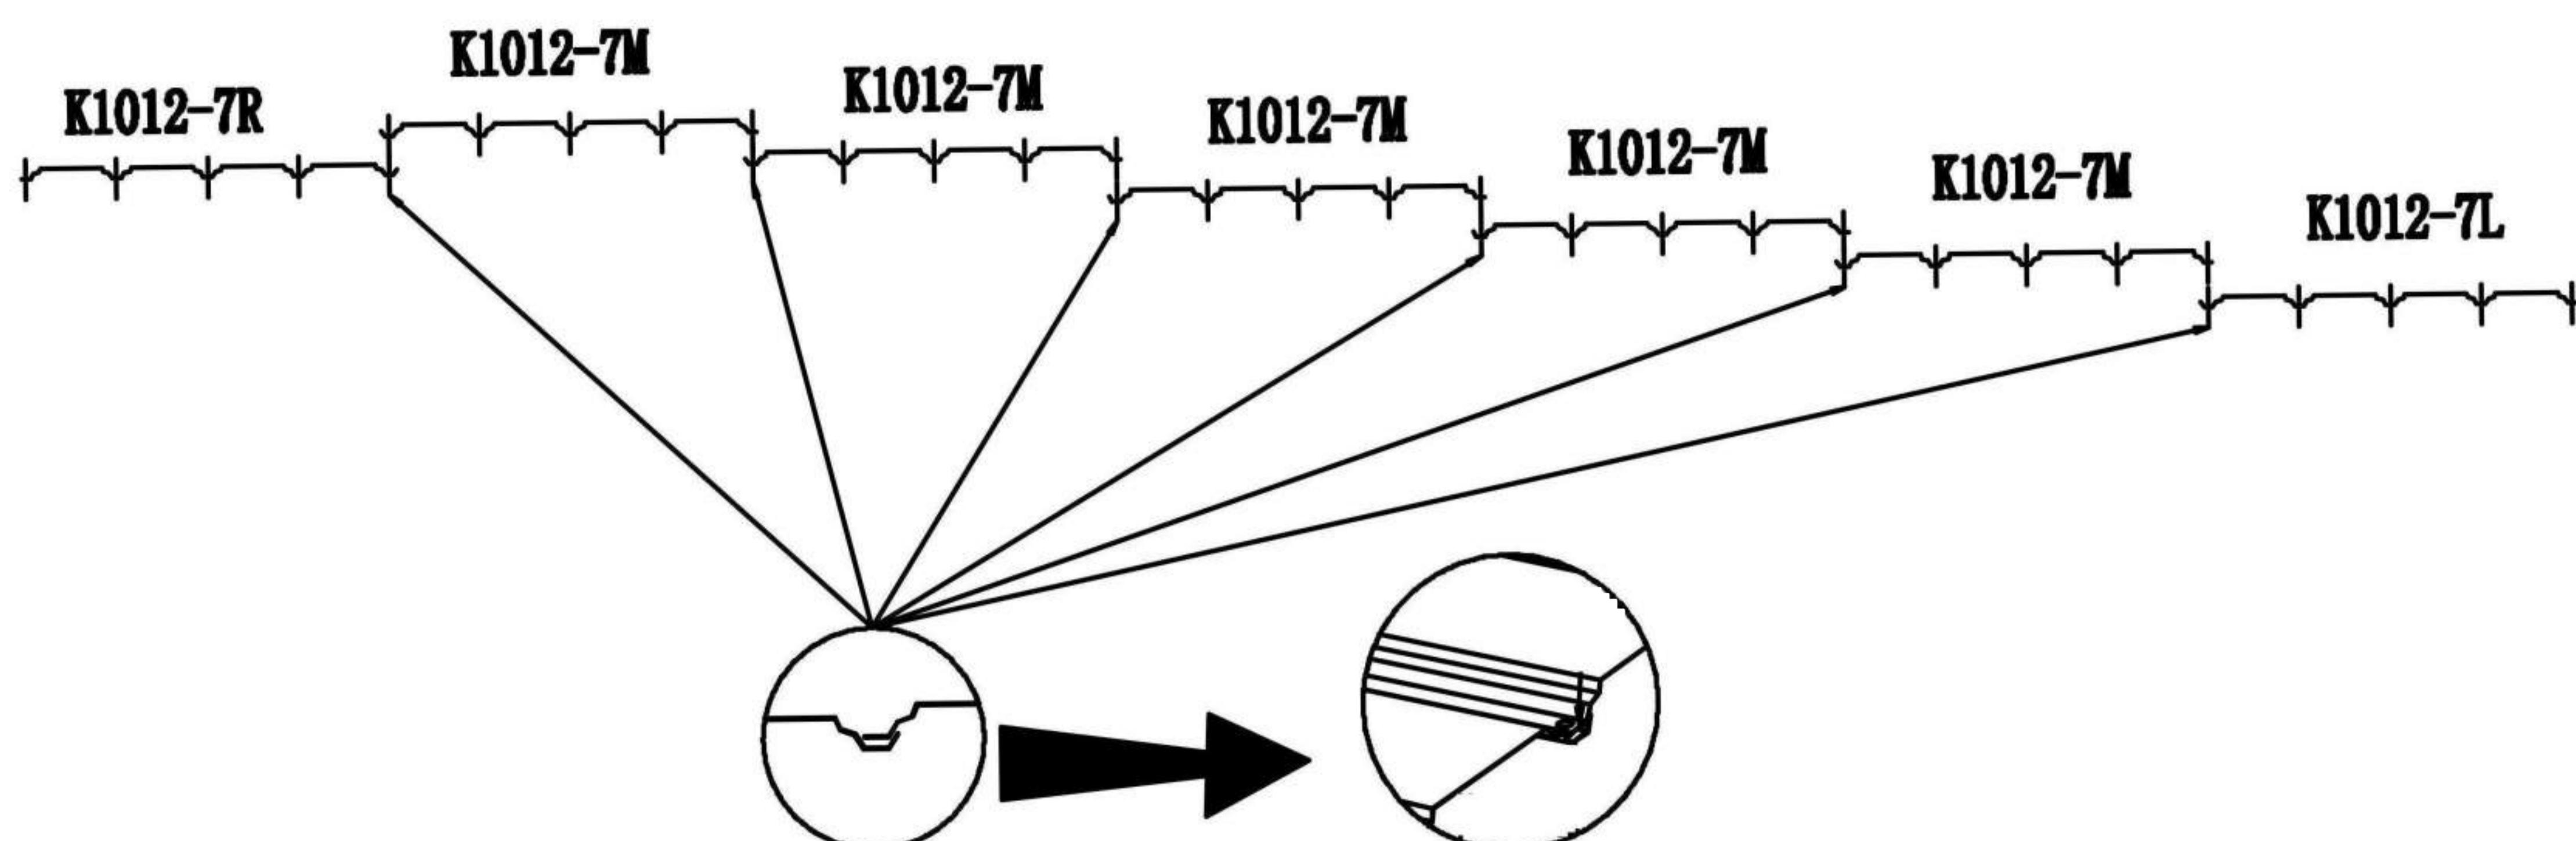


PART	NO.	QTY.
1	K1012-7L	2
1	K1012-7M	10
1	K1012-7R	2
	F1	120
	V2	120

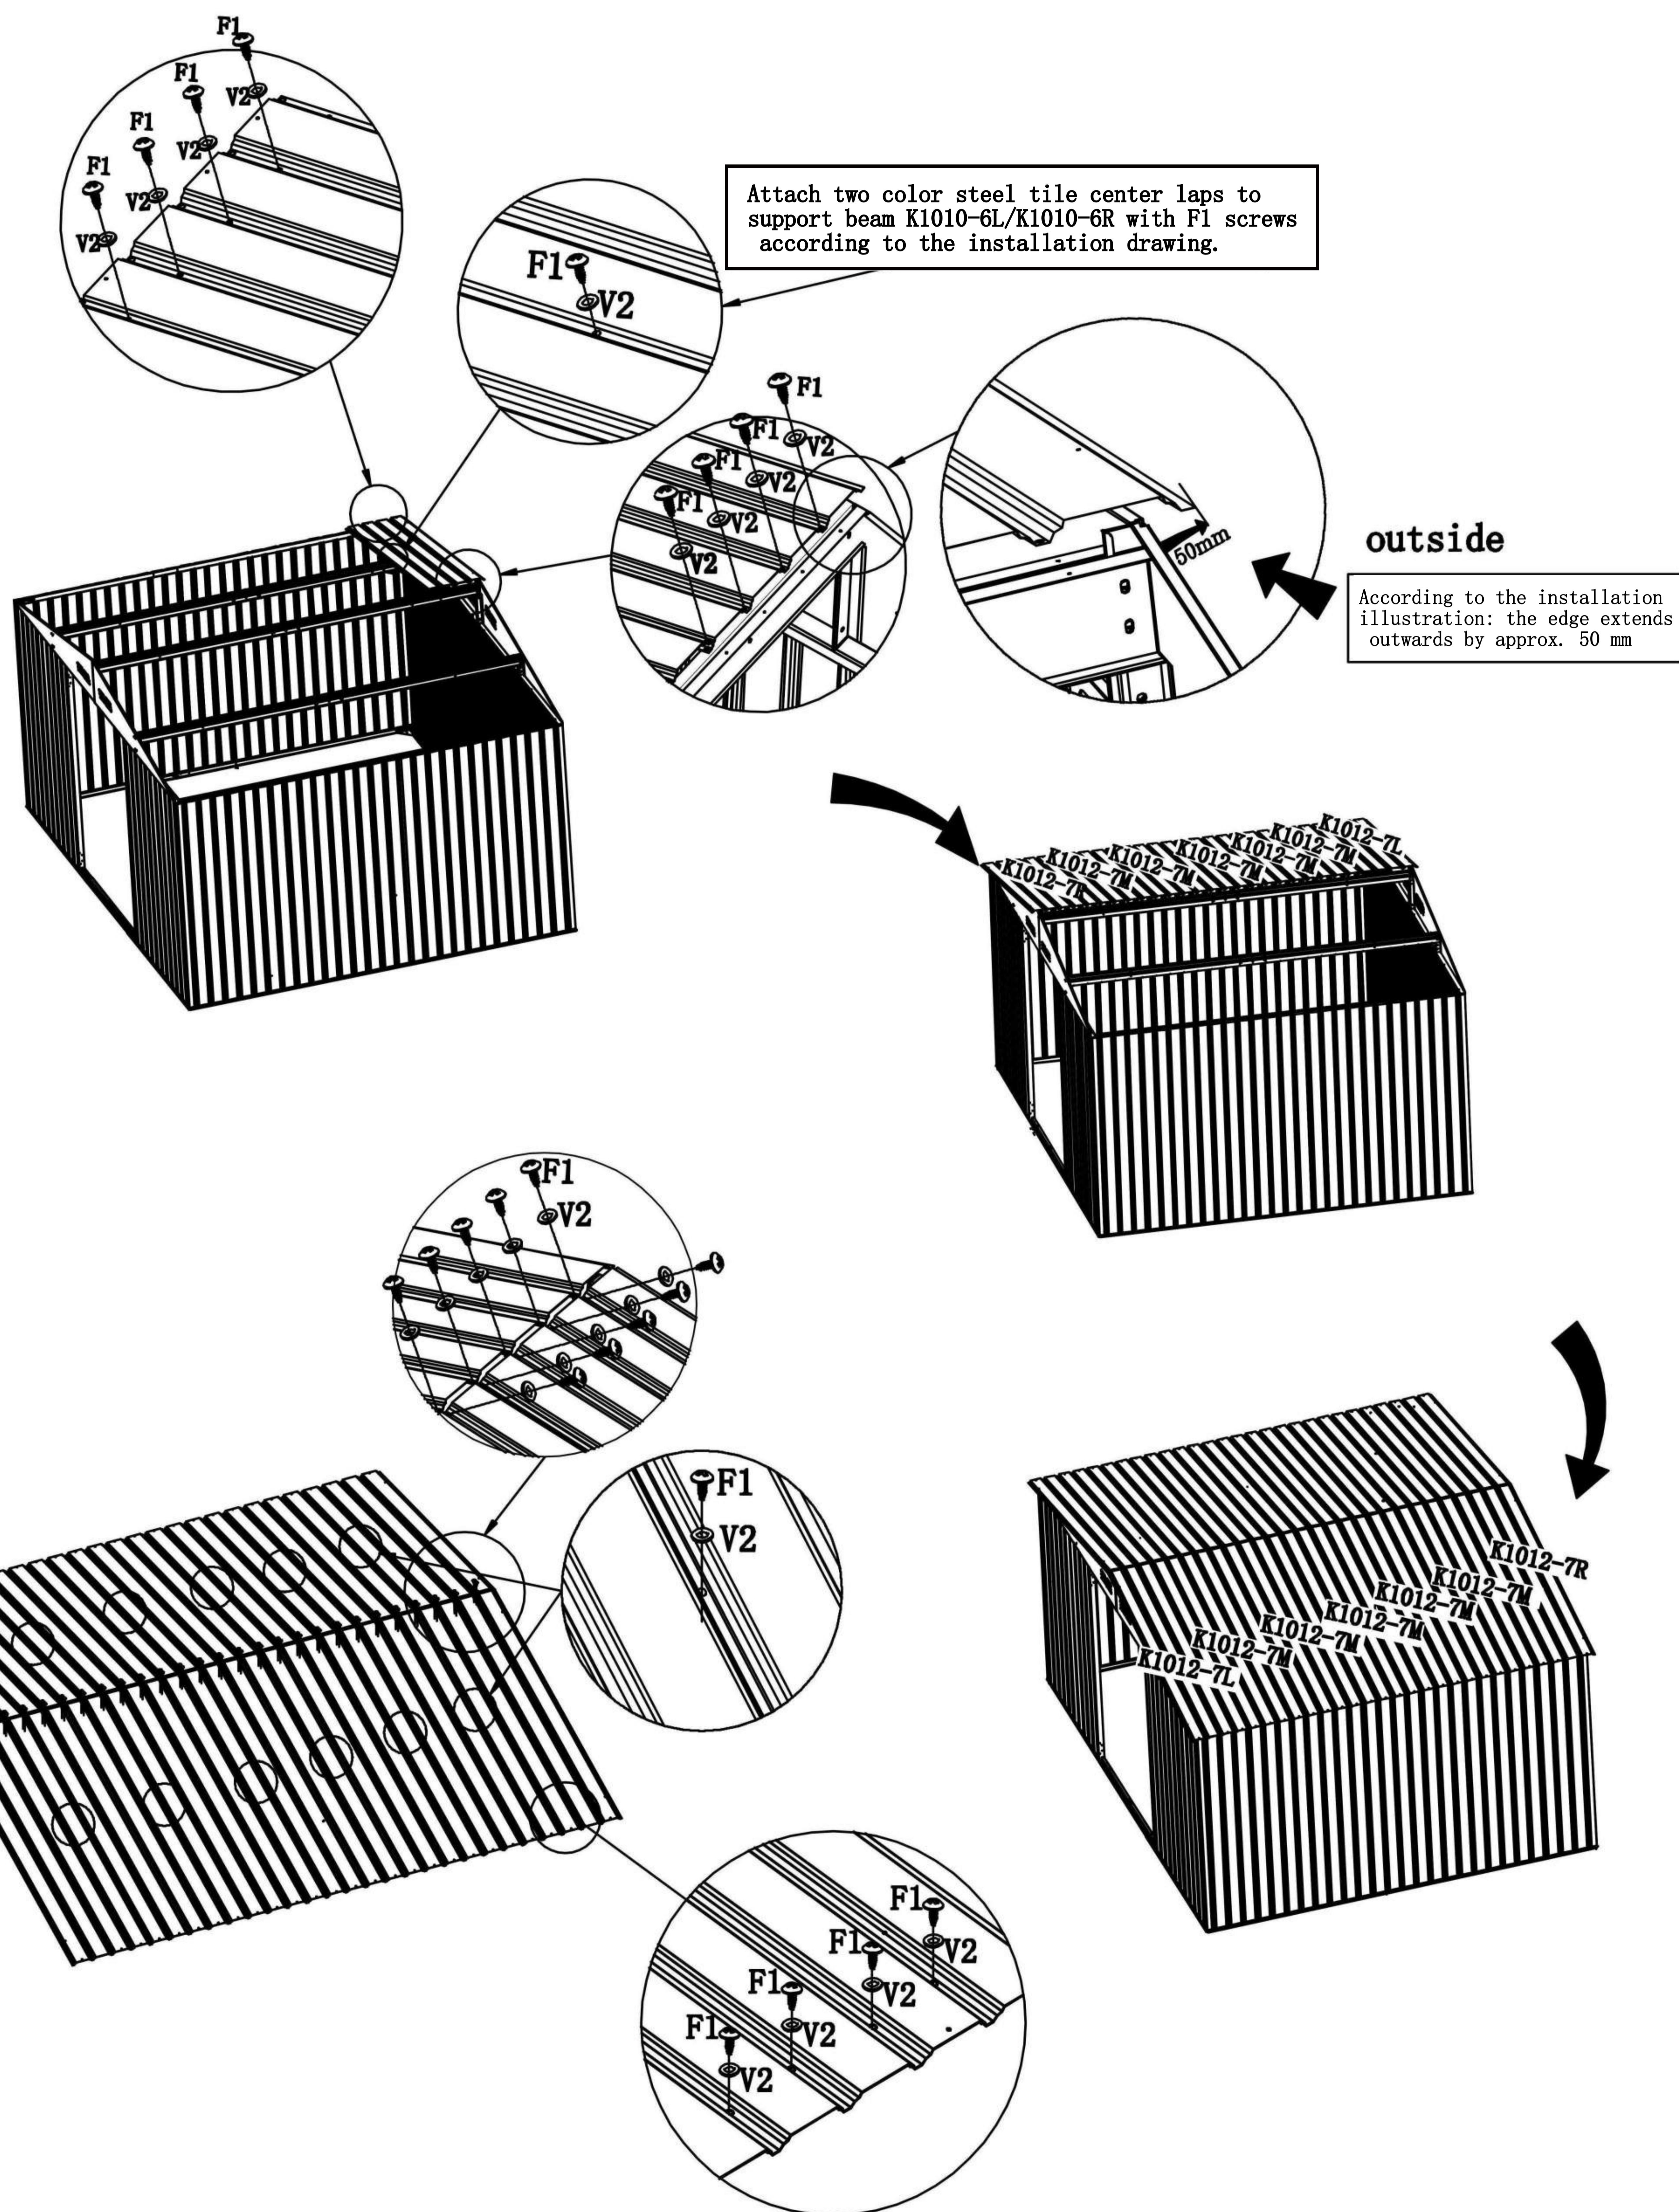


# STEP14

PART	NO.	QTY.
	K810-10	1
	K1012-10R	1
	F1	4
	V2	4


As shown in the picture: the 2 components of the roof rain stopper are first connected with F1 self-tapping screws before subsequent installation.

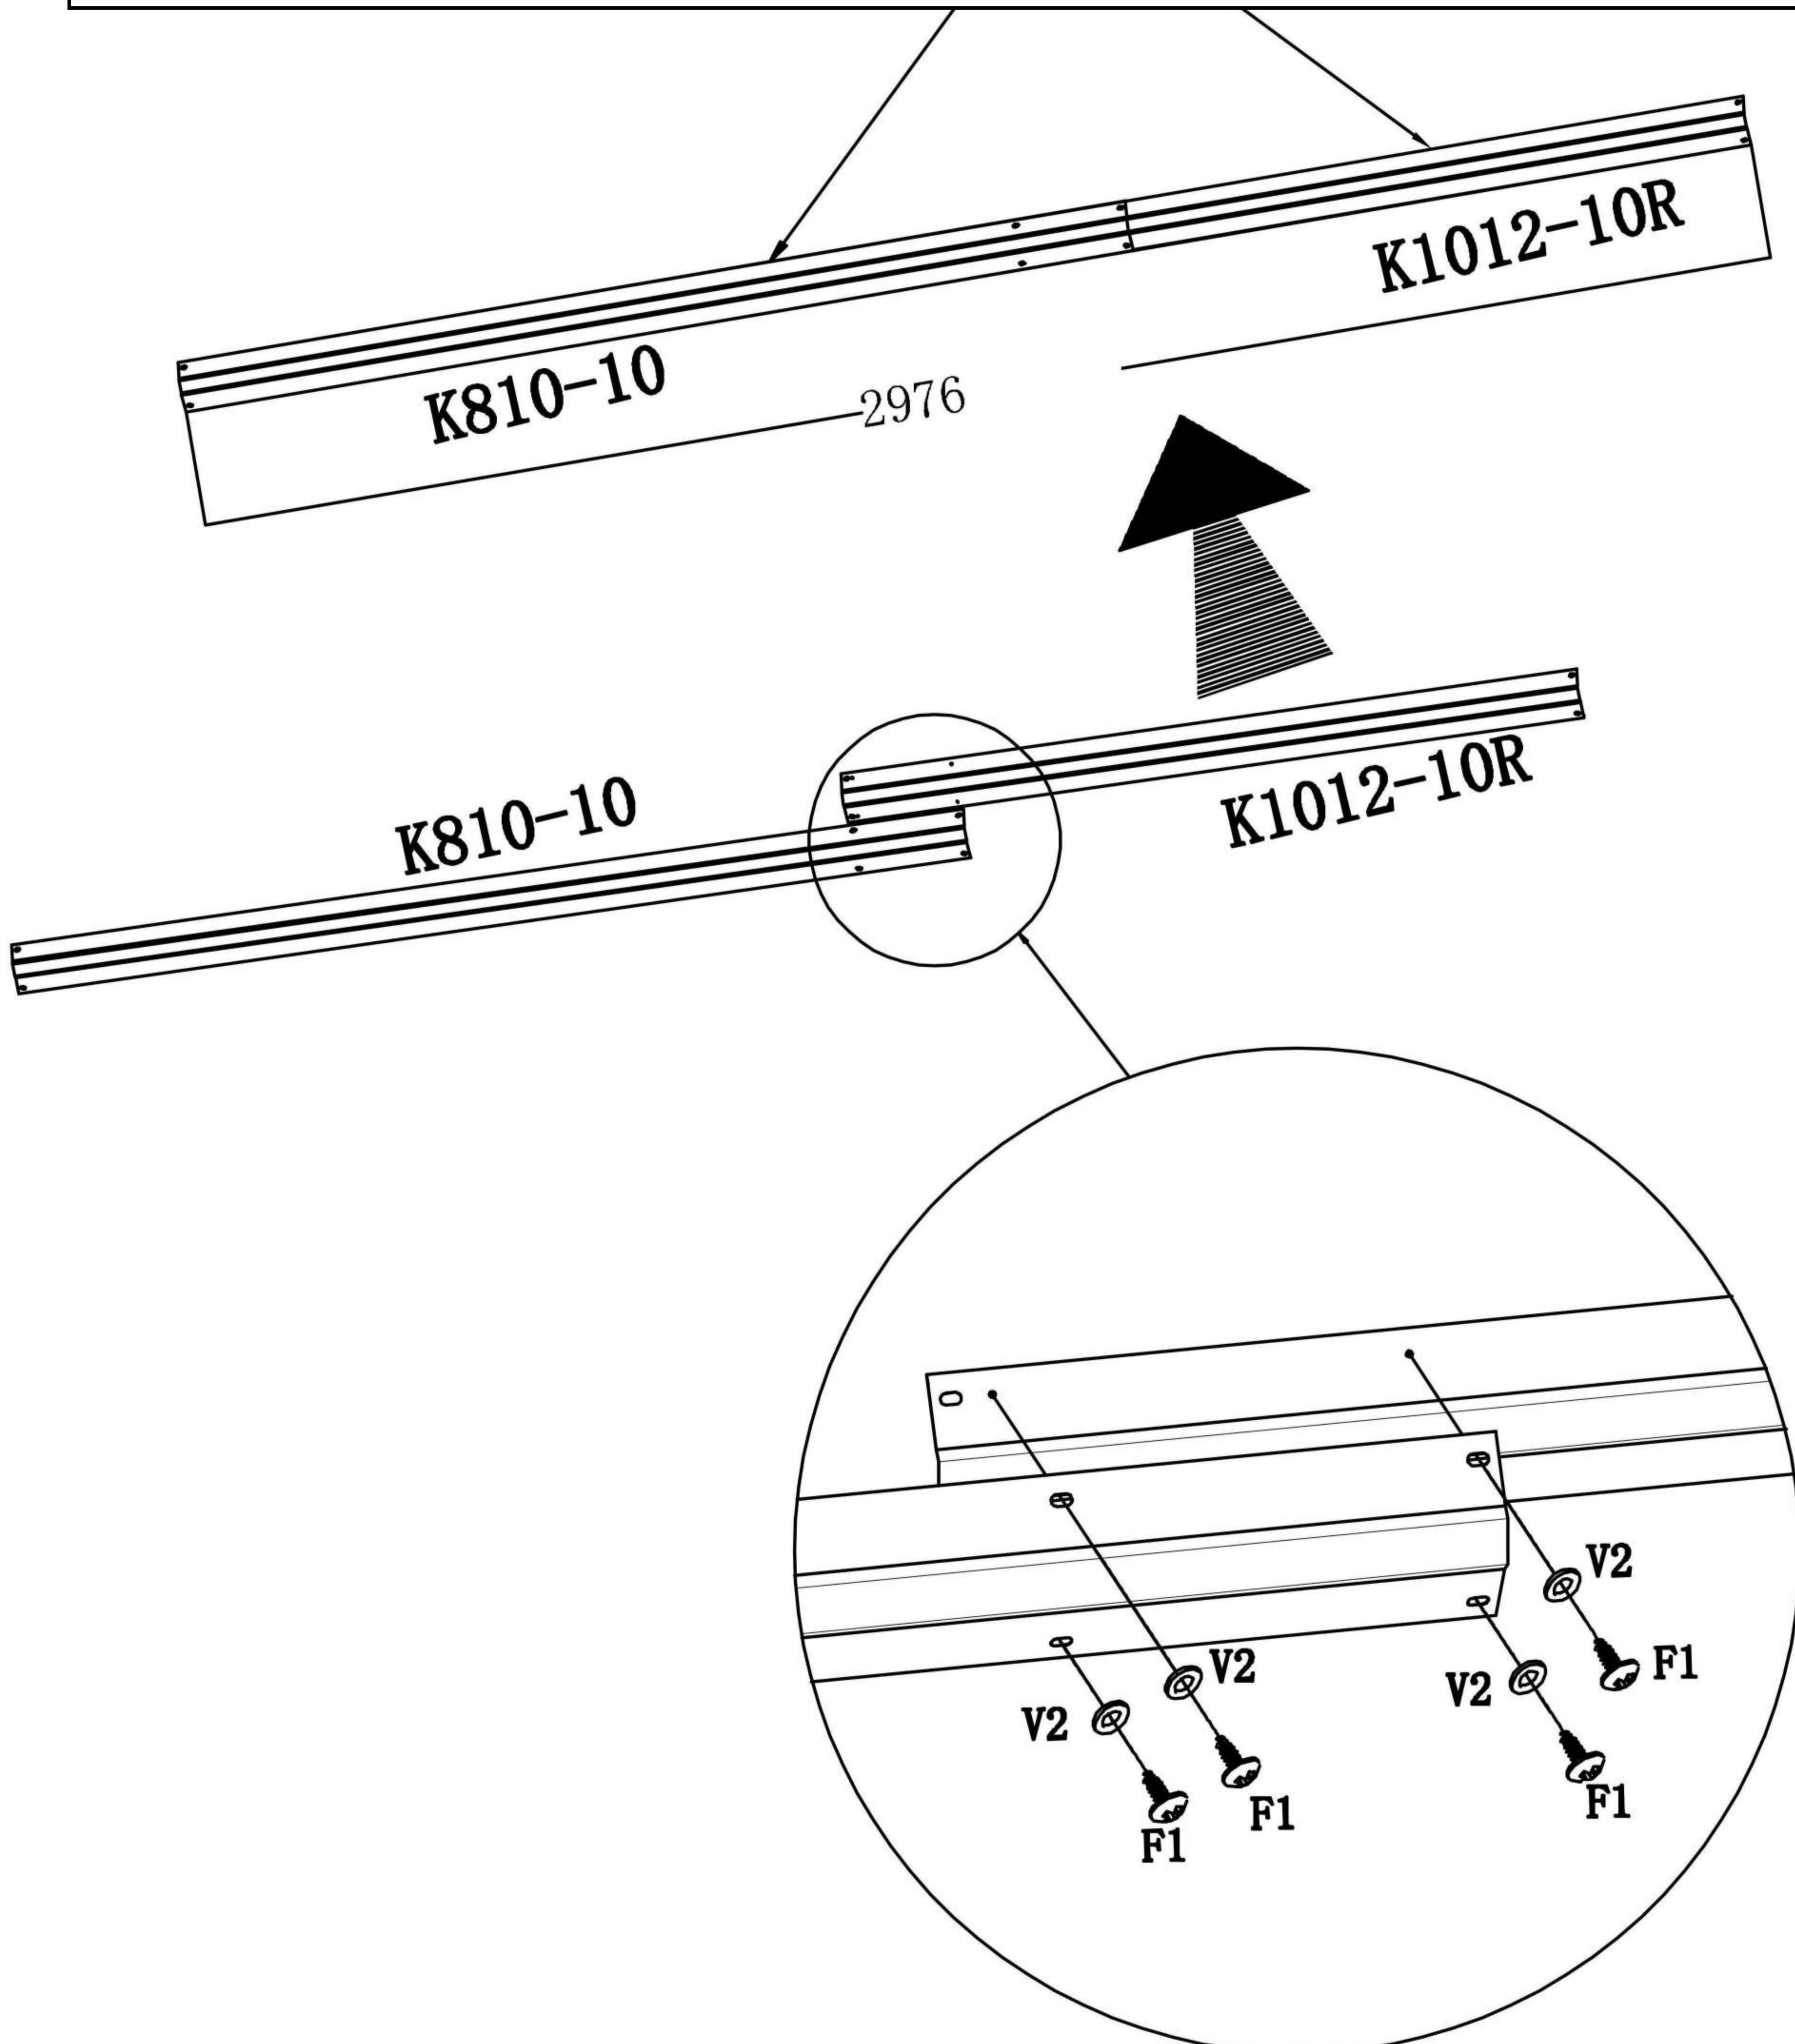


# STEP15

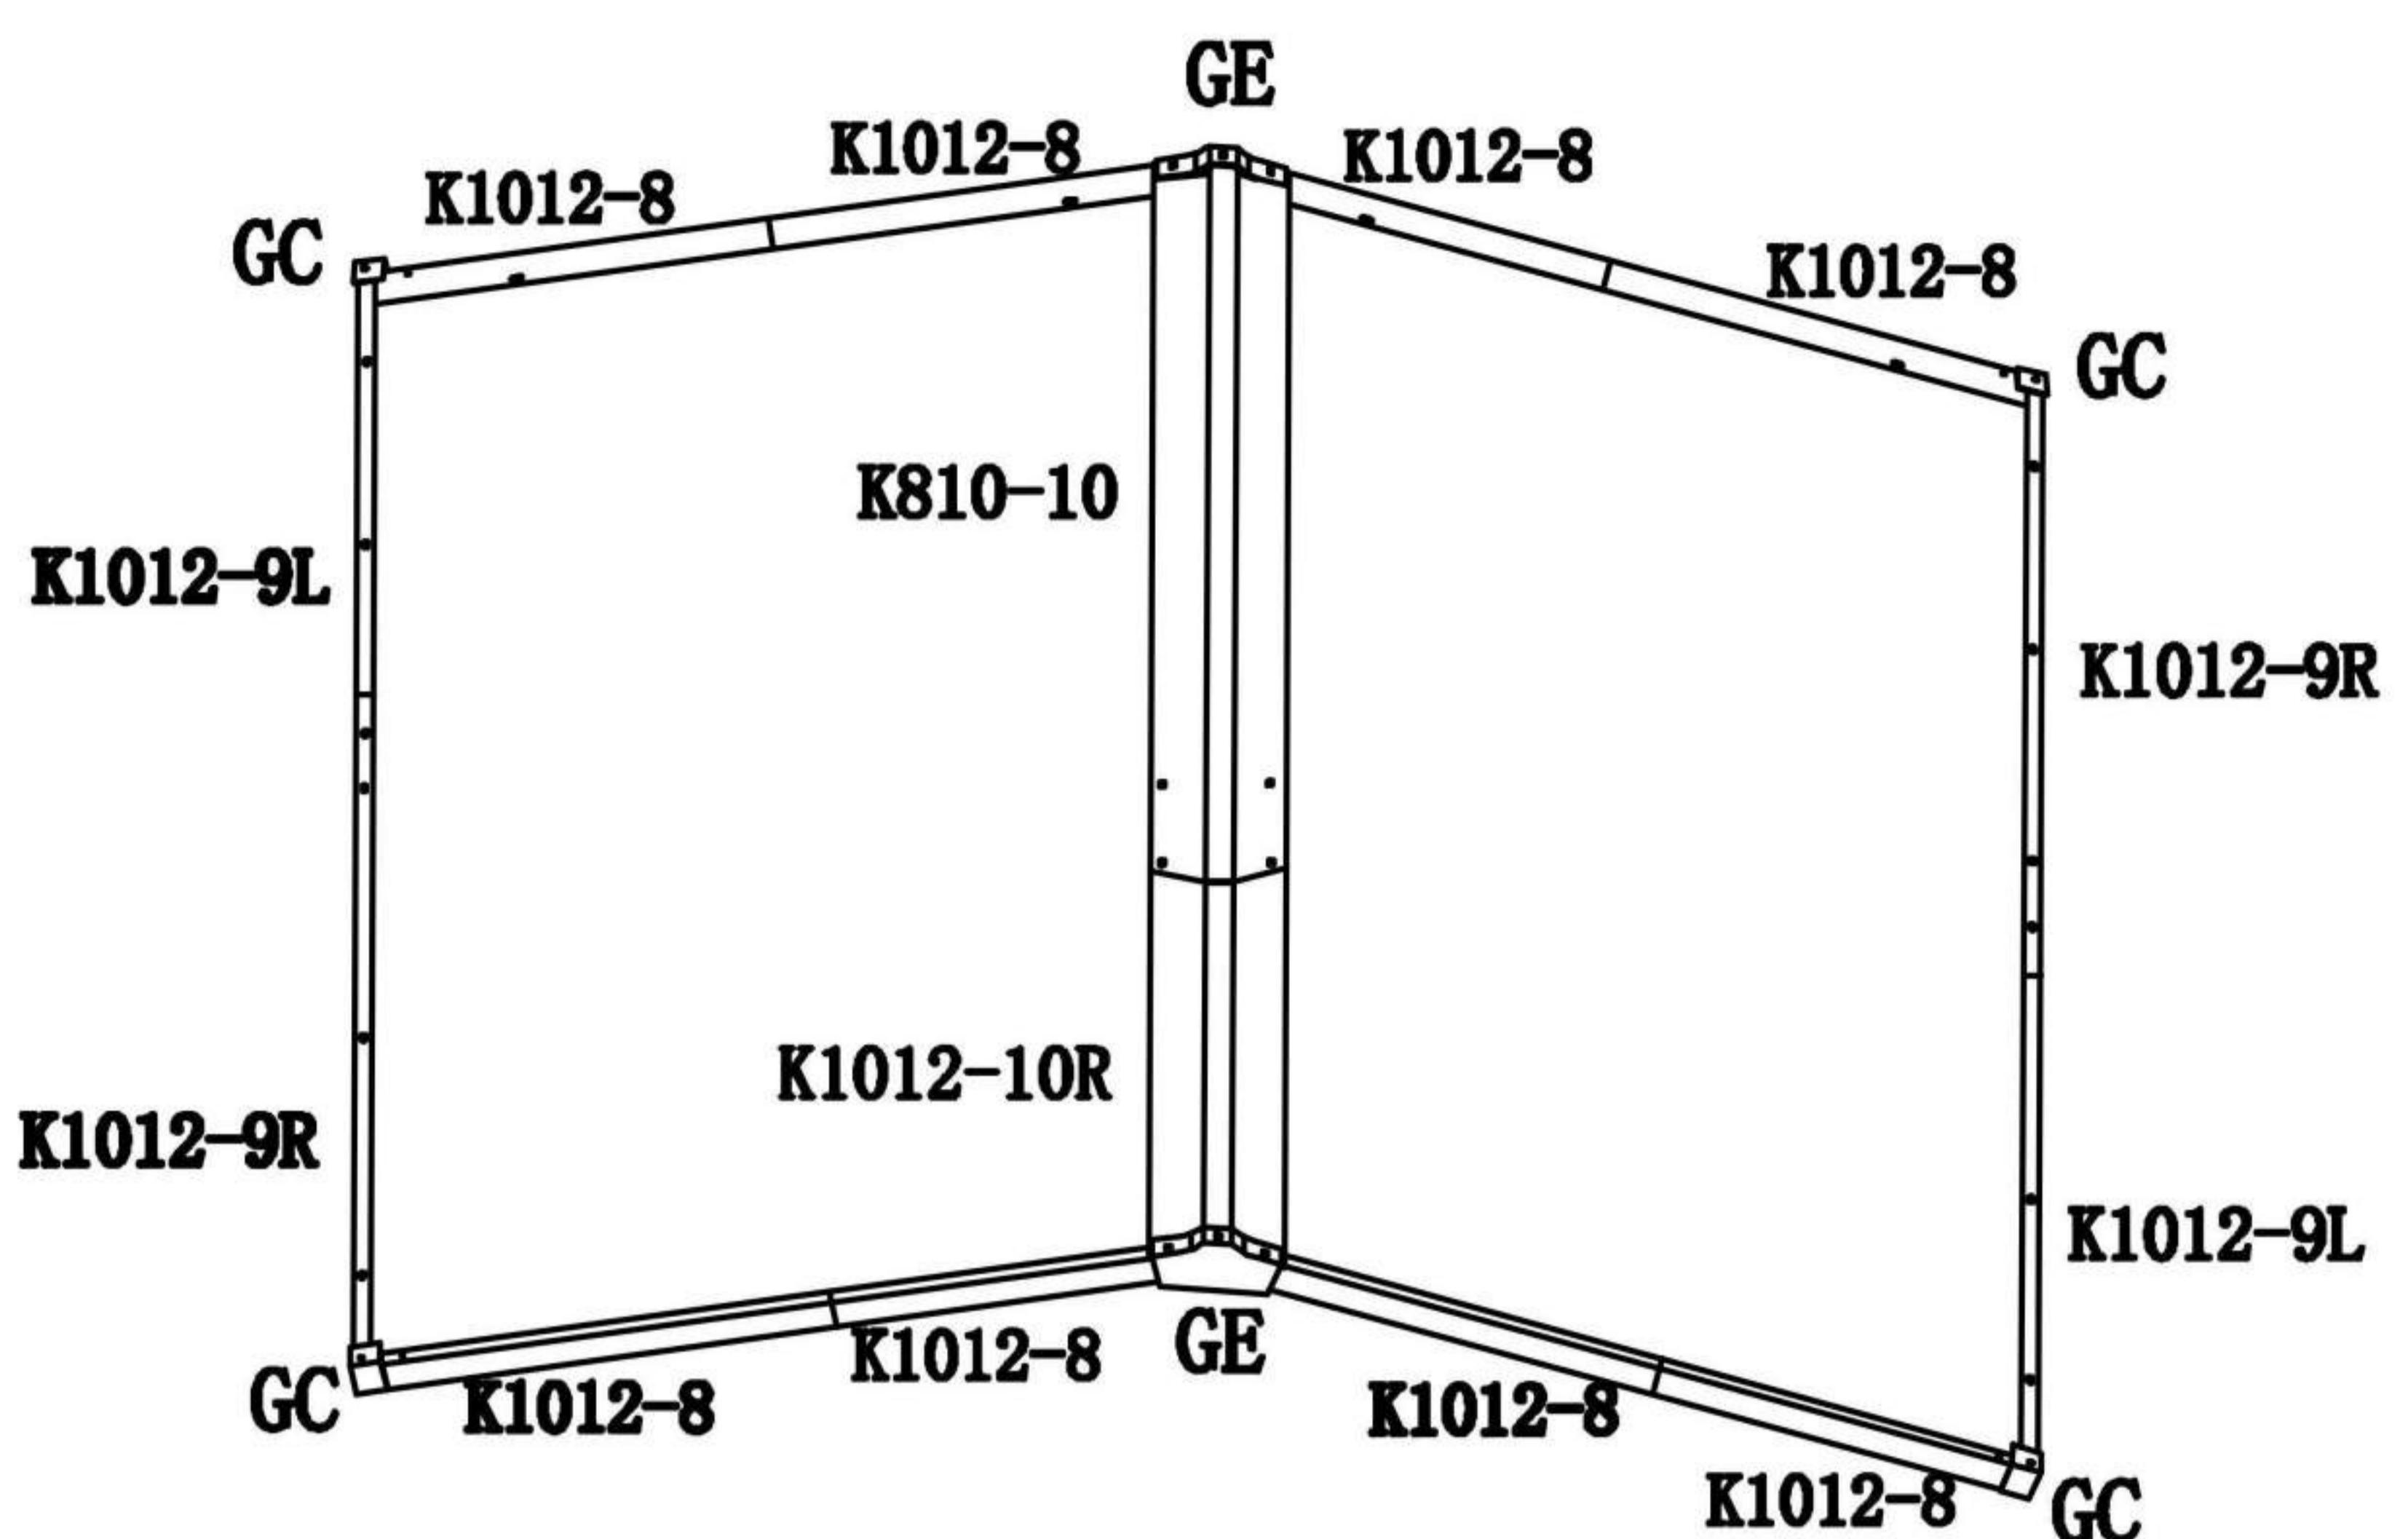




<b>PART</b>	<b>NO.</b>	<b>QTY.</b>
	<b>K1012-8</b>	<b>8</b>
	<b>K1012-9L</b>	<b>2</b>
	<b>K1012-9R</b>	<b>2</b>
	<b>GC</b>	<b>4</b>
	<b>GE</b>	<b>2</b>
	<b>F1</b>	<b>28</b>
	<b>V2</b>	<b>32</b>
	<b>F4</b>	<b>4</b>

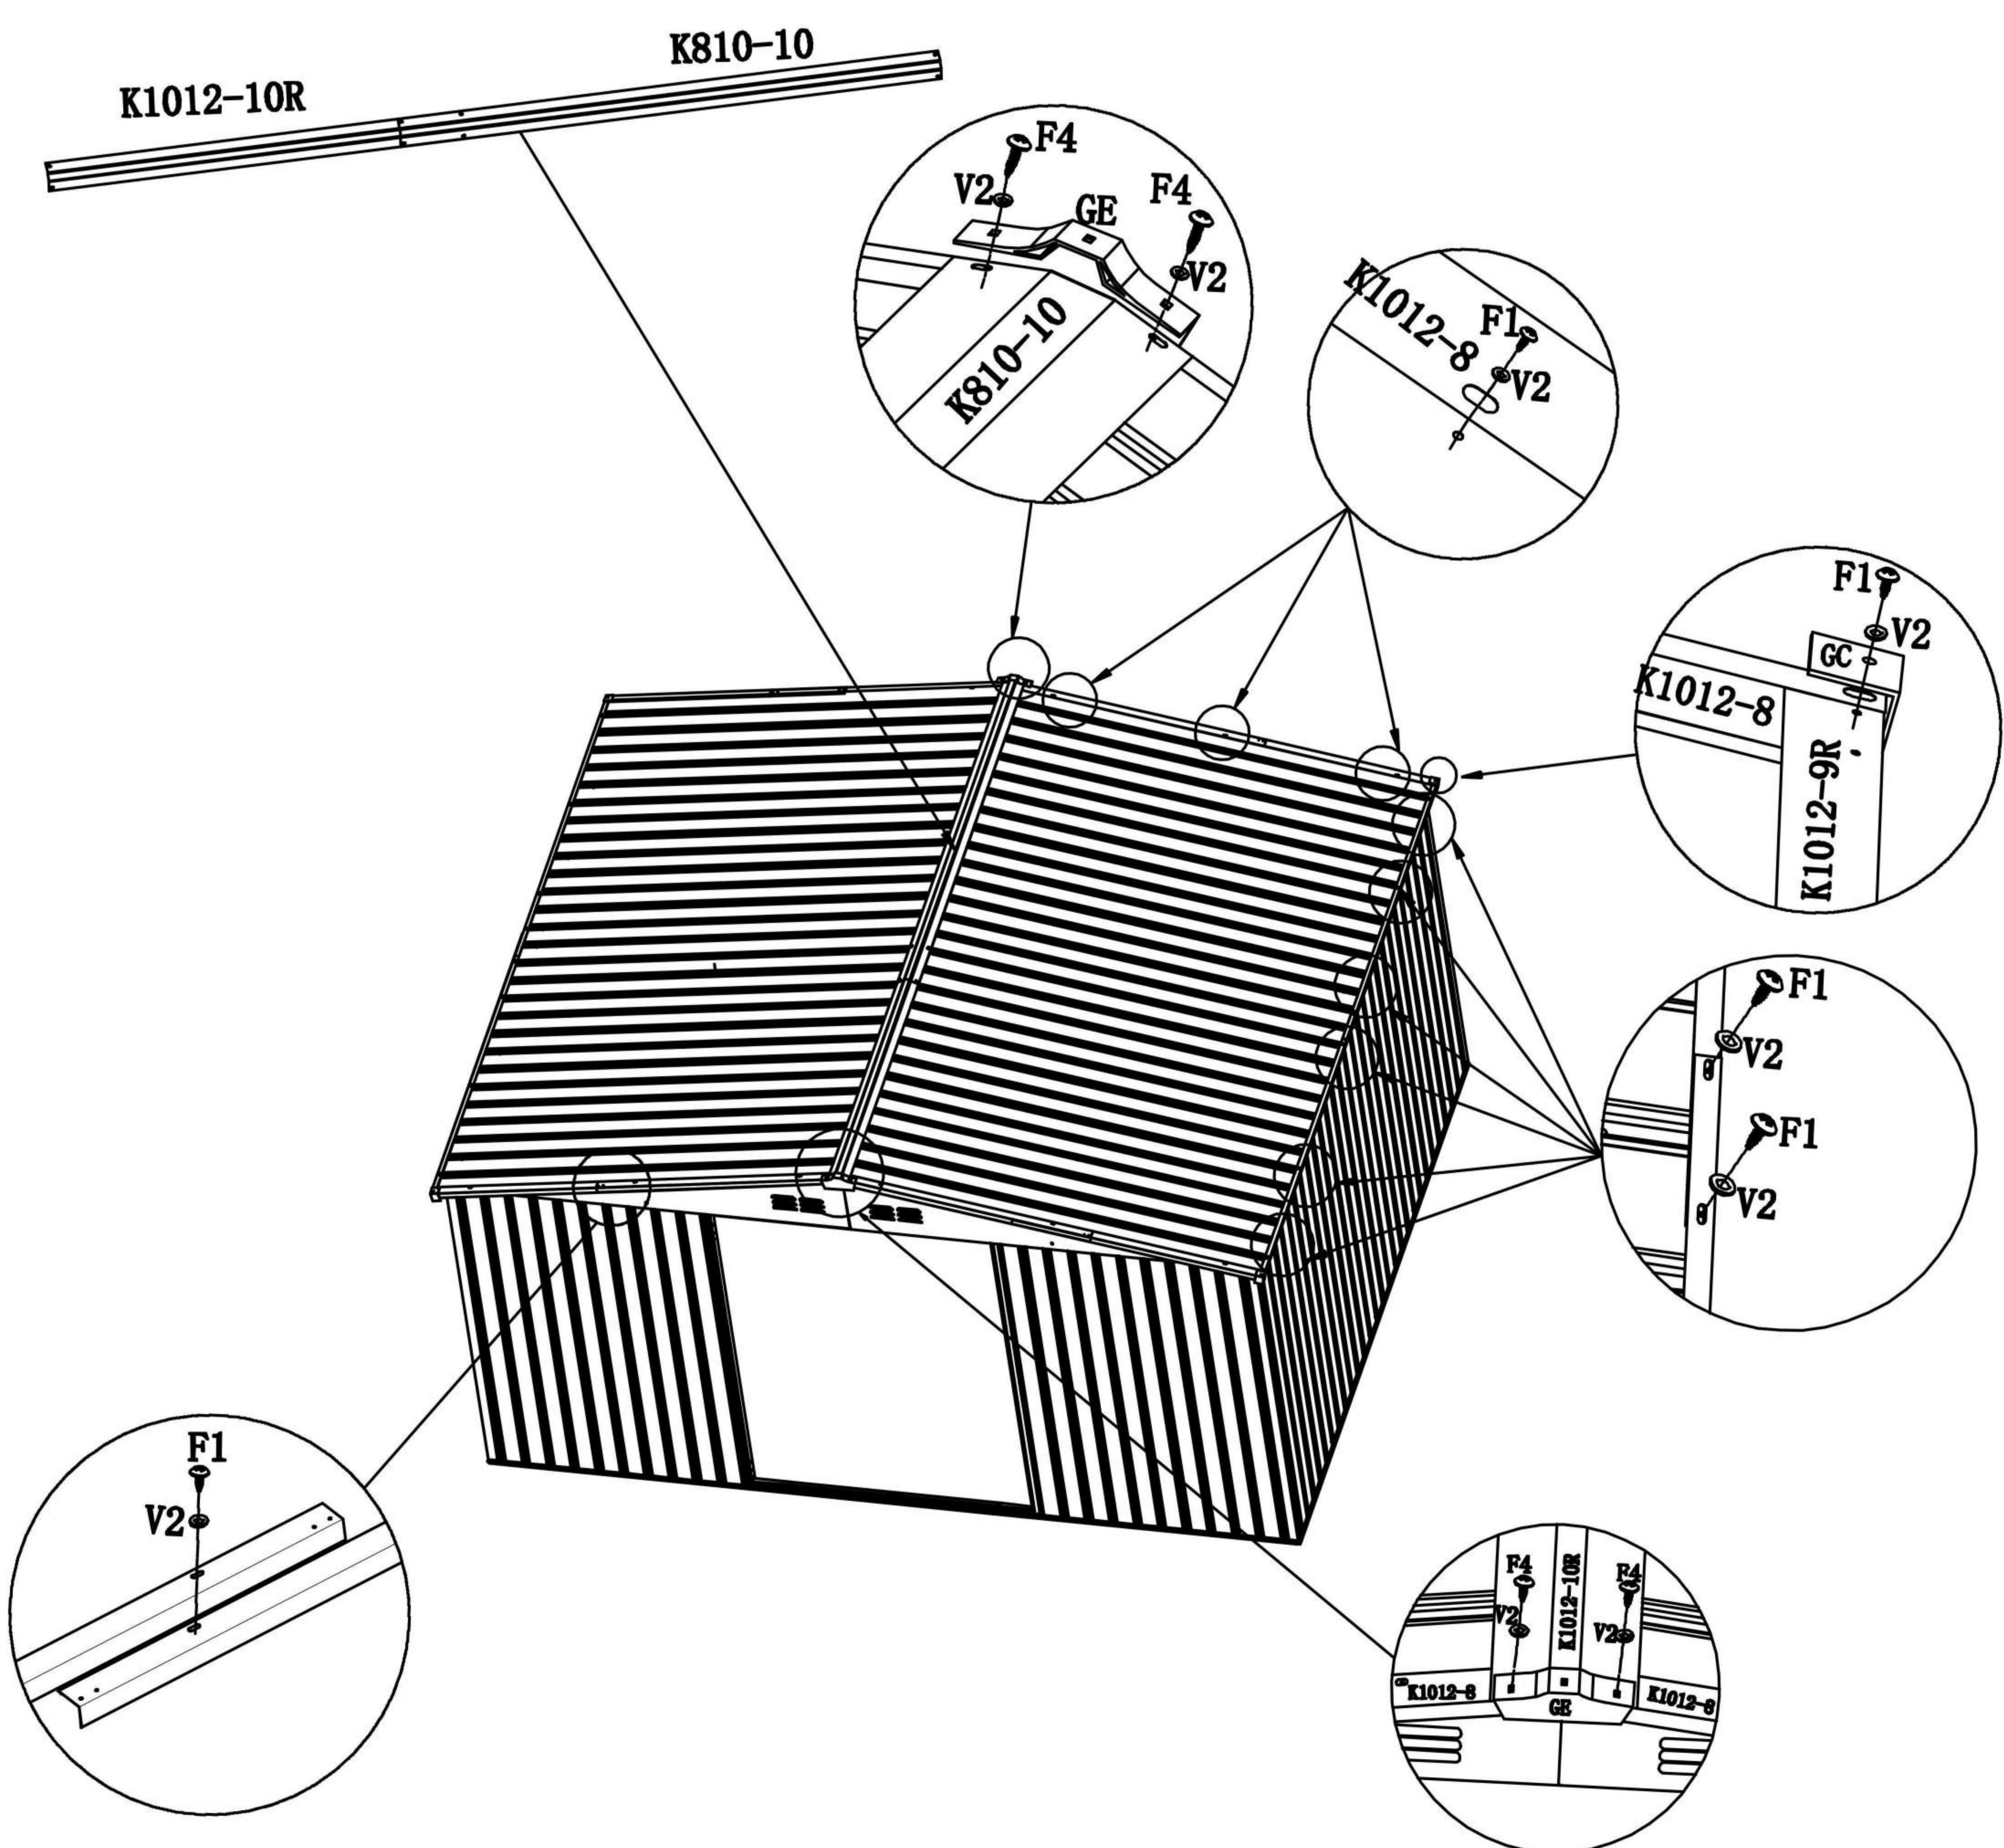

# STEP16

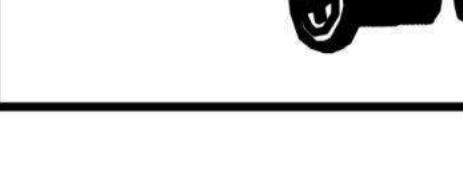PART	NO.	QTY.
	W5-KD	1
	W2-HLD	1
	F2	2

DLD

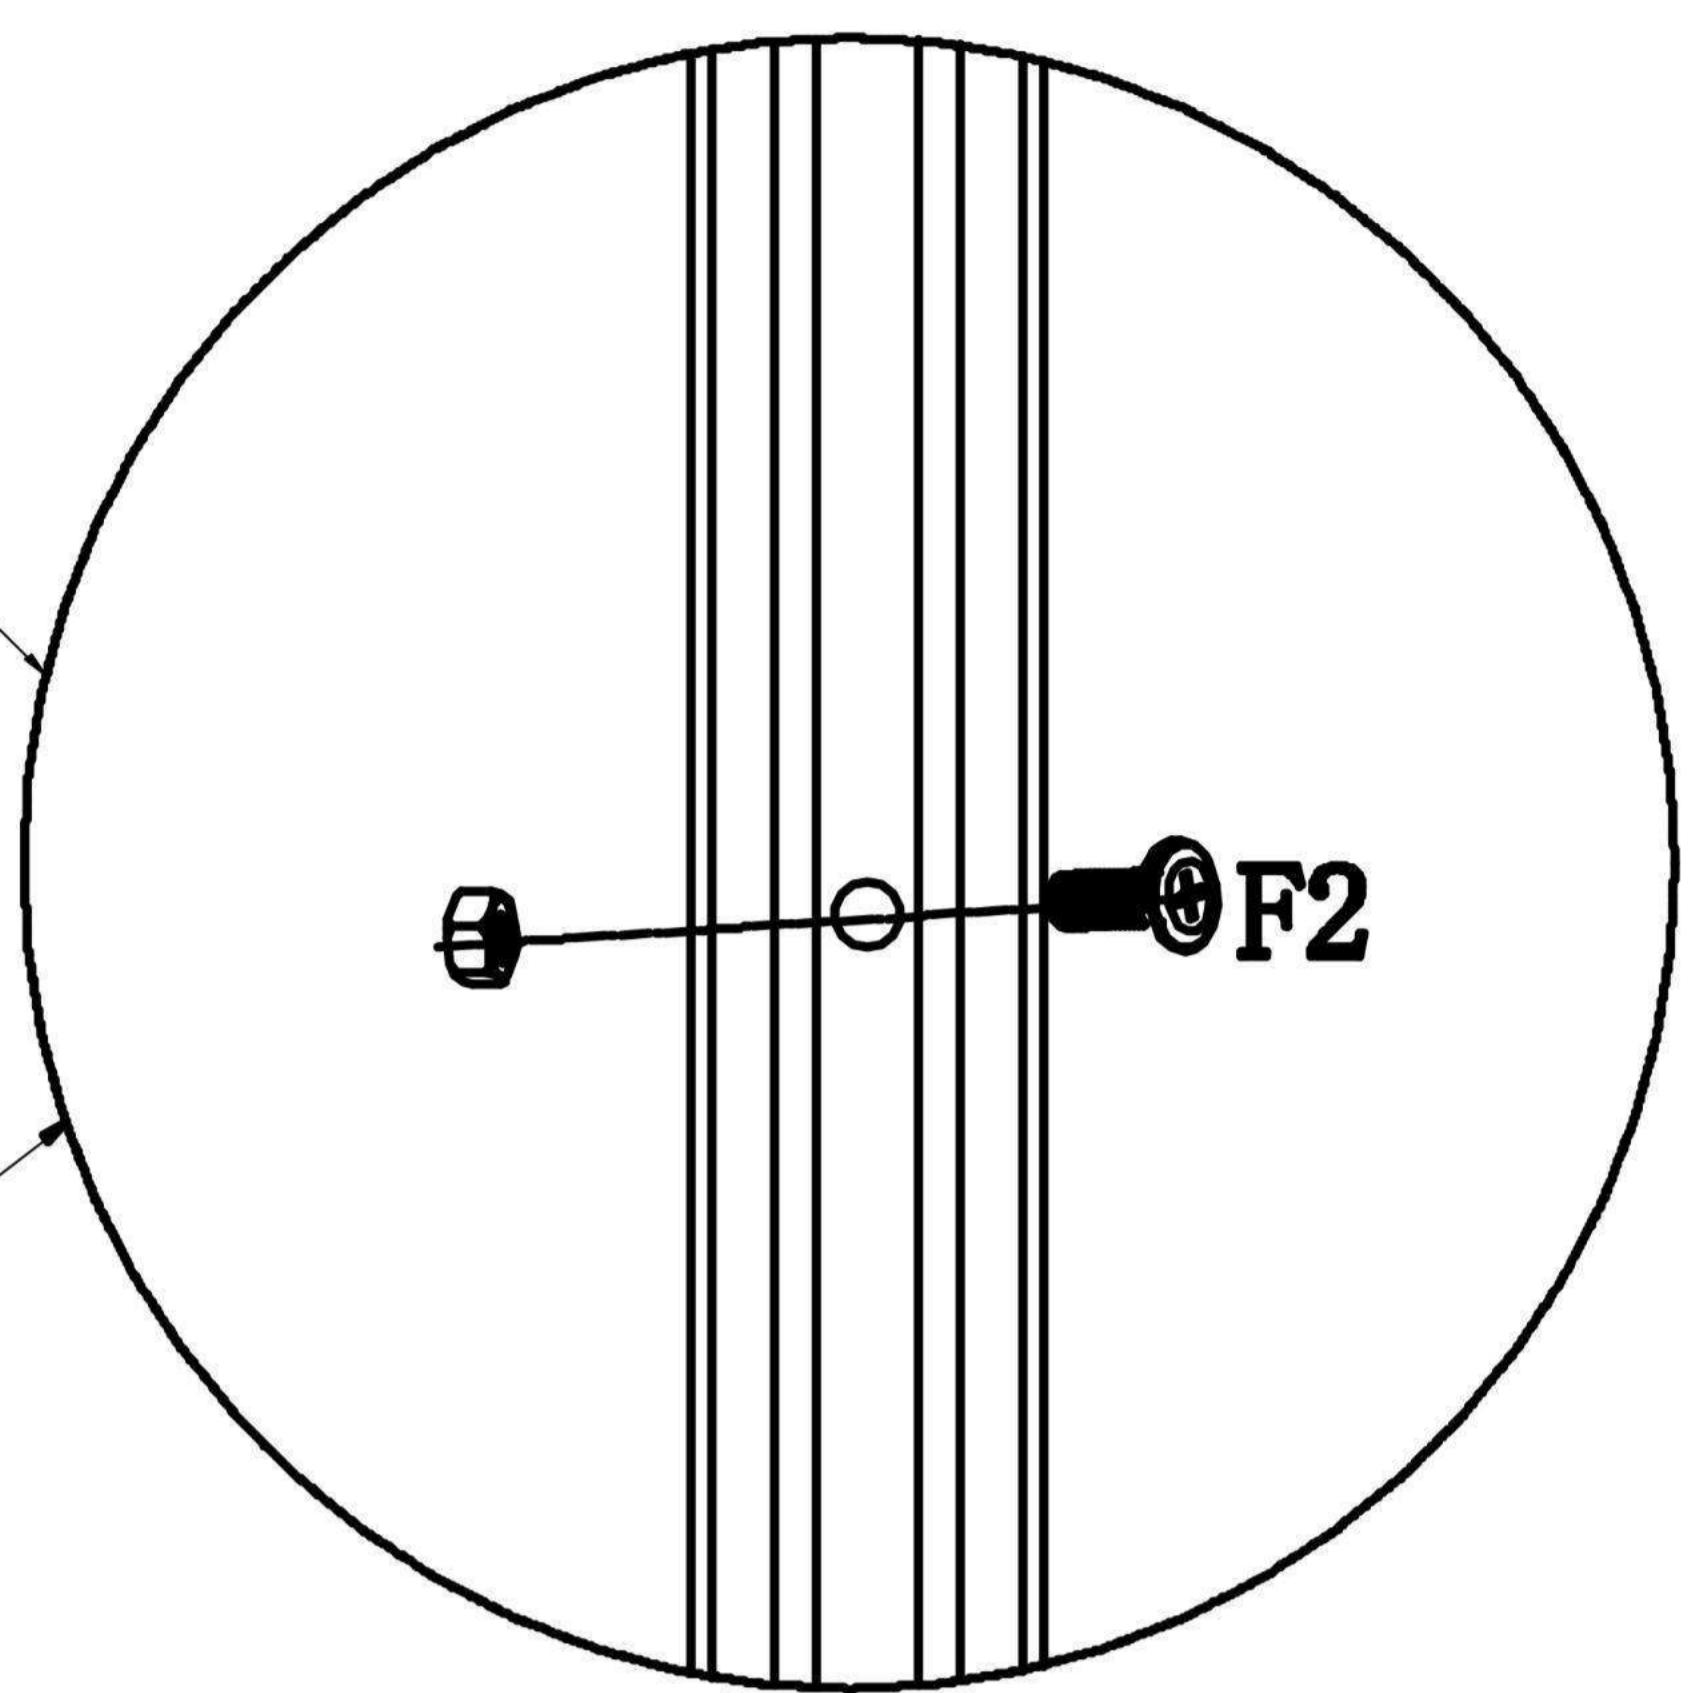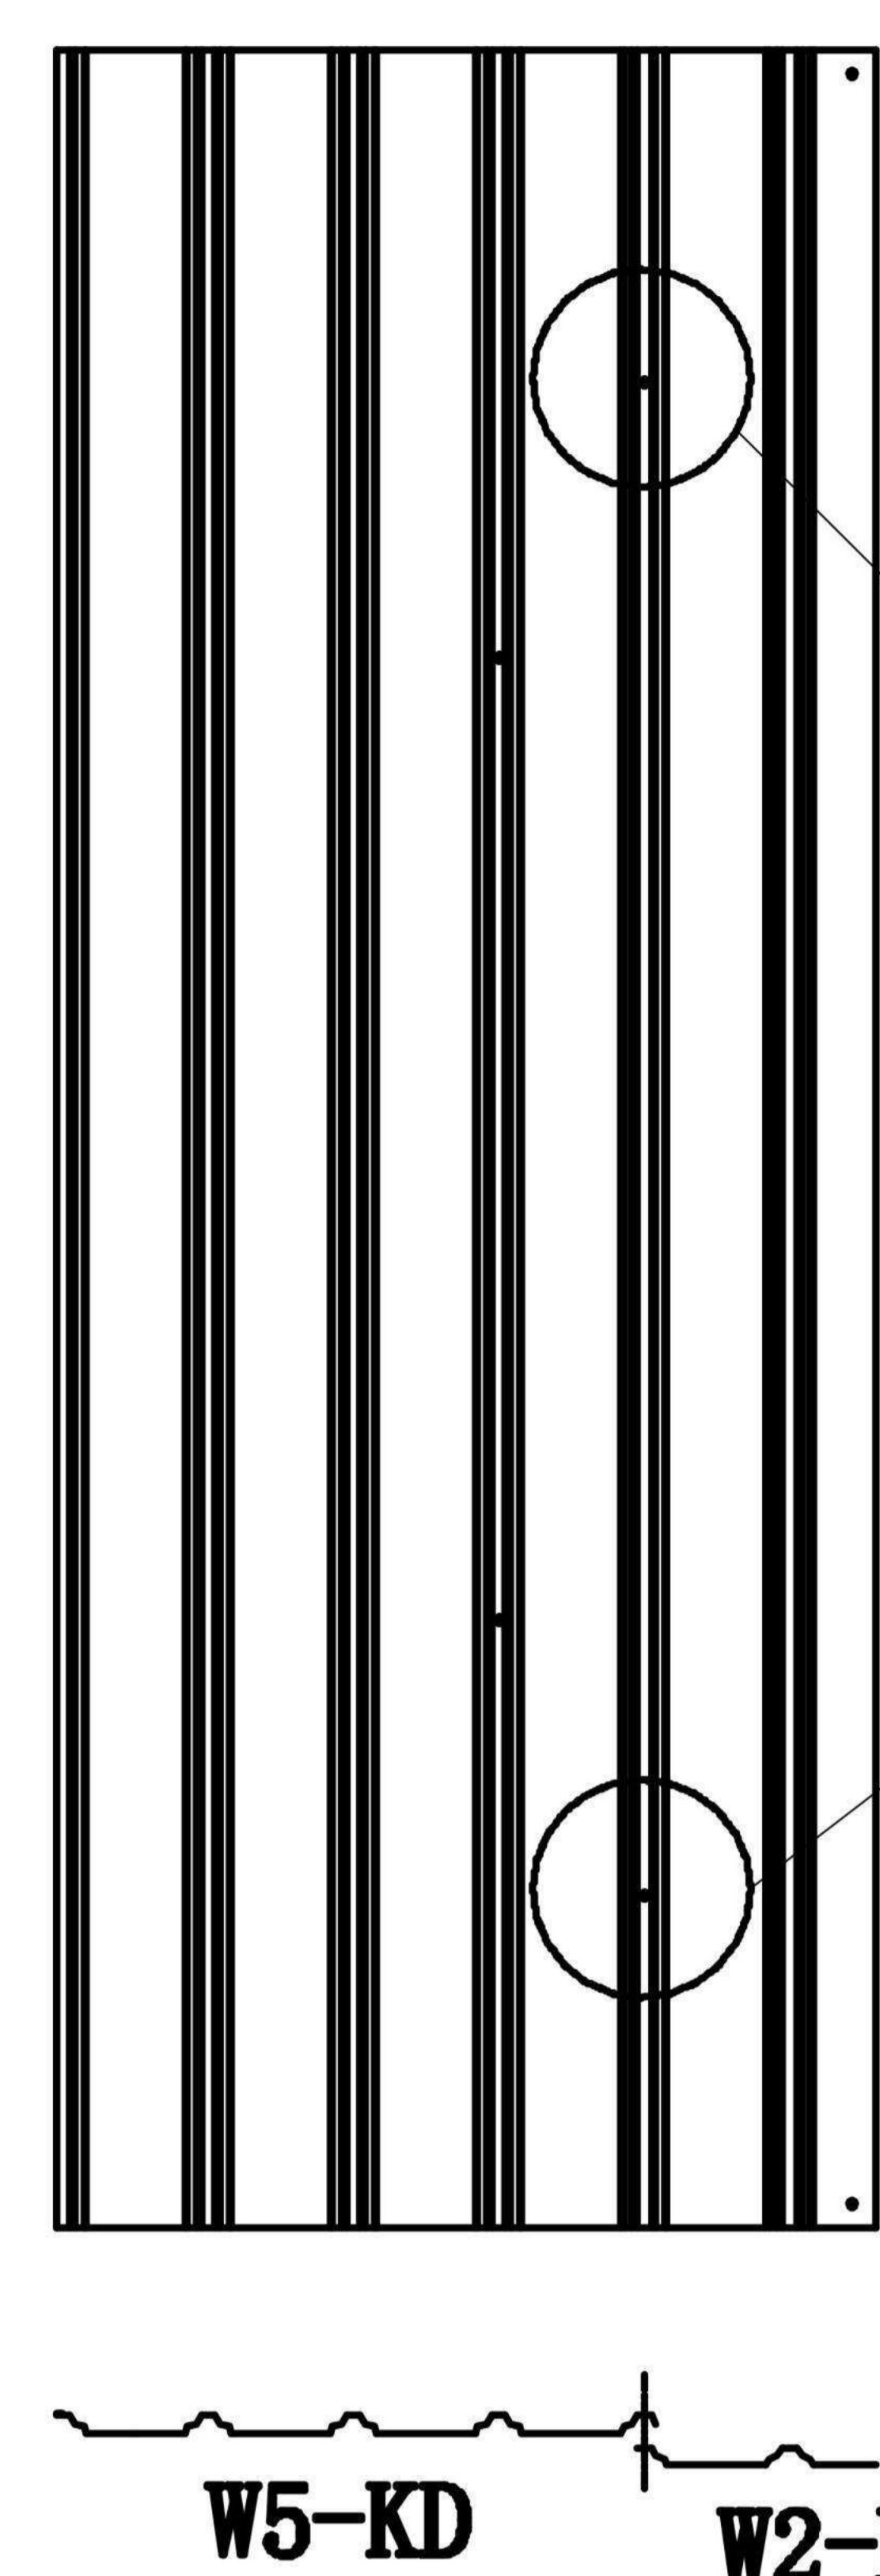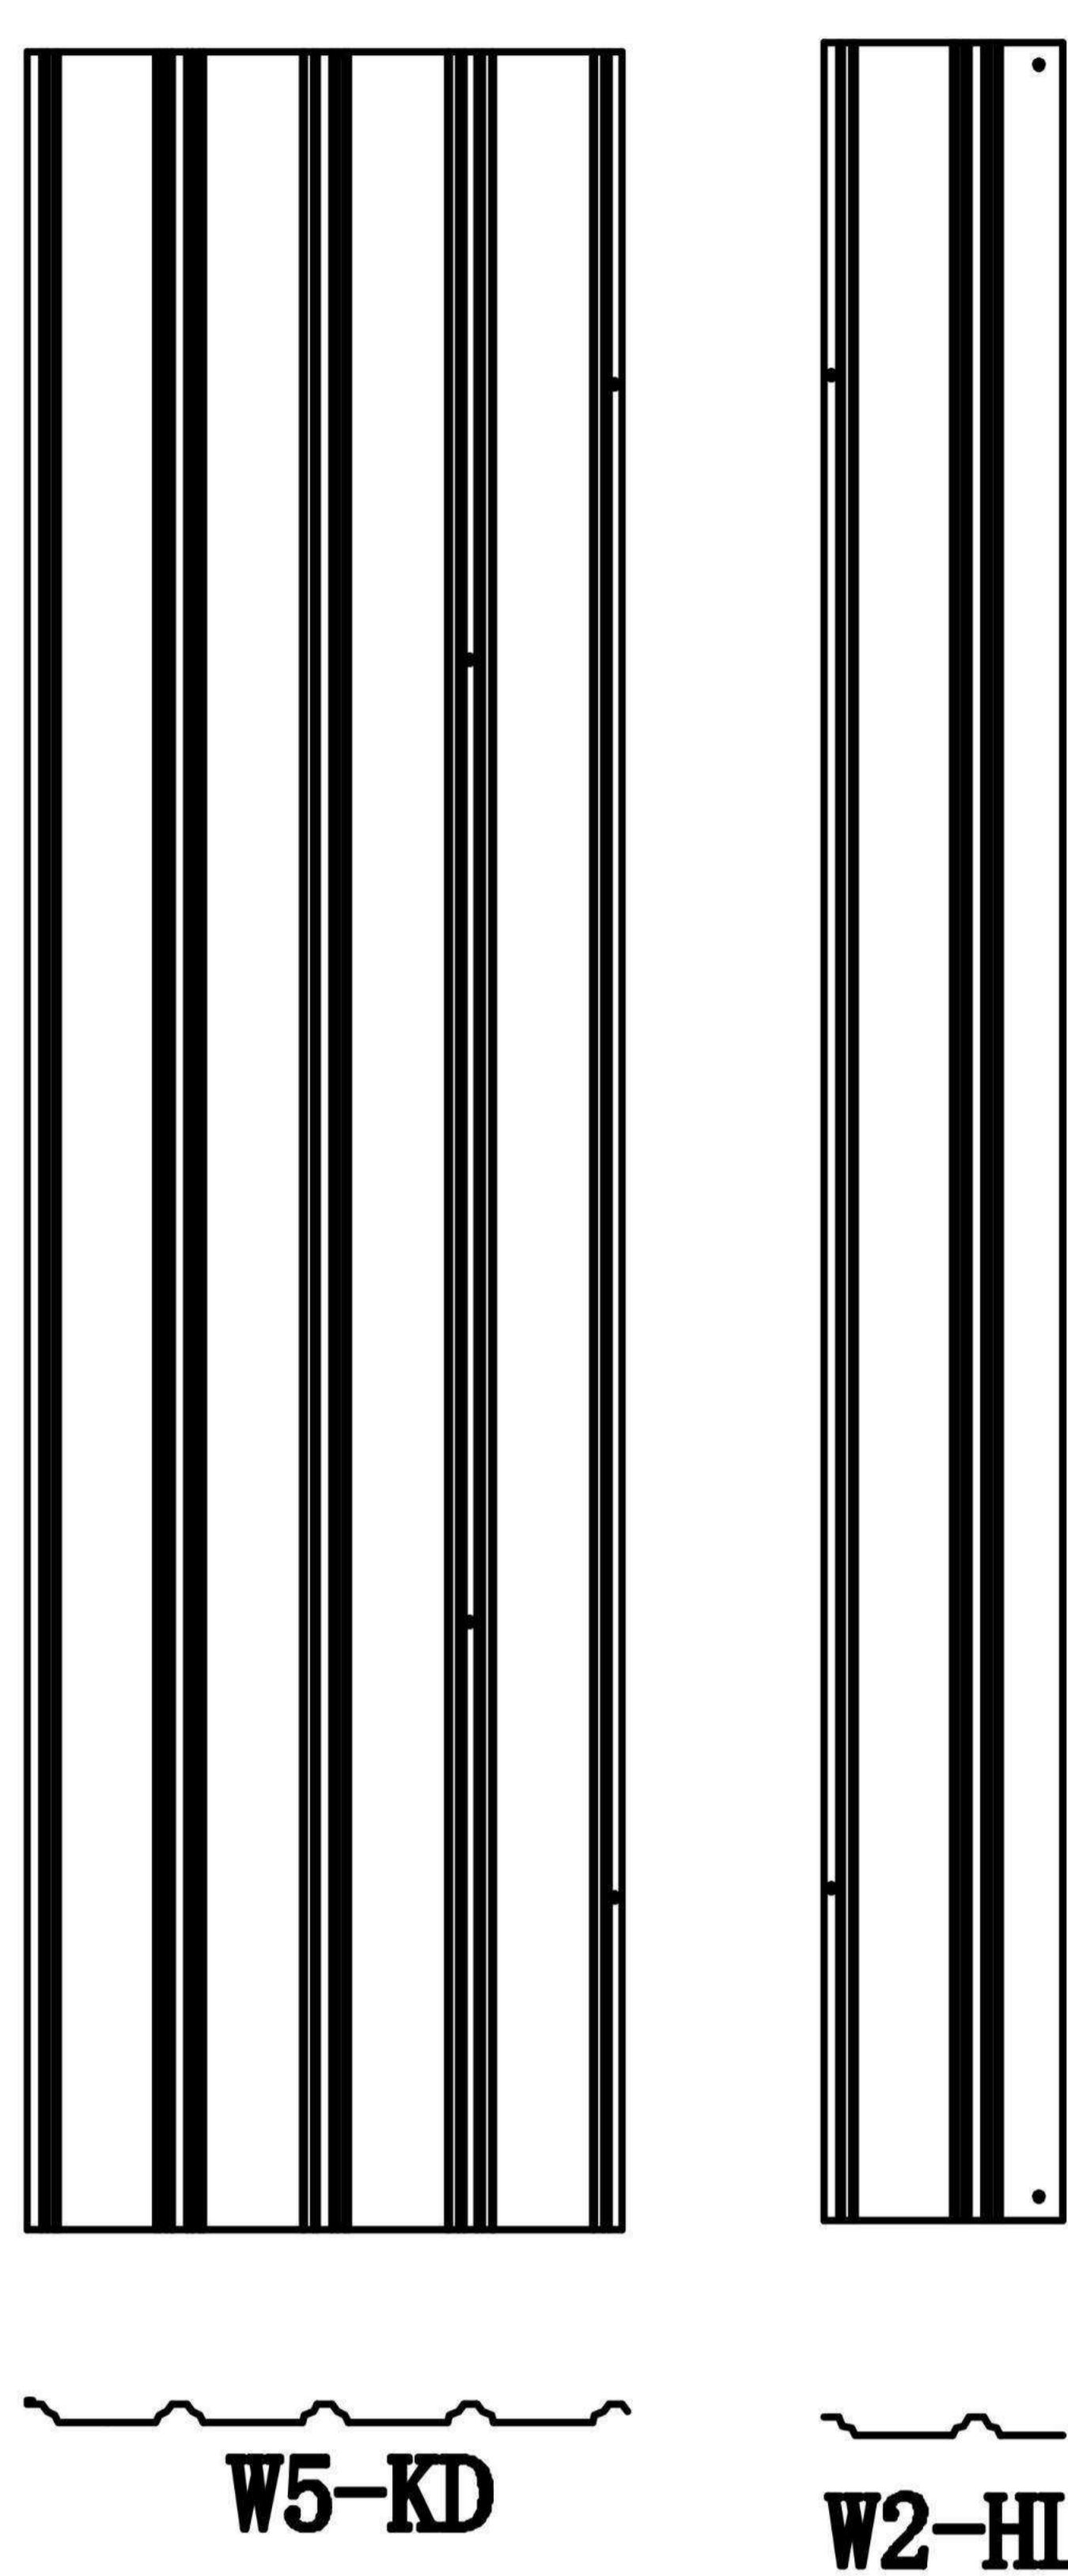


W5-KD

W2-HLD


W5-KD W2-HLD

# STEP17


PART	NO.	QTY.
	DAD	1
	DLAD	1
	DDA	2
	DBD	2
	F1	9
	F2	2

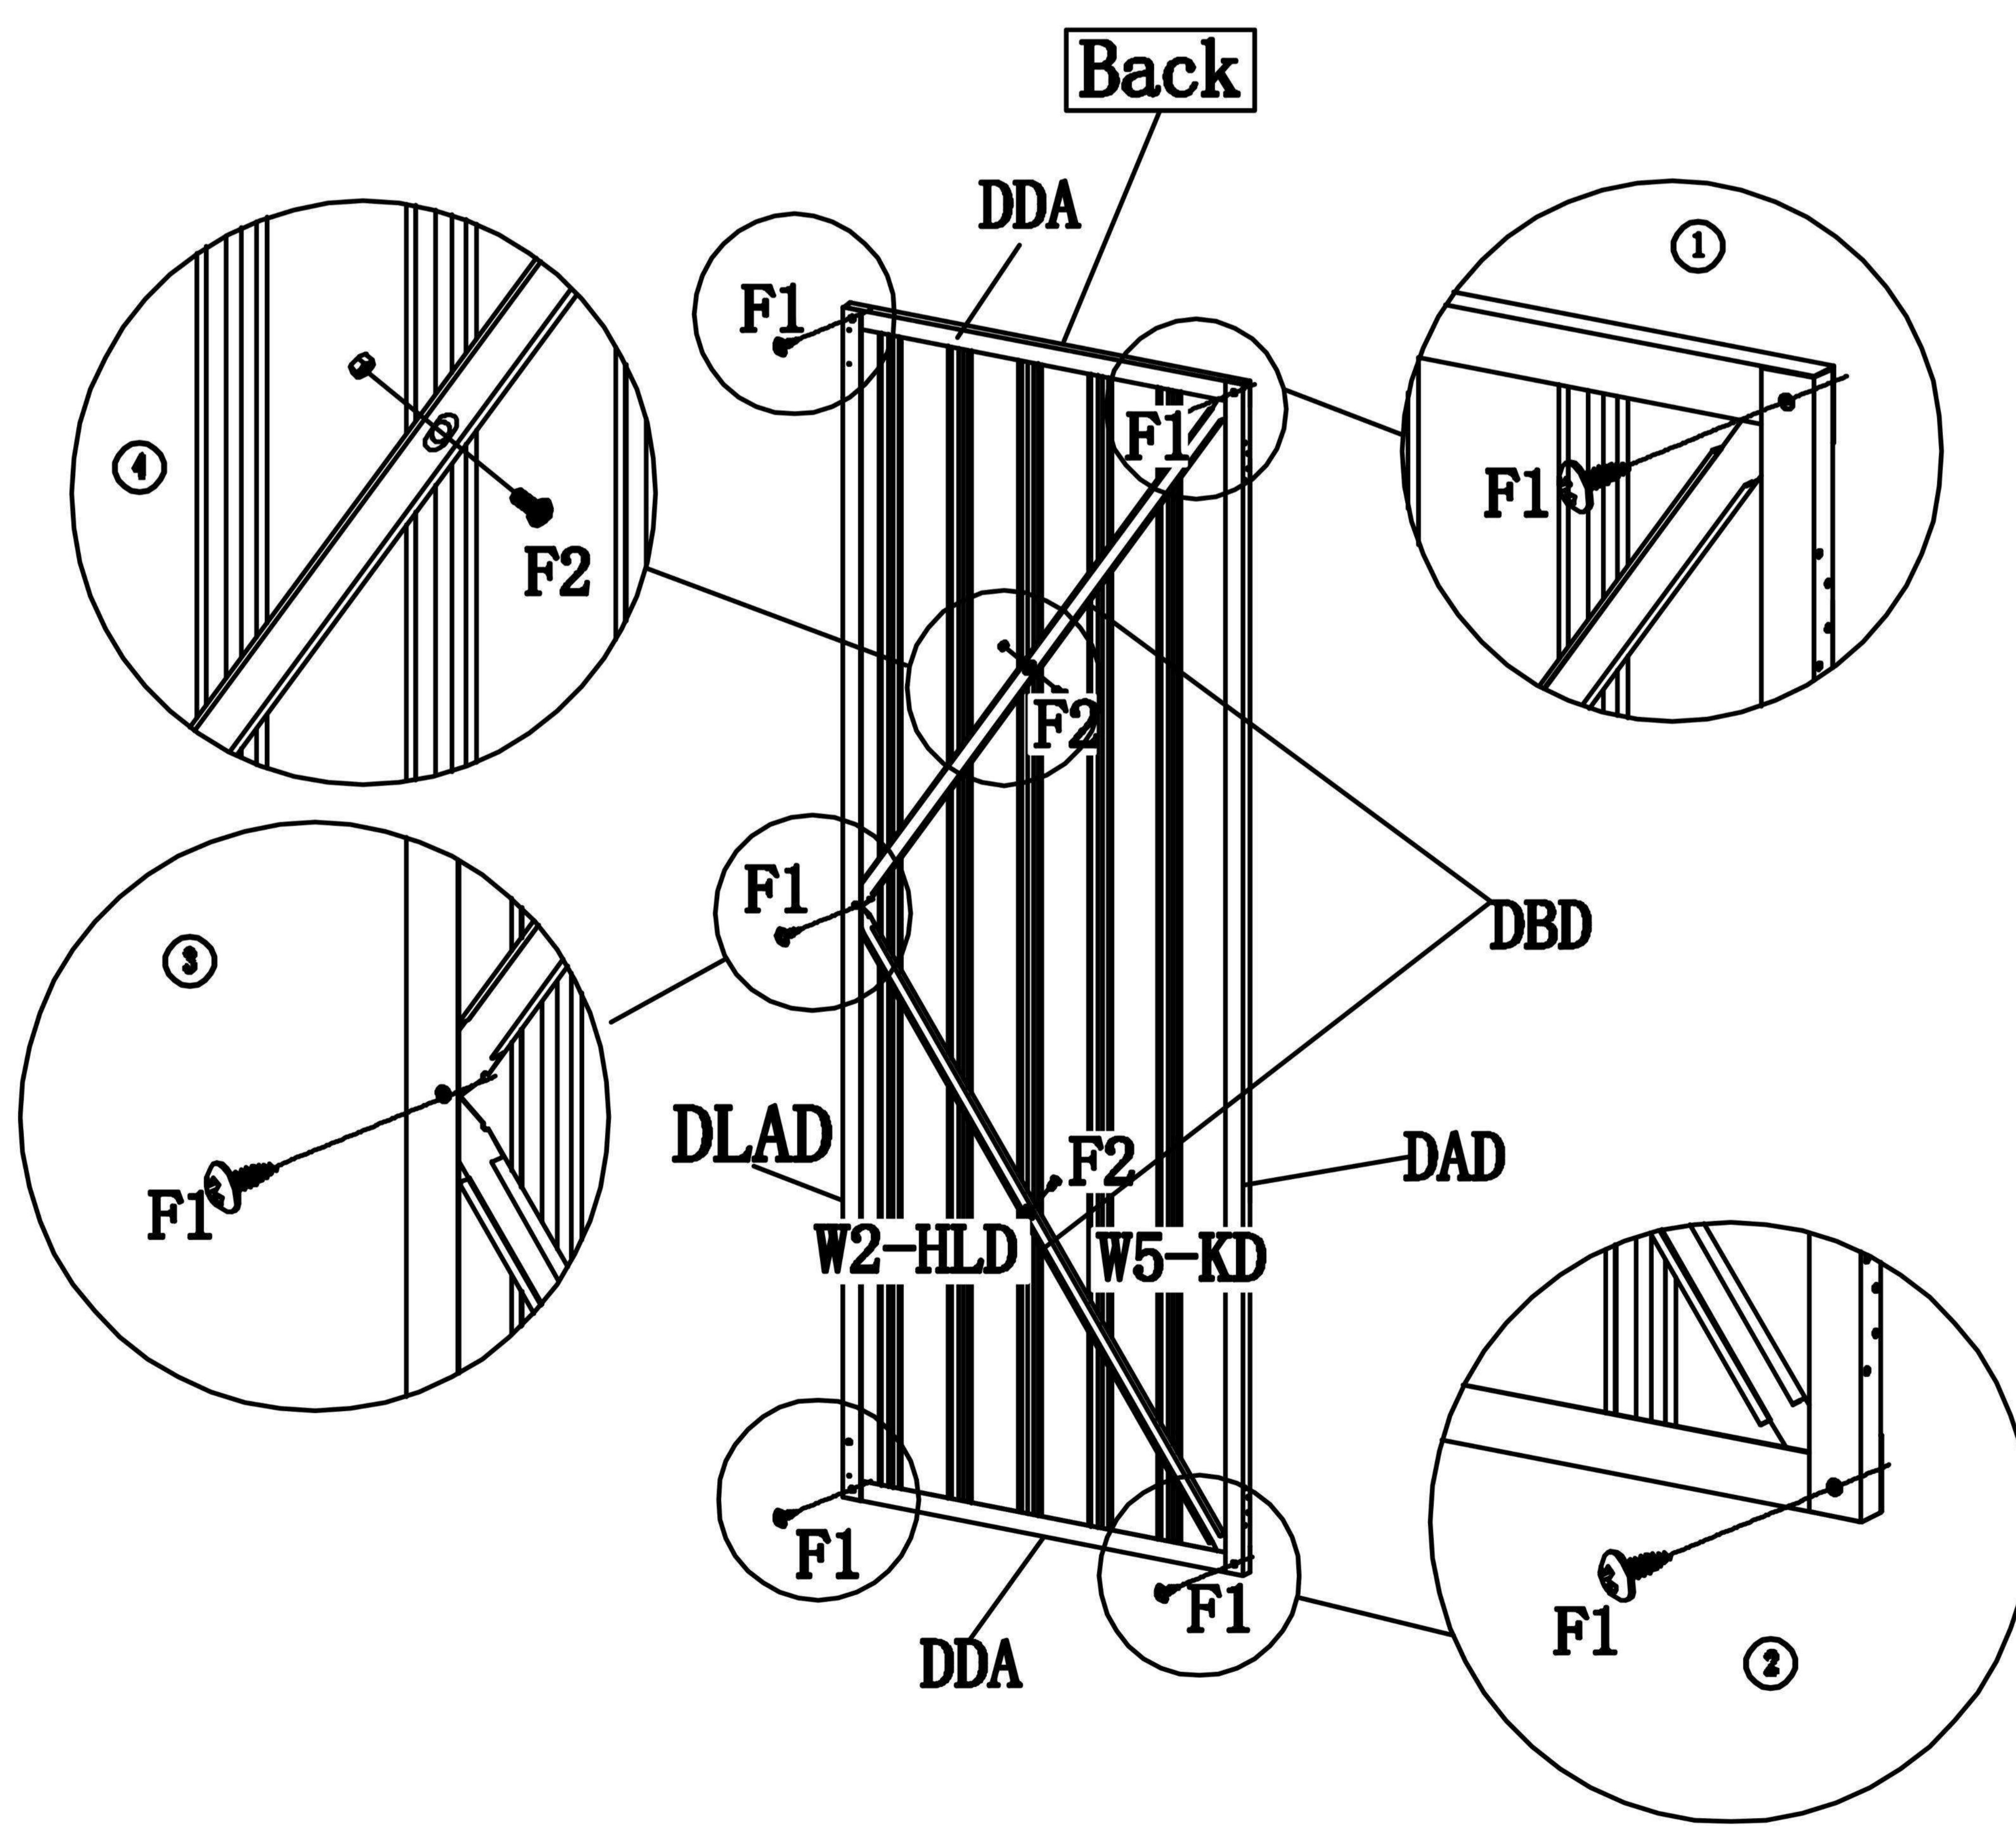

# STEP18

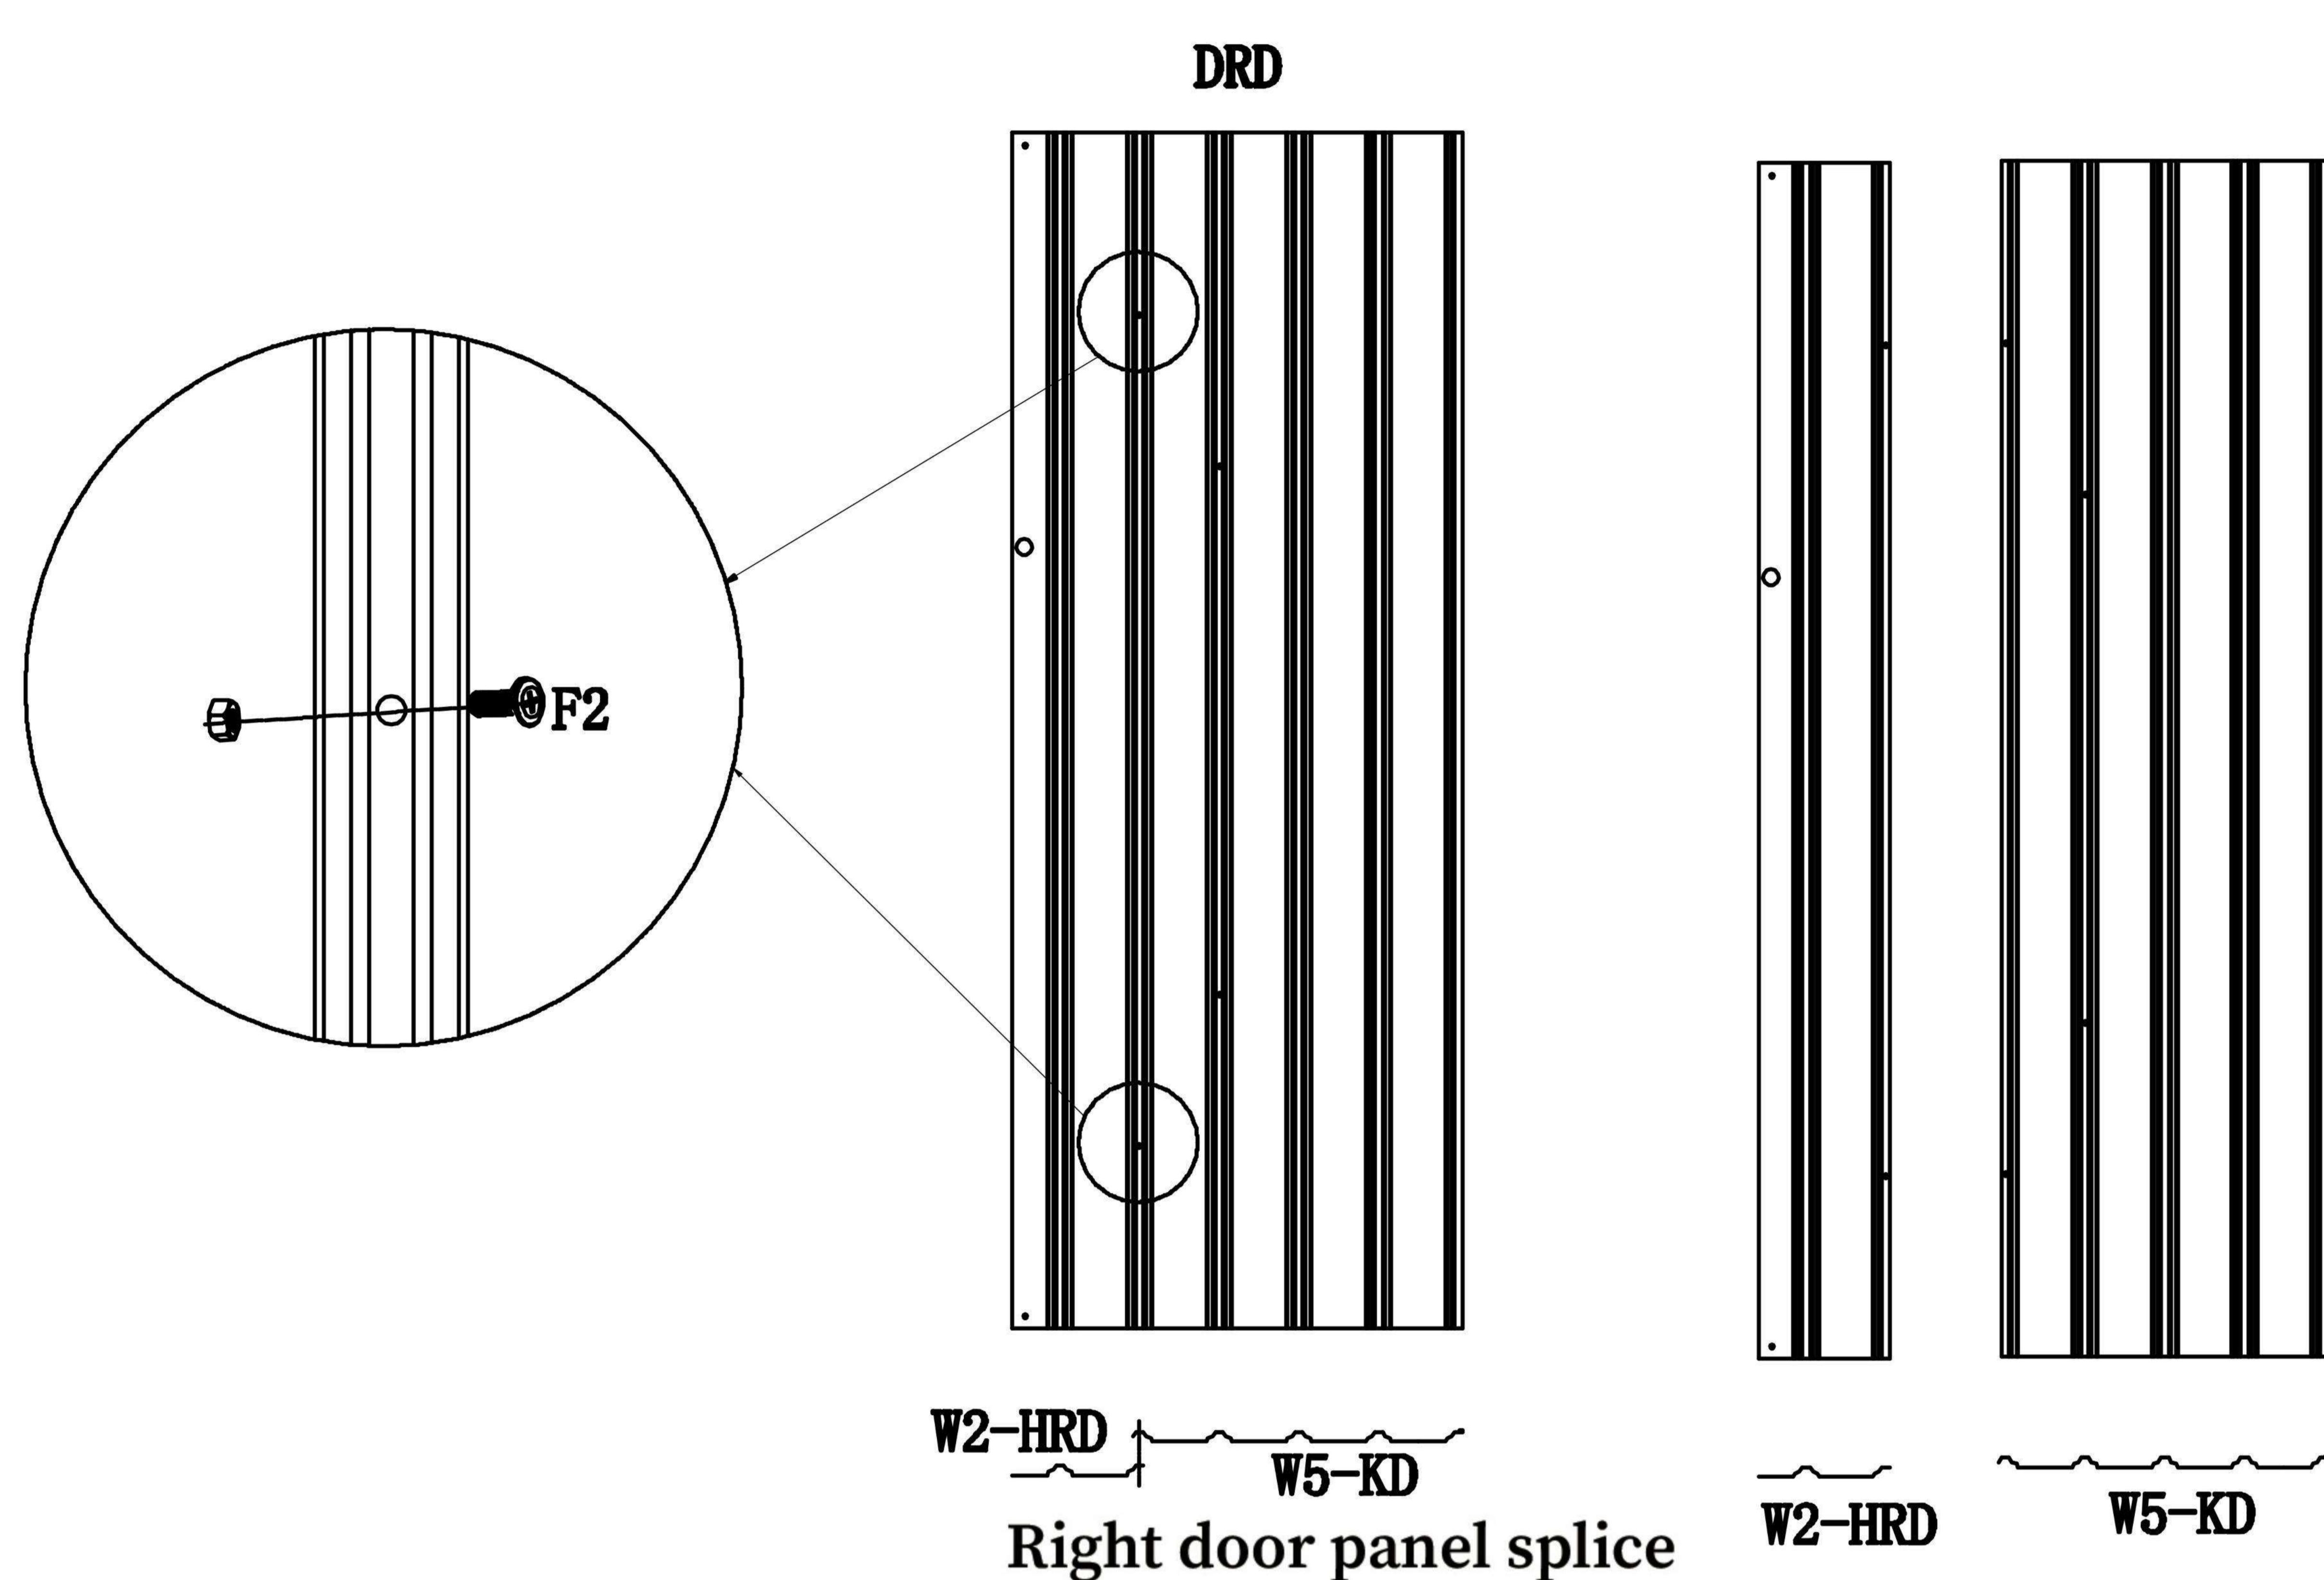


# STEP19



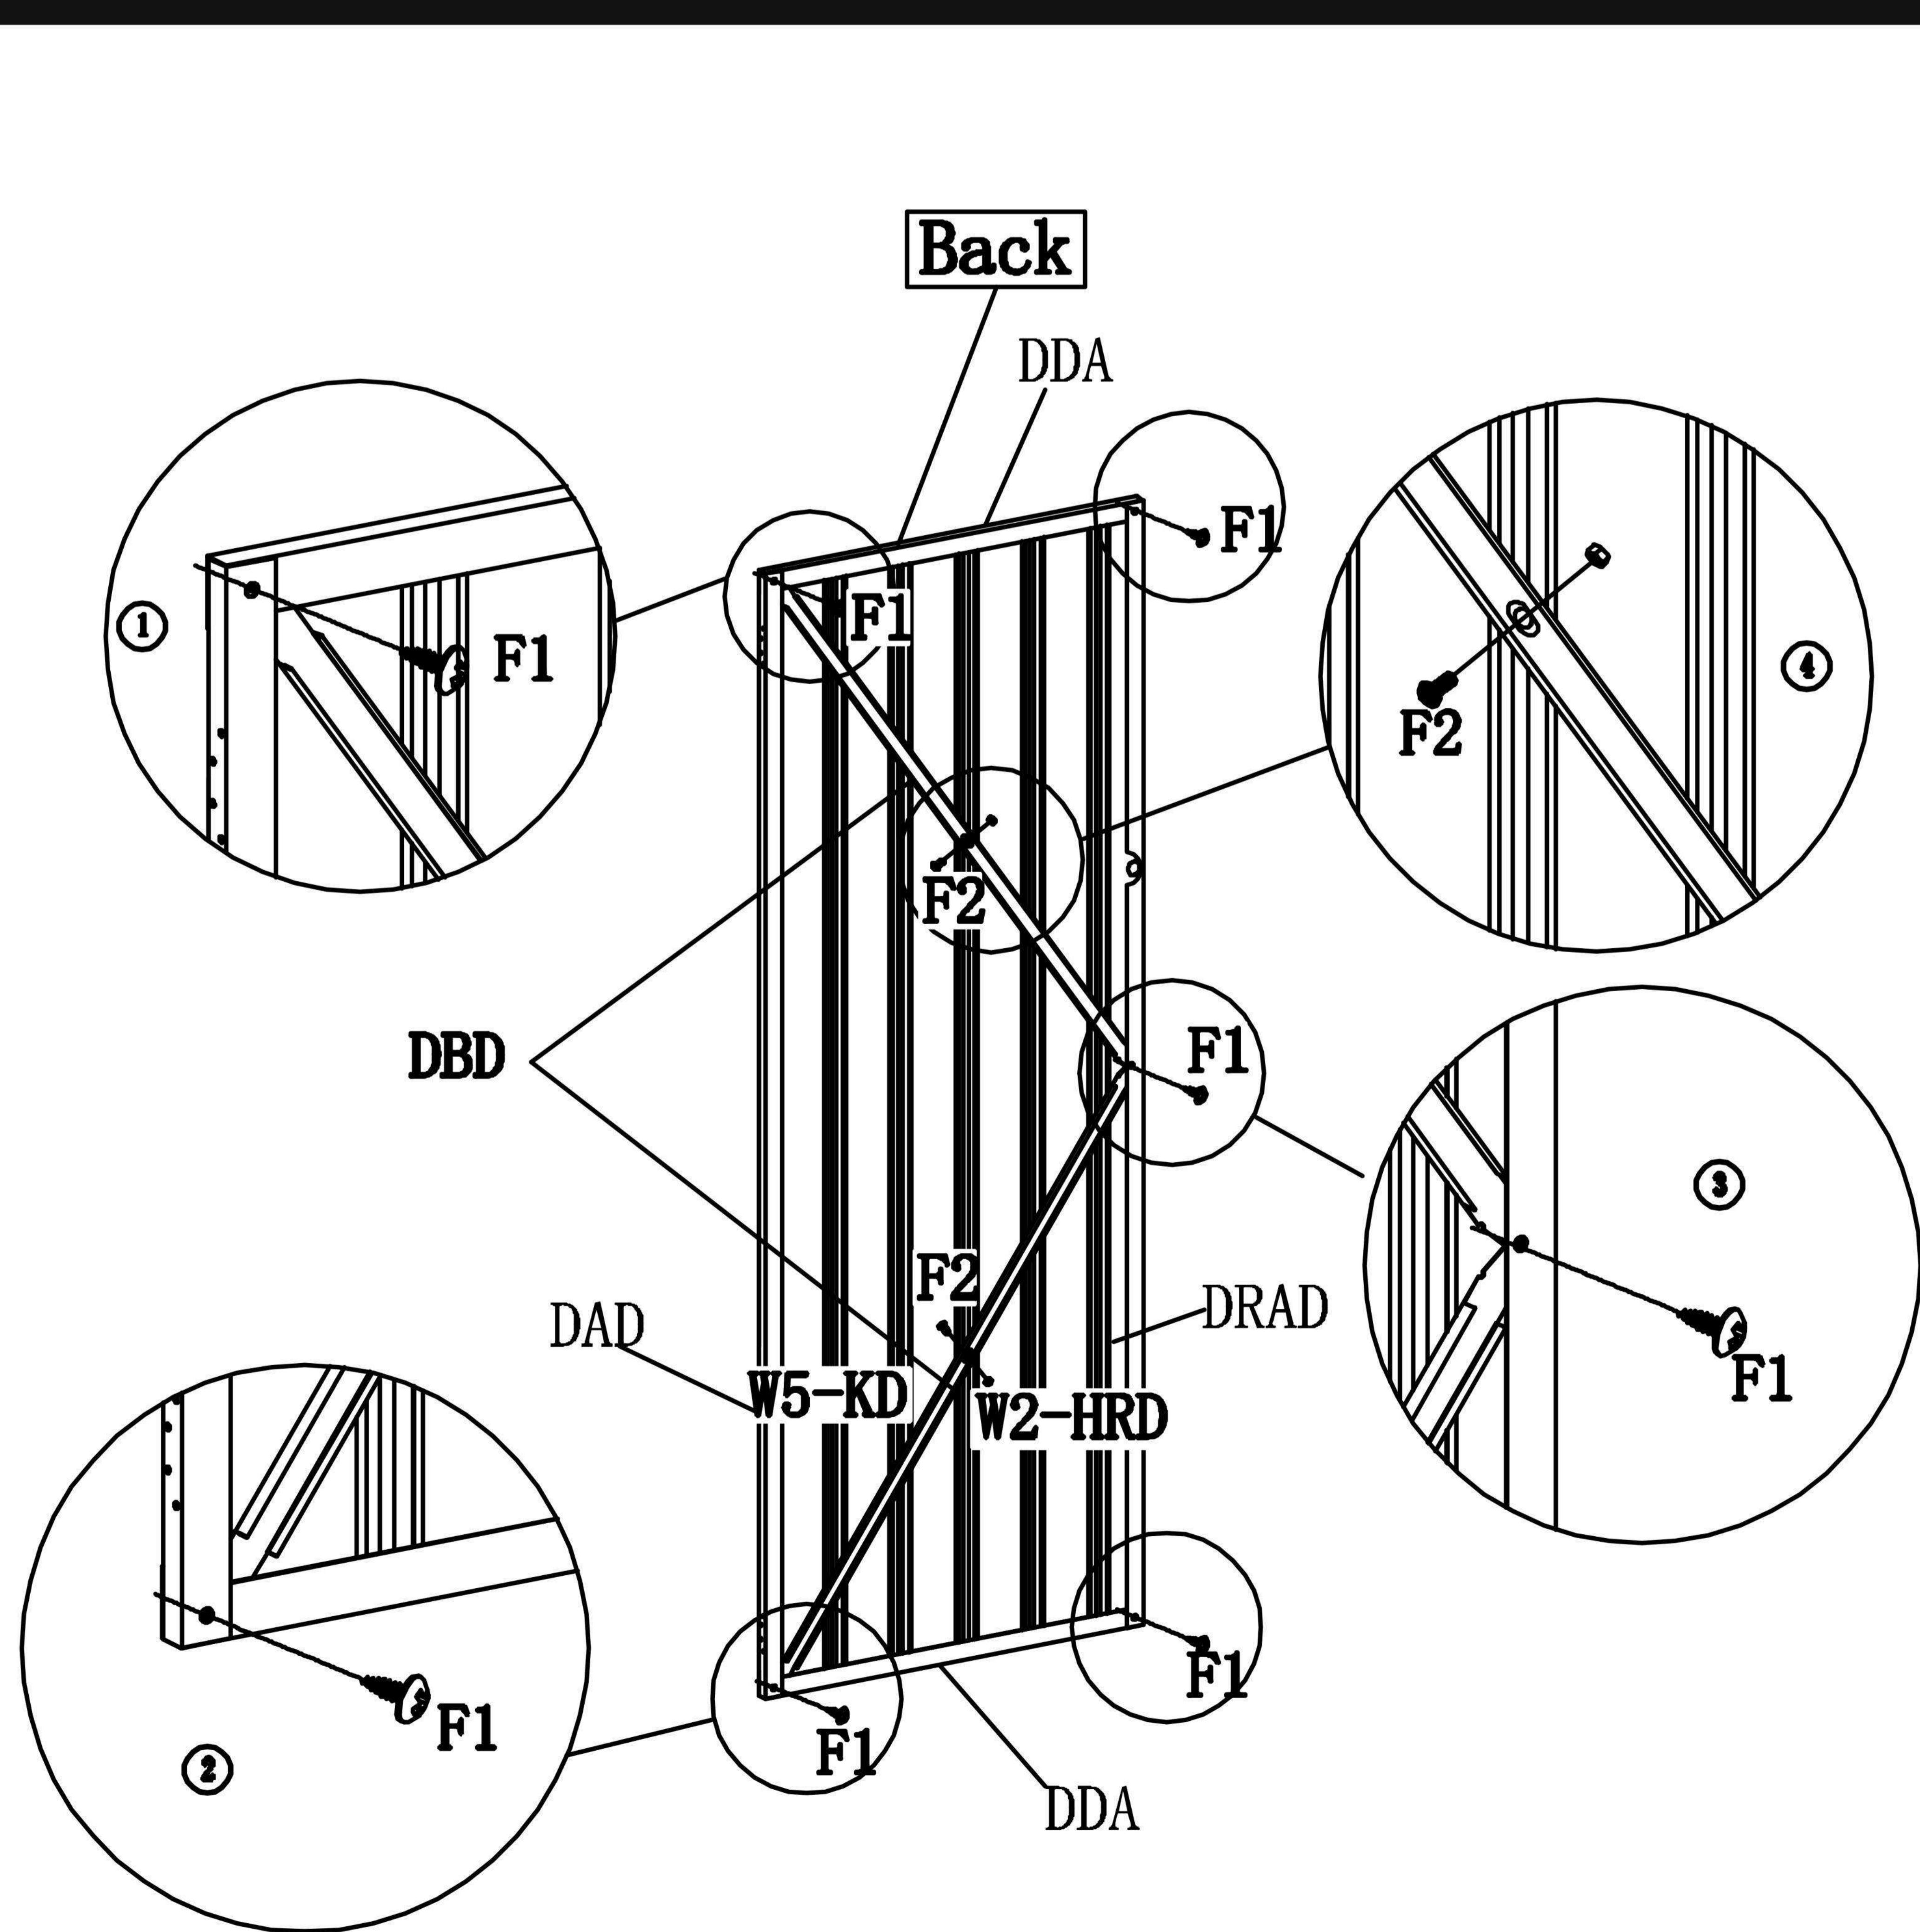




# STEP20

PART	NO.	QTY.
DH	4	4
DC	2	2
F3	16	16
GL	1	1
F1	4	4

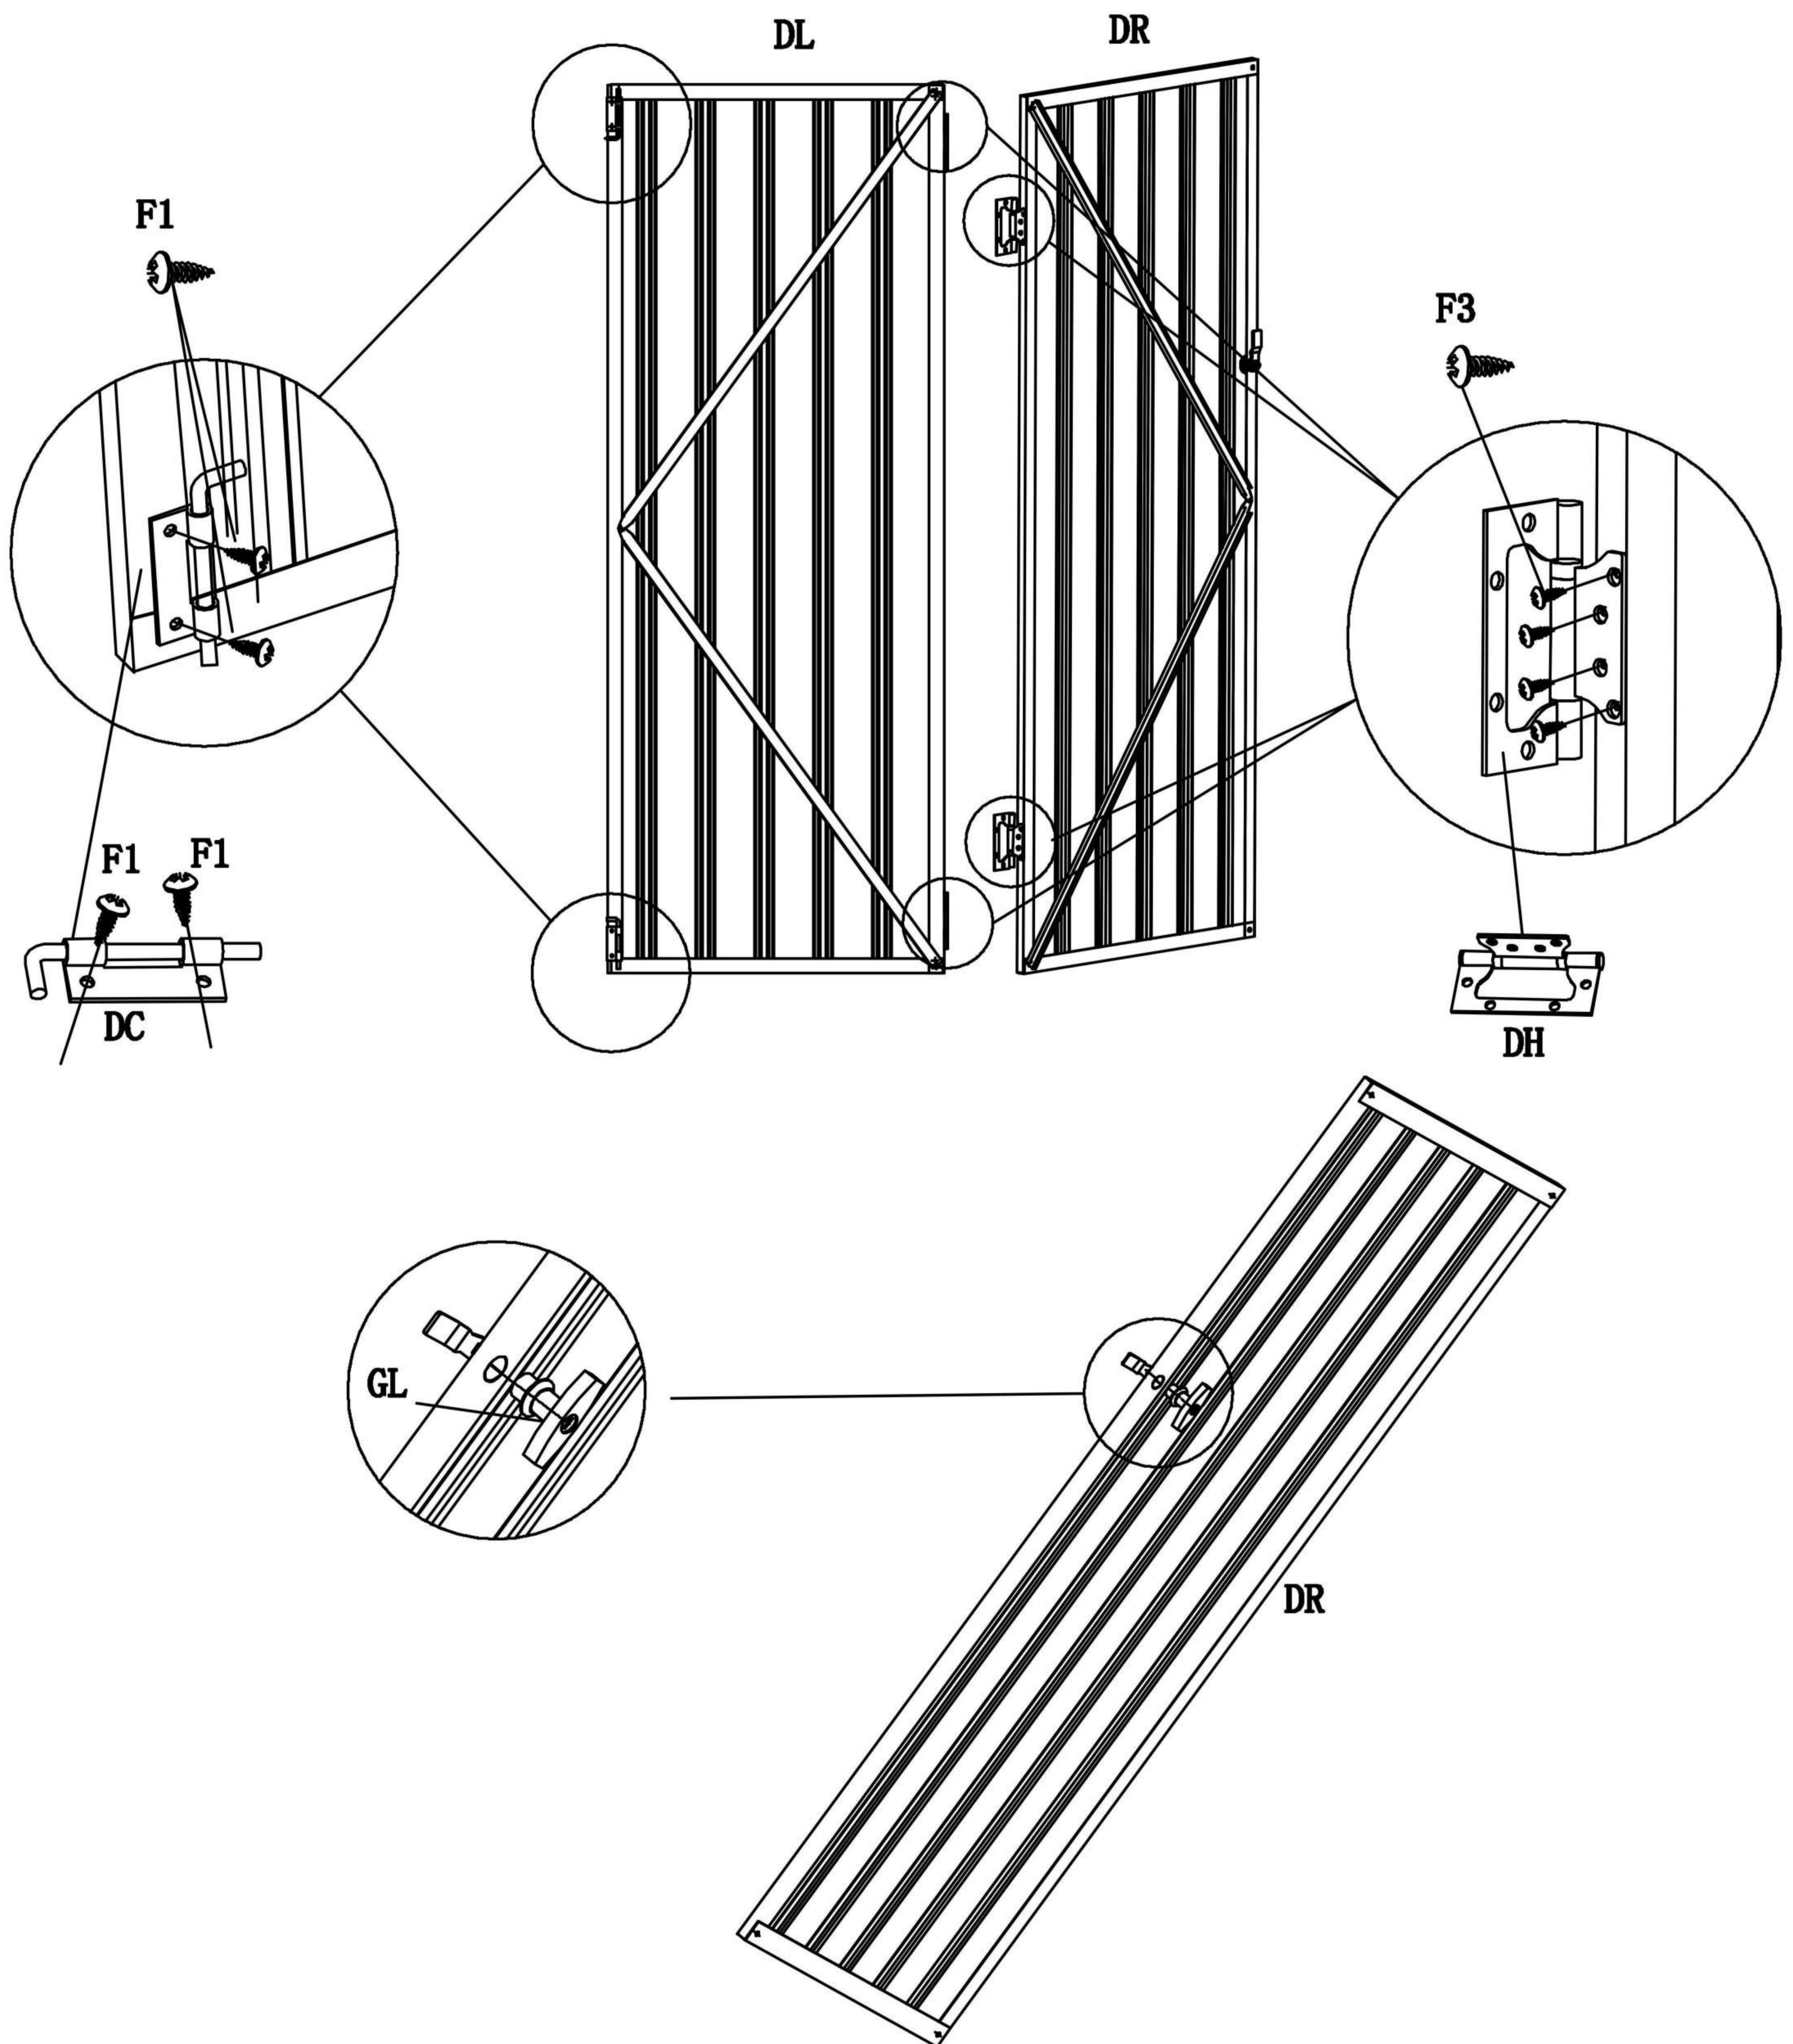


# STEP21

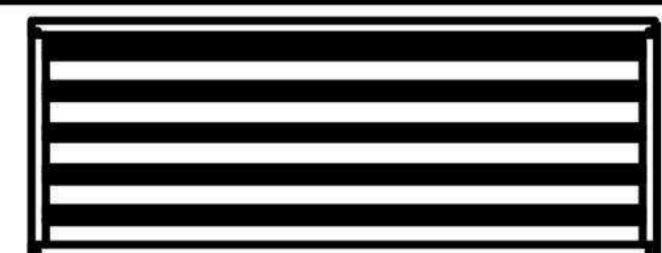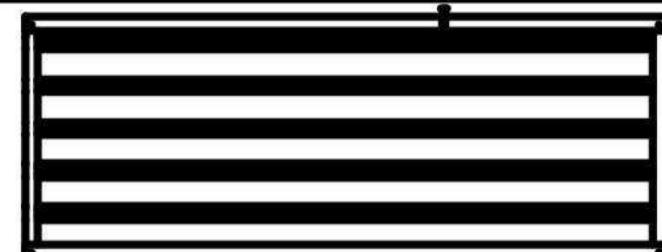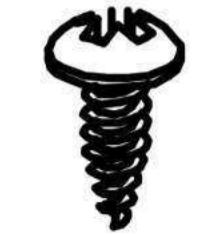PART	NO.	QTY.
	DL	1
	DR	1
	F3	16

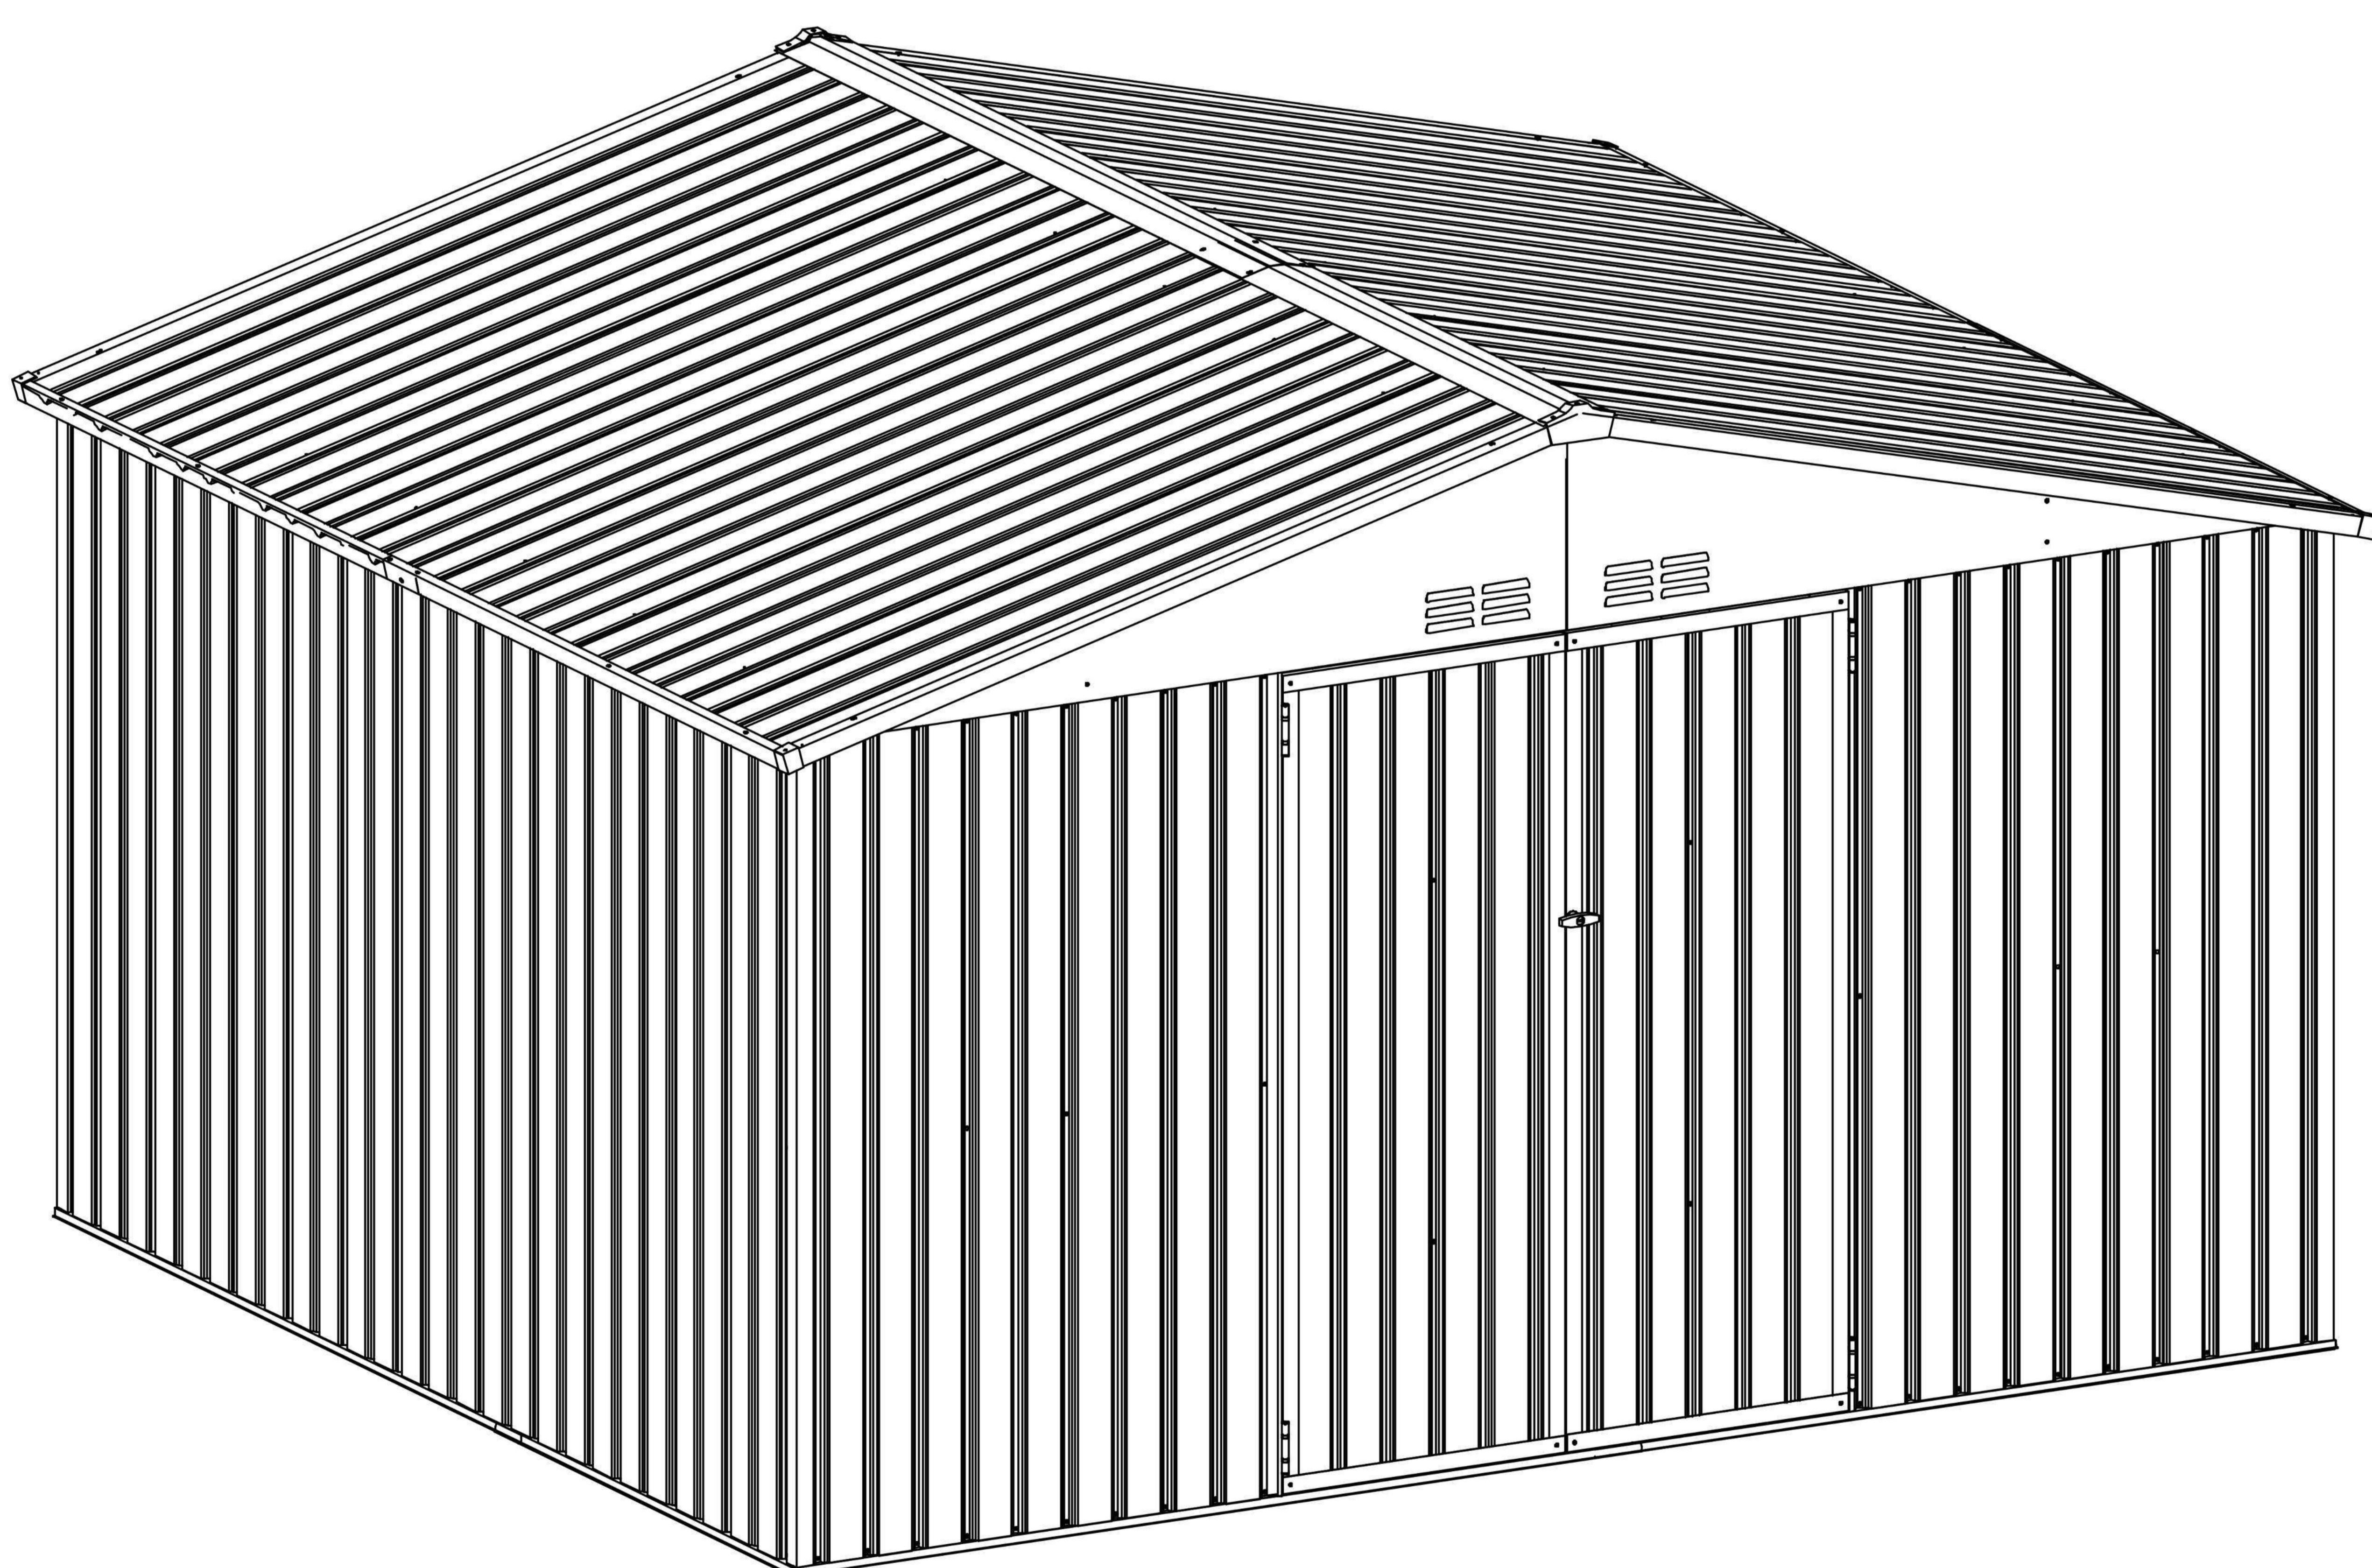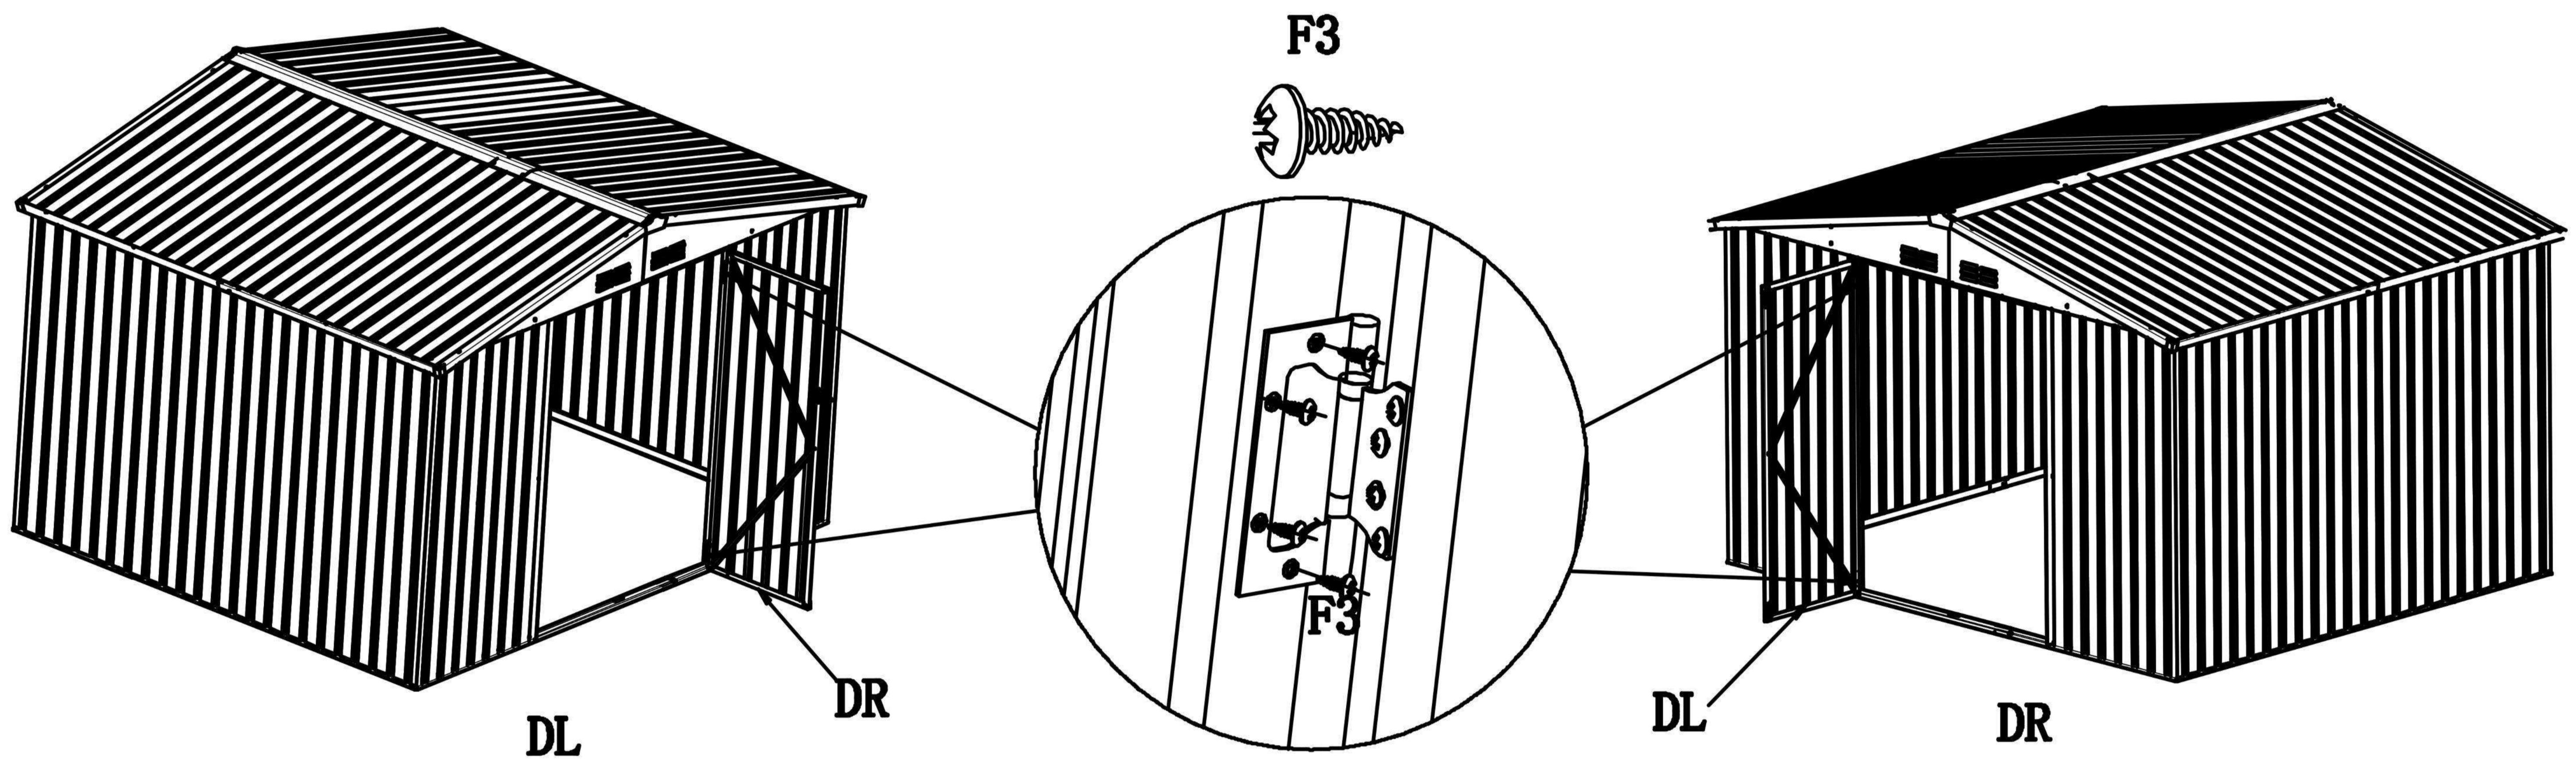

# STEP22

PART	NO.	QTY.
	SL	66

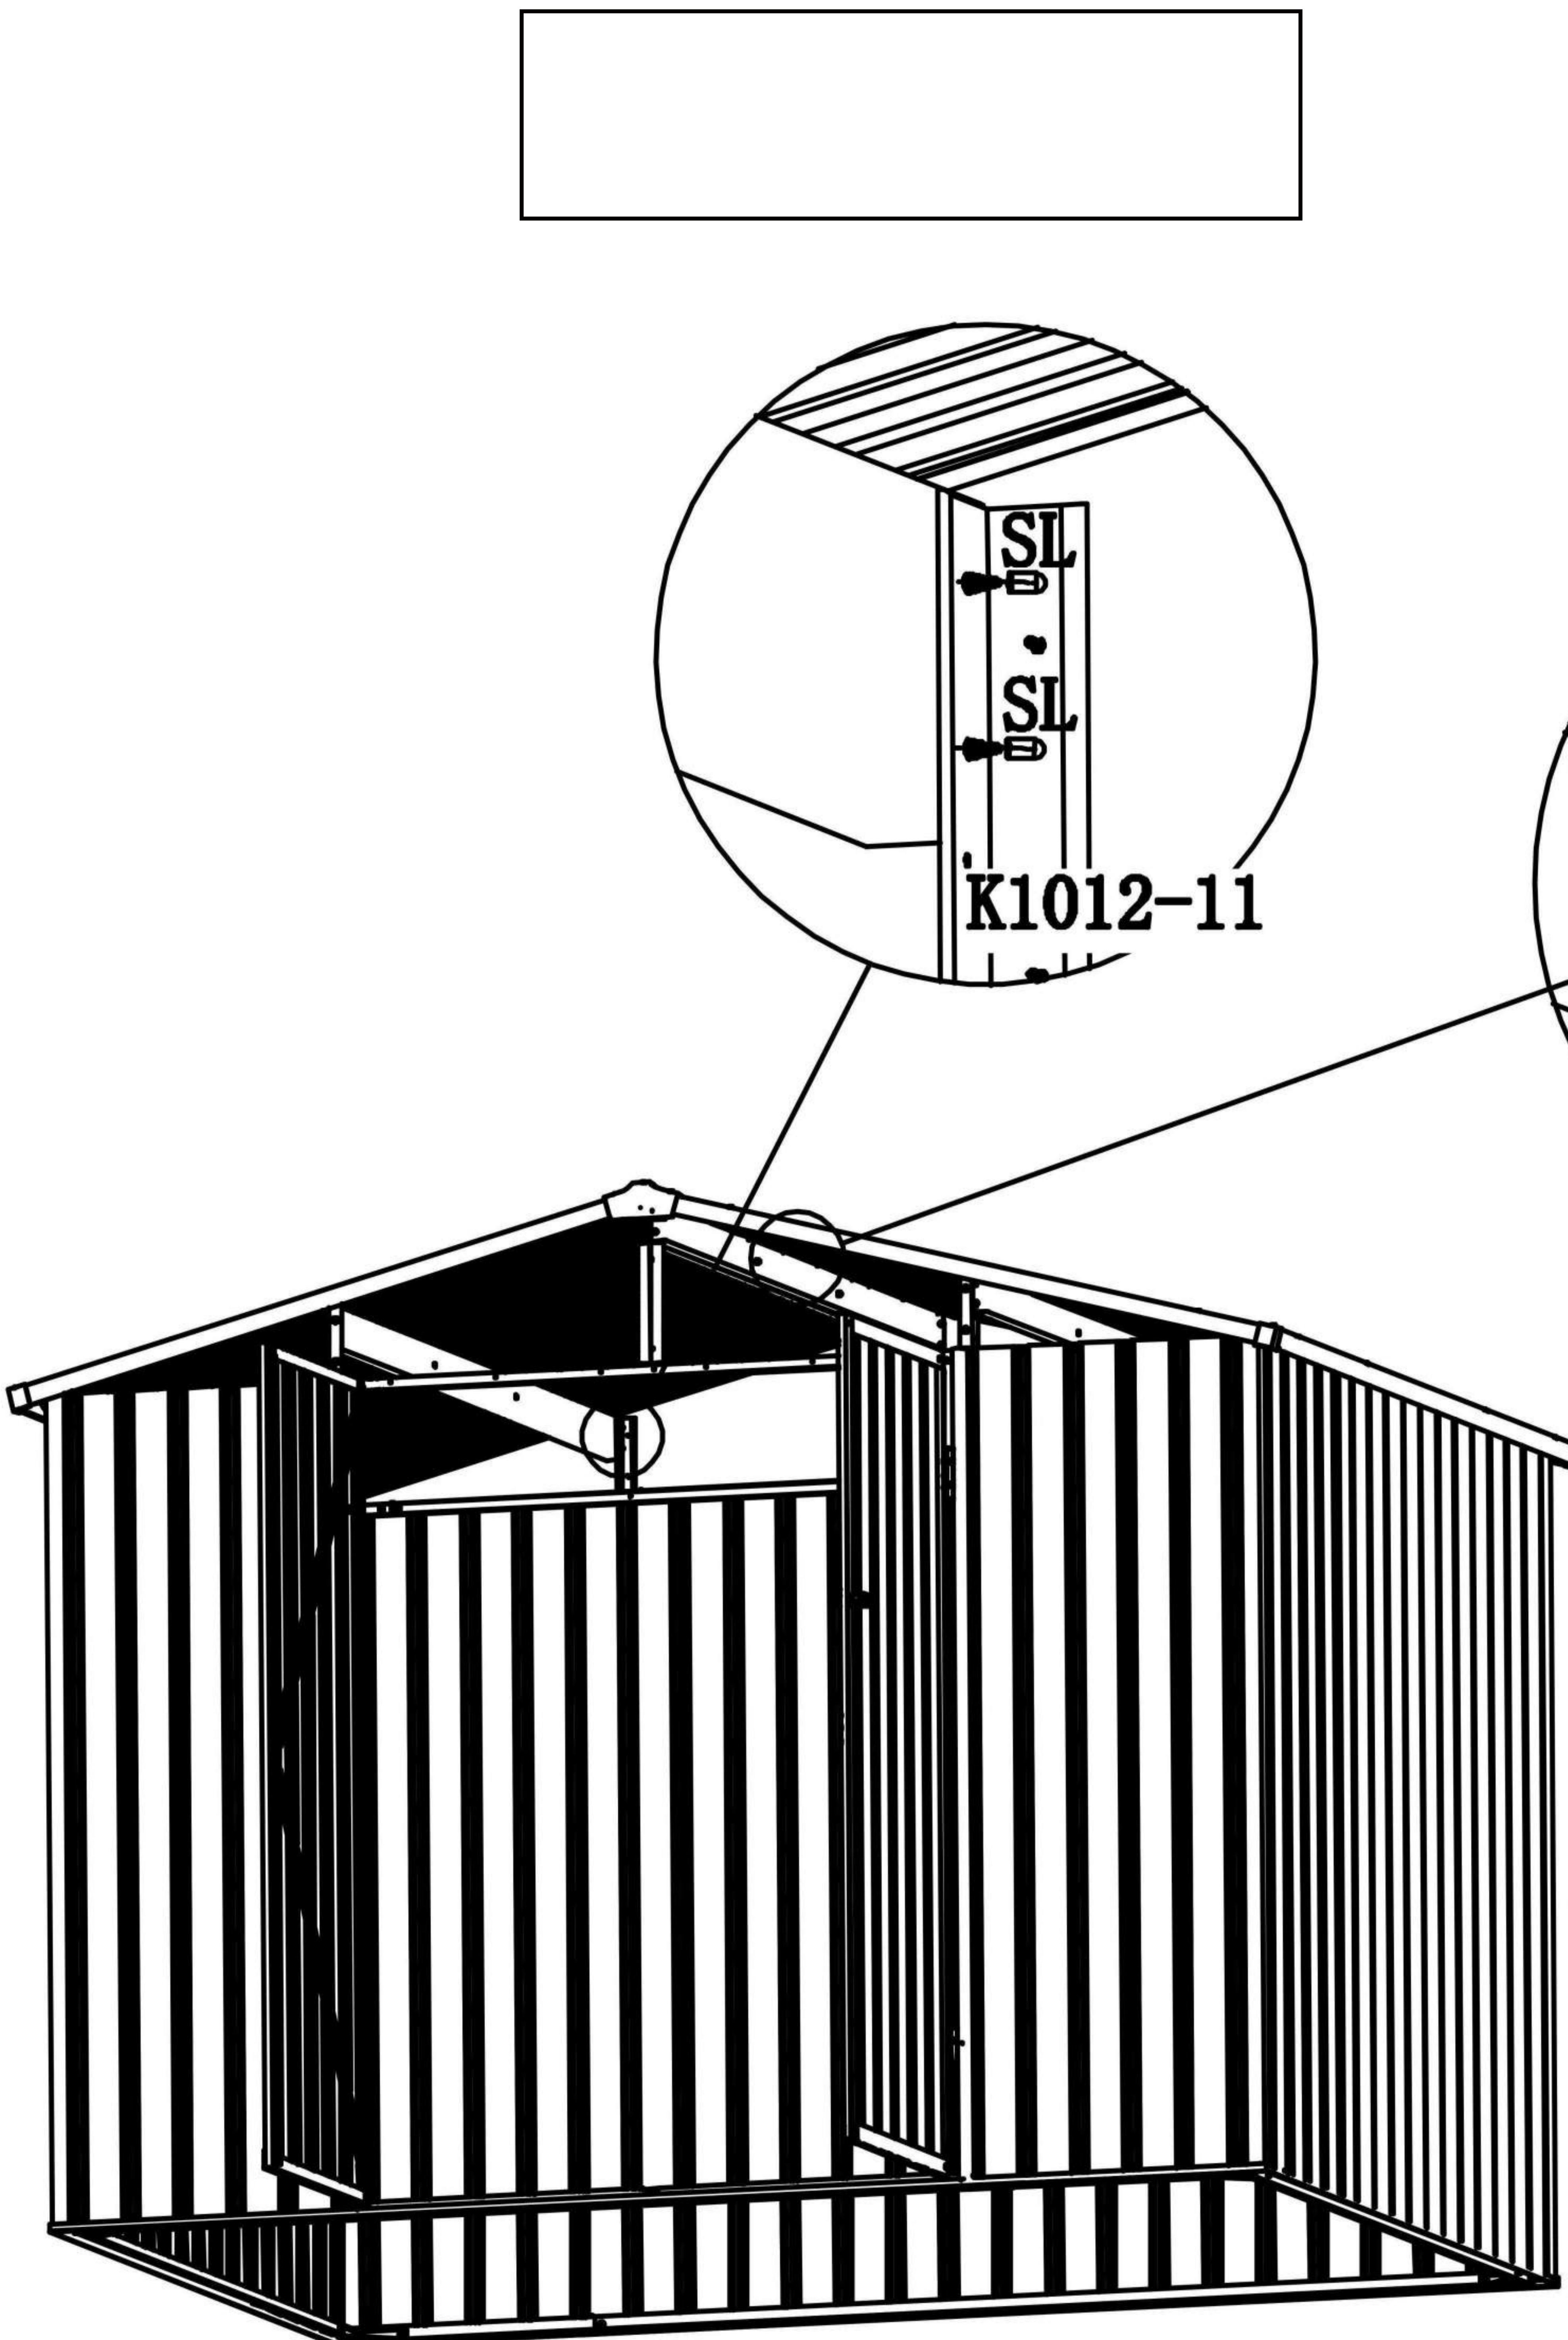

Upper cross member K1010-6L  
K1010-6R and top cover  
assembly screws require  
plastic protective caps on  
the exposed portion.