


FLORETTA 36" SINGLE SINK VANITY

DESIGN # CNV4003-36

Assembly Instructions

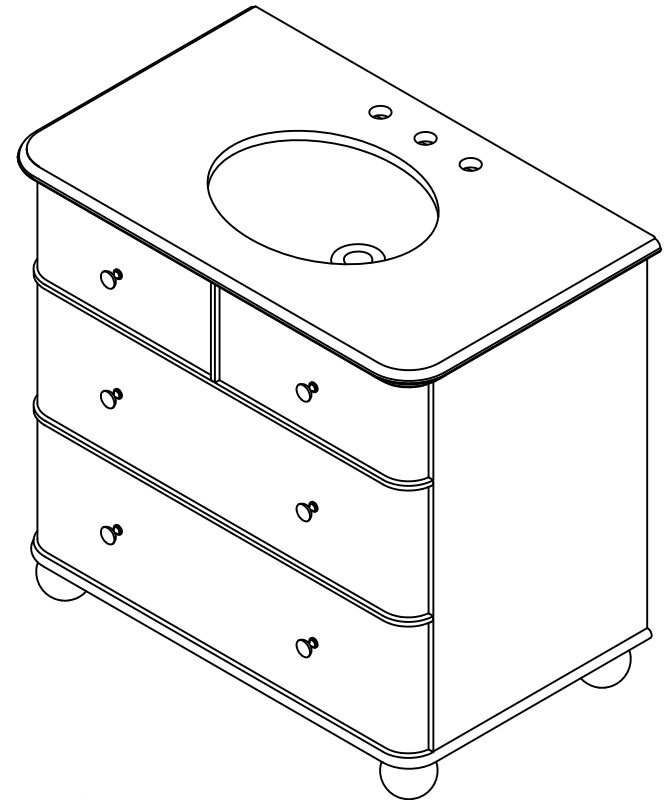

Need help?

Feel free to contact us via email or call if you have any specific questions!

contact us:

cs@safavieh.com

866-422-9070


SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home


Every thing we make is incredibly
simple to set up, including your new
vanity.

Parts List

A x 1
TOP SINK

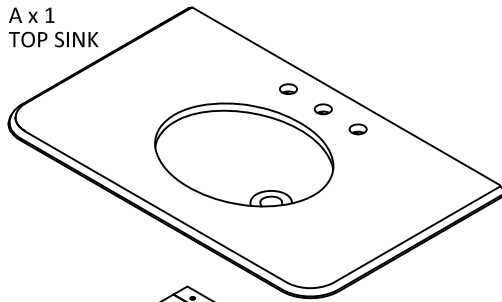

B x 1
UNIT

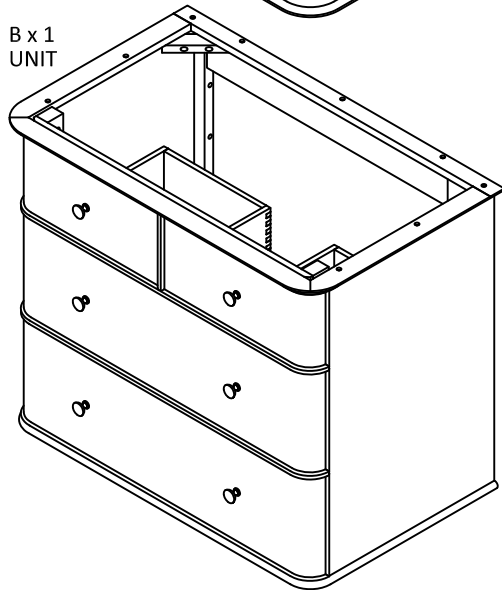


C x 4
BUNFOOT



1

Place the vanity Unit (B) on its back on a soft and clean surface. Attach the Bunfeet (C) to the vanity Unit (B) by screwing them in, in a clockwise direction. Turn the vanity Unit (B) upright. Apply silicone sealant (not included) around the top of the vanity Unit (B). Gently align the Top Sink (A) with the vanity Unit (B) and place on top. Let the sealant dry.

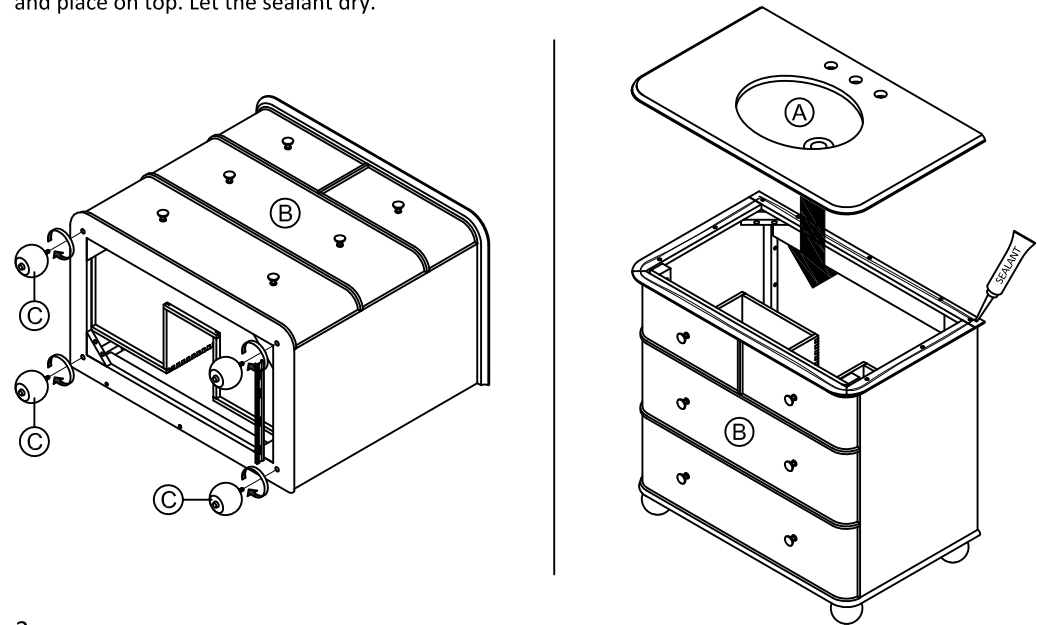

2

Adjust the levelers on the bottom of the vanity as needed to make it level. Place the vanity in the place where you will use it. We'd love to see it - just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

