
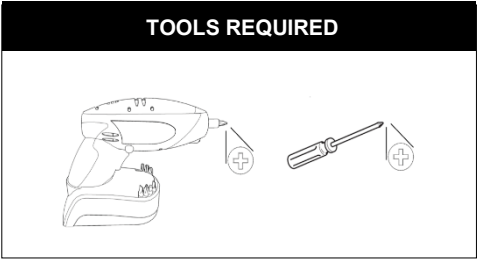


ASSEMBLY INSTRUCTION

WALL CABINET


Estimated Assembly Time: 30 - 40 minutes
2-person assembly recommended

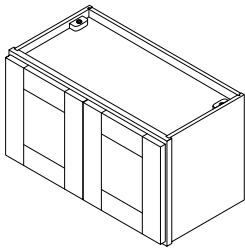

PART	DESCRIPTION	QTY	PART	DESCRIPTION	QTY
A1	Box side panel - left	1	C	Box back panel	1
A2	Box side panel - right	1	D	Face frame & door panel	1
B	Box bottom panel	1	L	Box top panel	1

HARDWARE CONTENTS


DD Rubber bumper x 4




FF 1" Flat head phillips screw x 8




1

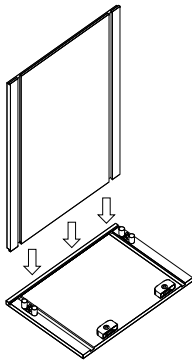


2

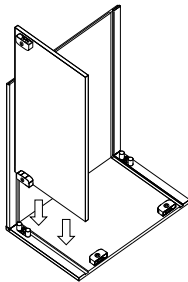


3

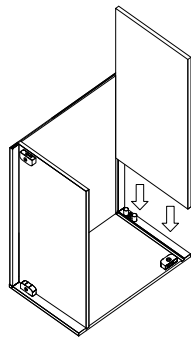


4

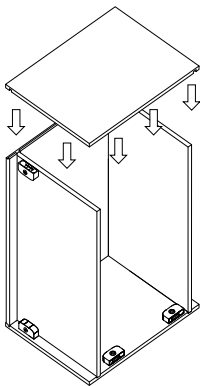


5

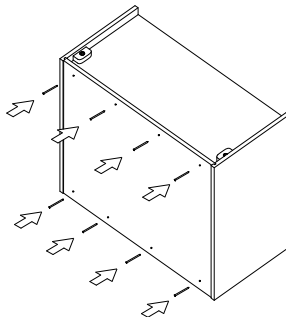

6


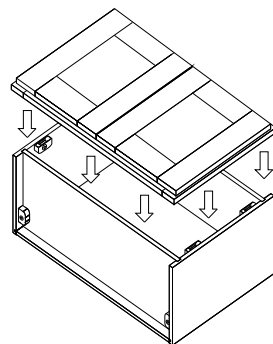


7

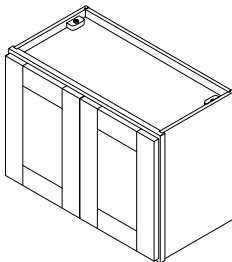


CAMLOCK CONNECTION

1. Insert the camlock to the locker.

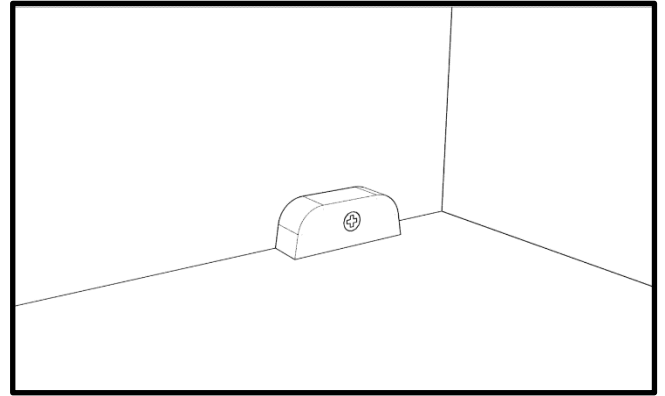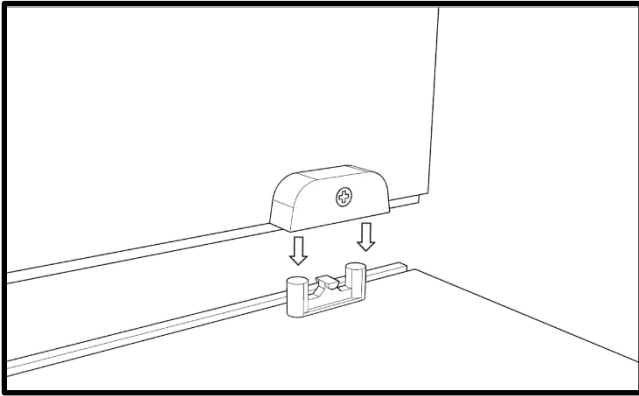


2. Turn the nut clockwise to latch two parts.

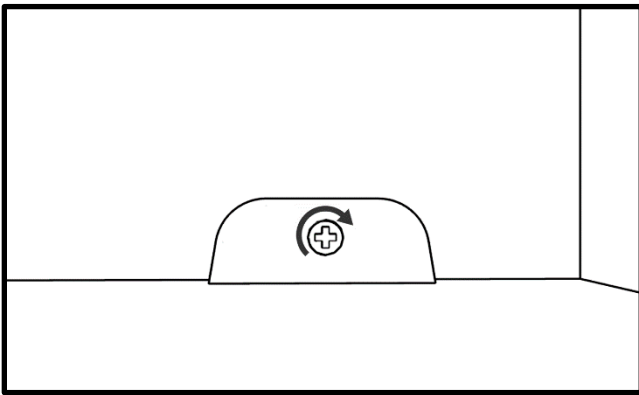

FASTEN BOX BOTTOM PANEL AND BOX BACK PANEL

1. Drill 1" flat head Phillips screw to the predrilled holes and fasten box bottom panel with box back panel

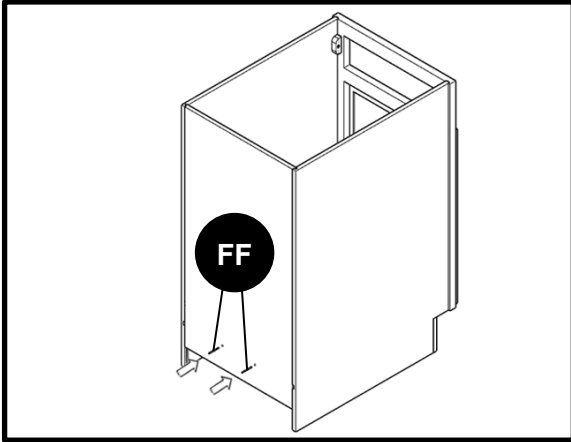

RUBBER BUMPER INSTALLATION

1. Attach rubber bumpers to 4 corners of each drawer face panel and 2 outsider corners of each door panel.

