



ASSEMBLY INSTRUCTIONS

TWIN BED















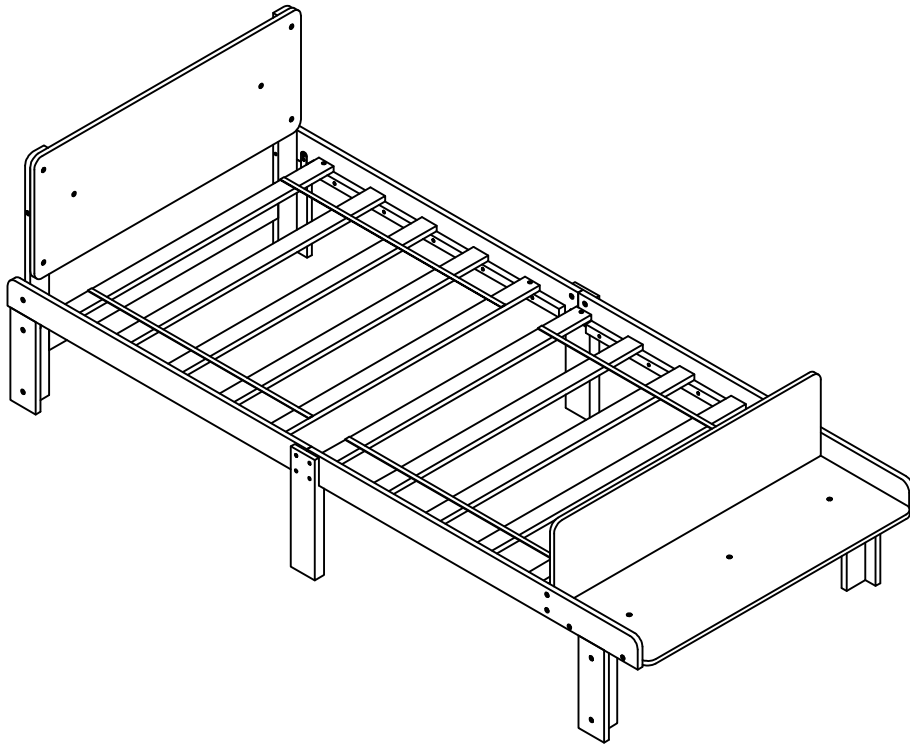


ILA33771



Detail View

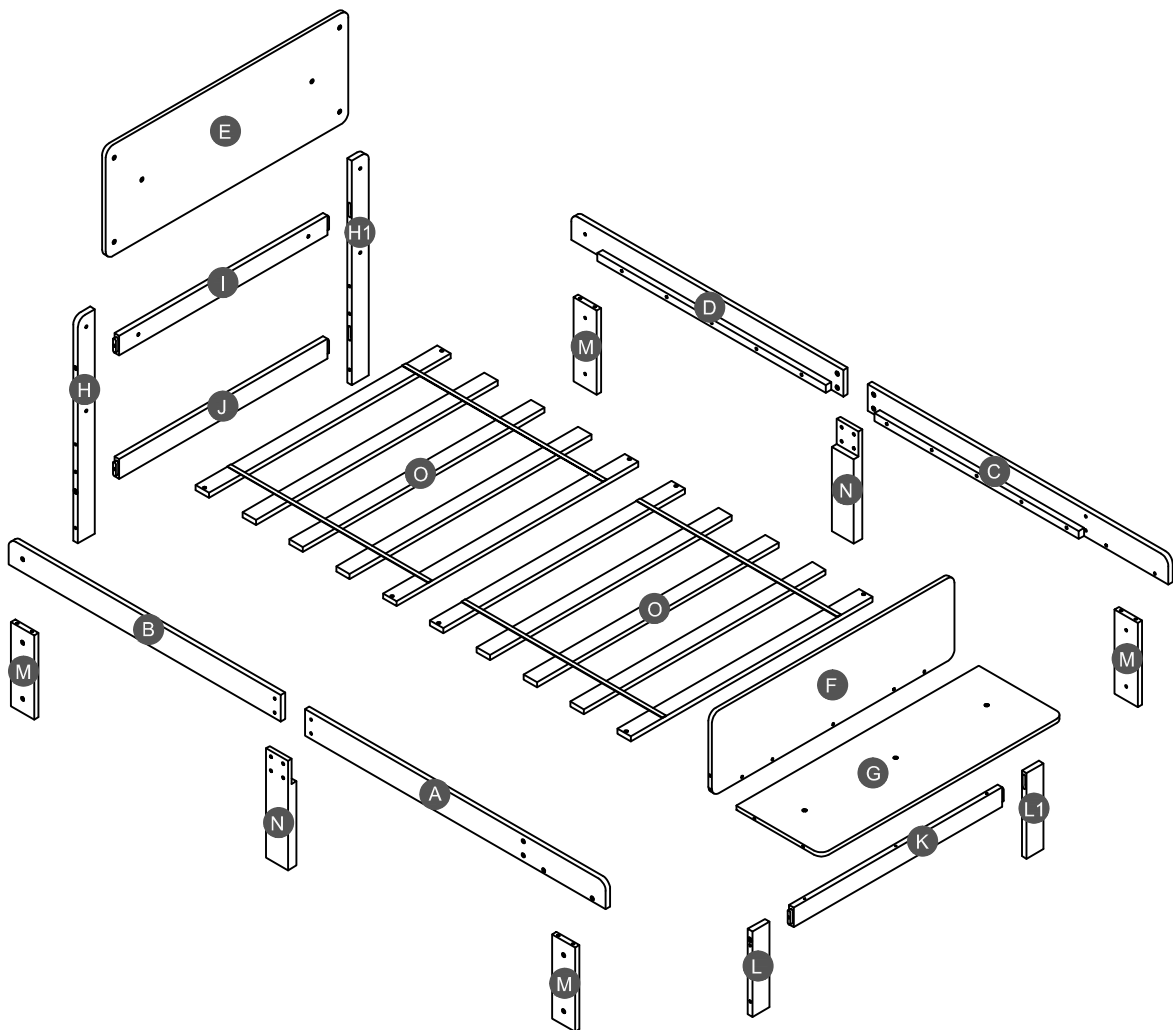


Part List

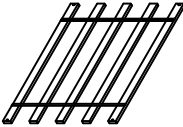A  Side rail (Left front) - 1pc	B  Side rail (Left back) - 1pc	C  Side rail (Right front) - 1pc
D  Side rail (Right back) - 1pc	E  Back panel - 1pc	F  Divider panel - 1pc
G  Front panel - 1pc	H  Leg HB (Left) - 1pc	H1  Leg HB (Right) - 1pc
I  Upper horizontal bar HB - 1pc	J  Lower horizontal bar HB - 1pc	K  Horizontal bar FB - 1pc
L  Leg FB (Left) - 1pc	L1  Leg FB (Right) - 1pc	M  Support leg - 4pcs
N  Support side rail - 2pcs	O  Slat - 2Set (1Set = 5pcs)	

Hardware List


1  Ø8*30mm Wood dowel (10pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (6pcs)	3  (Ø12)1/4"*60mm Hex-Head bolts (21pcs)
4  (Ø12)1/4"*30mm Hex-Head bolts (14pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(27pcs)	6  (Ø12)1/4"*40mm Hex-Head bolts (3pcs)
7  (1/4")4.5*58mm Allen key (1pc)	8  Ø4*30mm Wood screws (8pcs)	9  75*20*2 mm Metal bracket (4pcs)
10  24*28*28*2mm Metal bracket (4pcs)	11  Ø3.5*15mm Wood screws (24pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

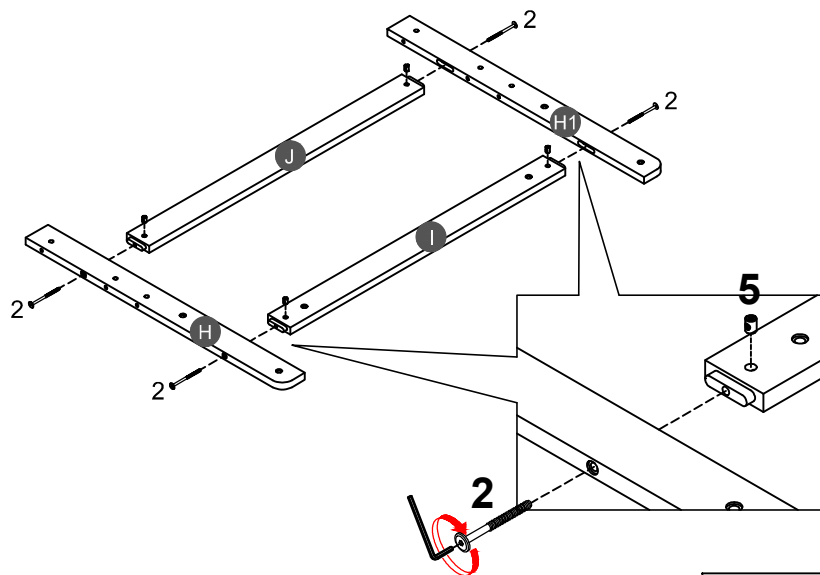



2		5	
4PCS		4PCS	

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

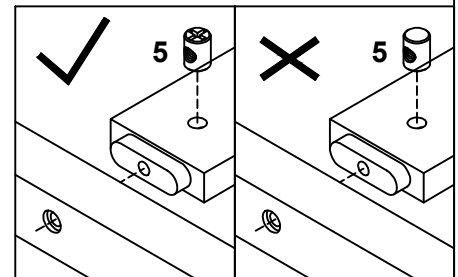


STEP 2:

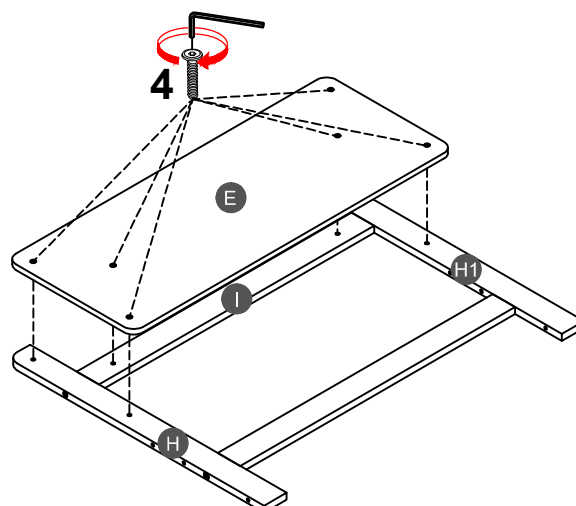


4	
6PCS	

STEP 3:


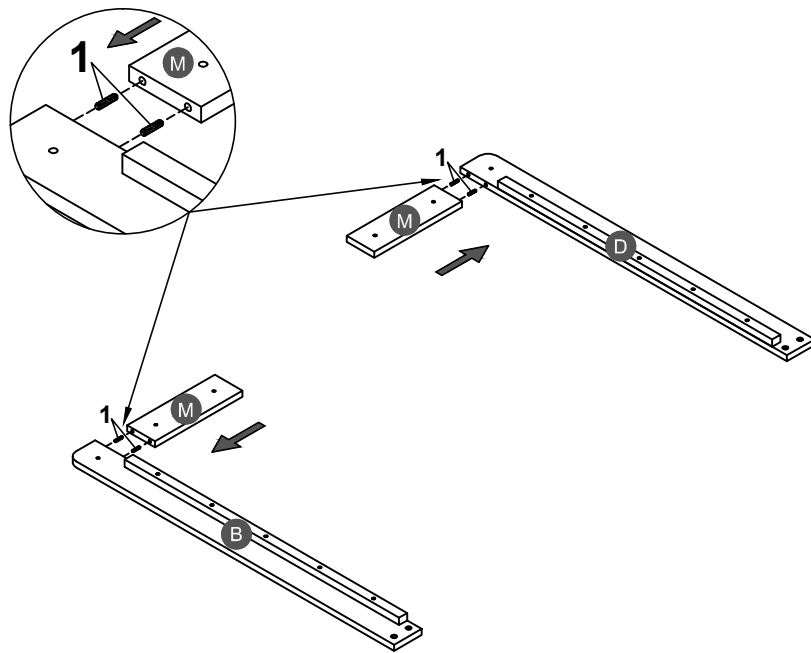


1	
4PCS	

STEP 4:

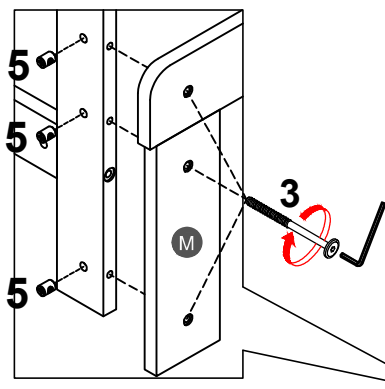


3	
6PCS	
4	
4PCS	
5	
6PCS	

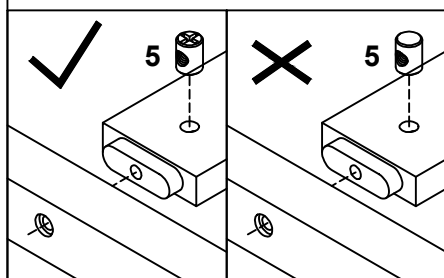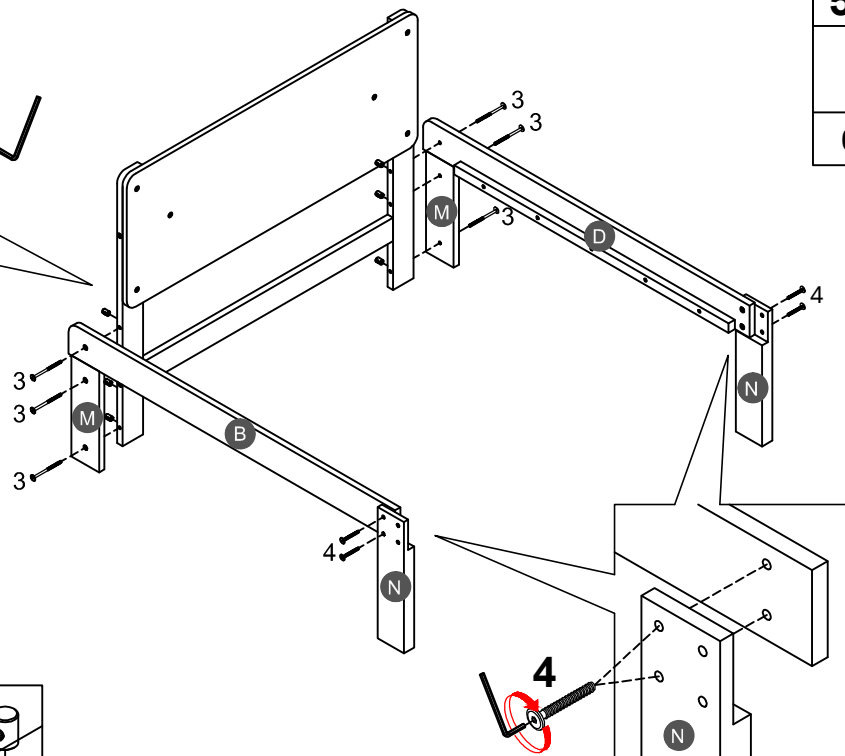


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 5:

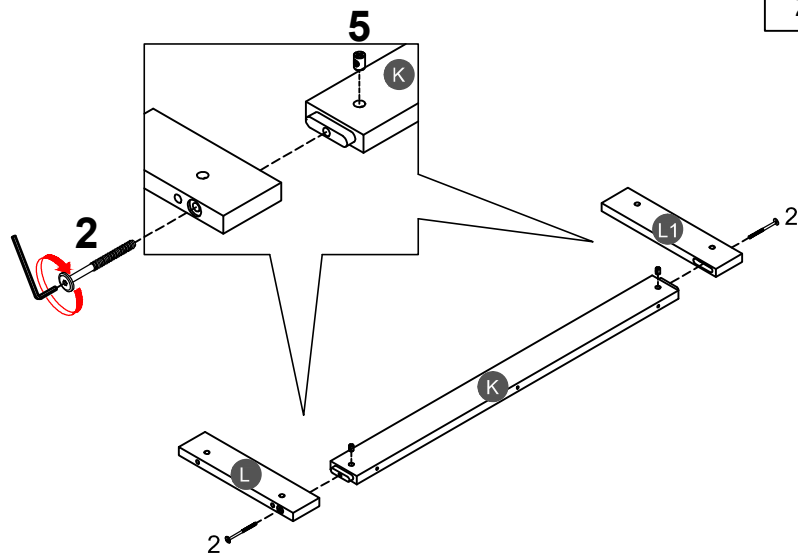


2		5	
2PCS		2PCS	

STEP 6:

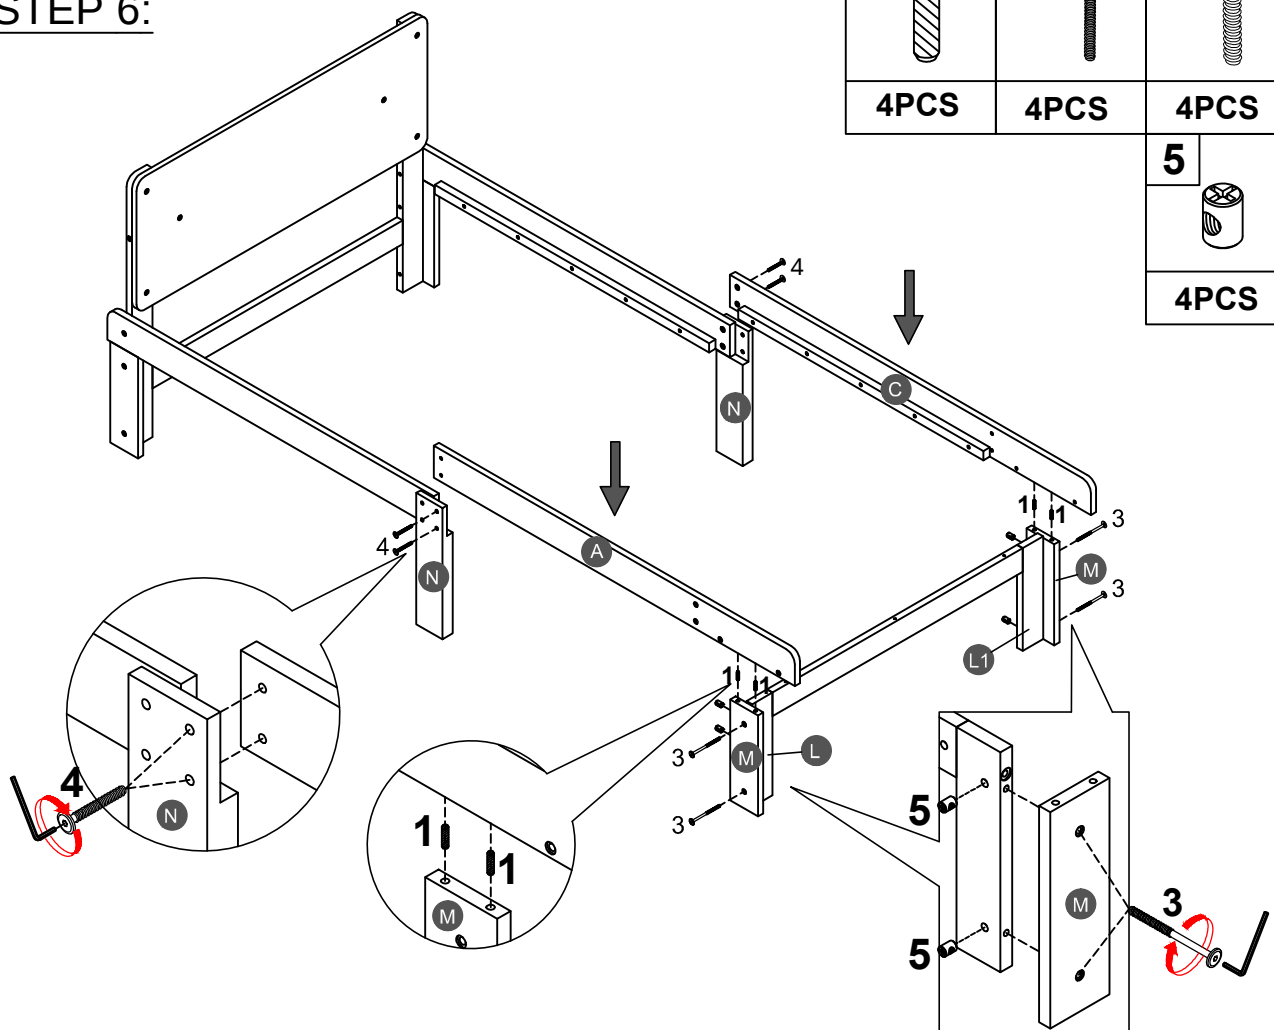


1		3		4	
4PCS		4PCS		4PCS	
				5	
				4PCS	

STEP 7:

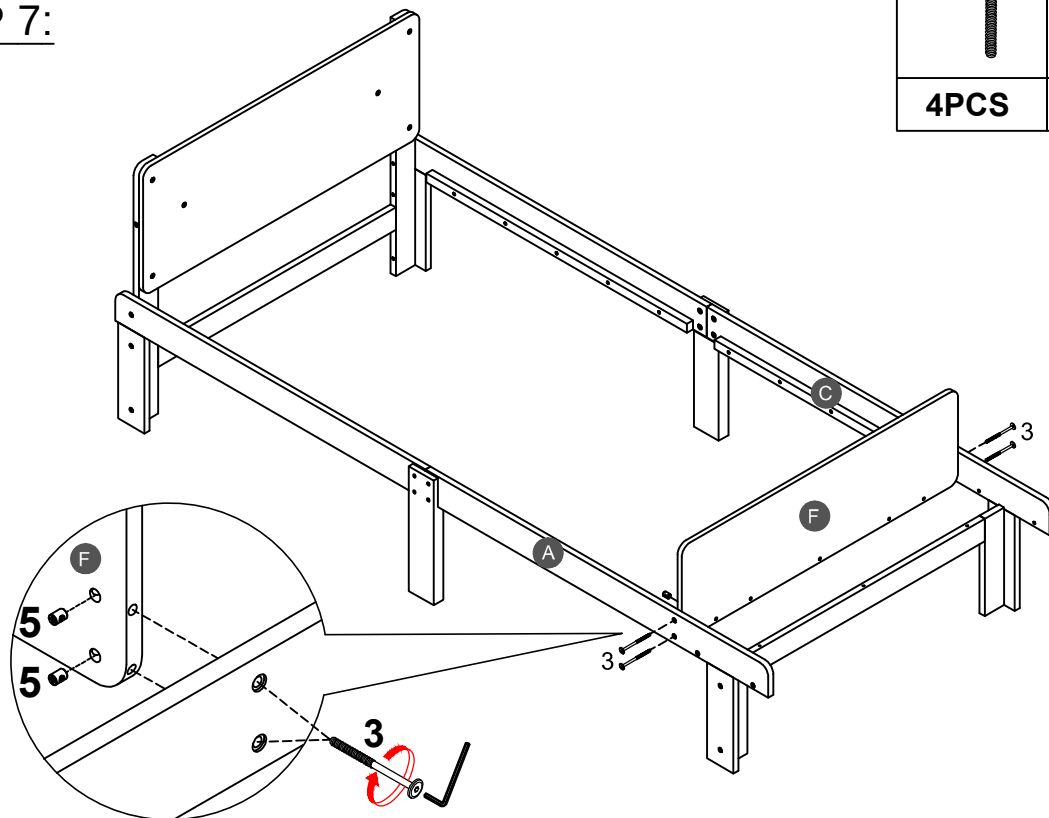


3		5	
4PCS		4PCS	

STEP 8:

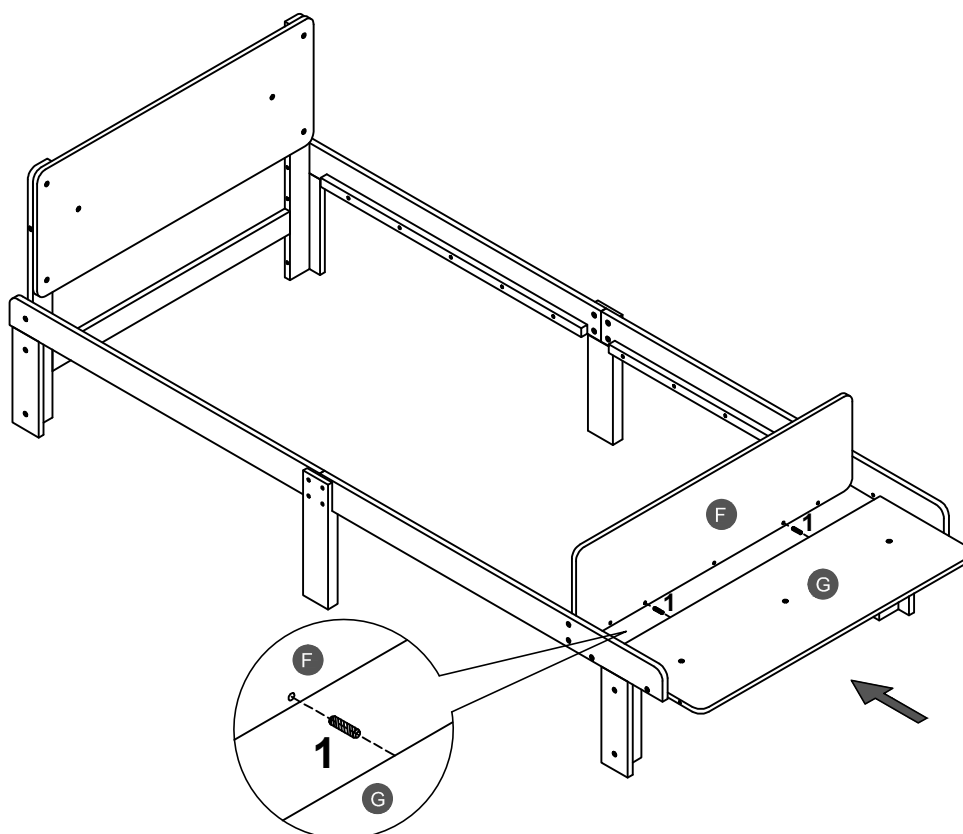


1	
2PCS	


STEP 9:

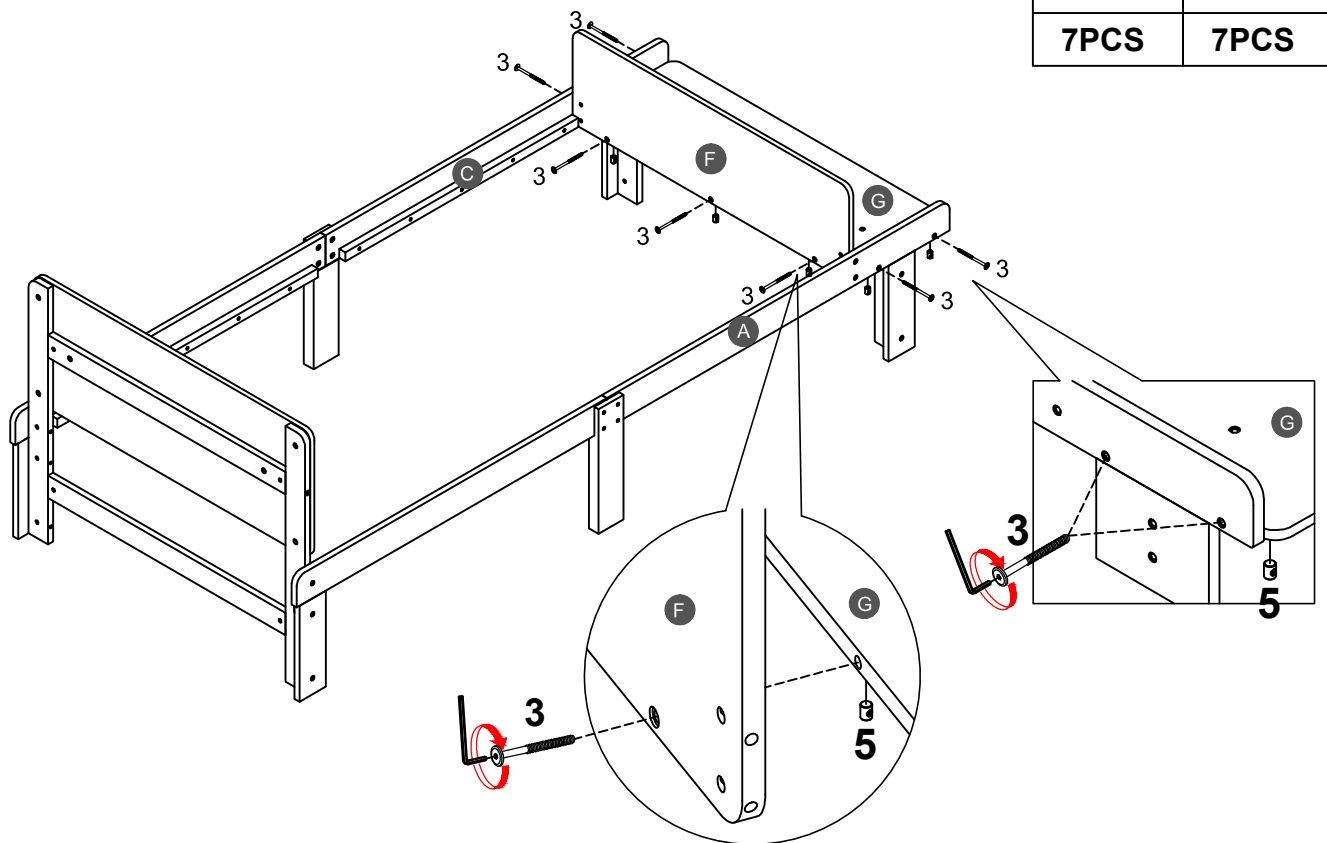

STEP 10:

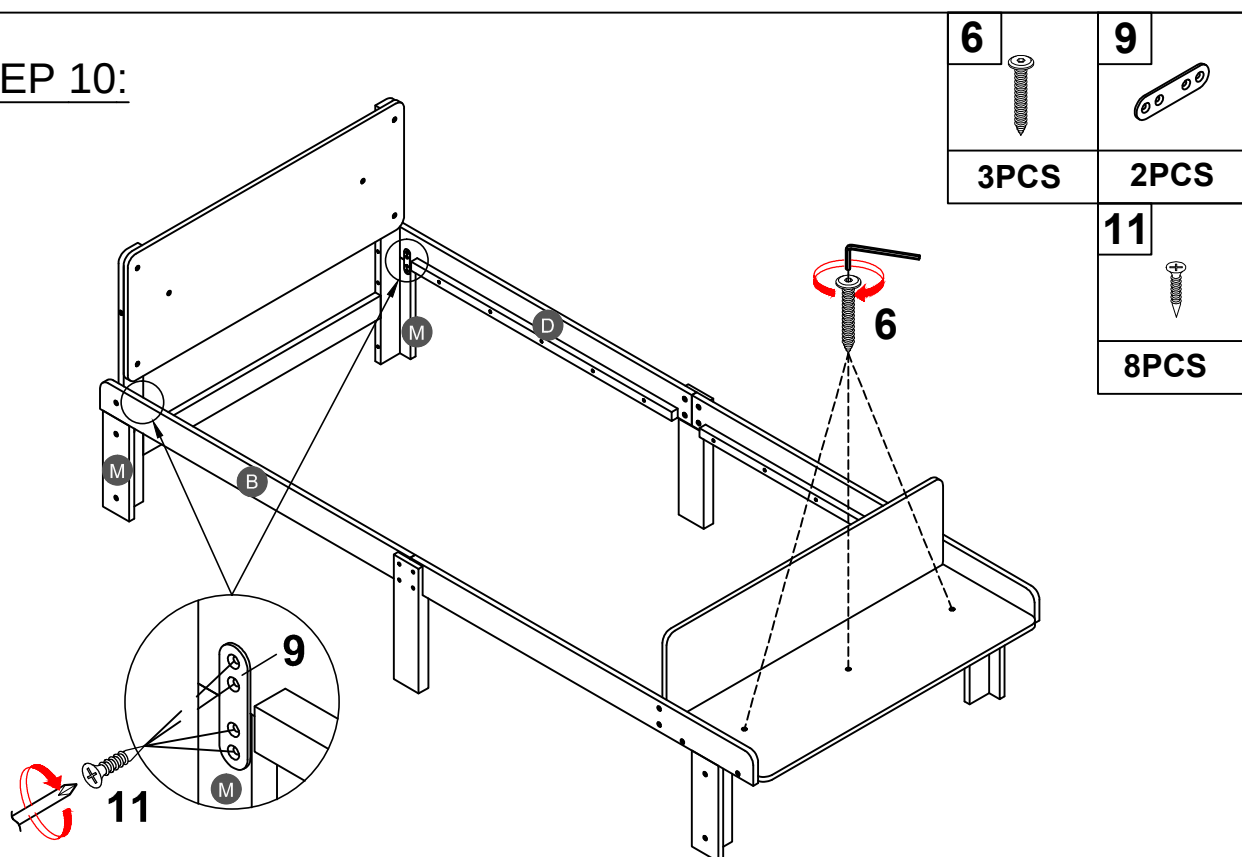


STEP 11:

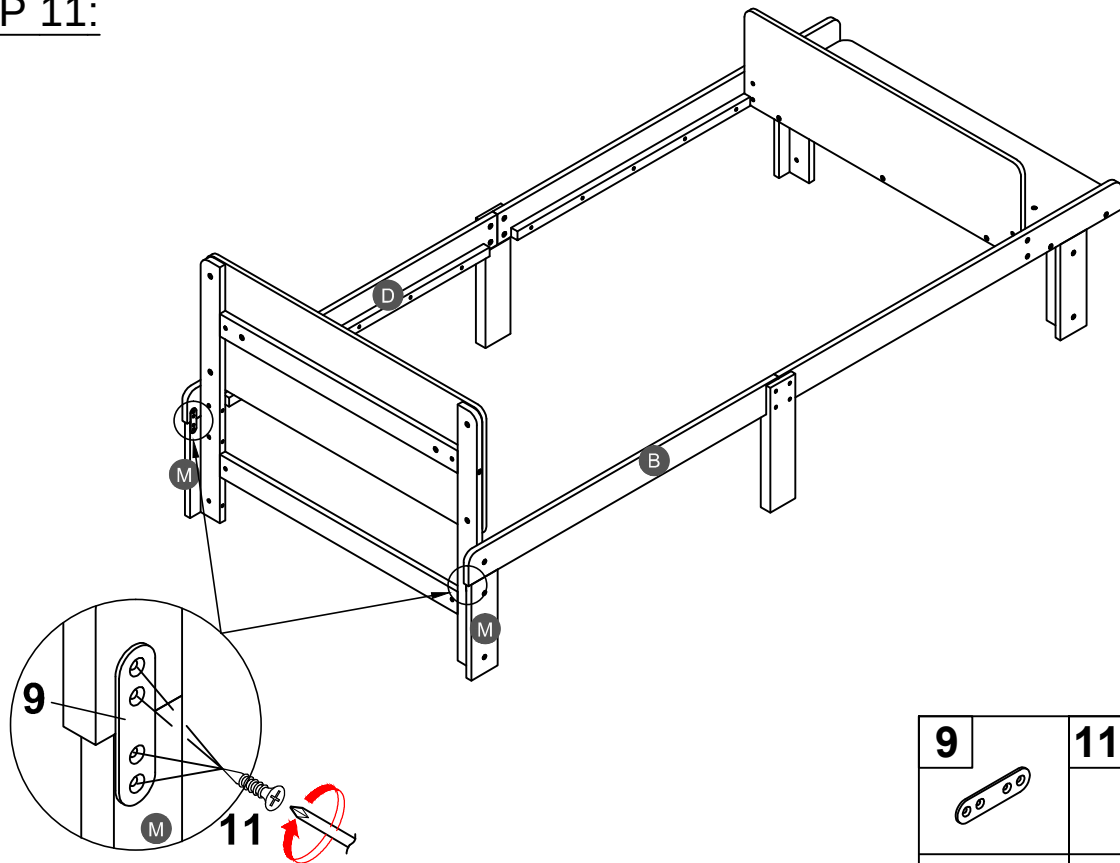



9		11	
2PCS		8PCS	
10		11	
2PCS		4PCS	

STEP 12:

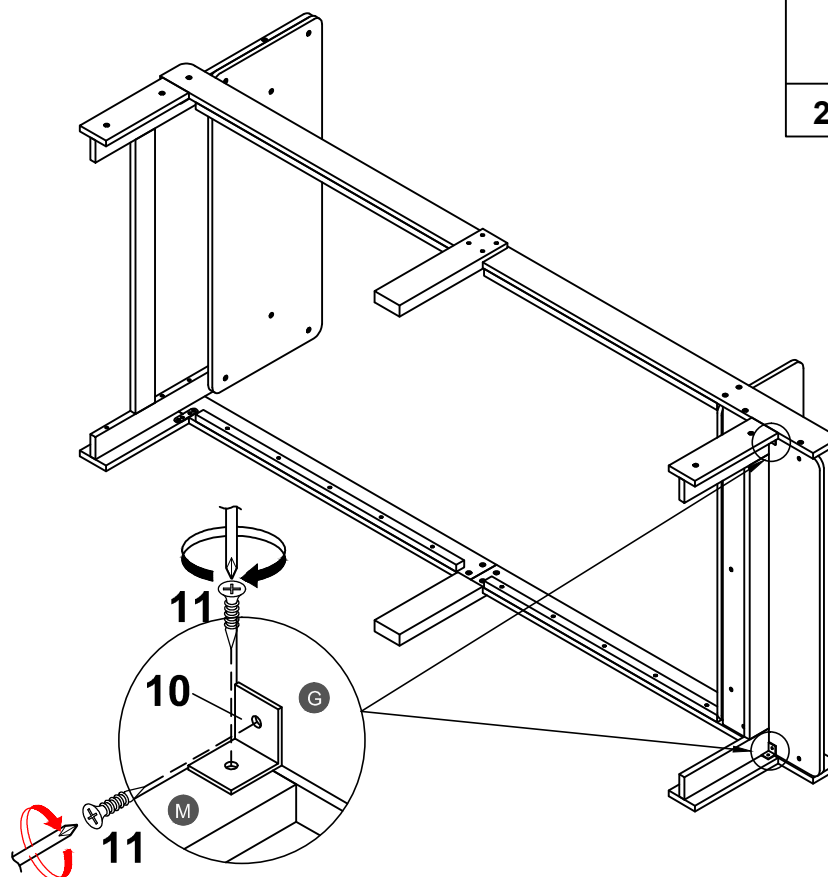

STEP 13:

10	11
	
2PCS	4PCS


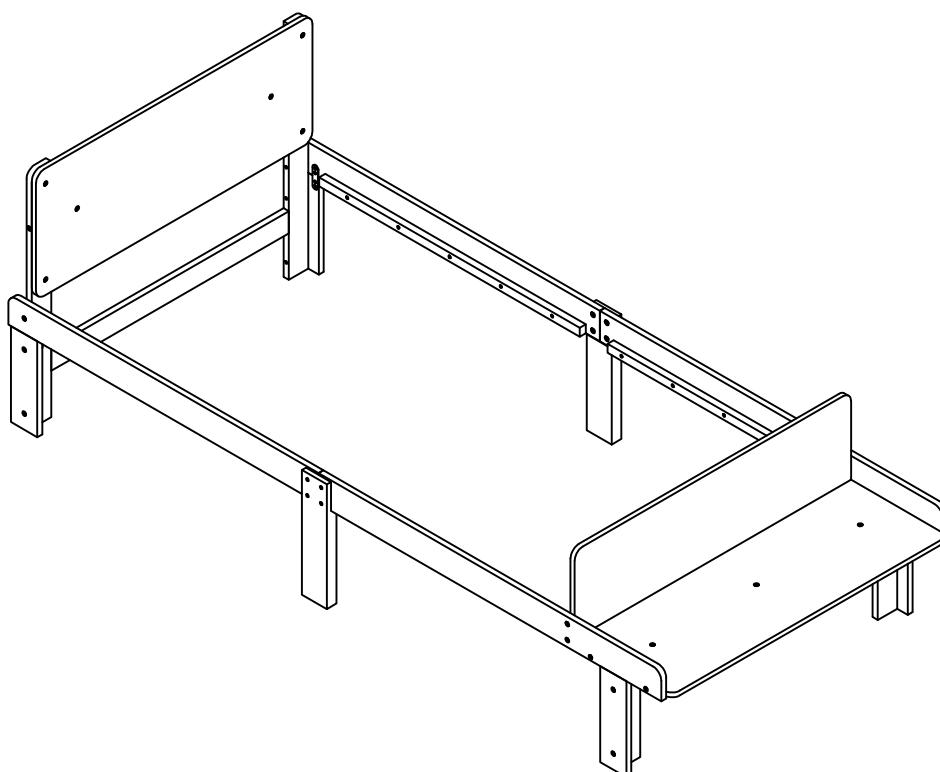
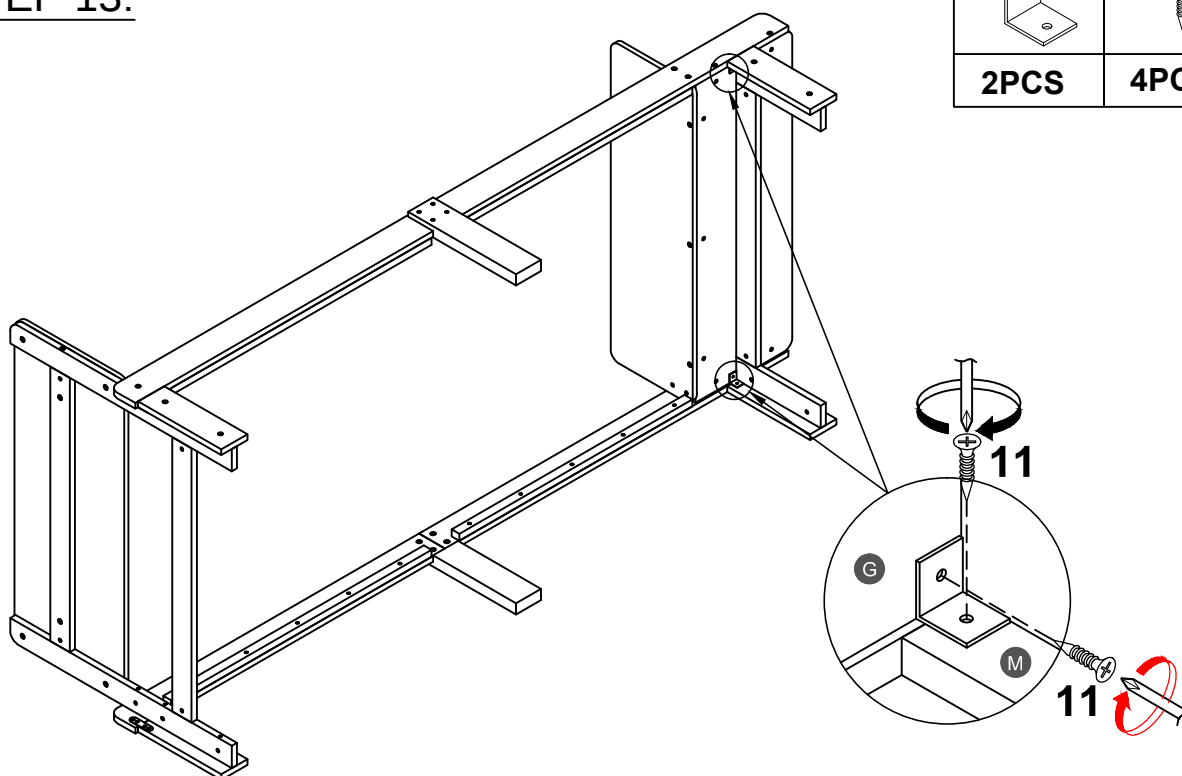


STEP 14:

8



8PCS

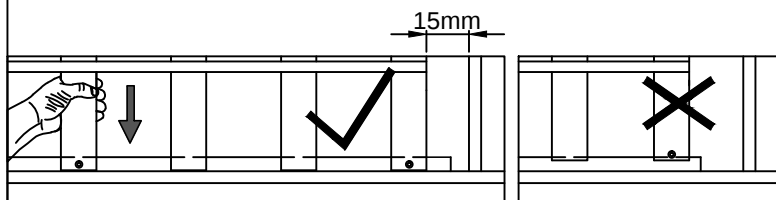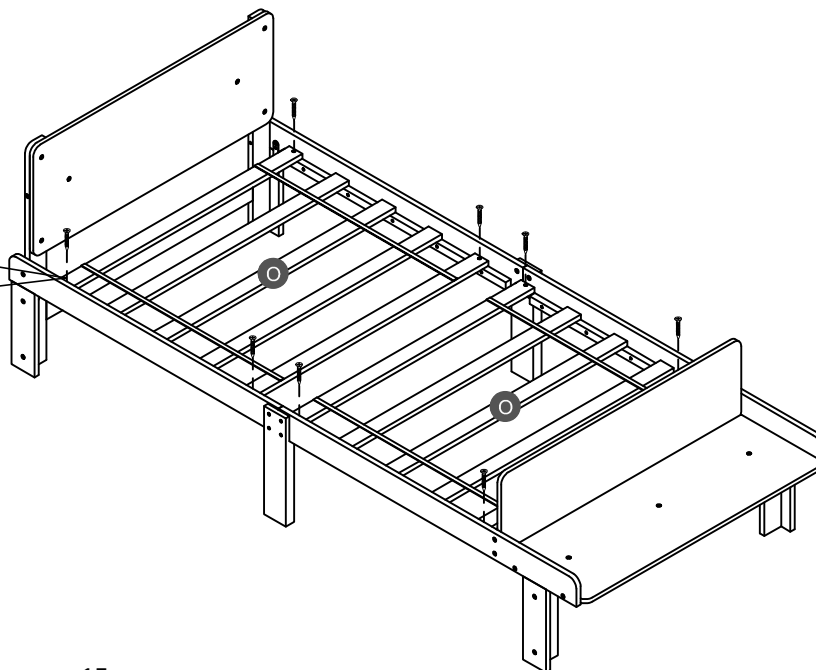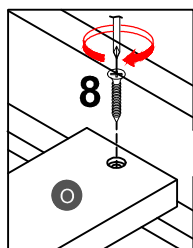

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

