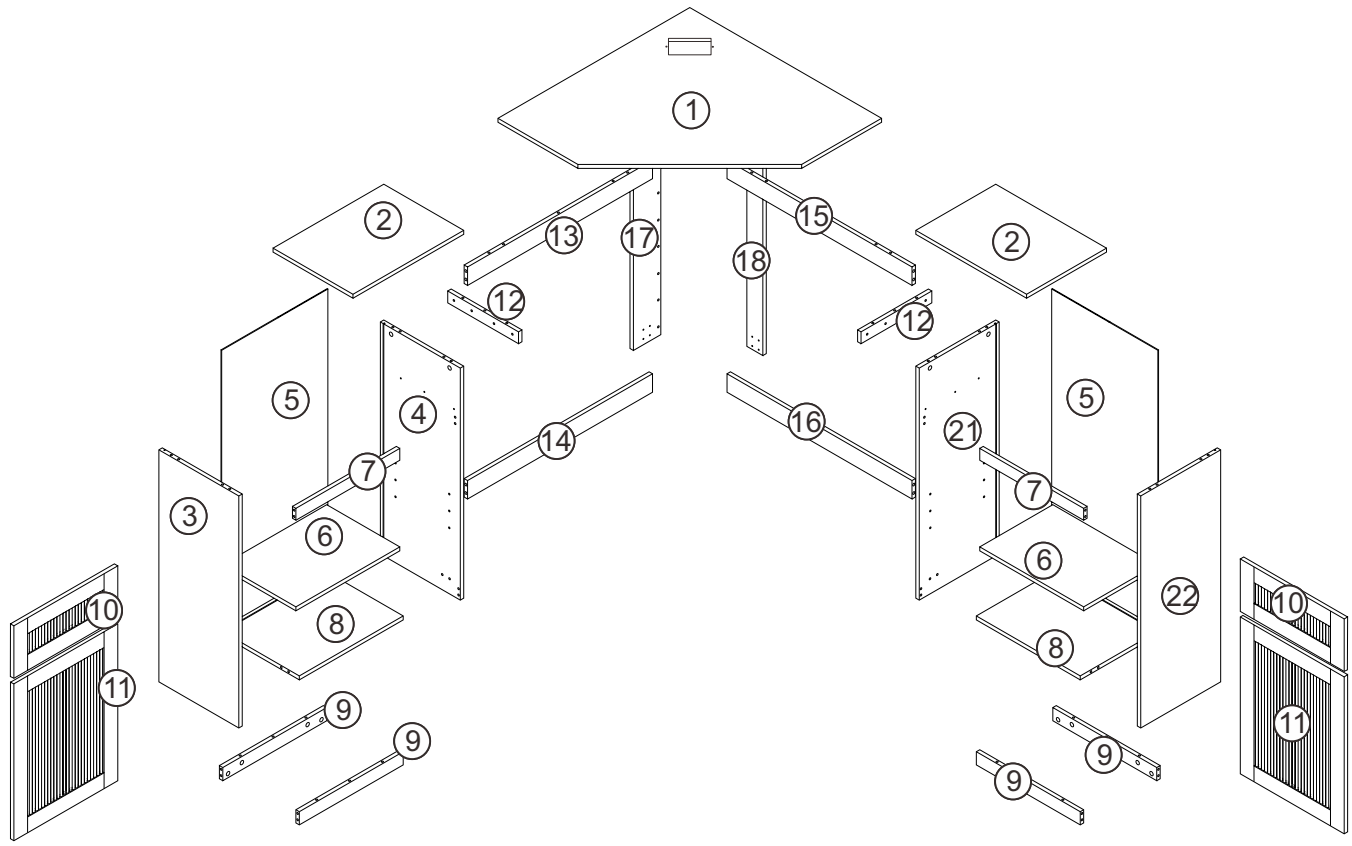
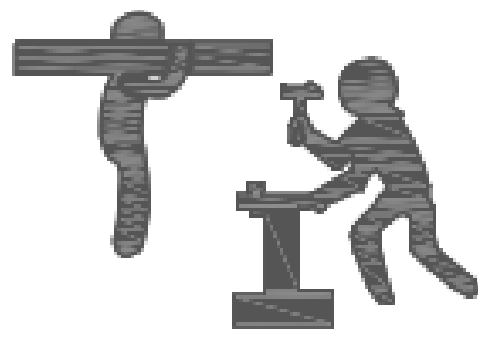
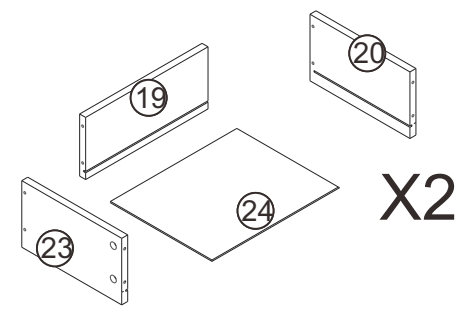
Installation instruction






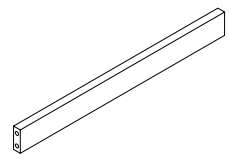
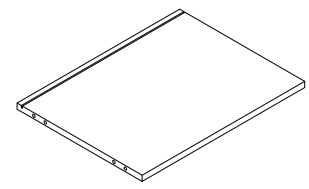
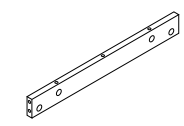
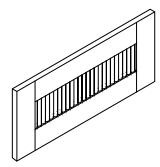
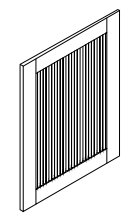

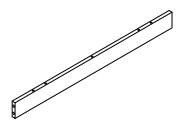
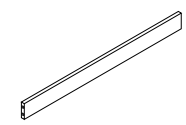
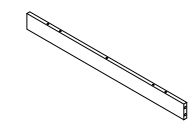
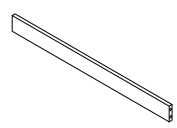




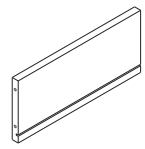
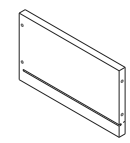

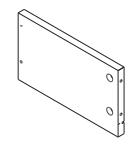
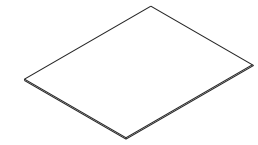


Must be operated by two people





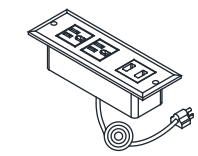


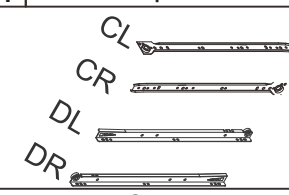

Parts and Operation Elements

					
①	1pc	②	2pcs	③	1pc
					
④	1pc	⑤	2pcs	⑥	2pcs
					
⑦	2pcs	⑧	2pcs	⑨	4pcs
					
⑩	2pcs	⑪	2pcs	⑫	2pcs
					
⑬	2pc	⑭	1pc	⑮	1pc
					
⑯	1pc	⑰	1pc	⑱	1pc

Farts and Operation Elements

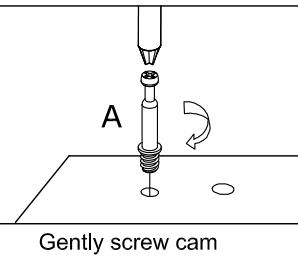
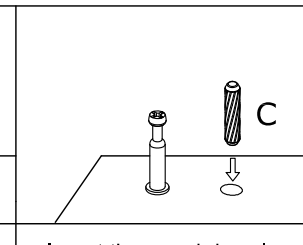
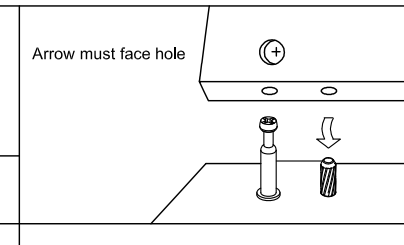
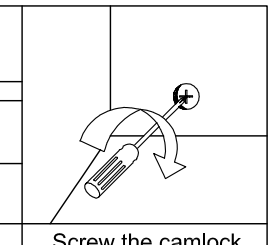
					
⑲	2pcs	⑳	2pcs	㉑	1pc
					
㉒	1pc	㉓	2pcs	㉔	2pcs

Hardware

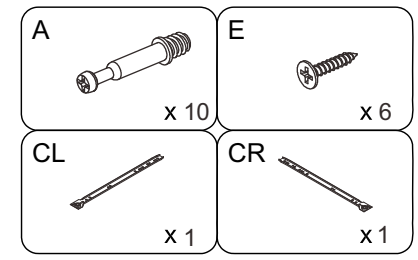
 Cam bolt		 Cam Lock		 6x30mm Wood dowel		 4x35mm screw	
A	64+1pcs	B	64+1pcs	C	44+1pcs	D	13+1pcs
 3x12mm screw		 3.5x12mm screw		 4x20mm screw			
E	22+1pcs	F	24+1pcs	G	24+1pcs	H	1 pc
				 3x14mm			
I	8pcs	J	4pcs	K	8pcs	2 pcs	
							
L	4pcs						

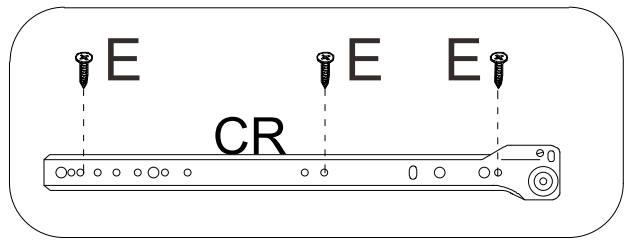
SPARE BAG

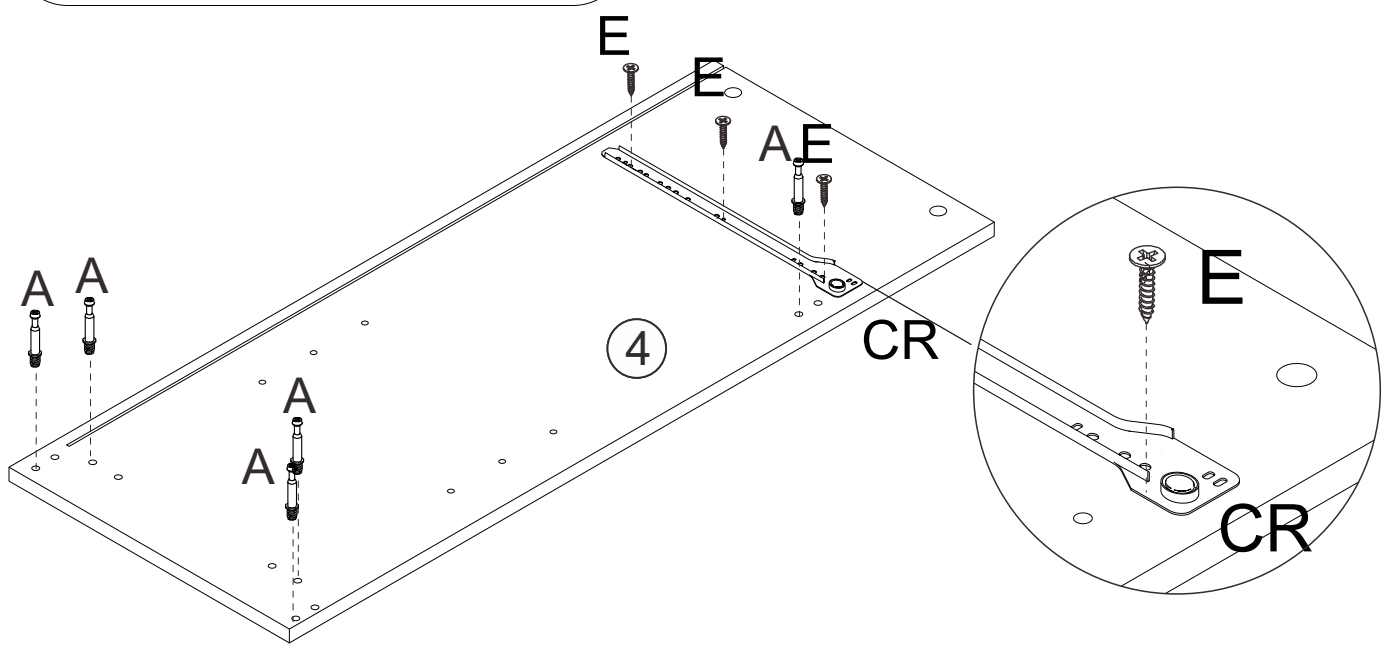
THE SPARE BAG INCLUED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

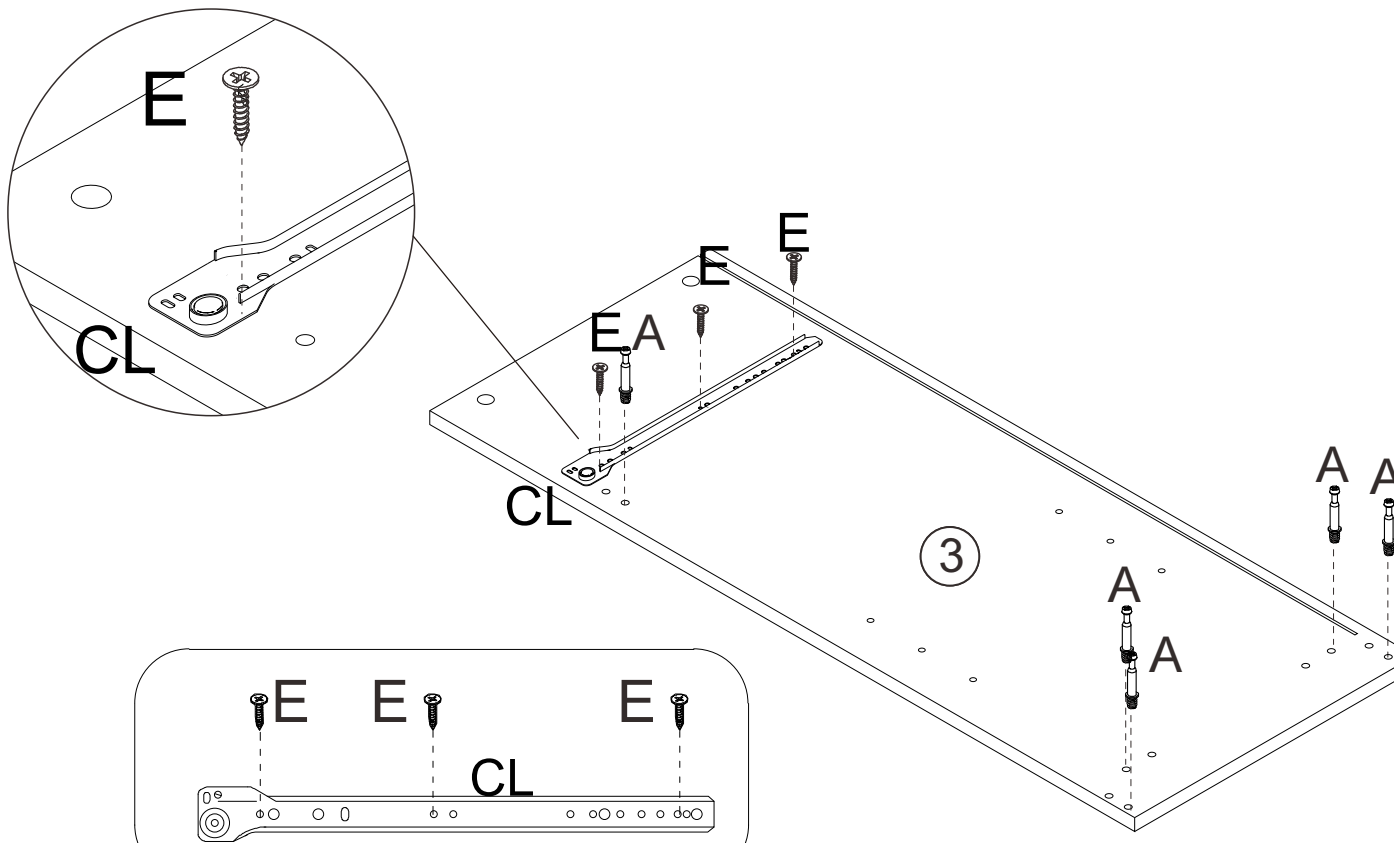
			
Gently screw cam bolt into the threaded anchor	Insert the wood dowel halfway into hole		Screw the camlock firmly into locked position.

1

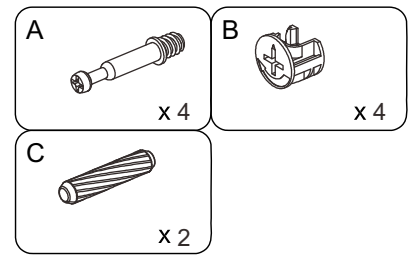

A
x 10
E
x 6
CL
x 1
CR
x 1

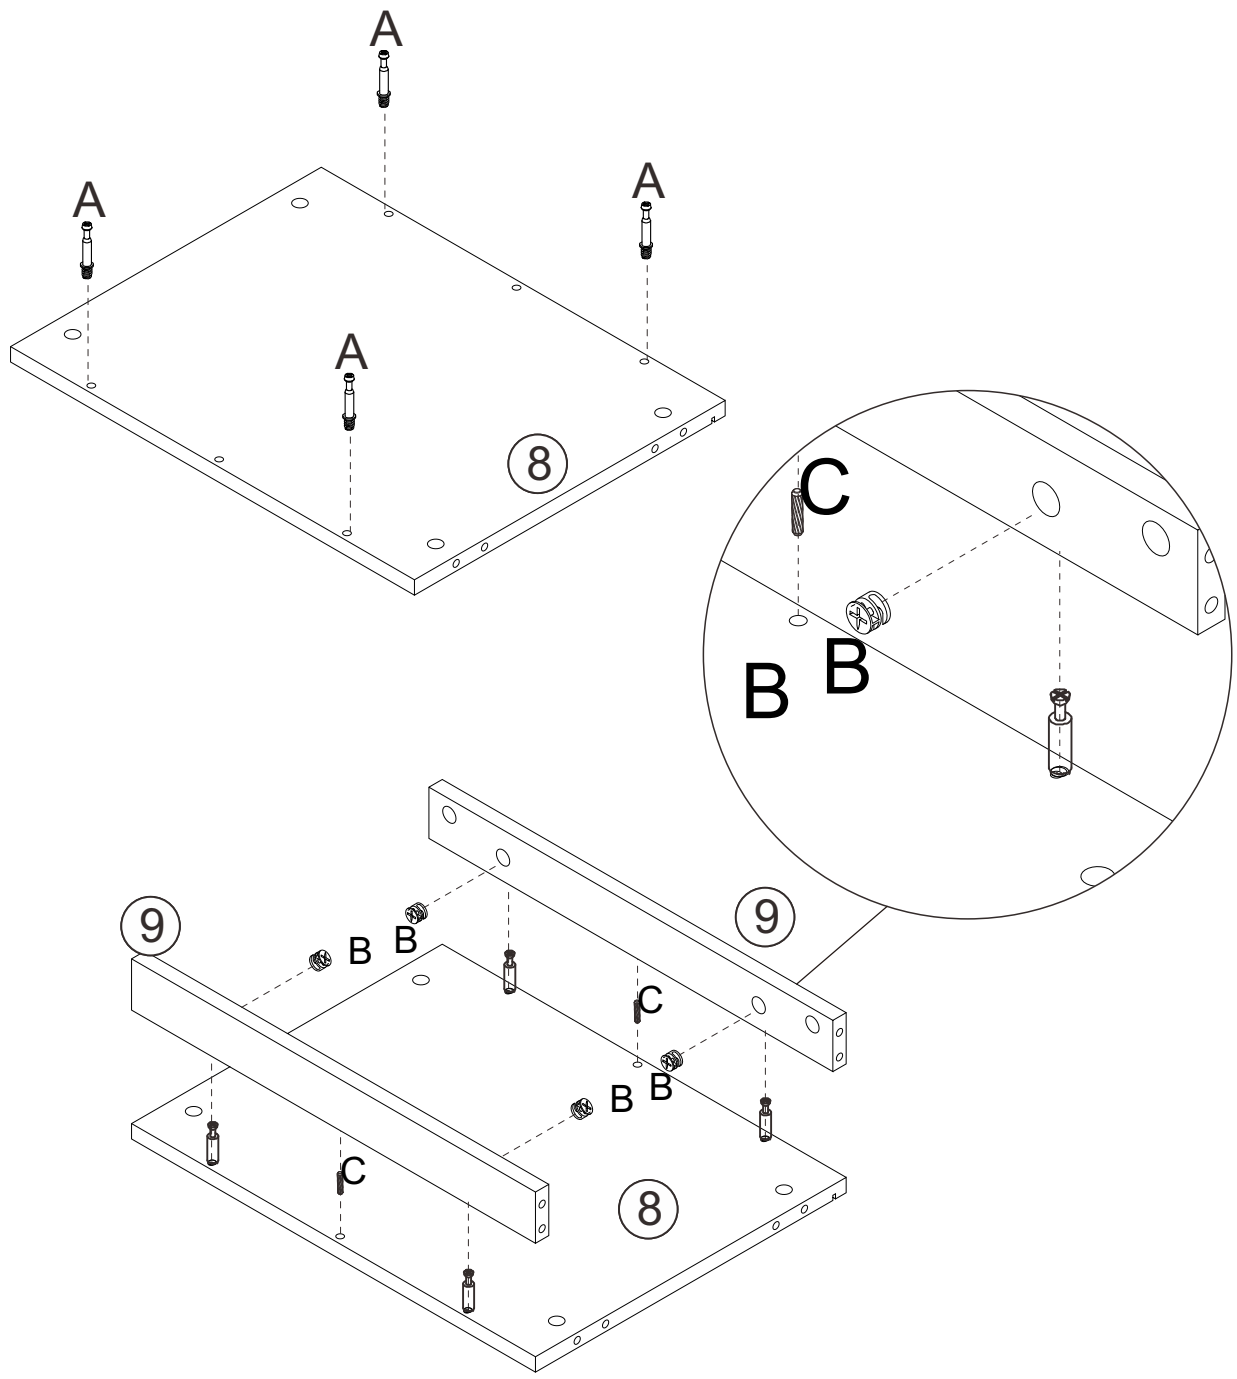

E
E
E
CR


E
E
A
E
A
A
A
A
4
CR
E
CR

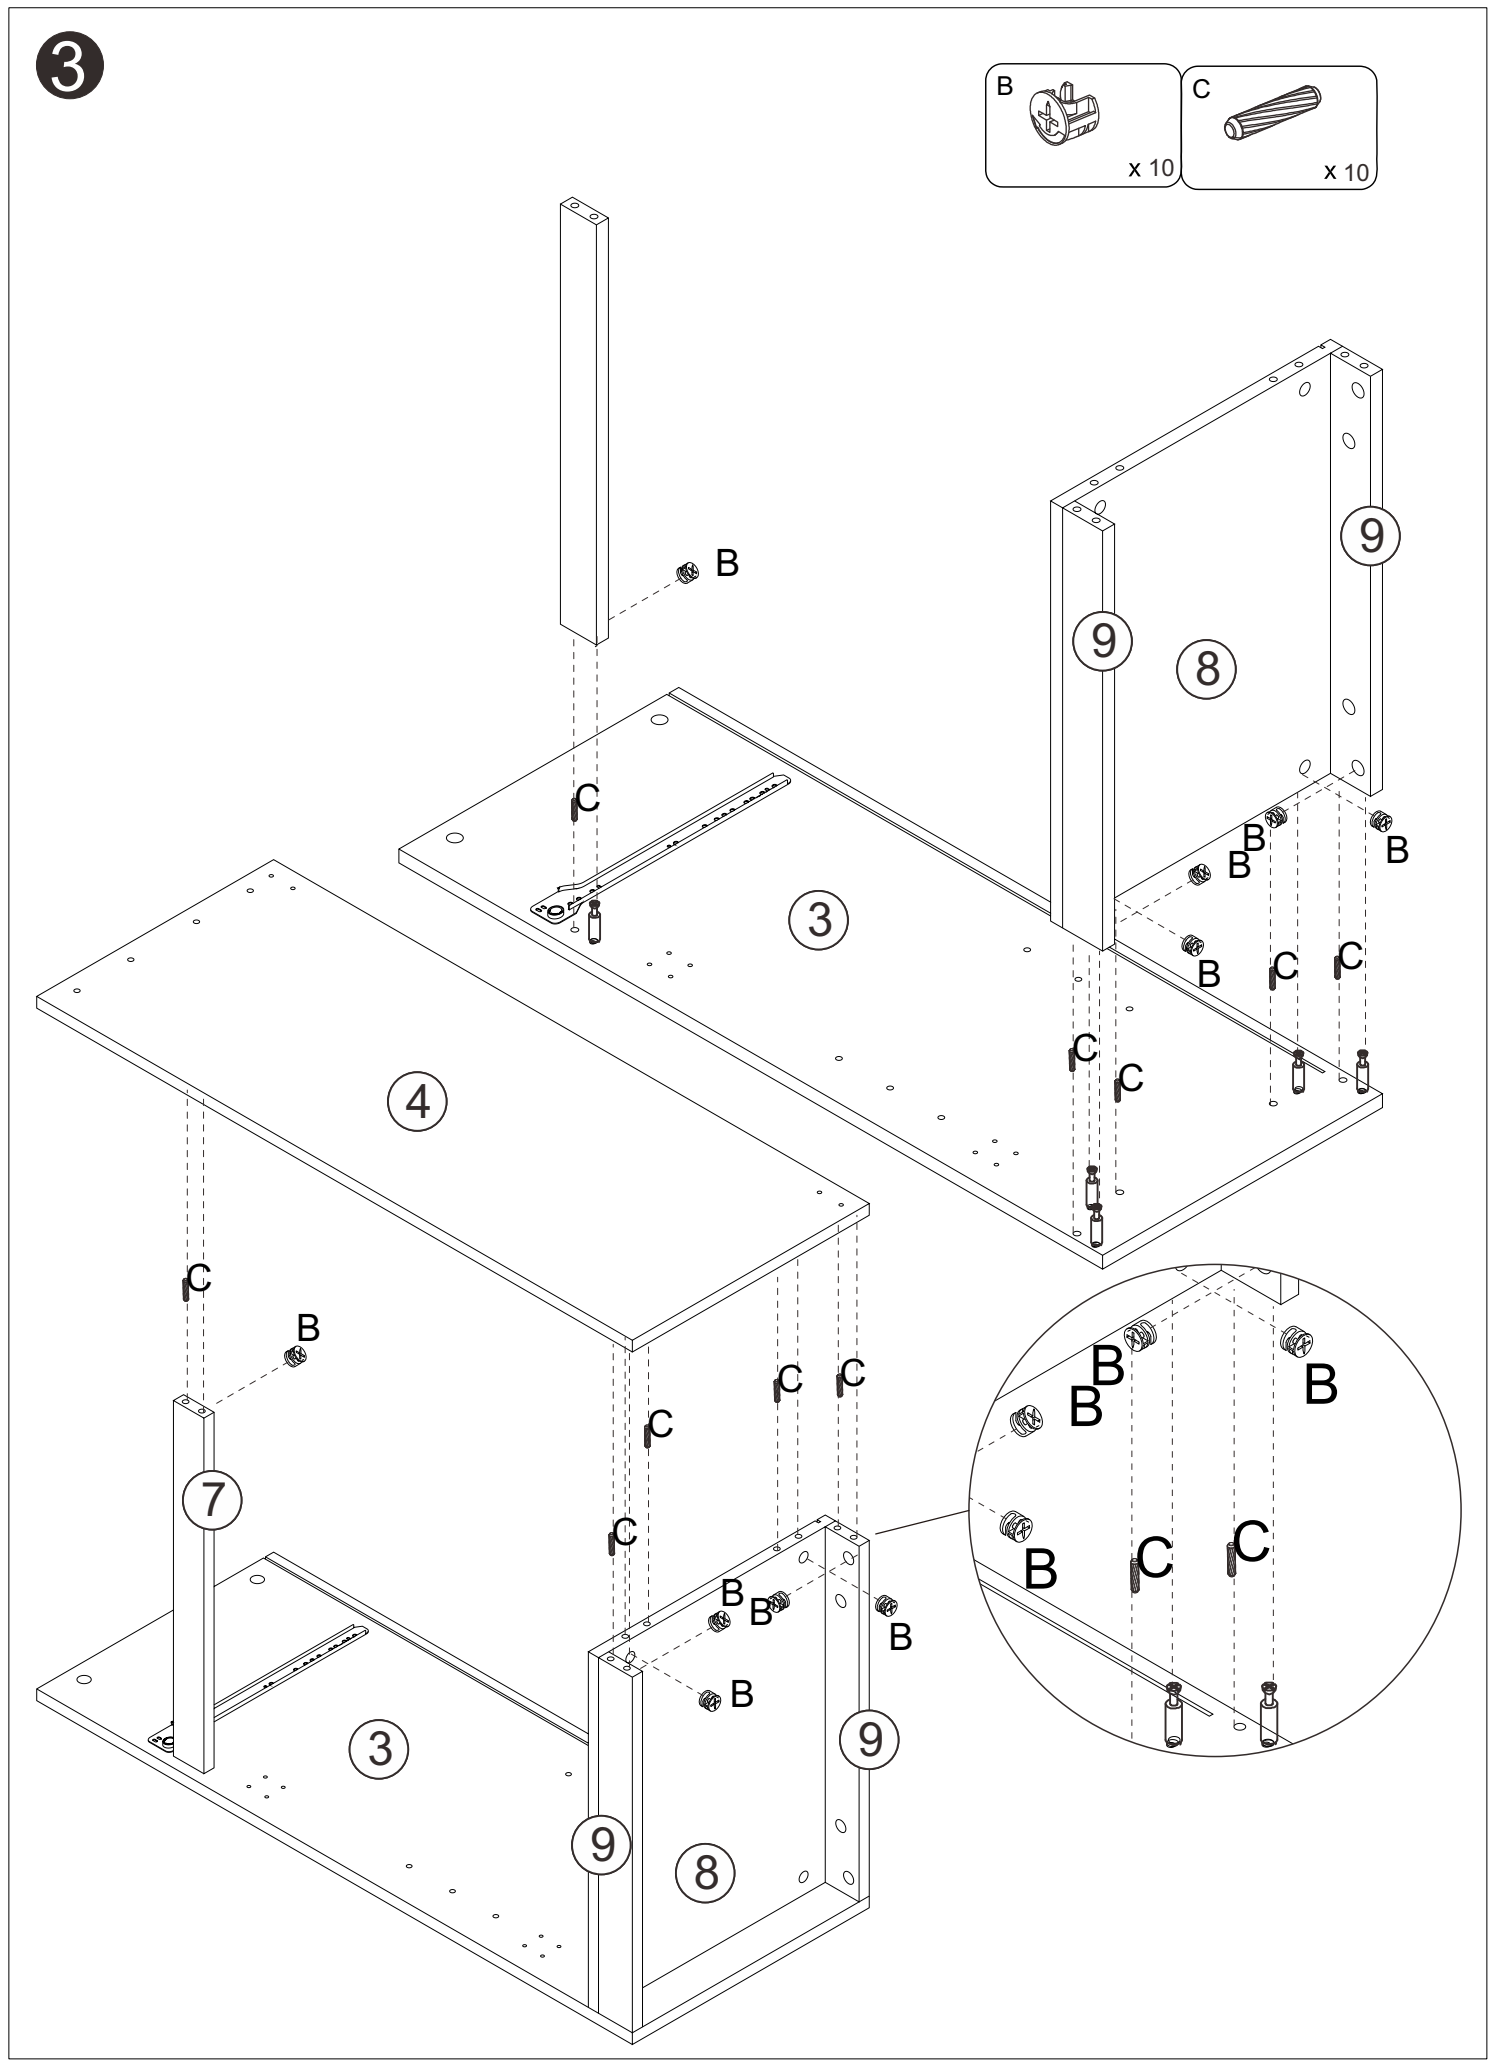

E
CL
E
E
E
A
CL
A
A
3
A
A
E
E
E
CL

2

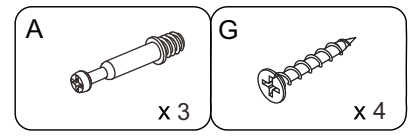


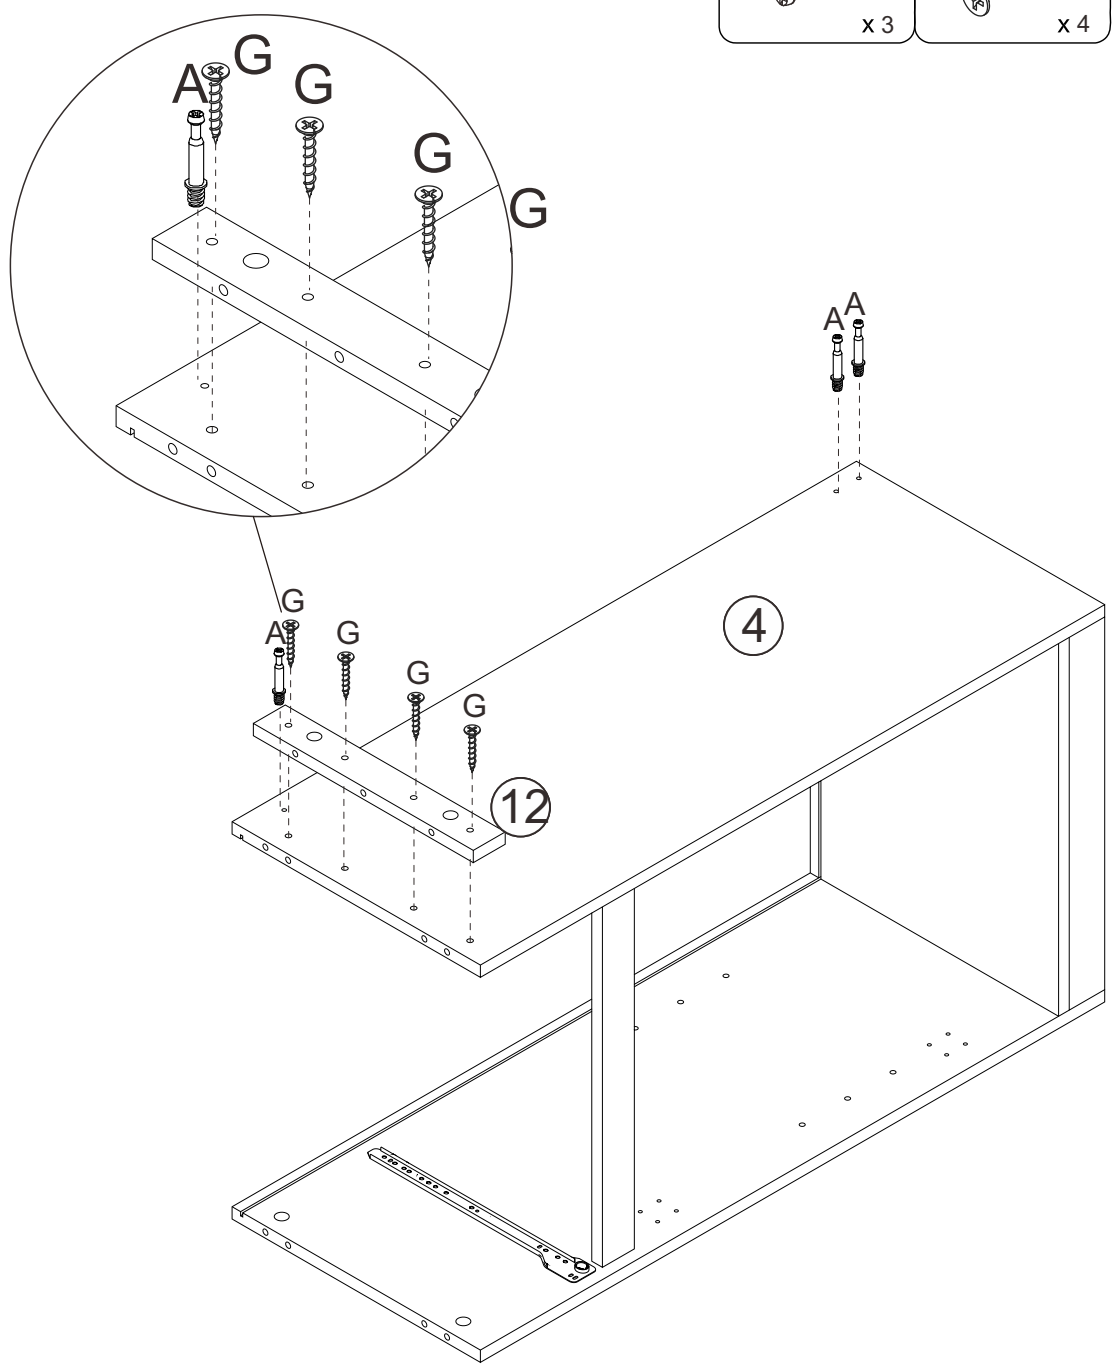


3

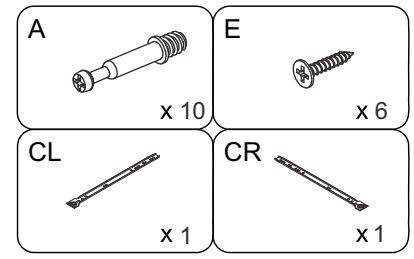


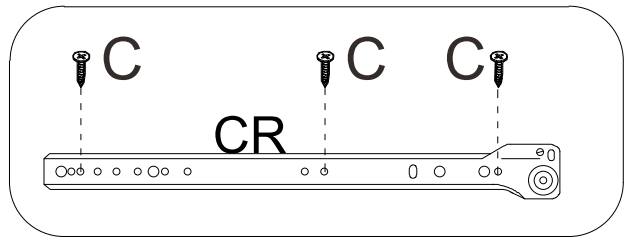
4

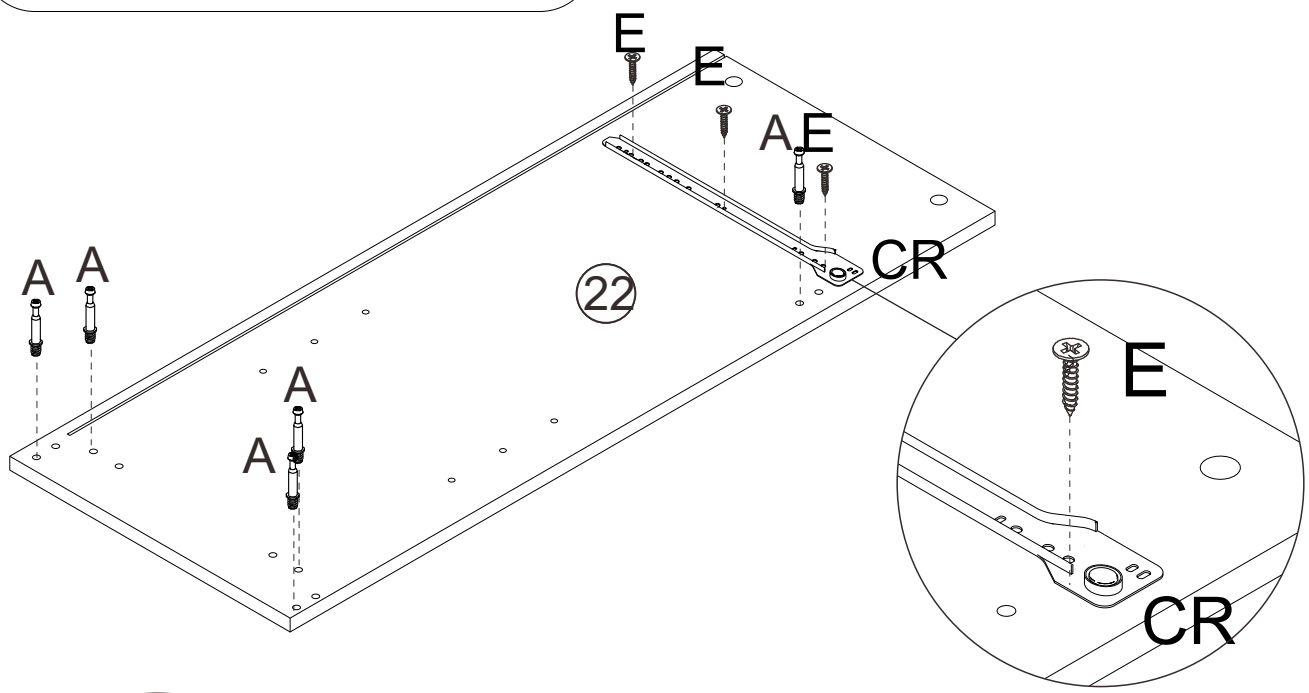


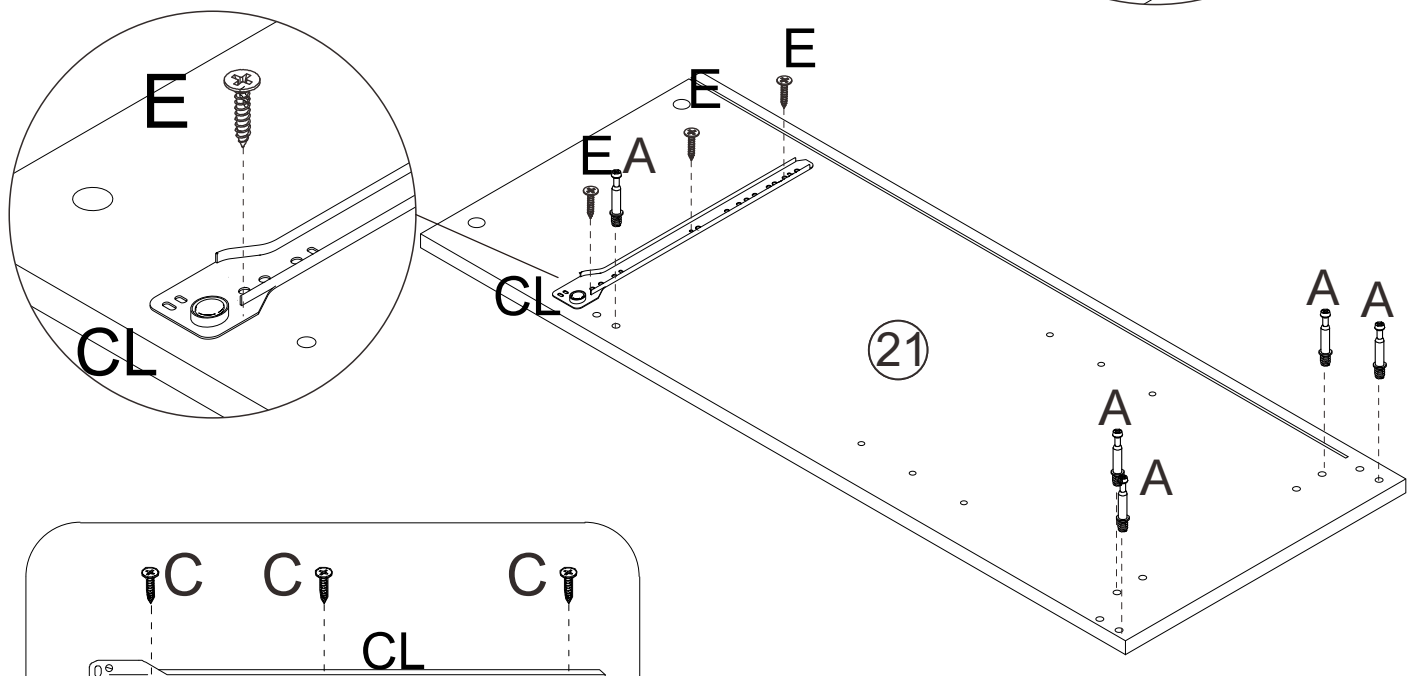


5


A
x 10
E
x 6
CL
x 1
CR
x 1

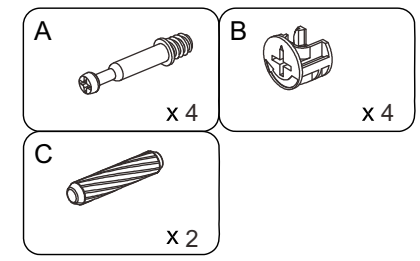

C
C
C
CR

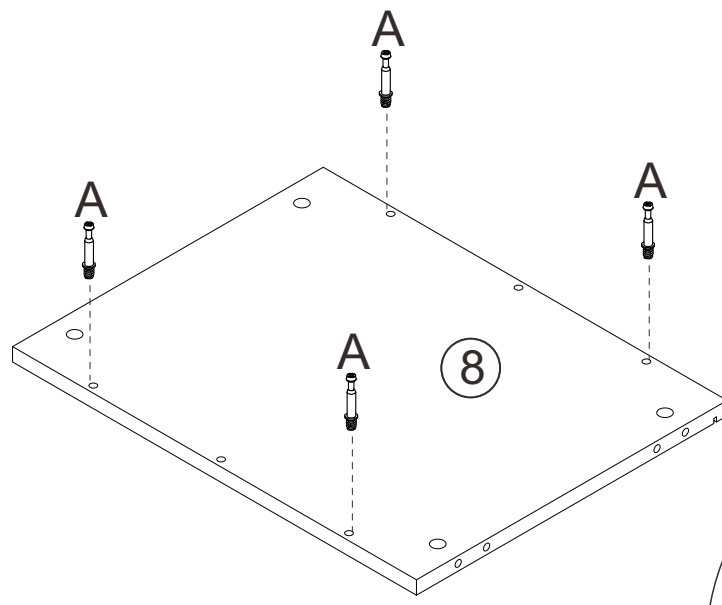

E
E
A
E
CR
A
A
22
A
A
E
CR

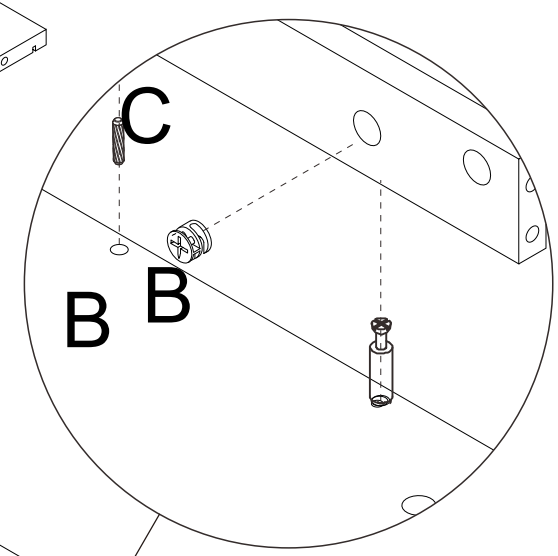

E
CL
E
E
E
A
CL
21
A
A
A
A

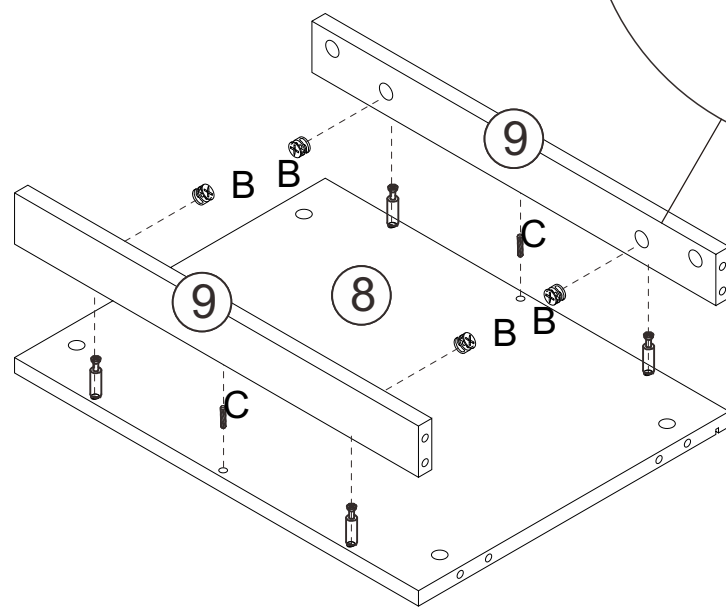
C
C
C
CL

6

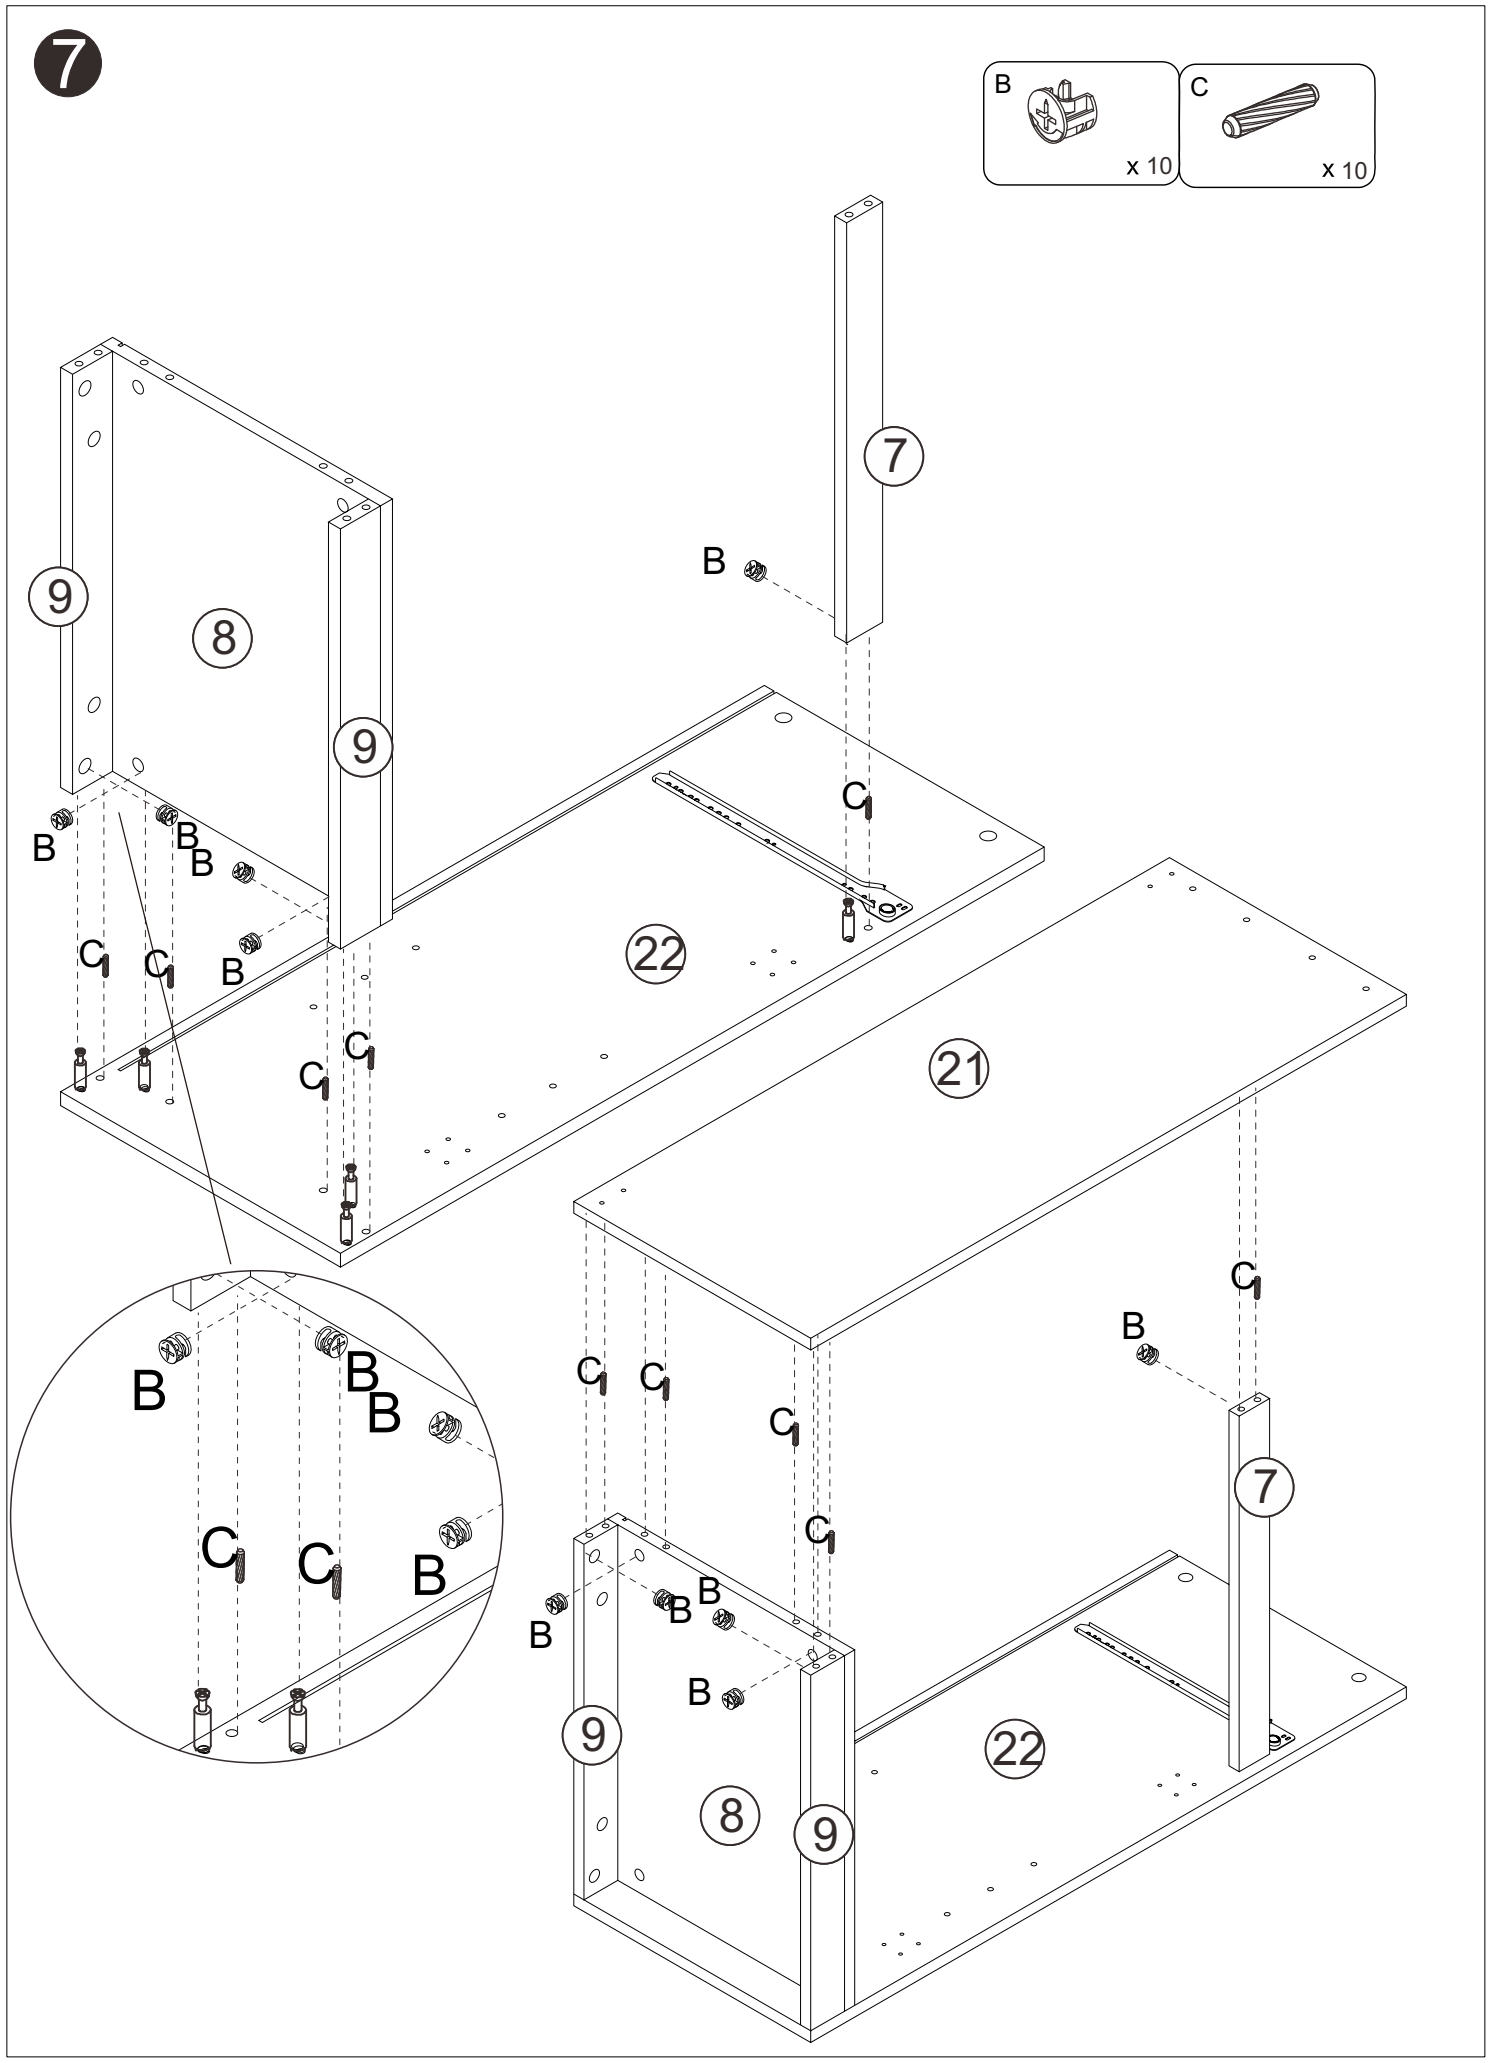




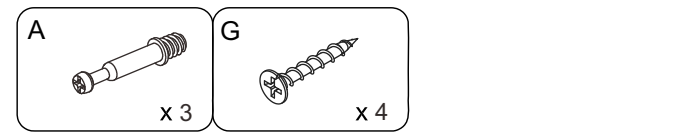


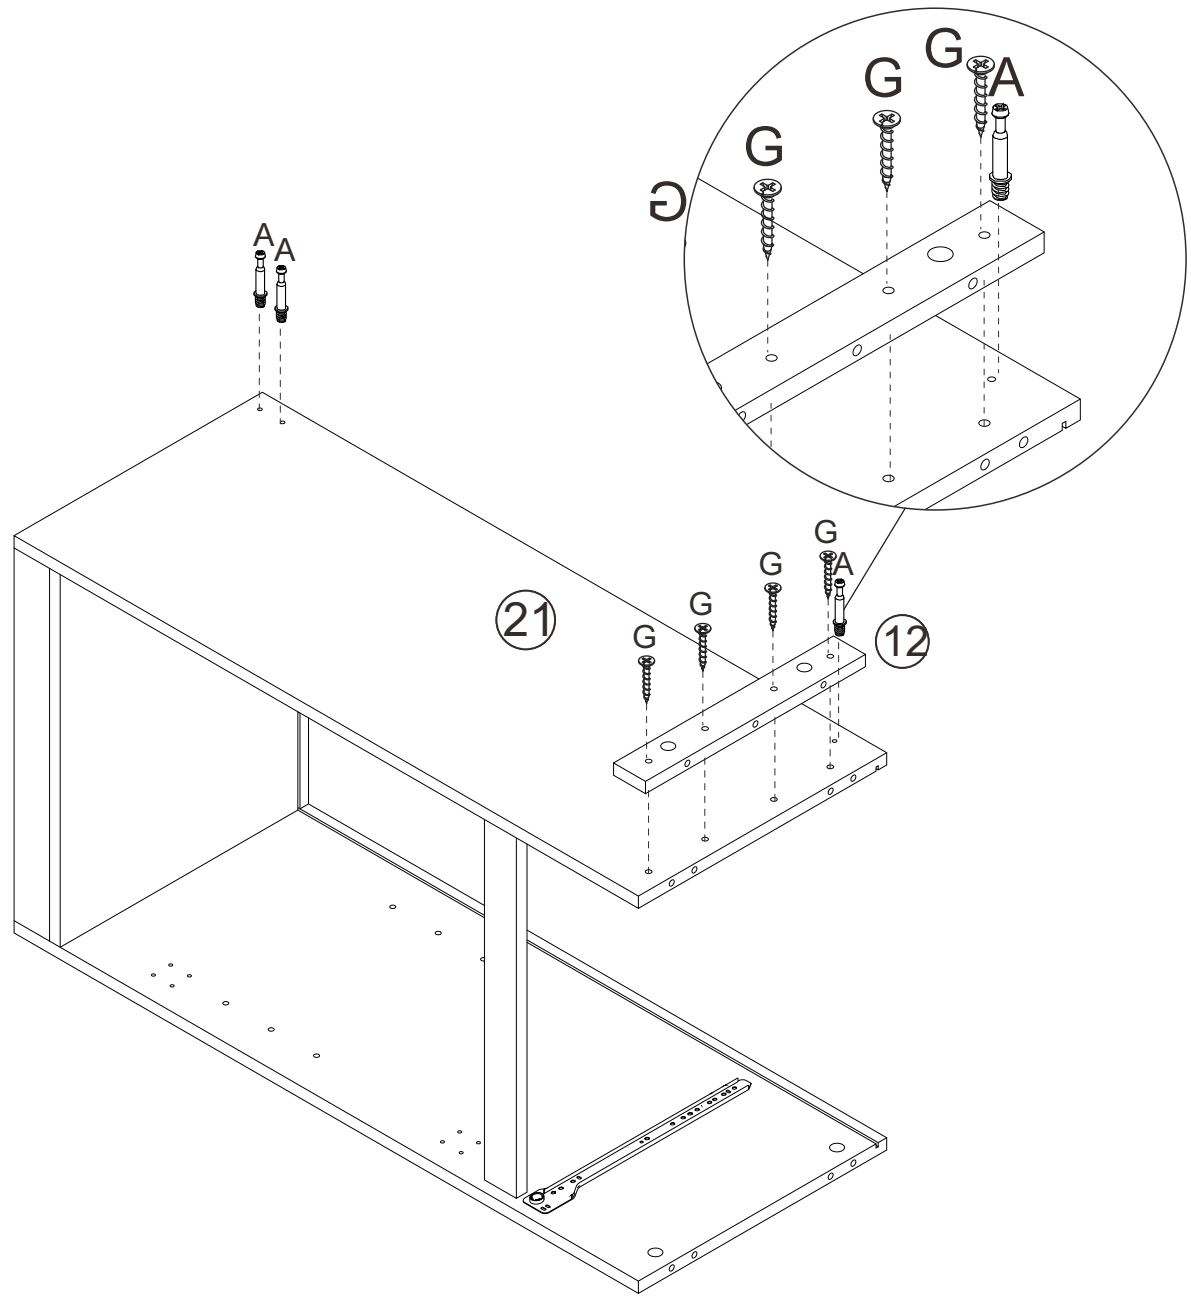


7

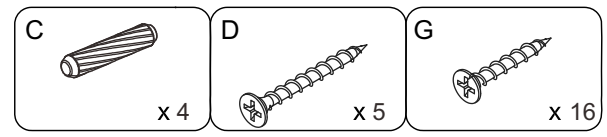


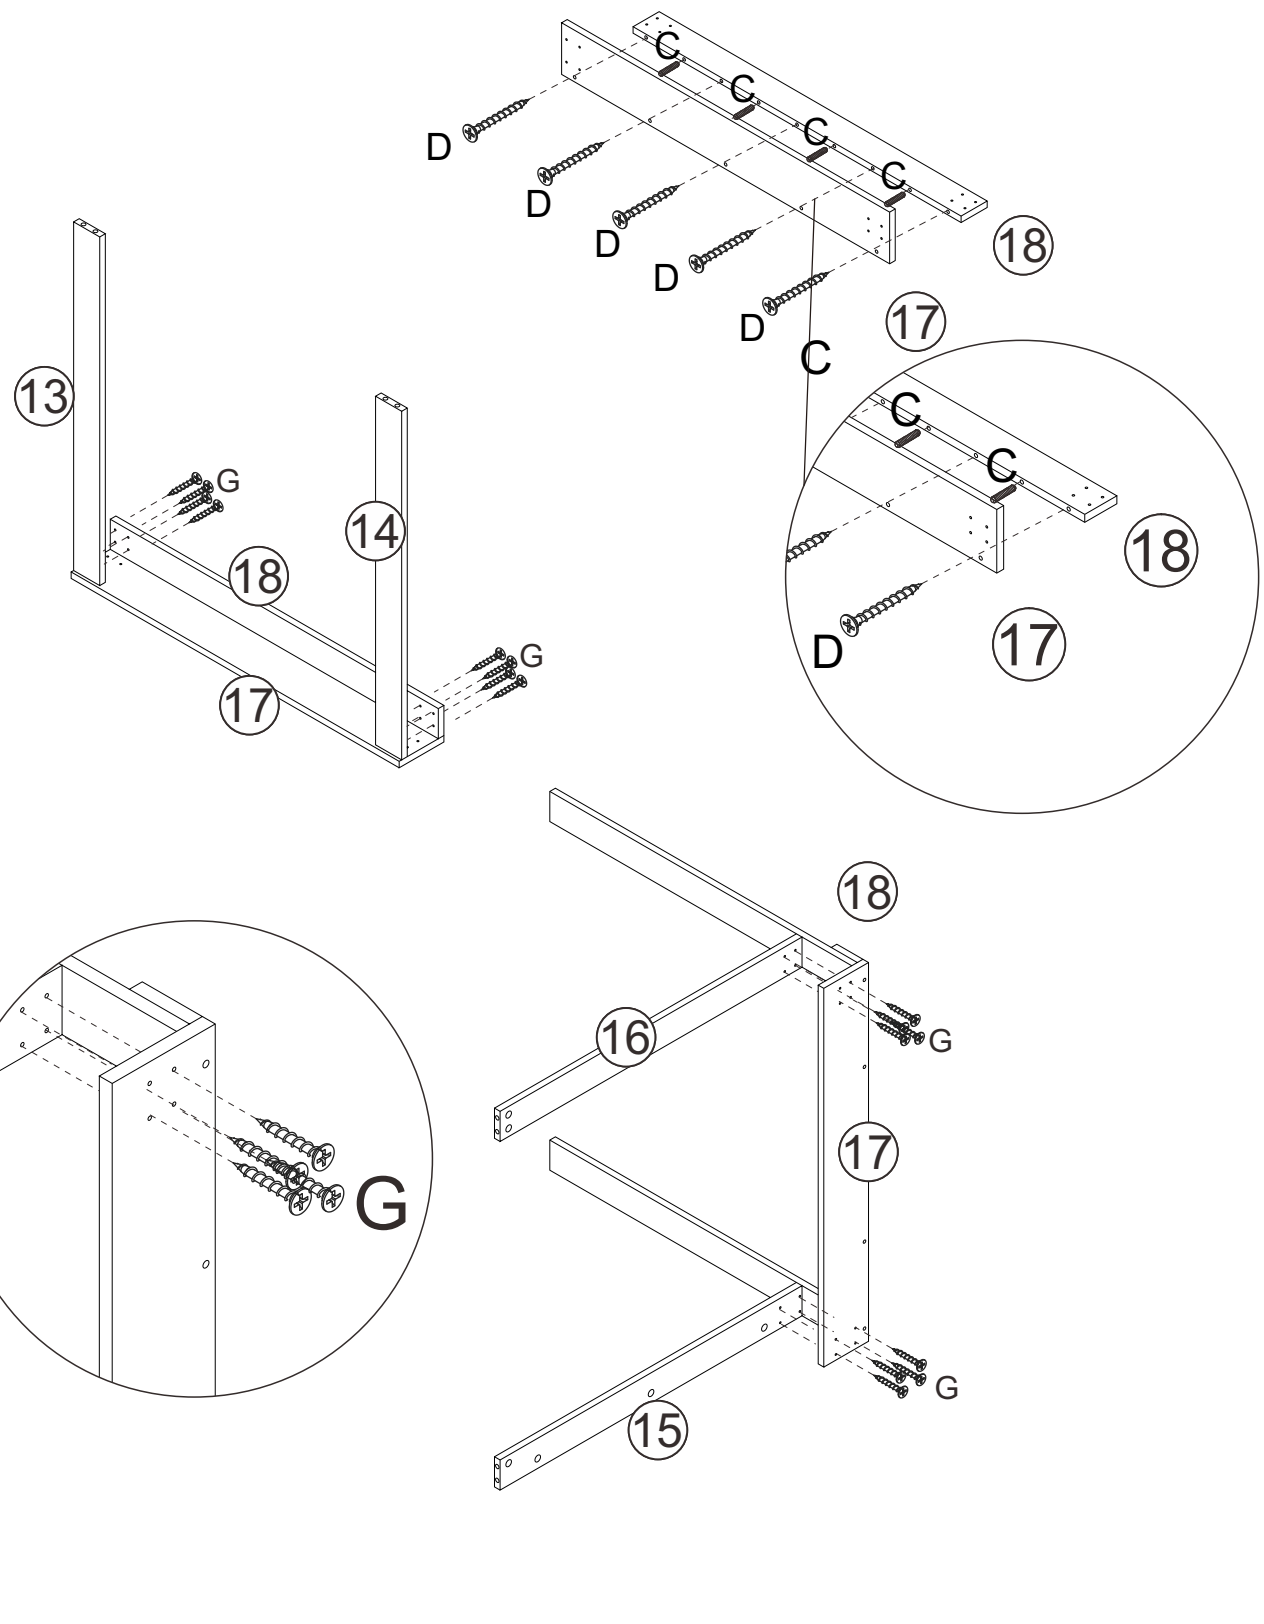
8



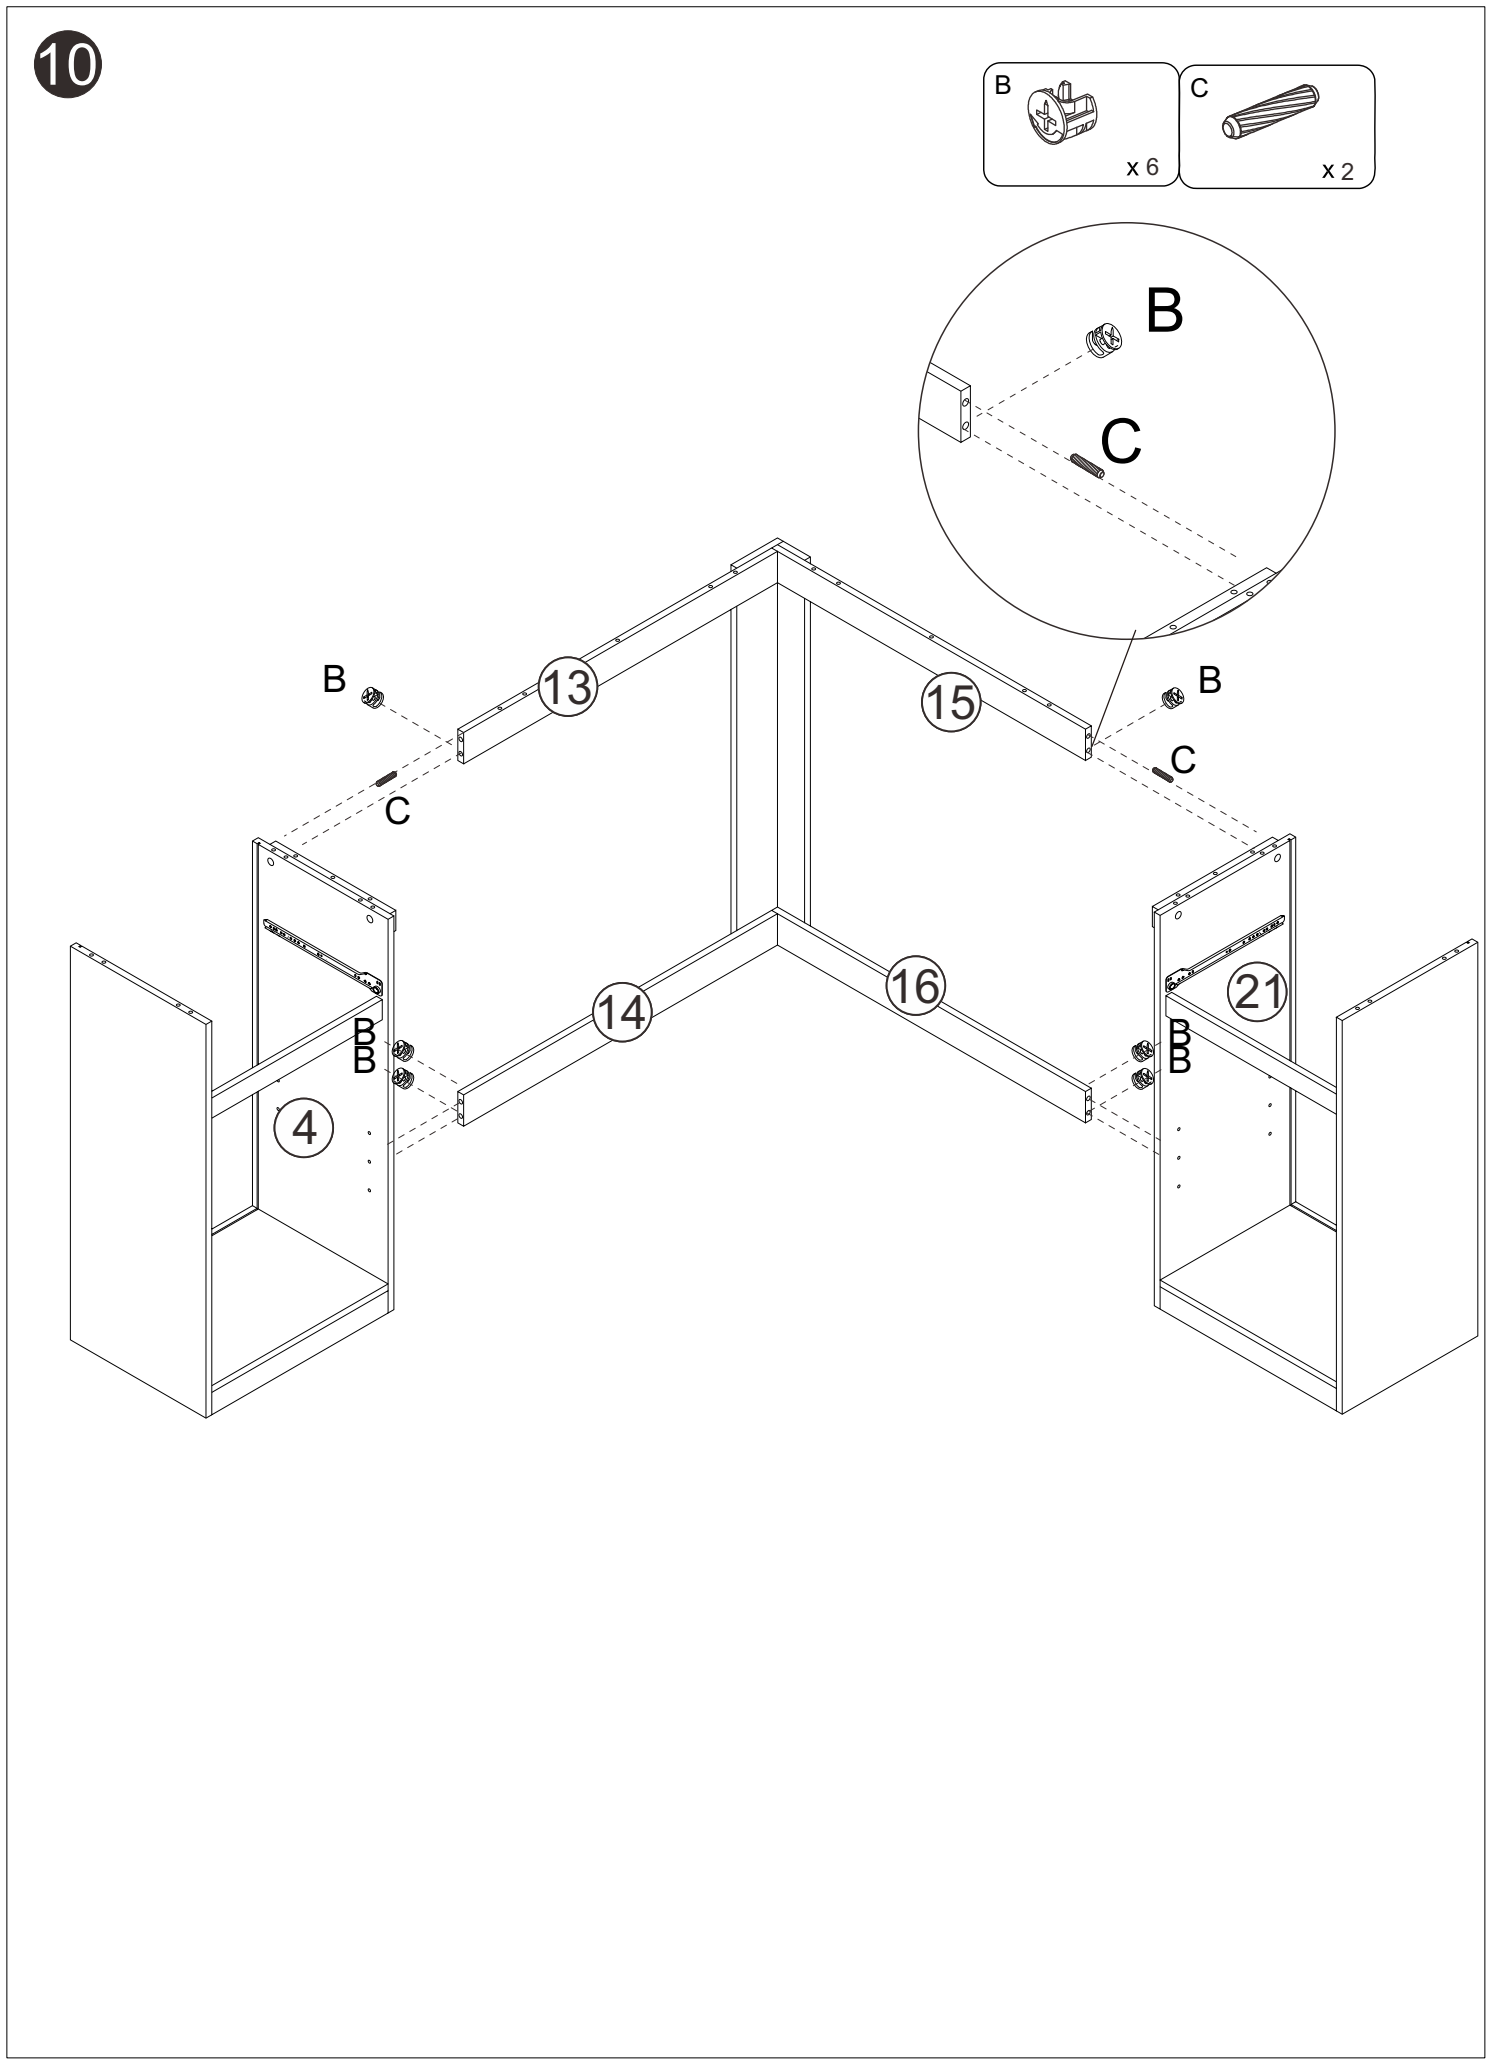


9

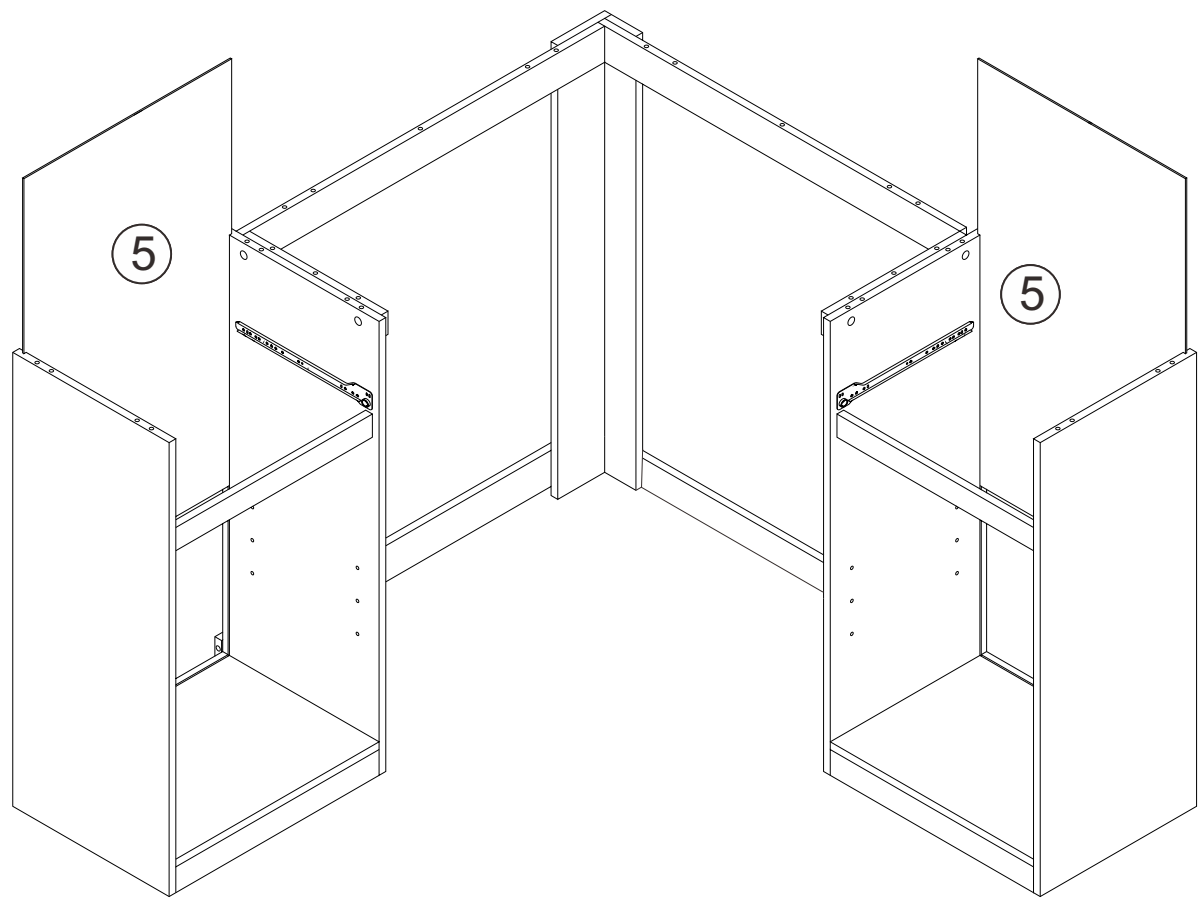

C
x 4
D
x 5
G
x 16


C
C
C
C
D
D
D
D
D
18
17
C
C
C
18
D
17
13
G
14
18
G
17
G
18
16
G
17
G
15

10



11

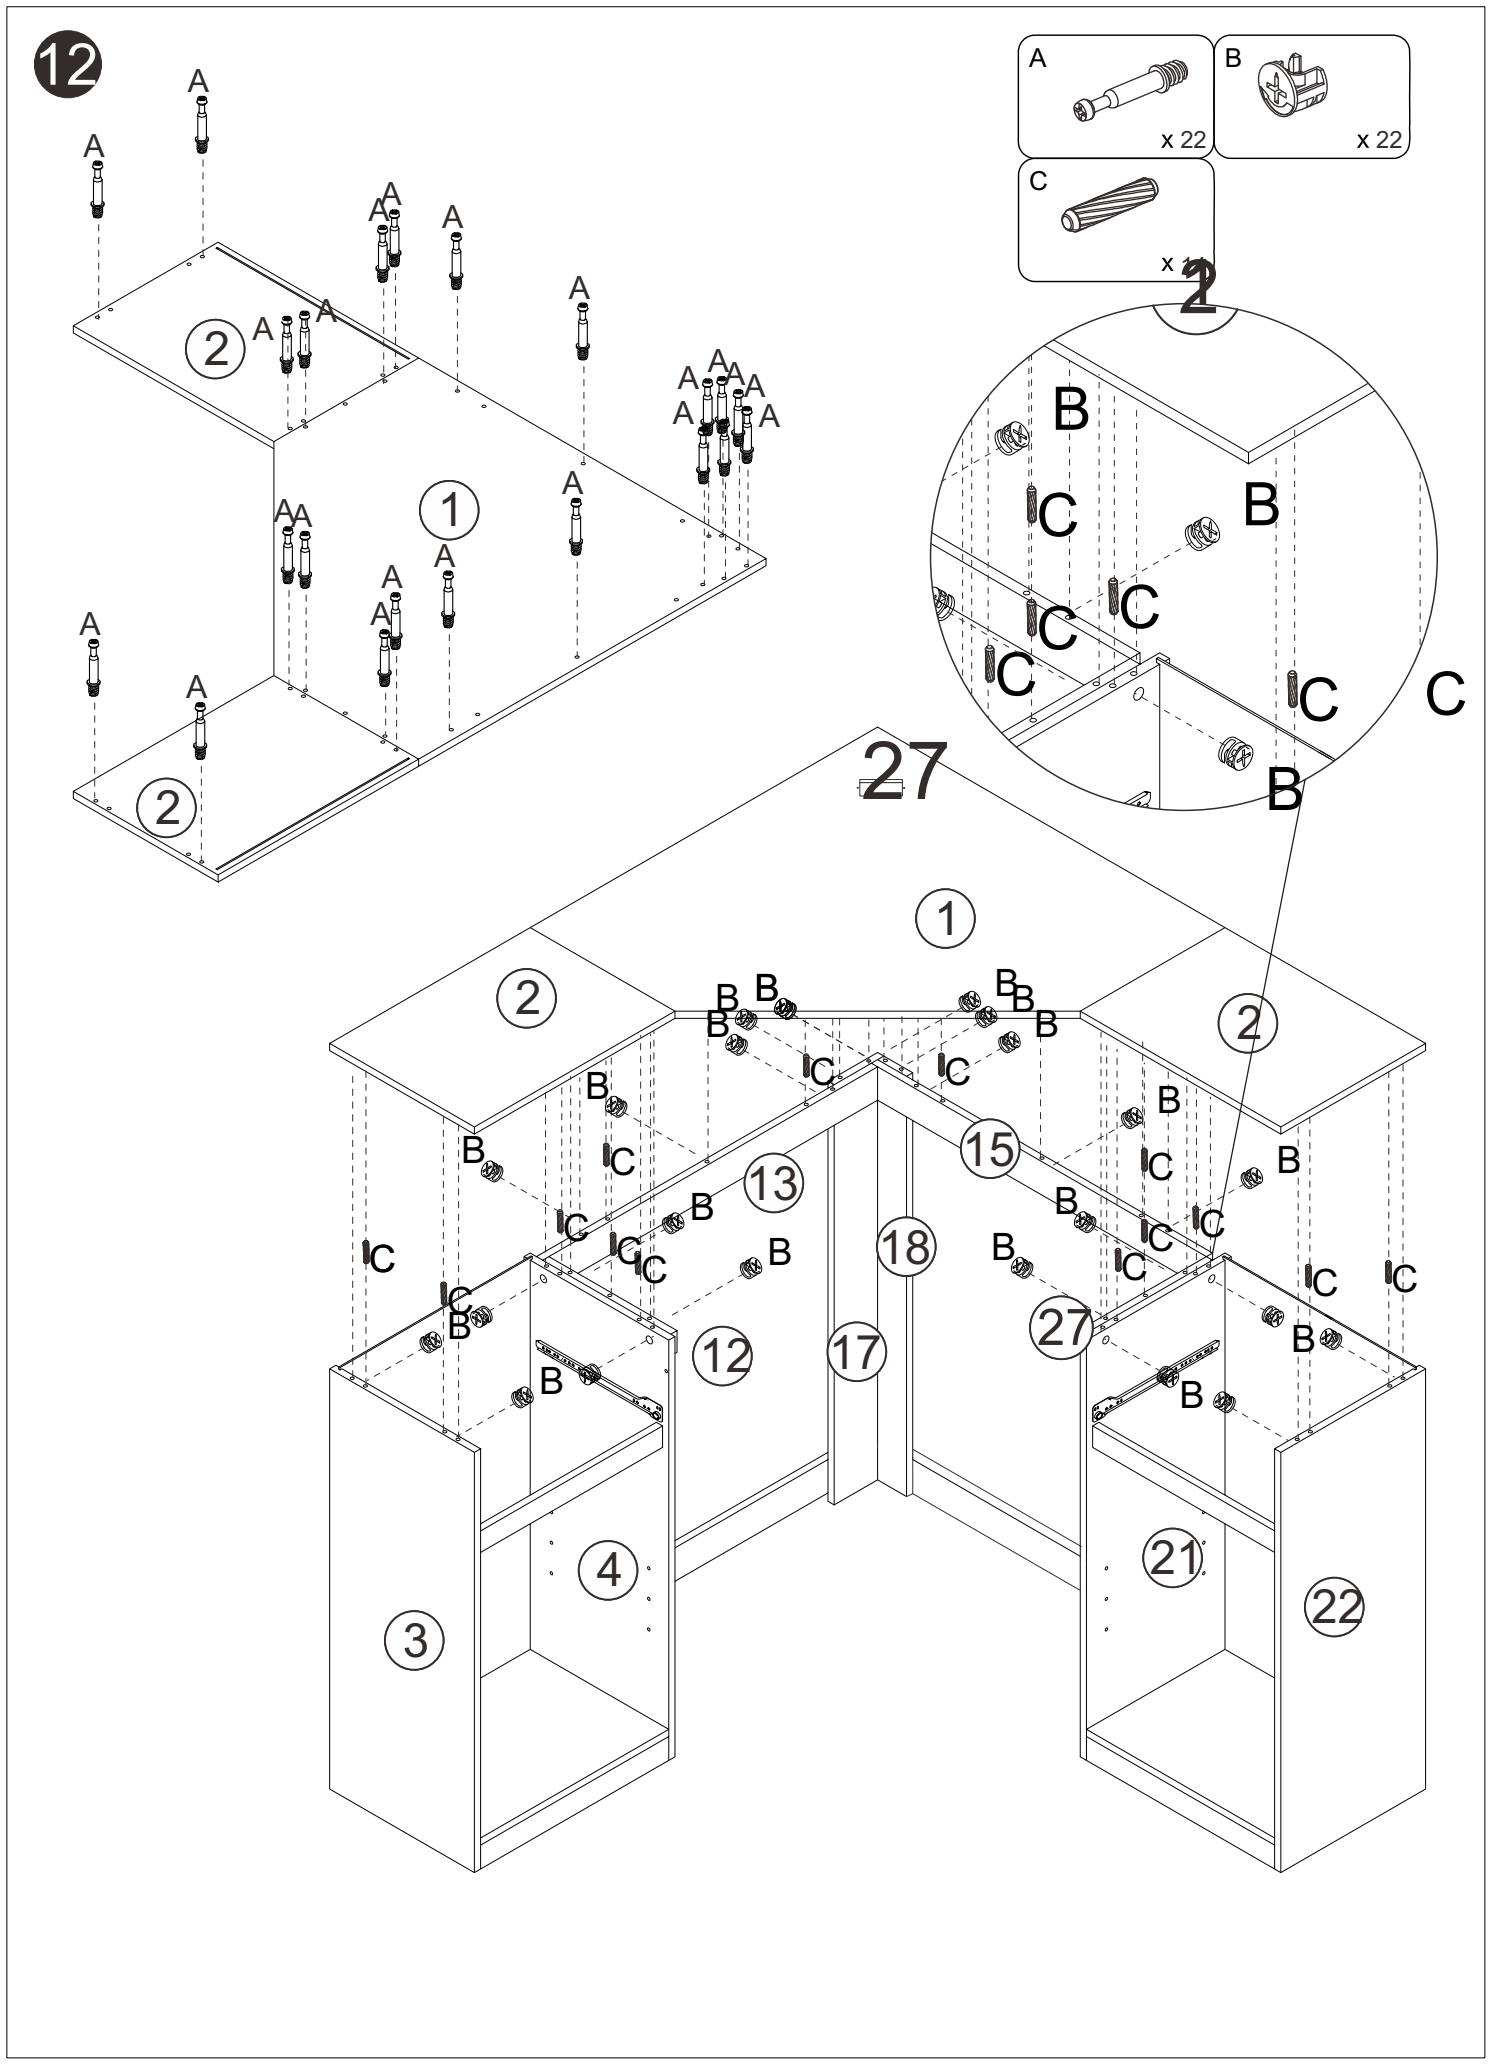


A

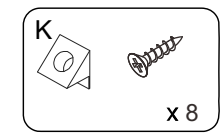
3

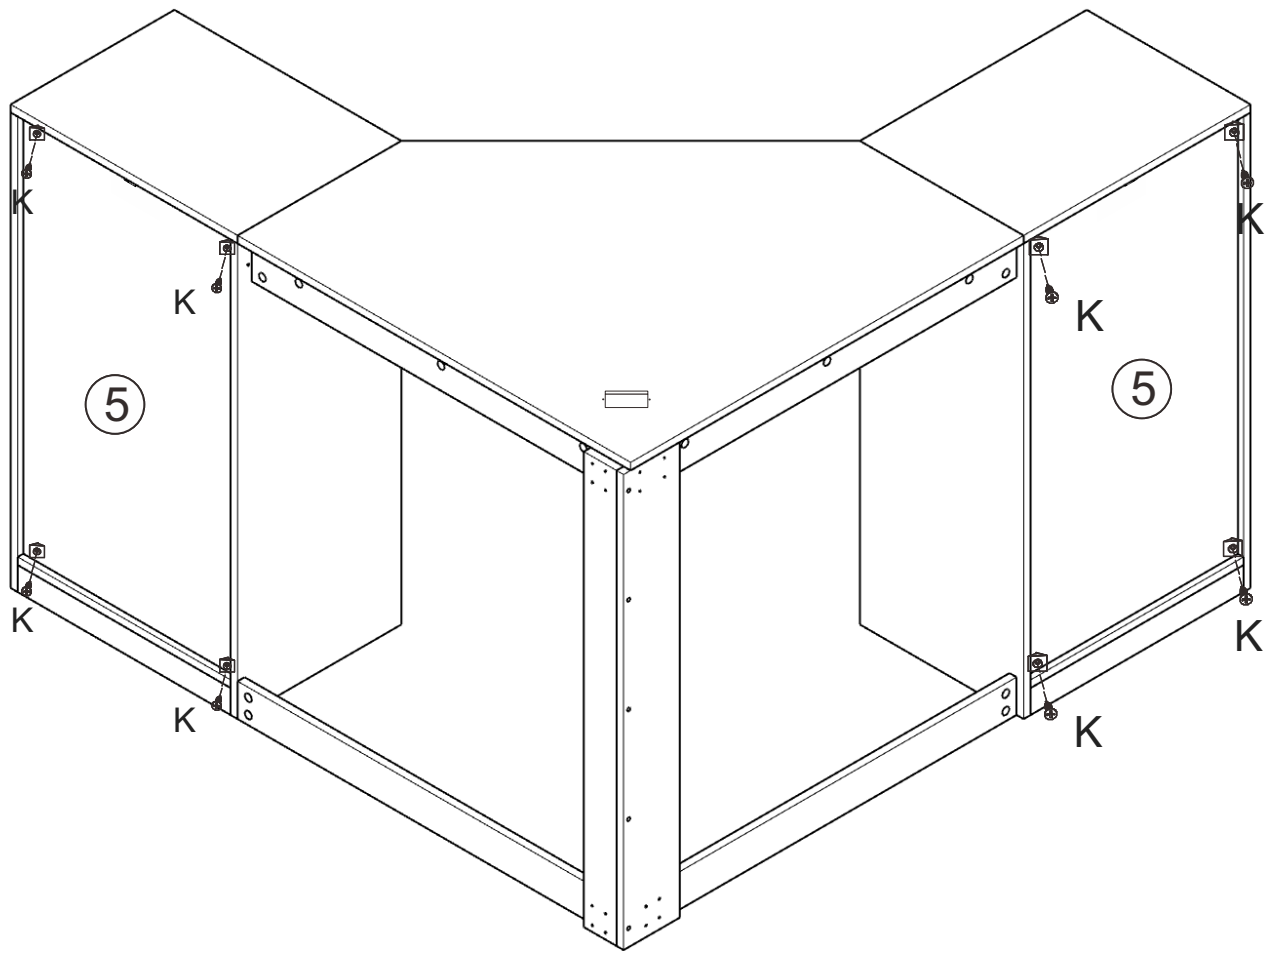
E

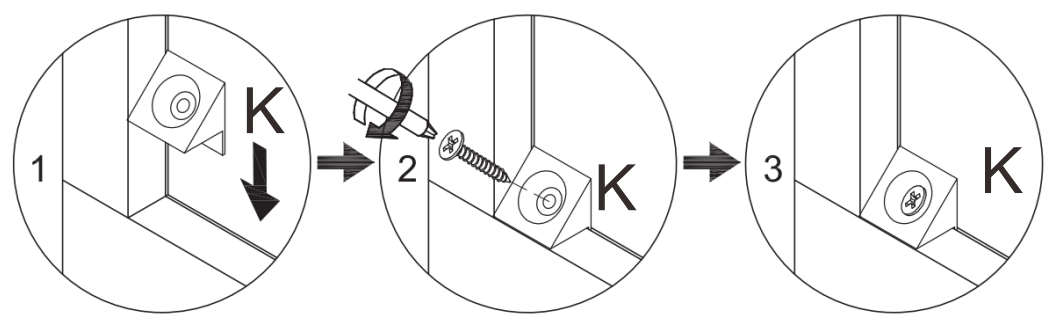
I


12
A
x 22
B
x 22
C
x 44
2
1
2
27
1
2
2
13
15
18
12
17
27
3
4
21
22

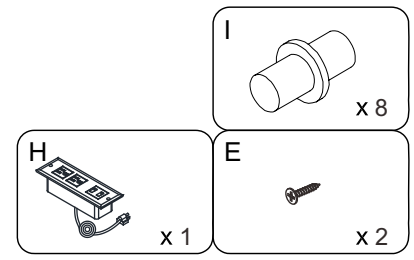
13

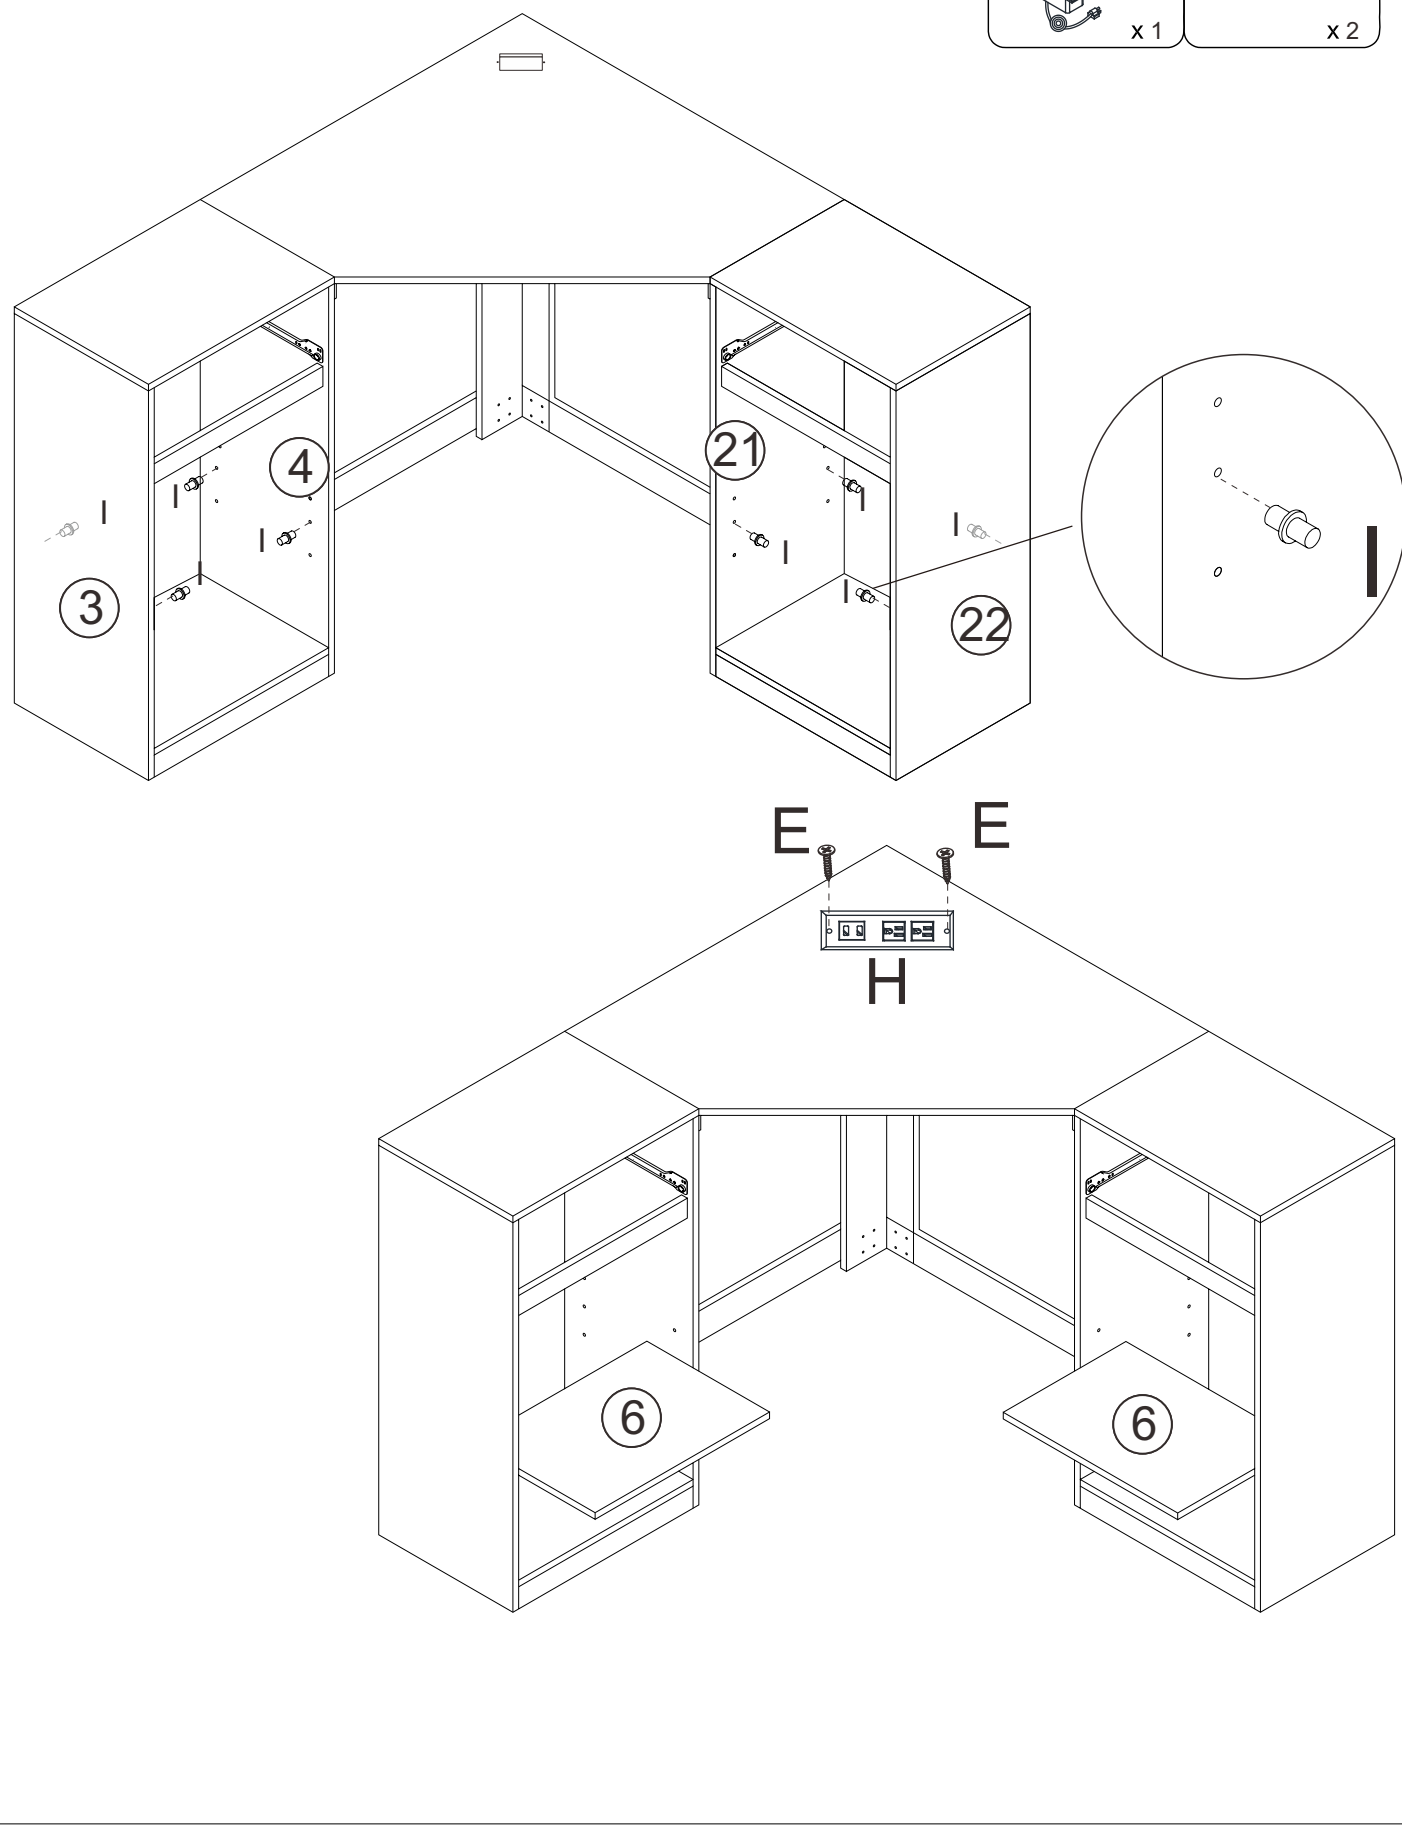




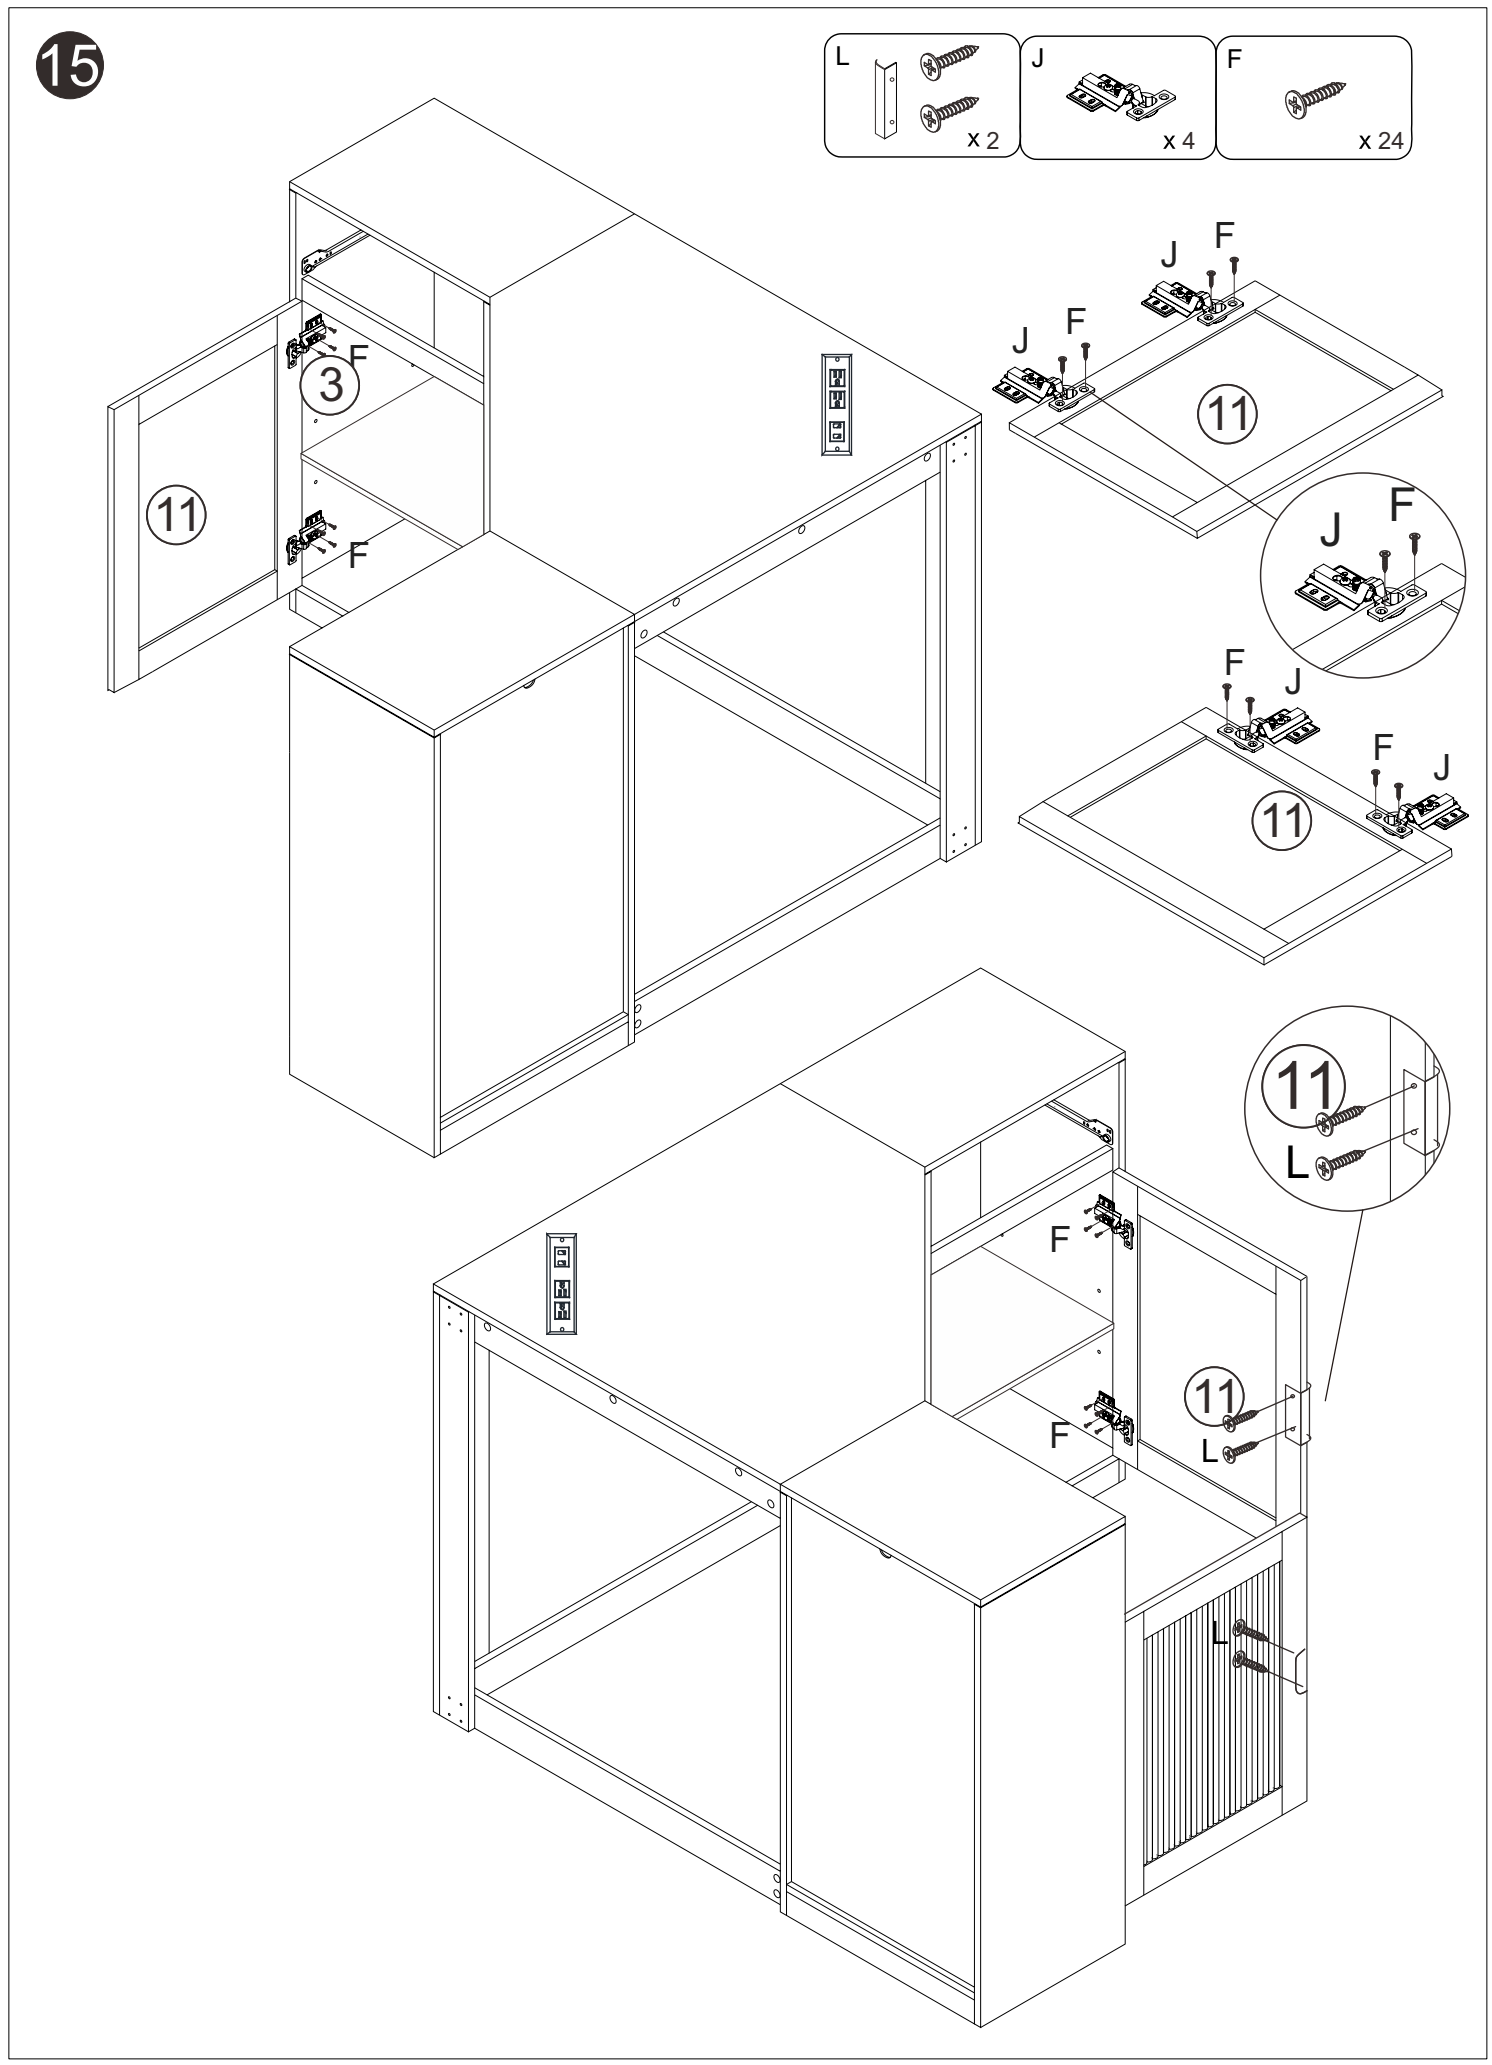


14

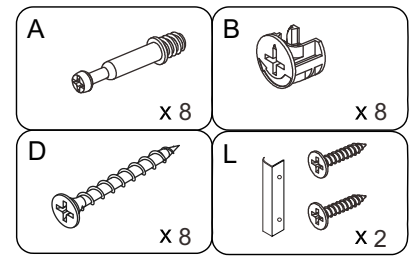


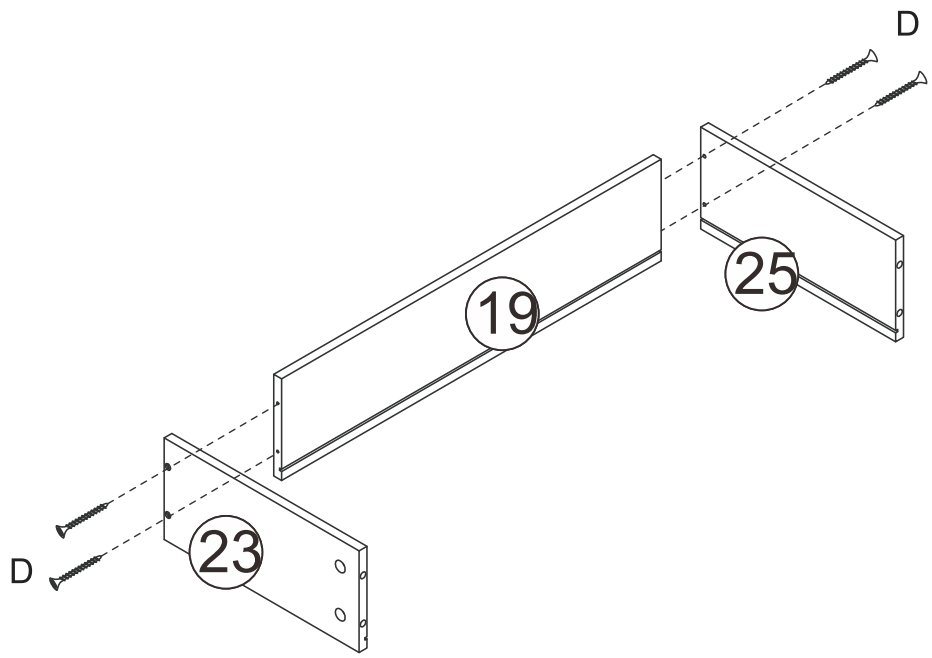


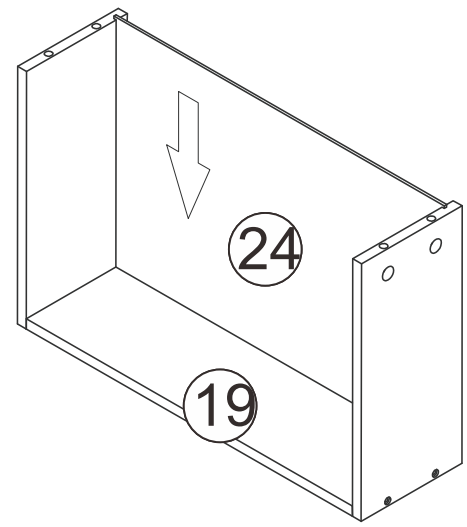
15



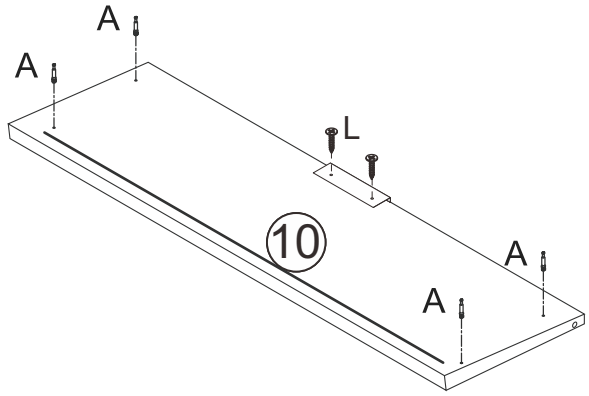
16

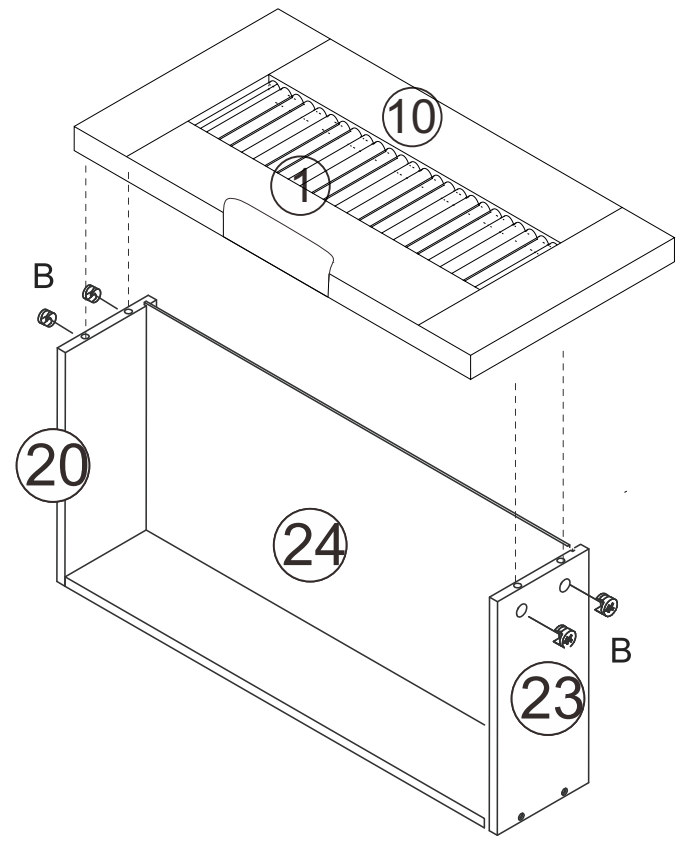




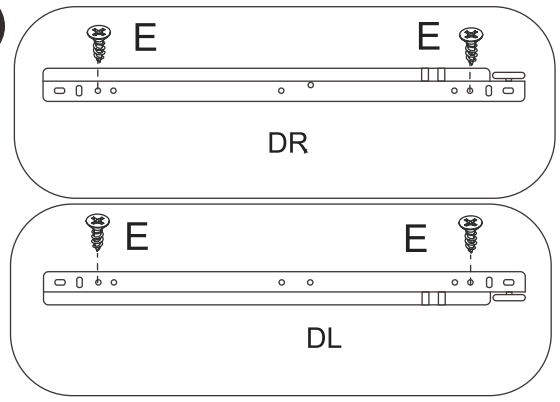


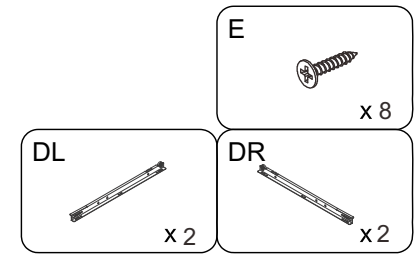
x2

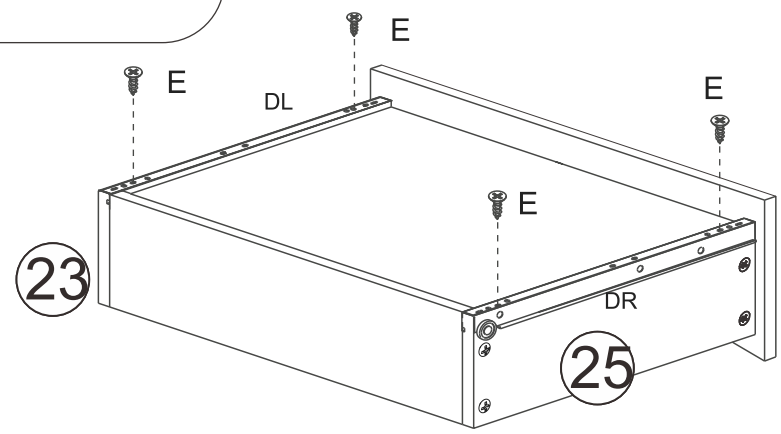




17







x2

