

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance


- ⊘  ● Not for commercial use. For residential use only.
- ✓  ● Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ⊘  ● Do not place furniture under direct sunlight.
- ⊘  ● Do not place furniture near heating or cooling vents.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface.
- ⊘  ● Do not place furniture outside . For indoor use only.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ⊘  ● Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.













Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.






TABLE

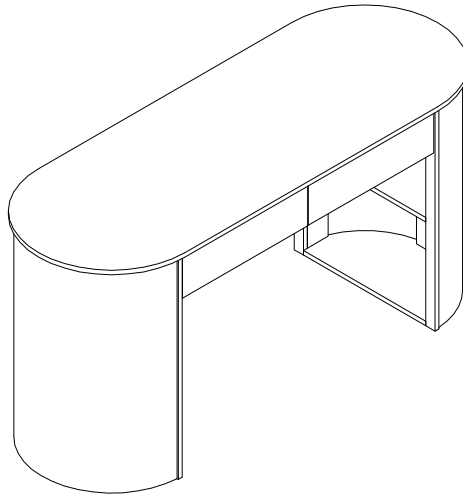

Parts List

Label	Picture	Description	QTY
①		Desktop	1
②		Left side panel	1
③		Right side panel	1
④		Middle side panel	1
⑤		Reinforcement strip	1
⑥		Backplate	1

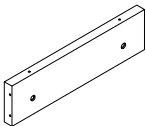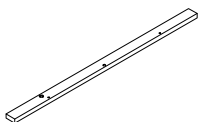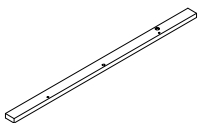
⑦		Board on the frame	2
⑧		Left side panel of the frame	2
⑨		Right side panel of the frame	2
⑩		frame midplate	2
⑪		Front side reinforcement strip	2
⑫		Rear right reinforcement strip	1
⑬		Rear left reinforcement strip	1
⑭		Framework panel	2
⑮		frame base plate	2
⑯		Intermediate frame plate	2
⑰		Peripheral board	2
⑱		Left drawer front panel	1

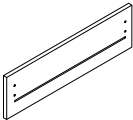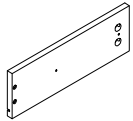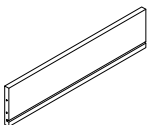①9		Right drawer front panel	1
②0		Left side panel of the drawer	2
②1		Right side panel of the drawer	2
②2		Drawer back panel	2
②3		Drawer bottom	2

Hardware			
Label	Picture	Description	QTY
A		Cam Lock Dowel	28
B		Cam Nut	28
C		Sticker	28
D		Dowel(8*30mm)	19
E		Drawer Slider	4
F		Drawer Slider	4
G		Screw(M3.5*12mm)	20
H		Screw(M4*30mm)	10
I		Foot Pad	6
J		Screw(M6*40mm)	49
K		Screw(M6*25mm)	4
L		Screw(M8*35mm)	4
M		Wrench(4#)	1
N		Wrench(5#)	1
Restraint Device Hardware			
O		Restraint Bracket	2
P		Wall Anchor Screw (M8*40mm)	2

Assembly Preparation

Before
Beginning
Assembly:

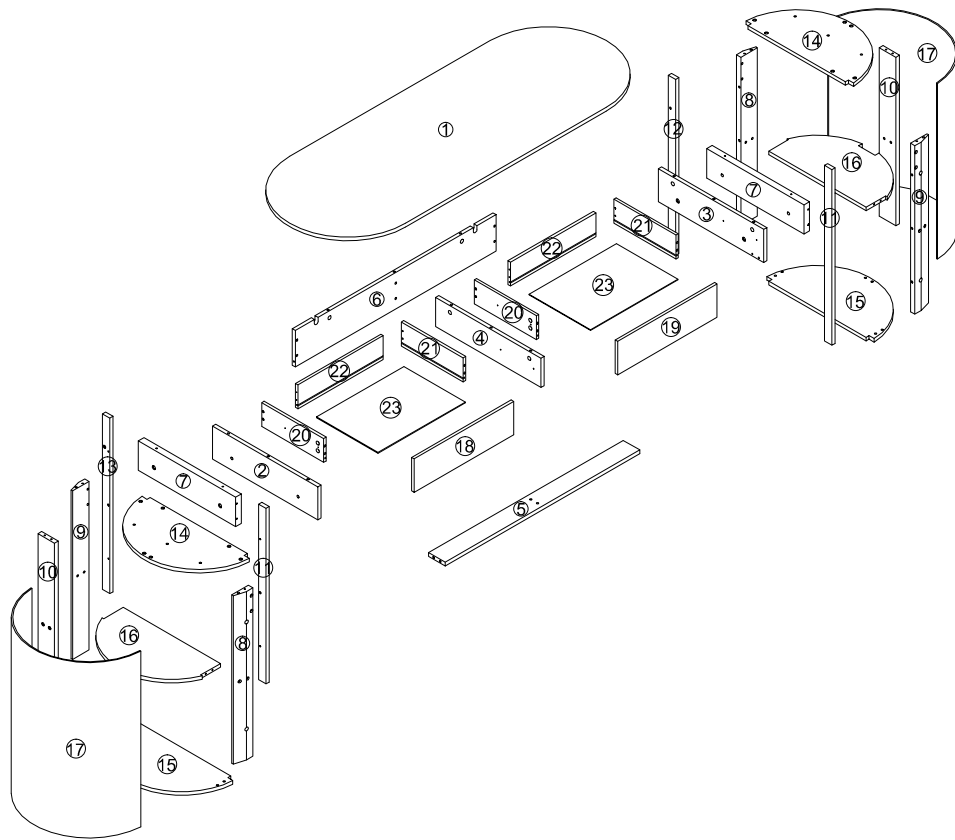

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

Assembly Steps

This Table has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


STEP 1

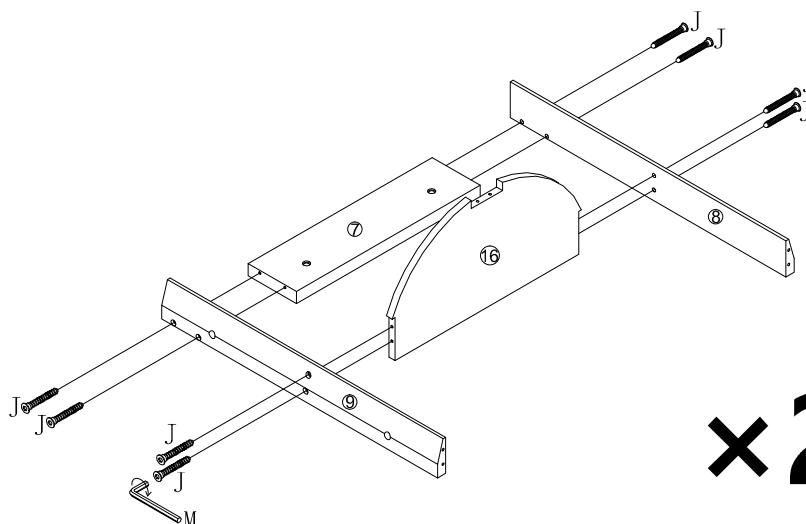

×2

Use a Wrench (M) to tighten (7), (8), (9), and (16) with screws (J).


STEP 2

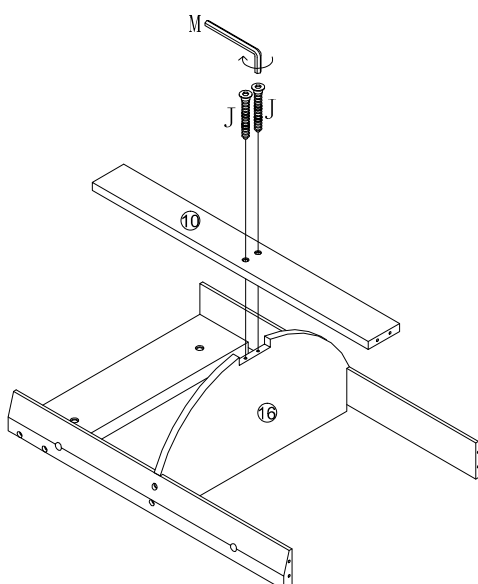

×2


Use a wrench (M) to tighten (10) and (16) using (J).

STEP 3


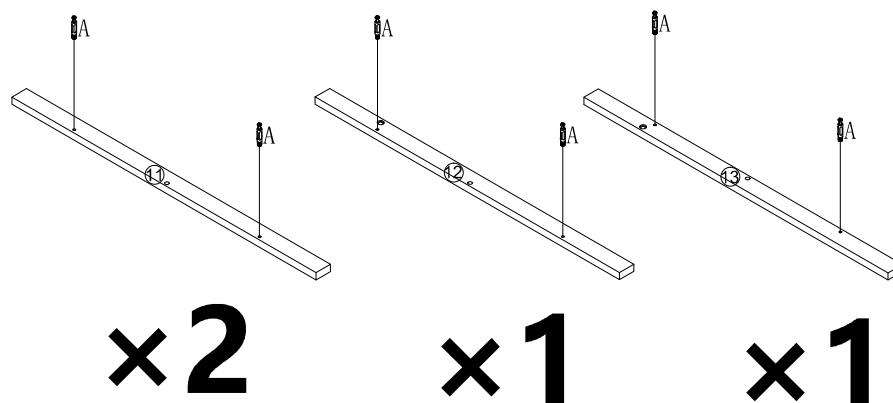


Secure the cam Cam Lock Dowel (A) to panels (11), (12), and (13).

STEP 4

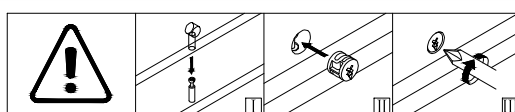


When installation is complete, the extra part of panel No. (11) and No. (13) needs to be on the outside, and the inner surface needs to be flush with panel No. (9) and No. (8).

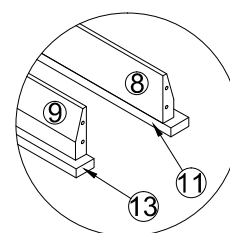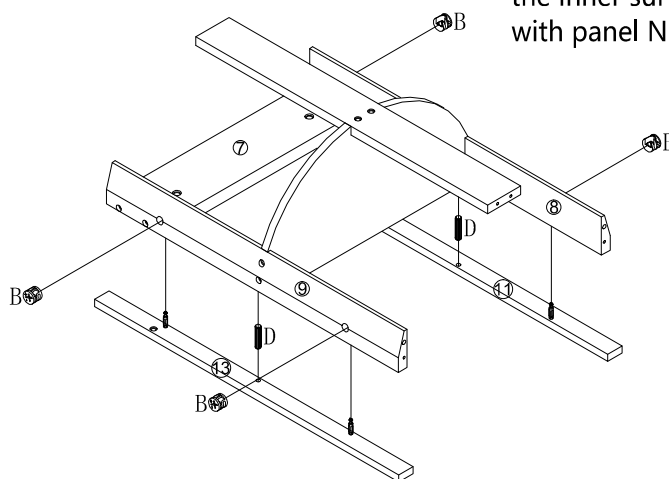


Connect the assembled small semi-circular cabinet to the assembled (11) and (13) using wooden dowels (D), and tighten with cam nuts (B).

STEP 5

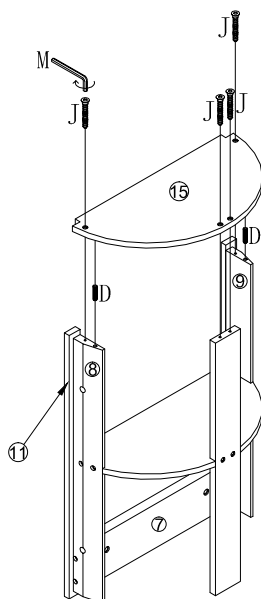


Connect the frame base (15) to the newly assembled semicircular cabinet using wooden dowels (D), then use a wrench (M) to tighten and secure with screws (J).

STEP 6

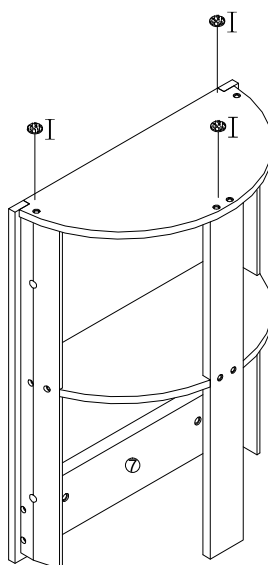


Use tools to install the floor mats (I).

STEP 7

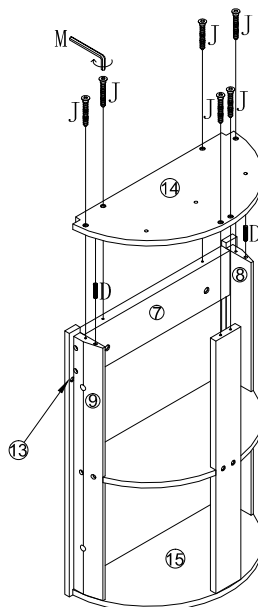


Connect the frame base (14) to the newly assembled semicircular cabinet using wooden dowels (D), then use a wrench (M) to tighten and secure with screws (J).

STEP 8

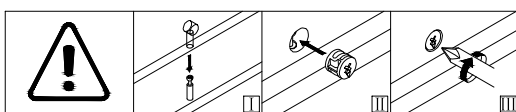


When installation is complete, the extra part of panel No. (11) and No. (12) needs to be on the outside, and the inner surface needs to be flush with panel No. (9) and No. (8).

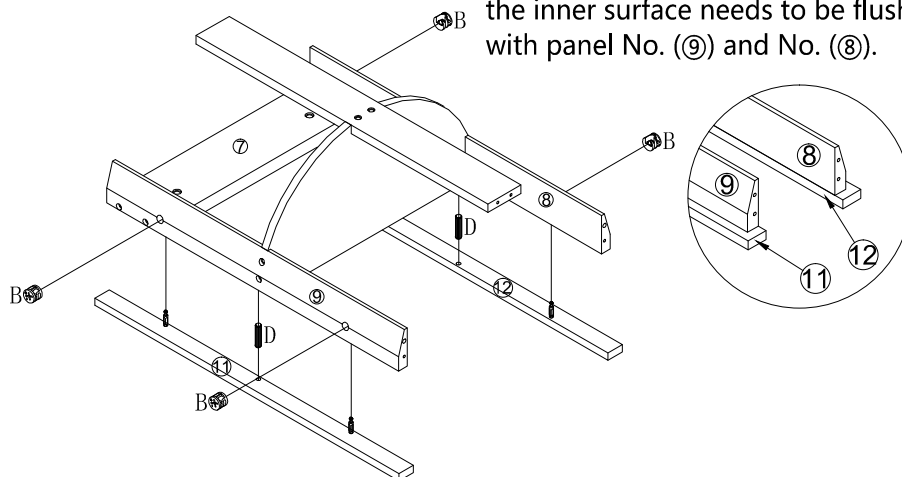


Connect the assembled small semi-circular cabinet to the assembled (11) and (12) using wooden dowels (D), and tighten with cam nuts (B).

STEP 9

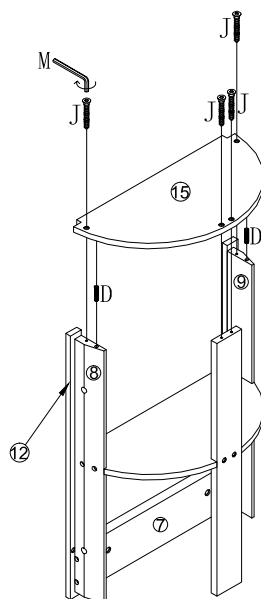


Connect the frame base (15) to the newly assembled semicircular cabinet using wooden dowels (D), then use a wrench (M) to tighten and secure with screws (J).

STEP 10

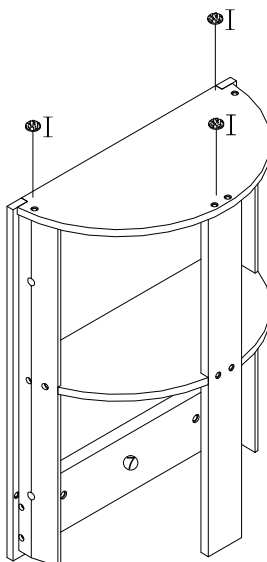


Use tools to install the floor mats (I).

STEP 11

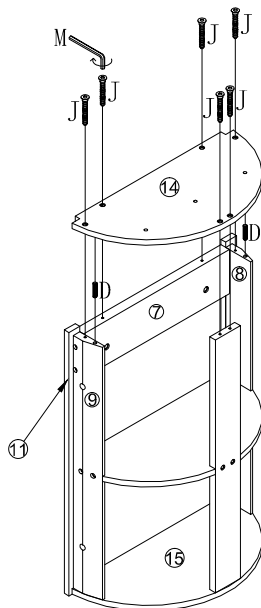


Connect the frame base (14) to the newly assembled semicircular cabinet using wooden dowels (D), then use a wrench (M) to tighten and secure with screws (J).

STEP 12

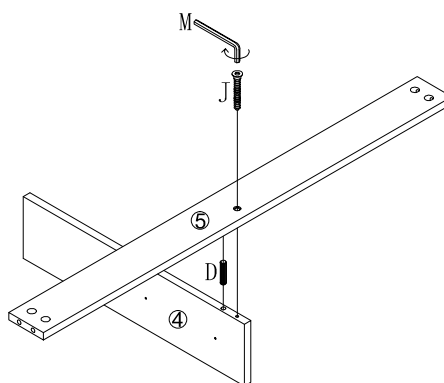



Connect (5) with (4) using the wooden dowel (D), then use the wrench (M) to tighten it with the screw (J).

STEP 13

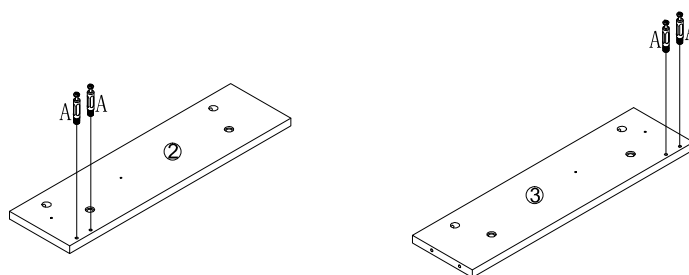


Fix the Cam Lock Dowel (A) to the (②) and (③) panel.

STEP 14

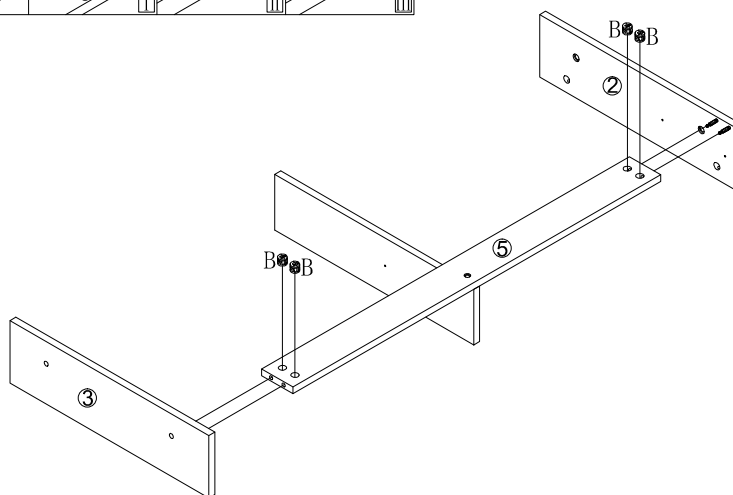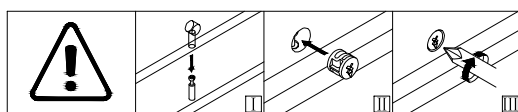


Combine the assembled (②) and (③) with (⑤), then use the (B) cam nut to tighten.

STEP 15

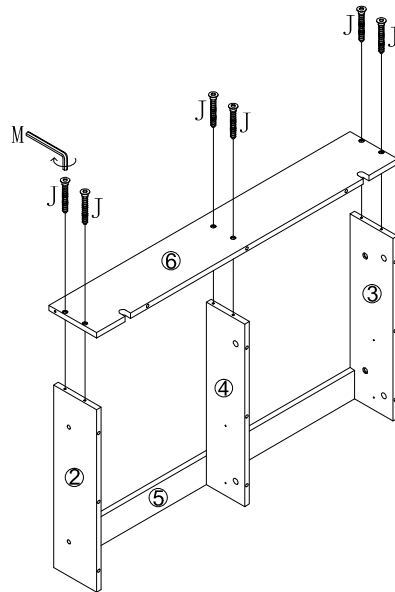

Use a wrench (M) to tighten (②), (③), (④), and (⑥) with screws (J).


STEP 16

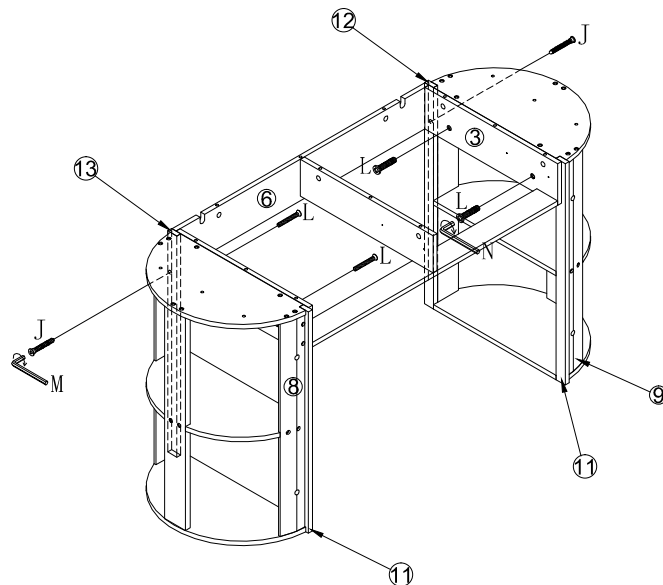

Use a wrench (N) to tighten and reinforce the newly assembled small unit together with the two assembled semicircular cabinets through (②) and (③) and screws (L). Use a wrench (M) to tighten the screws (J) from the back to secure the cabinet.


STEP 17

How to separate the drawer slider:

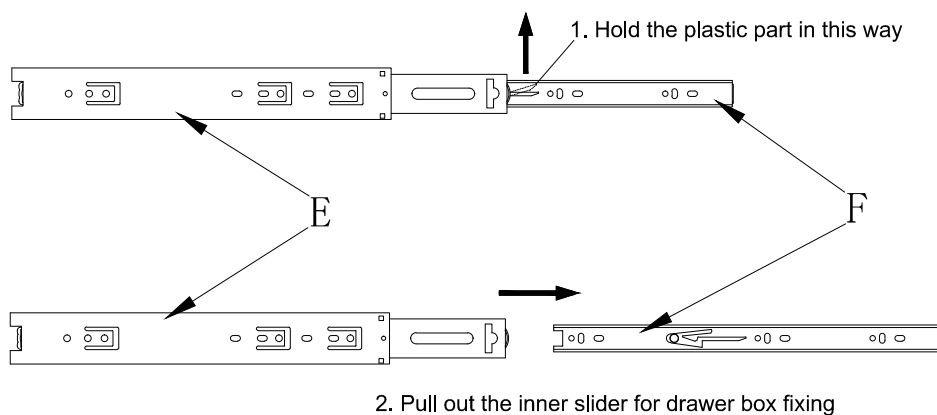


Pull (F) out of (E).

STEP 18

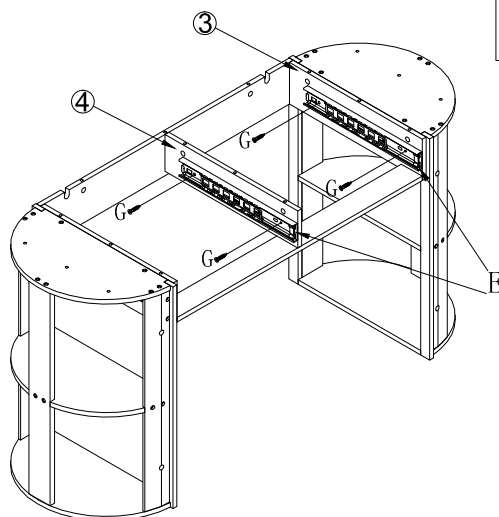


Use screws (G) to install the drawer slides (E) on (③) and (④).
When installing the drawer slide (E), please follow the instructions in the enlarged diagram for the installation of the guide holes.

STEP 19

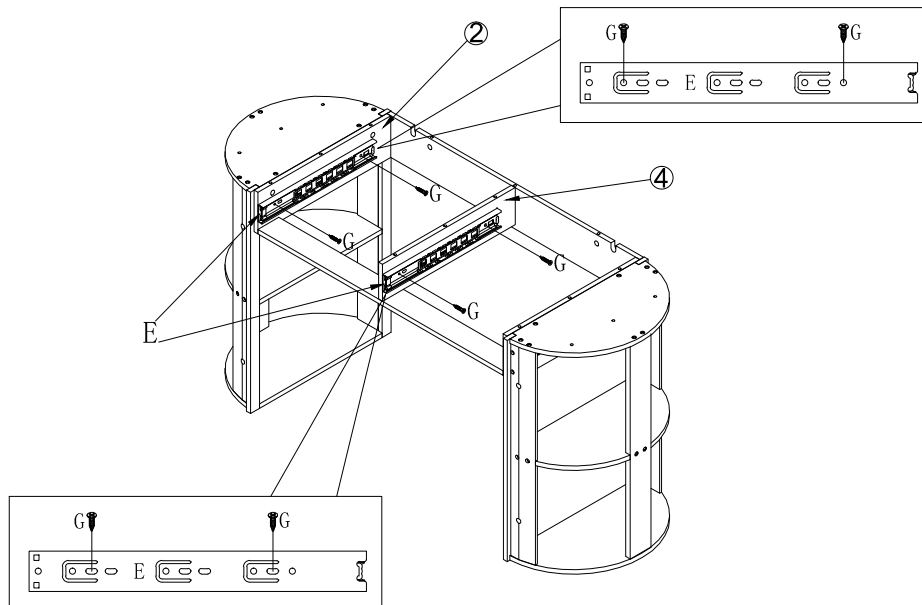



Use screws (G) to install the drawer slides (E) on (②) and (④).
When installing the drawer slide (E), please follow the instructions in the enlarged diagram for the installation of the guide holes.

STEP 20

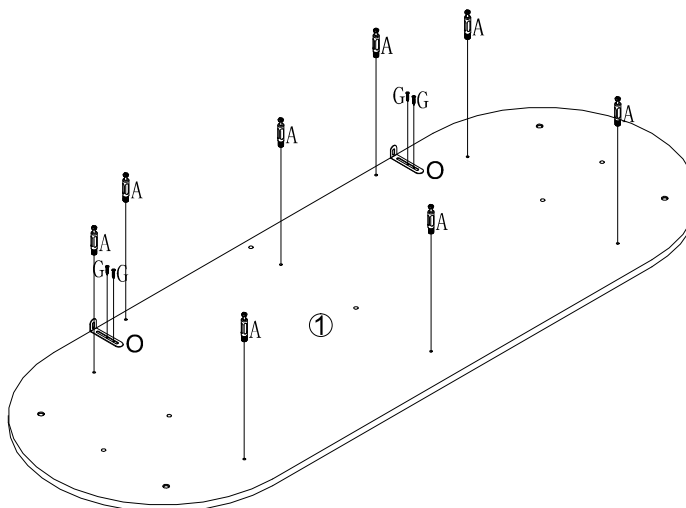


Fix the Cam Lock Dowel (A) to the (①) panel.
Use screws (G) to attach the Restraint Bracket (O) to the panel (①).

STEP 21

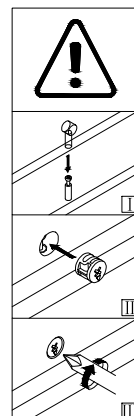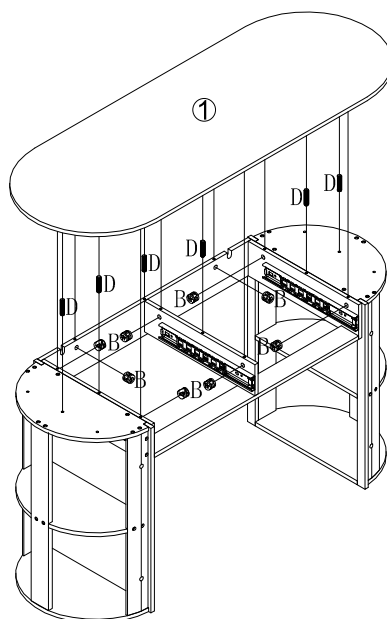


Connect the assembled panel (①) using the wooden dowel (D), and tighten it with the (B) cam nut.

STEP 22

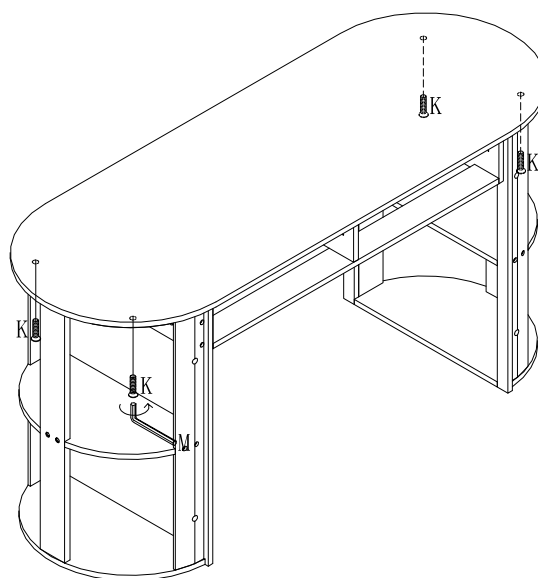



Use the wrench (M) to secure the panel (①) from the bottom of the semicircular cabinet on both sides with the screws (K).

STEP 23

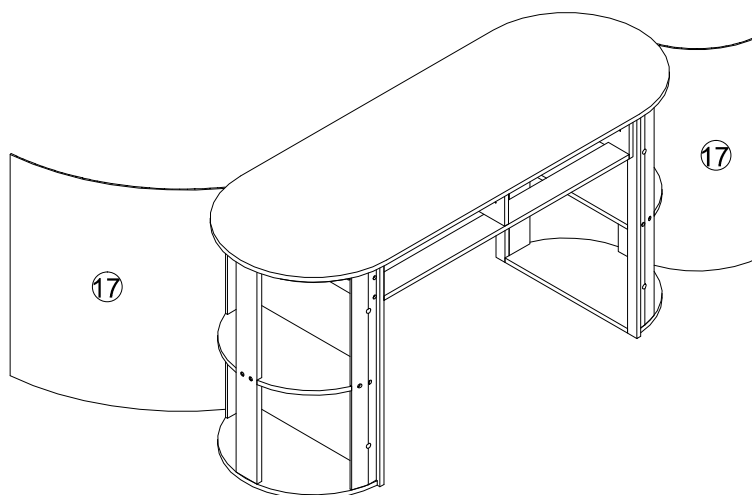


It is recommended to start from the middle of the two semicircular cabinets, slowly smoothing the outer panels (17) to both sides, and finally ensure they are firmly bonded.

STEP 24

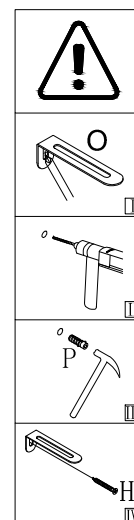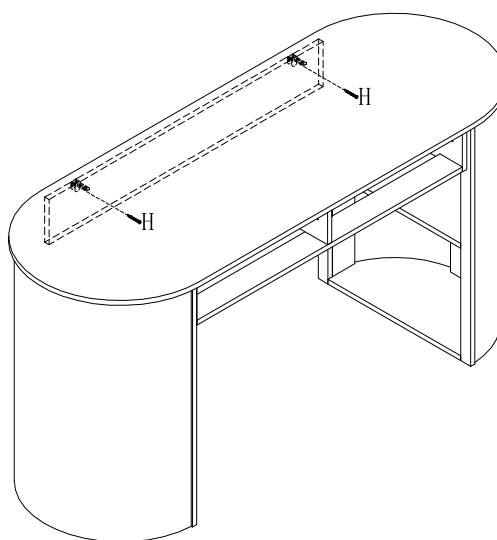



Place the assembled desk against the wall to install the fasteners to prevent the cabinet from tipping over. Please install the fasteners according to the steps in the enlarged diagram. When performing the first installation step, place the L-shaped bracket (O) close to the top (1) and mark it with a pencil.

STEP 25

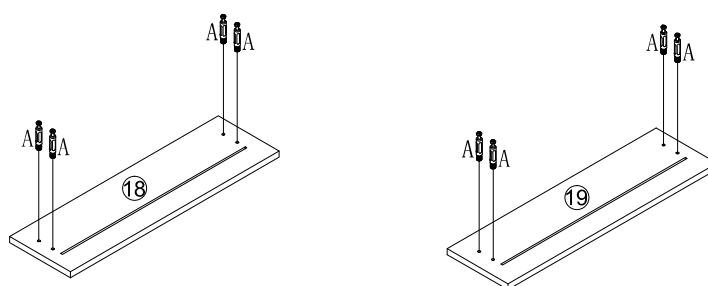


Fix the Cam Lock Dowel (A) to the (18) and (19) panel.

STEP 26

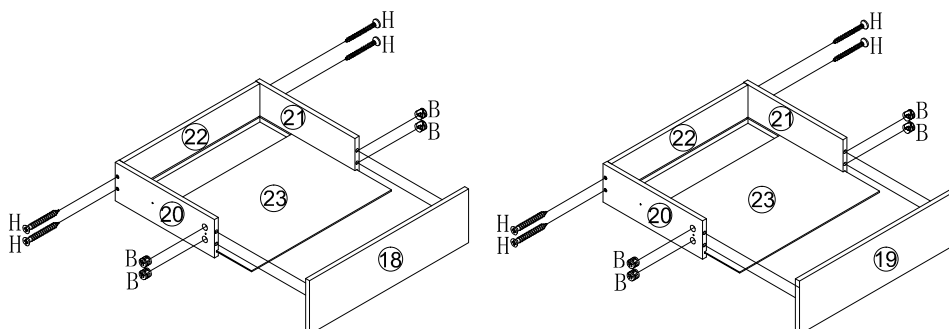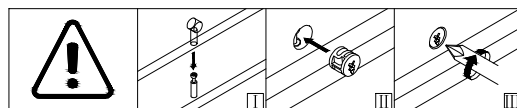


1. Use screws (H) to secure and tighten (20), (21), and (22).
2. Install the drawer bottom panel (23) into the newly assembled drawer frame.
3. Attach the assembled left drawer front panel (18) and right drawer front panel (19) to their respective assembled drawer frames and lock them with cam nuts (B).

STEP 27

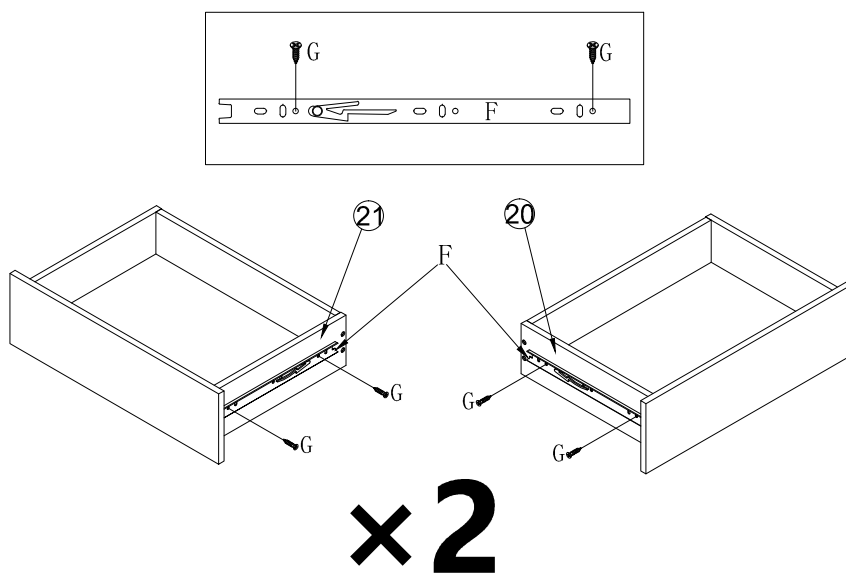

Use screws (G) to attach the drawer slide (F) to the left drawer side panel (20) and the right drawer side panel (21).

STEP 28

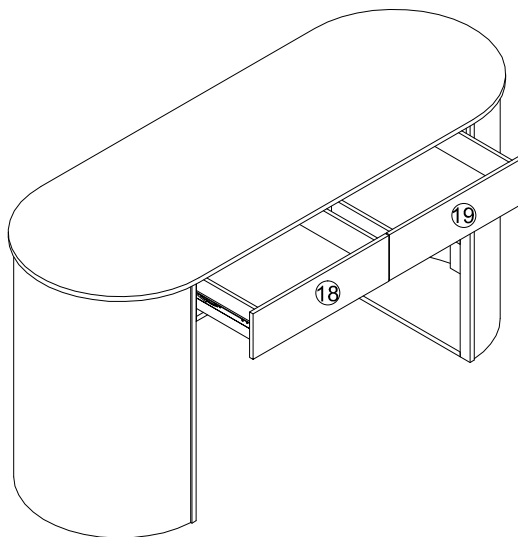

Place the assembled drawer front panel (18) with its drawer on the left and the drawer front panel (19) with its drawer on the right, then slide the drawer track (F) into the drawer track (E) to complete the assembly.