














Installation Instructions


parts list					
		X8			X1
	X1			6*1 8*1	X4
	X4			8*1	X1 (Install bottom)
		M8-40 X12			M6-16 X8
	X1 (Bottom with holes)				X1 (Bottom with holes)
	M8 X12				X2

Step1: Check if the accessories are complete


Remove the screws or nuts from the accessories before installation

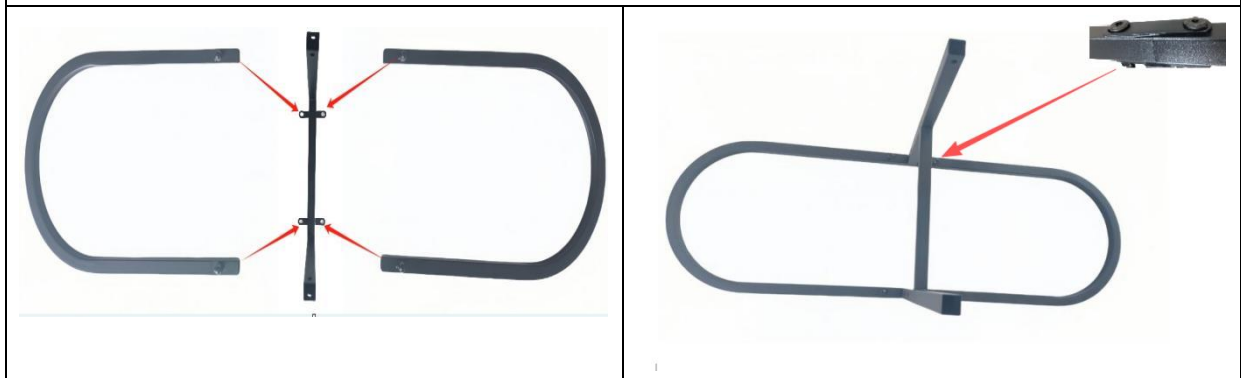

Step2: Take out 2 U-shaped brackets and install them together

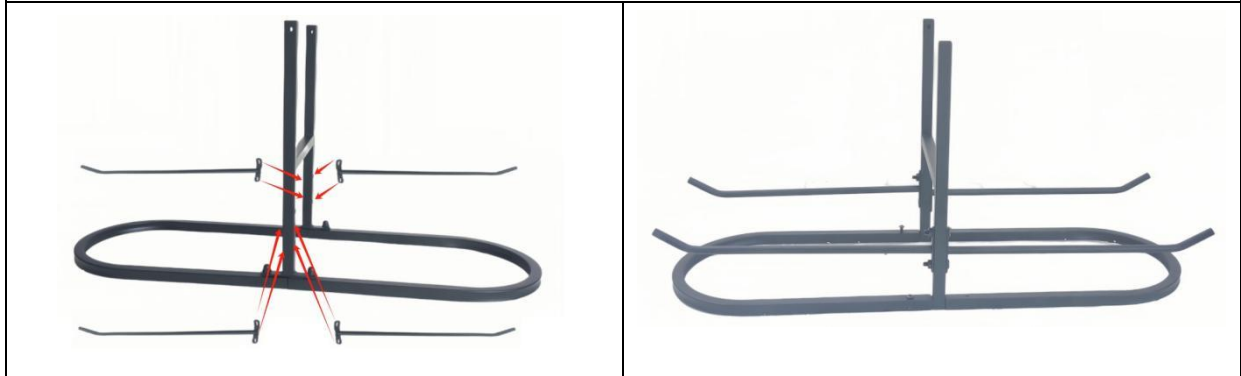


Step3: Connect the 4 long pipes and brackets together and tighten the screws

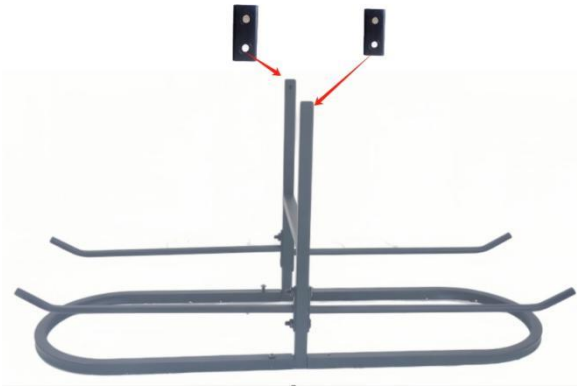

Step4: As shown in the figure, install the connecting components on the bracket and lock them tightly



Step5: Install the H-shaped bracket onto the bracket and tighten the screws

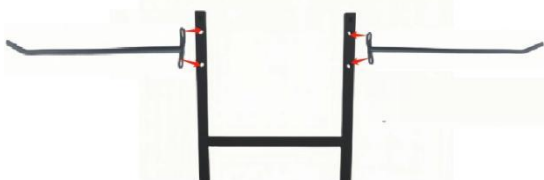

Step6: Repeat the previous steps, install and lock the screws



Step7: Connect and lock the top U-shaped bracket, Lock the 4 adjustment rubber pads at the bottom, installation is complete