


THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

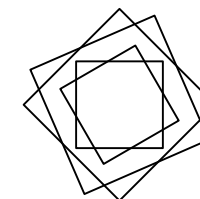


Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV B120 J24


Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	58	I	 Track	3
B	 Two-in-one connector	56	J	 U-Shaped plastic	2
C	 Two-in-one connector	56	K	 Screws Ø4x20mm	12
D	 Wood plug	4	L	 Screws Ø4x10mm	14
E	 Plastic anchor(Ø10mm)	2	M	 Adjustable feet	4
F	 Screws for fix on the wall	2	N	 Anti-collision gasket	12
G	 Bracket (53x70x44mm)	2	O	 Screwdriver	1
H	 Bracket (19x19x35mm)	2			


Recommended tools

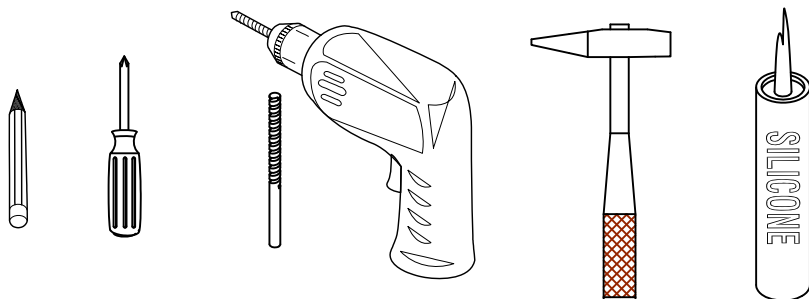


Dimensions

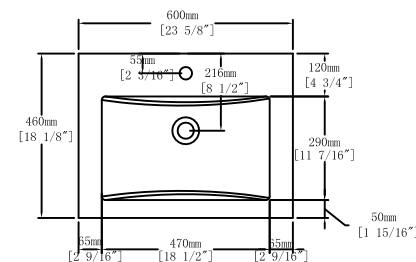

Top View

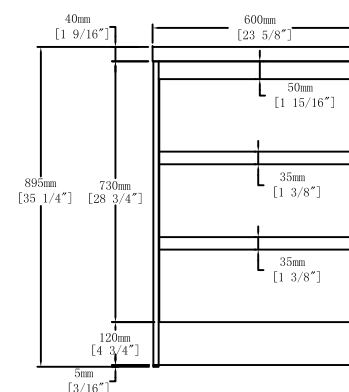

Front View

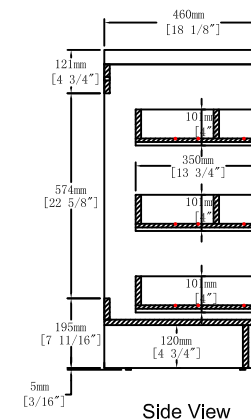


Side View


CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4.The sink is fragile, please pay attention to maintaining its appearance.
- 5.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.


Finished

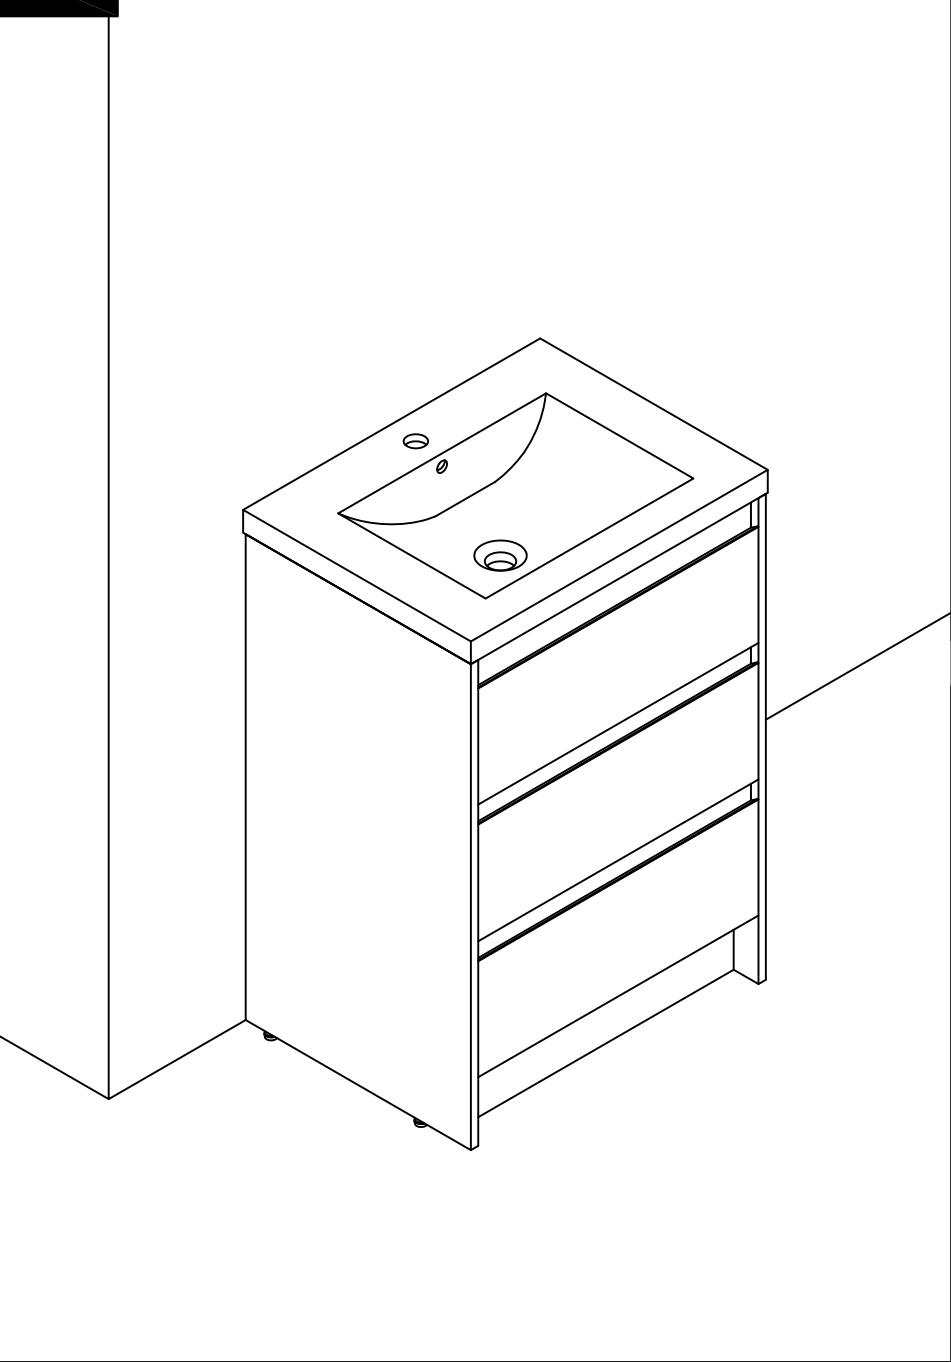

Dimensions



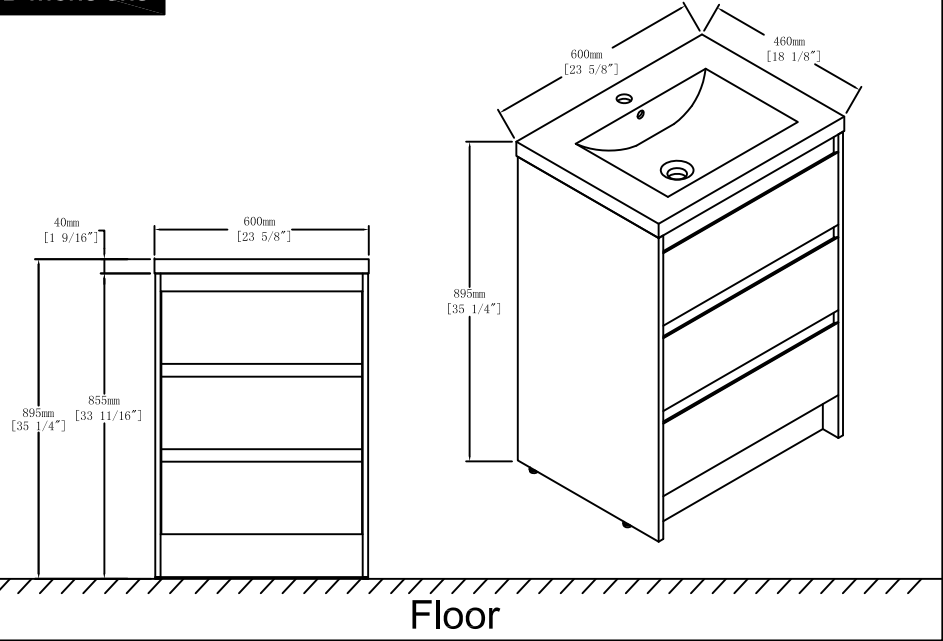


Components

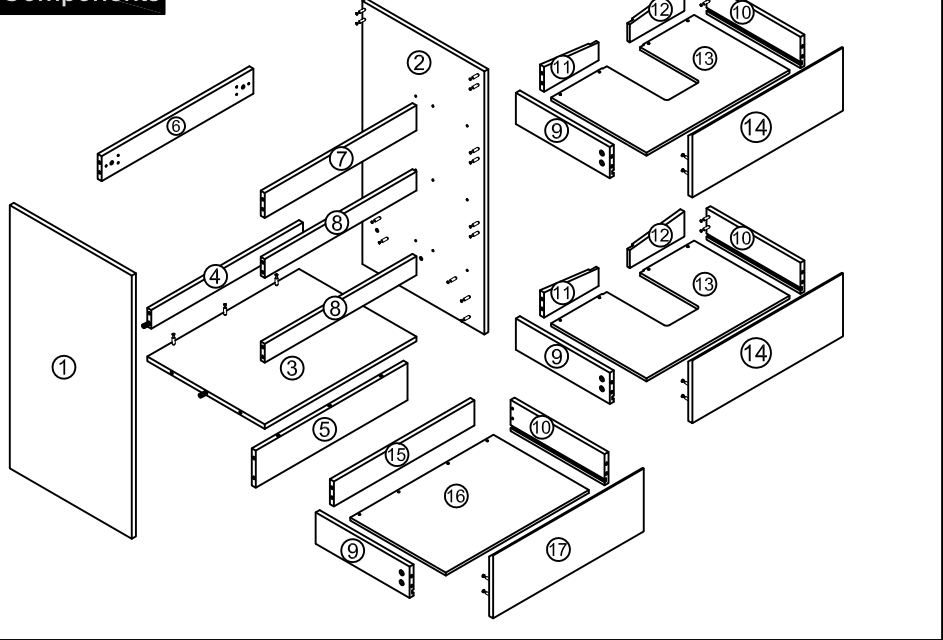



Step 1

Note: Follow the holes positions exactly.

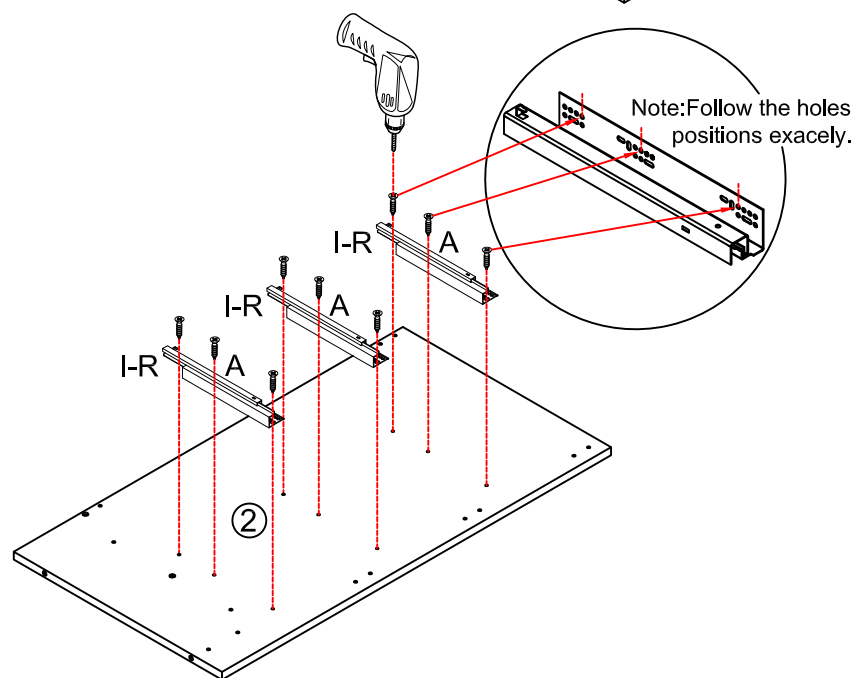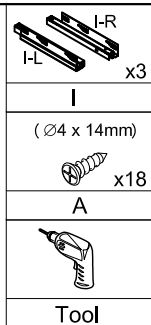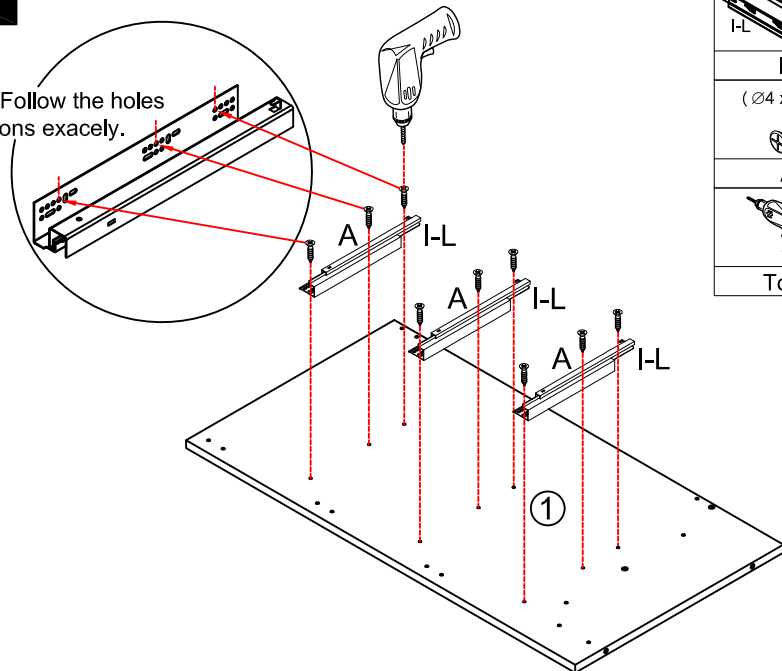


Note: Follow the holes positions exactly.

Step 17

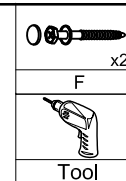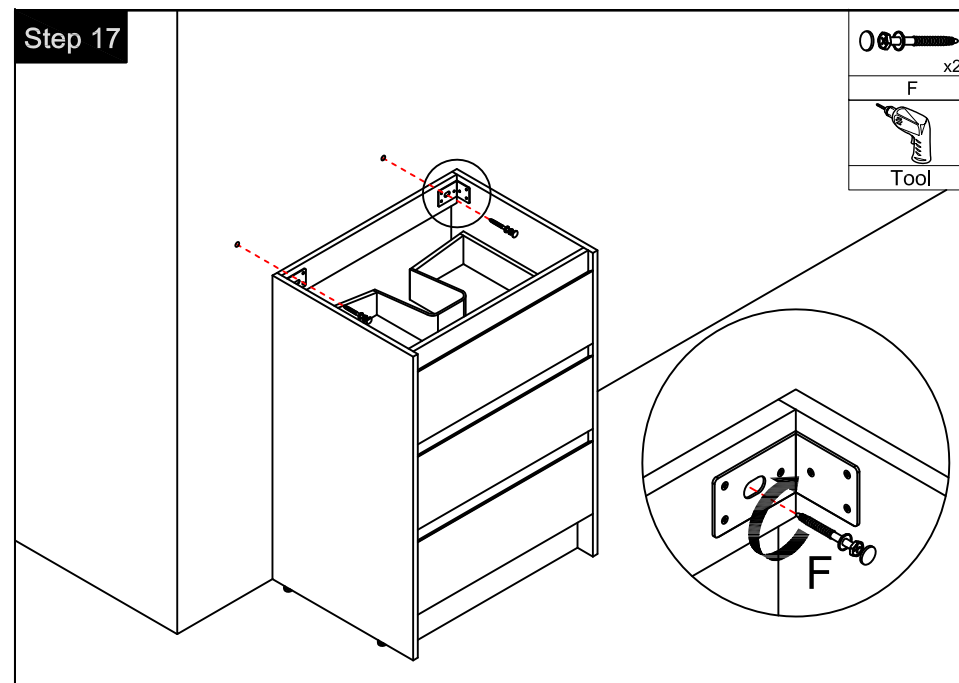


Step 18


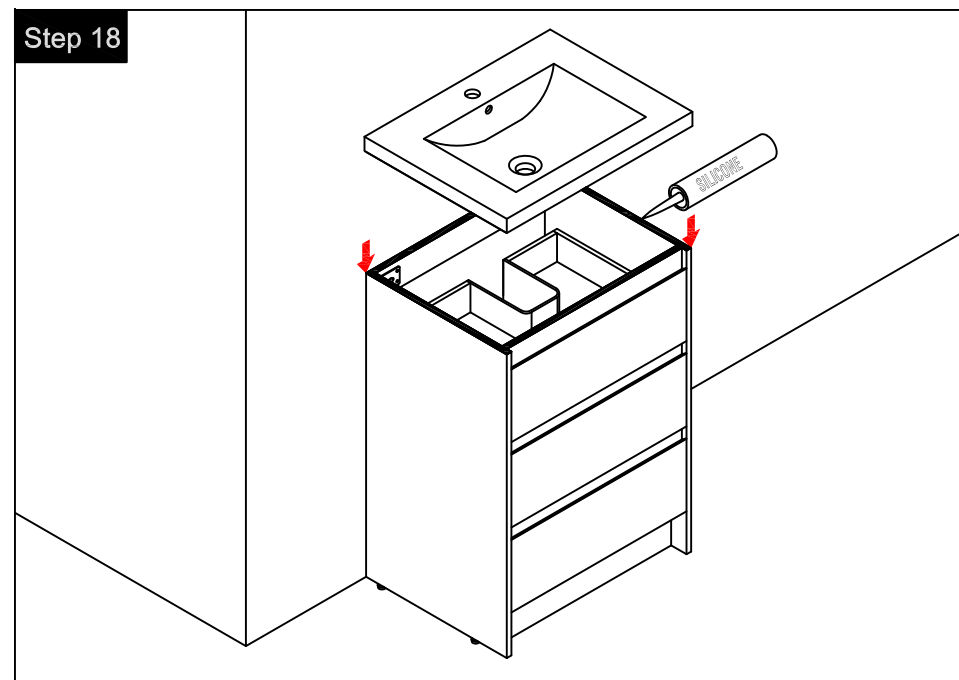


Step 16

($\varnothing 4 \times 14\text{mm}$)
A x12
Tool


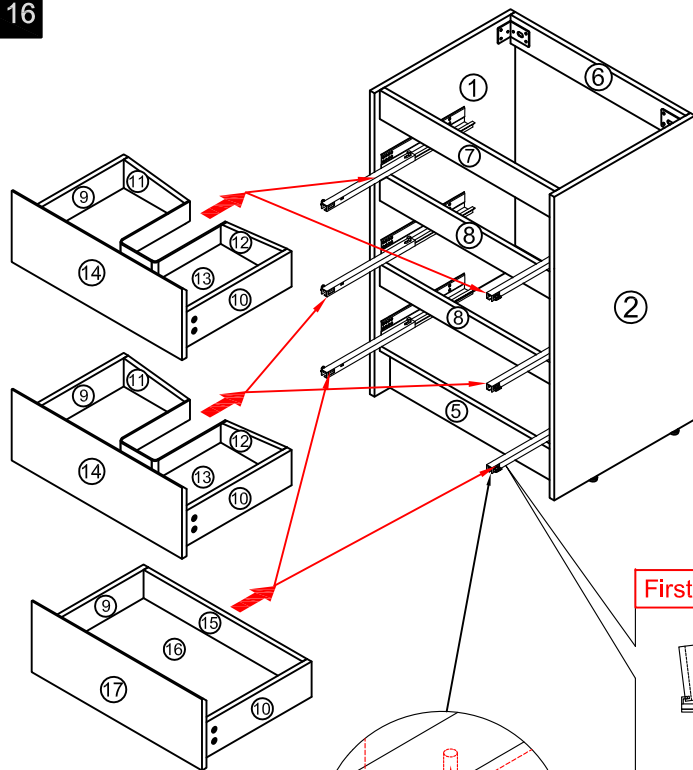


First

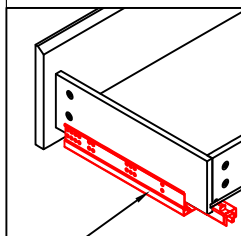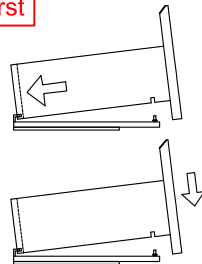




Second step: Tuck the rear holes.

Third step: The bottom of the rail is fixed with screw A.

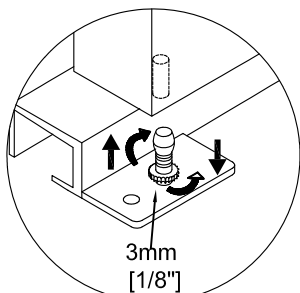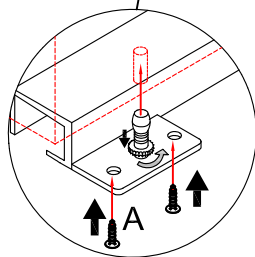


Note: The rails adjust their height 3mm.


Step 2

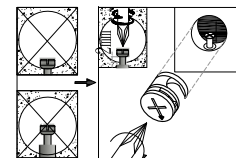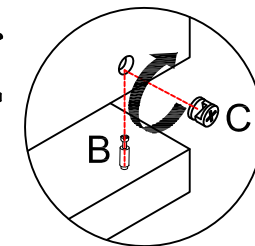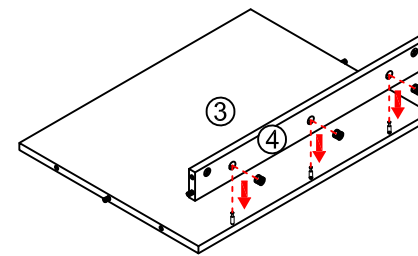

Notes: Screw installation depth as shown



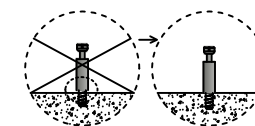


Attention: Cam lock arrow point to the steel rod.

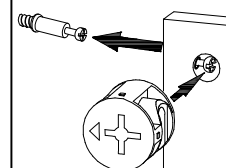

x3
B
x3
C
O


Step 3

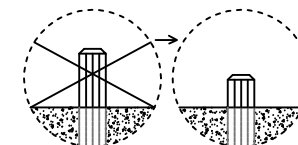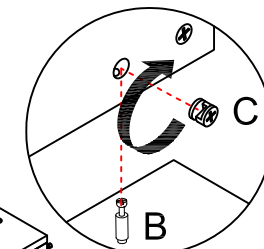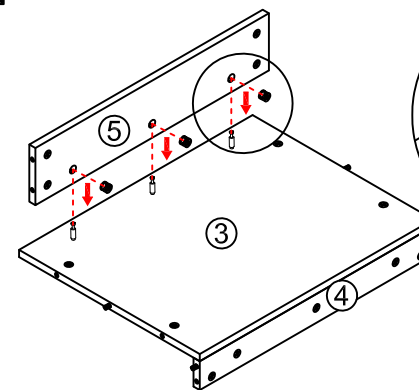





first step





second step

third step




x3
B
x3
C
O

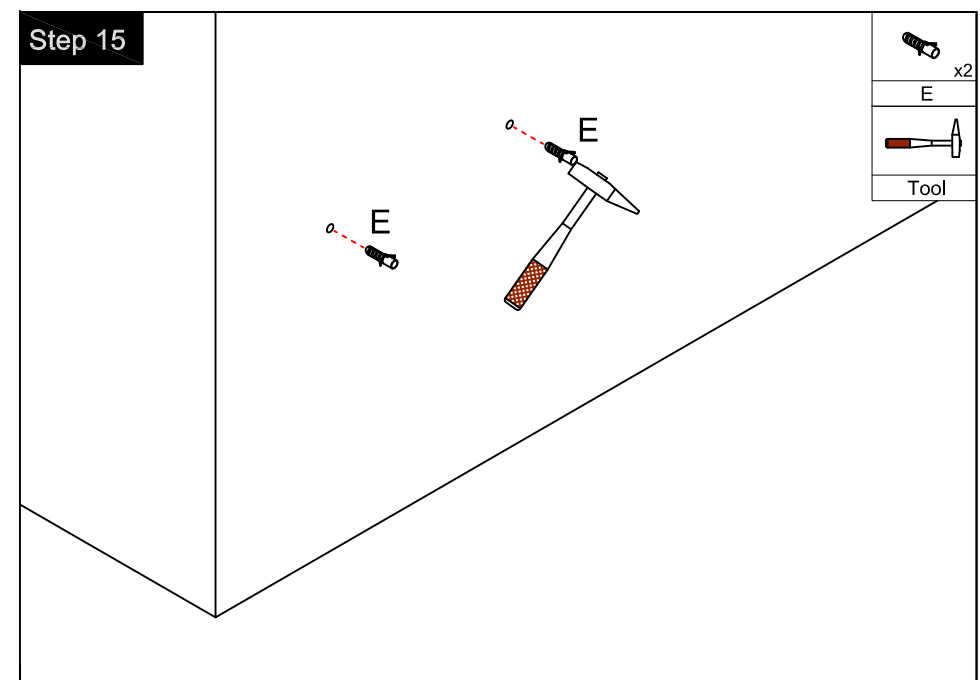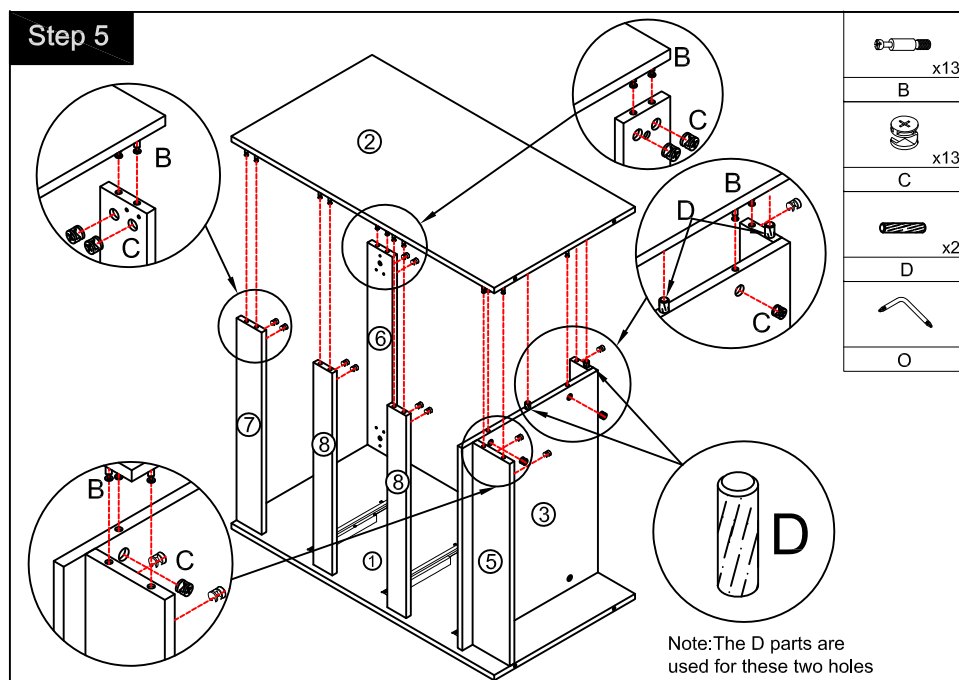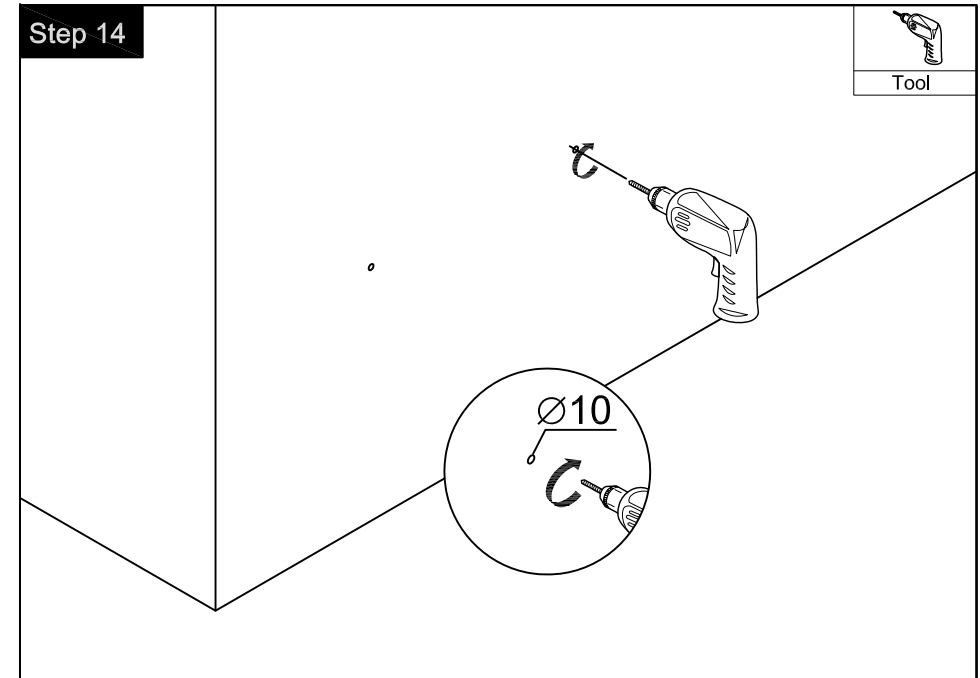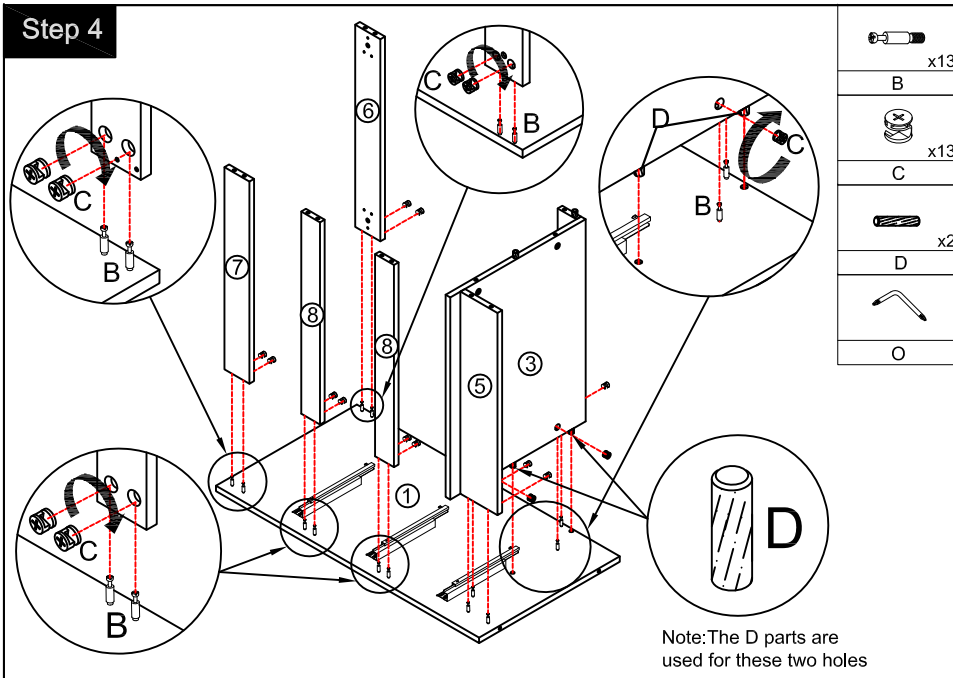


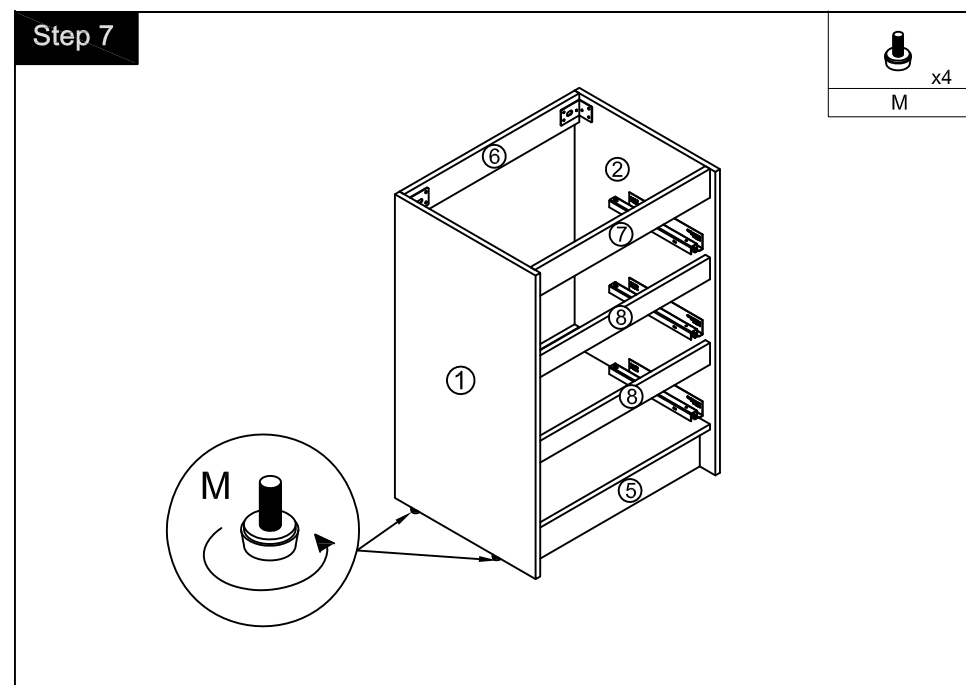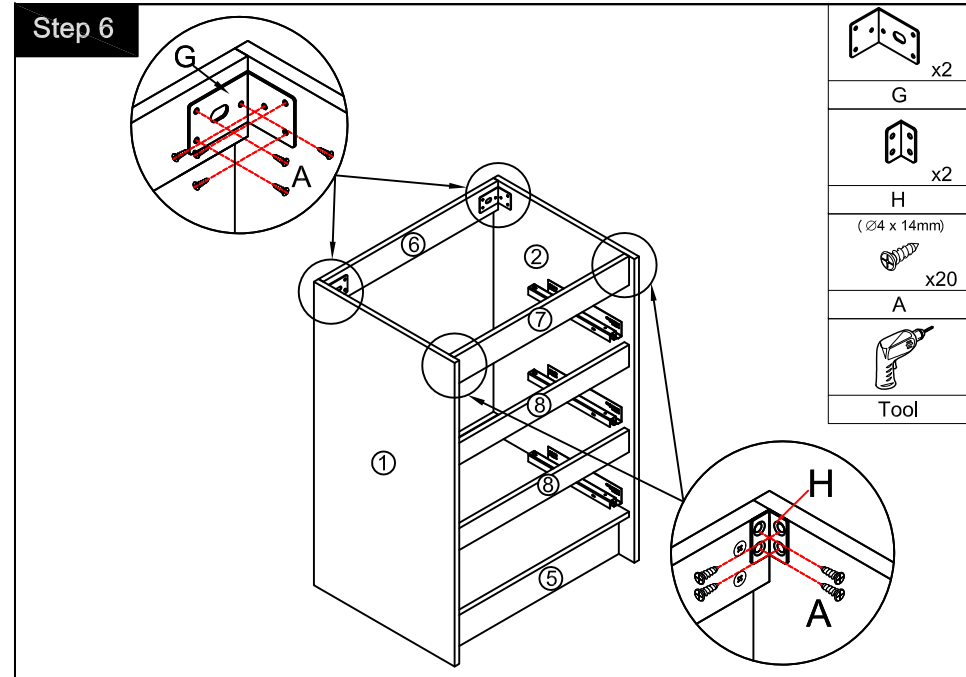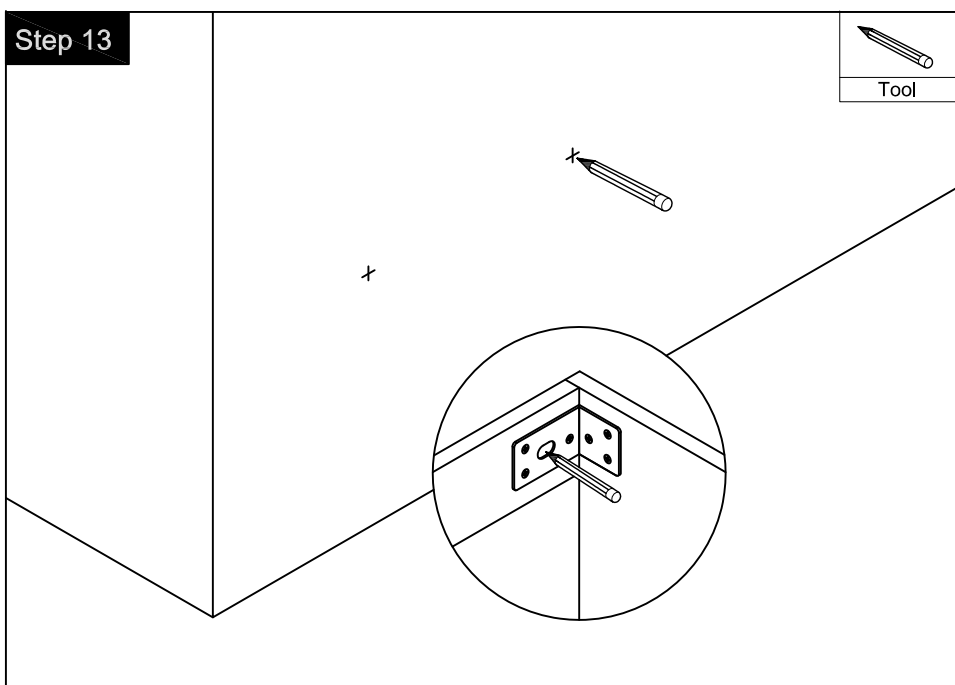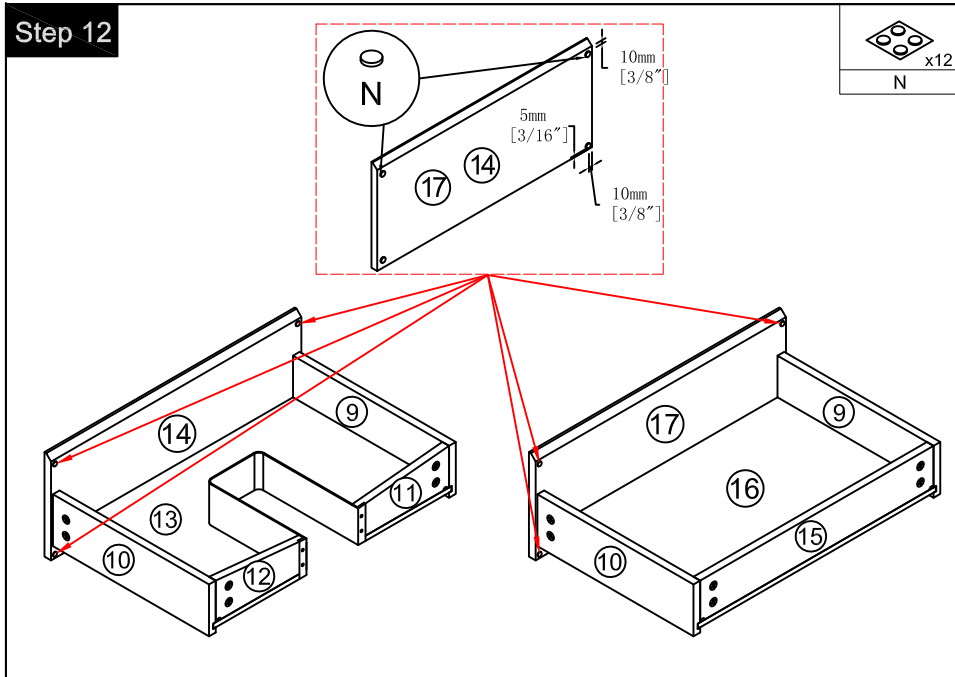


Step 8

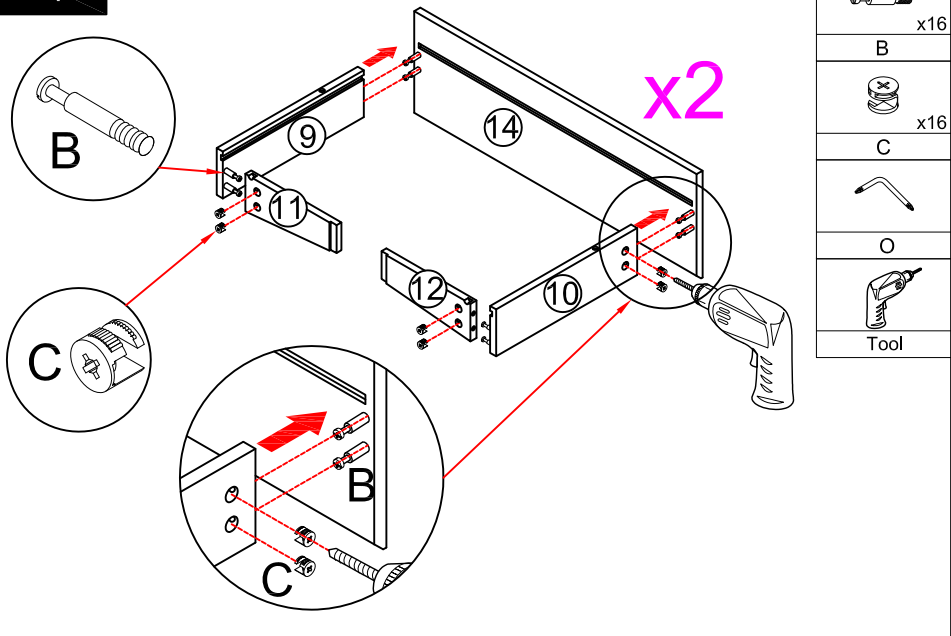


Step 9

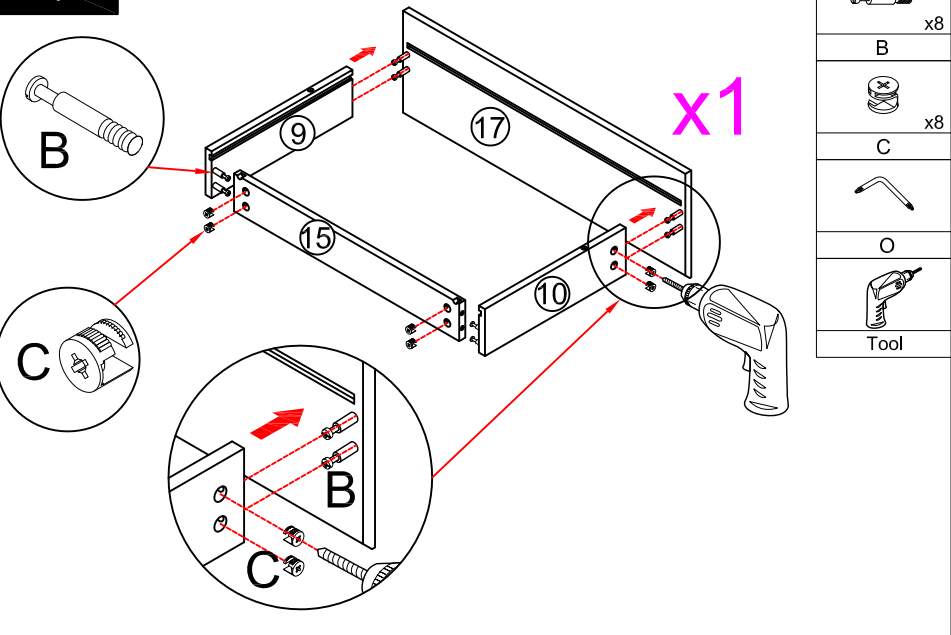

Step 10


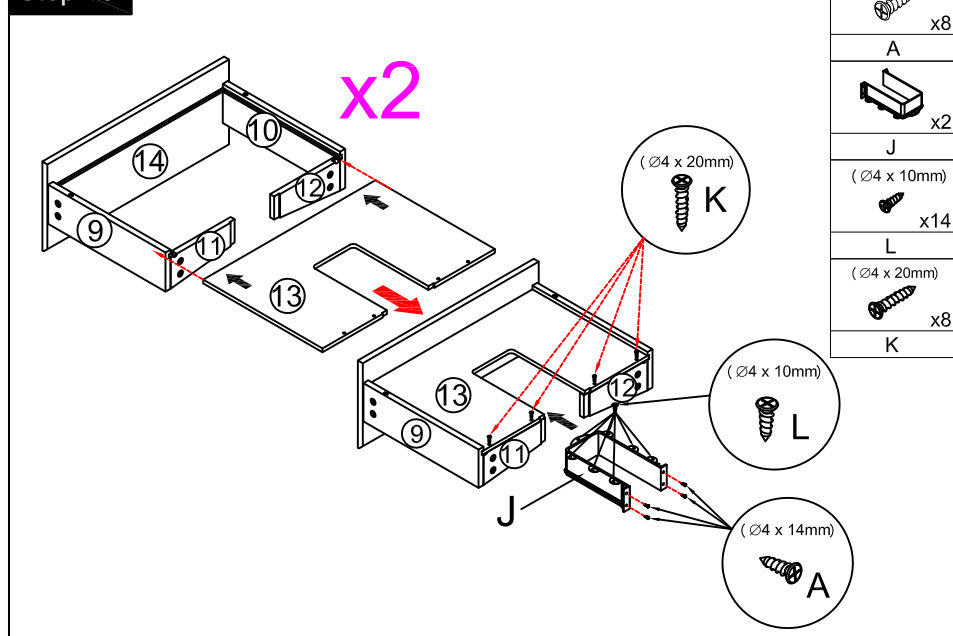


Step 11

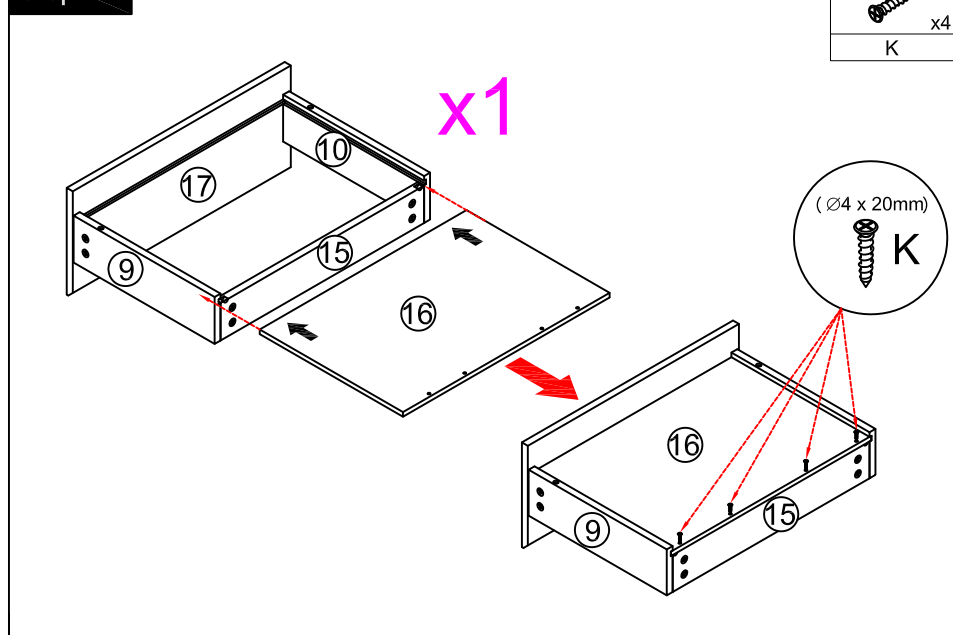

THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

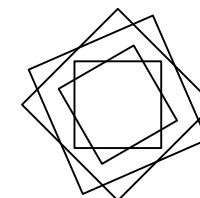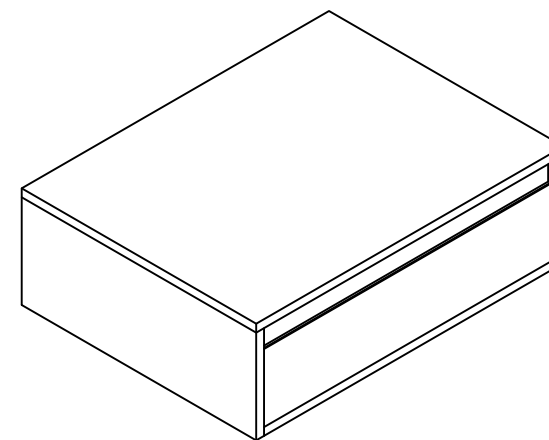


Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV B120 I24


Hardware

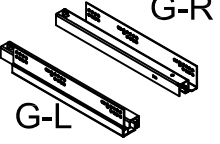NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	10	G	 G-R G-L	1
B	 Two-in-one connector	33			
C	 Two-in-one connector	33	H	 Screws Ø4x20mm	4
D	 Wood plug	2			
E	 Plastic anchor(Ø10mm)	2	I	 Anti-collision gasket	2
F	 Screws for fix on the wall	2	J	 Screwdriver	1

Recommended tools

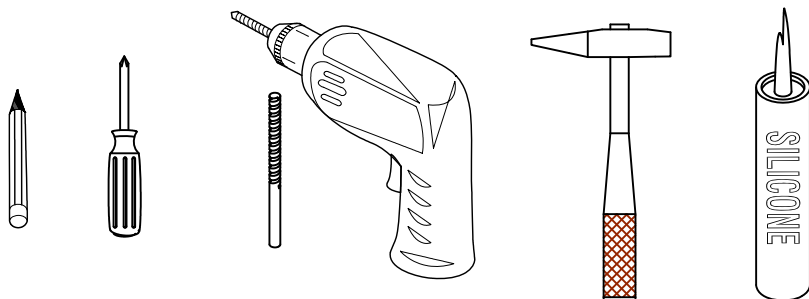



Dimensions

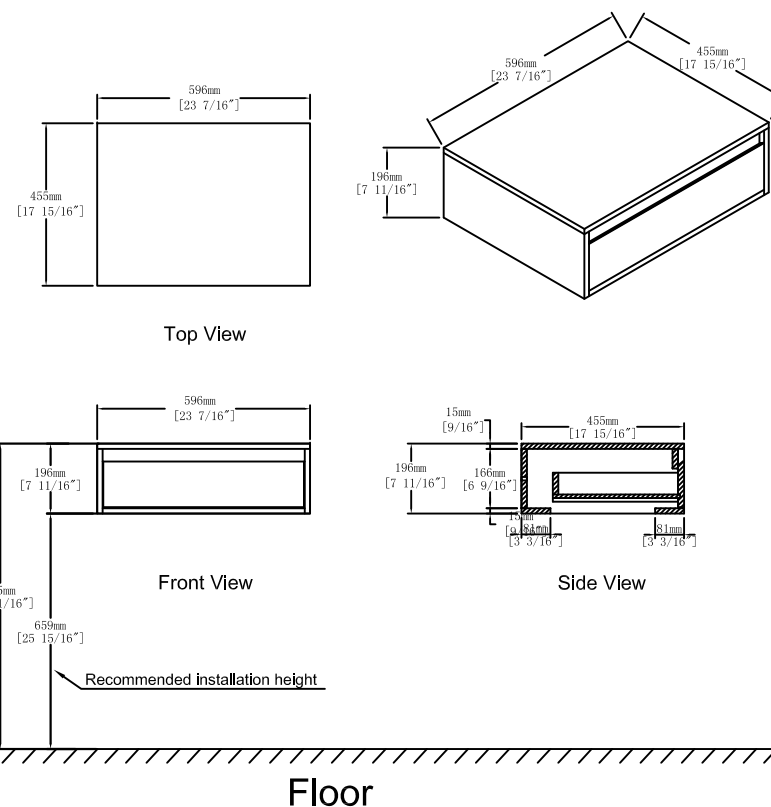

CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

Step 15

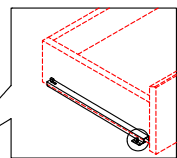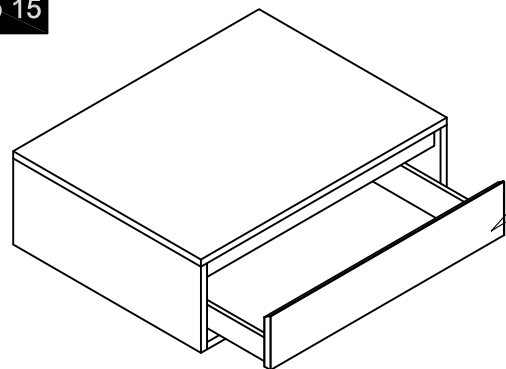


($\varnothing 4 \times 14\text{mm}$)

x4


A



Tool

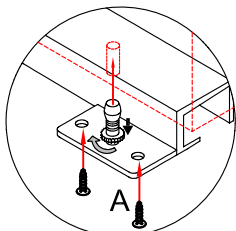


Note: The bottom of the rail is fixed with screw A


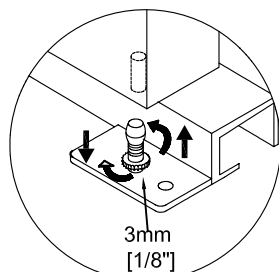


Note: The rails adjust their height 3mm.

Finished

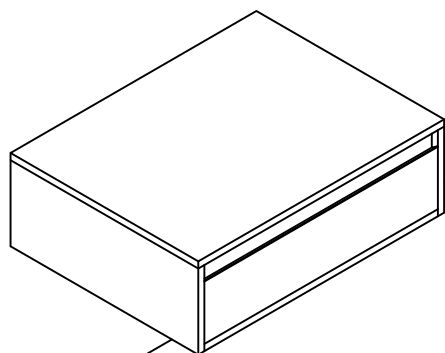


Dimensions

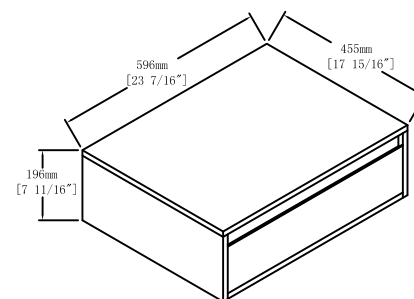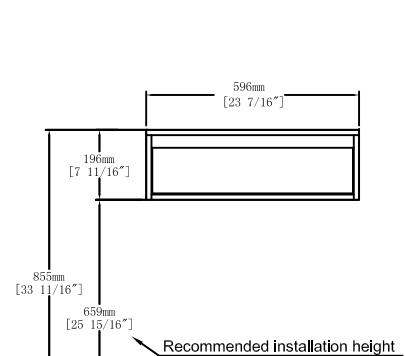


Floor

Components

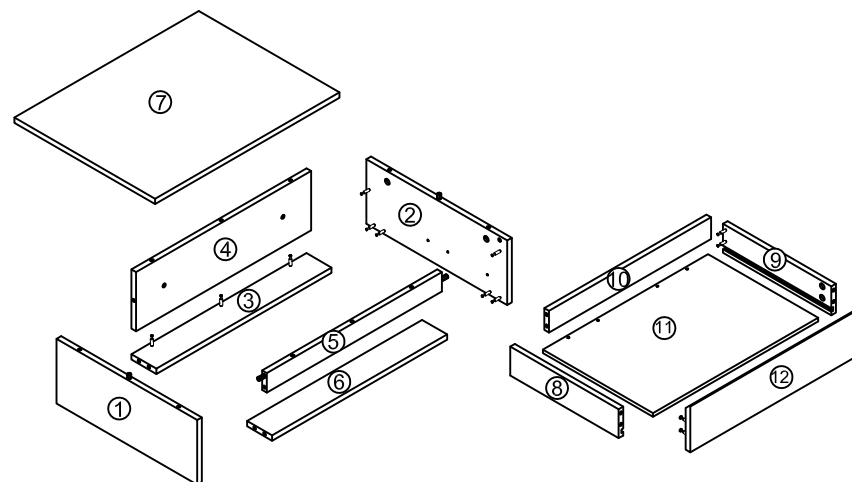

Step 1


($\varnothing 4 \times 14\text{mm}$)  x6	 G-L x1	 G-R x1	
A	G		Tool

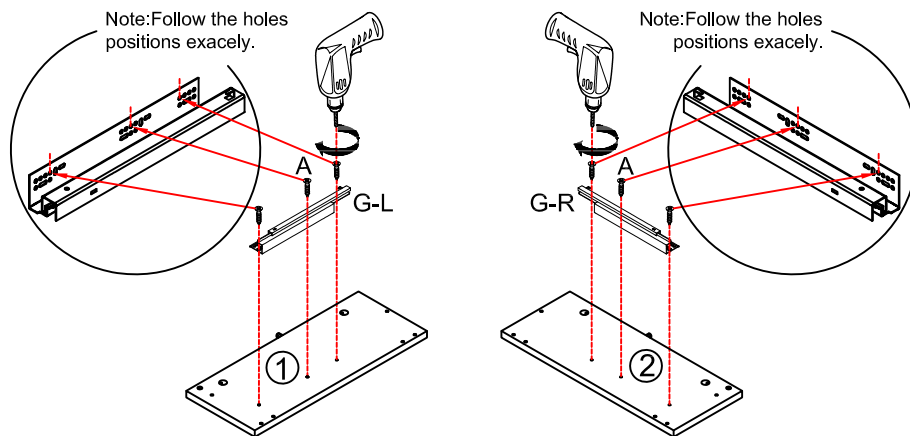





Step 2

 x3
B
 x3
C

J

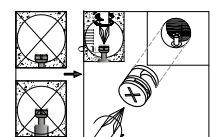


Attention: The lock handle arrow points to the side face.

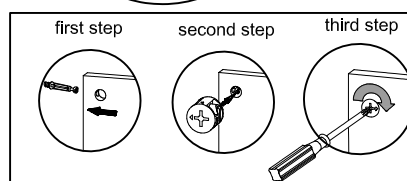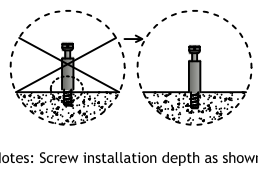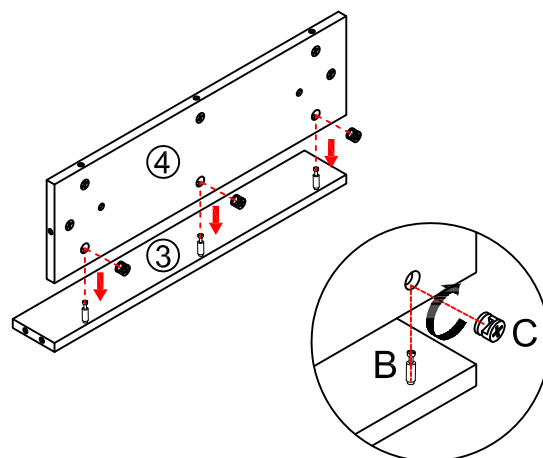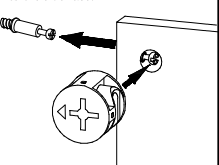


Step 13





 x2
F

Tool

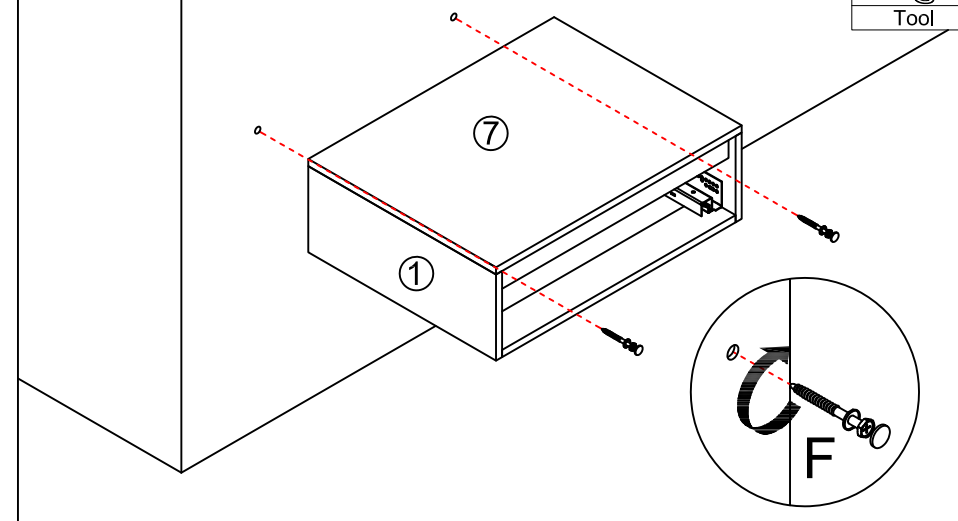


Step 14

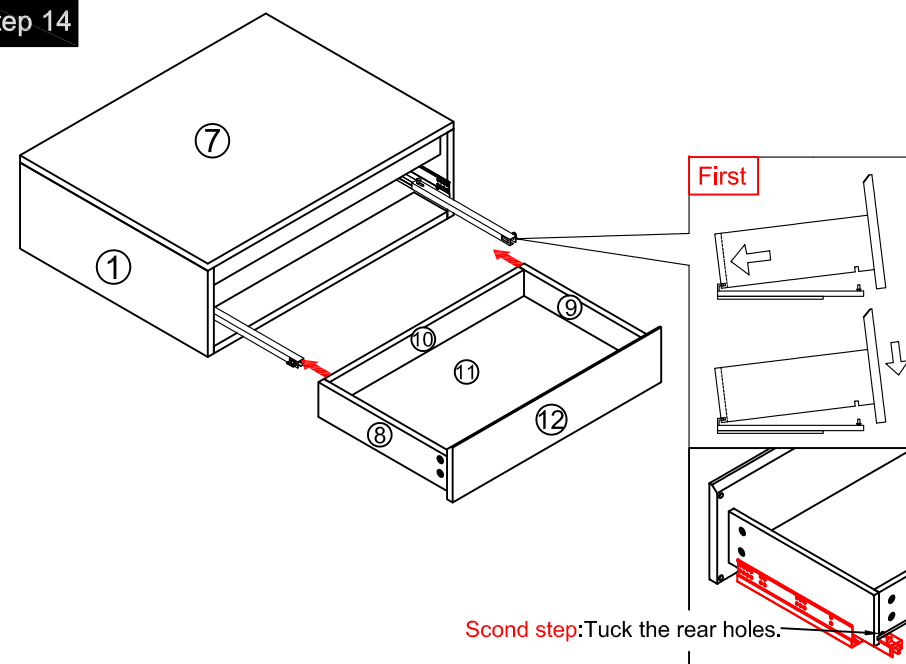


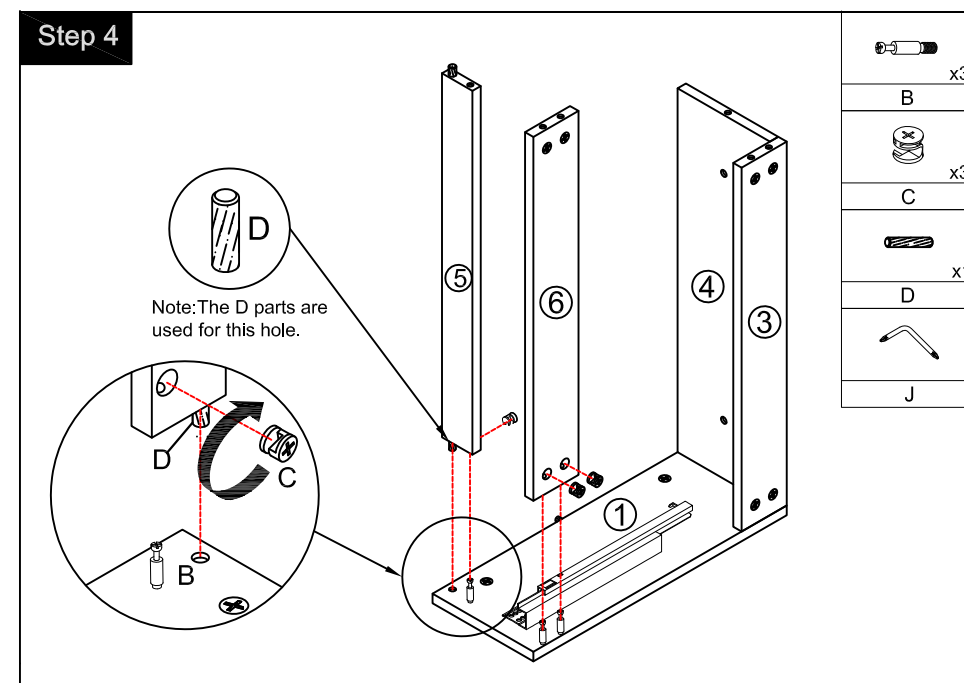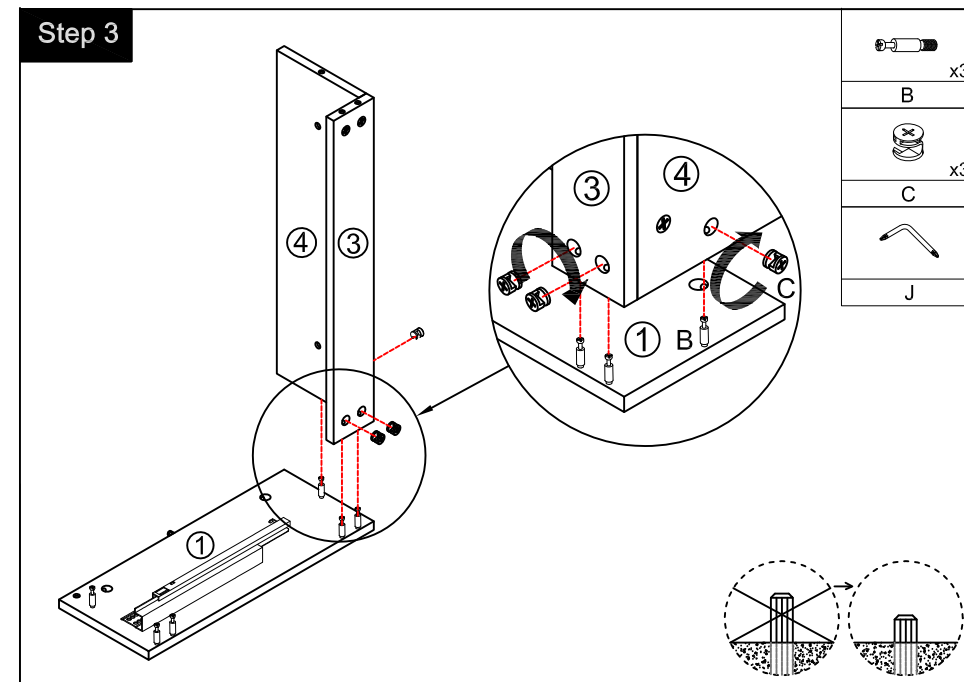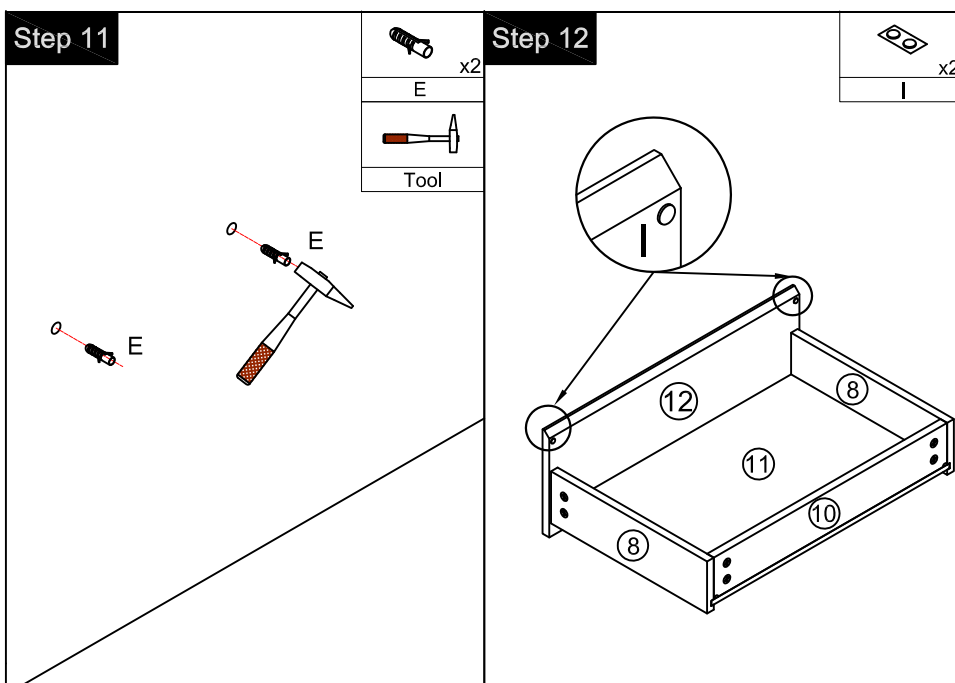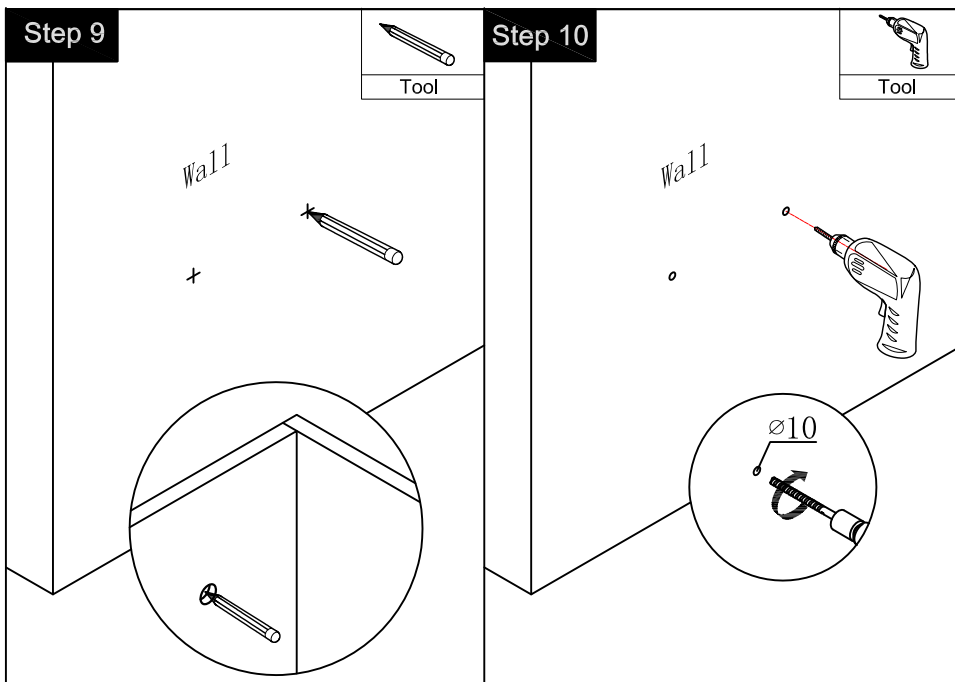


Step 5

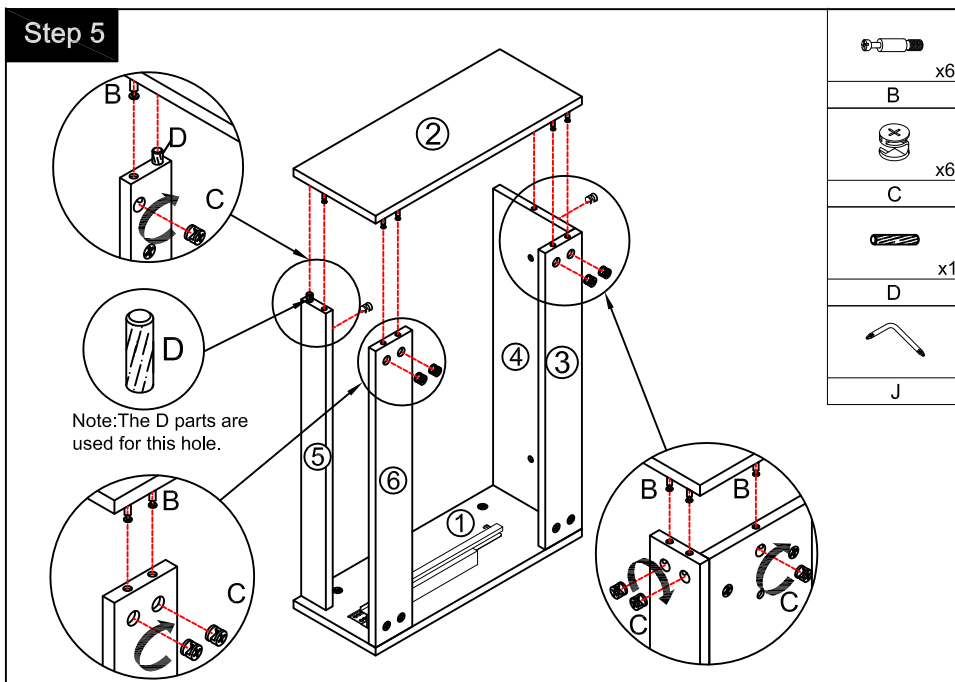

Step 6

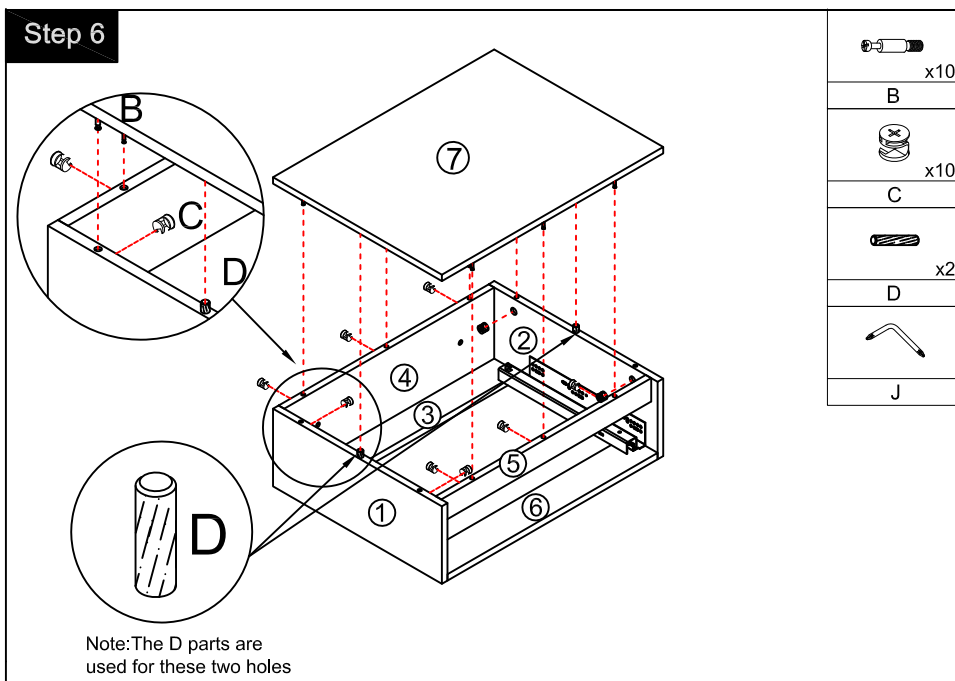

Step 7

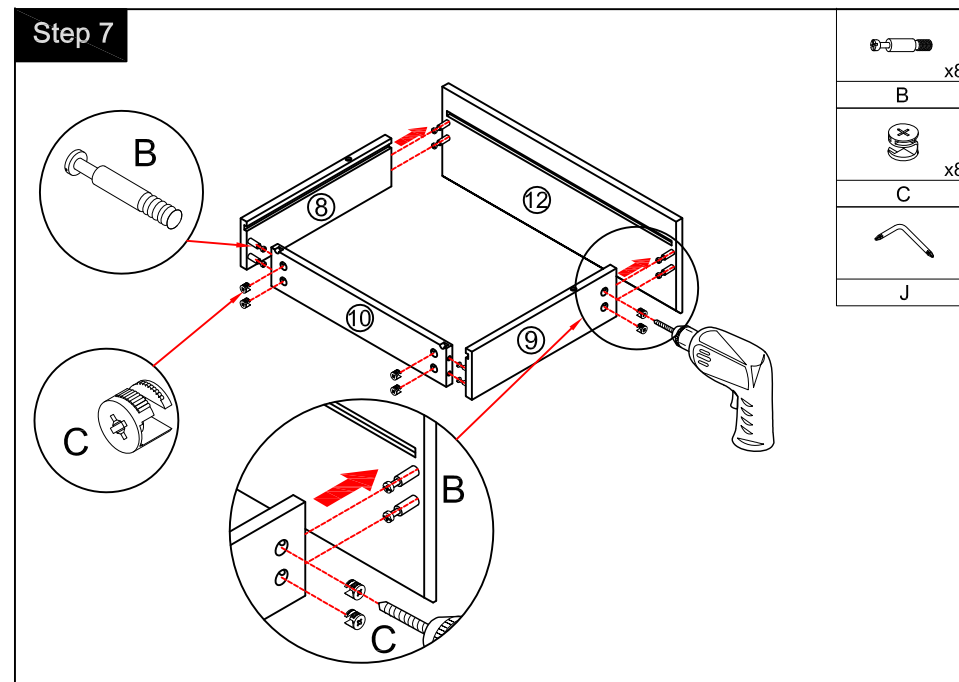

Step 8

