




Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

California King Bed

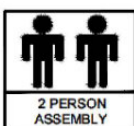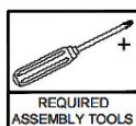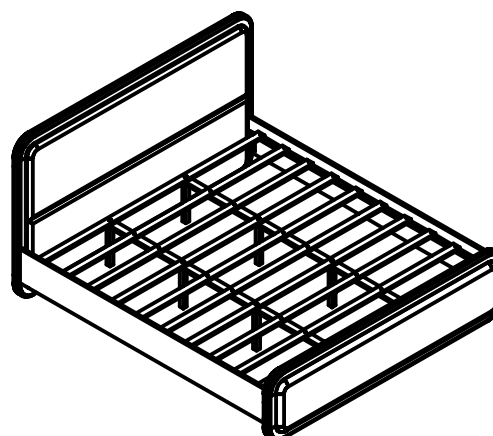



WARNING

STRANGULATION HAZARD.

NEVER place bed near windows where cords from blinds or drapes may strangle a child.
NEVER suspend strings over bed.
NEVER place items with a string, cord, or ribbon, such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts.
ALWAYS follow assembly instructions.



WARNING!

Not intended for children under the age of six. INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS. Openings in and between bed parts can entrap the neck and head of a small child. NEVER use bed for child under the age of six.

The mattress must be appropriately sized for the bed. If the mattress is undersized, dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.

NOTE: This Bed is NOT a TOY.

Keep your child/children at bay during the assembly process.






The BED is HEAVY.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting it.


Parts List (N757P477819)

Label	Picture	Description	QTY
1		Headboard	2
2		Headboard vertical	1
3		Headboard vertical	1
4		Headboard crossbar	2
5		Headboard crossbar	2
6		Corner bracket	8
7		Rear Cross Rail	1


Parts List (N757P477819)

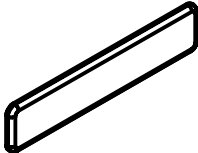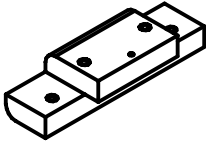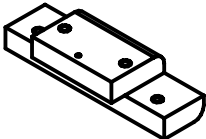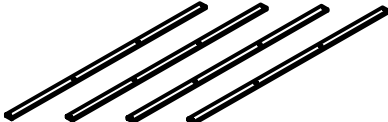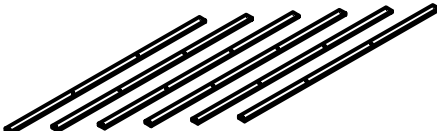8		Footboard	1
9		Footboard vertical	1
10		Footboard vertical	1
13		Legs Support 294 mm	8
14		Slats 1835mm	4
15		Slats 1835mm	6

Parts List (N757P477820)














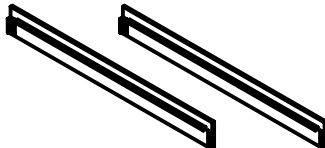
11		Side Rails	2
12		Slat support 2030mm	2

Hardware (N757P477819)

Label	Picture	Description	QTY
A		Bolt (Ø1/4"x40 mm)	16(+1)
B		Screws (M4 x 35 mm)	16(+1)
C		Screws (M4 x 50 mm)	28(+1)
D		Bolt (Ø1/4"x 20 mm)	8(+1)
E		Floor Leveler (Ø1/4"x20mm)	8(+1)
F		Bolt (Ø1/4"x50 mm)	8(+1)
G		L Bracket	2(+1)
J		Screws (M4 x 15 mm)	4(+1)
H		Screws (M4 x 30 mm)	32(+1)
I		Allen Key	1(+1)
K		Screwdriver(Not provided)	

Assembly Preparation

Before Beginning Assembly:

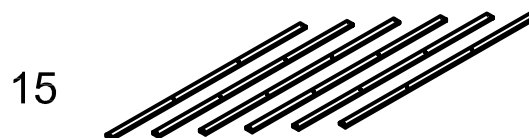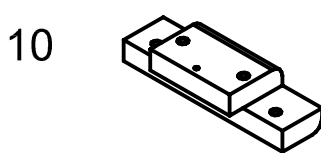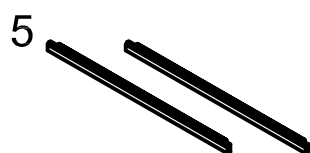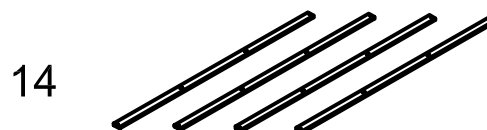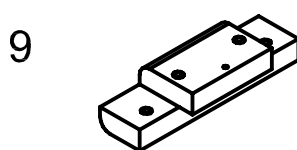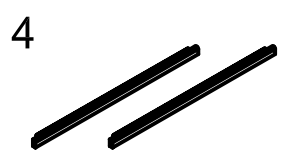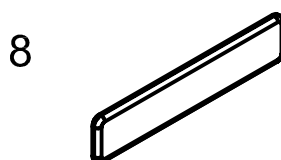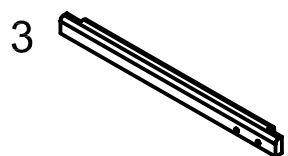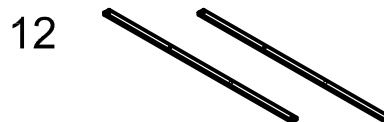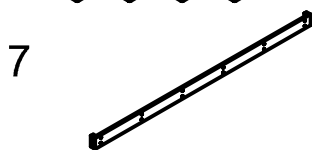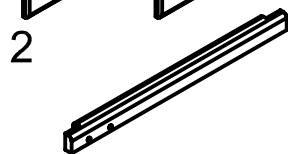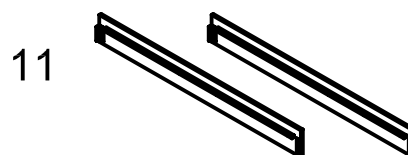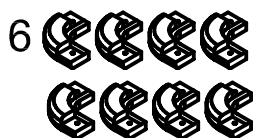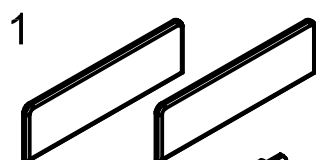

- Read instruction, cover to cover.



- Have 2 adults on hand for assembly.



- Do not assemble on flooring or carpet.




- Assemble on a clean non-marring surface (packing foam).




- Save all packaging until finished.

Assembly Steps

Overview

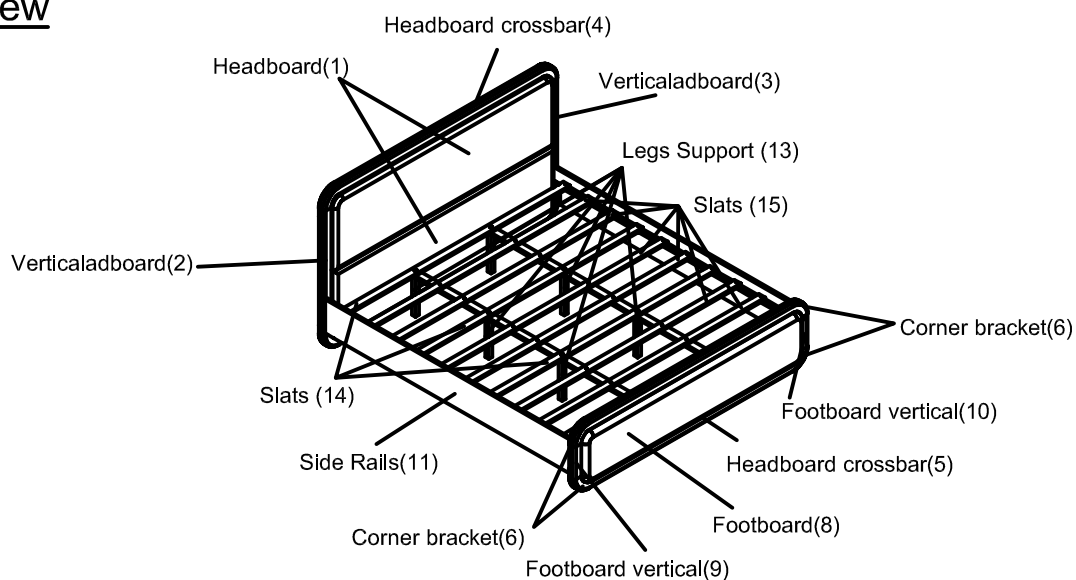


FRONT FACING

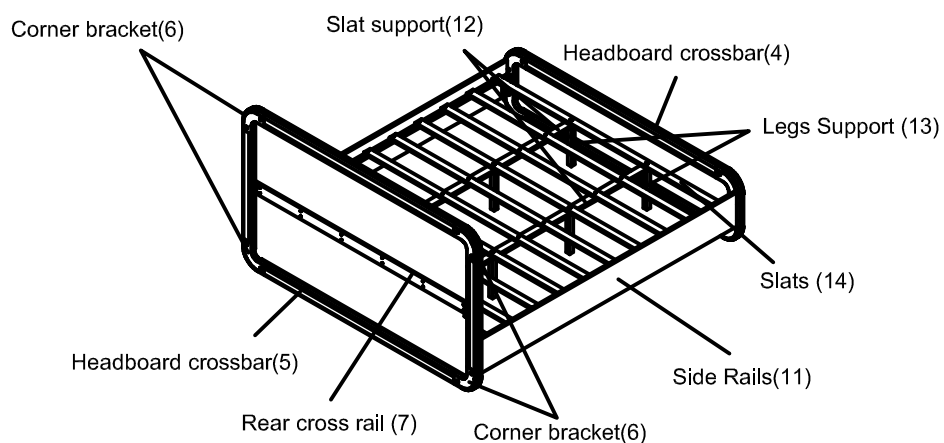

BACK FACING


This Bed has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bed parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

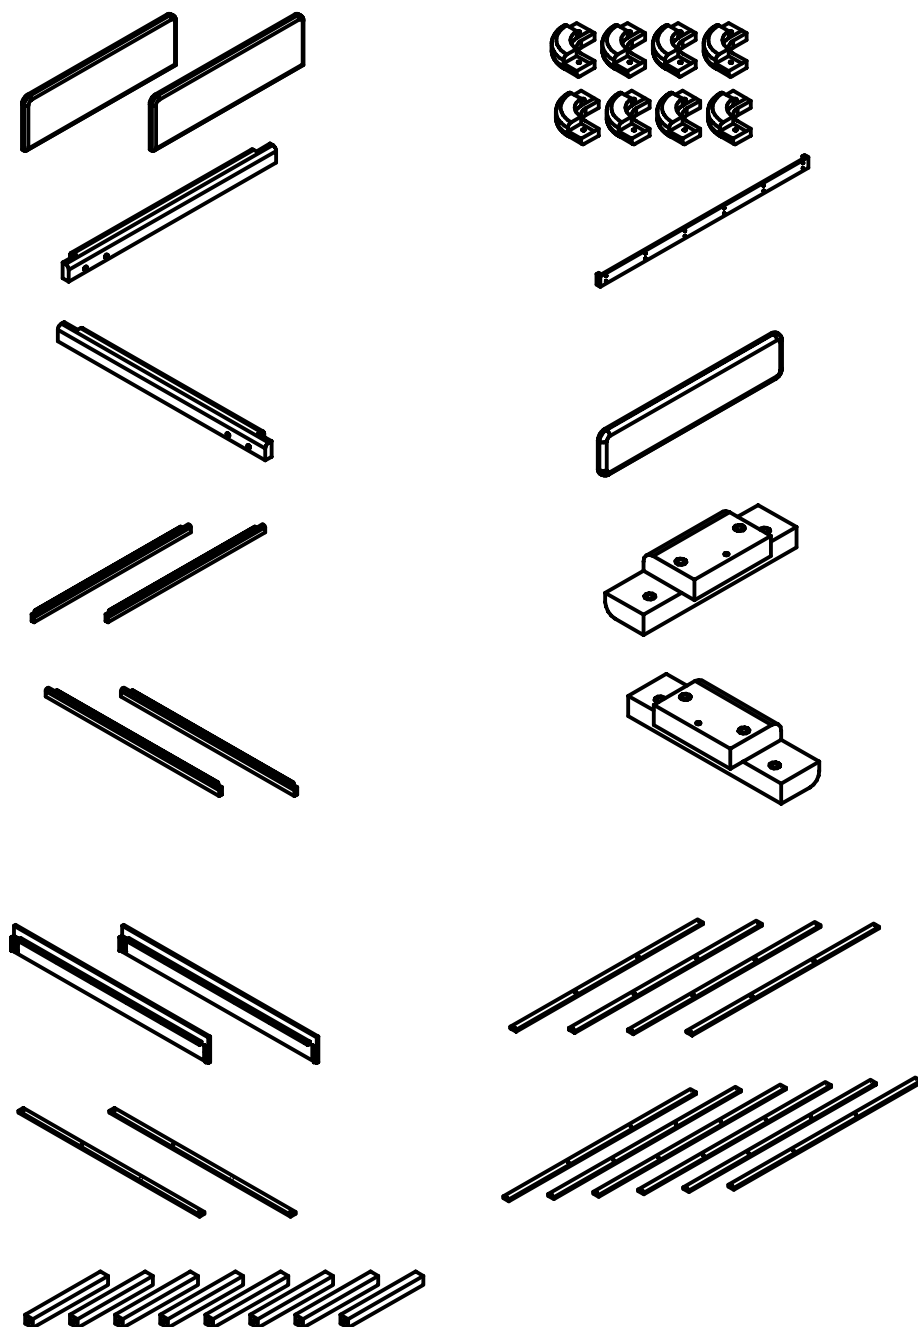

Unpack and place all parts on a clean, non-marring surface.

Step 2

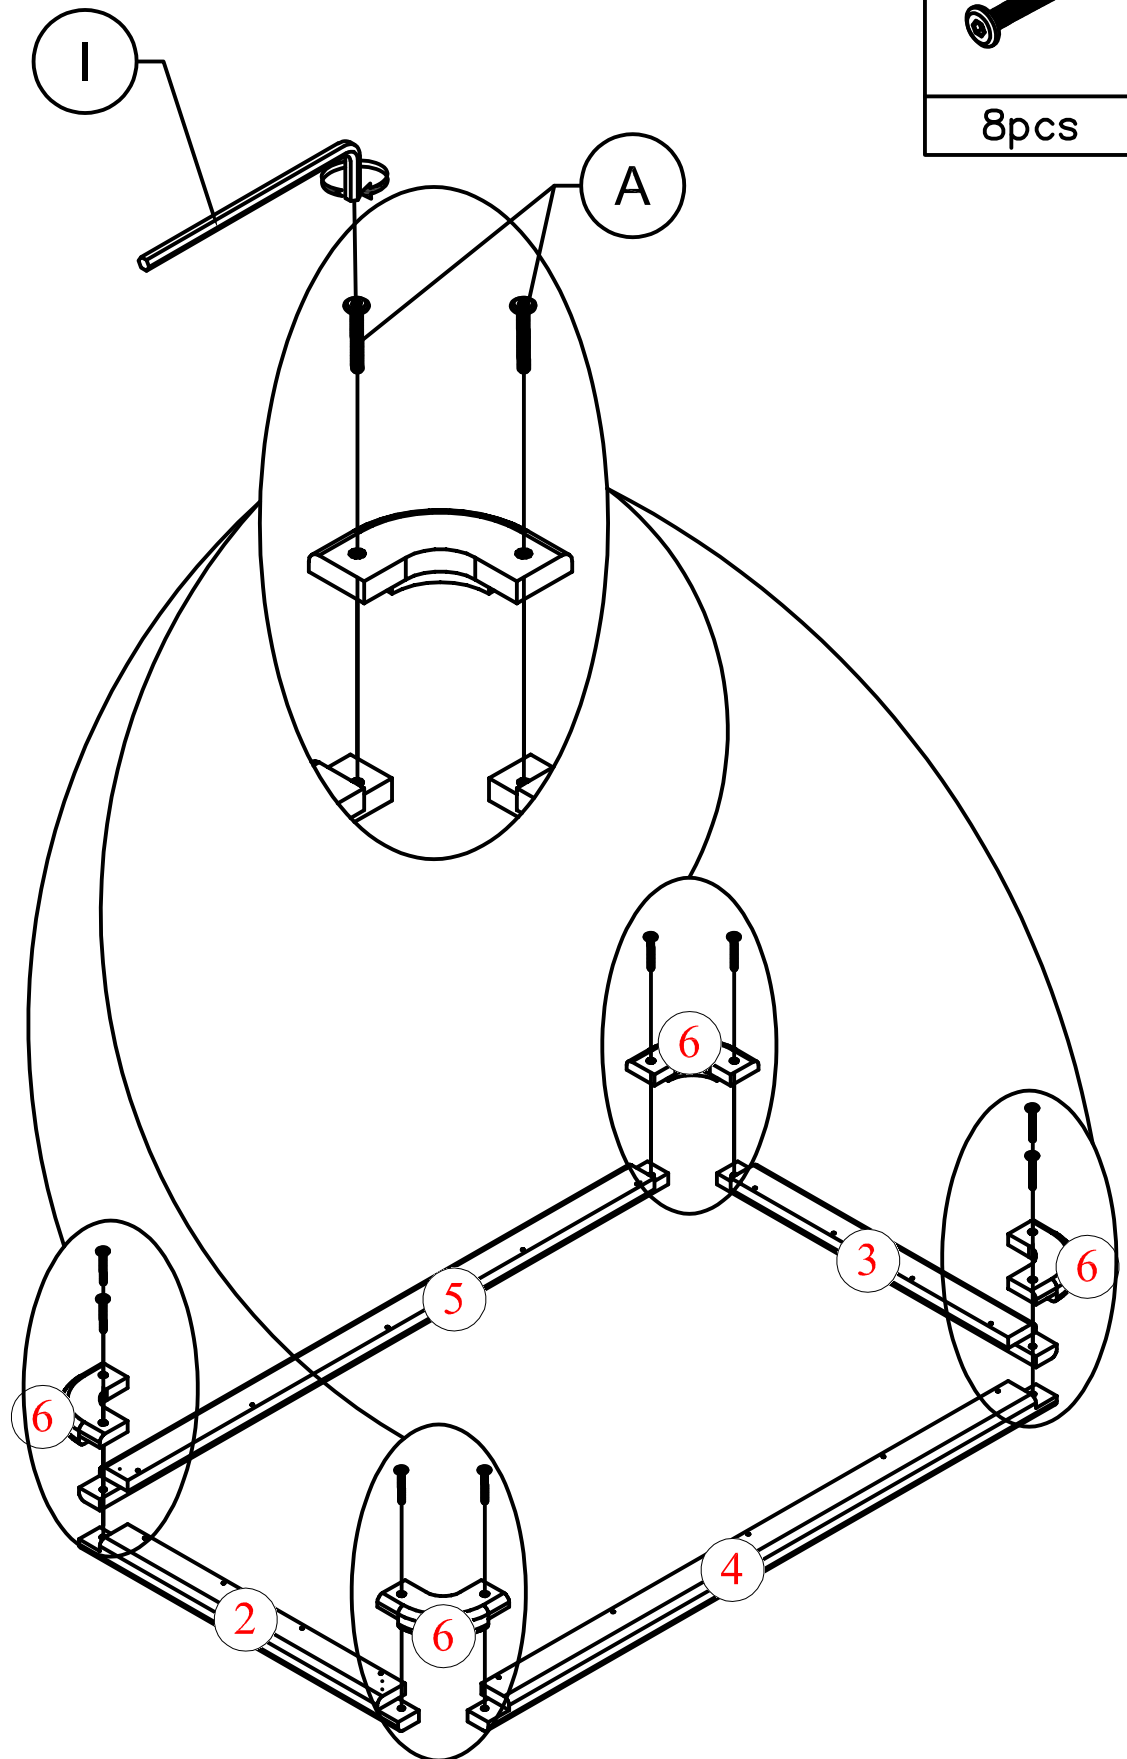


Align the Headboard vertical (2), Headboard vertical (3), Headboard crossbar (4), Headboard crossbar (5), and Corner bracket (6) as shown in the illustration. Use 8 bolts (A) to secure the components using an Allen key (I).

Step 3

B




4pcs

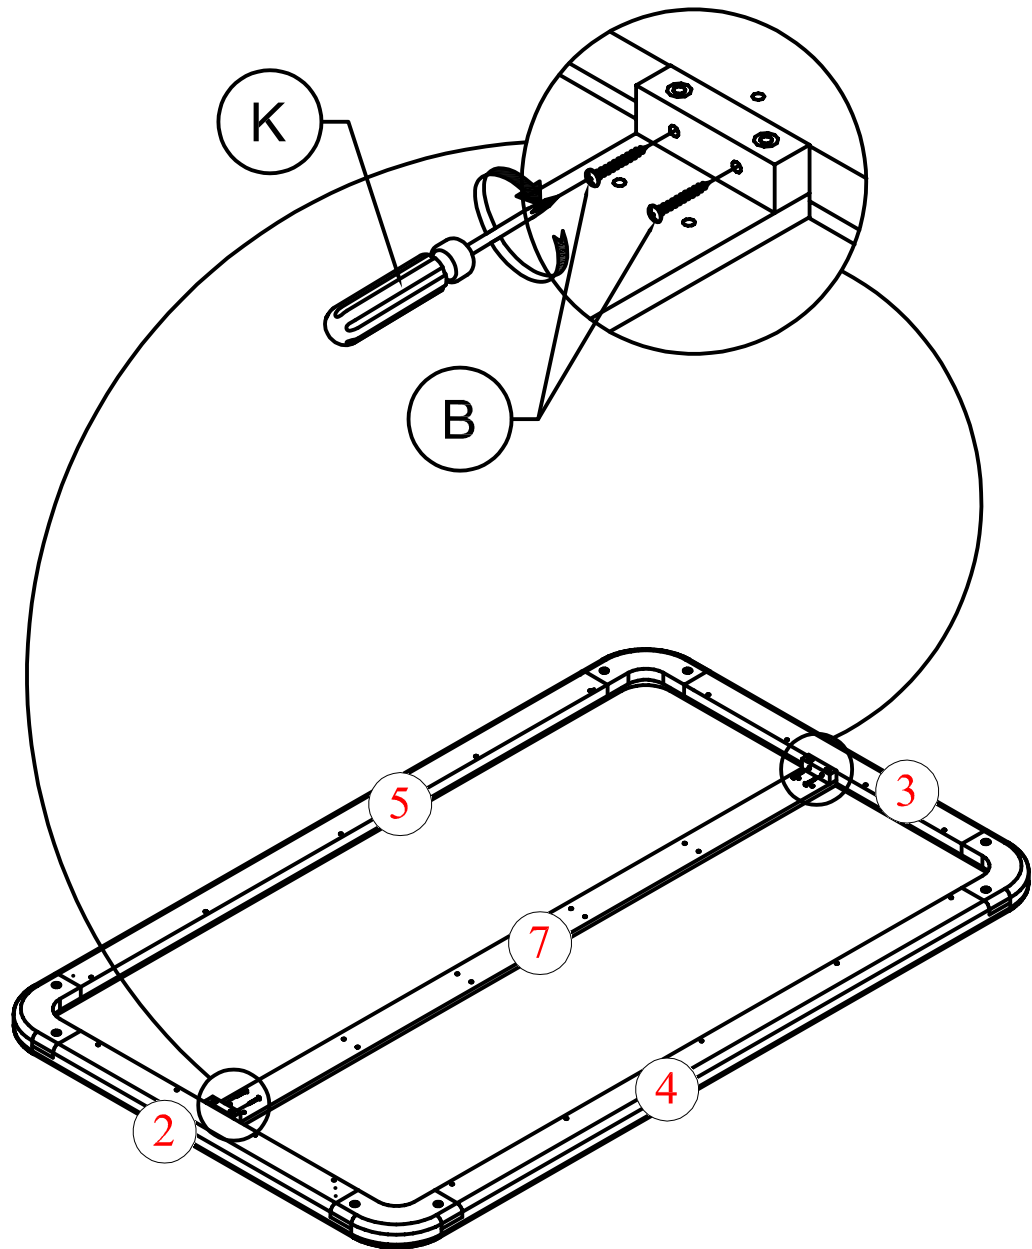


Align the Rear Cross Rail (7) with the parts assembled in the previous step as shown in the illustration. Use 4 screws (B) to secure the Rear Cross Rail (7) to the other parts using a screwdriver (K).

Step 4

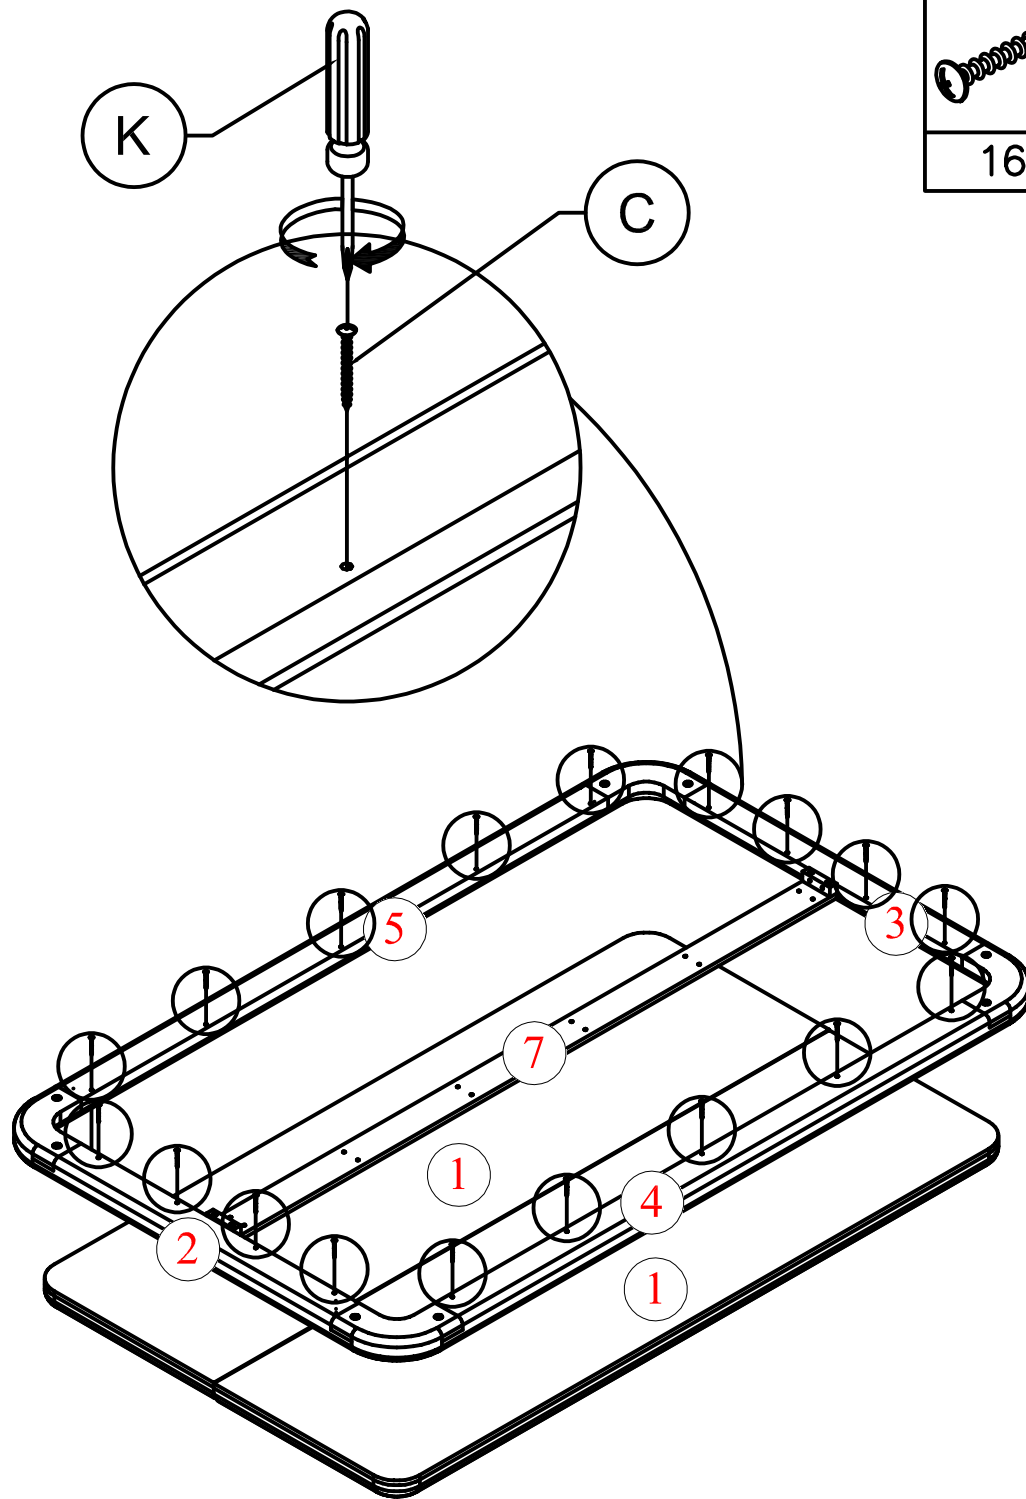


Position the Headboard (1) beneath the assembled frame as shown in the illustration. Using the Screwdriver (K), tighten 16 Screws (C) to secure the headboard to the designated mounting points on the frame.

Step 5

B


12pcs

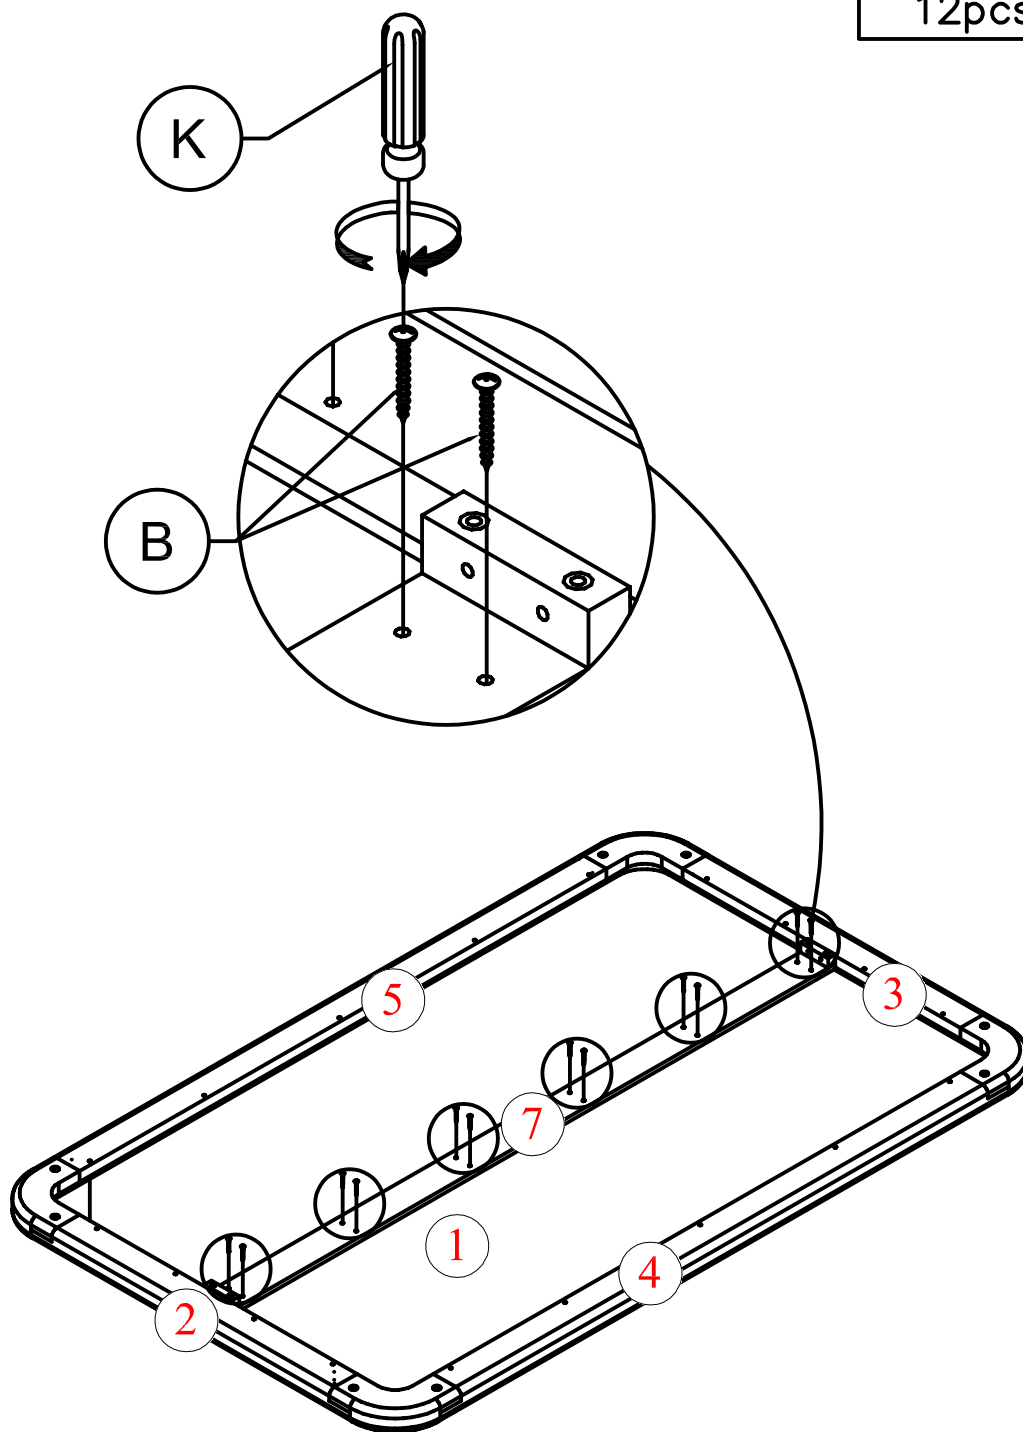


Position the Headboard (1) beneath the assembled frame as shown in the illustration. Using the Screwdriver (K), tighten 12 Screws (B) and to secure the headboard to the designated mounting points on the frame.

Step 6

A




8pcs

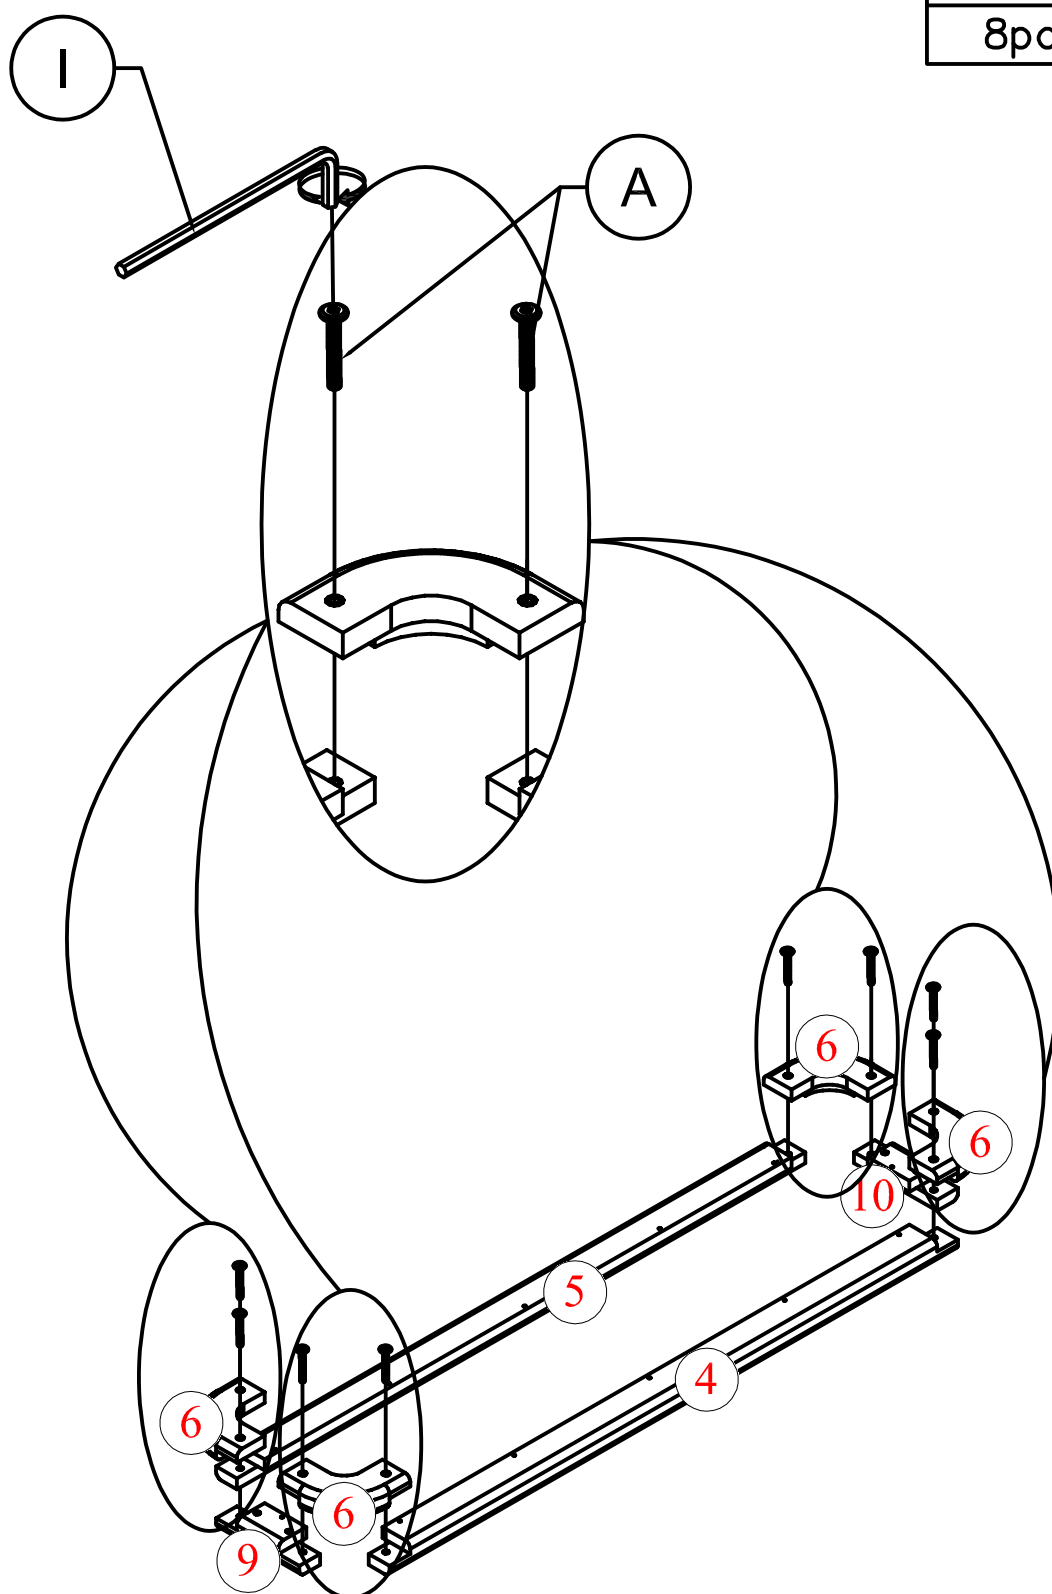


Align the Headboard crossbar (4), Headboard crossbar (5), Corner bracket (6), Footboard vertical (9) and footboard vertical (10) as shown in the illustration. Use 8 bolts (A) to secure the components using an Allen key (I).

Step 7

C




12pcs

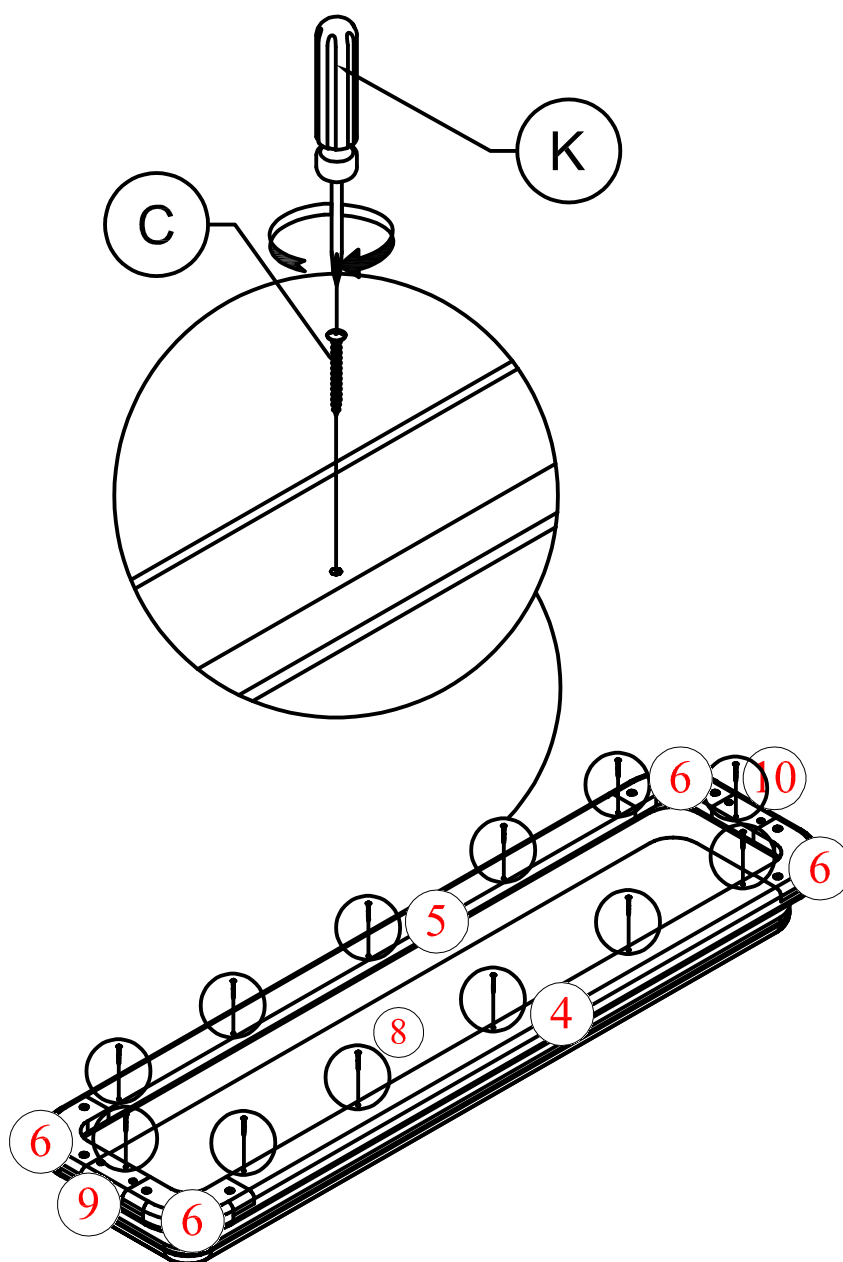


Position the Footboard (8) beneath the assembled frame as shown in the illustration. Using the Screwdriver (K), 12 Screws (C) to secure the headboard to the designated mounting points on the frame.

Step 8

D




8pcs

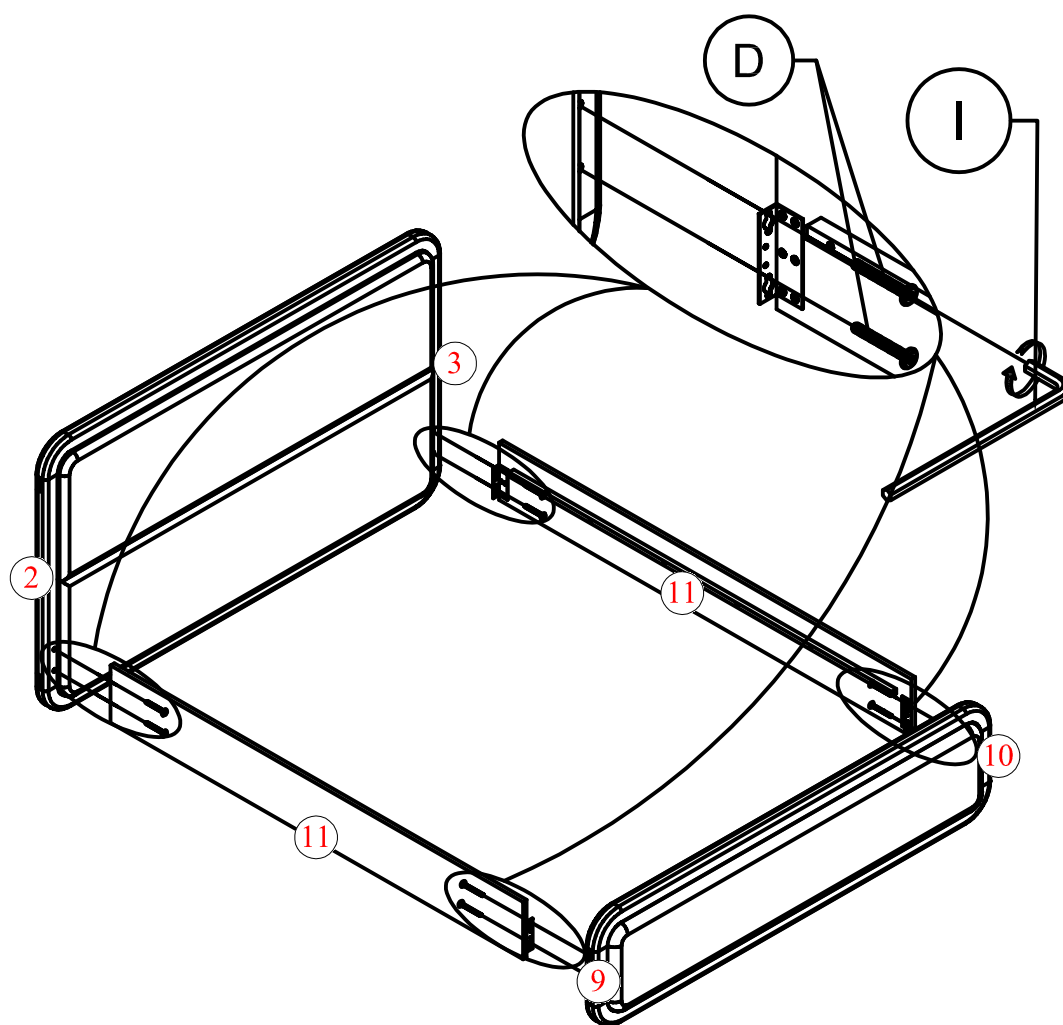

Position the Headboard and Footboard (assembled in the previous step) along with the Side Rails (11) as shown in the illustration. Use 8 bolts (D) to secure the components using an Allen key (I).


Step 9

G	J
	
2pcs	4pcs

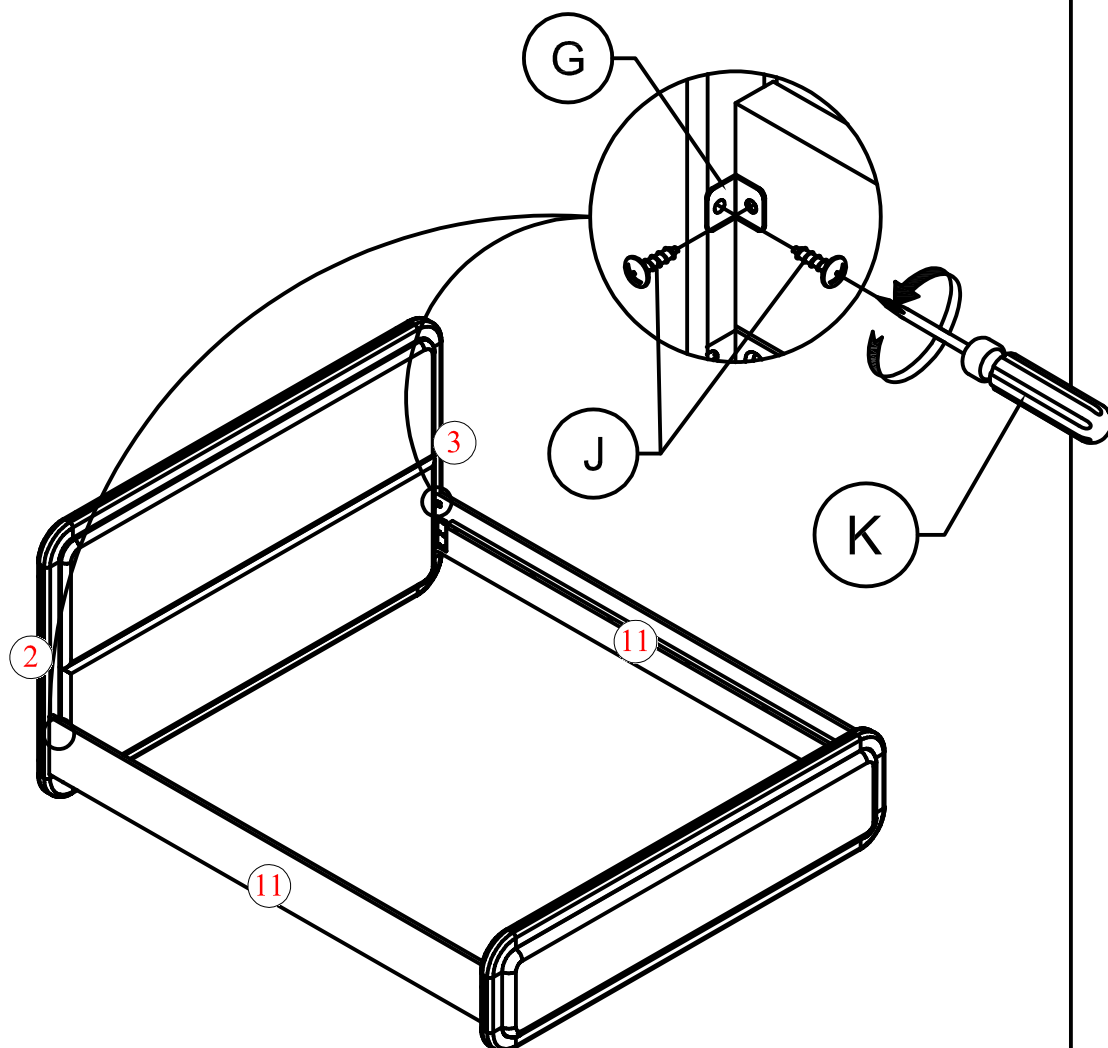

Using the Screwdriver (K), tighten 2 Screws (J) through each L Bracket (G) as shown, on both sides of the Headboard.


Step 10

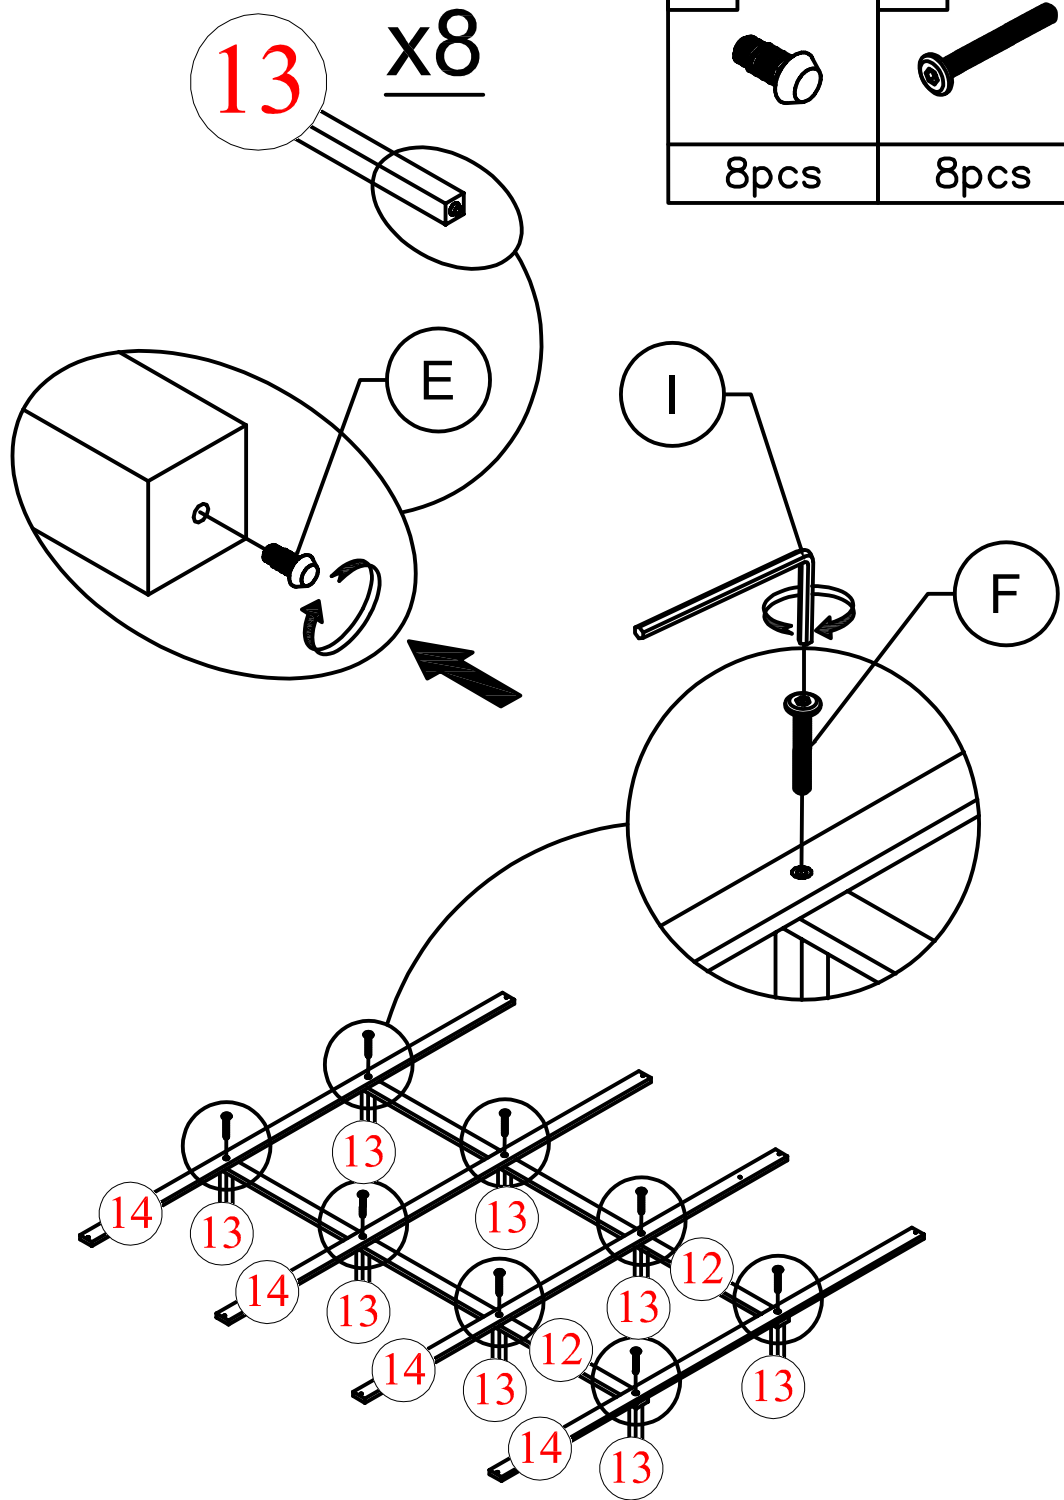

Use your hand to pull the Leveler(E) into the Support Legs (13)
Align the Mounting Position on the Slat Support Bar (12) to the Support Leg (13) and the Slat (14). Attach the Slat (14) and the Slat Support Bar (12) to the Support Leg (13) and by using 8 Bolts (J) with Allen Wrench (I).



DO NOT FULLY TIGHTEN BOLTS IN ONE GO, TIGHTEN THE BOLTS AFTER 8PCS Support Leg (13) ARE ATTACHED.

Step 11

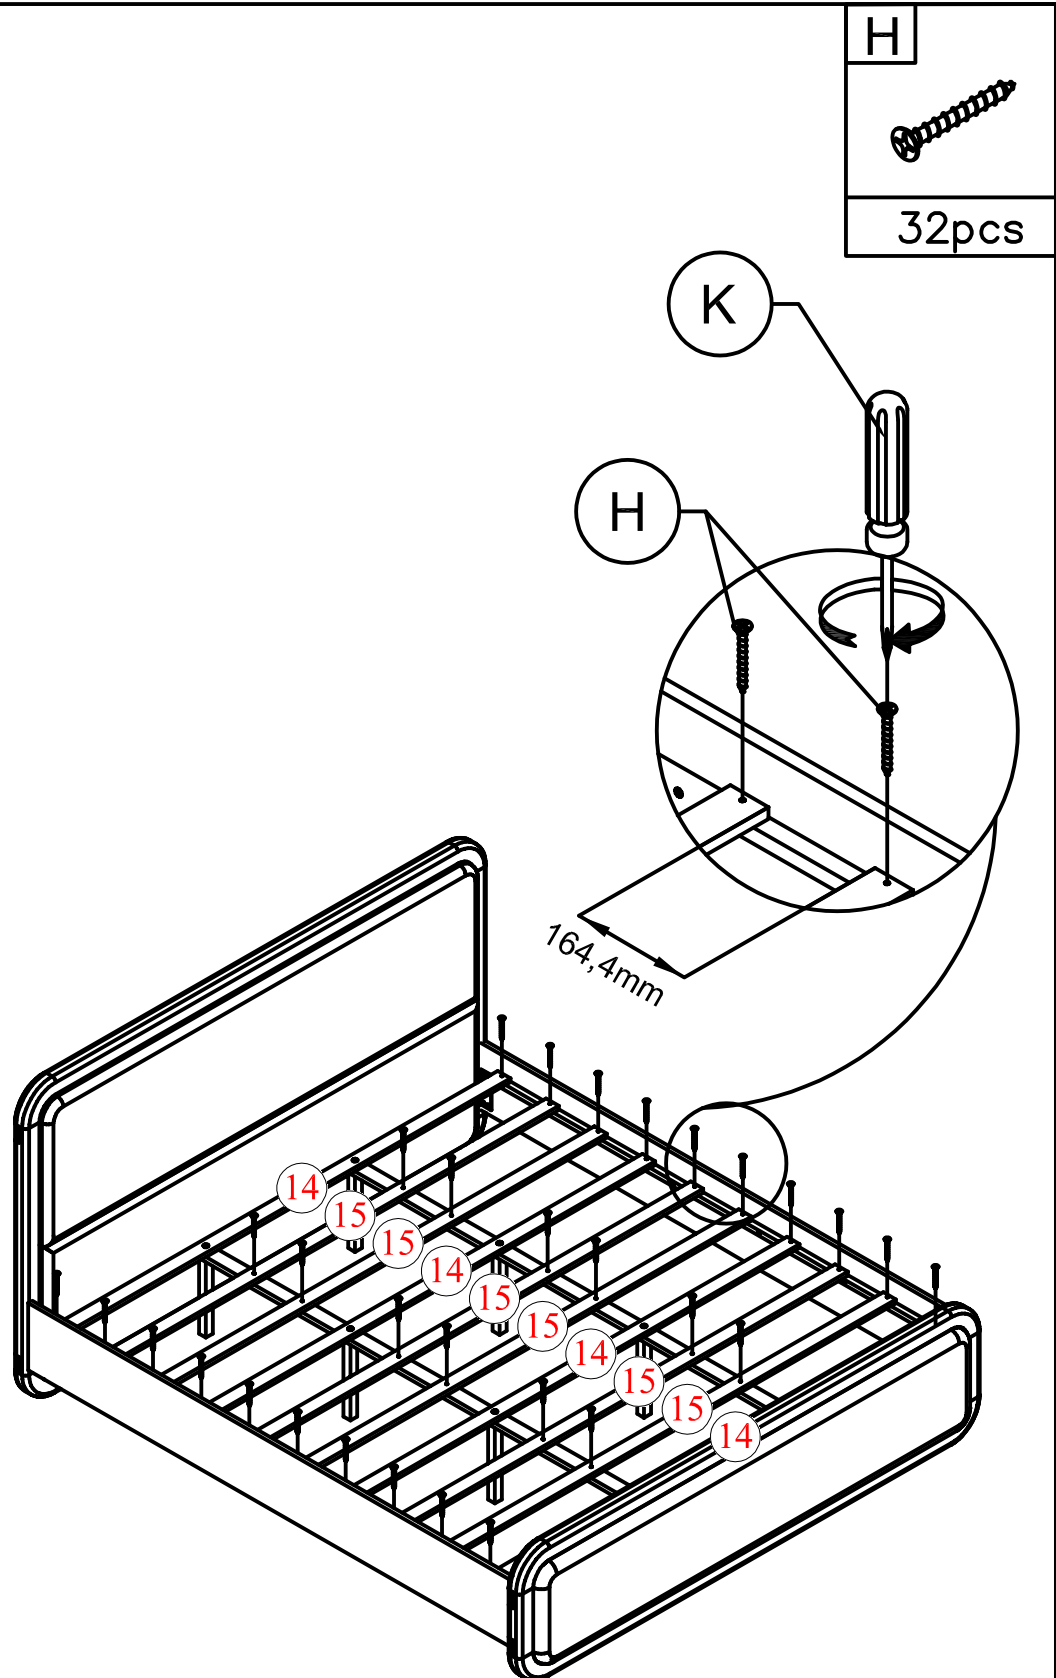


Attach all Slats (15) to the rail on Side Rails (6) by using 32 Screws (H) and Screwdriver (K) (Not Provided).

Step 12

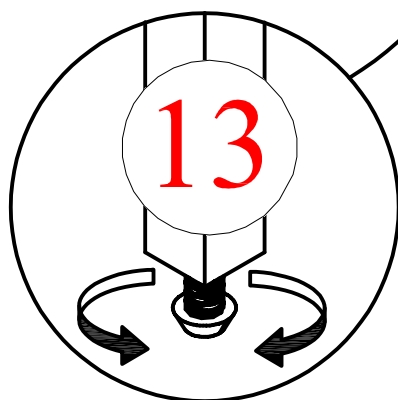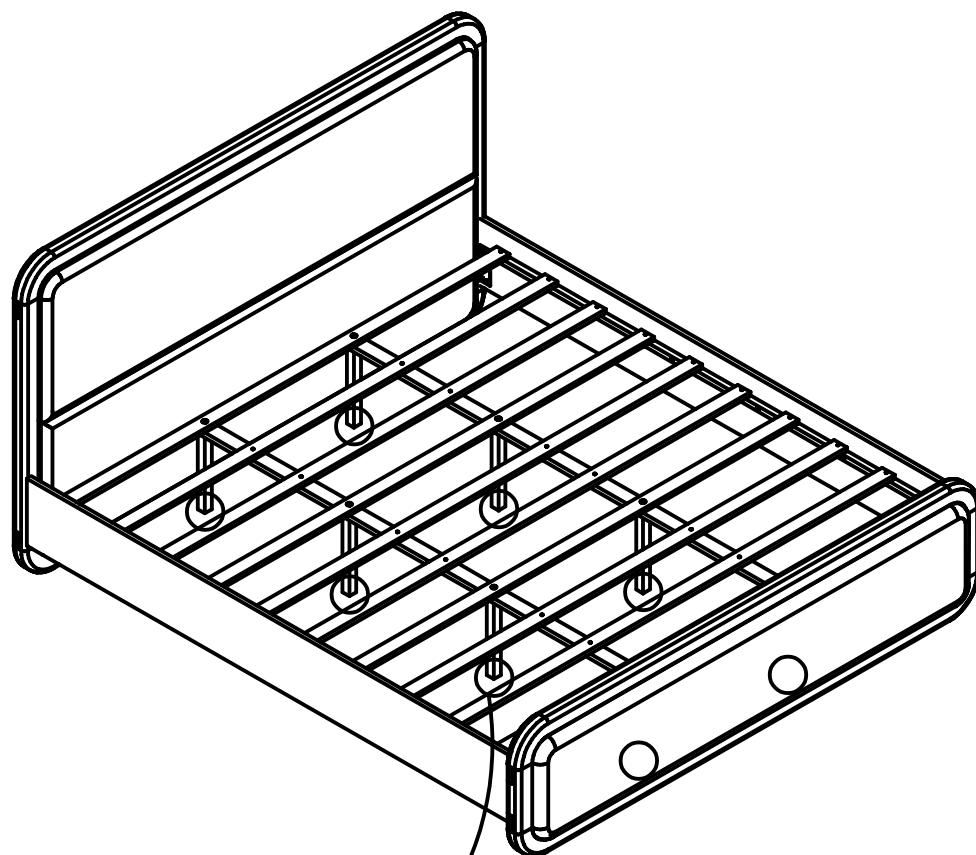

Rotate counterclockwise to increase the length of Floor Leveler, and raise that corner.
Rotate clockwise to lower that corner.

Step 13

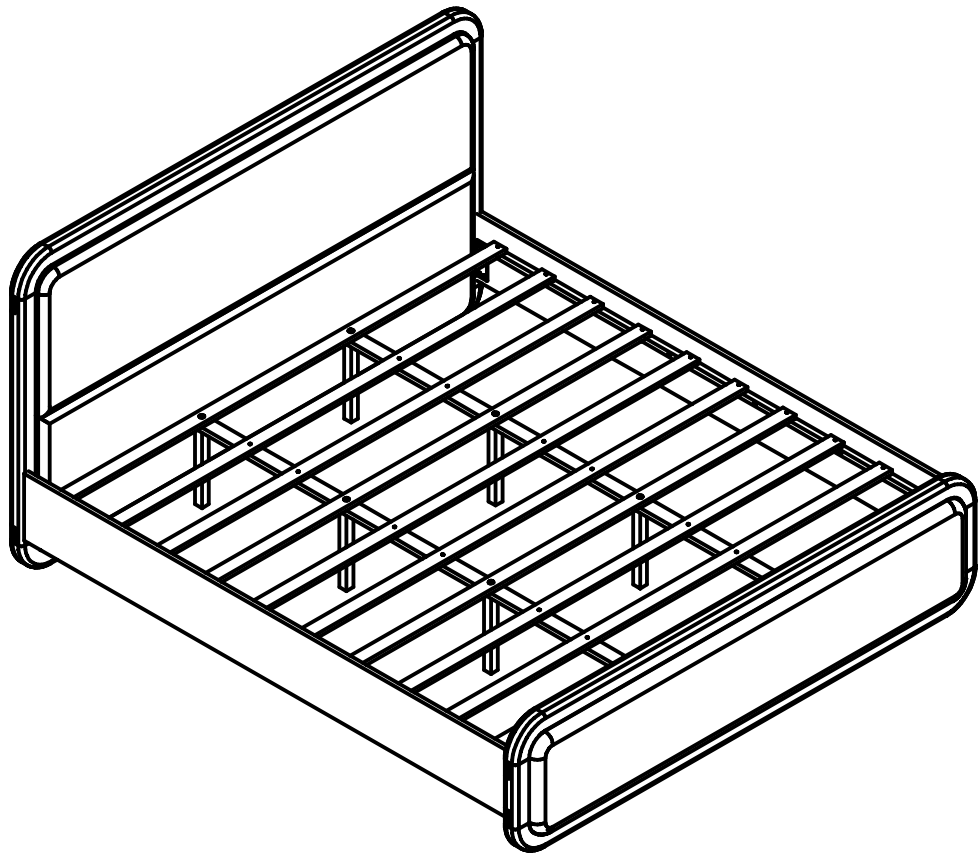

Place the Bed on a **LEVEL SURFACE**.
Inspect it and make sure all parts are adequately connected.

Don't push too hard, shake on the bed.

This would help to align all the parts at all the joint areas.

CAUTION 1: When tightening these screws, tighten sequentially.
DO NOT tighten any screw fully and then towards the next one.
This would cause the frame to warp.

If there is still wobbles, loosen the screws and execute this same process. DO NOT
tighten any screw fully and then towards the next one.

WARNING!! IF BED IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.

The bed is ready to be used.

Caution 2: This bed can only be used on a flat, level surface.