


Bed Frame

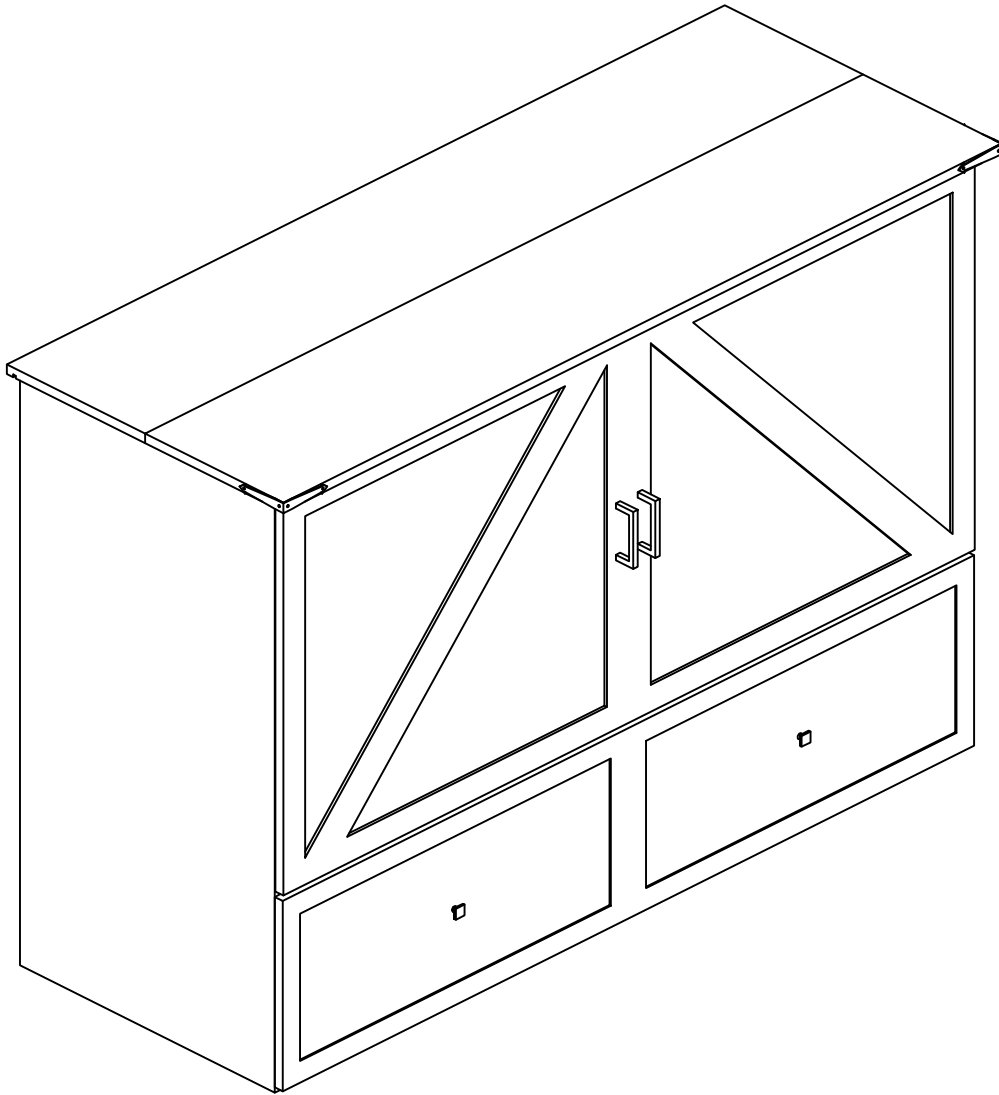


Our product will be delivered to you in 3 packages.


Componets - Panels

Please check you have all the panels listed below


BOX 1

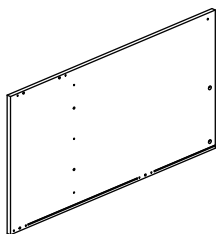


B1 (x1)

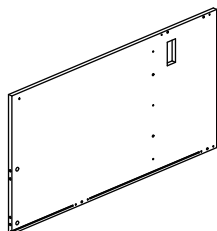


B2 (x1)

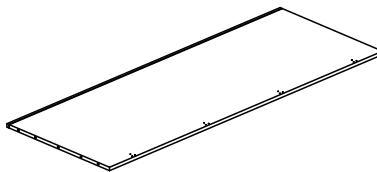


C3 (x1)

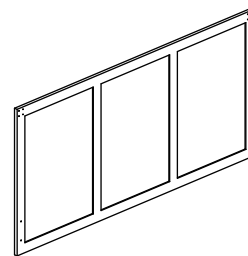

H1 (x1)

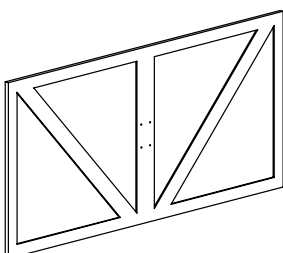


H2 (x1)

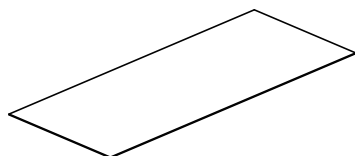


Z1 (x1)


BOX 2

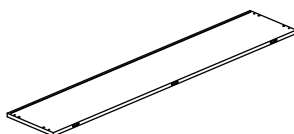


A2 (x1)

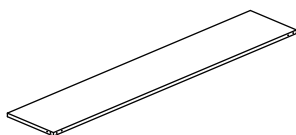


A3 (x1)

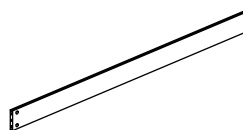


D1 (x1)

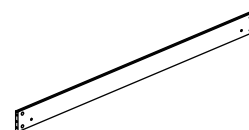


D2 (x1)

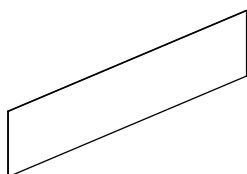


C1 (x2)

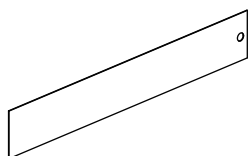


C2 (x1)

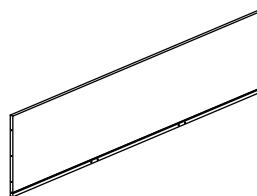


Z2 (x1)

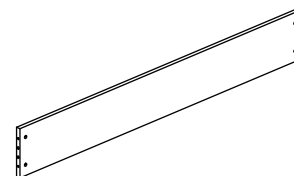


Z3 (x1)

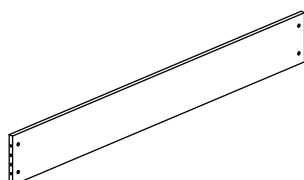


Z4 (x1)

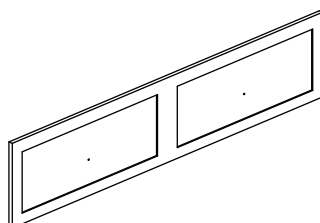

H3 (x1)

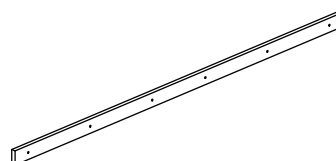

Z5 (x1)




Z6 (x2)


Componets - Panels

Please check you have all the panels listed below


BOX 3

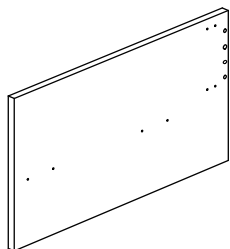


X1 (x1)

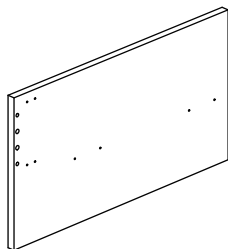


X2 (x1)

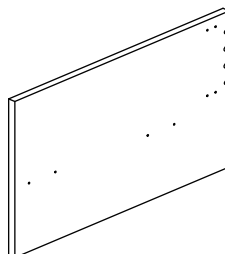


X3 (x1)

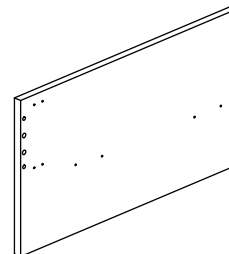


X4 (x1)

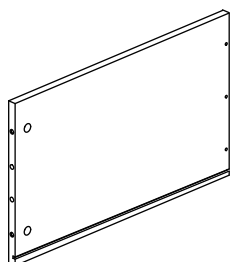


X5 (x1)

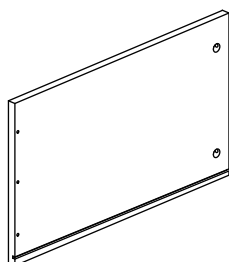


X6 (x1)

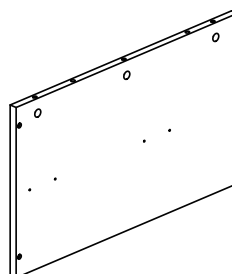

X7 (x1)

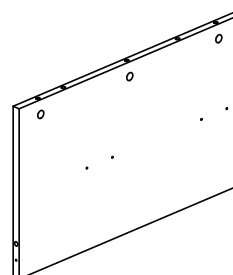

X8 (x1)












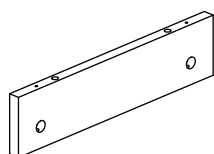


E1 (x2)


Componets - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.


A  8*30mm Wooden Dowel x 38	B  Cam Bolt x 42	C  Cam Lock x 42
D  x 4 M4*22mm Bulong x8	E  x 2 M4*18mm Bulong x2	F  x 12
G  x 8	H  x 3	I  x 2
J  x 8	K  x 1	L  x 14
M2  x 8 20*10mm EVA	N  M4*25mm x 6	
	Q  M4*40mm Screw x 16	R  M4*18mm Screw x 32
	T  M4*12mm Screw x 42	U  M4*15mm Screw x 114
V  M3*14mm Screw x 2		X  x 4 10x10mm EVA
Y  x 6 =  x 6 +  x 6		
A1  x 2		

Tools required



Phillips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (30mm screw shown).

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

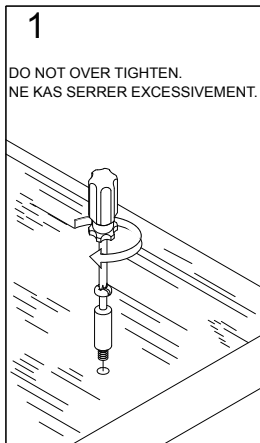

Step 2


Push the male camlock into the entry hole.

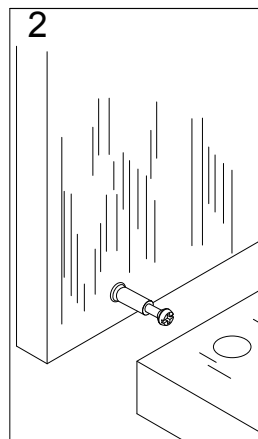

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

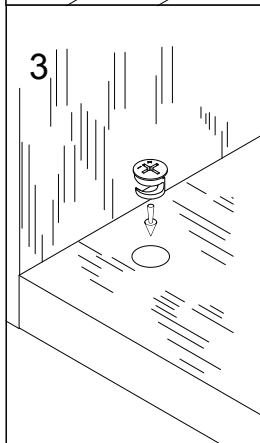


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

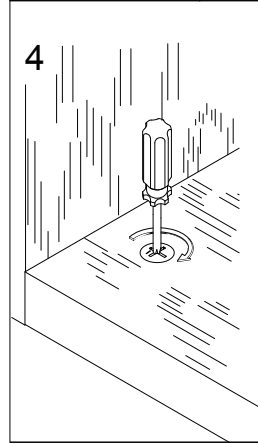


Assembly Instructions

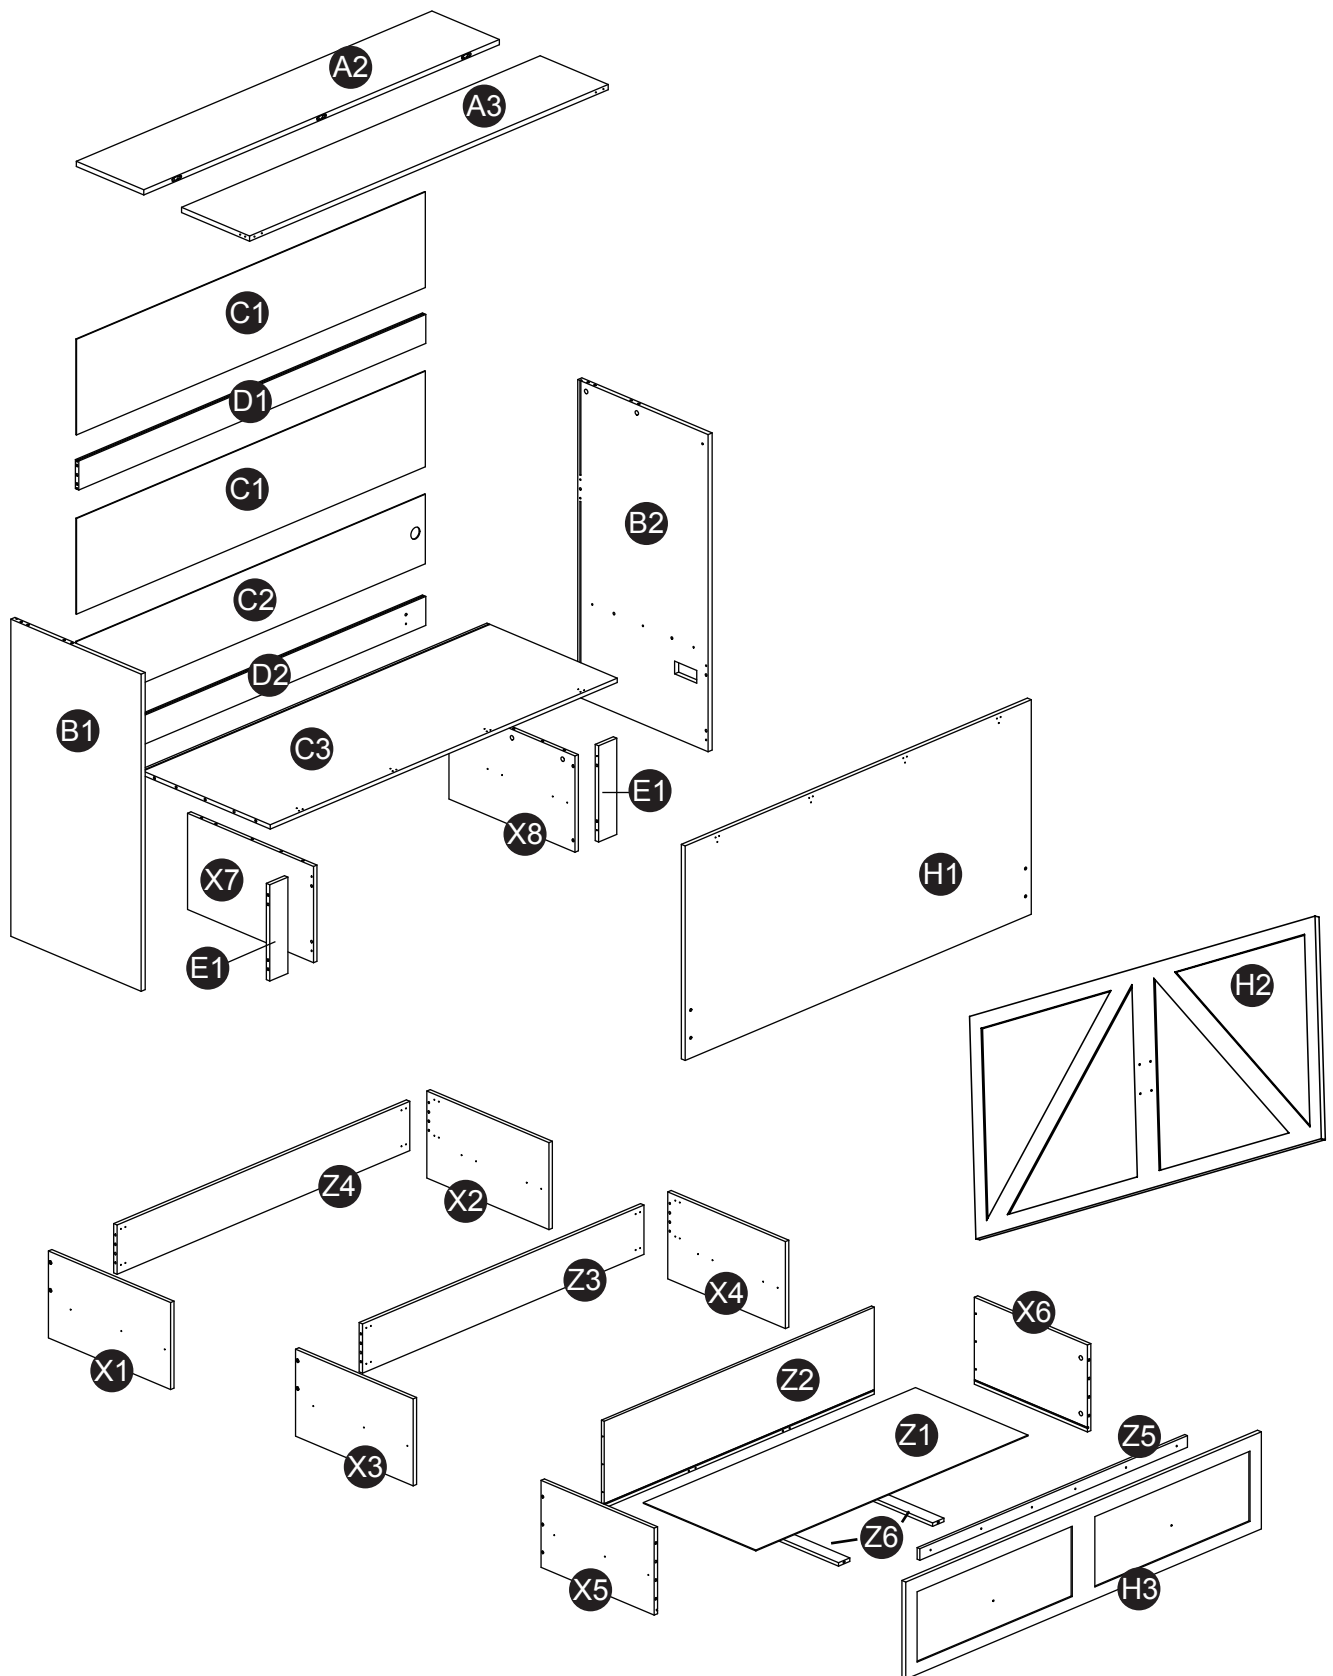


Assembly Instructions

Step 1

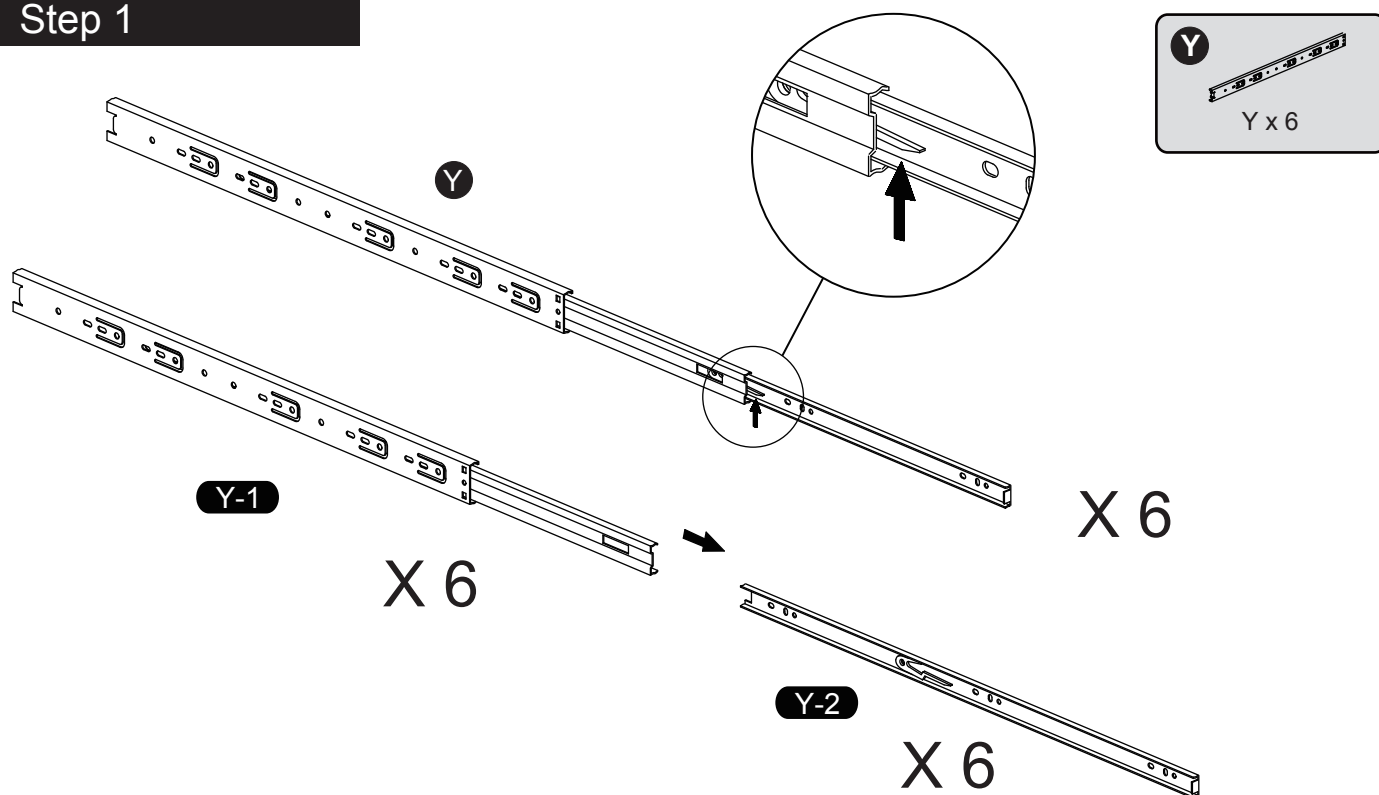


Step 2

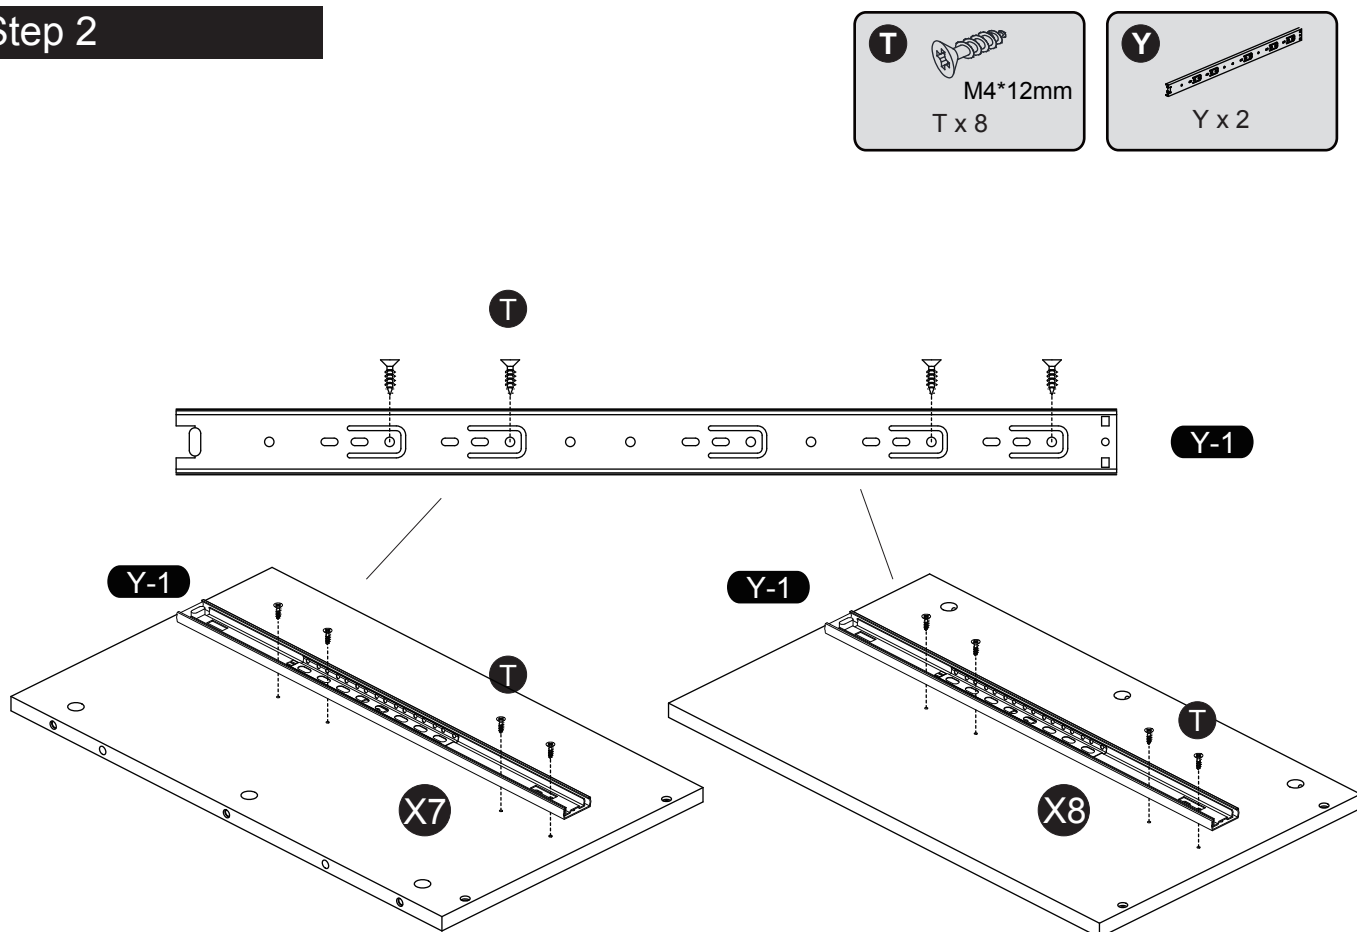

Assembly Instructions



Step 3

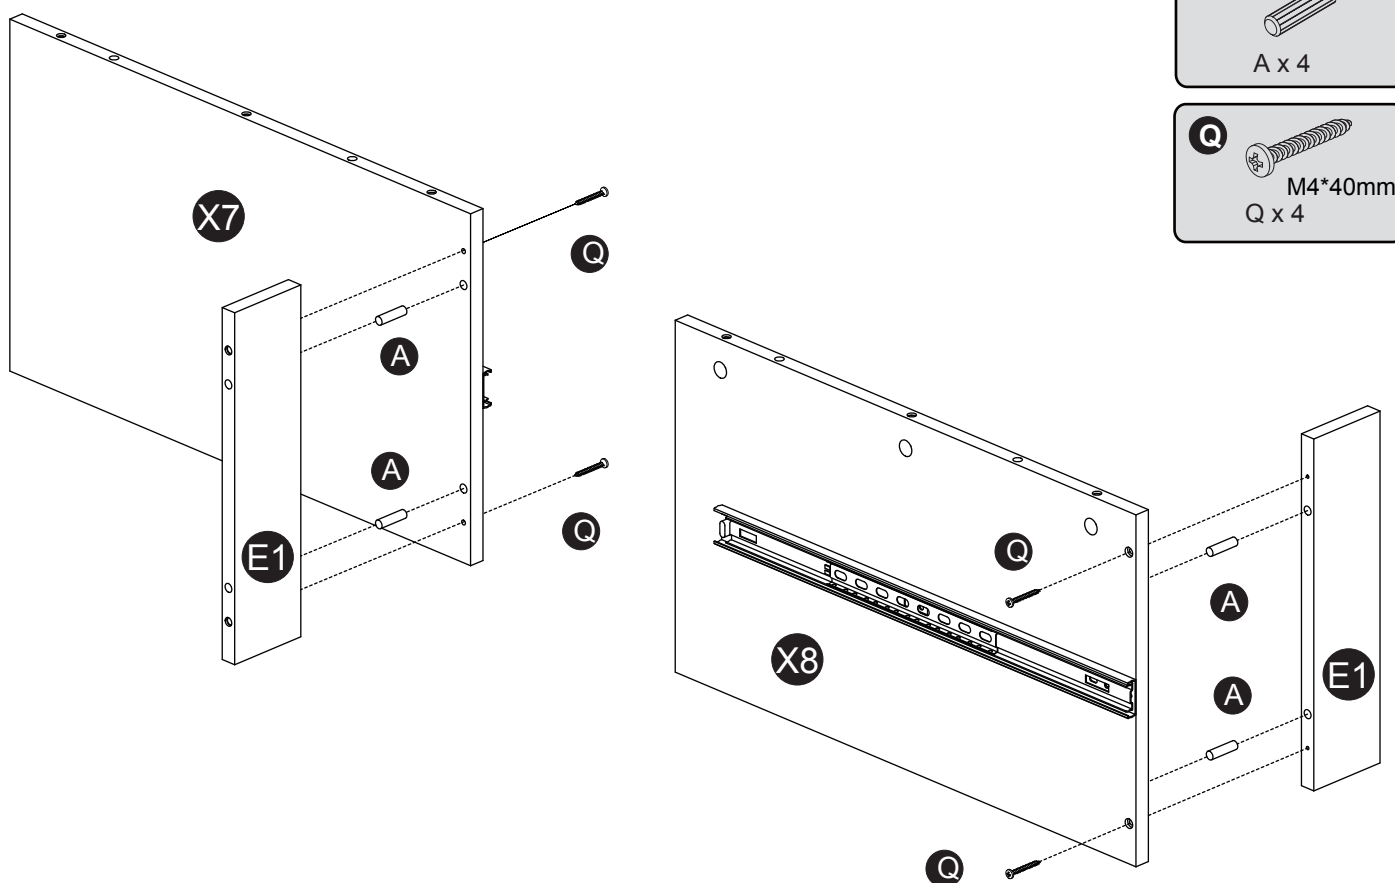

Step 4




CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)


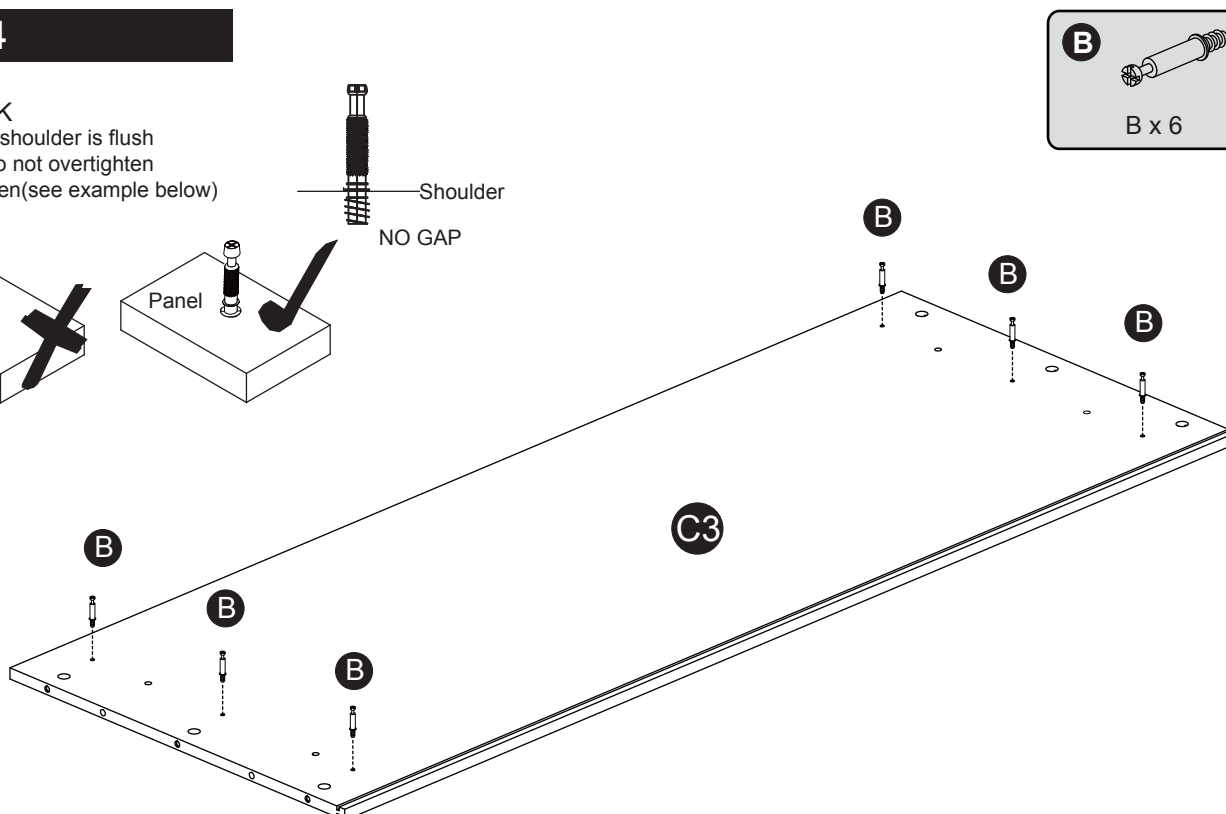
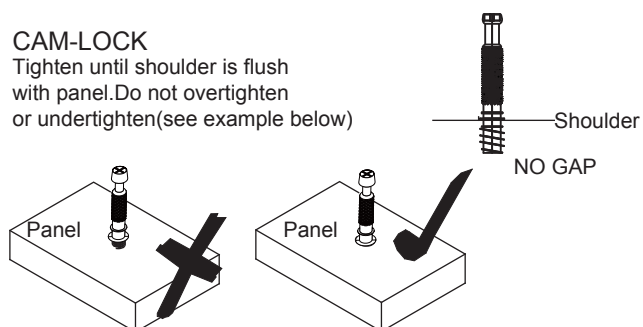


Assembly Instructions

Step 5

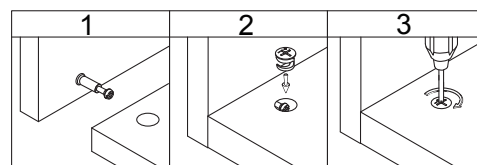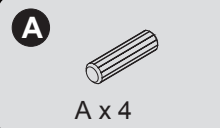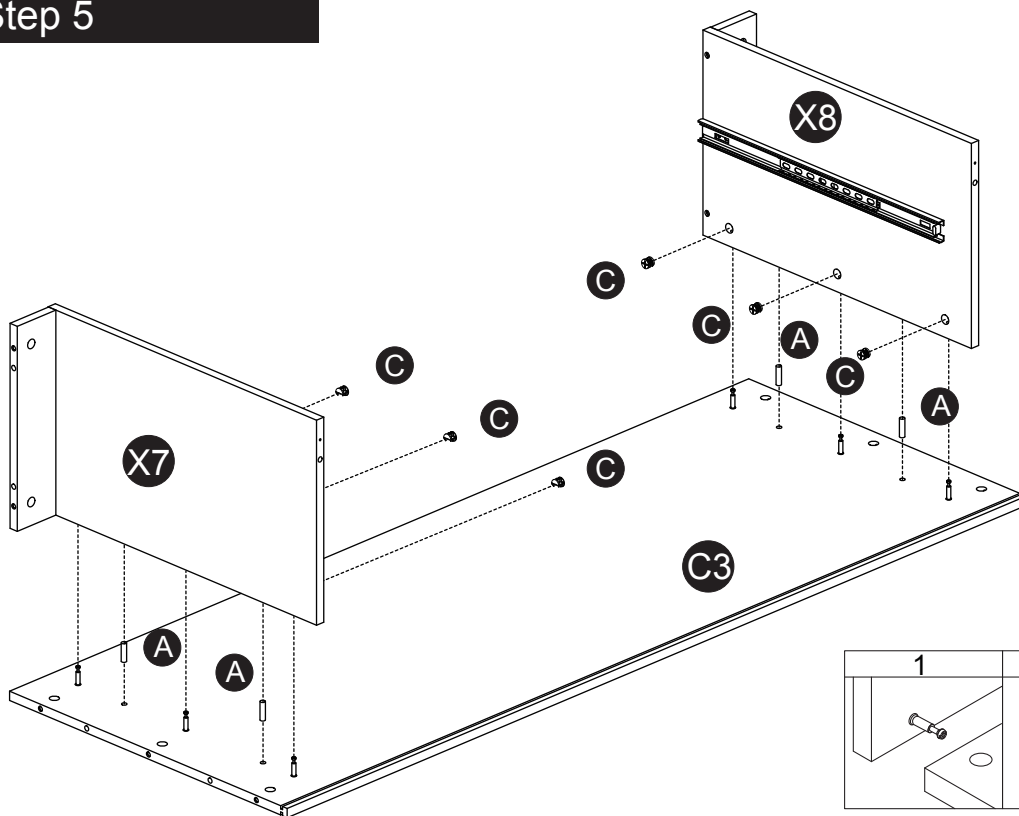

Step 6

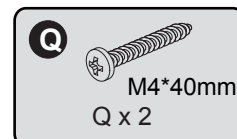
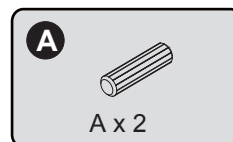
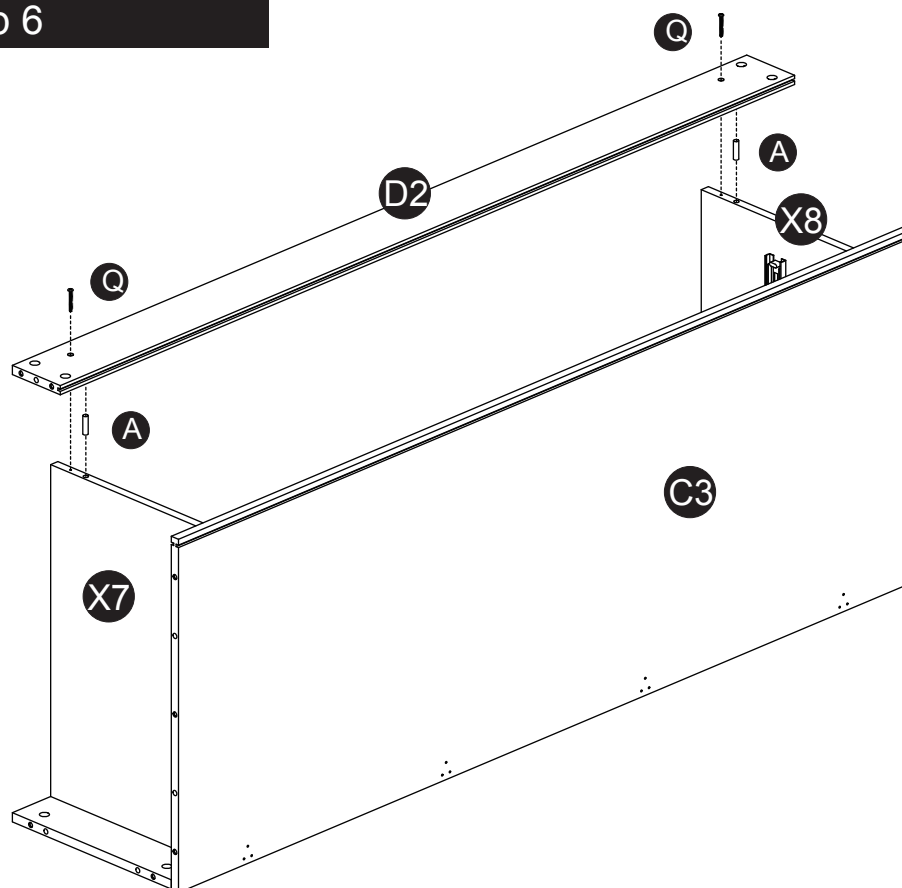


Assembly Instructions


Step 7

CAM-LOCK



Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

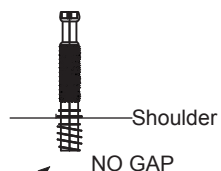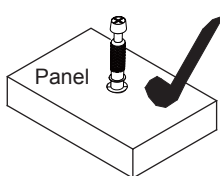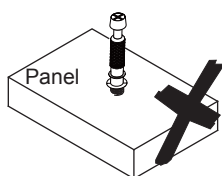

B







B x 18

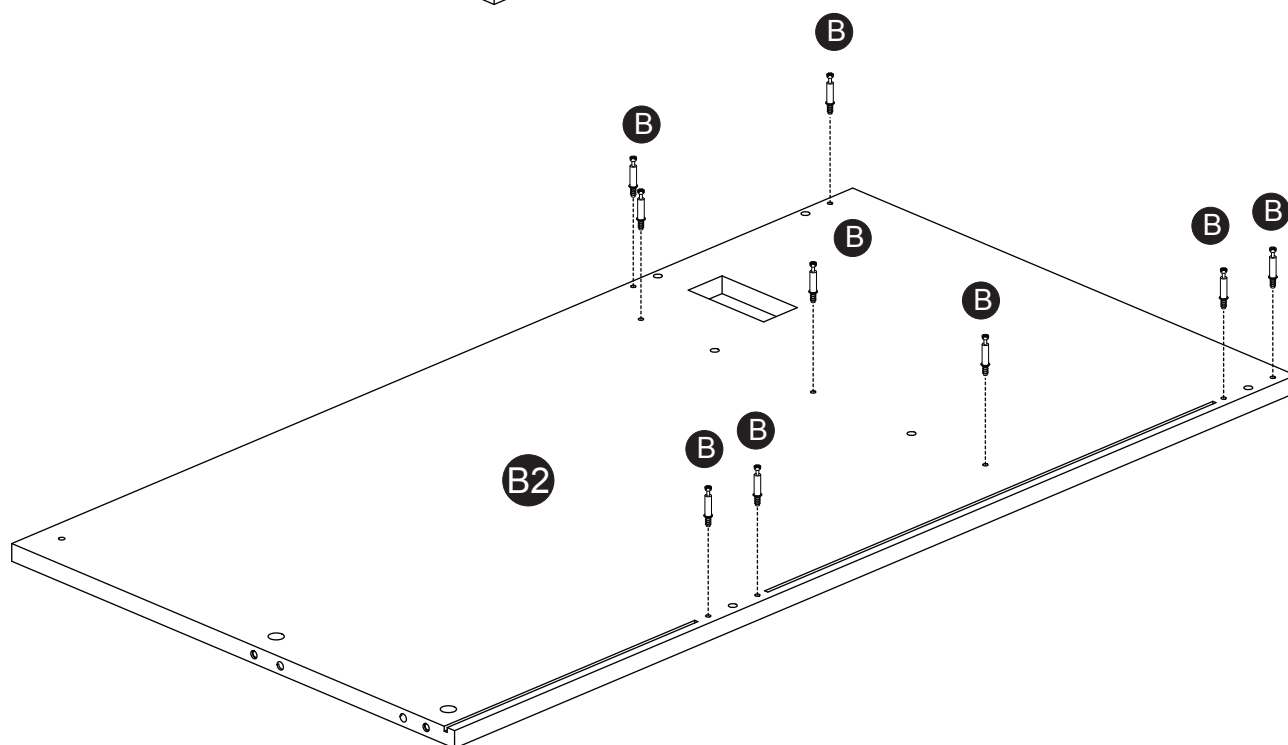
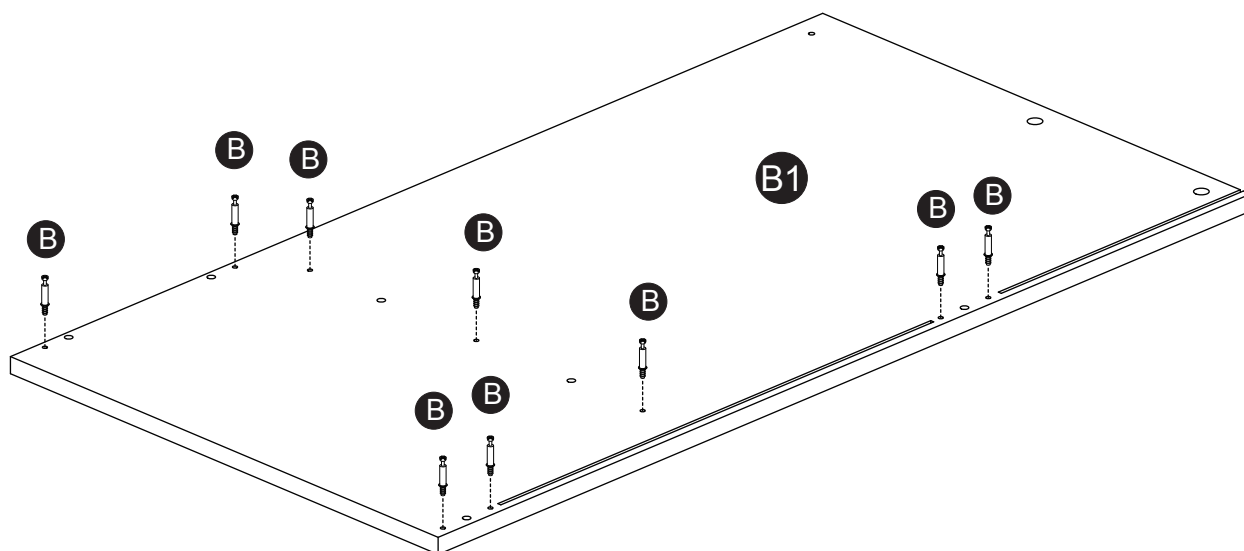


Assembly Instructions

Step 8

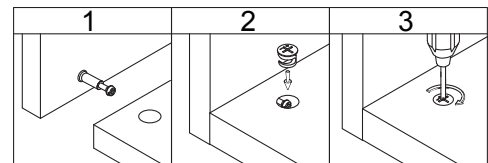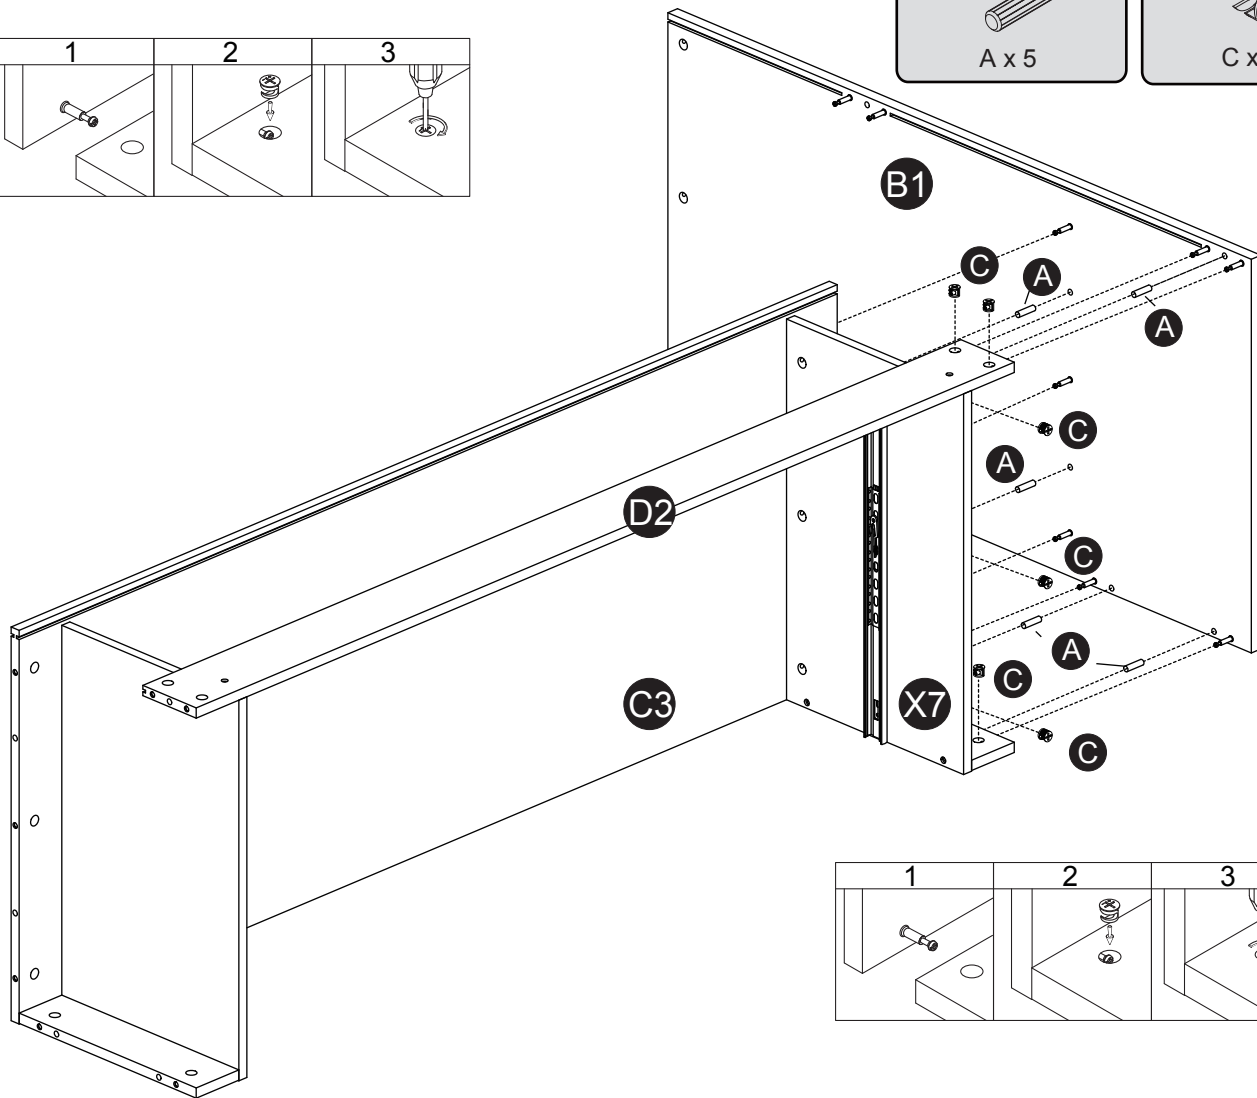
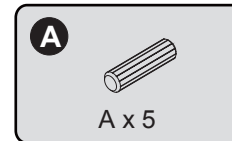
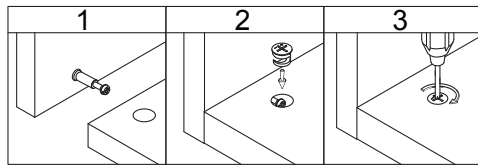


Step 9

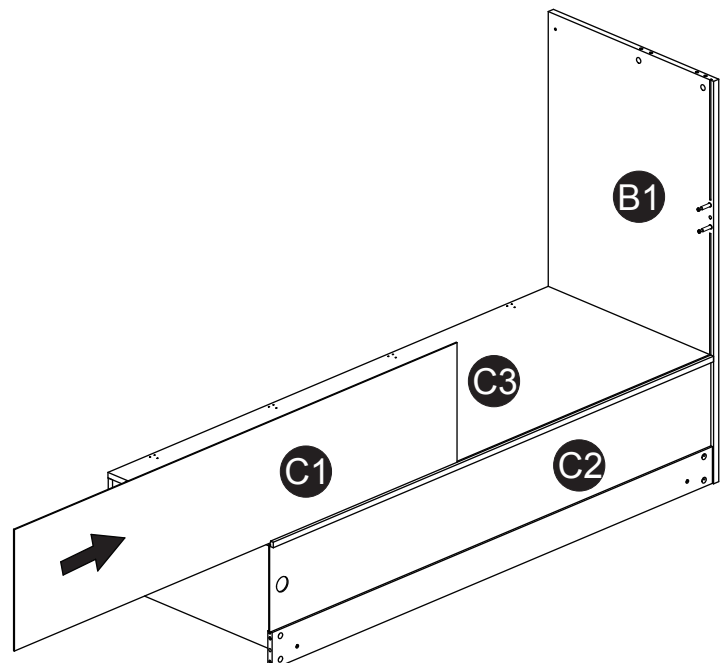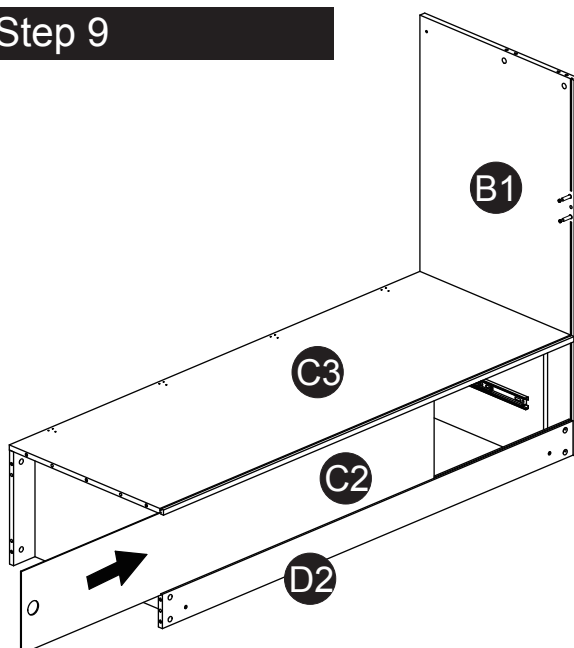

Assembly Instructions





Step 10

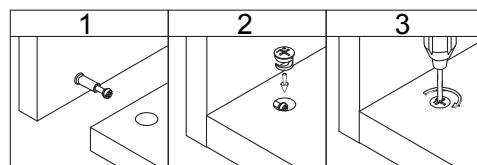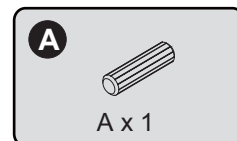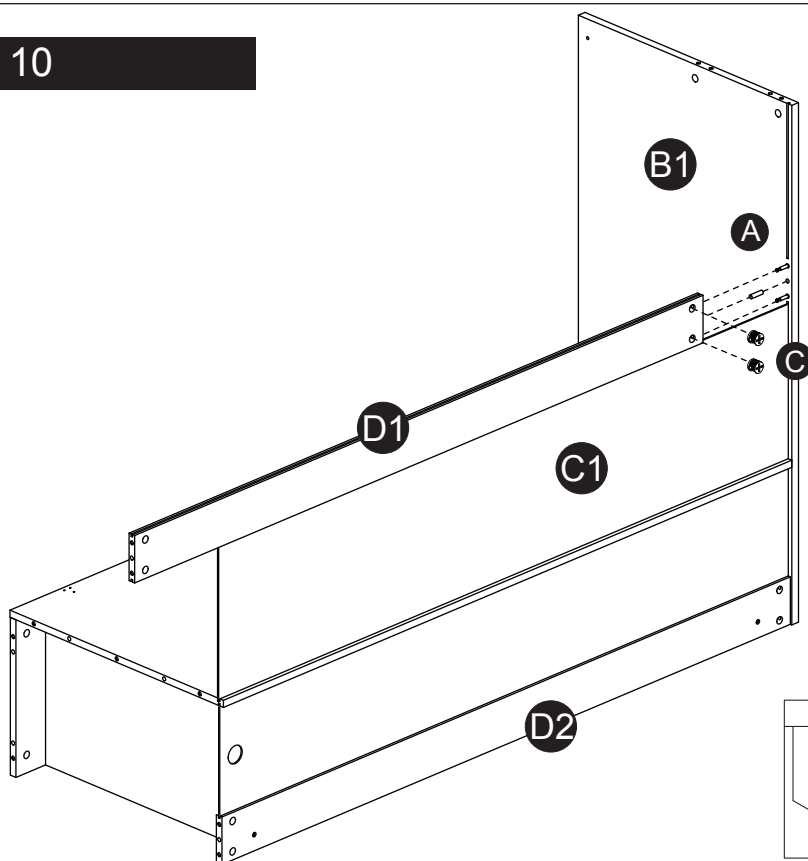

Step 11

After installing the No. 4 side plate, you need to put down the product and lock the screw from the bottom.


Please make sure that all side panels are fully stuck in the slot.

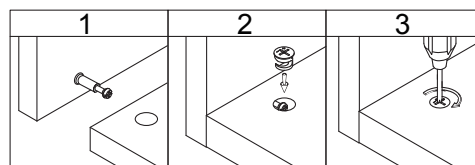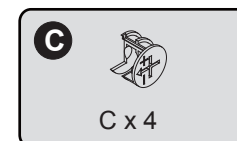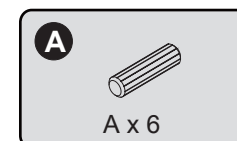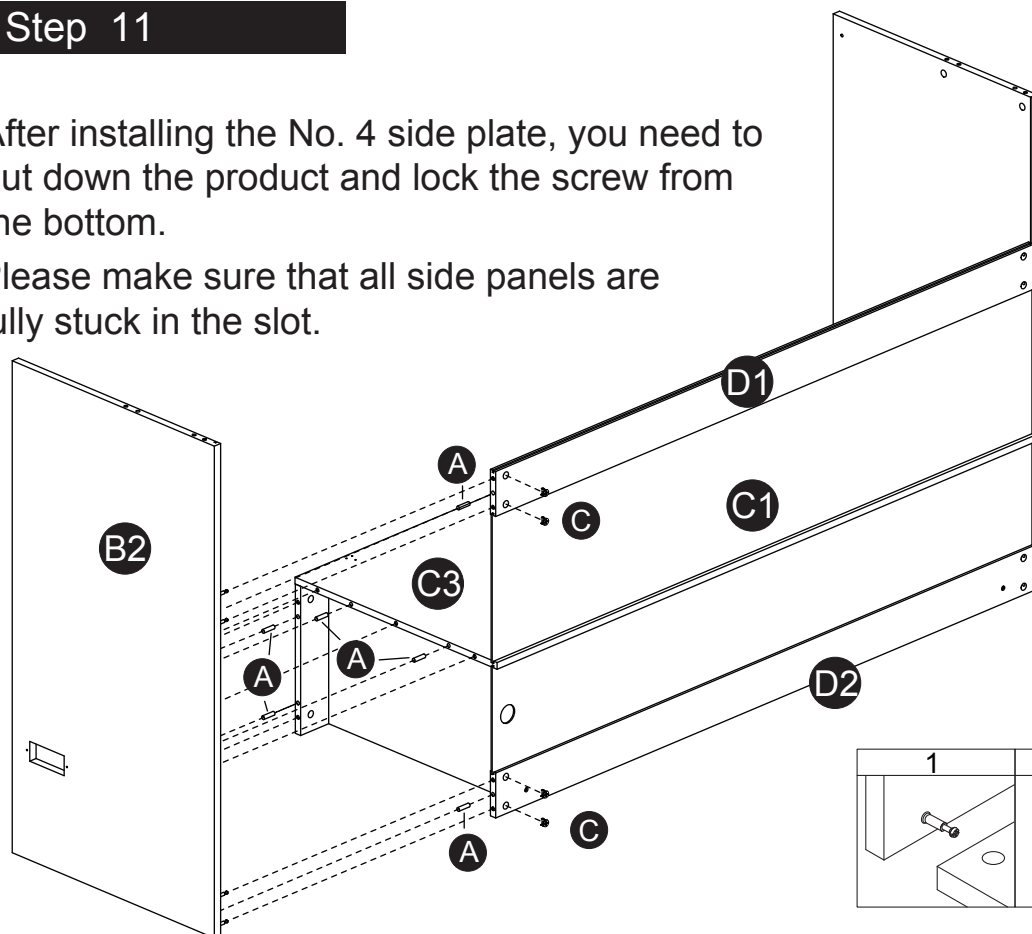




Assembly Instructions

Step 12

After installing the No. 4 side plate, you need to put down the product and lock the screw from the bottom.

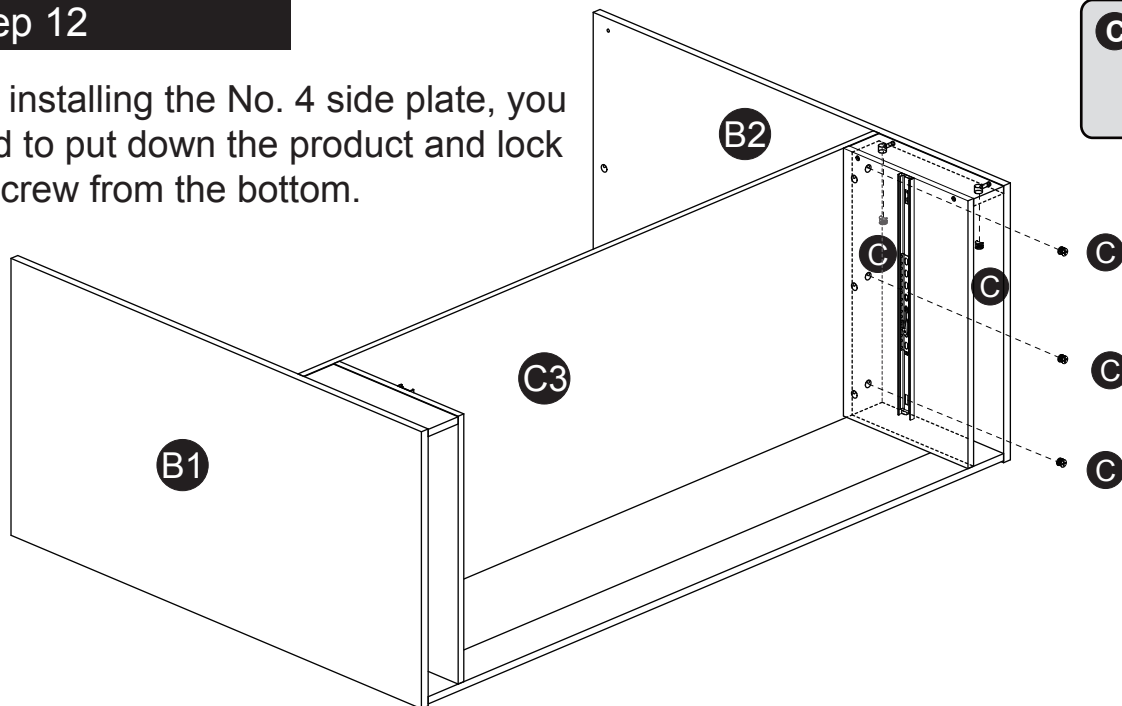


Step 13

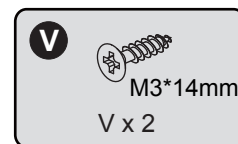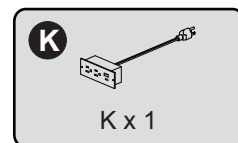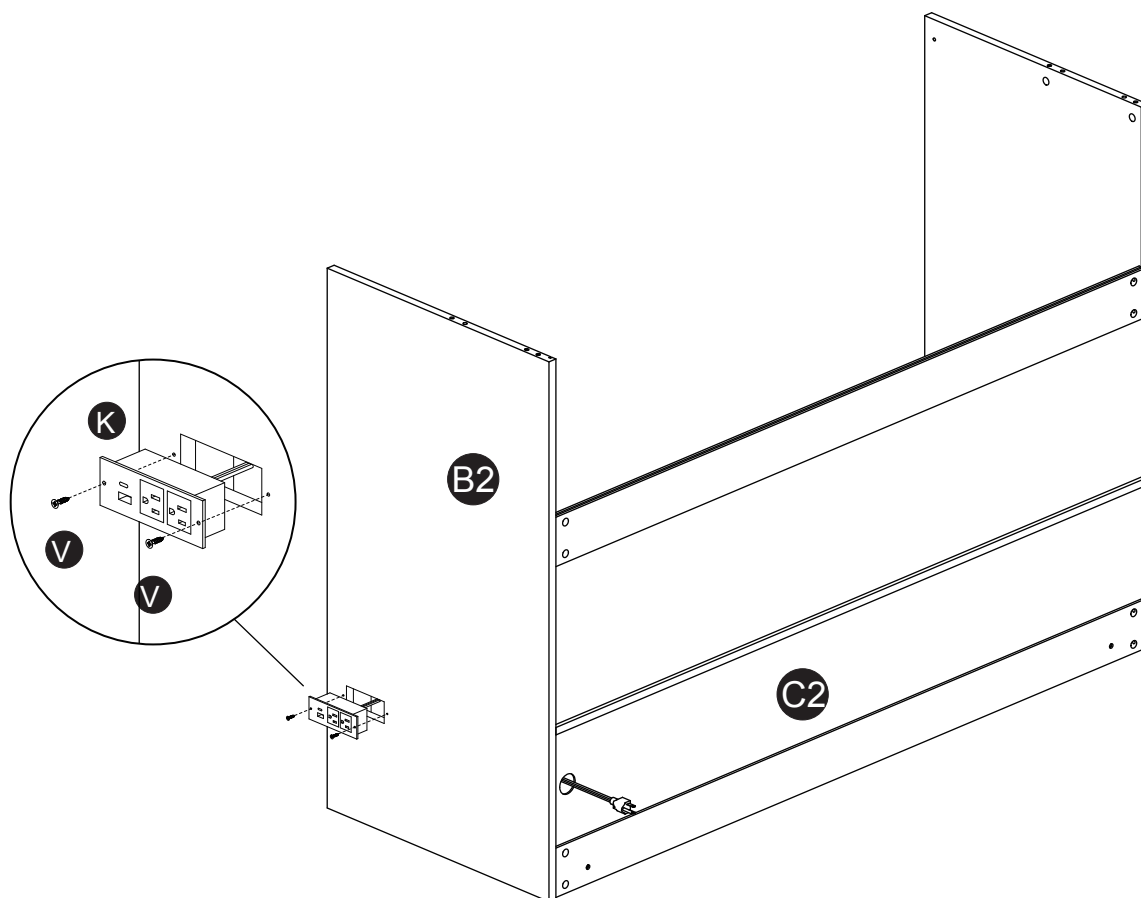

Assembly Instructions








Step 14

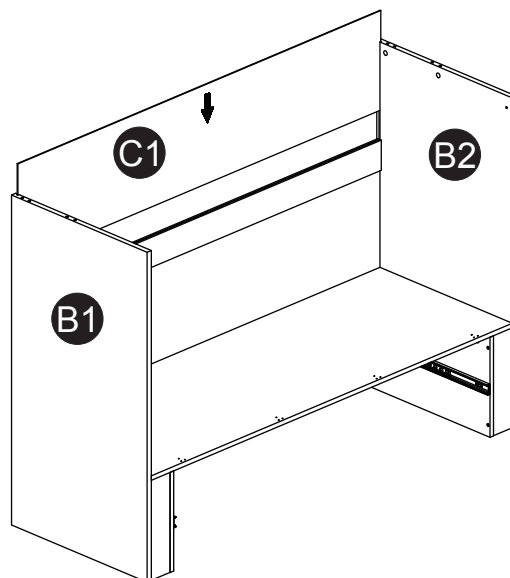

Step 15




CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

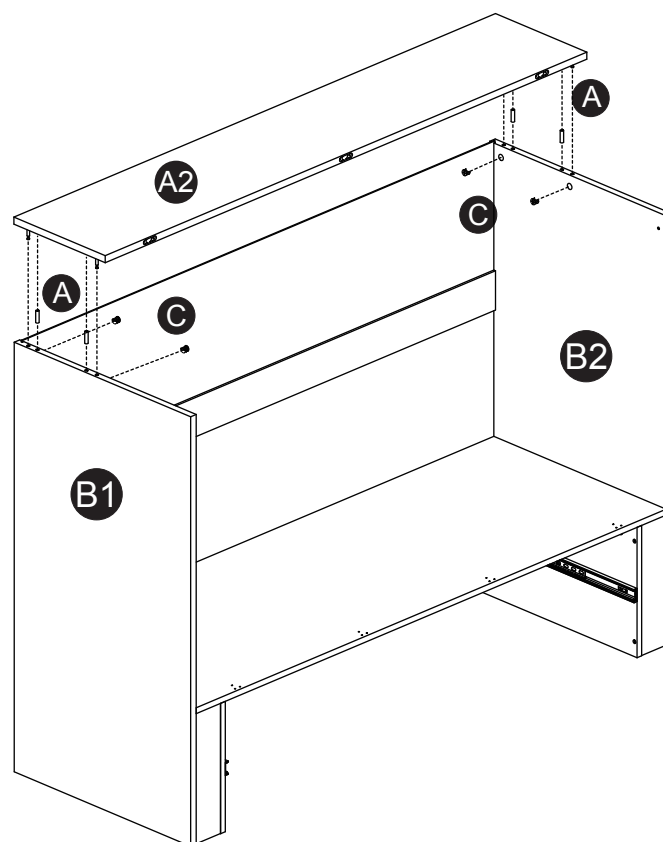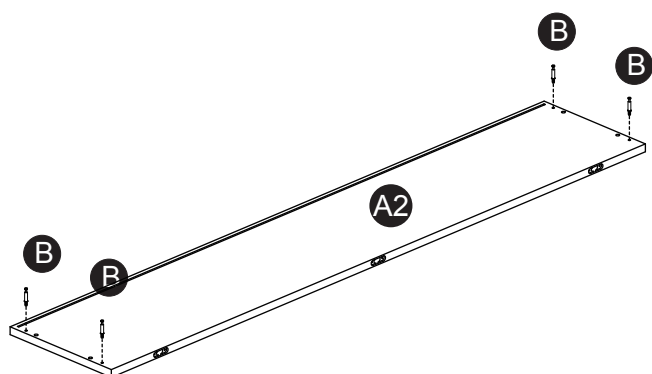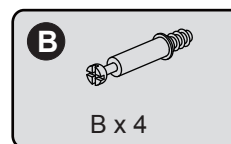
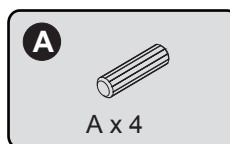
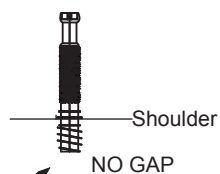
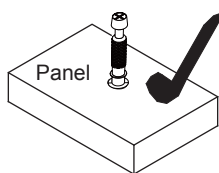
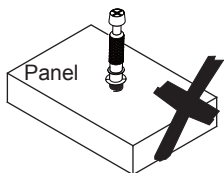


Assembly Instructions

Step 16

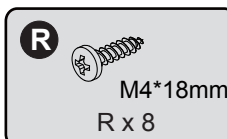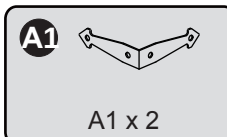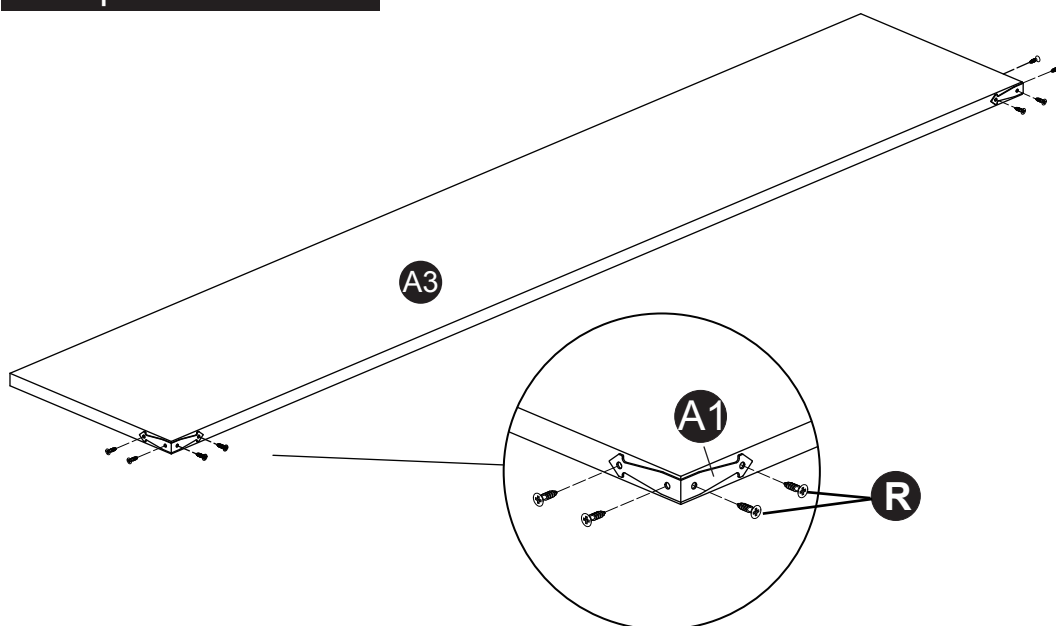


Step 17

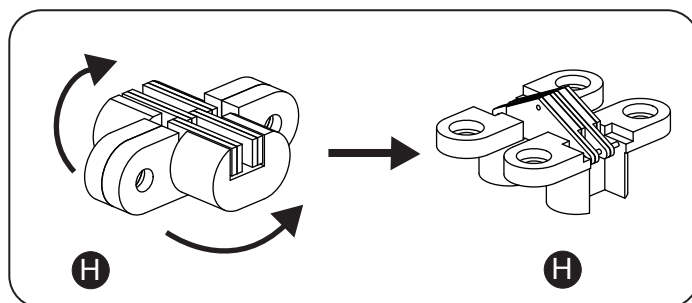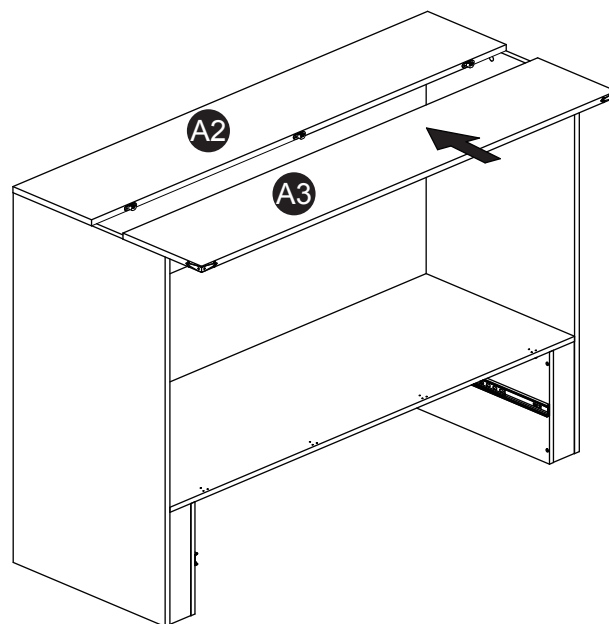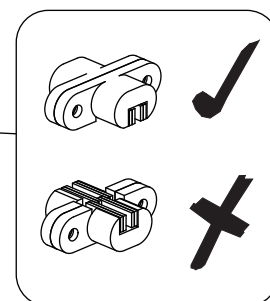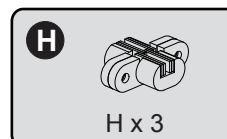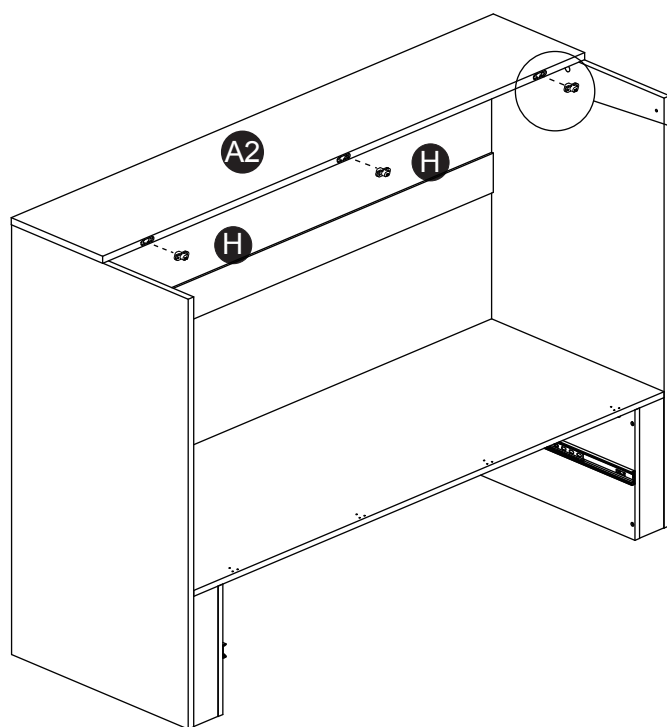


Assembly Instructions

Step 18






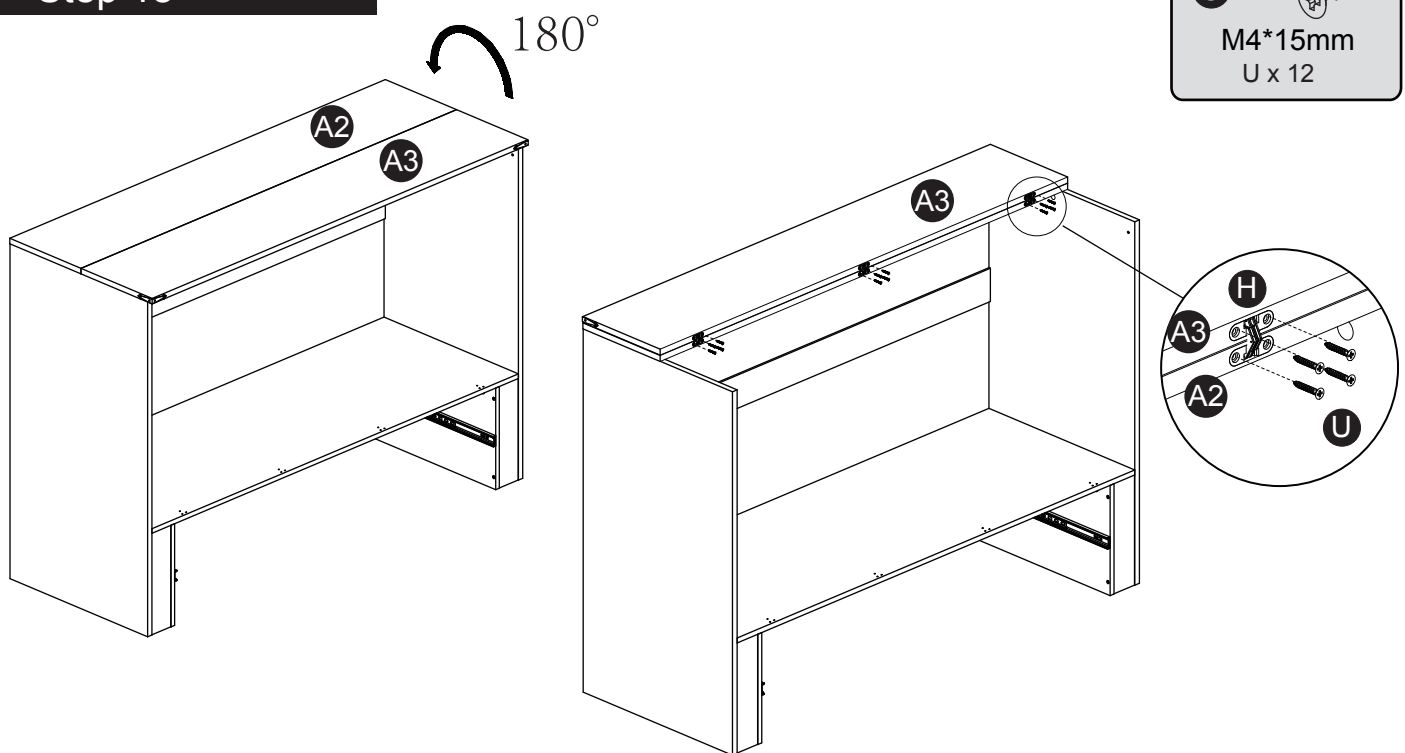


Step 19




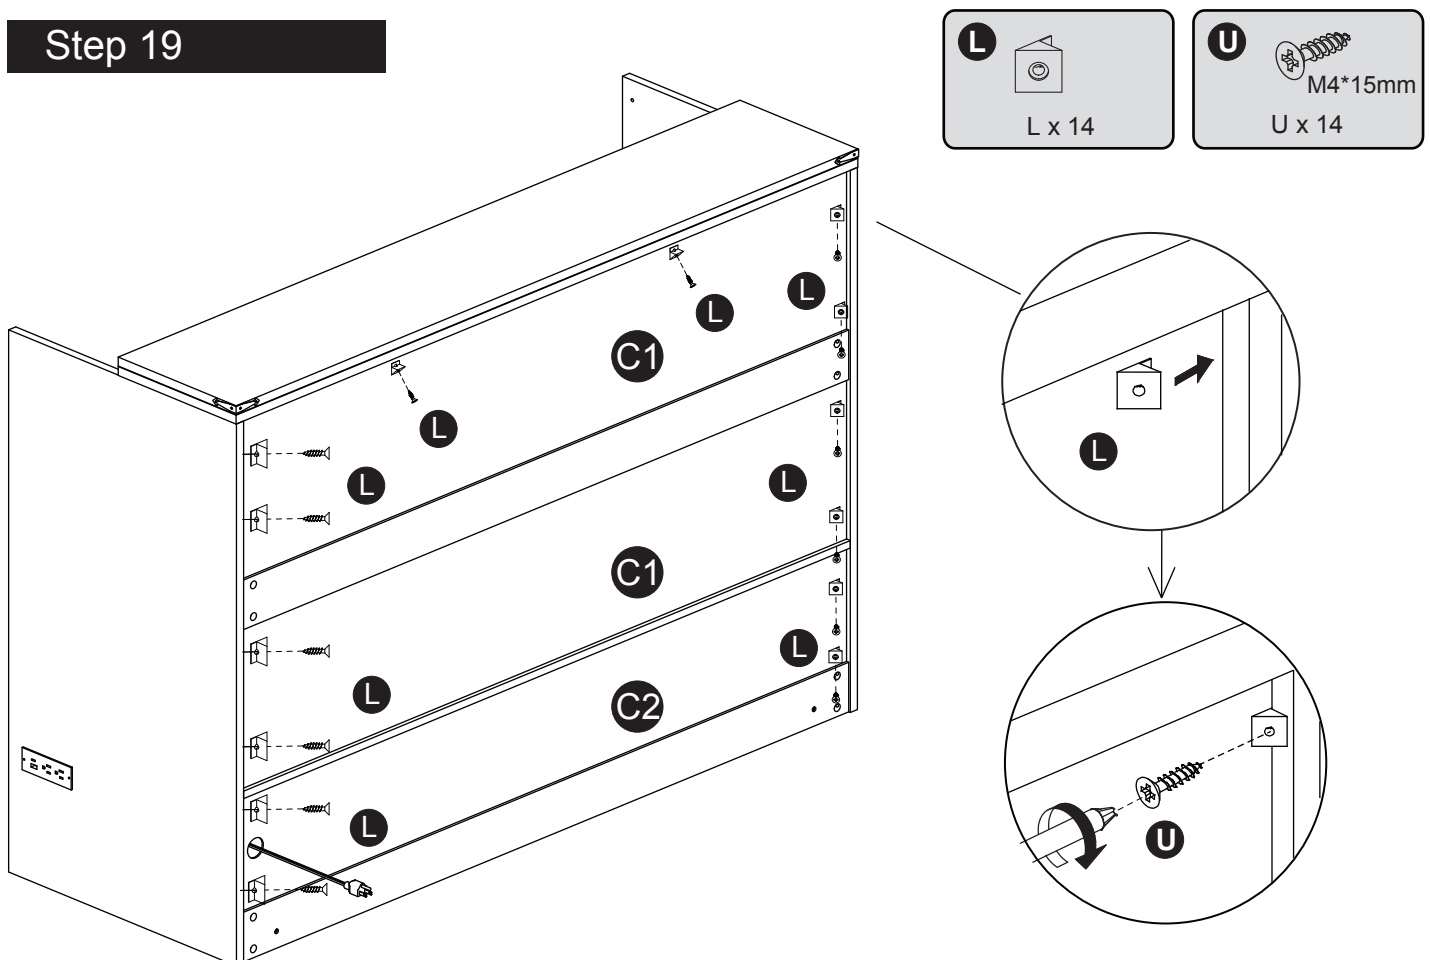


Assembly Instructions

Step 20

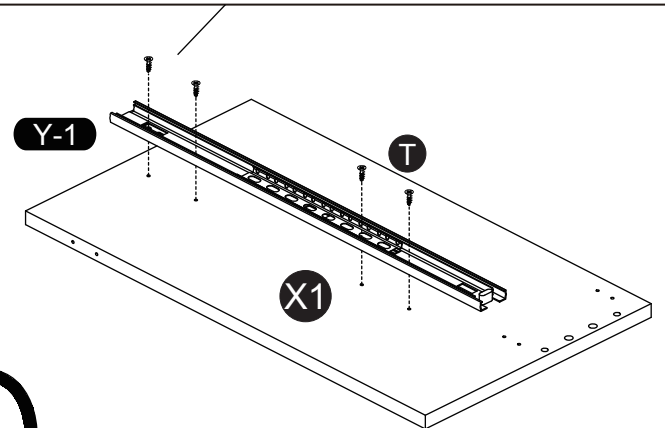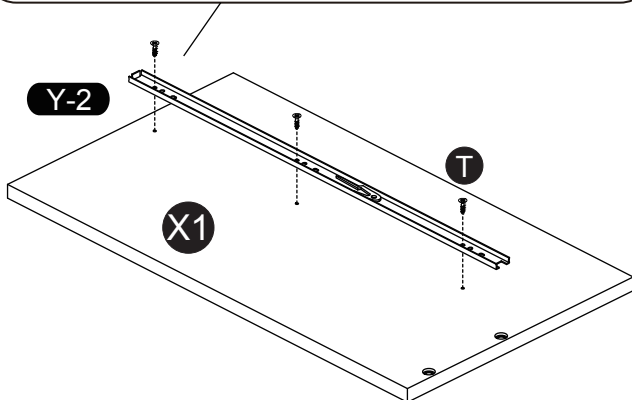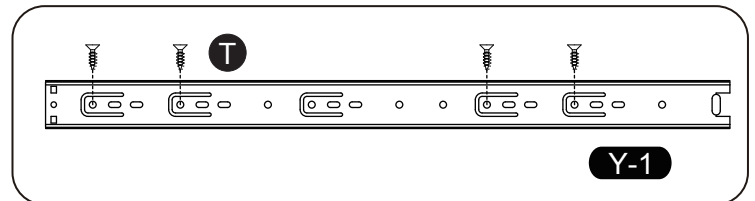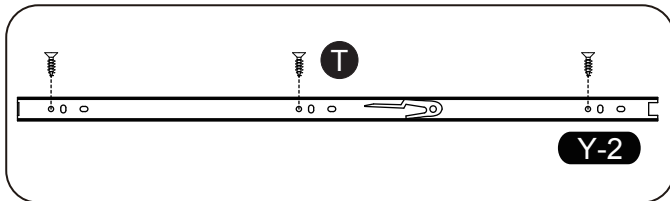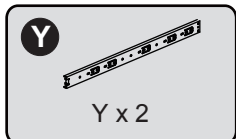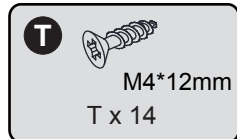




180°
Turn the panel over

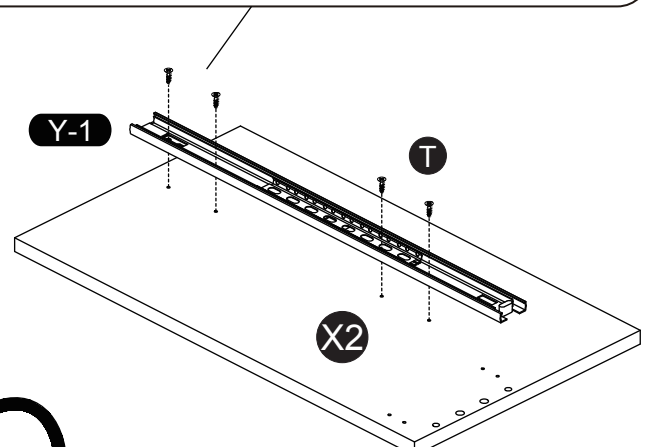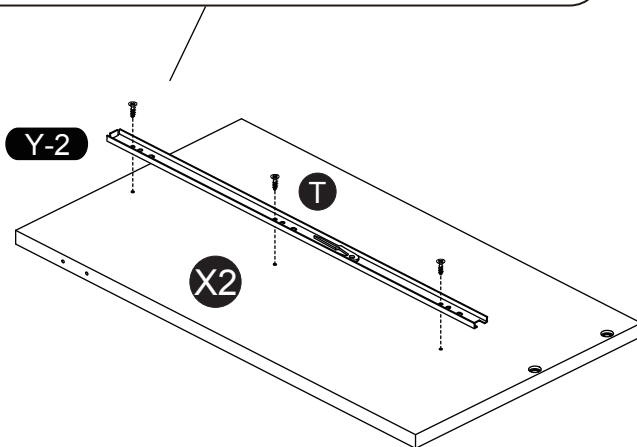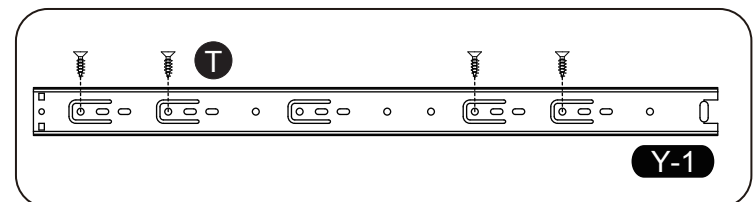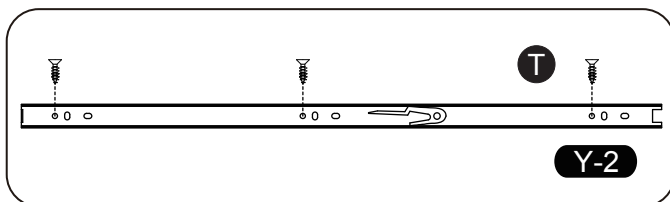



180°
Turn the panel over

Assembly Instructions

Step 21





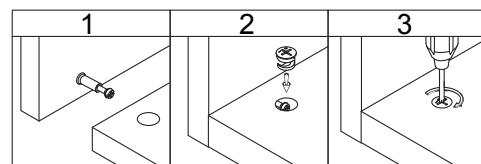
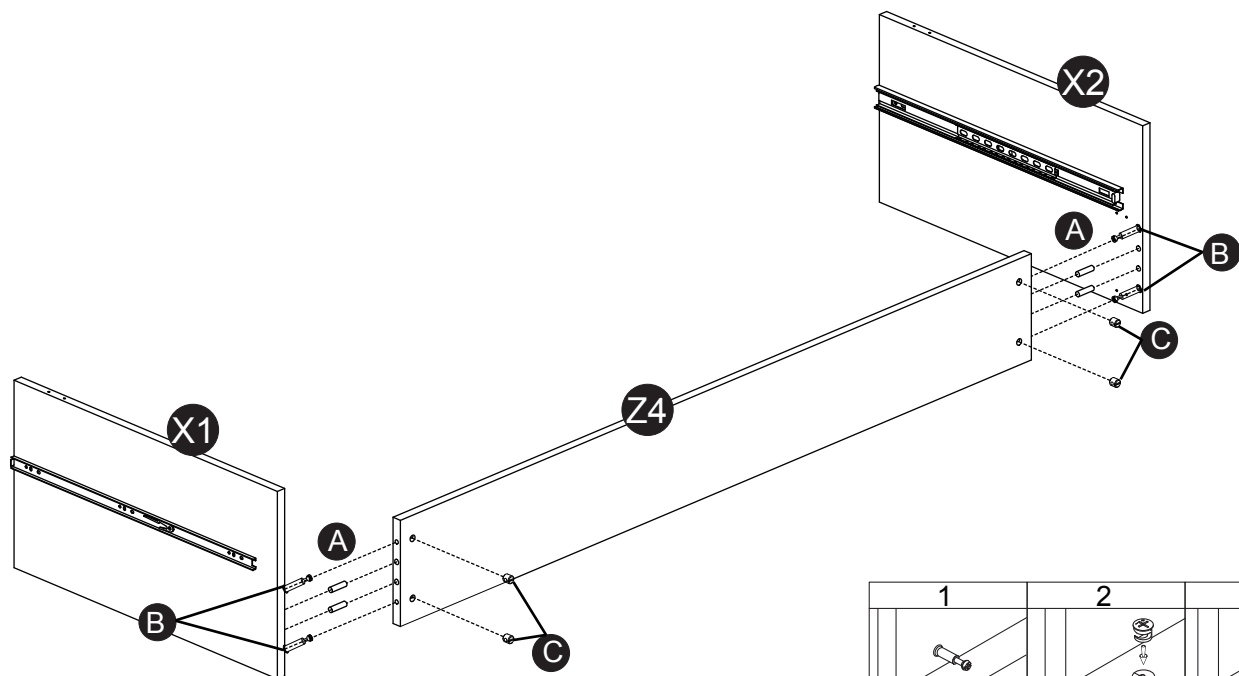
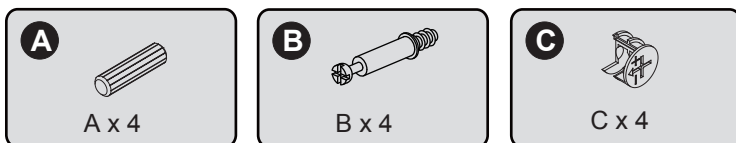


Step 22




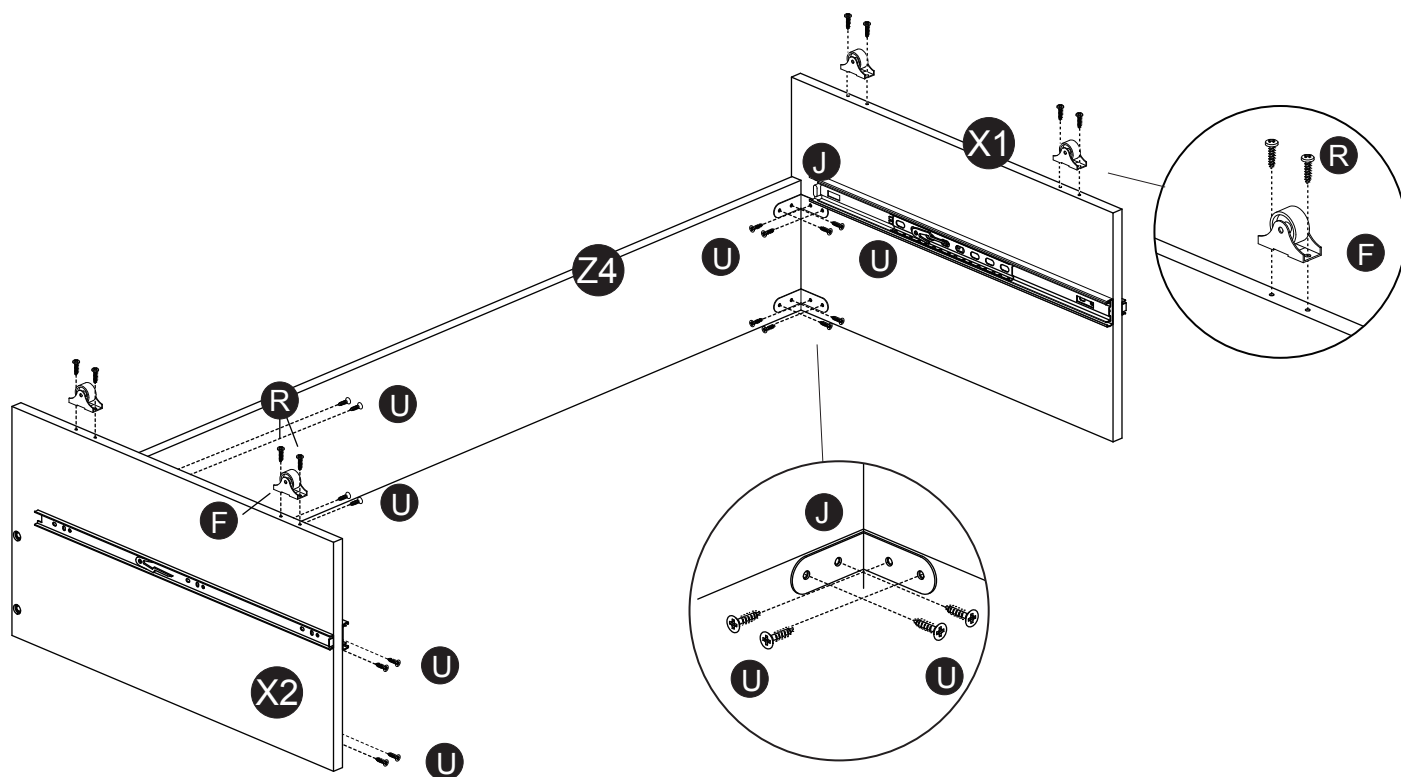
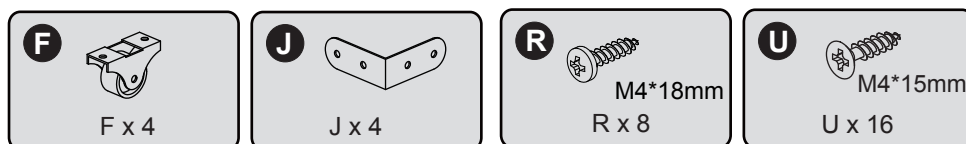


Assembly Instructions

Step 23

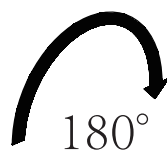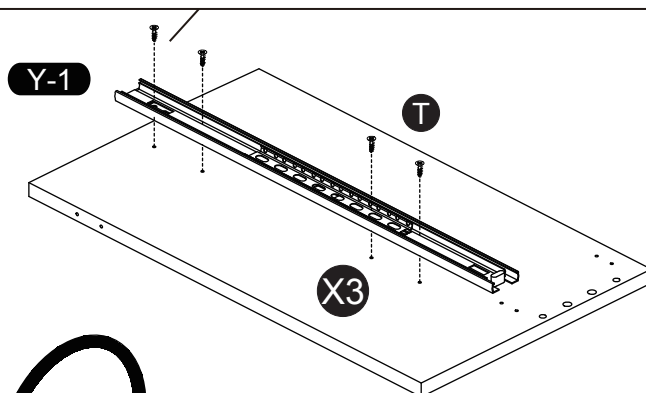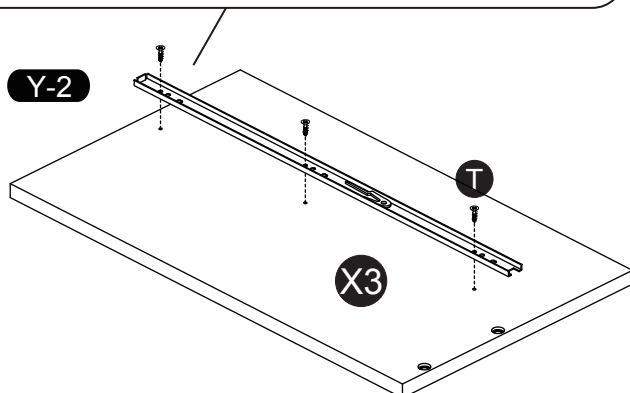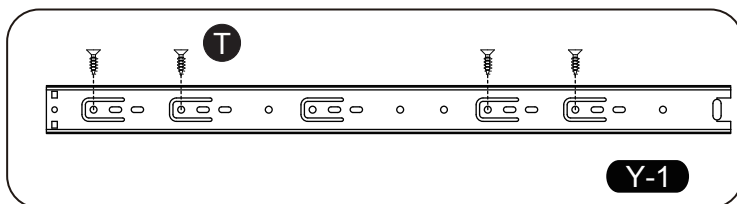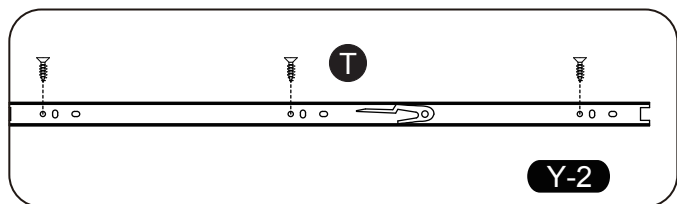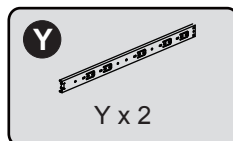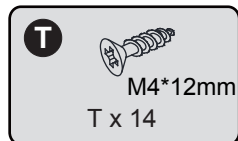



180°
Turn the panel over

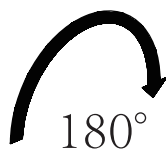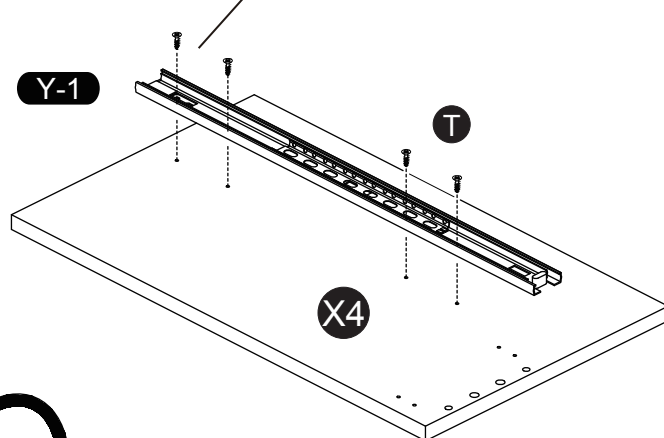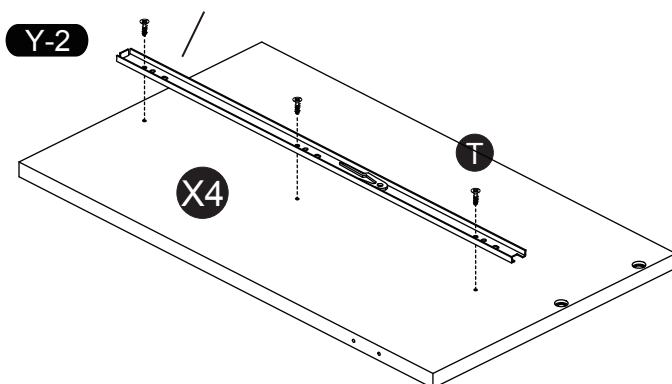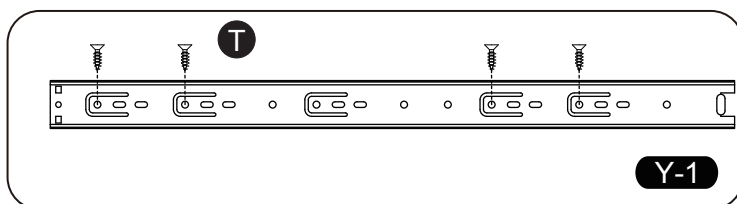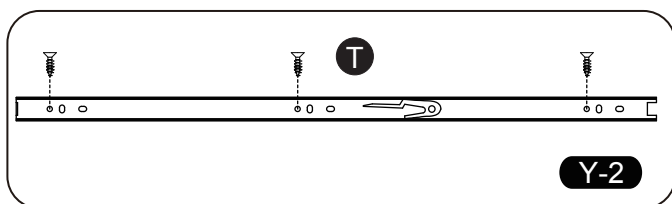



180°
Turn the panel over

Assembly Instructions

Step 24

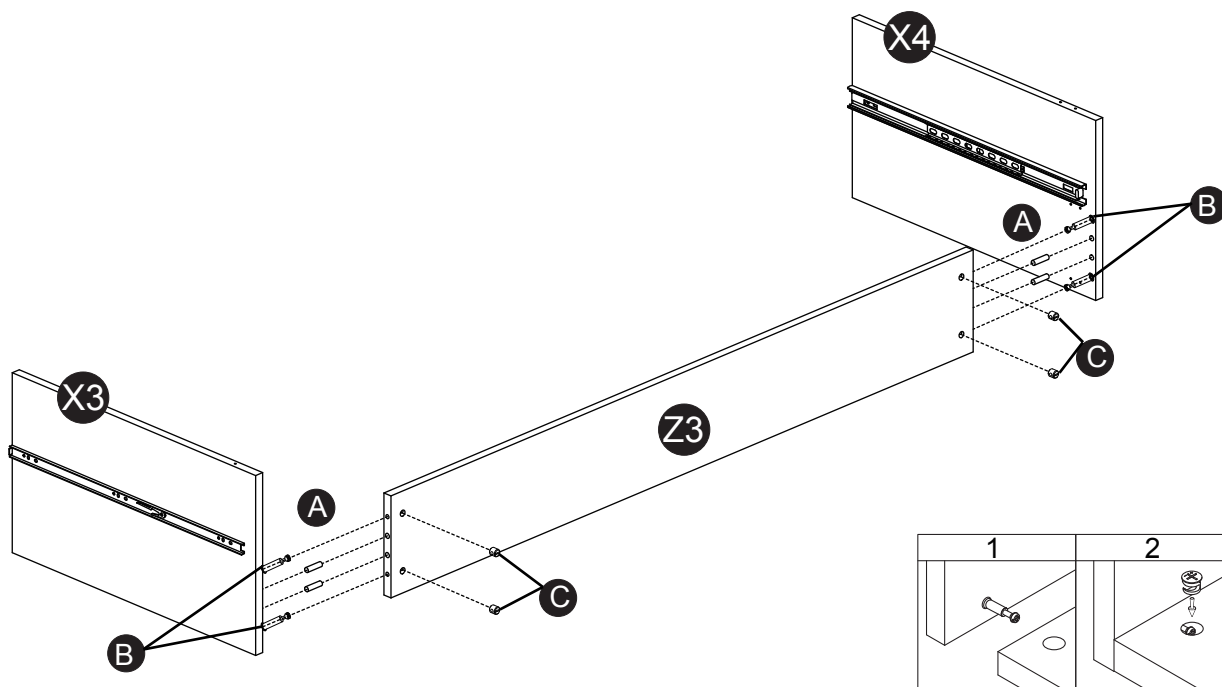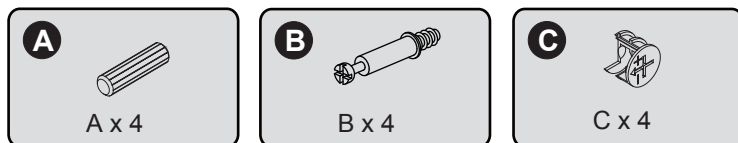

Step 25

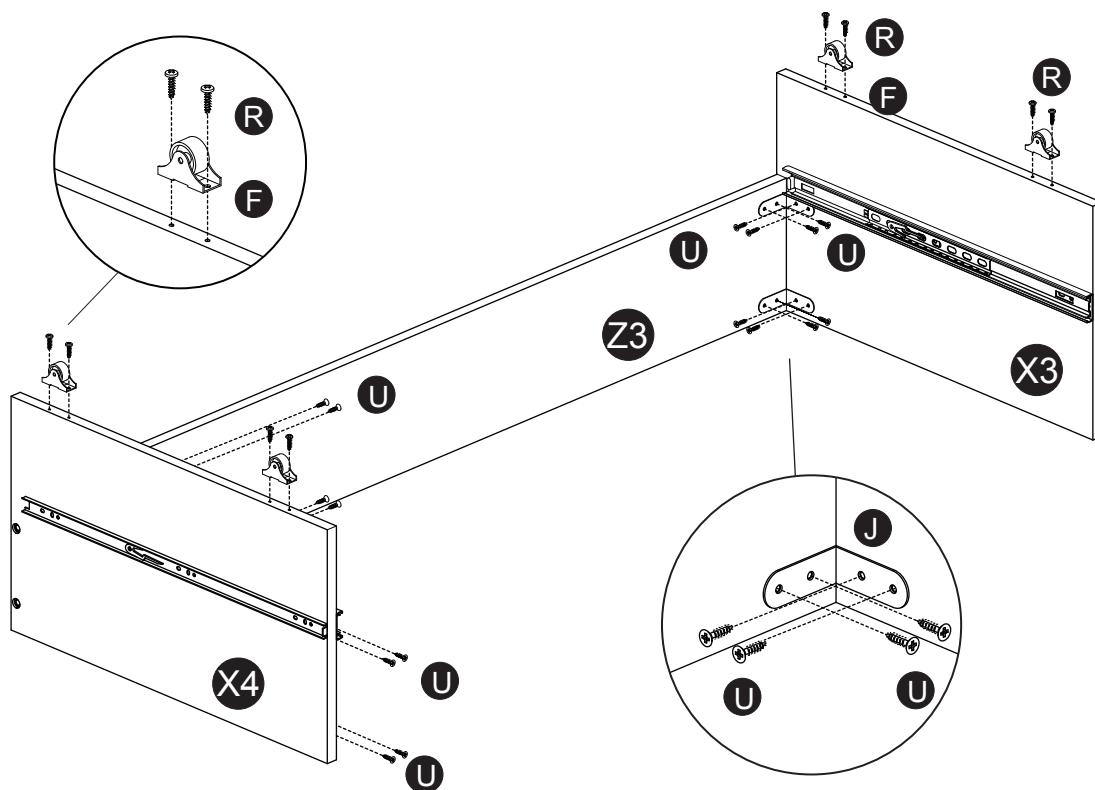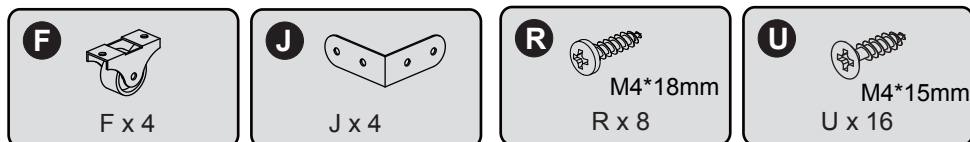


Assembly Instructions





Step 26

F

F x 4





RM4*18 mm
R x 8**T**M4*12mm
T x 6**Y**

Y x 2

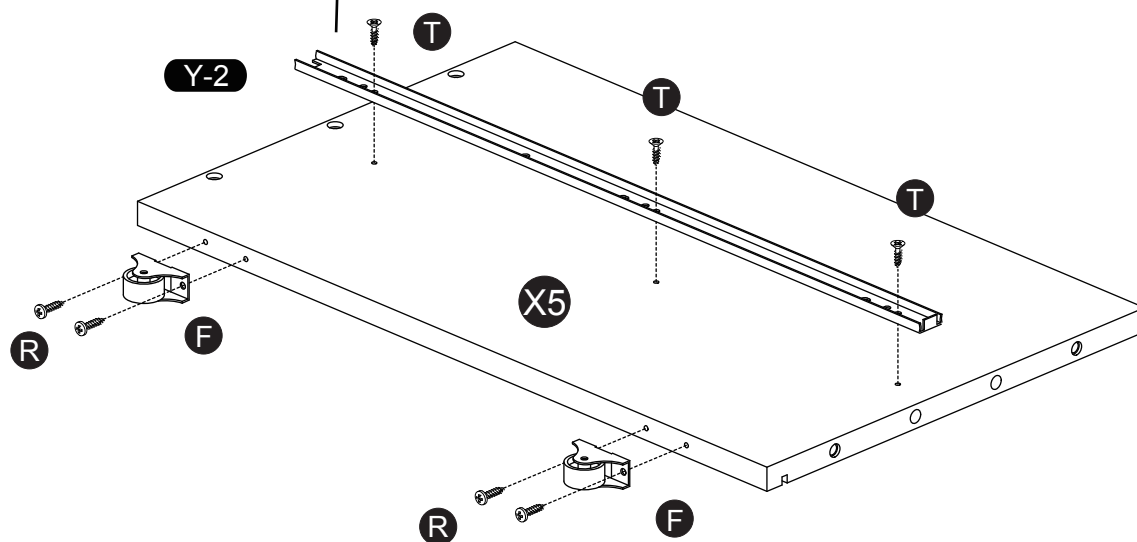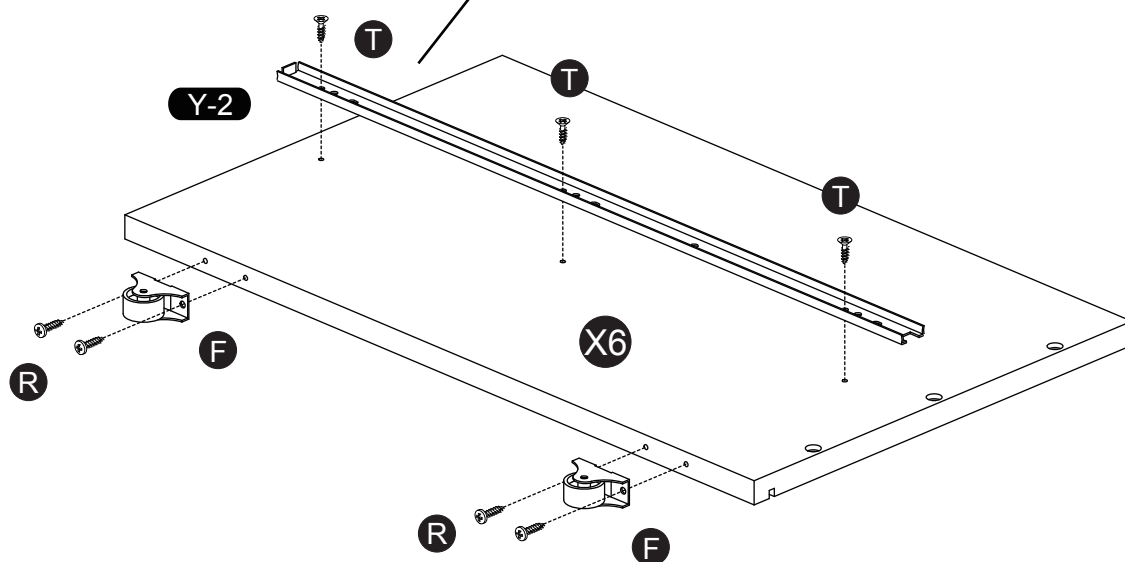**Y-2****Y-2**



Assembly Instructions

Step 27

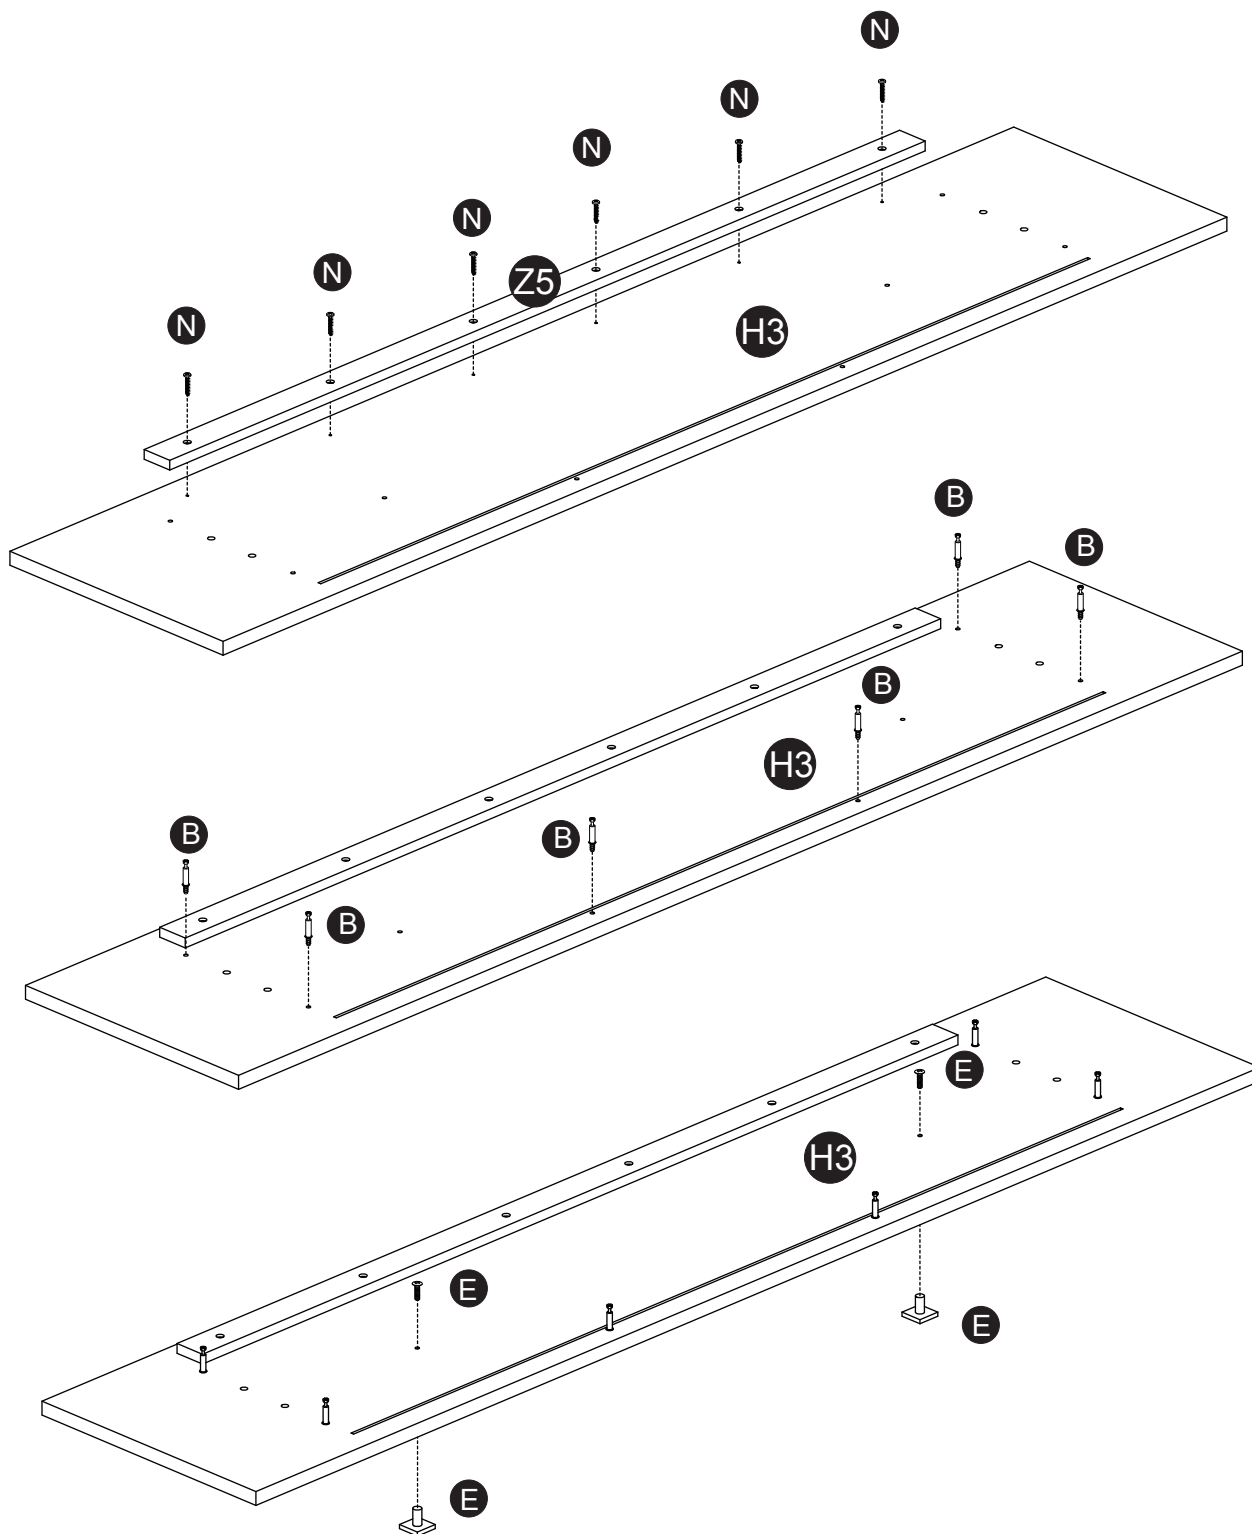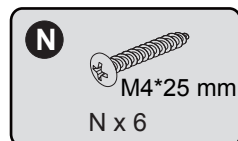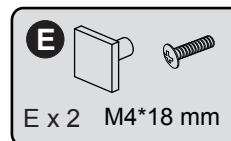
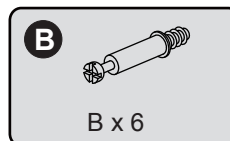


Assembly Instructions


Step 28

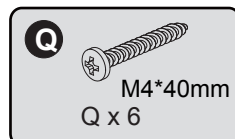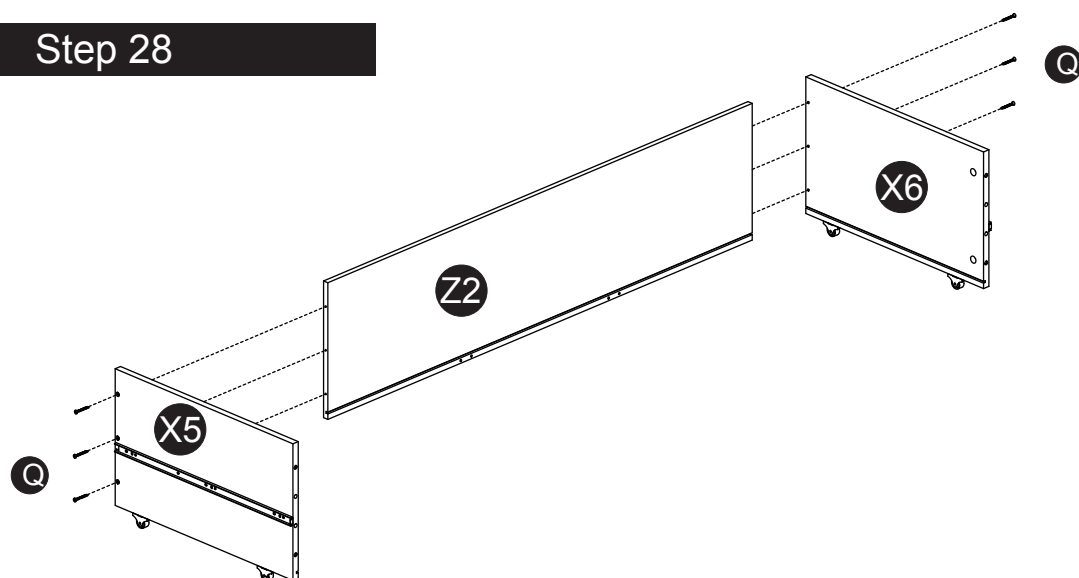

Step 29

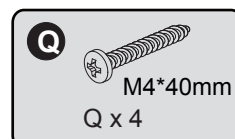
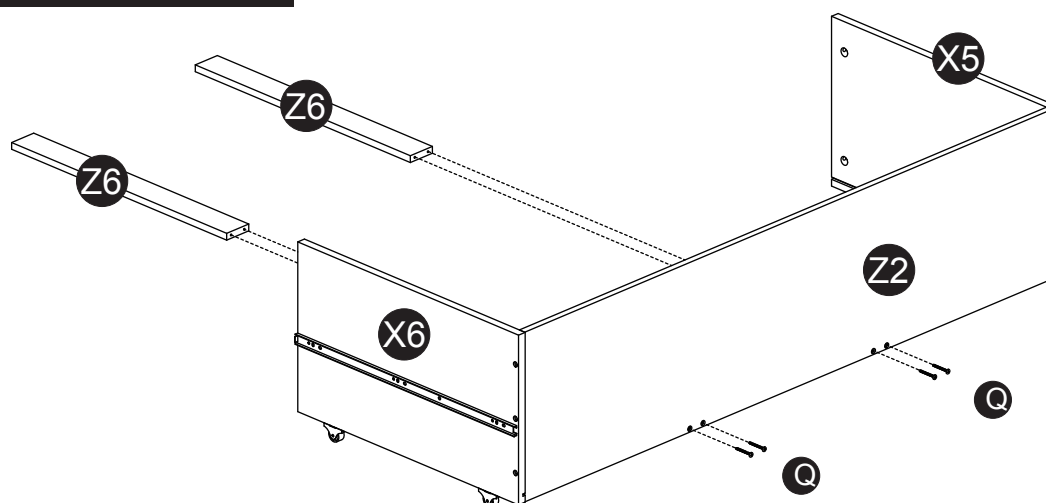


Step 30

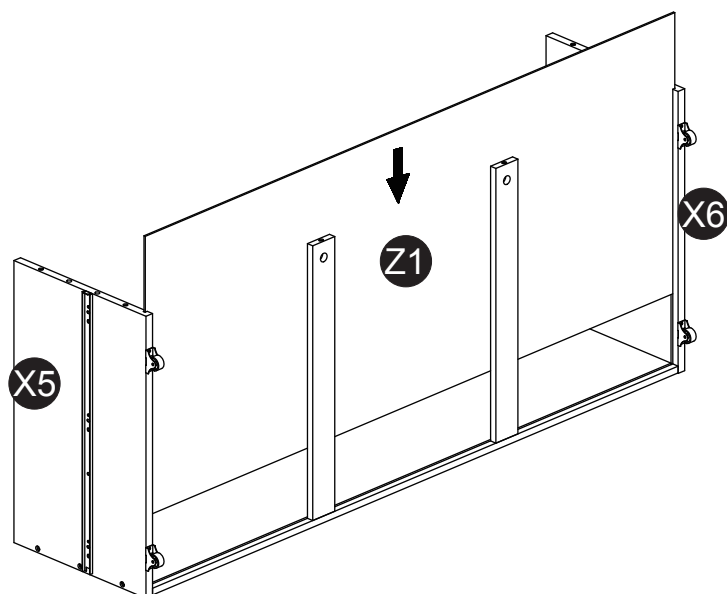

Assembly Instructions



Step 31

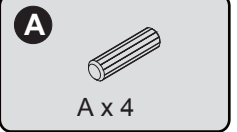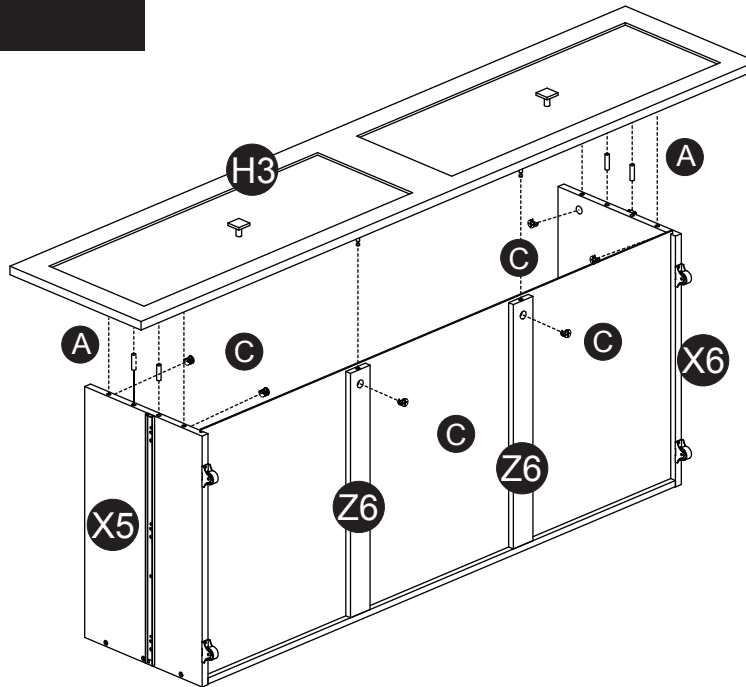

Step 32

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

Please make sure that the balls in the tracks on both sides are pulled to the top, and then insert the tracks to ensure smooth entry.

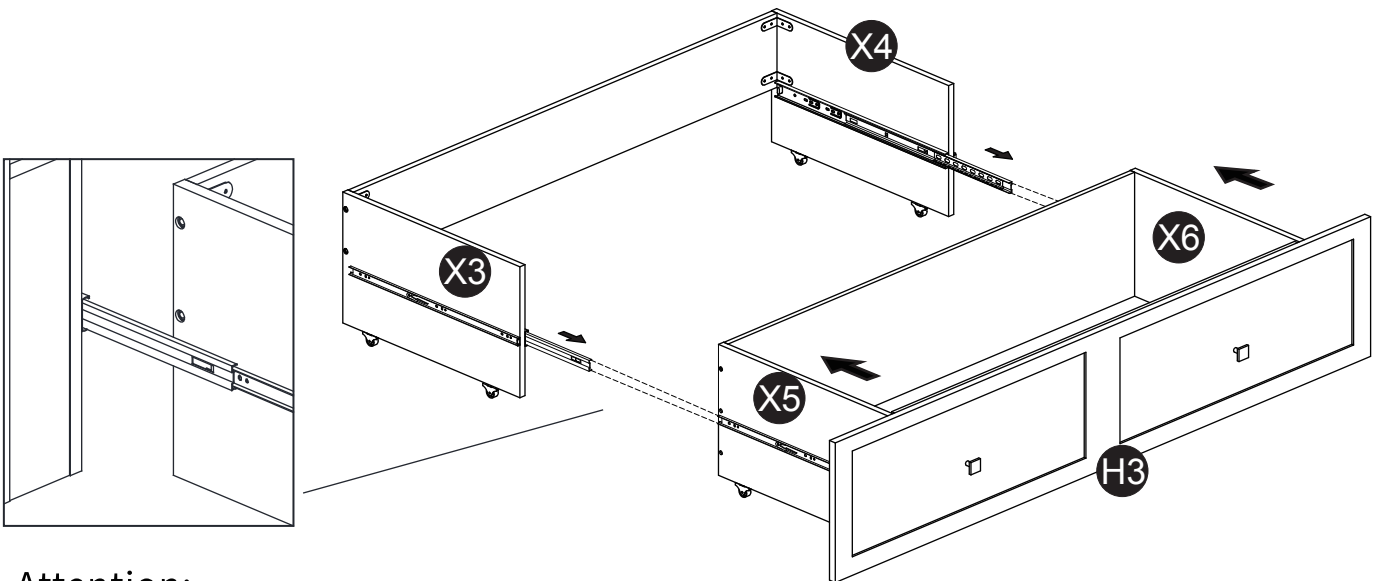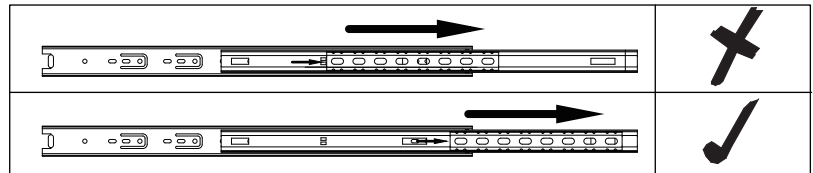

Attention:

1. Pull out the rail installed on the cabinet.
2. Align the slide runners on the drawer with the unit and push it carefully inside until it stops.




★ If the drawer does not go in smoothly please take it out and repeat the steps.

Assembly Instructions

Step 33

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

Please make sure that the balls in the tracks on both sides are pulled to the top, and then insert the tracks to ensure smooth entry.

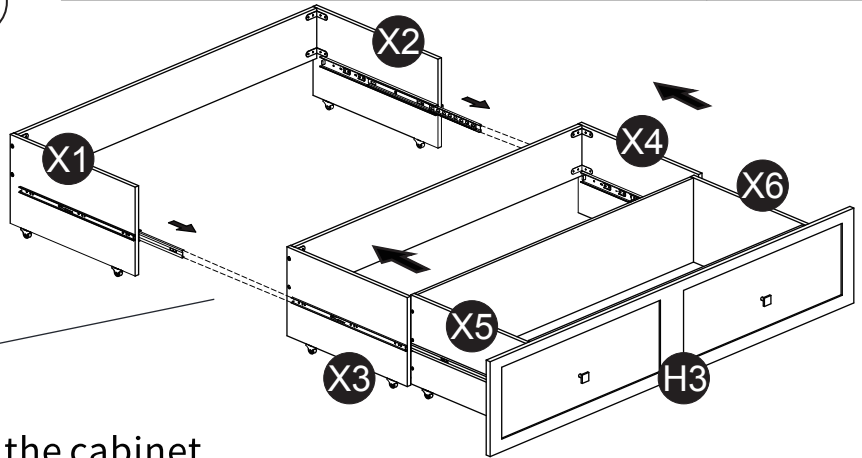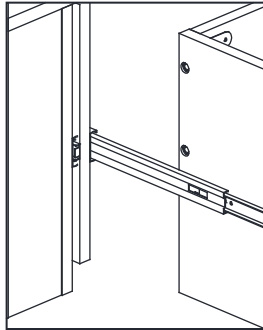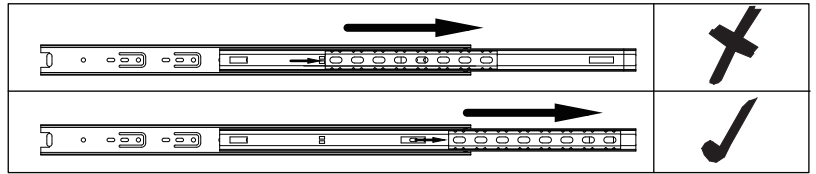


Attention:

1. Pull out the rail installed on the cabinet.
2. Align the slide runners on the drawer with the unit and push it carefully inside until it stops.



★ If the drawer does not go in smoothly please take it out and repeat the steps.

Step 34

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

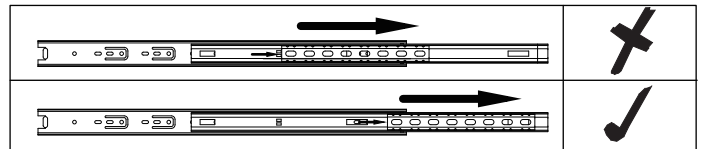

Please make sure that the balls in the tracks on both sides are pulled to the top, and then insert the tracks to ensure smooth entry.

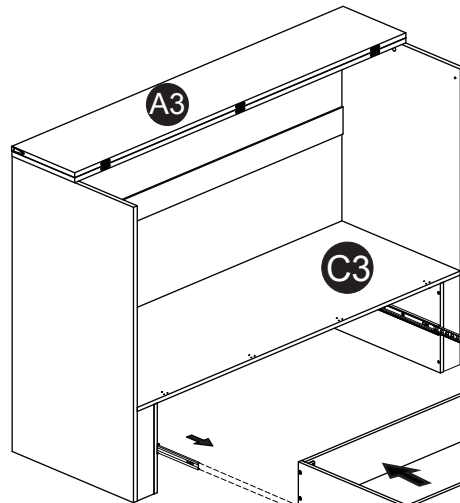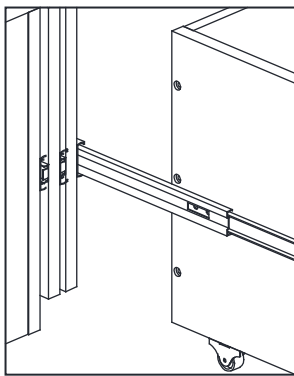


Attention:

1. Pull out the rail installed on the cabinet.
2. Align the slide runners on the drawer with the unit and push it carefully inside until it stops.


★ If the drawer does not go in smoothly please take it out and repeat the steps.

Assembly Instructions

Step 35




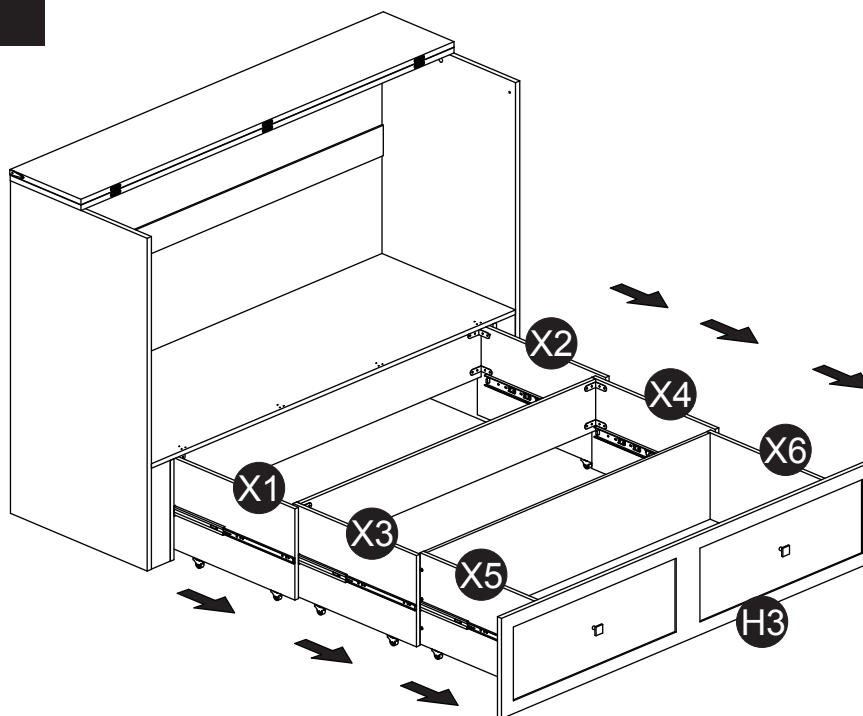


Step 36

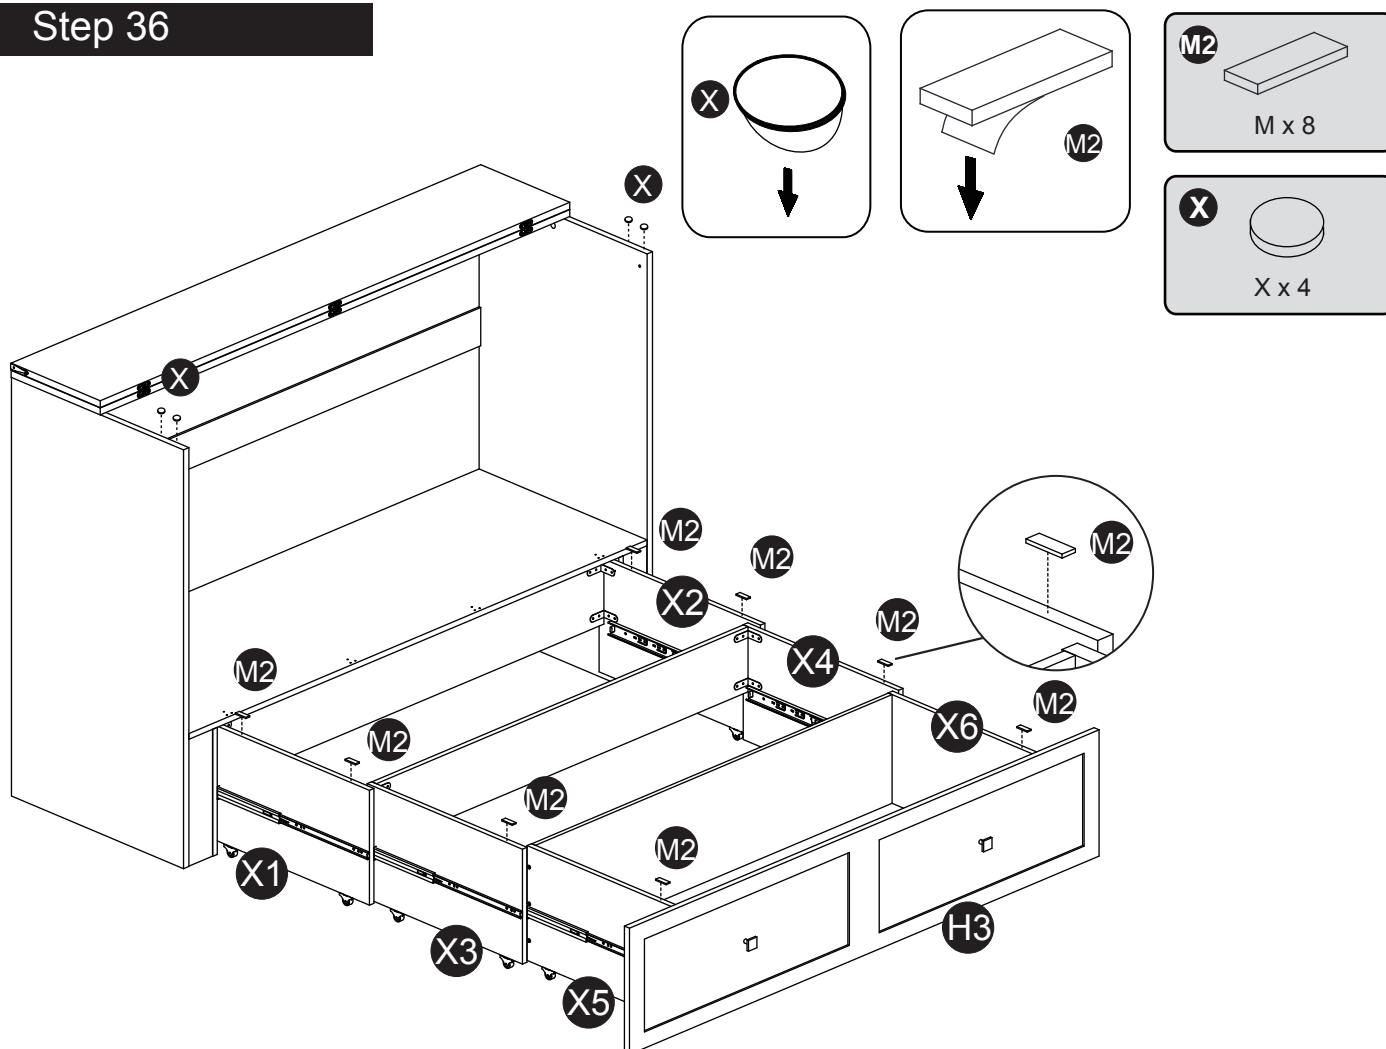






Assembly Instructions

Step 37

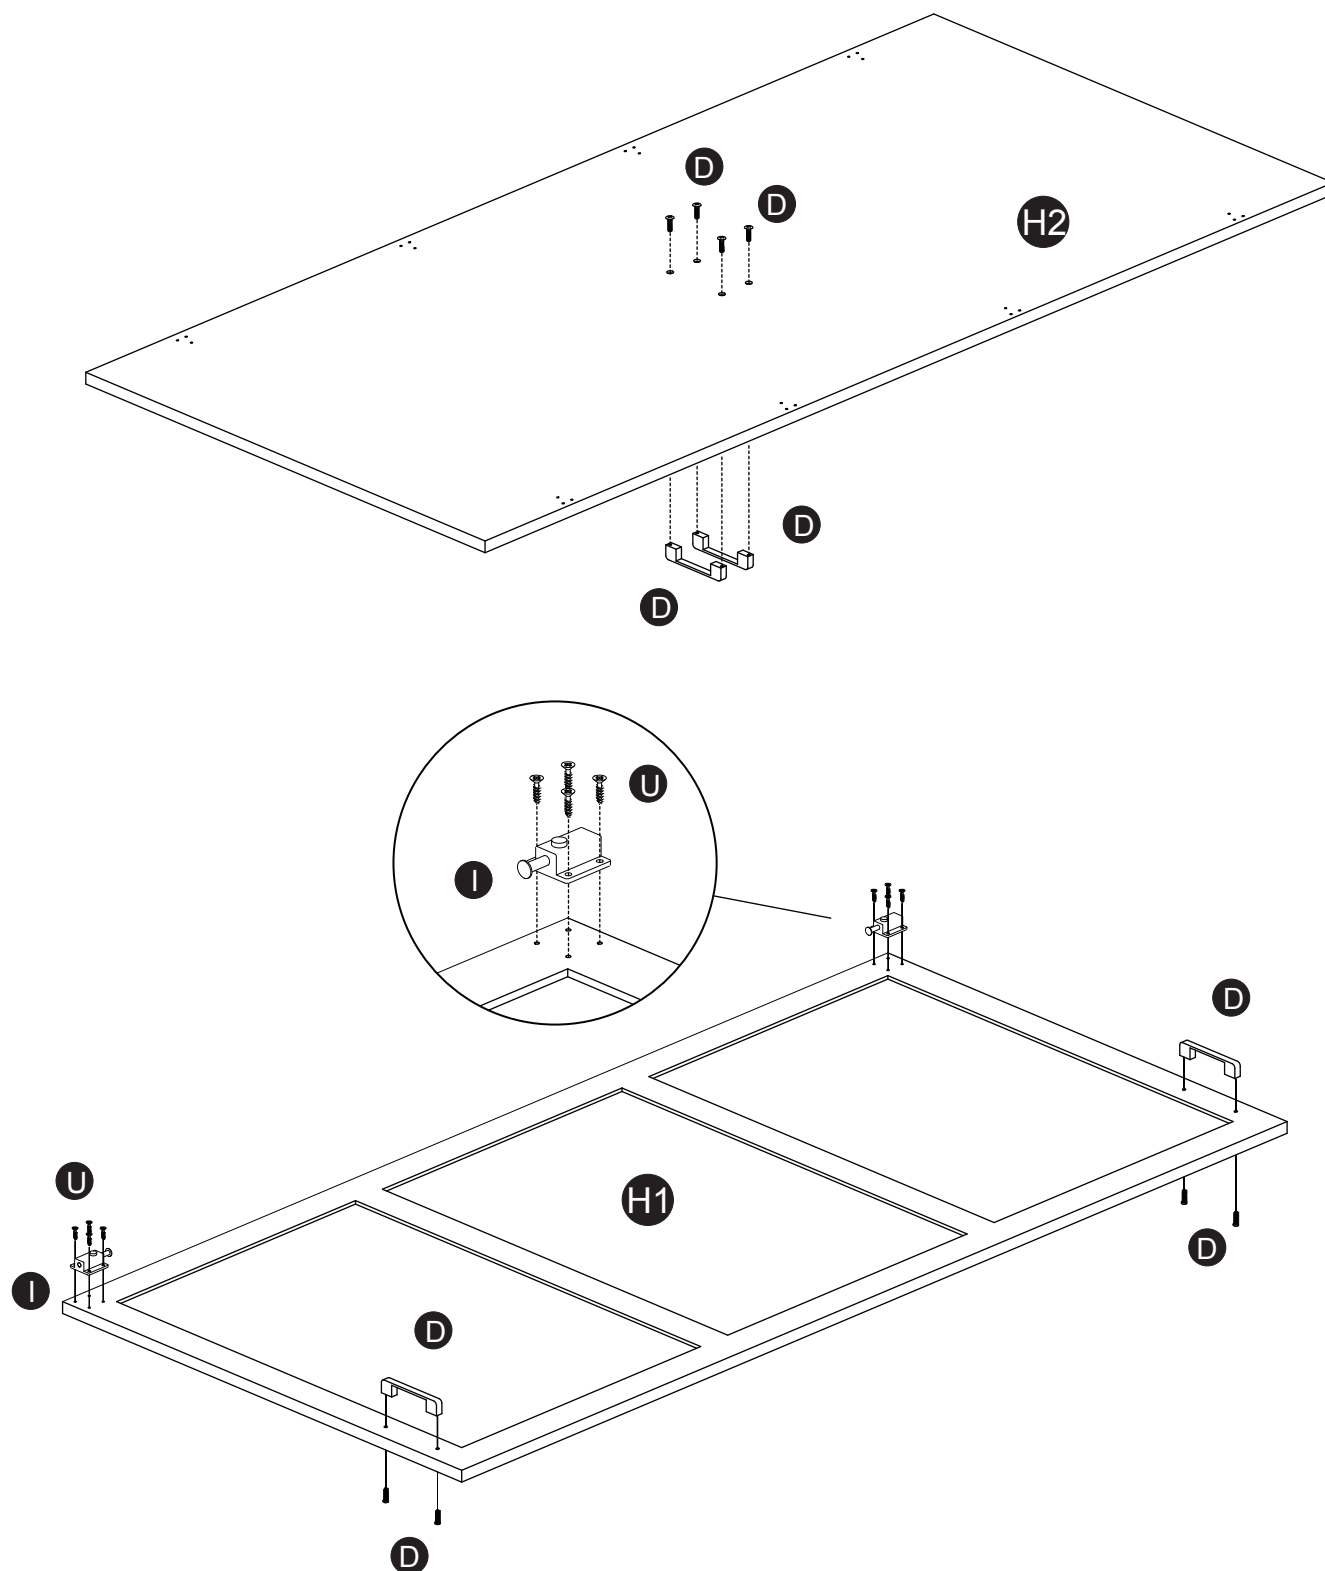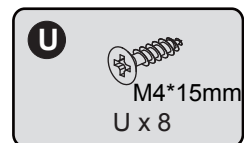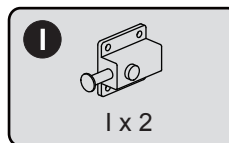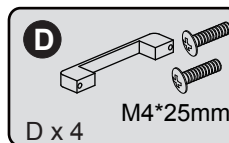


Assembly Instructions

Step 38

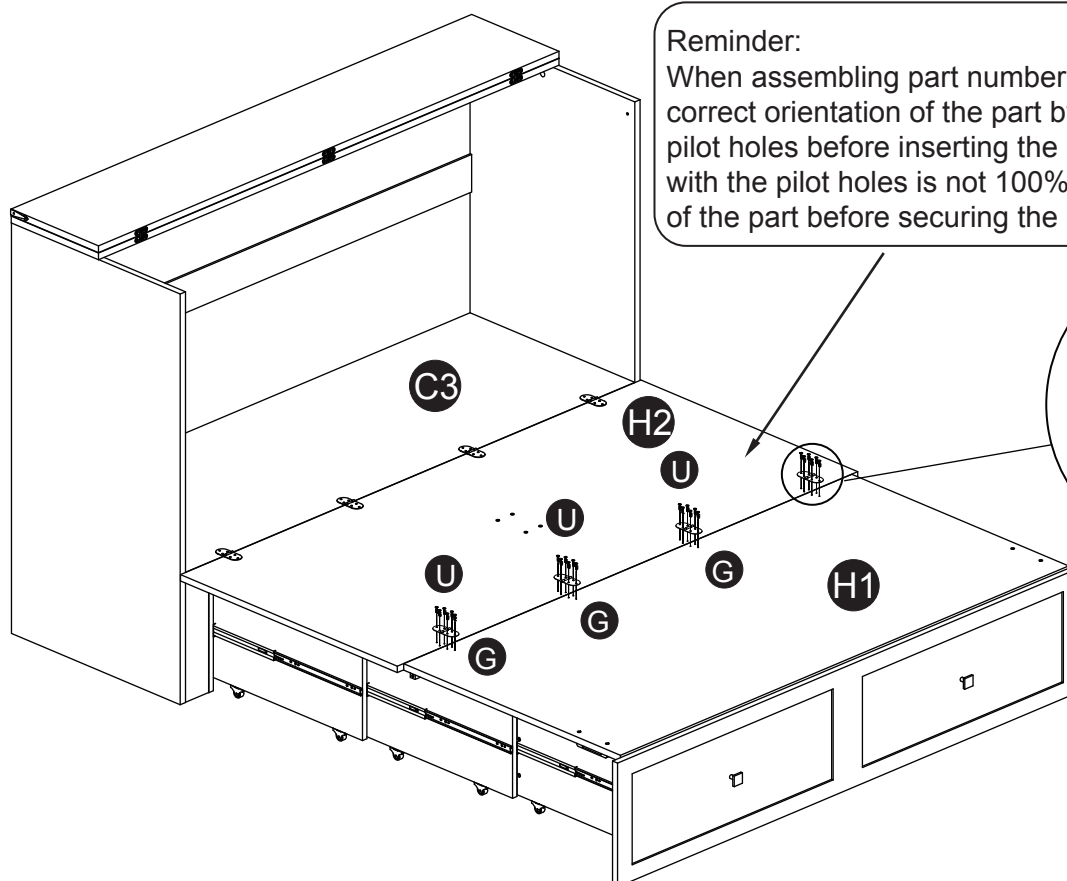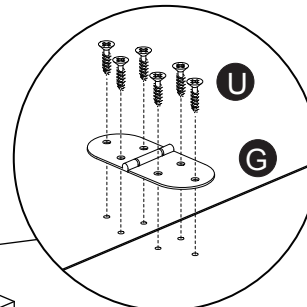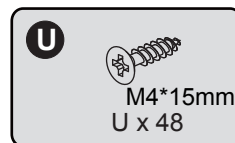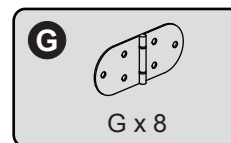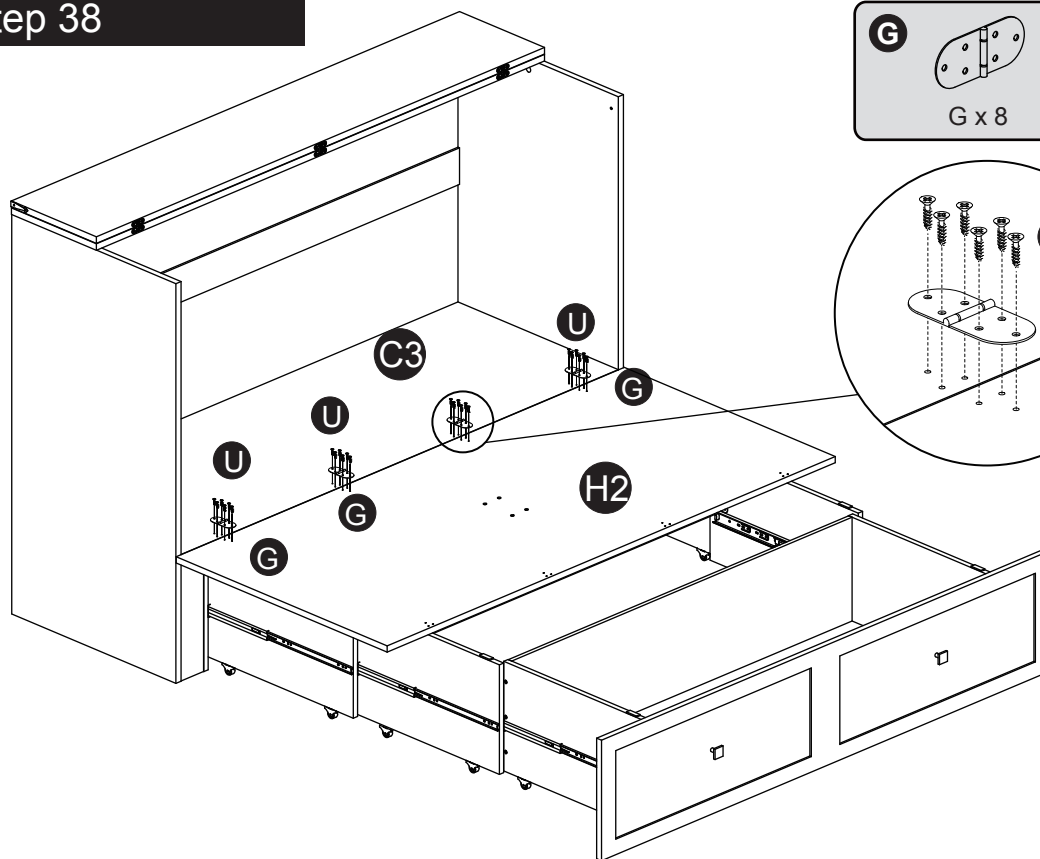



Reminder:

When assembling part number 14, determine the correct orientation of the part by comparing with the pilot holes before inserting the hinge. If the alignment with the pilot holes is not 100%, adjust the orientation of the part before securing the hinge.

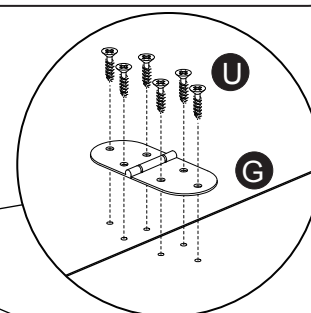




Assembly Instructions

Step 39

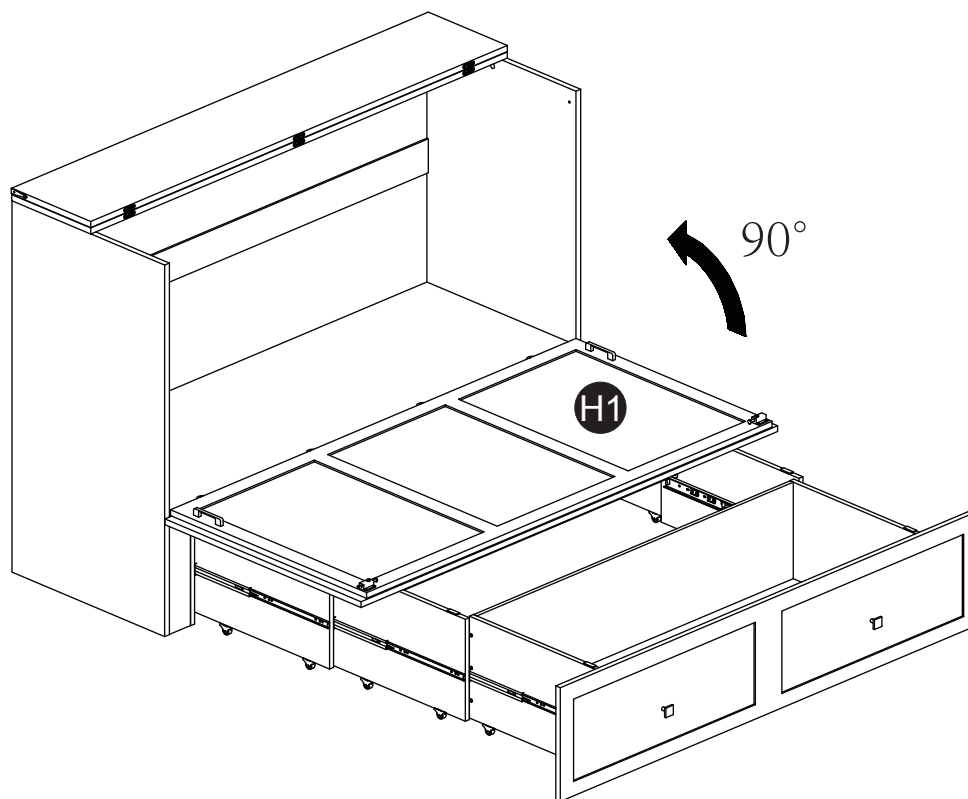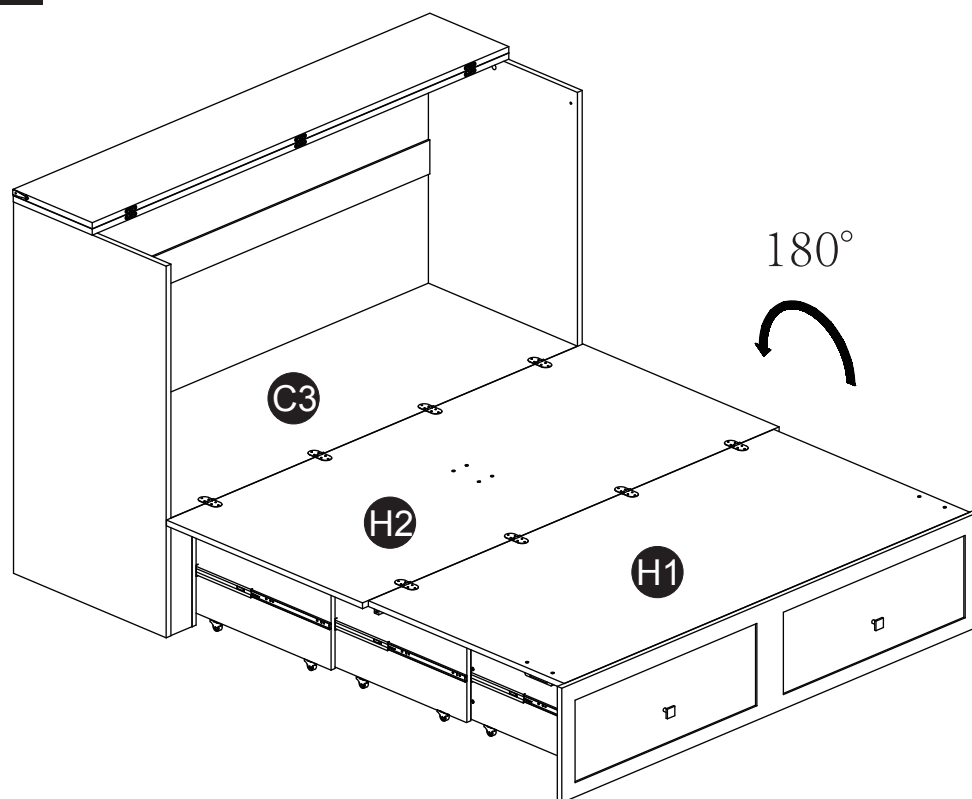



Assembly Instructions

Step 40

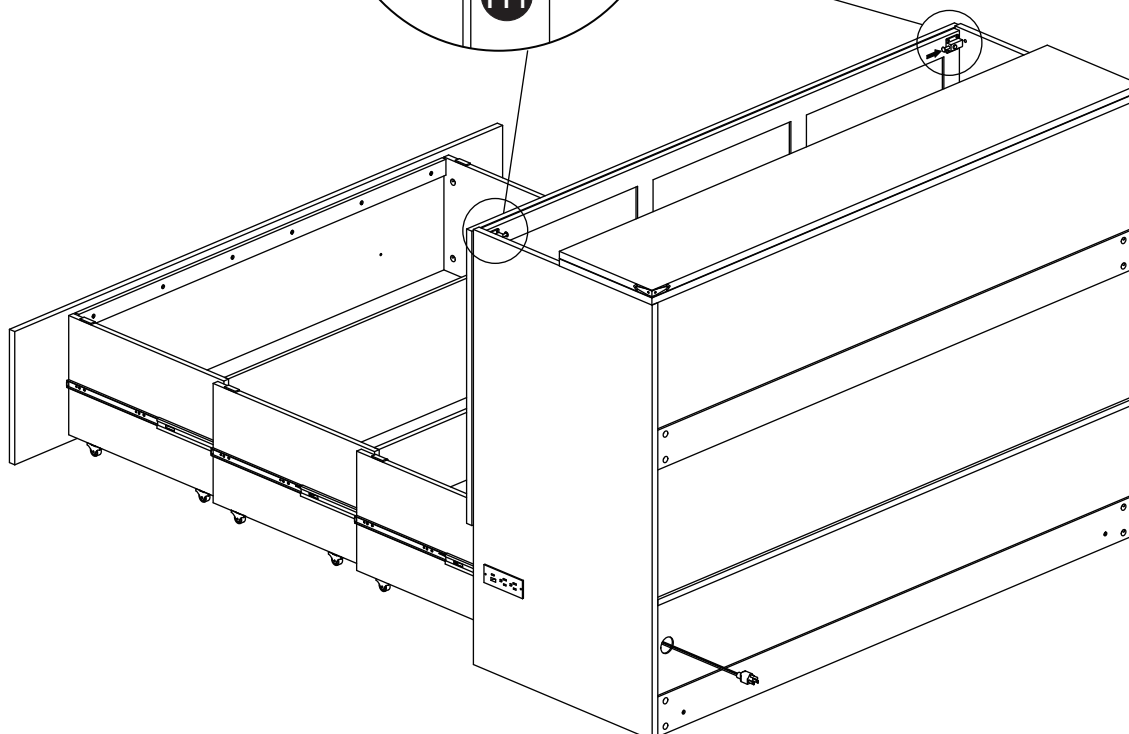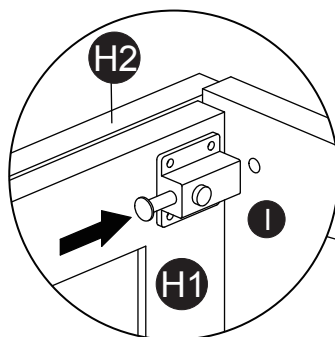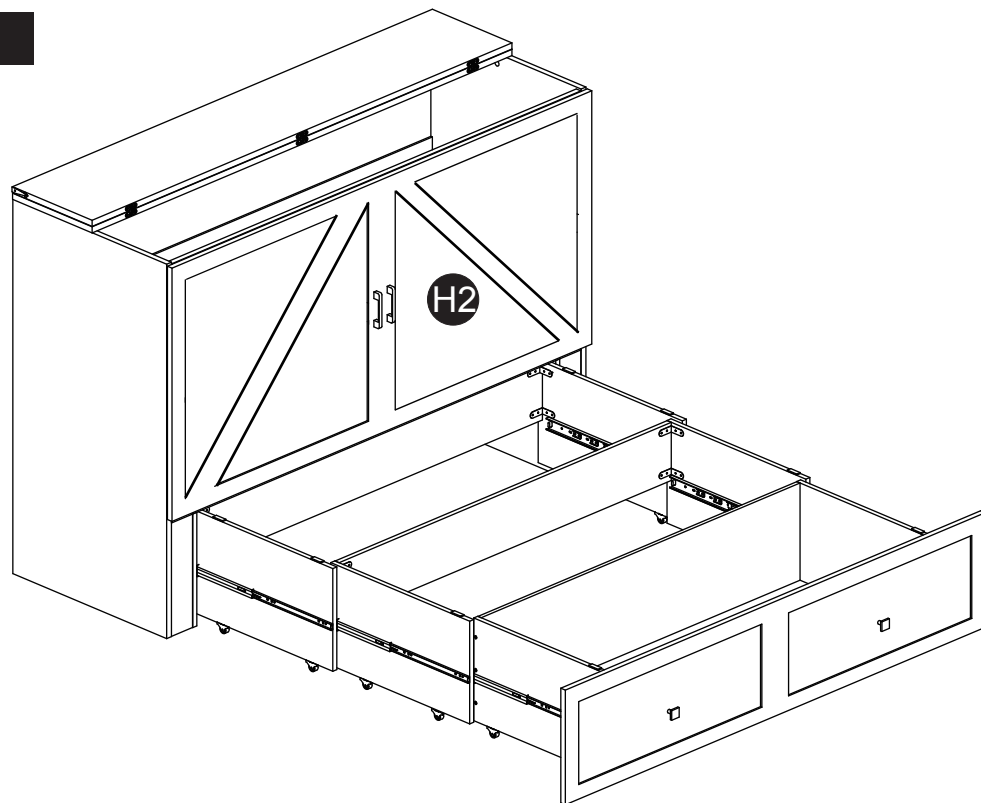


Assembly Instructions

Step 41

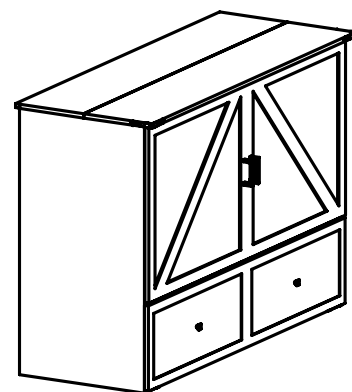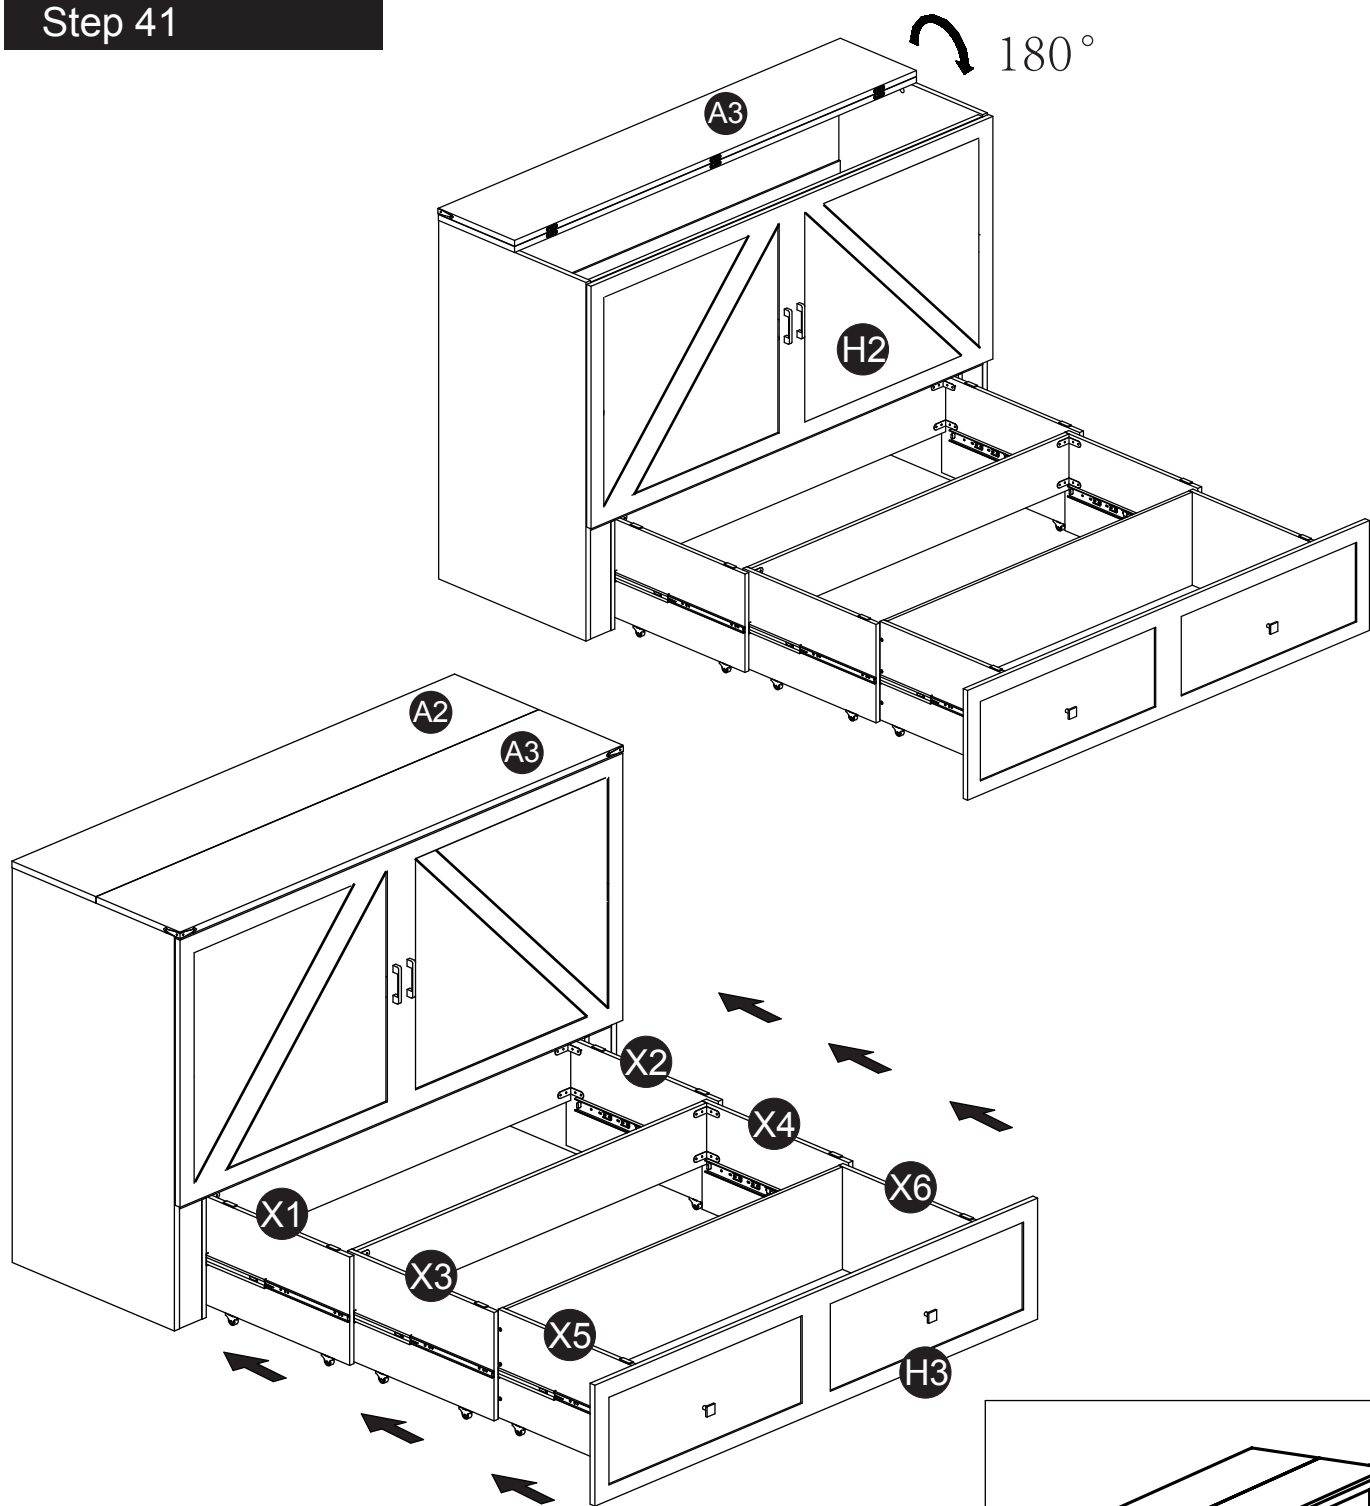



Assembly Instructions

Step 42

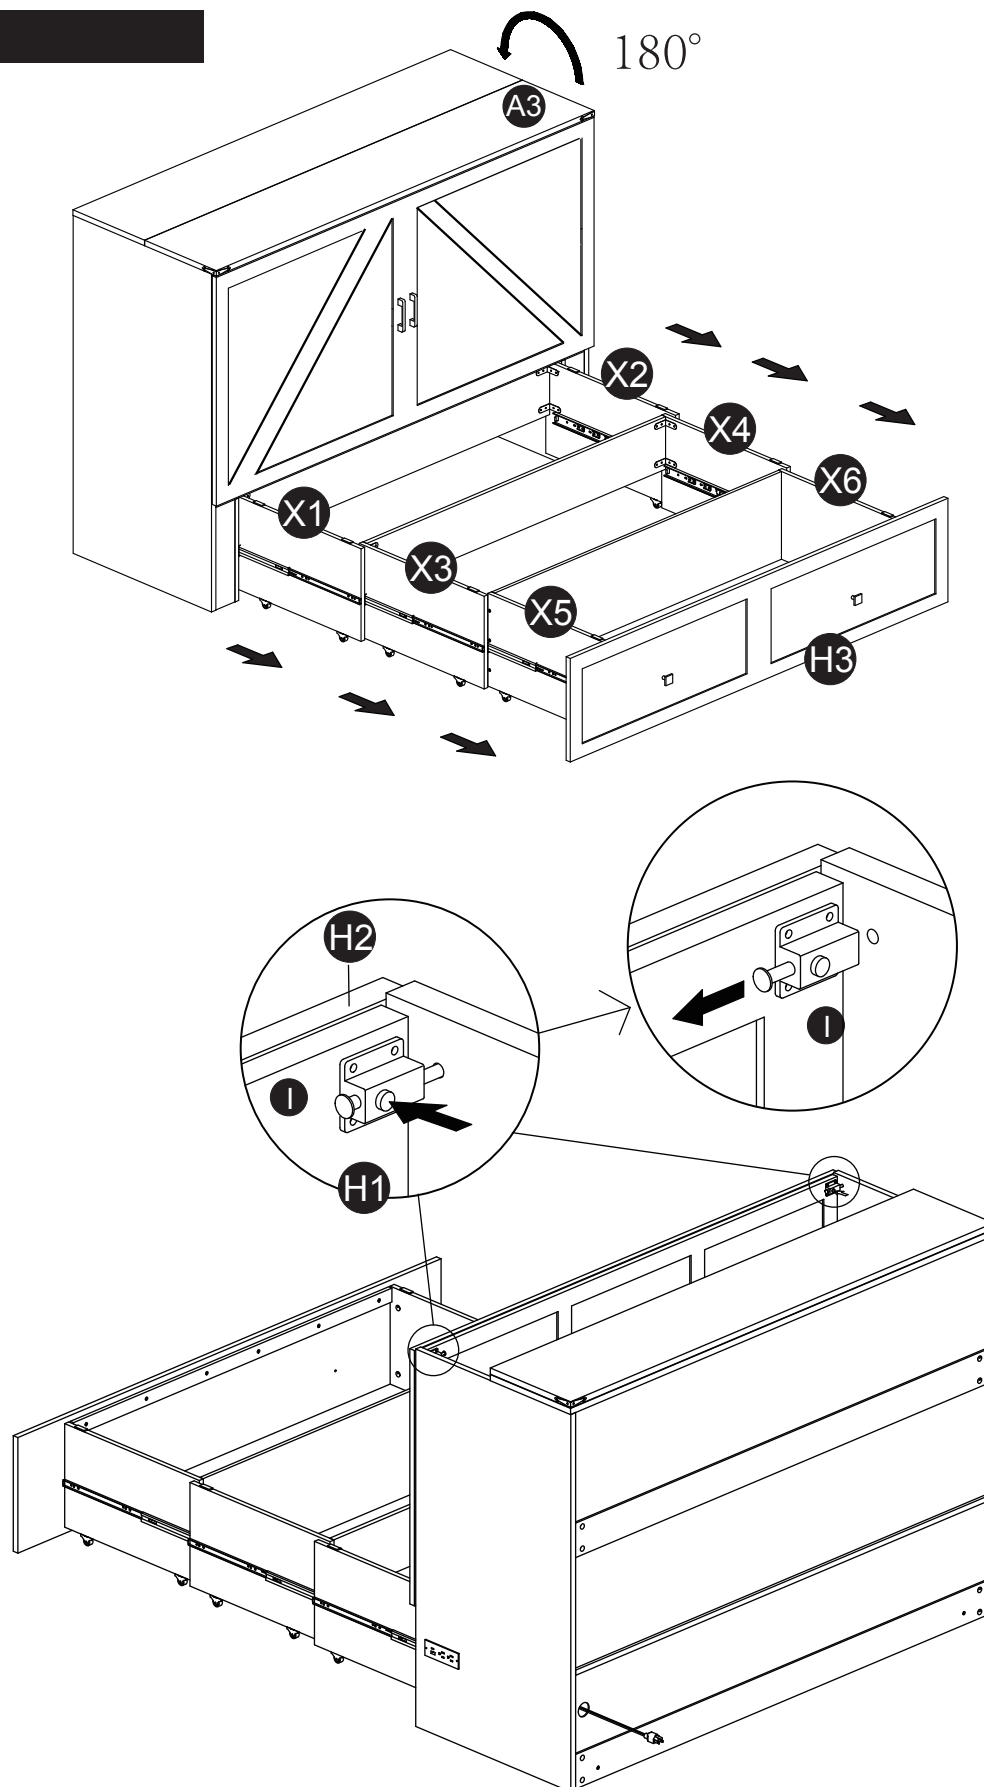

Assembly Instructions

Step 43

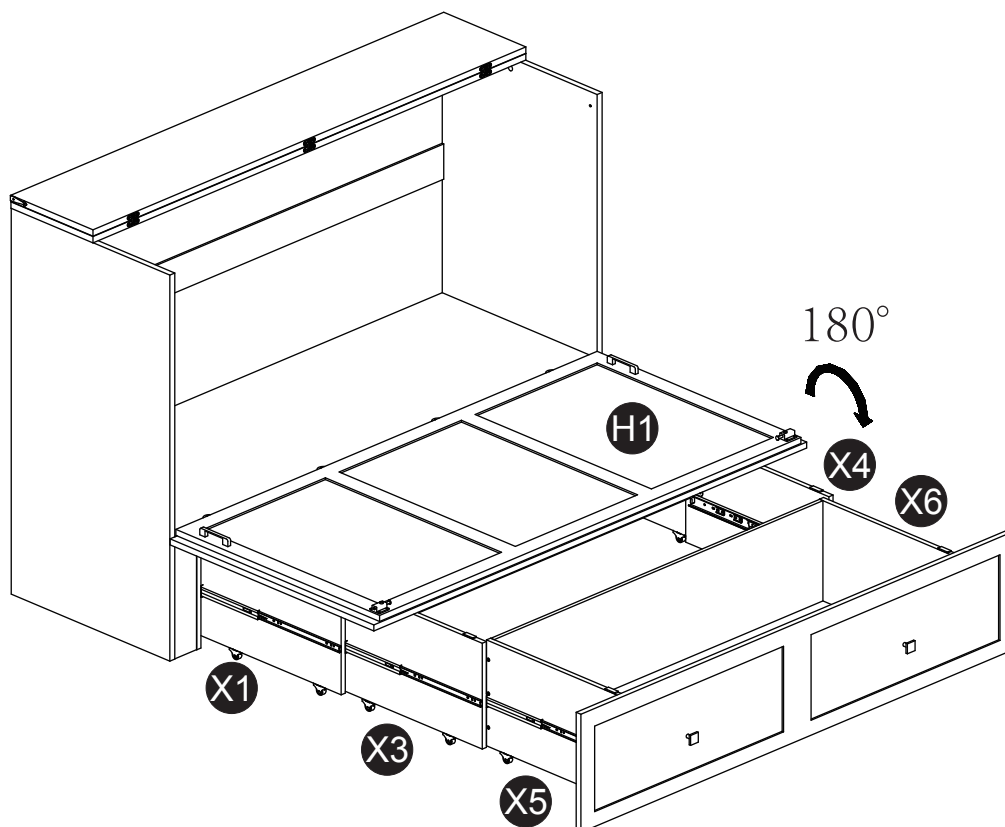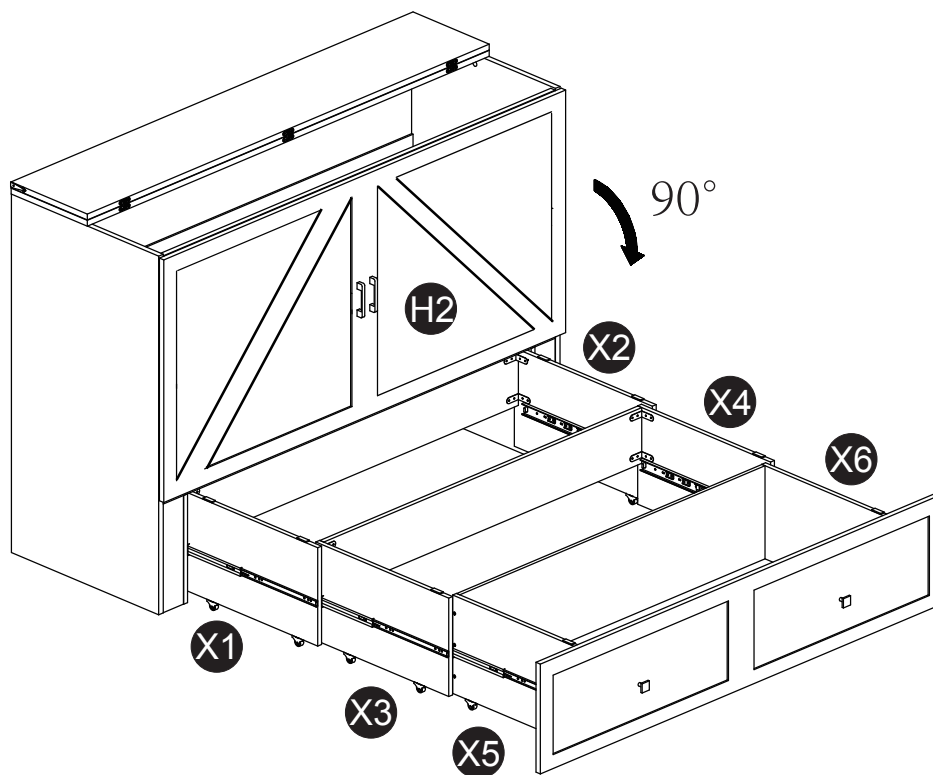

Assembly Instructions

Step 44

