

3DB12,3DB15,3DB18,3DB21,3DB24,3DB30,3DB36

3VDB12,3VDB15,3VDB18

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the wood block on the top corner, and put on the adjustable shelf

STEP 7: Fix drawer head on the drawer front and adjust the cover-space

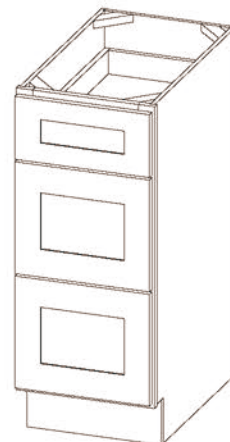

PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	6
G	DRAWER BOX SIDE	6
H	DRAWER BOX BOTTOM	3
I	DRAWER HEAD	3

8	BUMPER	12	 Bumper
7	1" ROUND HEAD SCREW	12	 1" round head screw
6	21" SELFCLOSE SLIDE	3	 Selfclose slider
5	9/16" ROUND HEAD SCREW	40	 9/16" round head screw
4	CLEAT	10	 Cleat
3	1" FLAT HEAD SCREW FOR CARCASS	2	 1" flat head screw
2	Plastic bracket	4	 Plastic bracket
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw
NO.	Description	QTY	PICTURE

HARDWARE LIST

