


IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

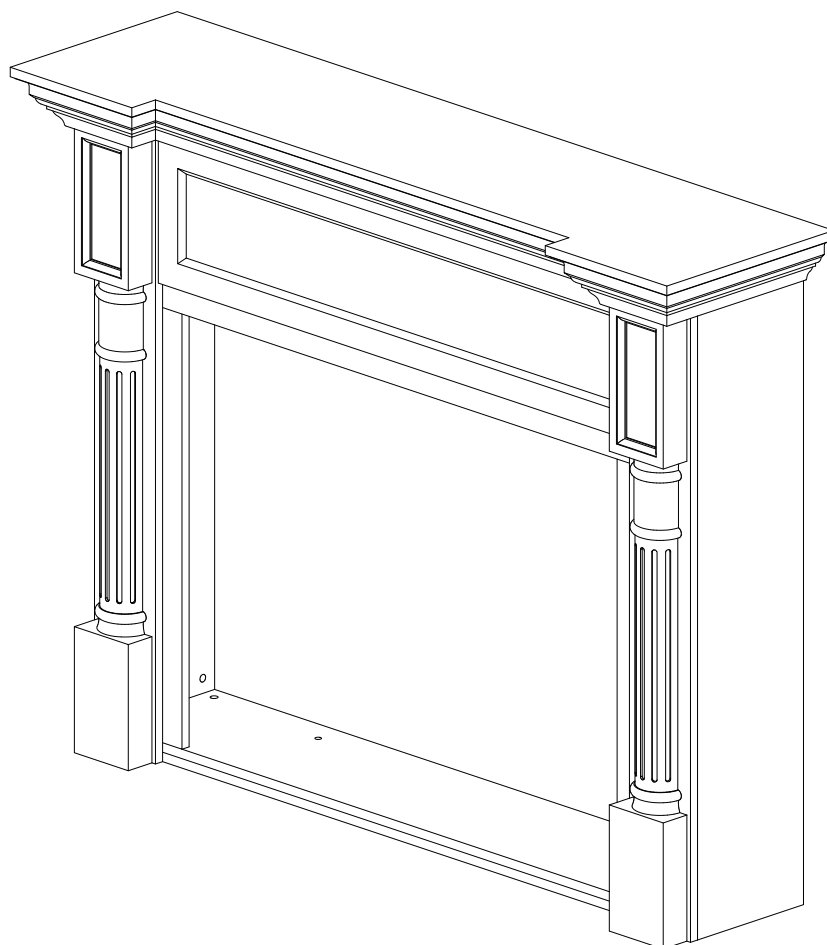

ELECTRIC FIREPLACE



THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

WARNING

- Unit can tip over causing severe injury.
- Anchor unit to study on wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.



60MIN

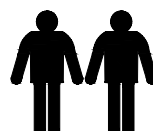

[Helpful Hints]

PEOPLE NEEDED FOR ASSEMBLY: 2
ESTIMATED ASSEMBLY TIME: 1 HOUR

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.



-Identify, sort and count the parts before attempting assembly.



-Make sure to always face the point on the top of the Cam Lock towards the outer edge.



-Use all the nails provided for the back panel and spread them out equally.



-Back panel must be used to make sure your unit is sturdy.




-Do NOT use harsh chemicals or abrasive cleaners on this item.

-Never push, pull, or drag your furniture.



PARTS LIST

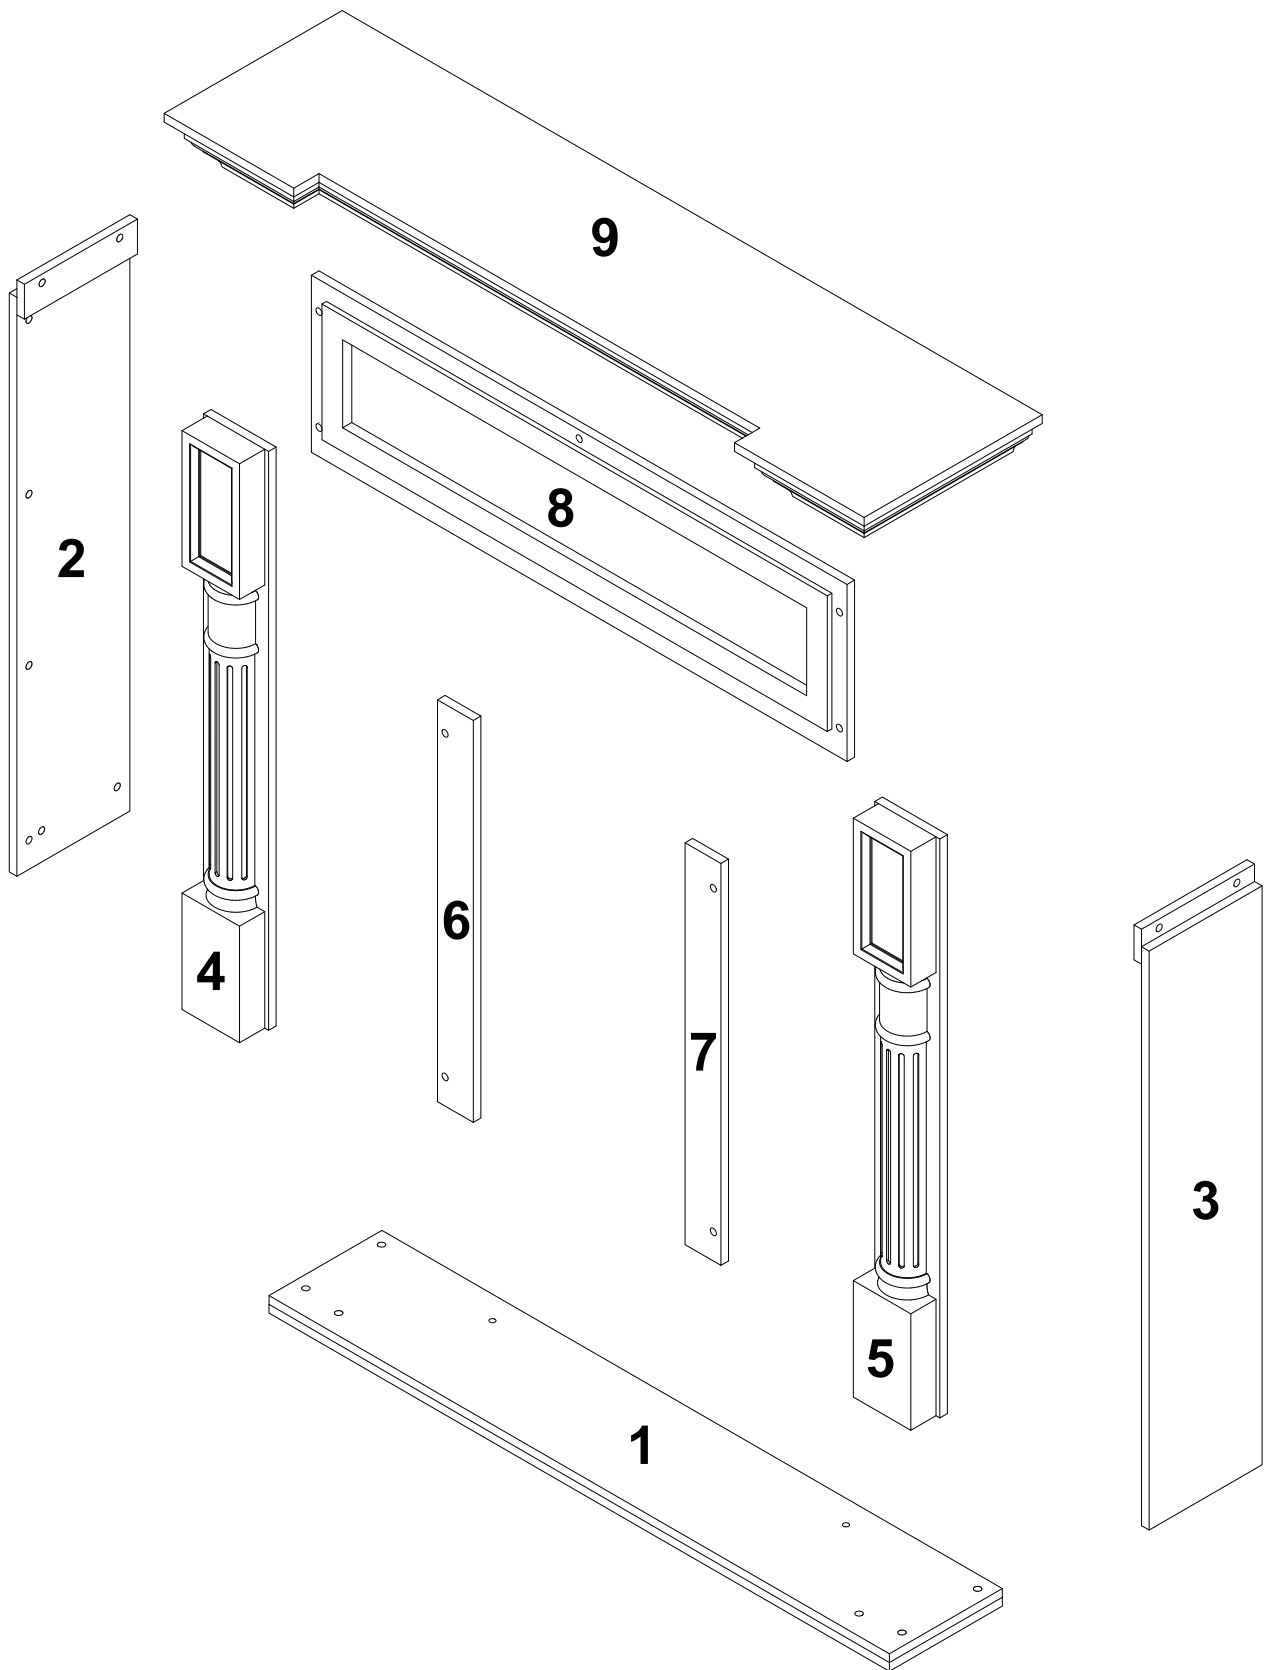


HARDWARE LIST




A	X	28
---	---	----

Ø6 x12mm



B	X	14
---	---	----




C	X	13
---	---	----

Ø6 x 28mm



D	X	18
---	---	----




E	X	1
---	---	---




F	X	3
---	---	---

Ø4 x12mm



H	X	2
---	---	---



I	X	1
---	---	---

DIMENSIONS





ASSEMBLY



Before installing this fireplace, please read the following steps carefully.

STEP 1:

Join panels (2)+(4), (3)+(5) by securing screws (A) via L-brackets (B) with the allen wrench (E) provided.

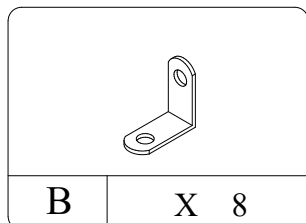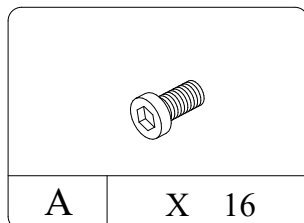


Ø6 x12mm

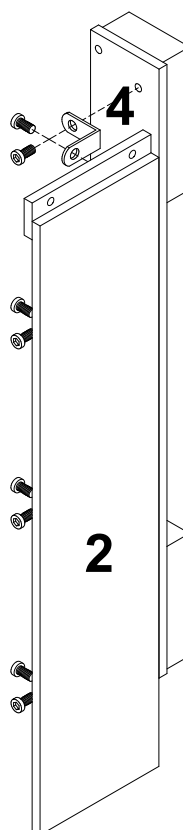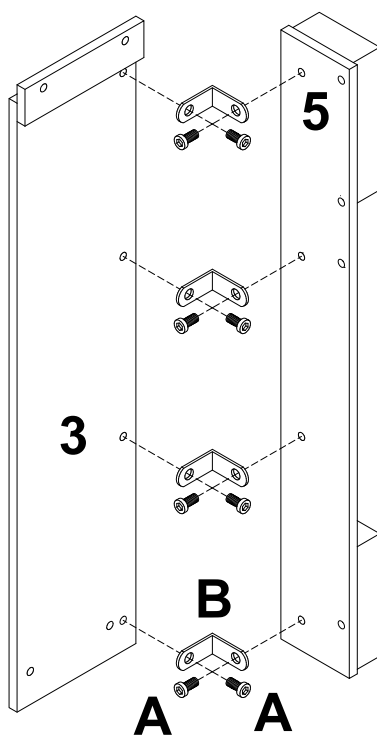


STEP 2:

Join the panel (1) by securing screws (A) via L-brackets (B) with the allen wrench (E) provided.


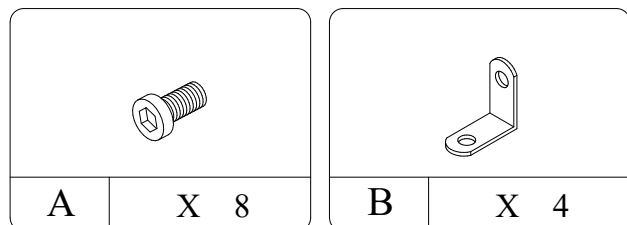


Ø6 x12mm

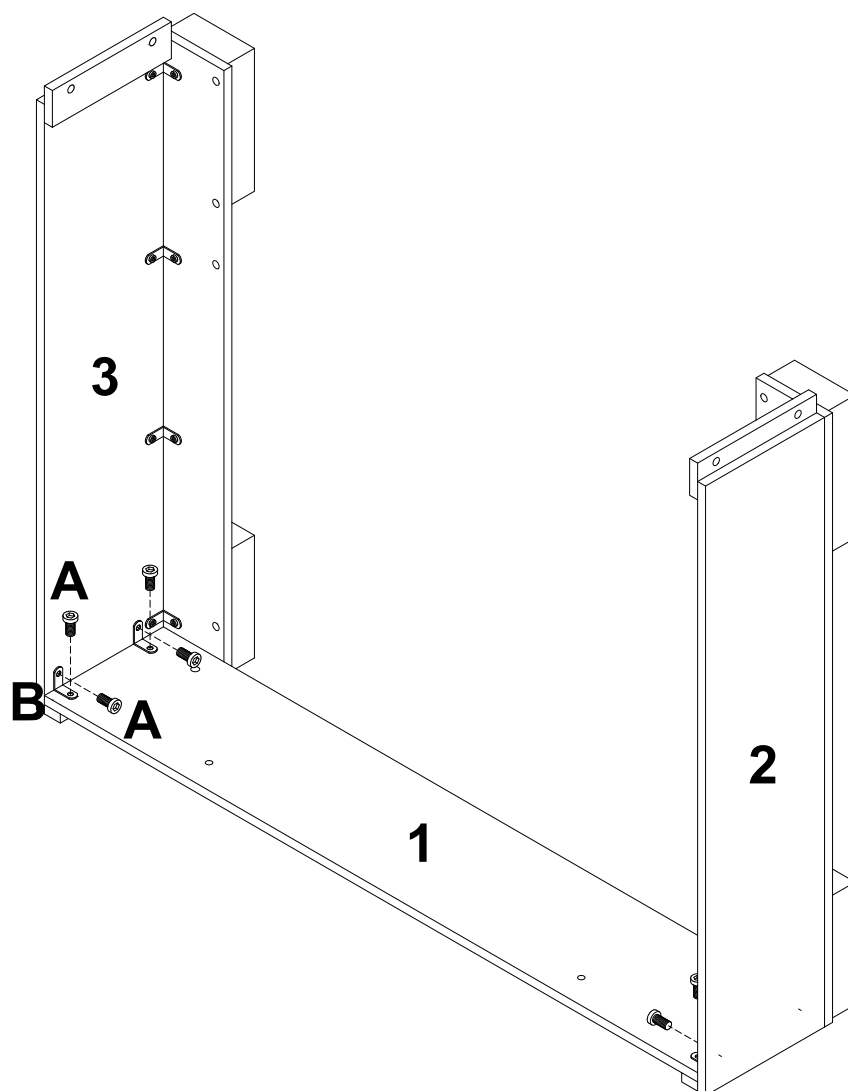


STEP 3:

Join panels (6)+(7) by securing screws (C) via washers (D) with the allen wrench (E) provided.

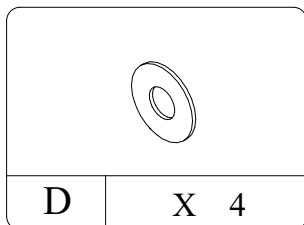
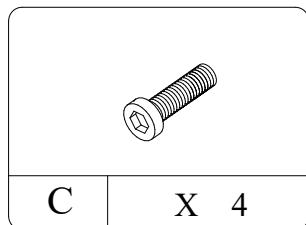


Ø6 x 28mm

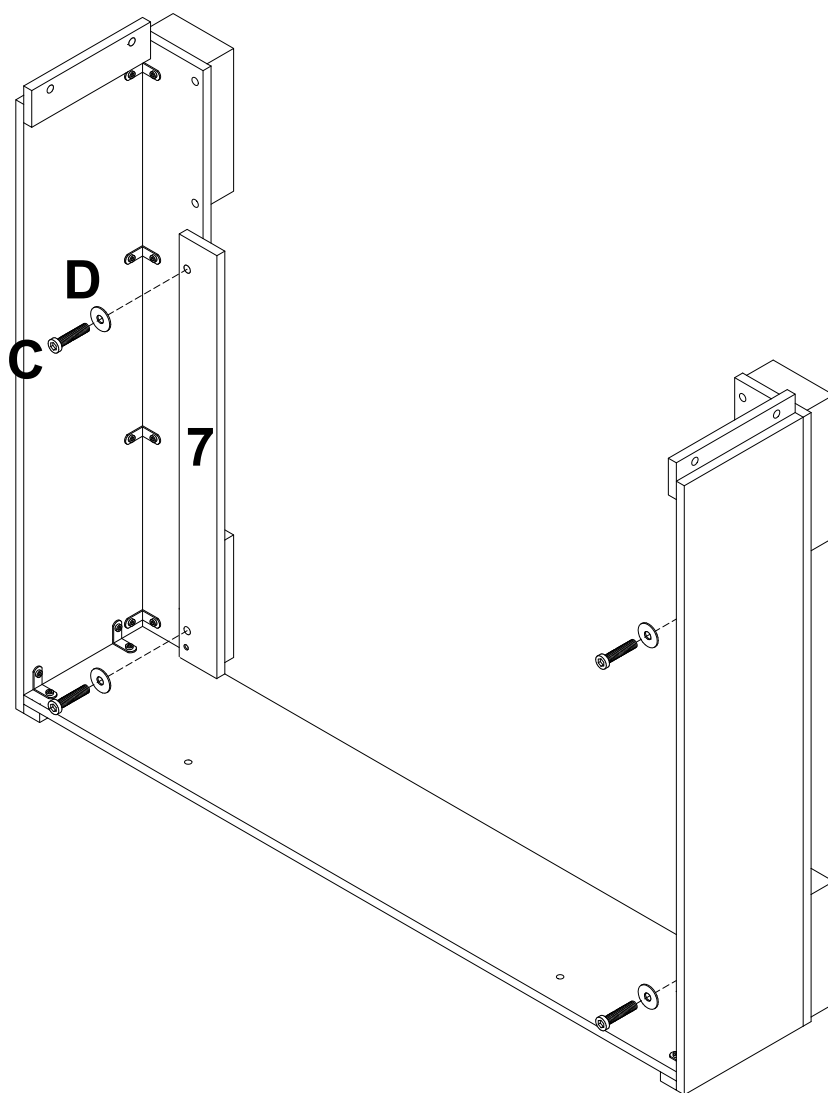


STEP 4:

Fix panels (6)+(7) to the base panel by securing screws (A) via L-brackets (B), with the allen wrench (E) provided.

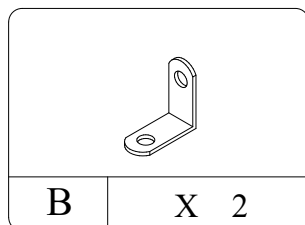
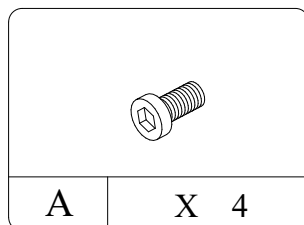


Ø6 x 12mm

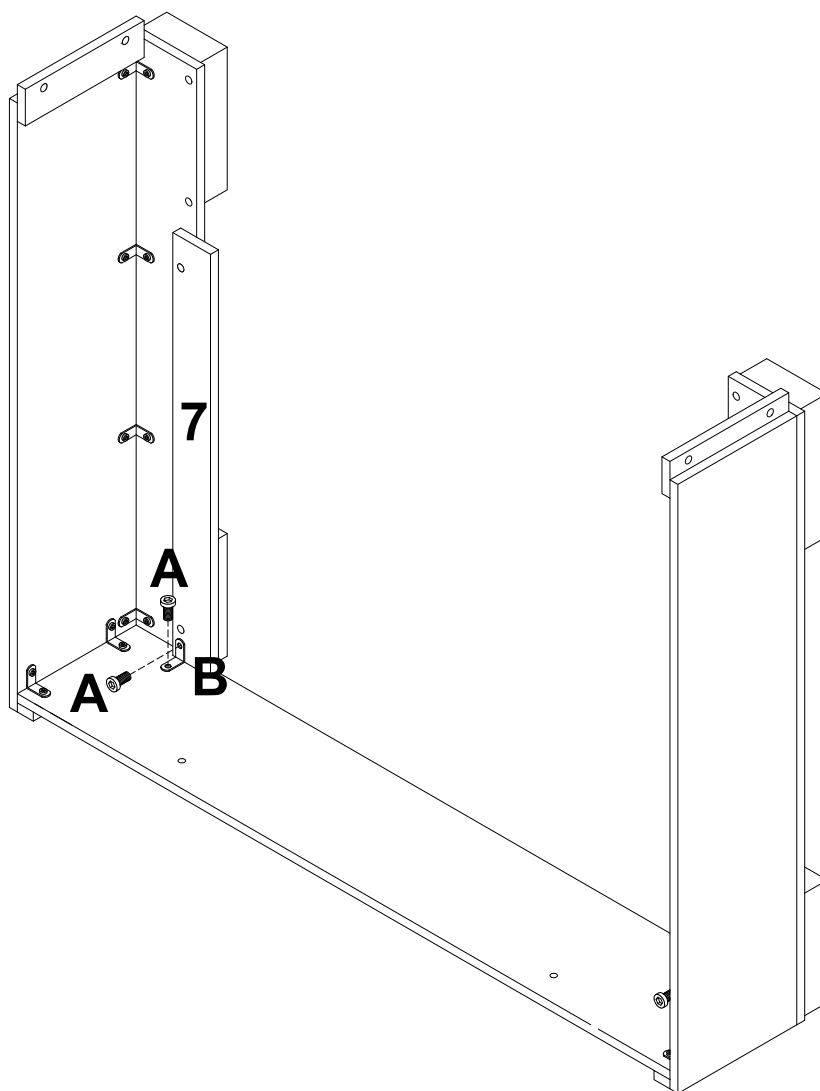


STEP 5:

Join the panel (8) by securing screws (C) via washers (D) with the allen wrench (E) provided.

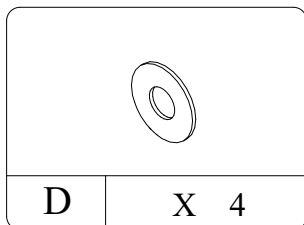
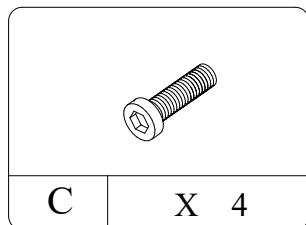


Ø6 x 28mm

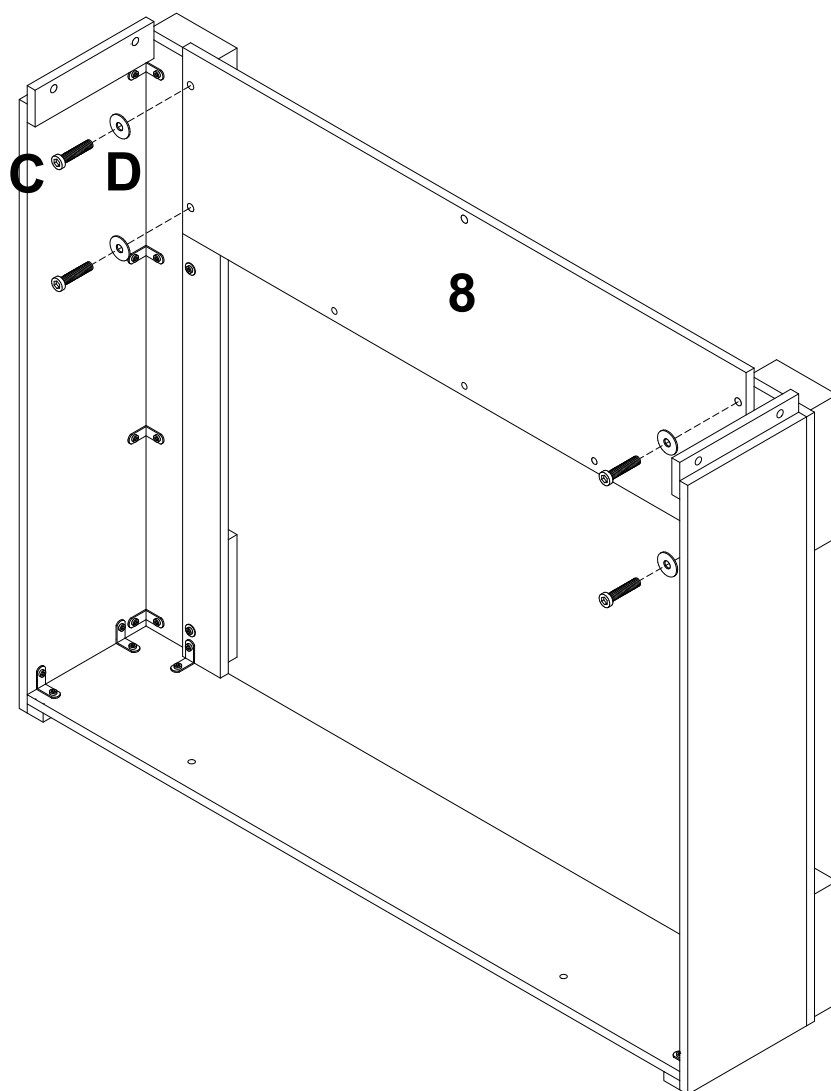


STEP 6:

Join the panel (9) by securing screws (C) via washers (D) with the allen wrench (E) provided.

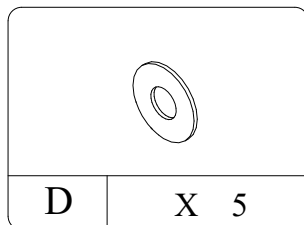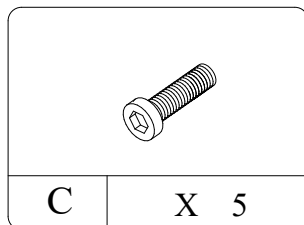


Ø6 x 28mm

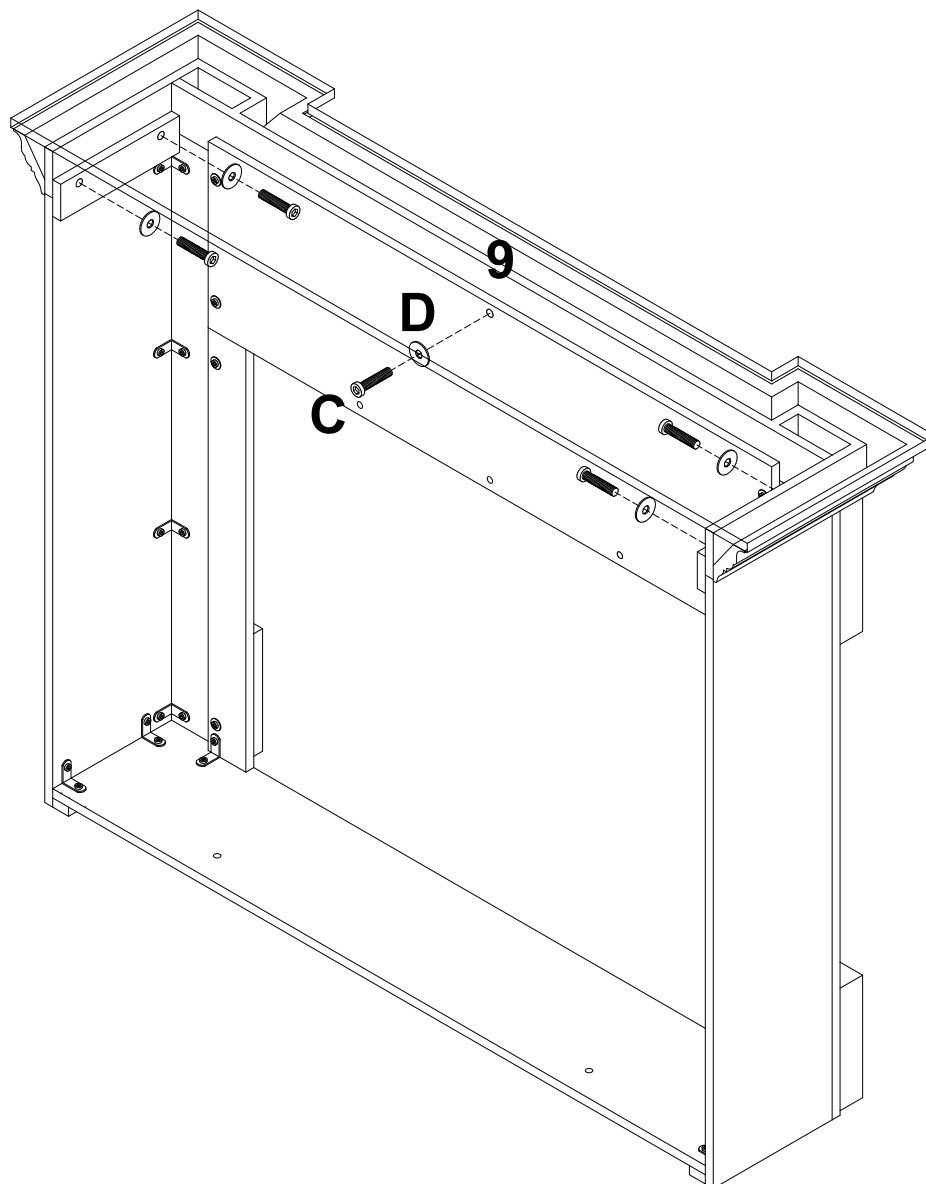



STEP 7:

Remove 2 qty screws (F) on the bottom-left and bottom-right of the firebox.

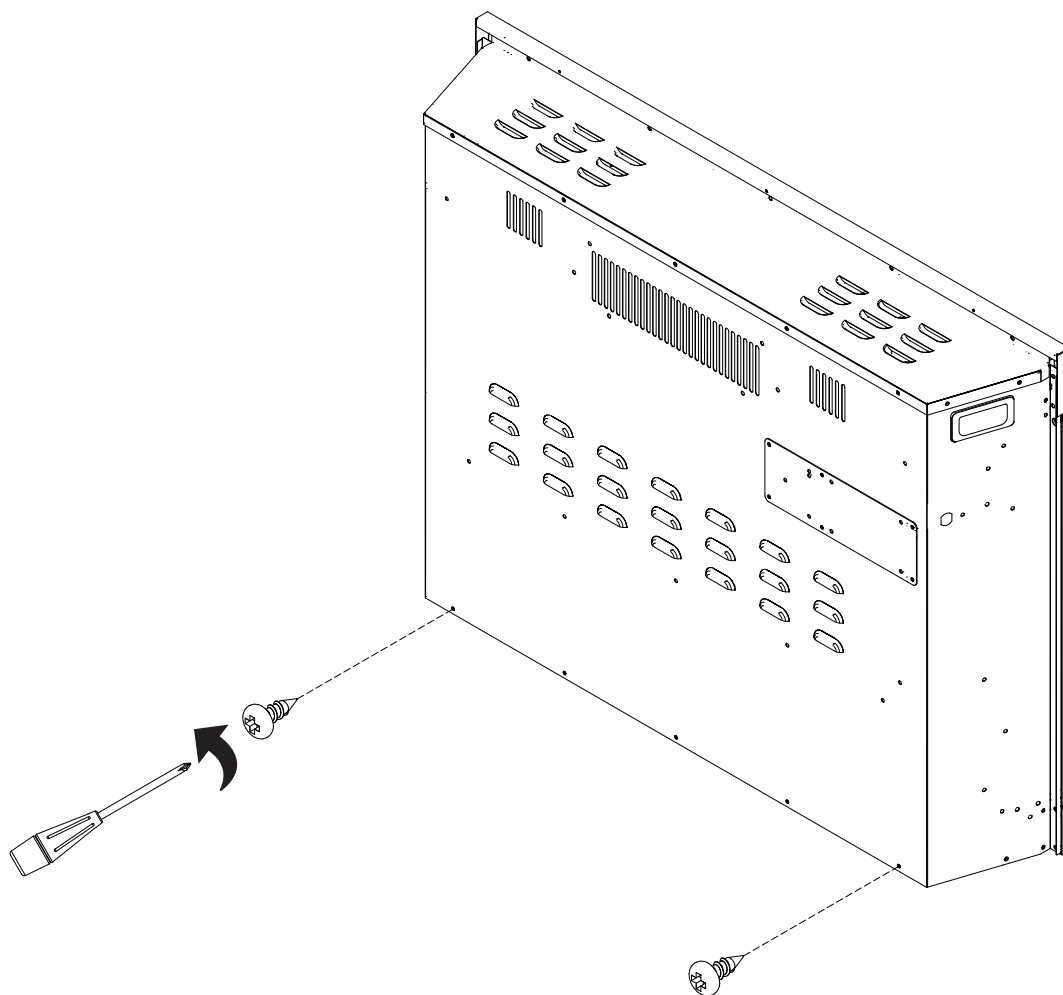


STEP 8:

Join the metal strip (I) and L-brackets (H) by securing screws (F) with the screw driver.


					
F	X 5	H	X 2	I	X 1

Ø4 x12mm

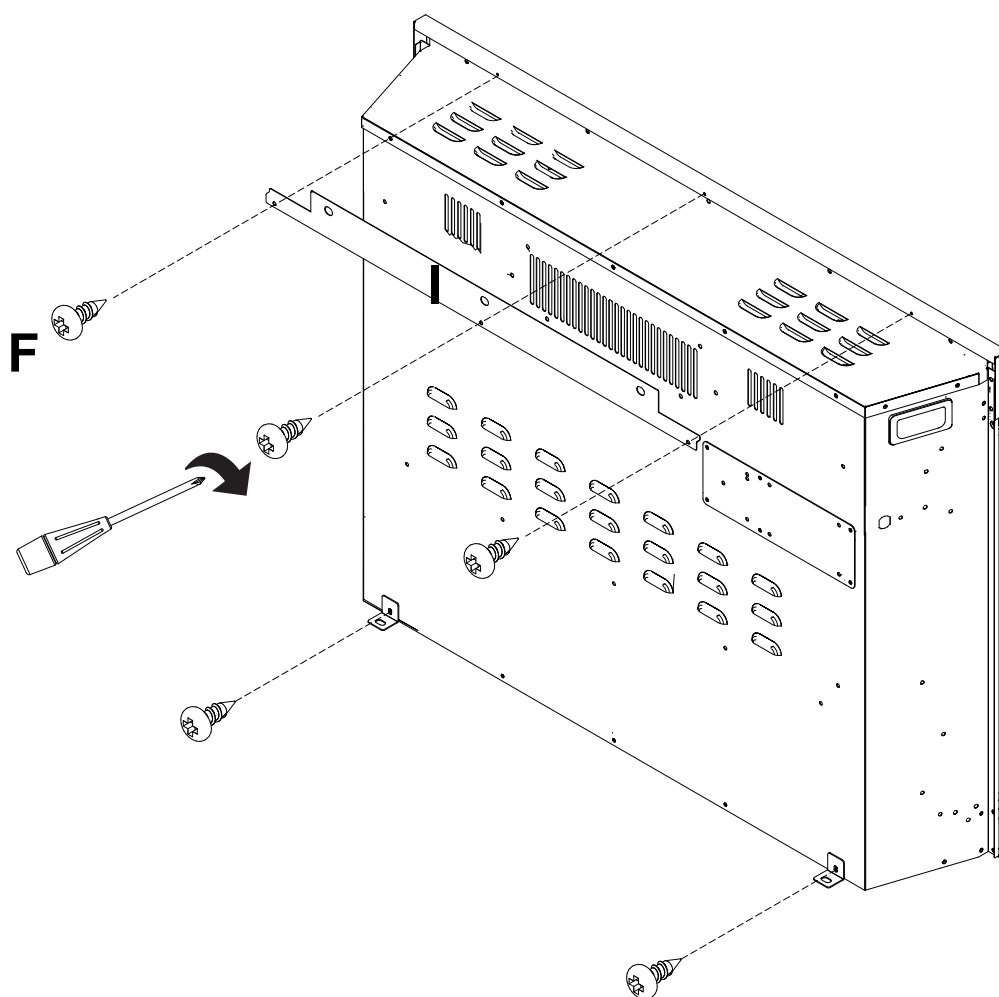

STEP 9:

Install the firebox by securing screws (A) via washers (D) with the allen wrench (E) provided.

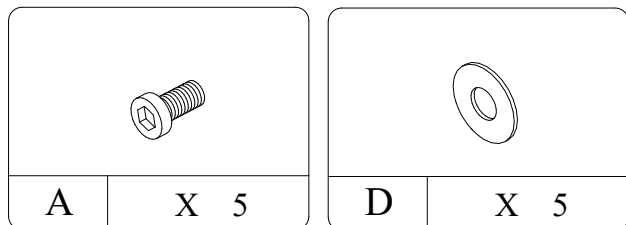

Ø6 x12mm

