




DESIGNED FOR LIFE

Assembly Instructions

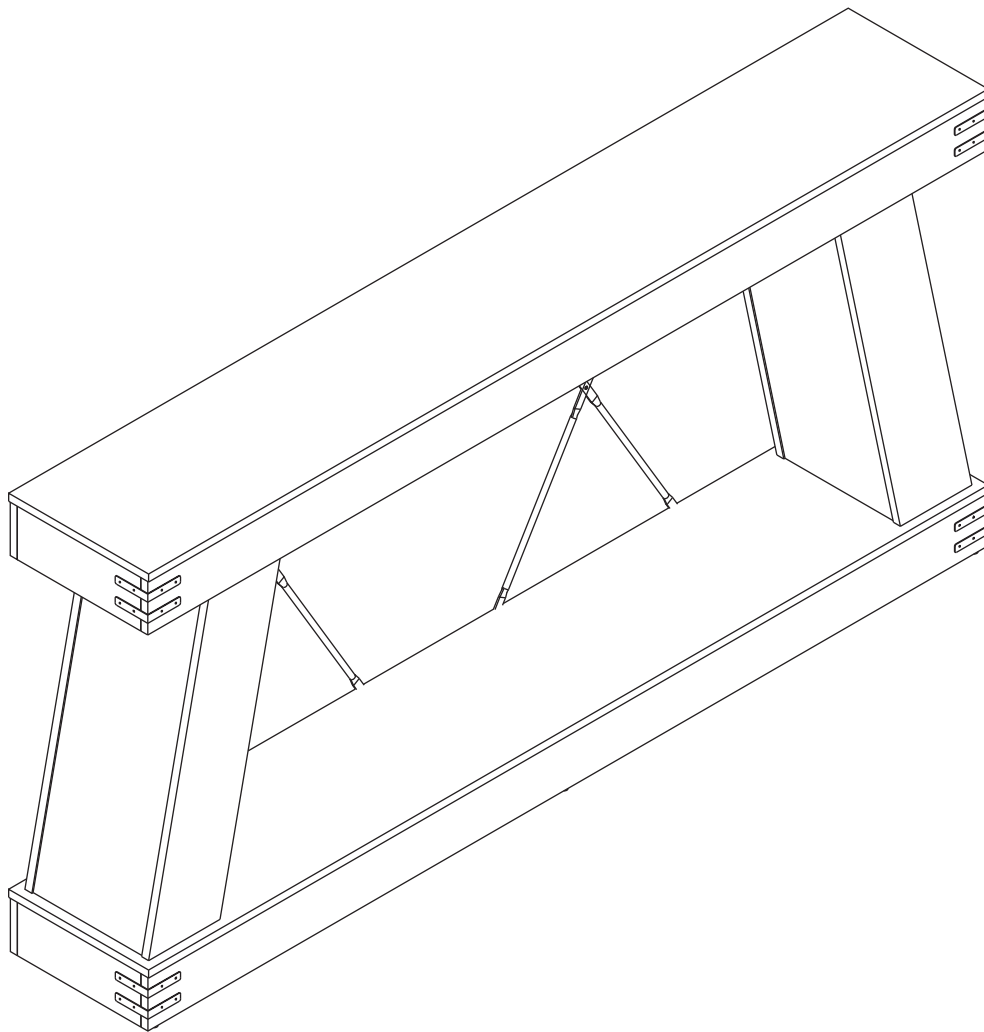

Console Table

Model No.
HOGA-J0374



LITTLE TREE
Little Tree by Tribesigns

www.tribesign.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.


How to Get the Assembly Video

Step 1 Scan the QR code.




Installation Video



Step2 Search with the Model No.
(on the bottom left corner of the title page)

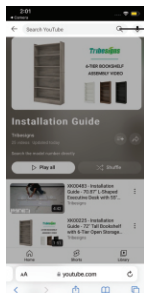

Note: If you can't find the assembly video, please contact us.

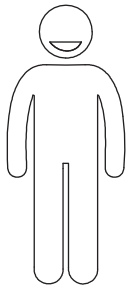


X2

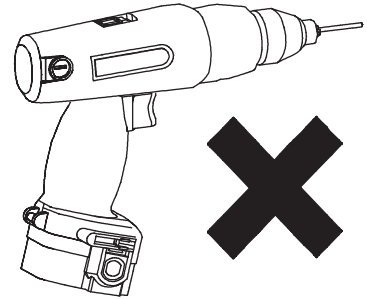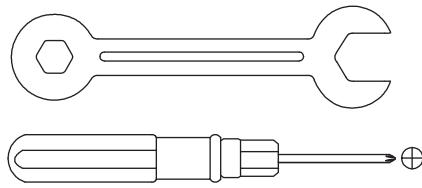



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

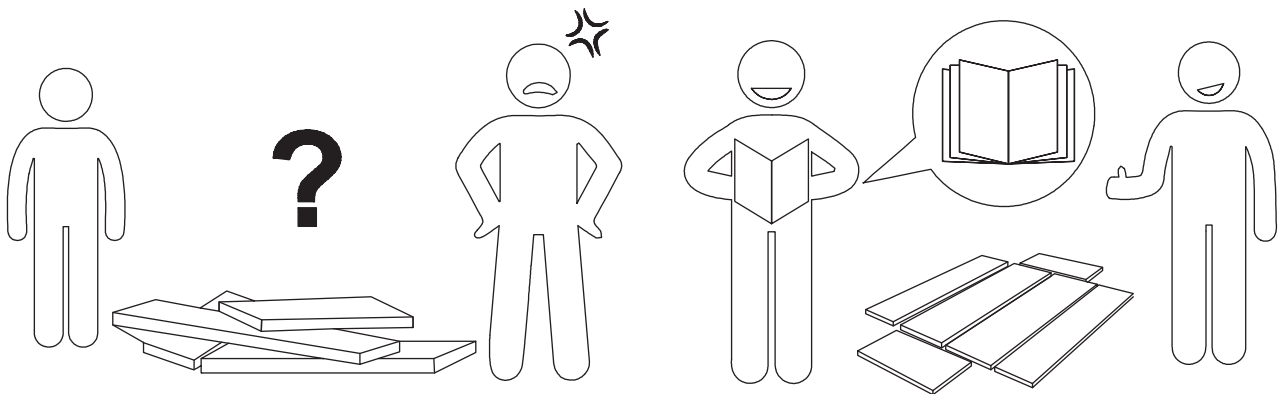

Install tip-over restraint provided

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over

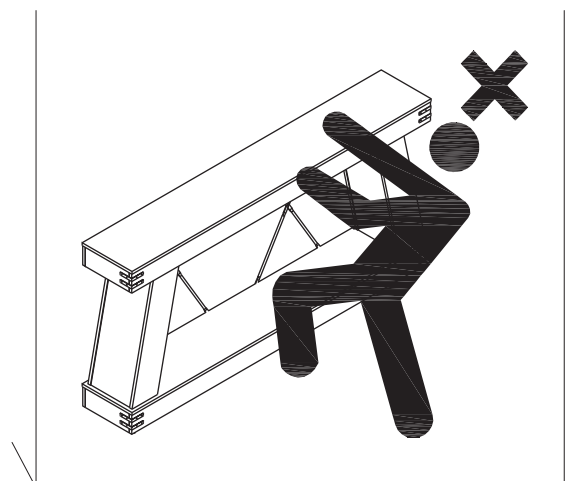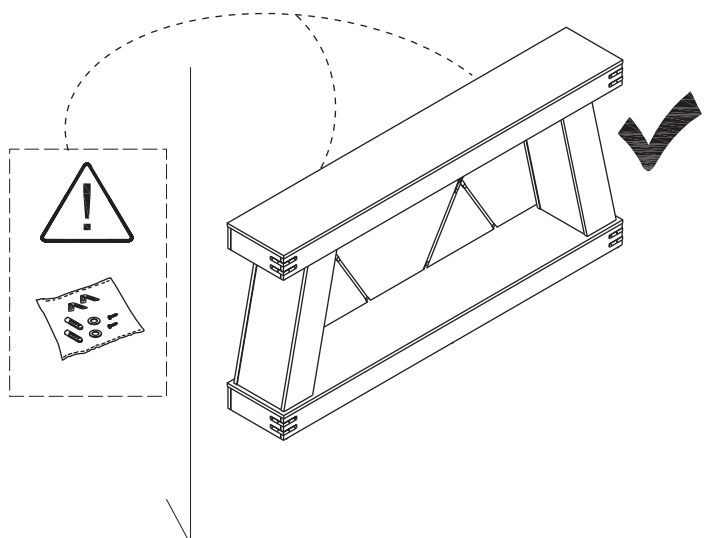

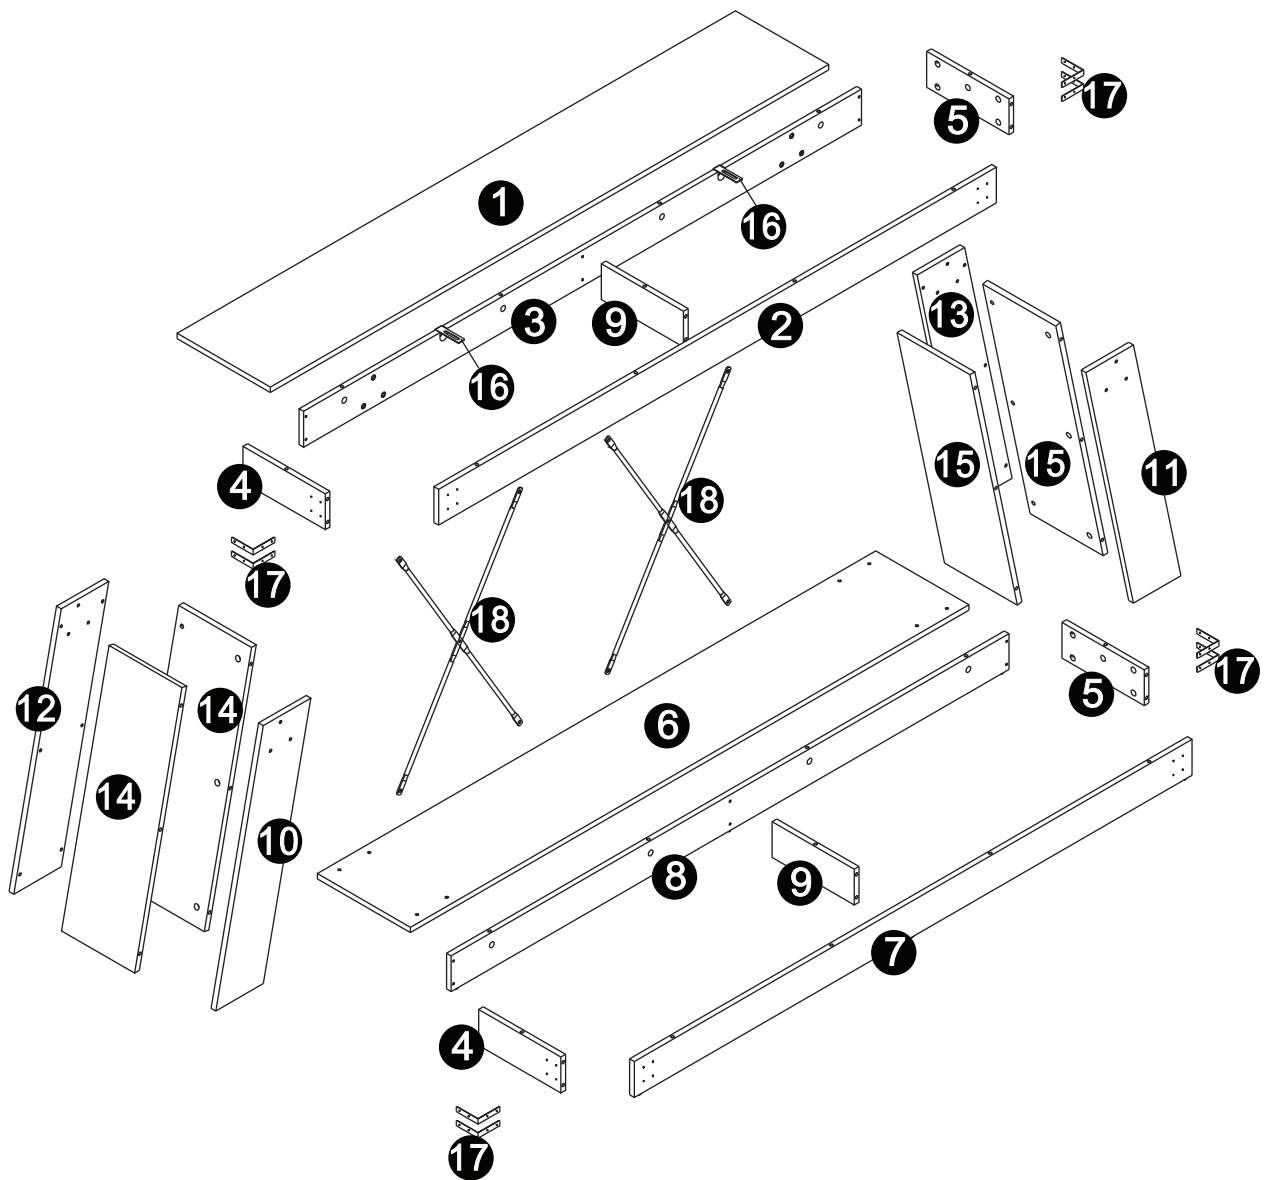


⚠ Caution


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

















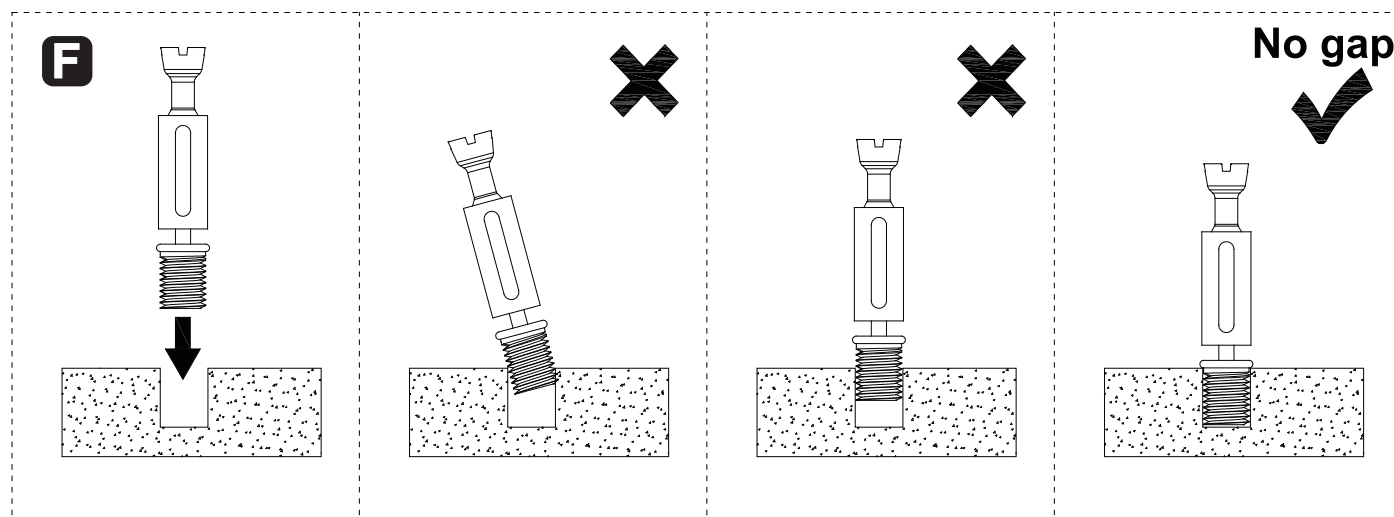


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

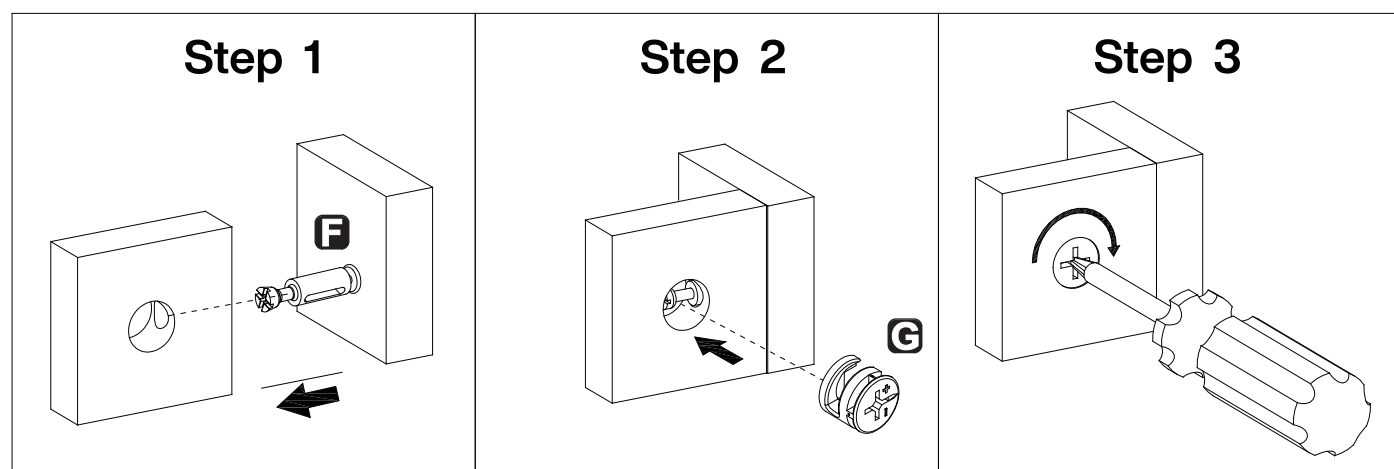






Parts List

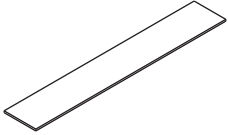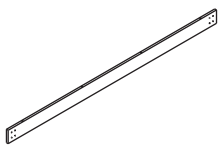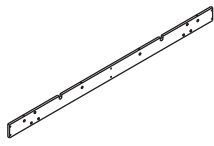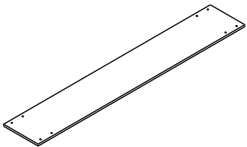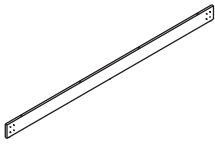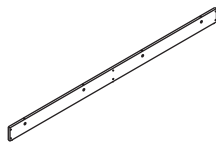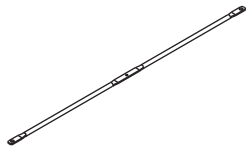1  1 pc	2  1 pc	3  1 pc	4  2 pcs	5  2 pcs
6  1 pc	7  1 pc	8  1 pc	9  2 pcs	10  1 pc
11  1 pc	12  1 pc	13  1 pc	14  2 pcs	15  2 pcs
16  2 pcs	17  8 pcs	18  4 pcs		



Hardware List


A	B	C	D	E	F
					
M6×40mm	M6×25mm	M6×12mm	4×24.5mm	4×10mm	M6×44.5mm
20 pcs	16 pcs	6 pcs	2 pcs	2 pcs	58 pcs

G	H	I	J	K	L
					
Ø15mm	Ø8x13mm			M4	
58 pcs	32 pcs	2 pcs	2 pcs	2 pcs	1 pc




1

A	B
	
M6×40mm	M6×25mm
	6 pcs

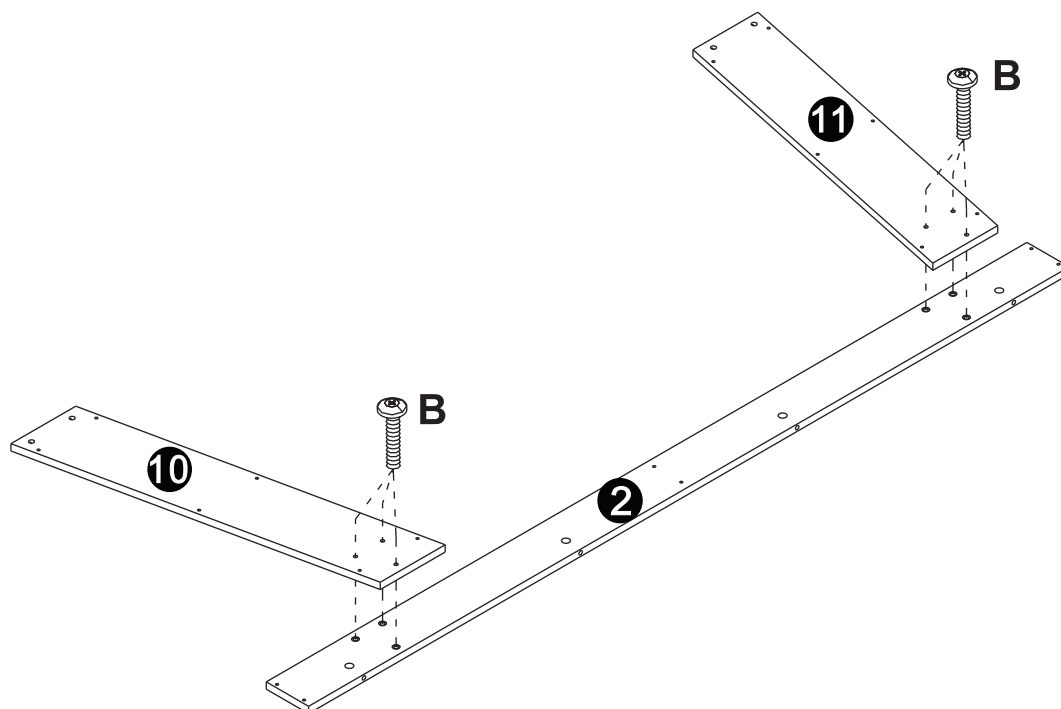


2

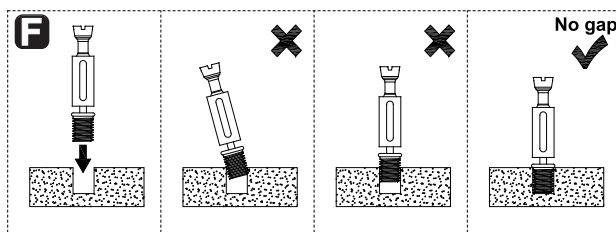


F

M6×44.5mm
18 pcs

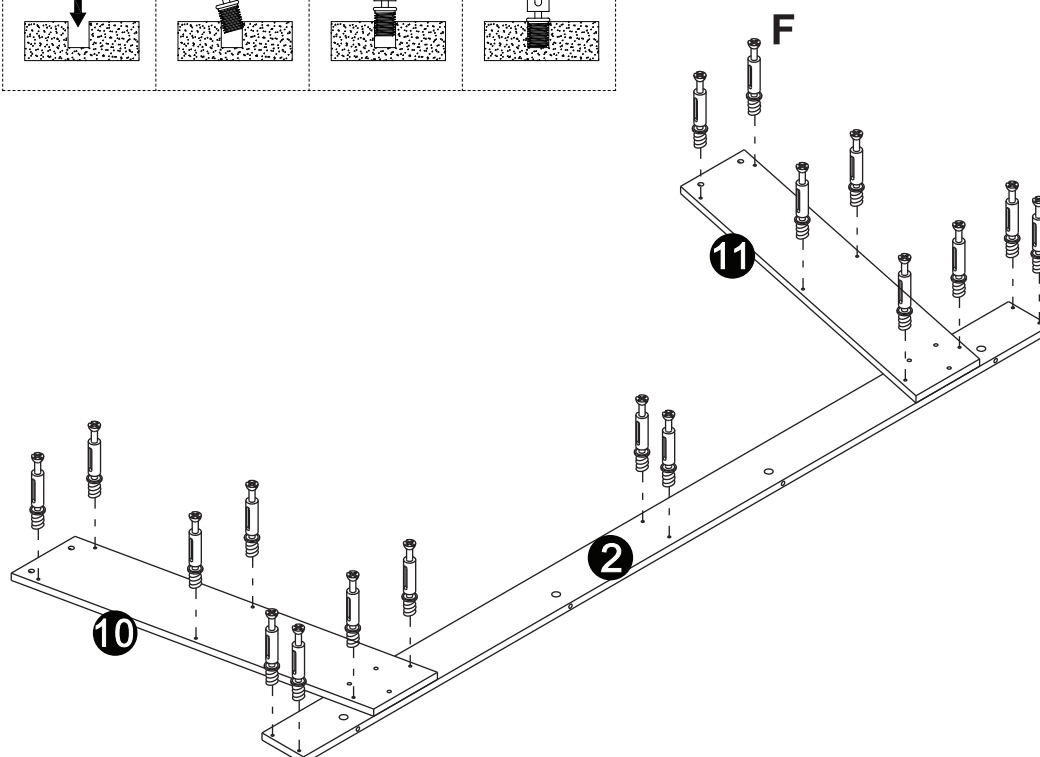



3

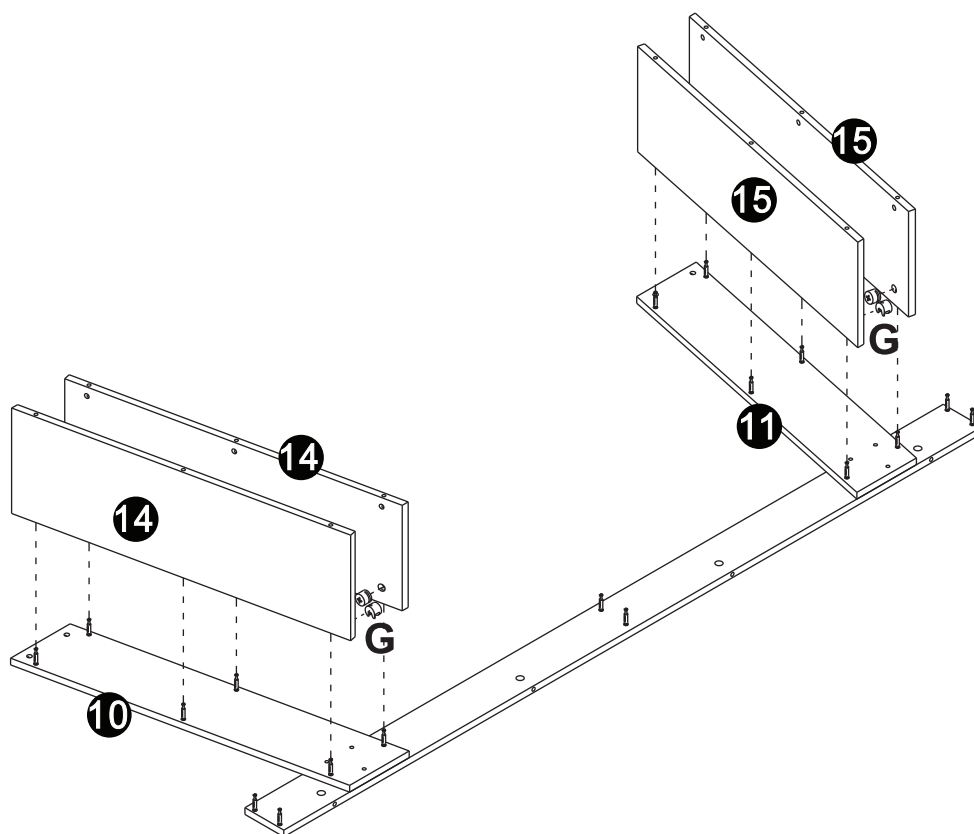


G




Ø15mm

12 pcs


Step 1

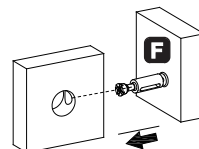


Step 2

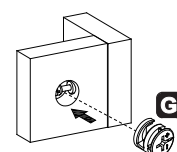

Step 3

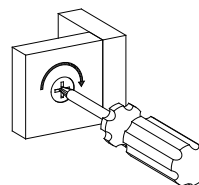

4

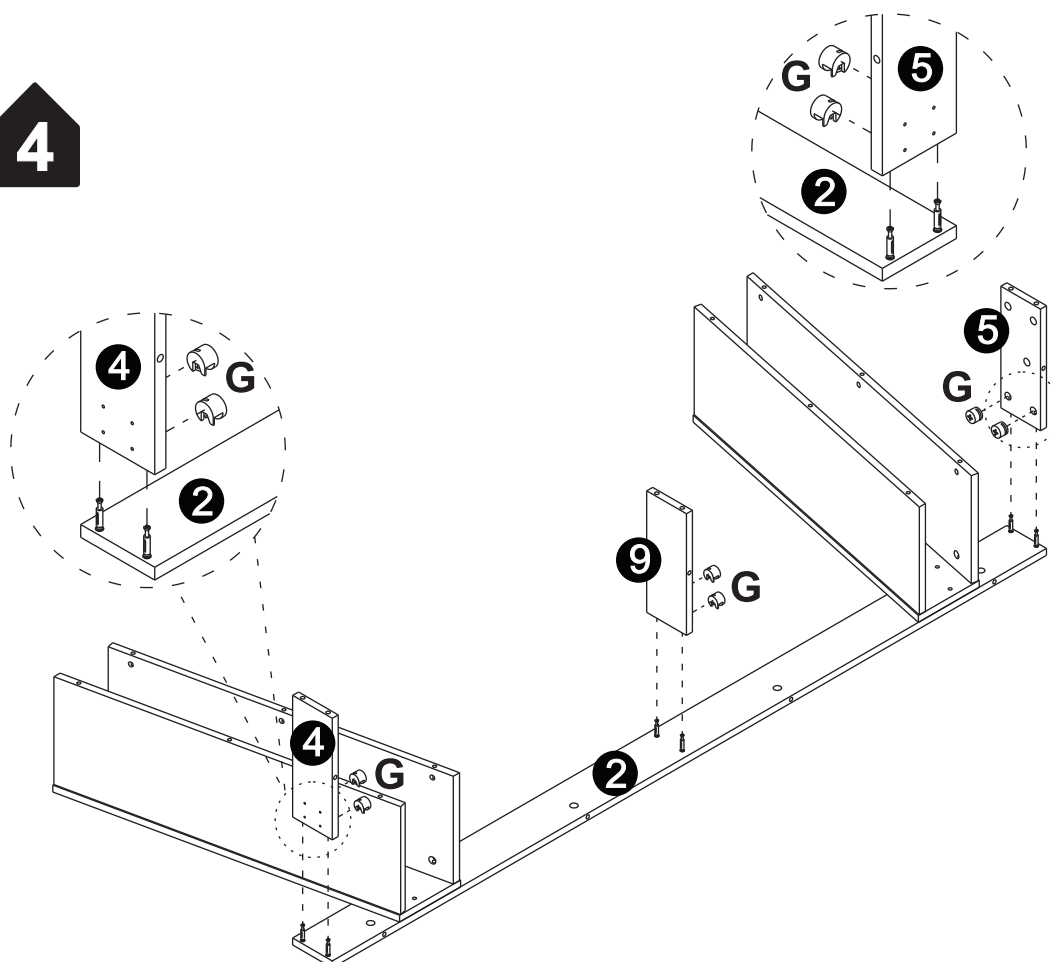


G




Ø15mm

6 pcs


Step 1

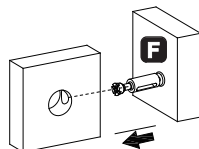


Step 2

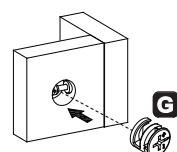


Step 3

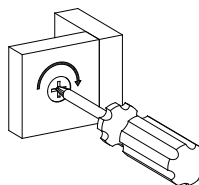

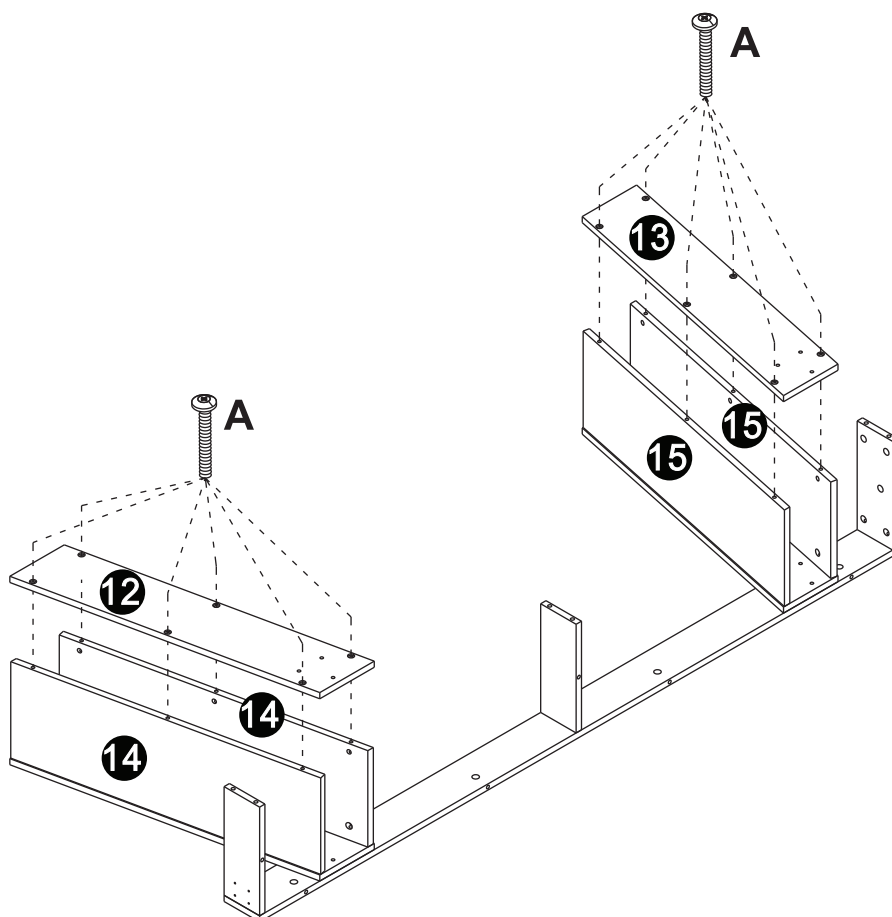5

A



M6×40mm

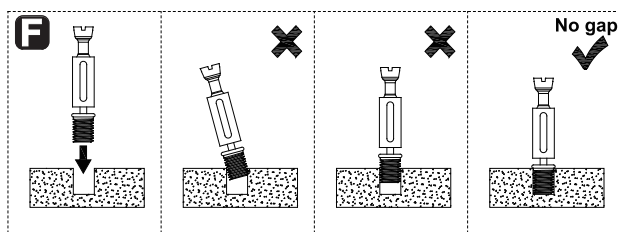12 pcs

6

F



M6×44.5mm

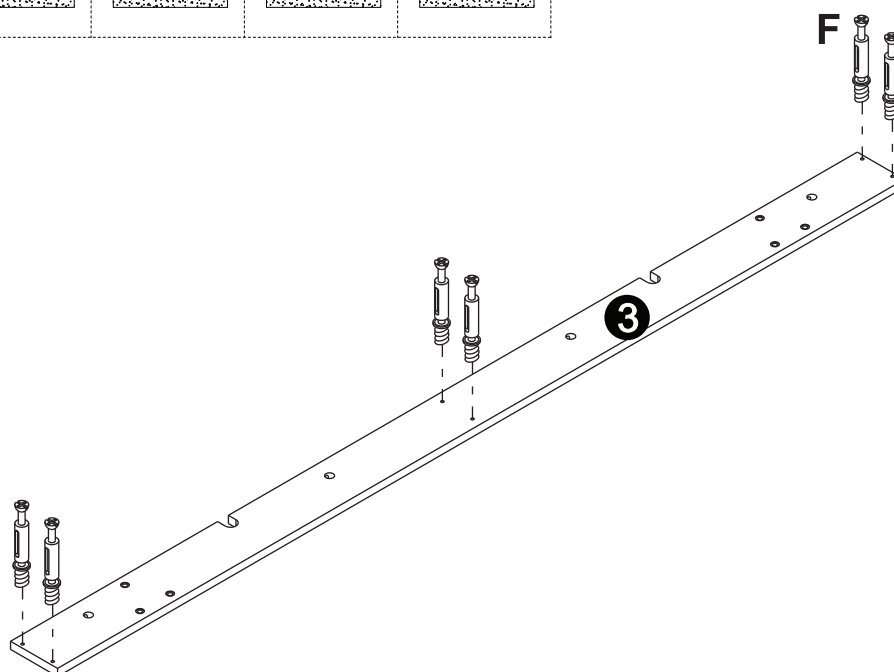6 pcs





7

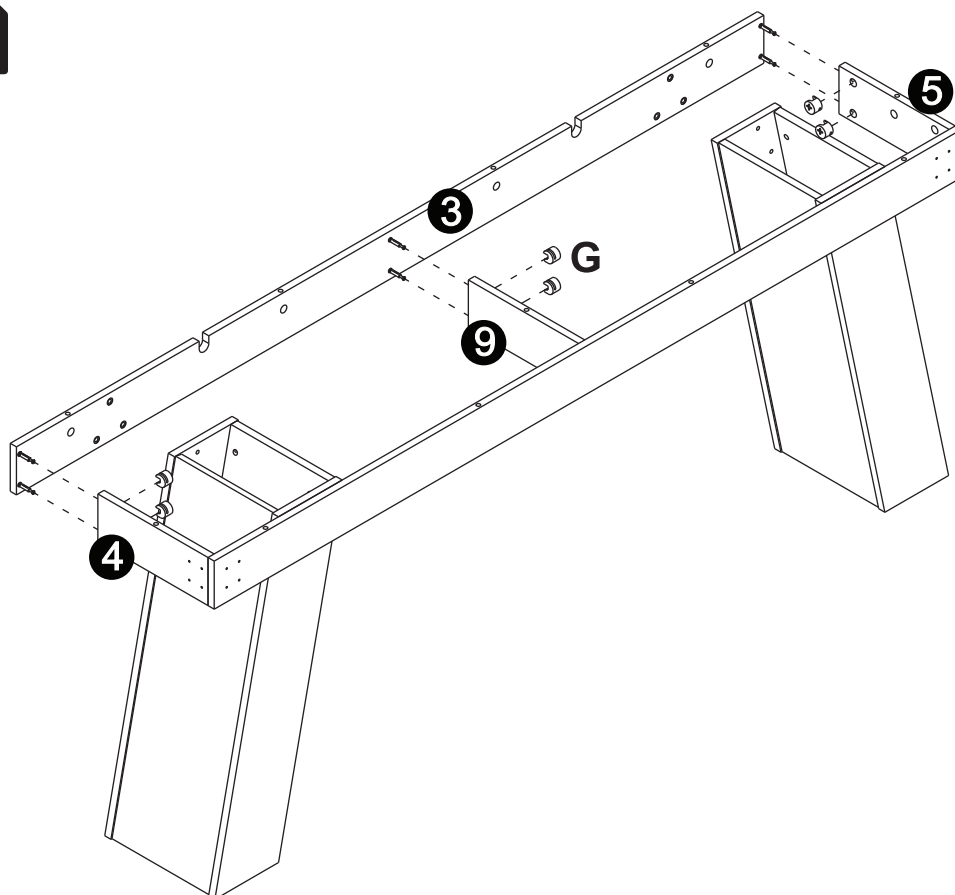


G




Ø15mm

6 pcs


Step 1

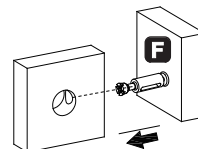


Step 2

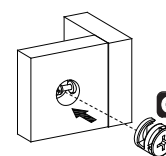

Step 3

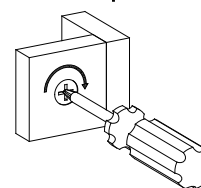

8

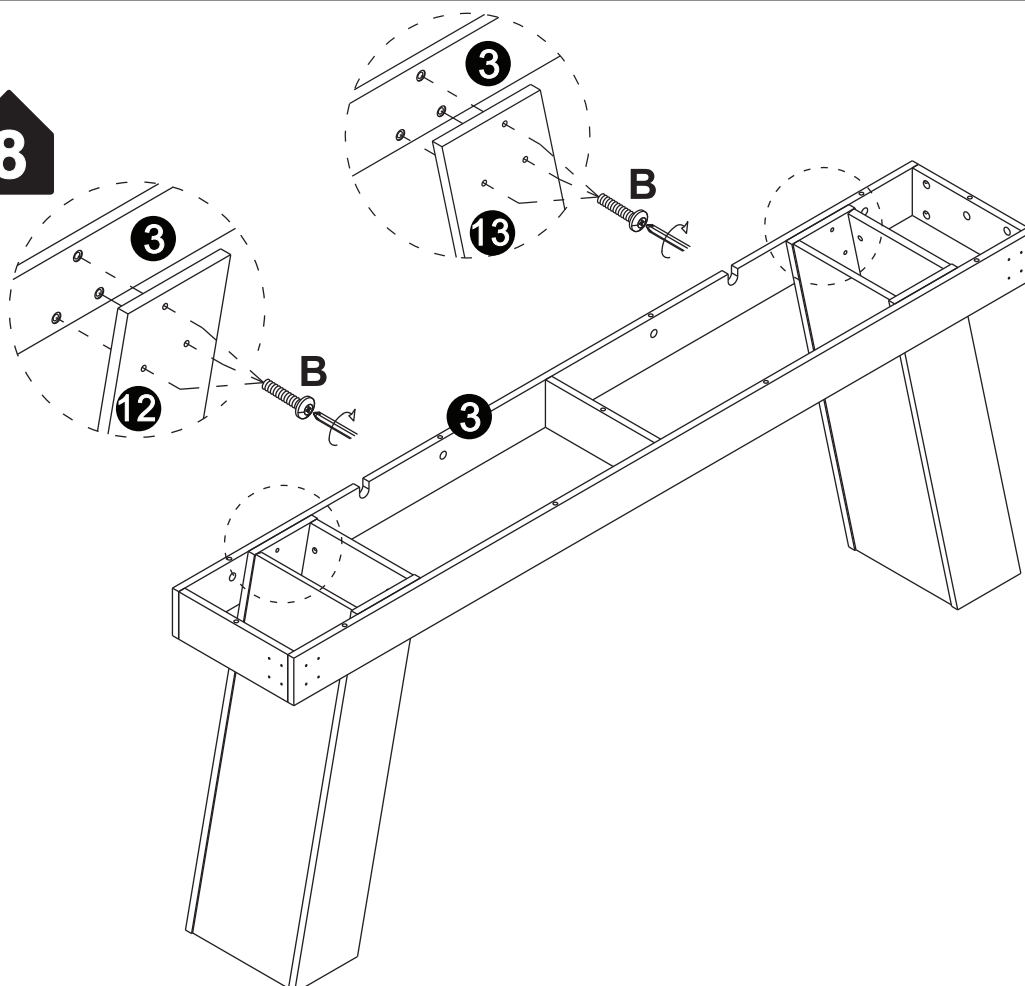

A



M6×40mm


B




M6×25mm

6 pcs


9

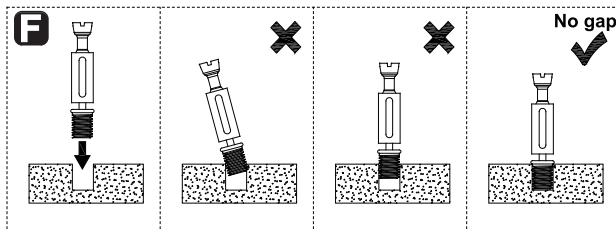


B	C	F
M6×25mm	M6×12mm	M6×44.5mm
	2 pcs	11 pcs

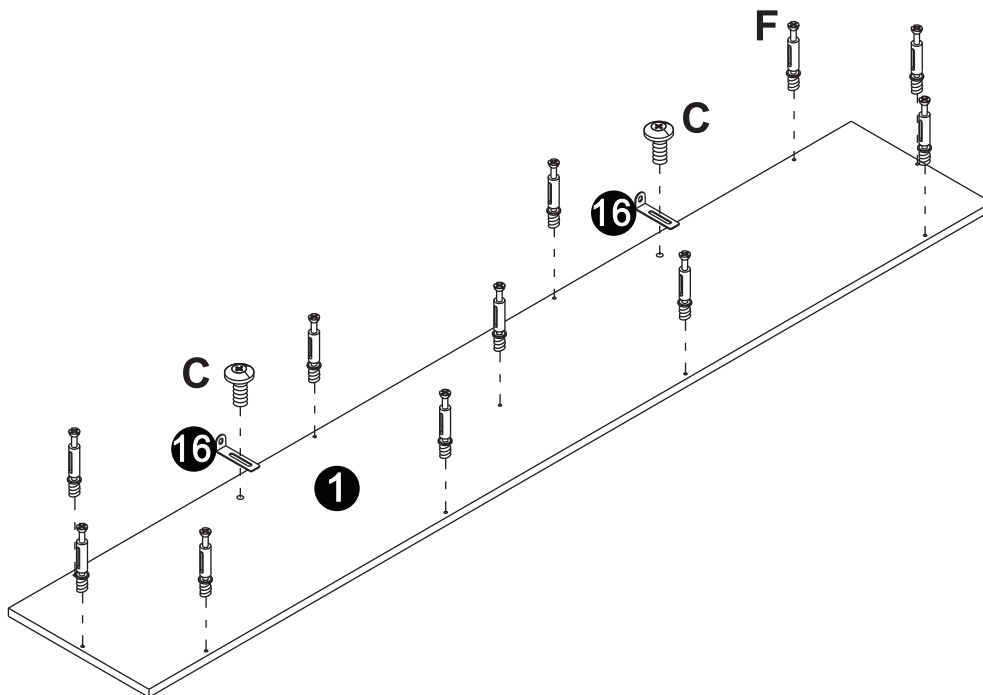

10

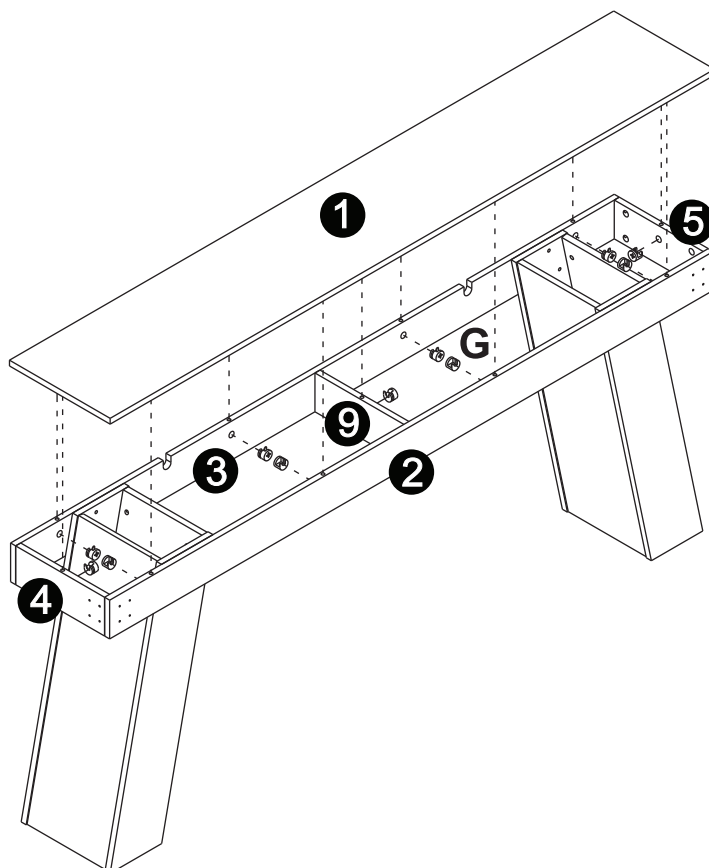


G
Ø15mm
11 pcs

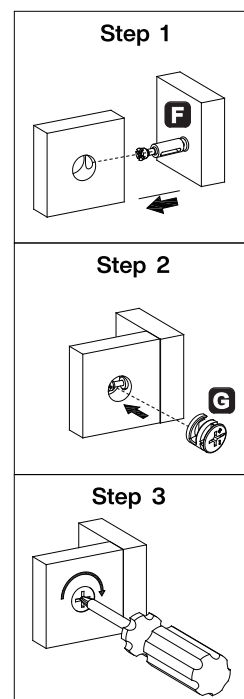





11

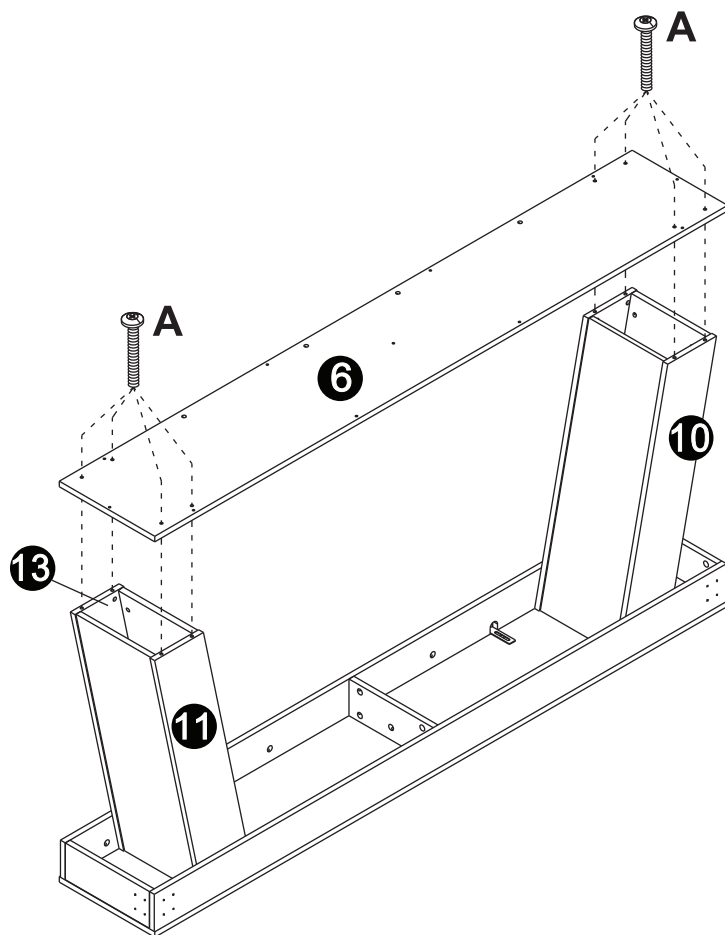

A

M6×40mm
8 pcs

12

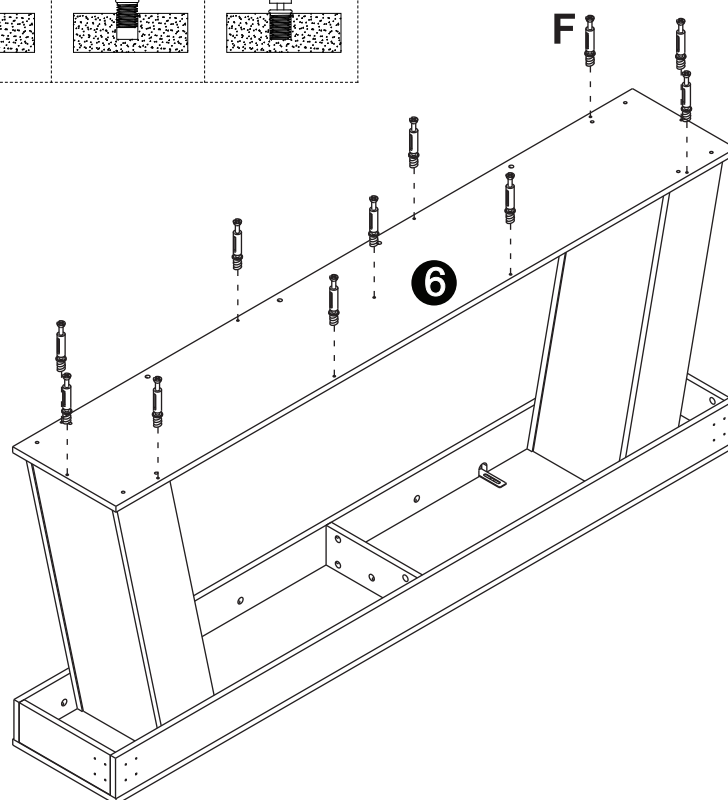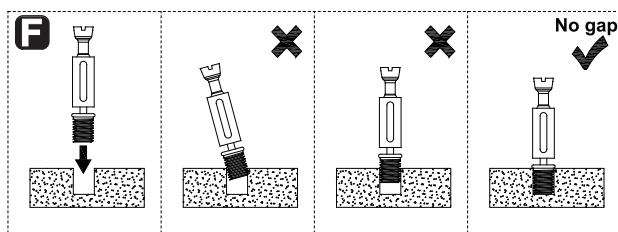


F

M6×44.5mm
11 pcs




13

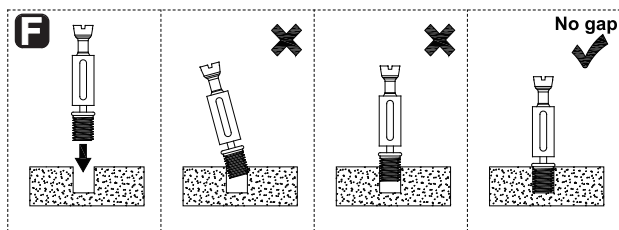


F

M6×44.5mm
6 pcs

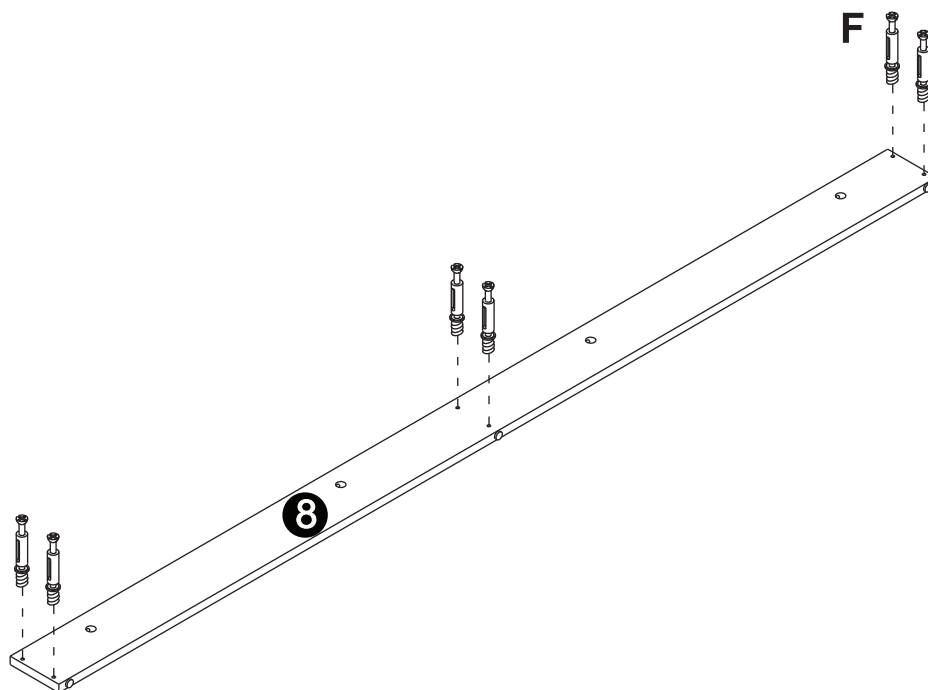


14

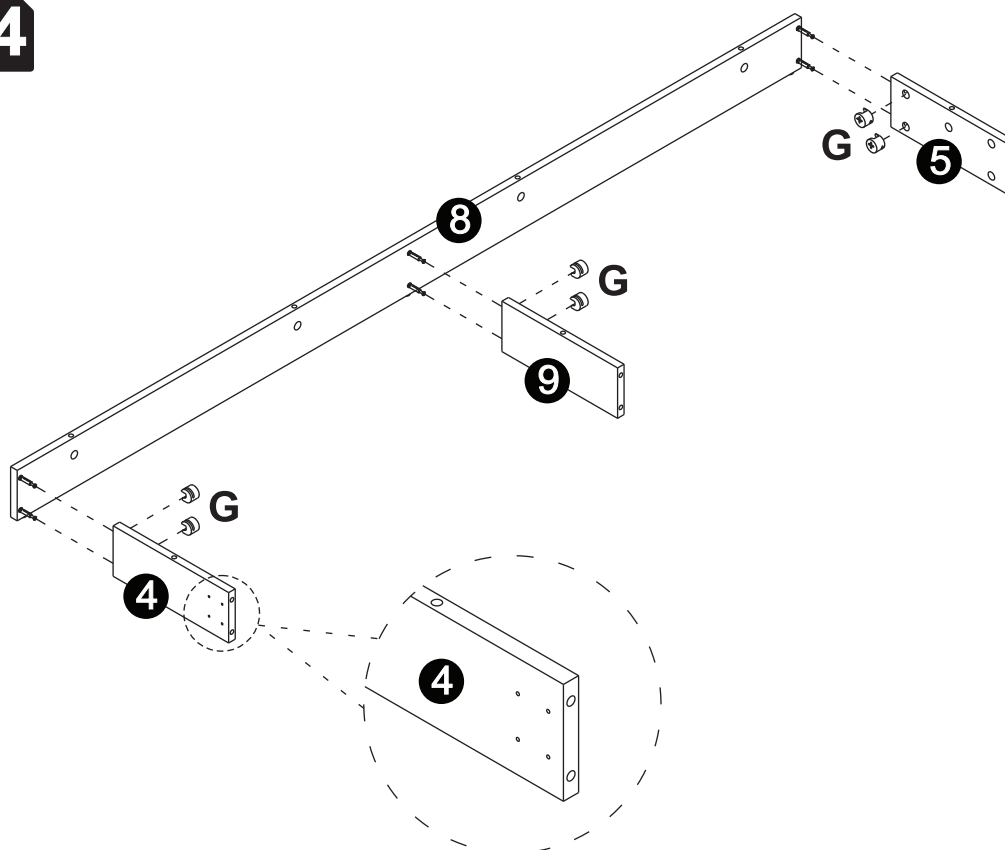


G

Ø15mm
6 pcs


Step 1

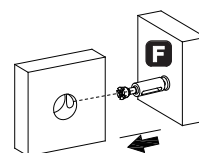

Step 2

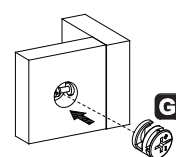


Step 3

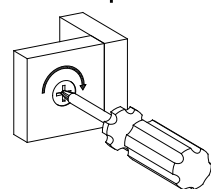




15

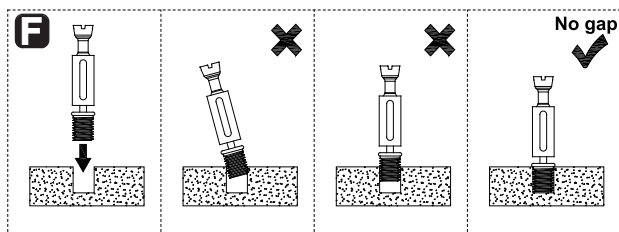


F

M6×44.5mm
6 pcs

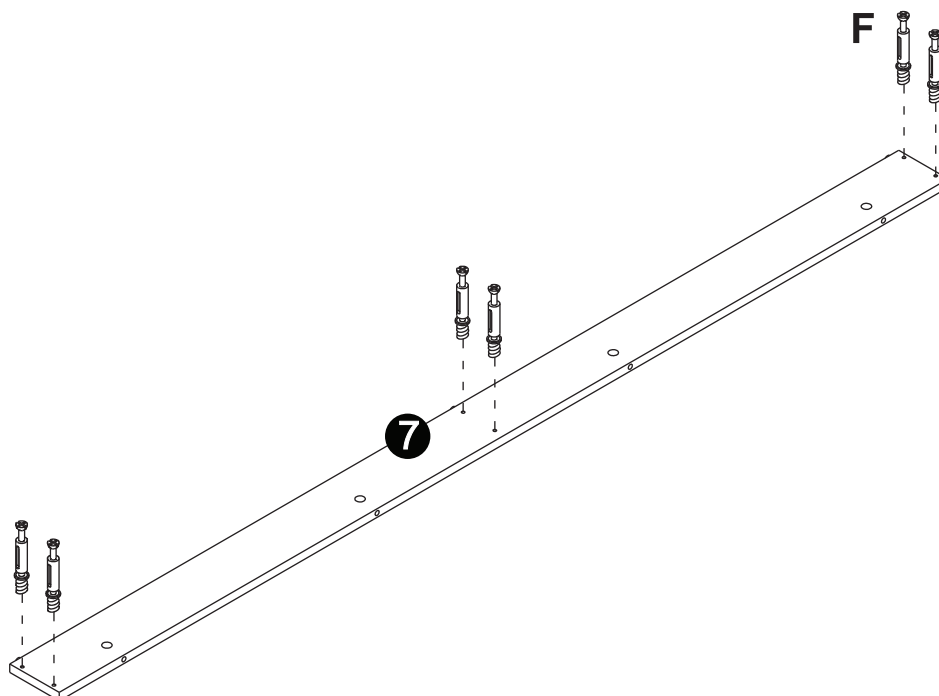


16

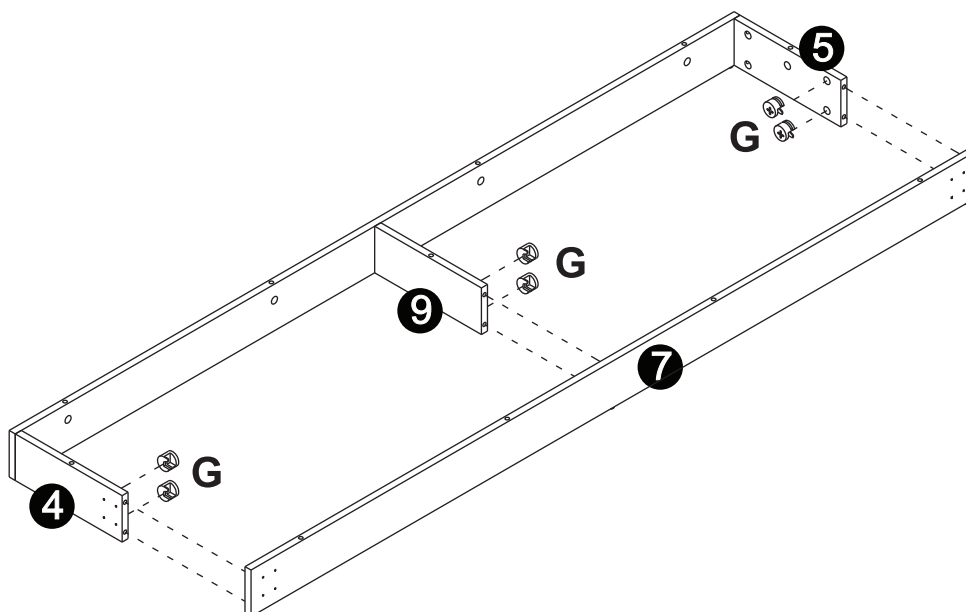


G

Ø15mm
6 pcs


Step 1

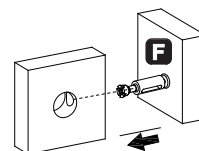

Step 2

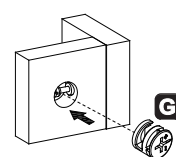


Step 3

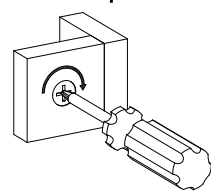



17

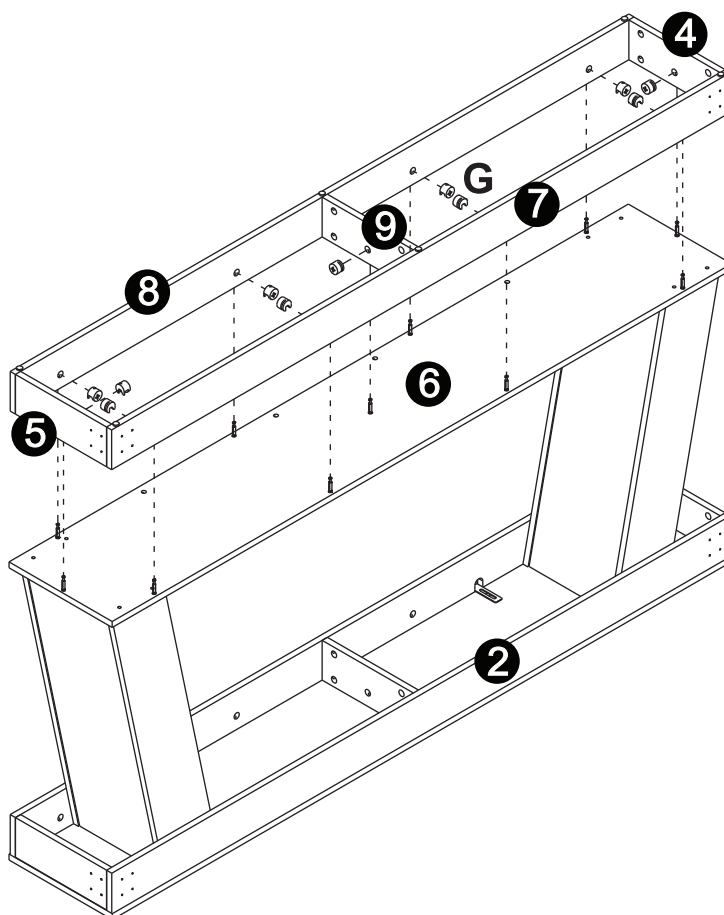


G




Ø15mm

11 pcs


Step 1

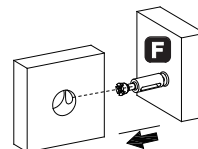


Step 2

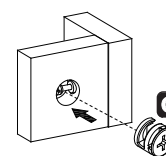

Step 3

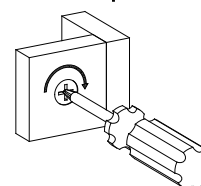

18

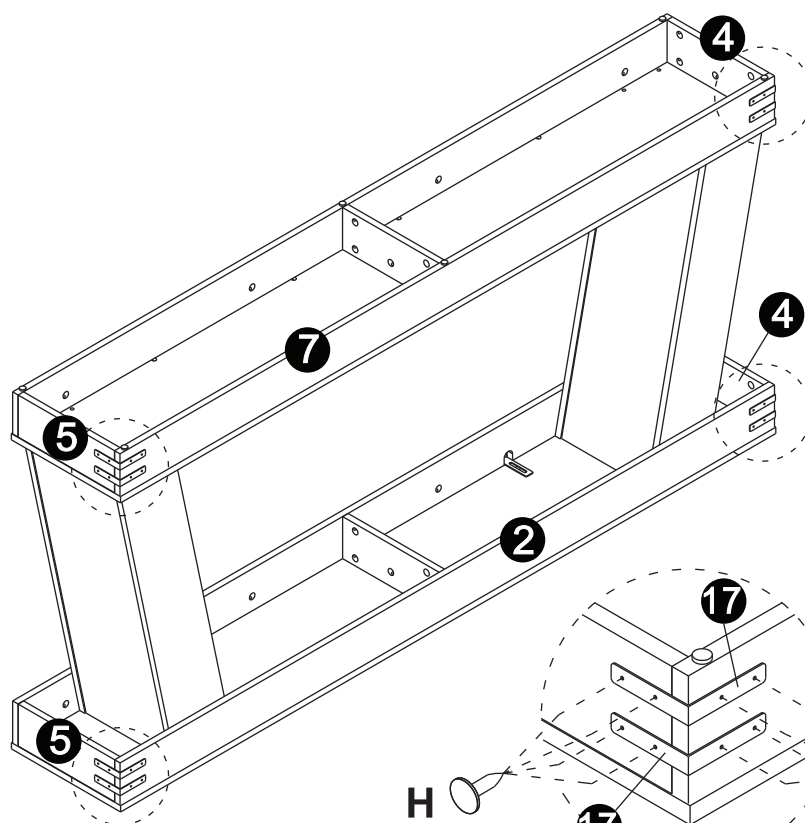


H




Ø8x13mm

32 pcs

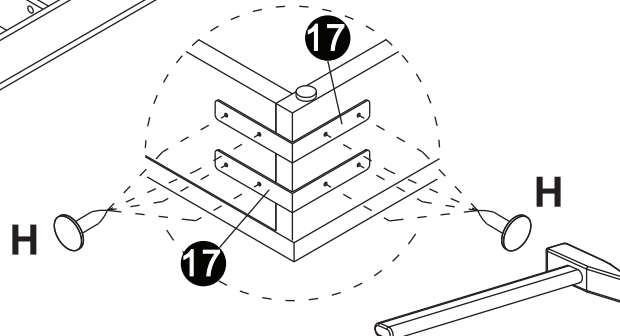




19

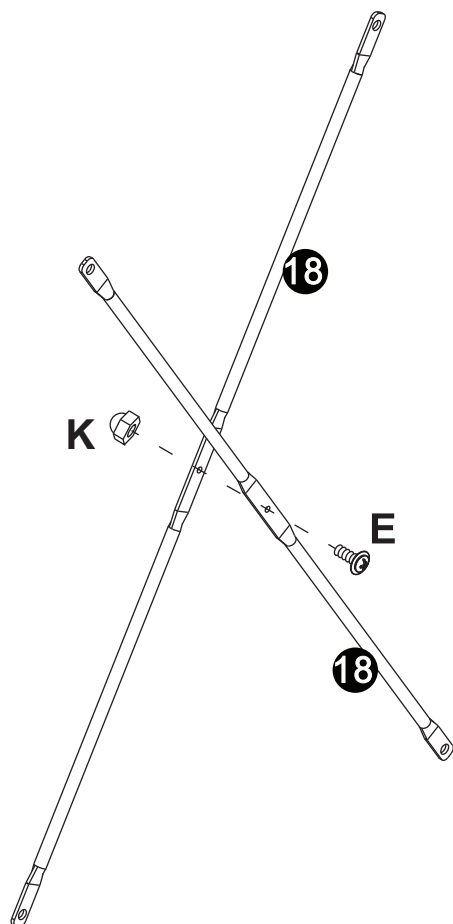


E	K
	
4x10mm	M4
2 pcs	2 pcs

X2


20

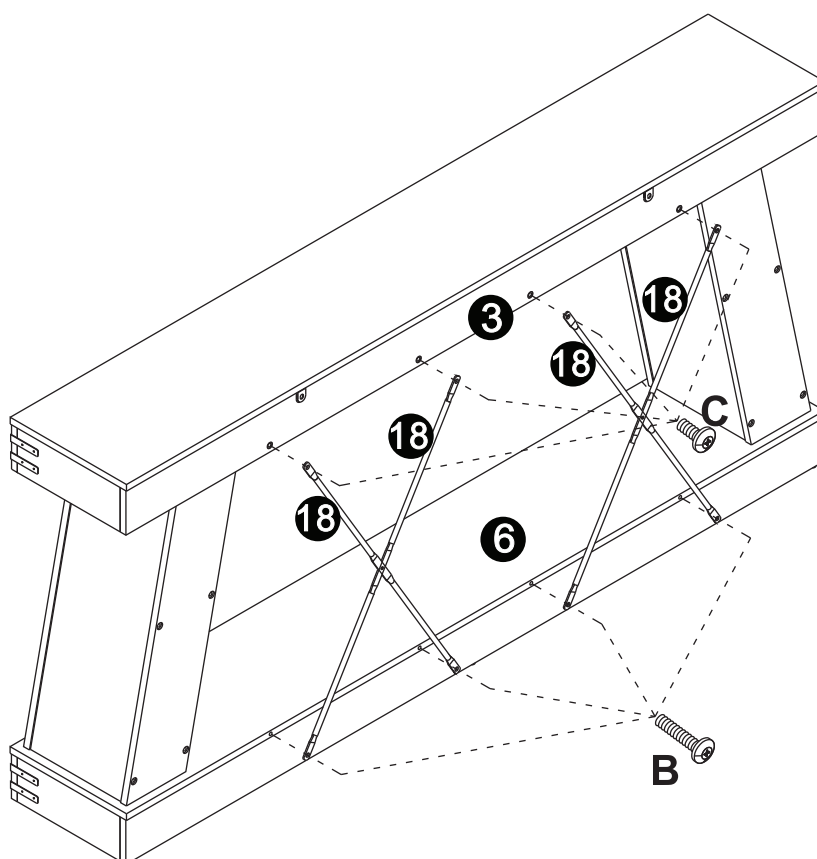

B	C
	
M6x25mm	M6x12mm
4 pcs	4 pcs

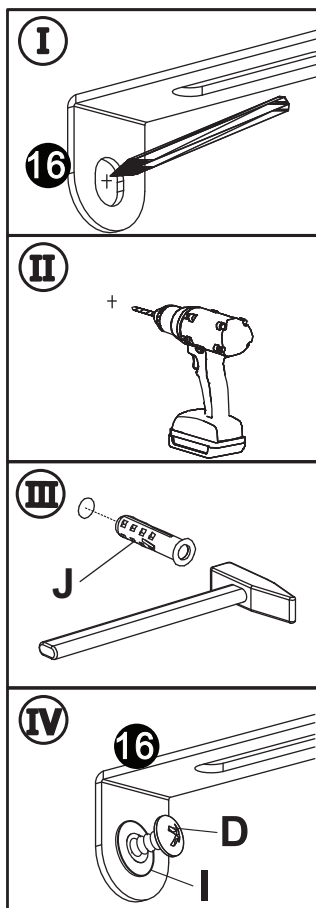21


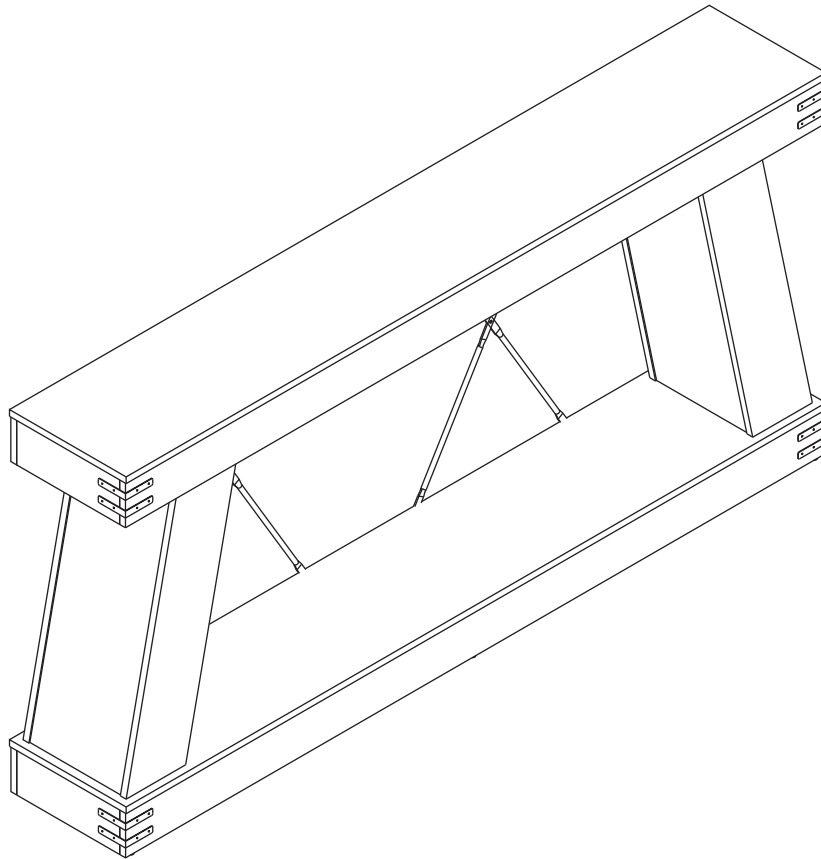
D	I	J
		
4×24.5mm	Ø16×Ø6.2mm	
2 pcs	2 pcs	2 pcs

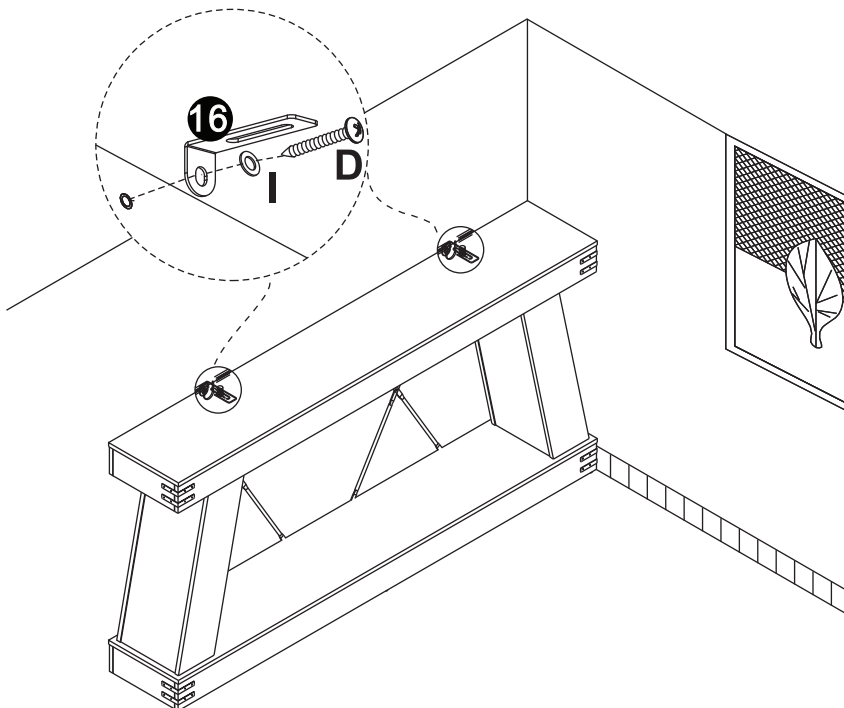



DESIGNED FOR LIFE

Thank you for your support!



Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp