

# QUEEN & FULL UNIVERSAL SIZE HEADBOARD ONLY

## ASSEMBLY INSTRUCTION



# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start to of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.






### Warning !







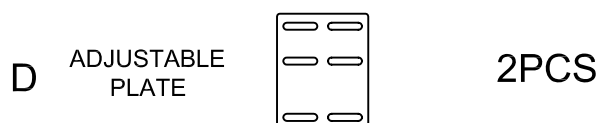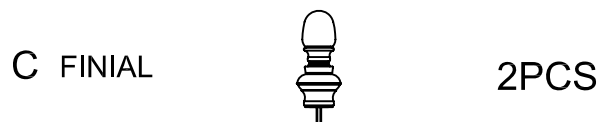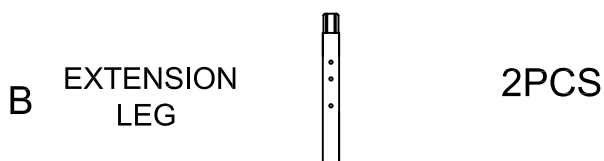

1. Don't attempt to repair modify parts that are broken or defective . Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

## PARTS IDENTIFICATION

### PARTS IDENTIFICATION:


### Z HARDWARE PACKAGE




NO	DESCRIPTION	FIGURE	QTY
1	BOLT 1/4" x 2 1/4"L		4PCS
2	BOLT 1/4" x 7/8"L		4PCS
3	METAL WASHER		12PCS
4	PVC WASHER		8PCS
5	HEX. NUT		8PCS
6	ALLEN WRENCH		1PC
7	ALLEN WRENCH(11.3mm)		1PC
8	CAP		1PC

## ASSEMBLY INSTRUCTION

**STEP 1:** Insert the finial and extension leg to each post to let it be the headboard, then assemble the bed frame to the headboard.

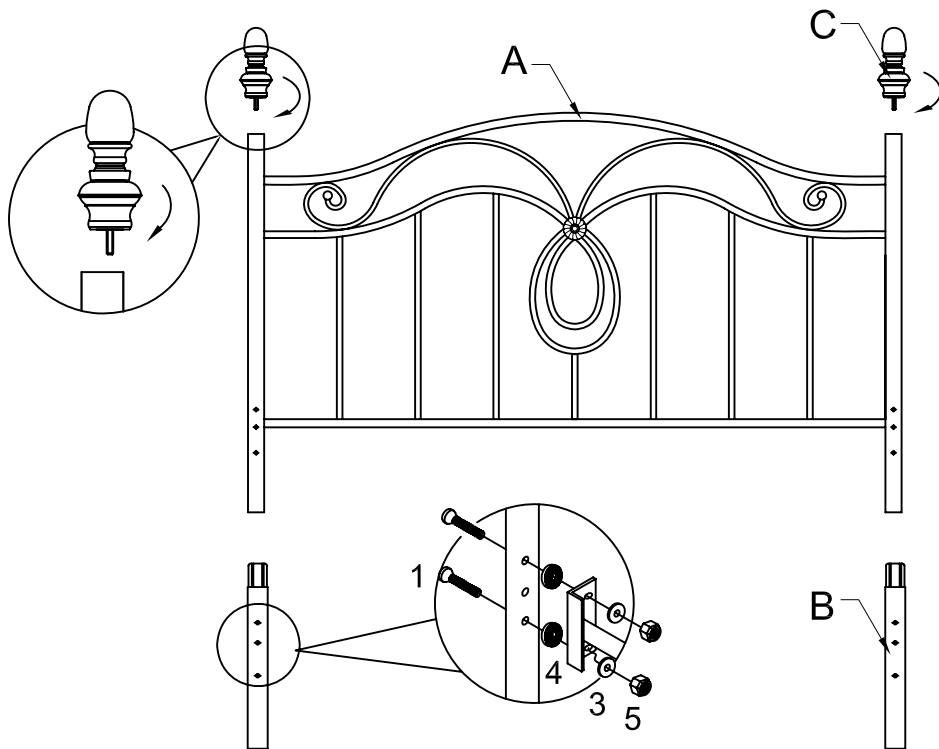

**STEP 2:** Or assemble the adjustable plate to the post and then it can attach the 54" bed frame.

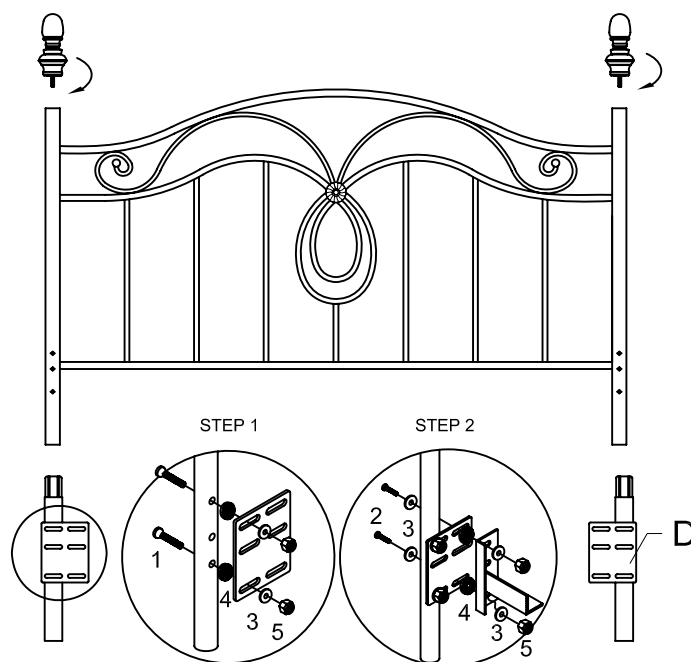

STEP 3: Insert the cap to the post and then assemble the bed frame to the footboard.

