


Item # :LM026-66FP

Assembly Instructions

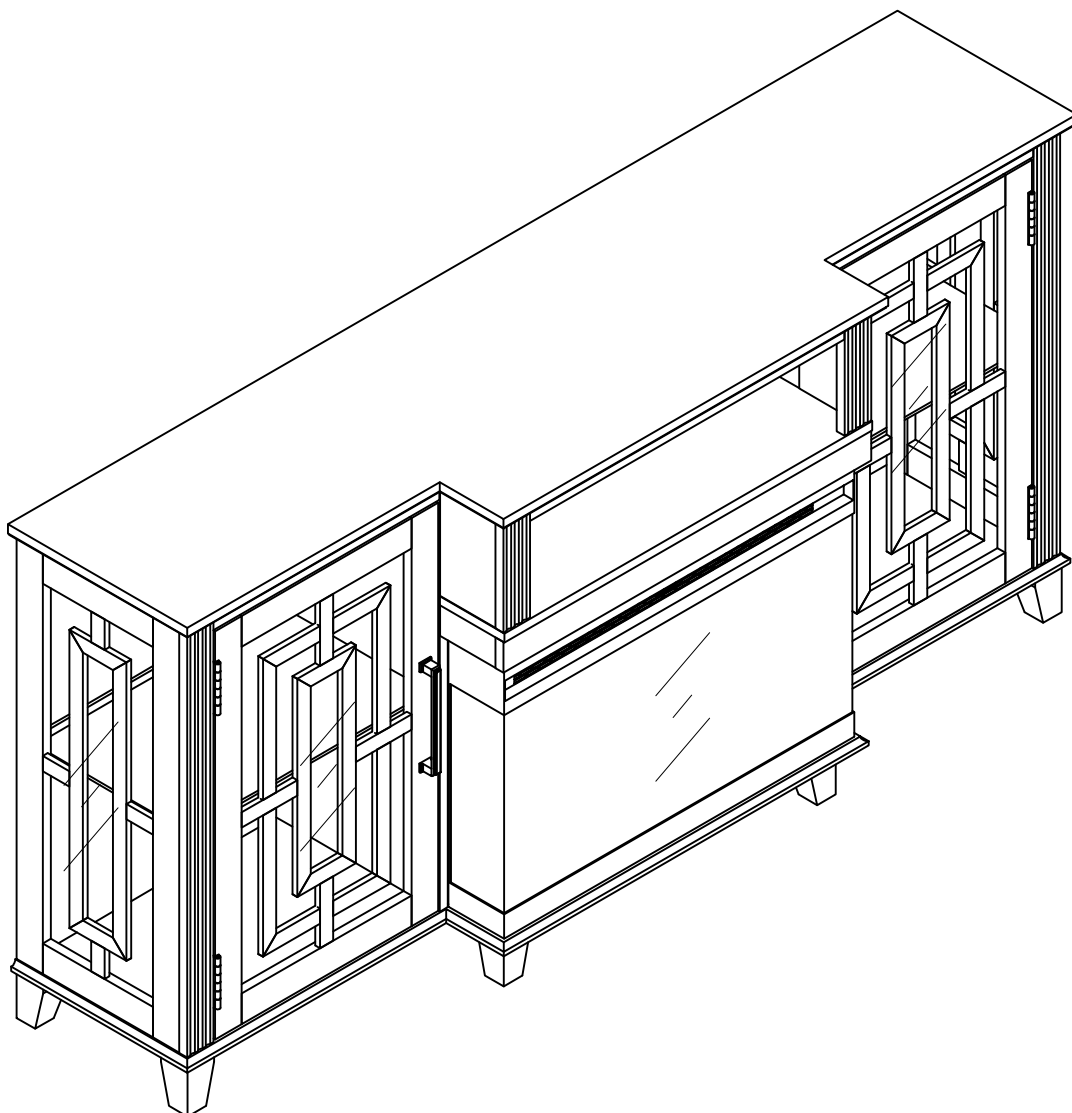


Customer Service E-mail Address: LINGMU1703583851@163.com

NOTE: There are two packages A and B for this item. Please wait patiently if you only receive one for now


Revised 02/06/2023

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

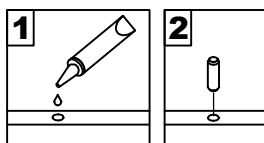


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

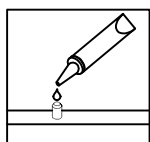


- VI. A Phillips head screwdriver is required for the assembly of this product .

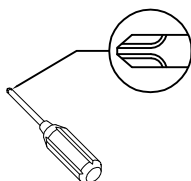


- VI. Power tools should not be used to assemble this product .

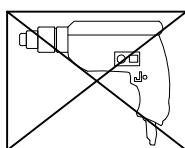


- VII. Concealed hinges are three-way adjustable.

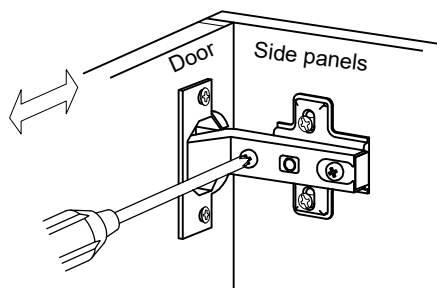

Horizontal
by screw adjustment

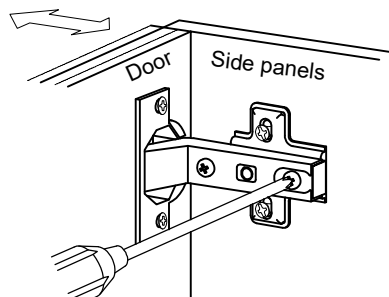


In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

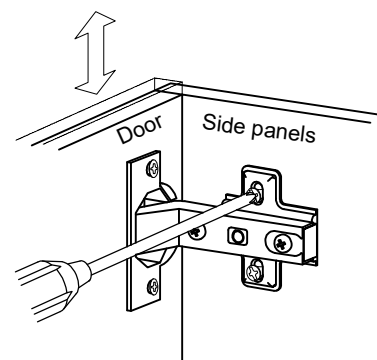










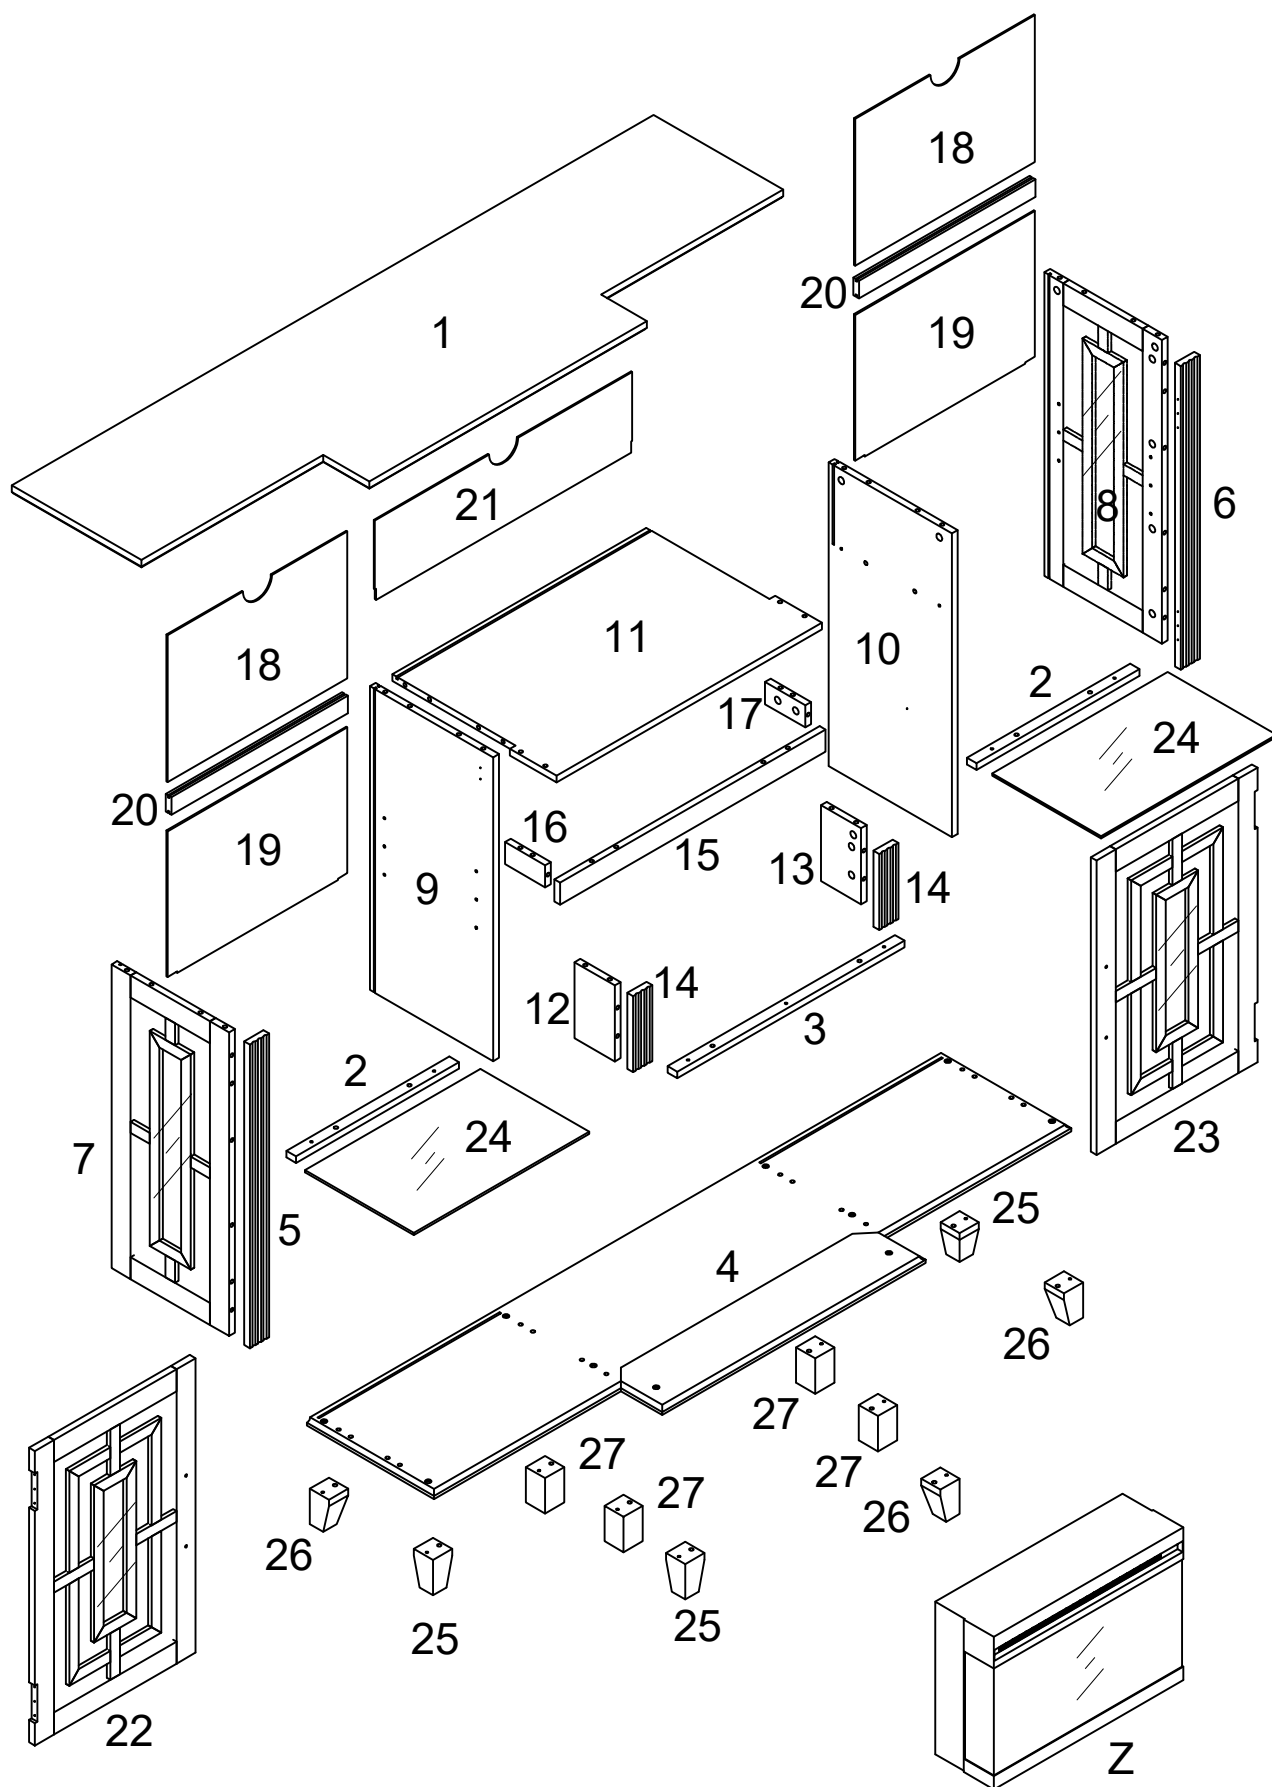















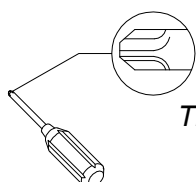
Vertical
Via slots in the mounting
plate or via cam adjustment

Parts List



Hardware List


A		Ø8x30mm	Wooden dowel	42	pcs
B		Ø6x35mm	Cam lock	32	pcs
C		Ø8x20mm	Wooden dowel	6	pcs
D		Ø15x11mm	Cam lock	32	pcs
E		Ø6x50mm	Bolt	20	pcs
F		Ø30mm	Sticker	32	pcs
G		M 4	Hex Key	1	pc
H			Hold hands	2	pcs
I		Ø4x19mm	Screw	4	pcs
J			Shelf support pin	8	pcs
K			Bolt	2	pcs
L		Ø3x15mm	Screw	4	pcs
M			Door stopper	2	pcs
N		Ø3.5x15mm	Screw	32	pcs
O			Hinge	4	pcs
P			Plastic wedge	20	pcs
Q		Ø3x17mm	Screw	20	pcs
R		Ø4x32mm	Screw	7	pcs
S			Anti falling hardware	4	pcs
T		Ø4x15mm	Screw	4	pcs
U		Ø4x35mm	Screw	4	pcs
V			House lizard	4	pcs
W			Strip	2	pcs
X			Small White Glue	1	pc
Y			Led strip light (Included in plastic bag)	1	pc





Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

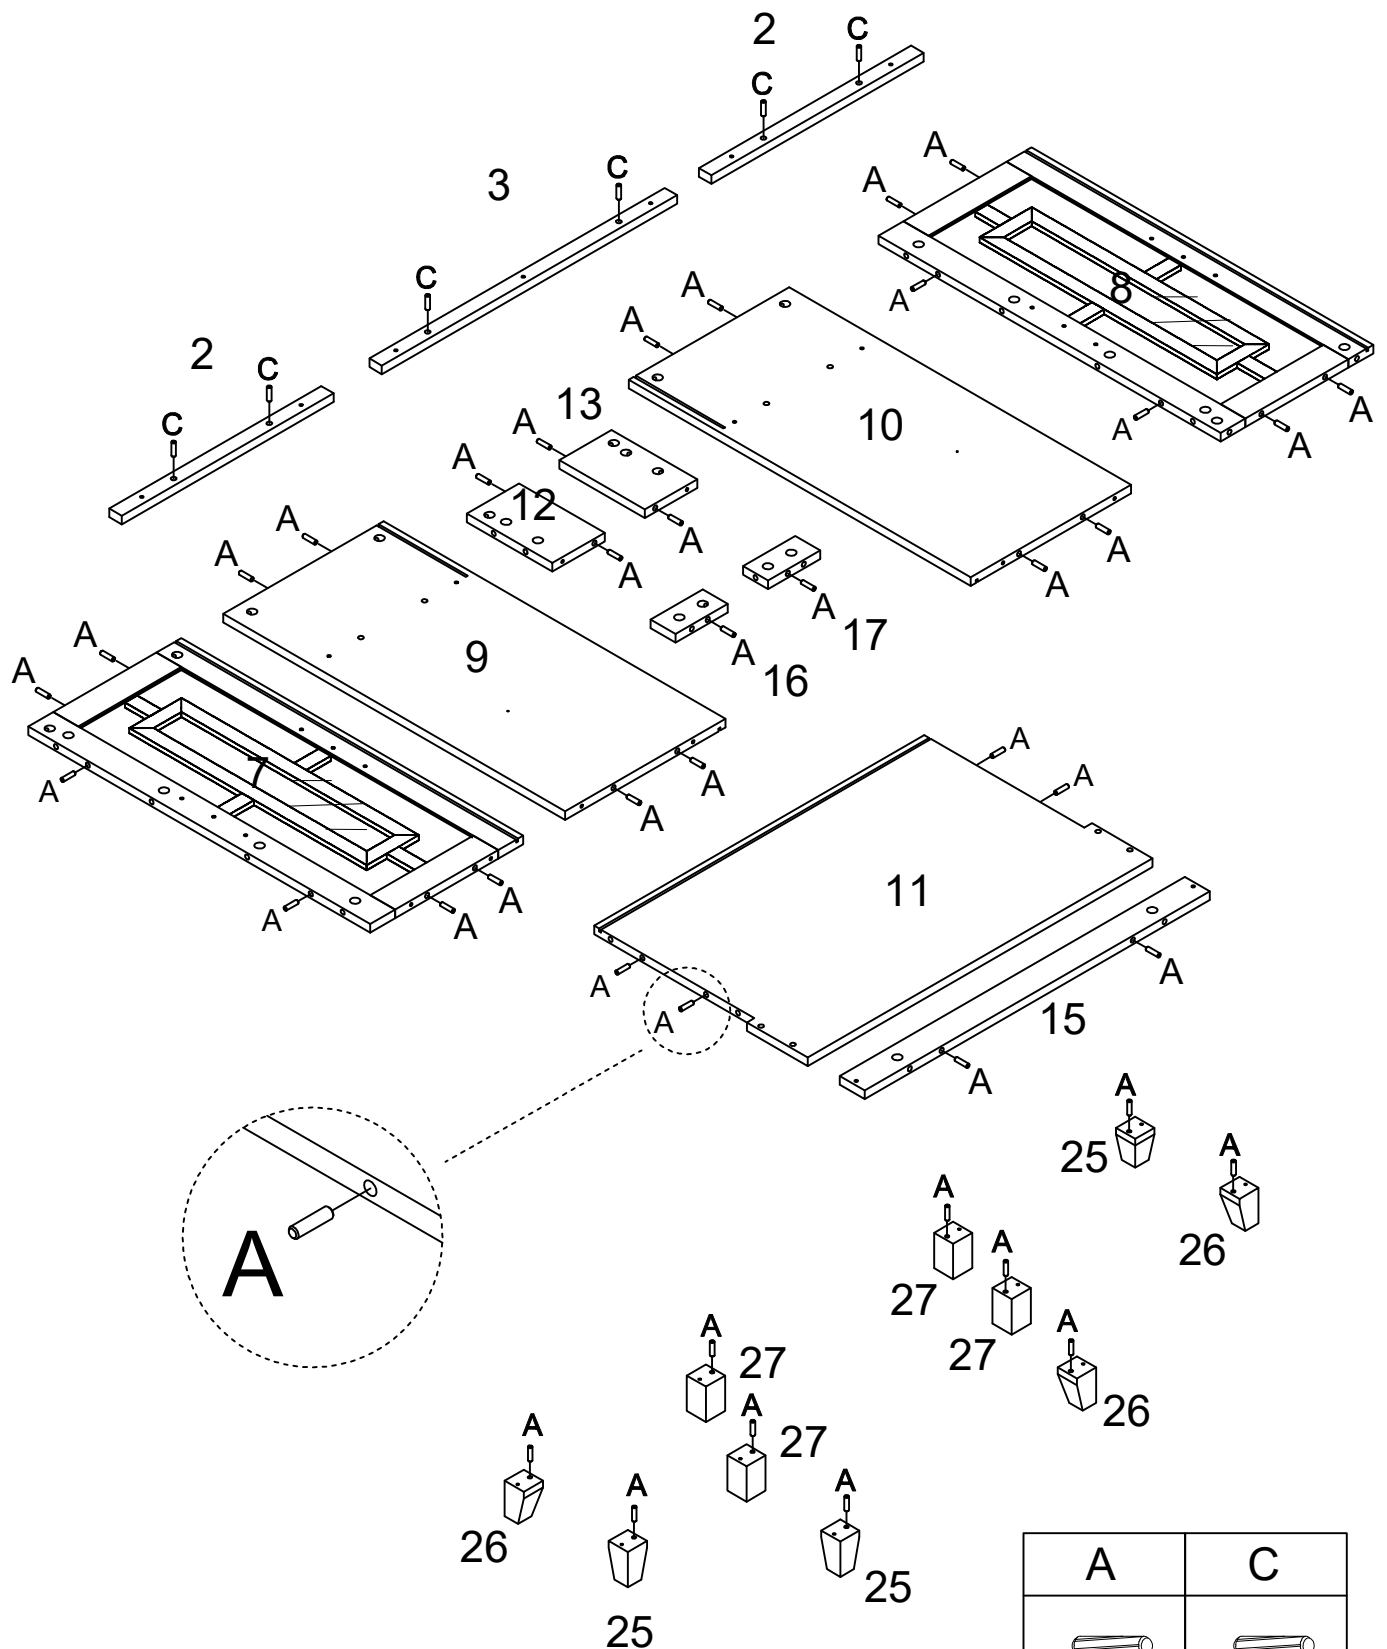
Step 1





A	C
	
42	X6


Step 2

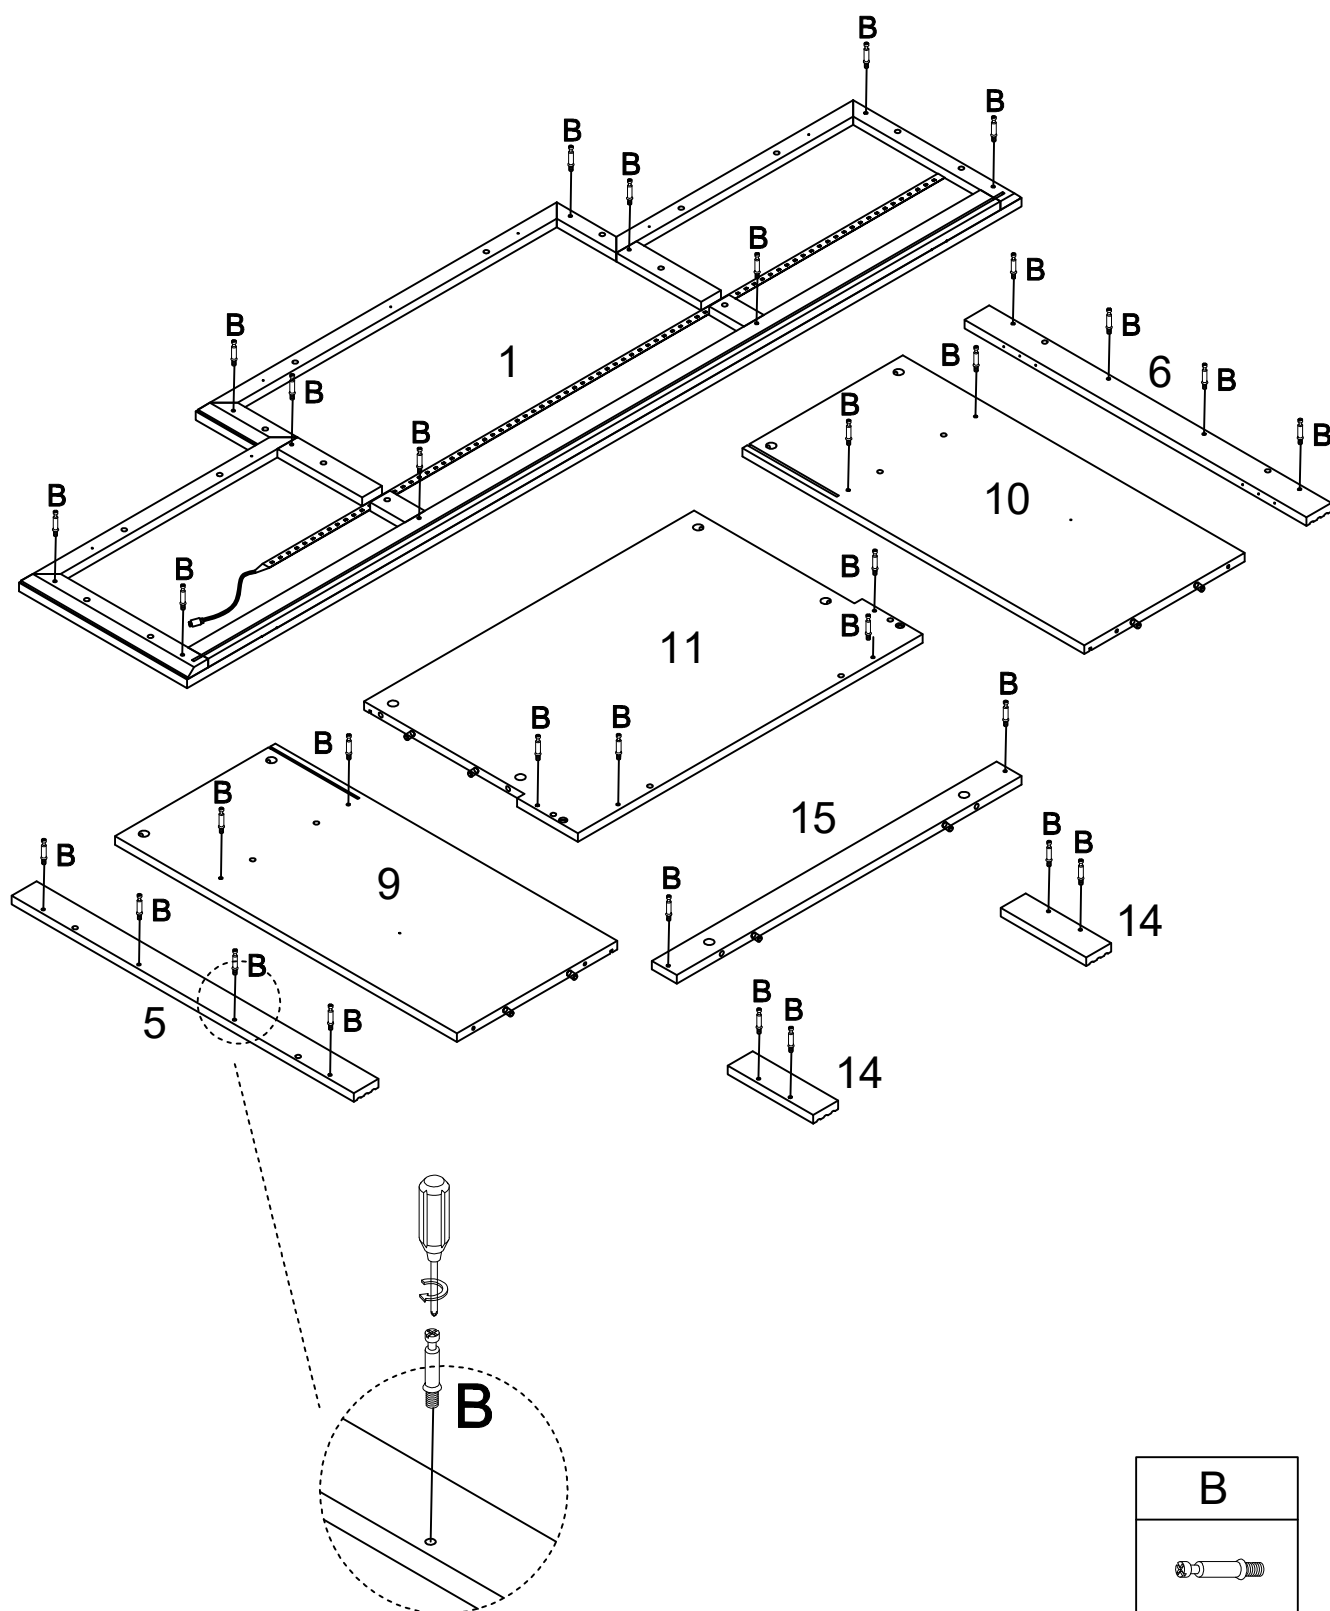


B

X32

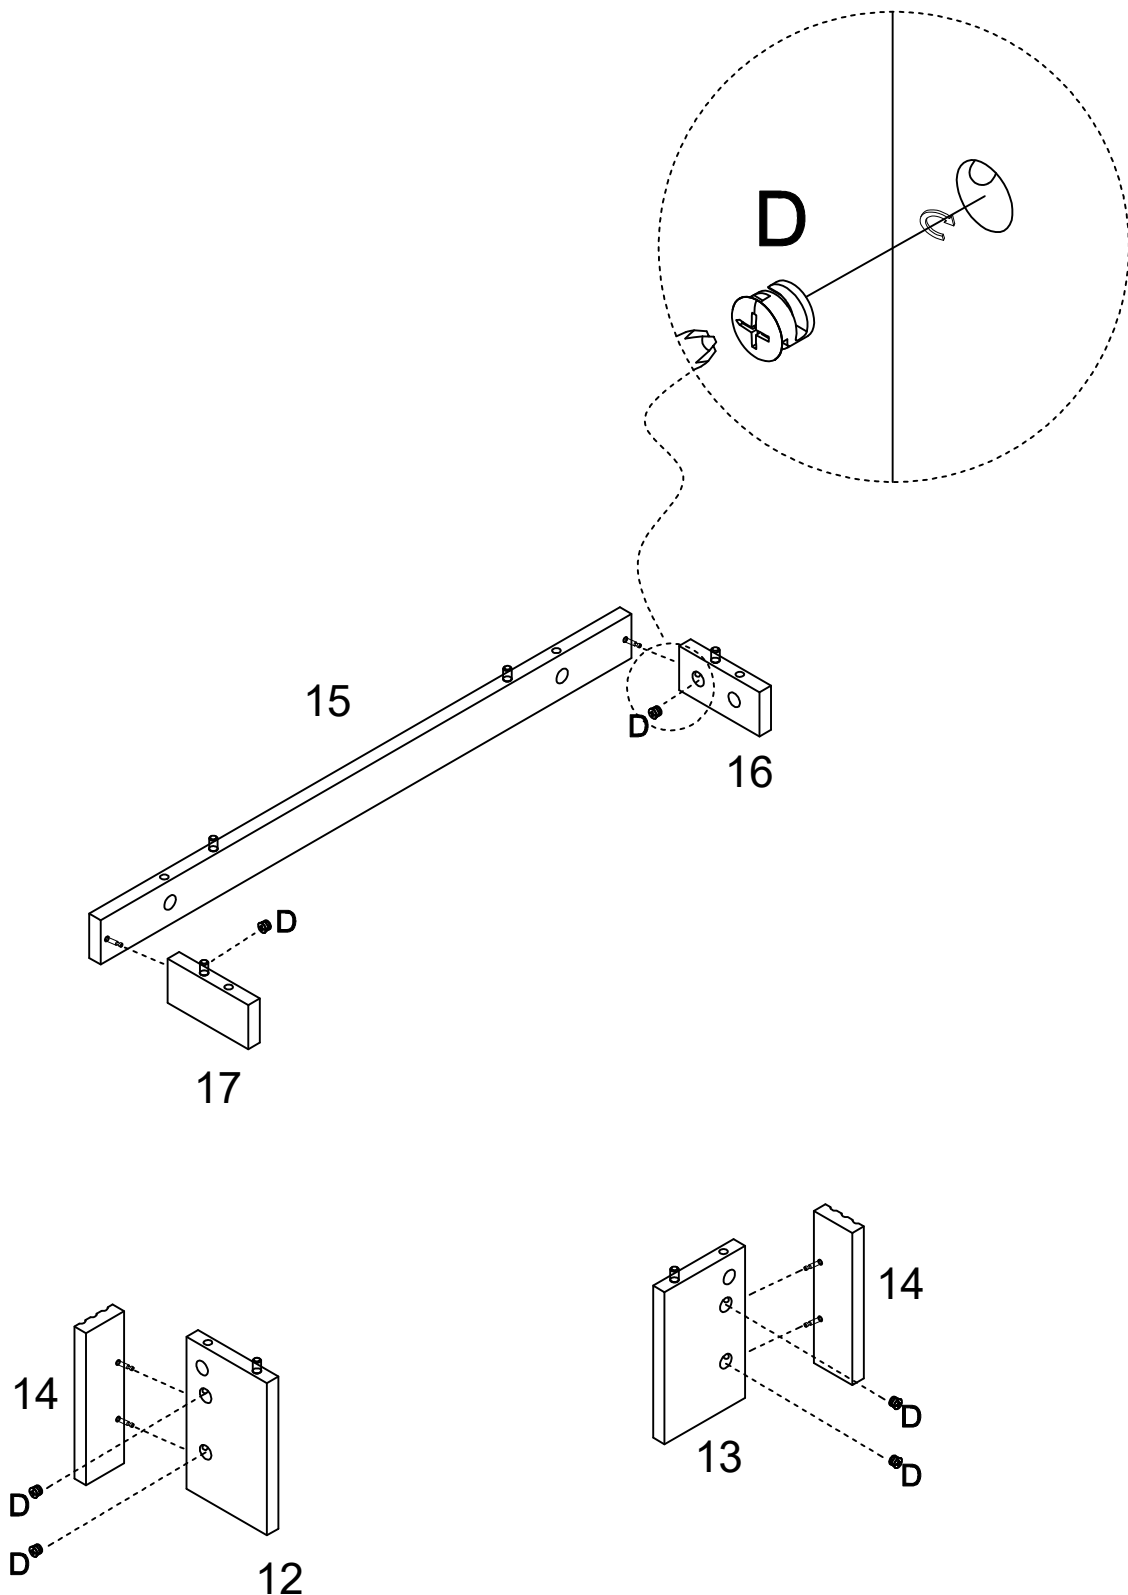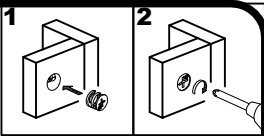

Step 3

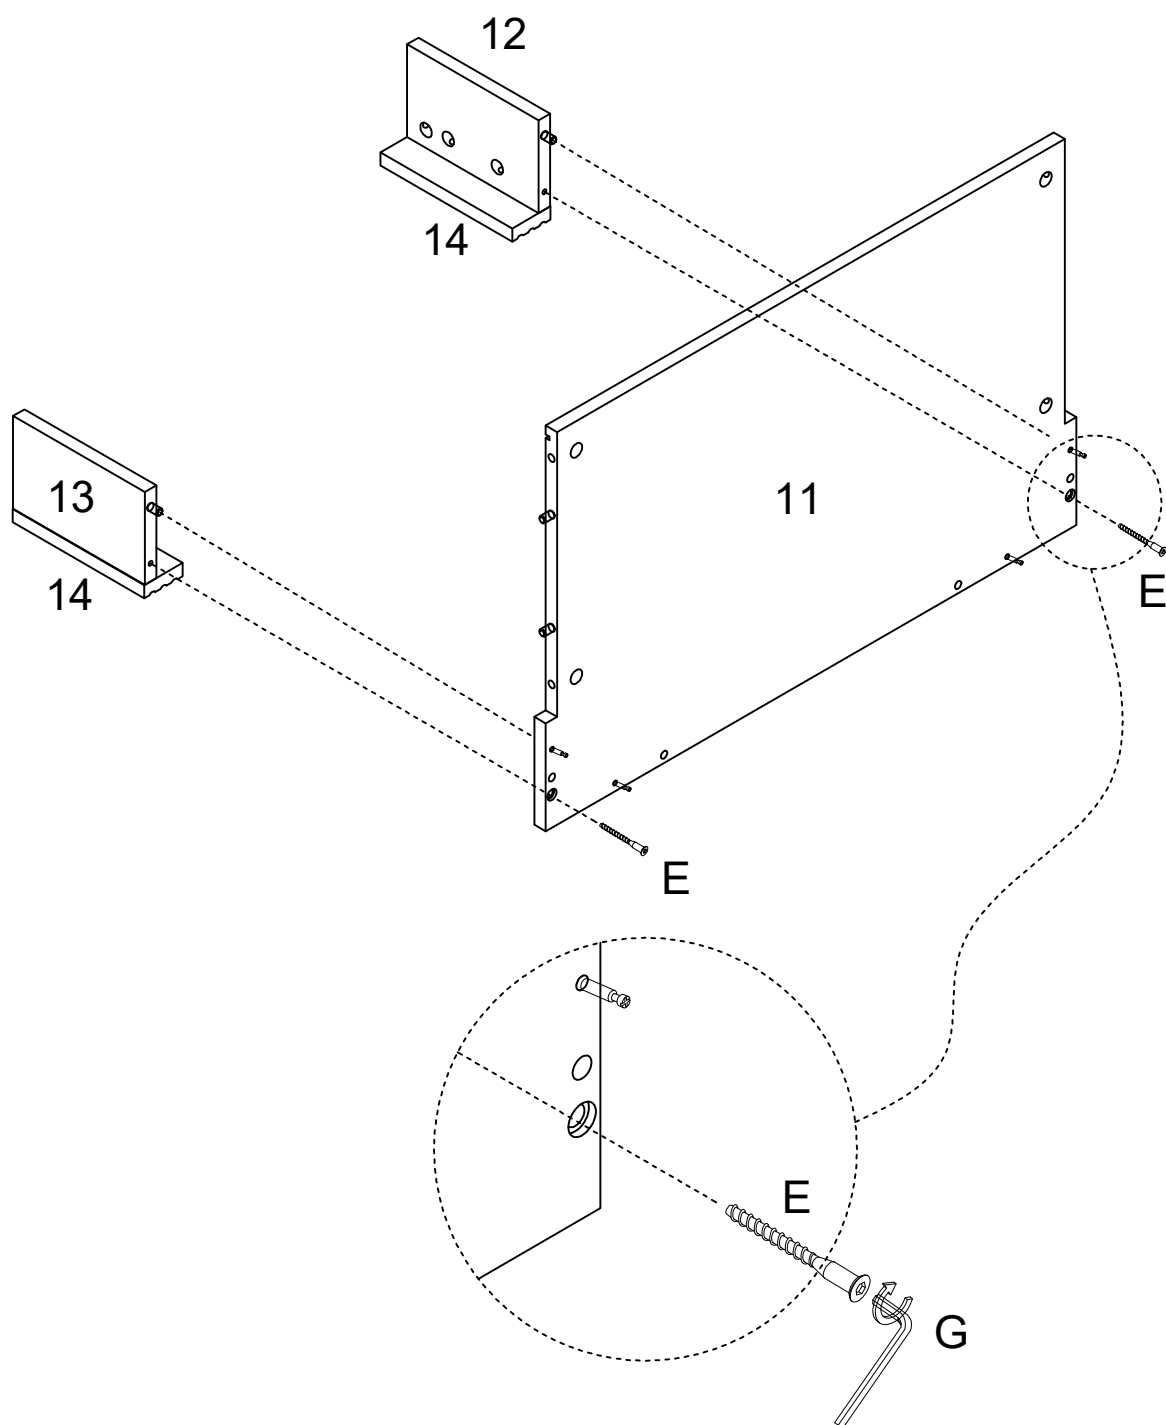



D

X6

Step 4





G	E
	
X1	X2

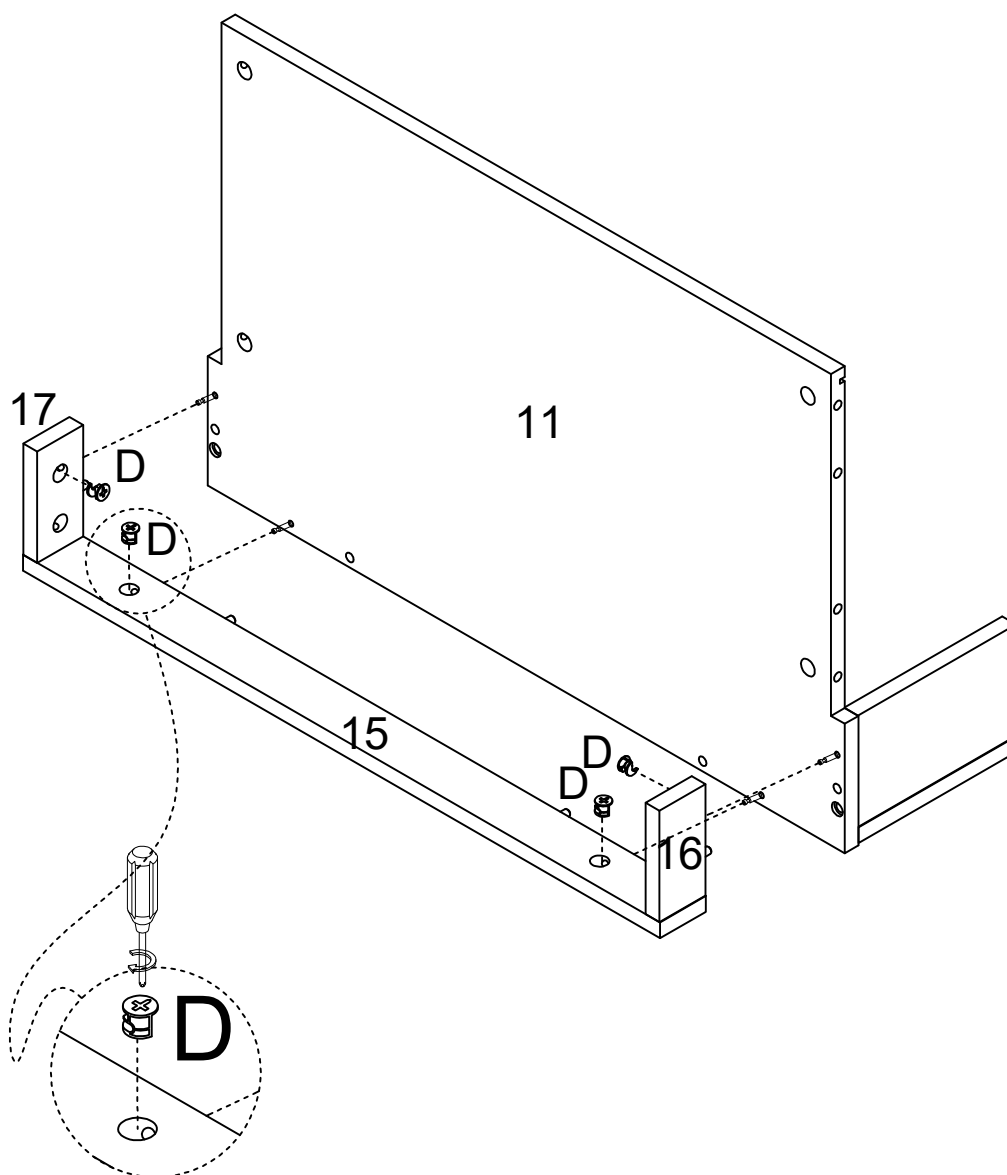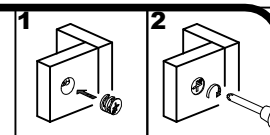Step 5





D
X4

Step 6

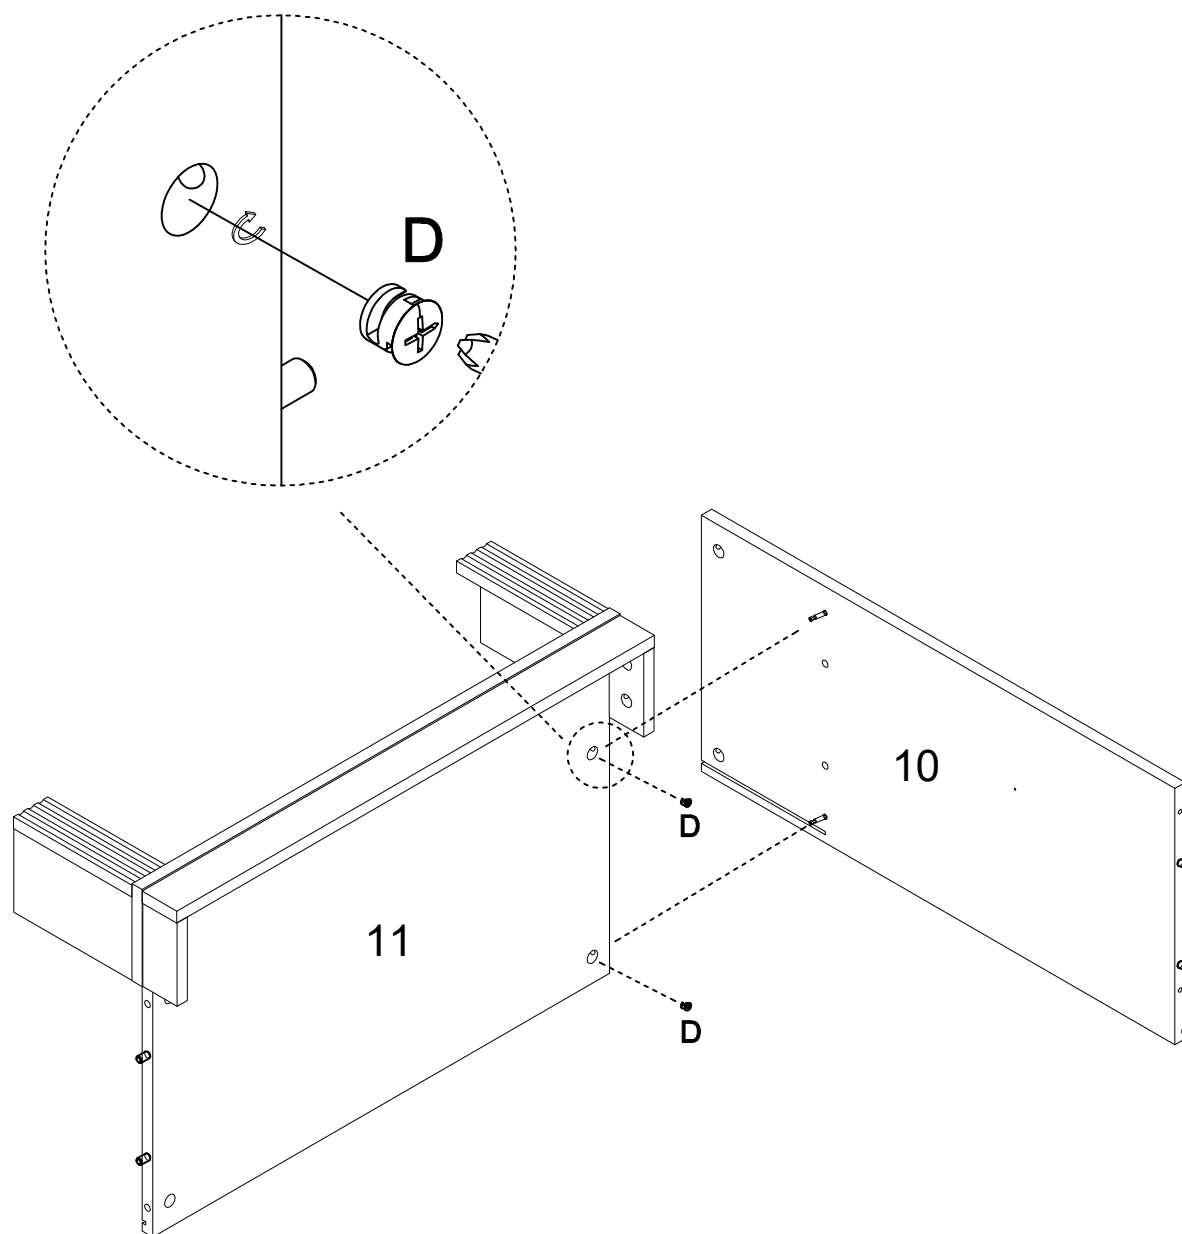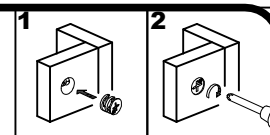


D
X2



Step 7

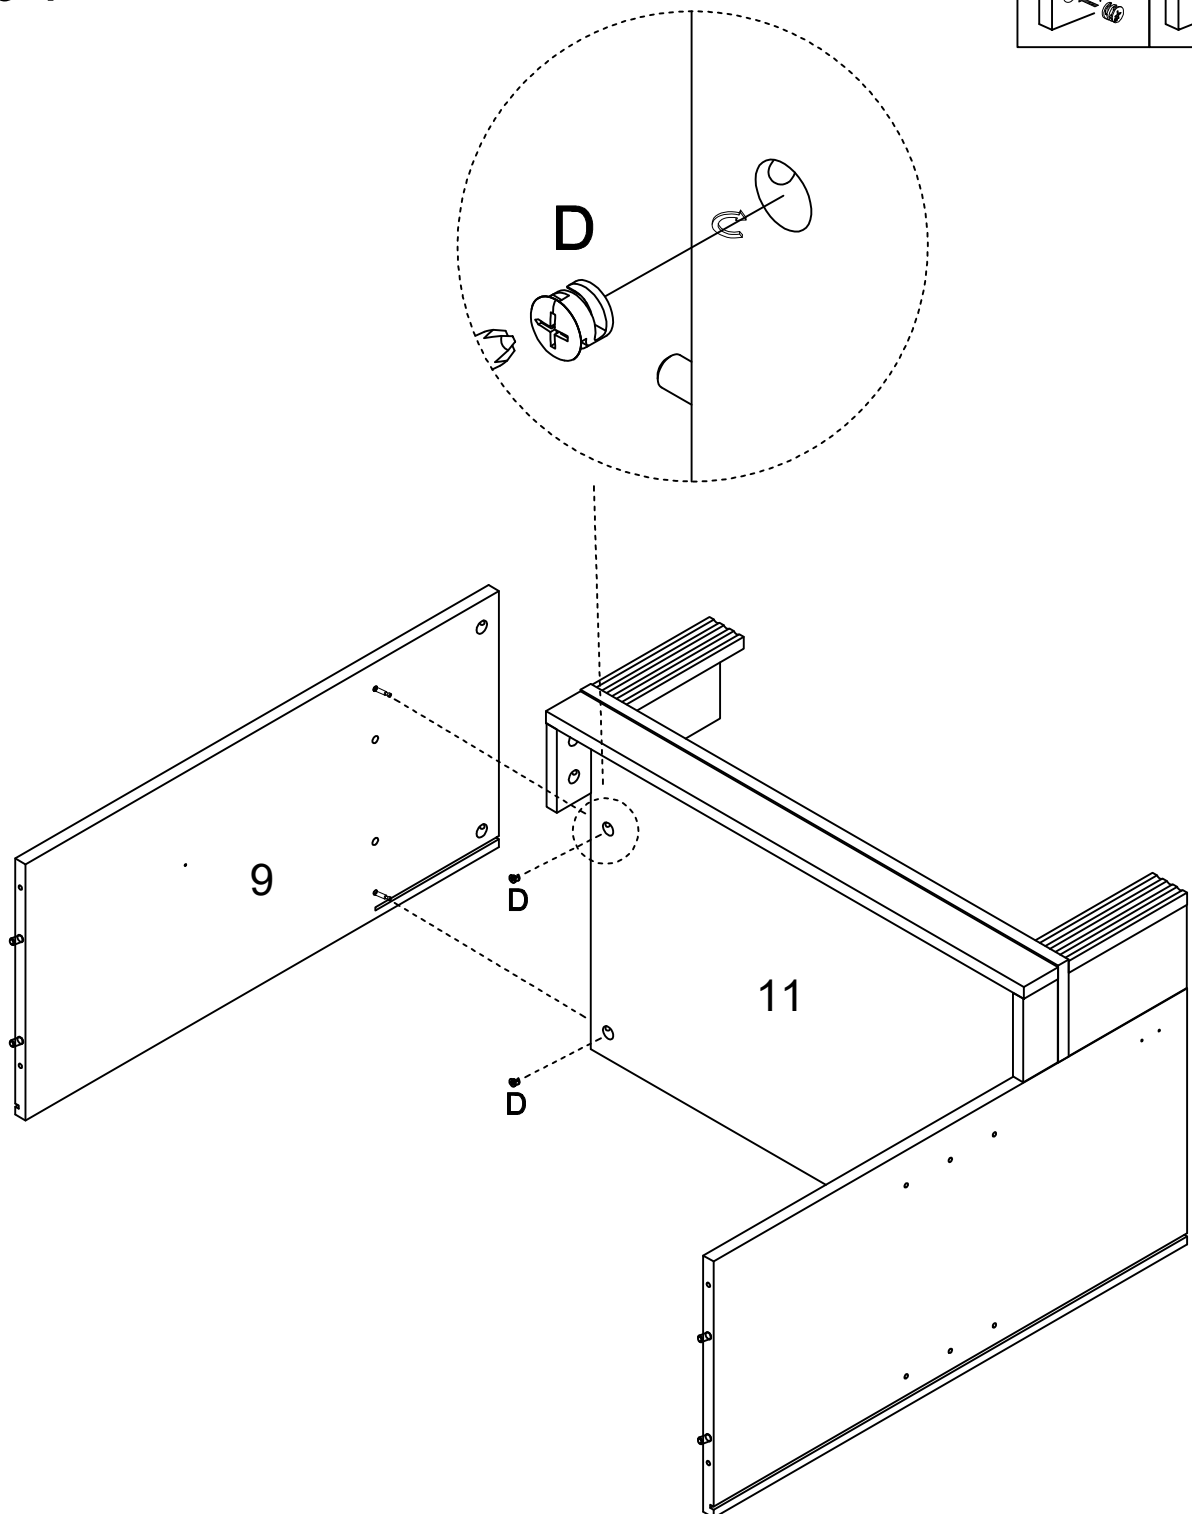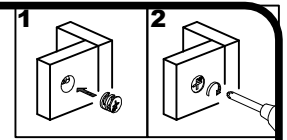


D
X2

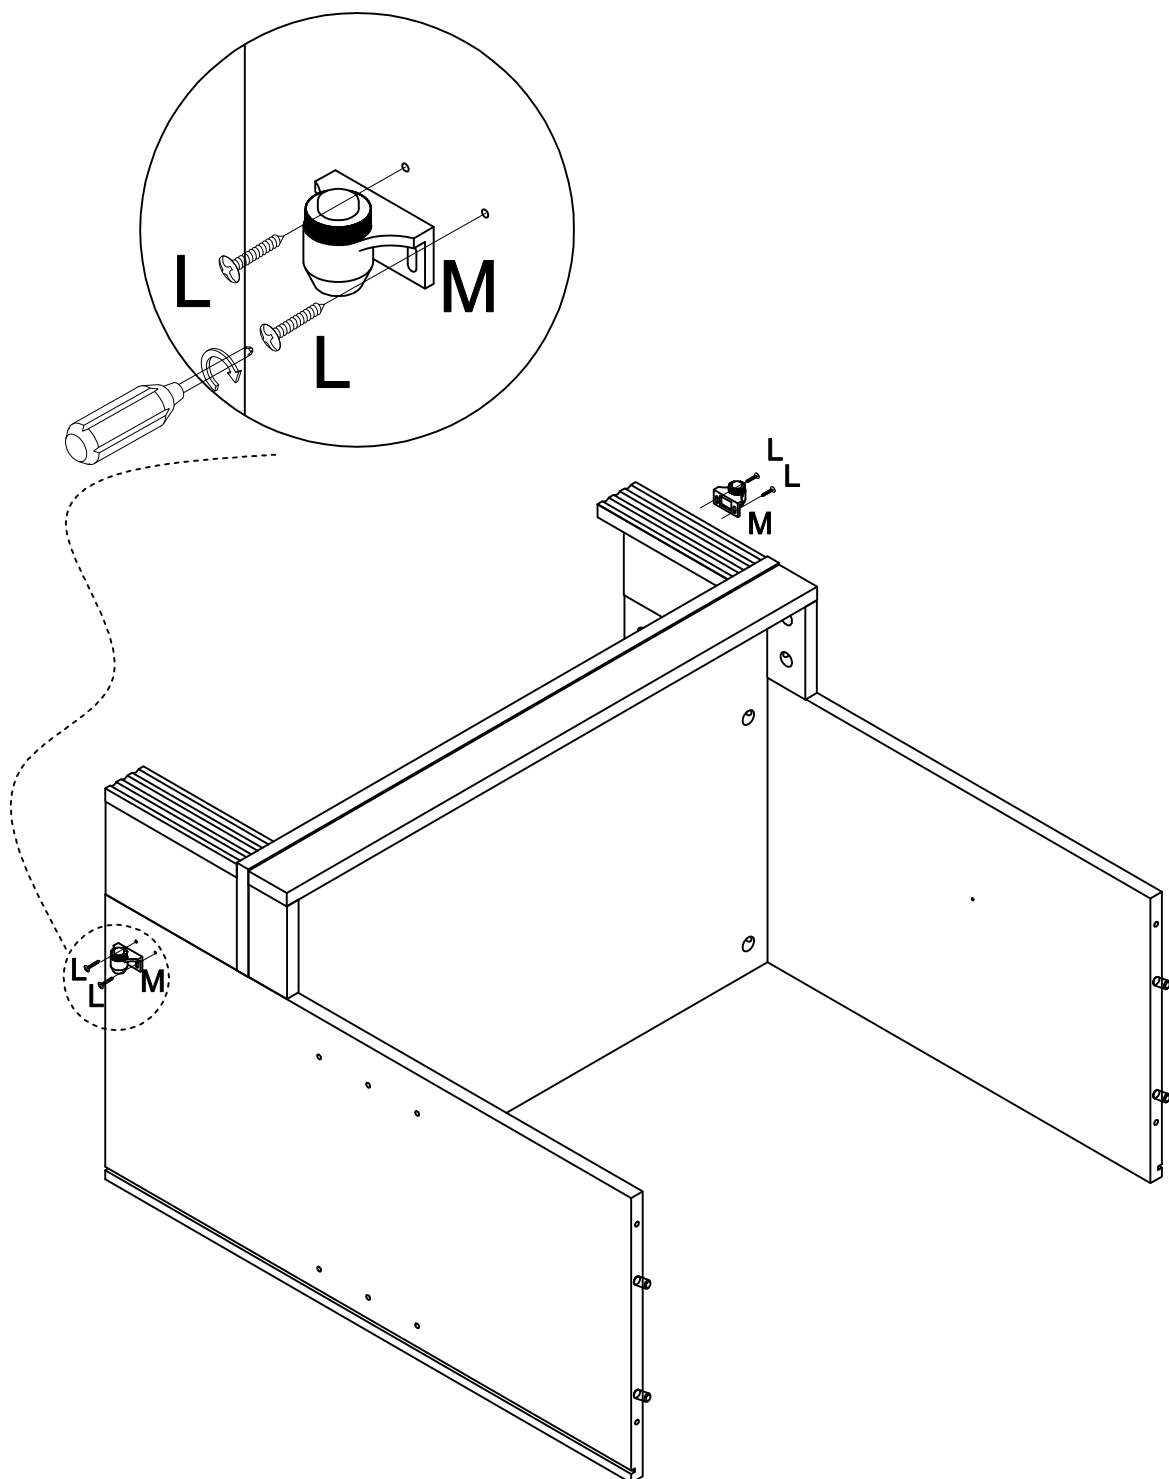

Step 8





M	L
	
X2	X4

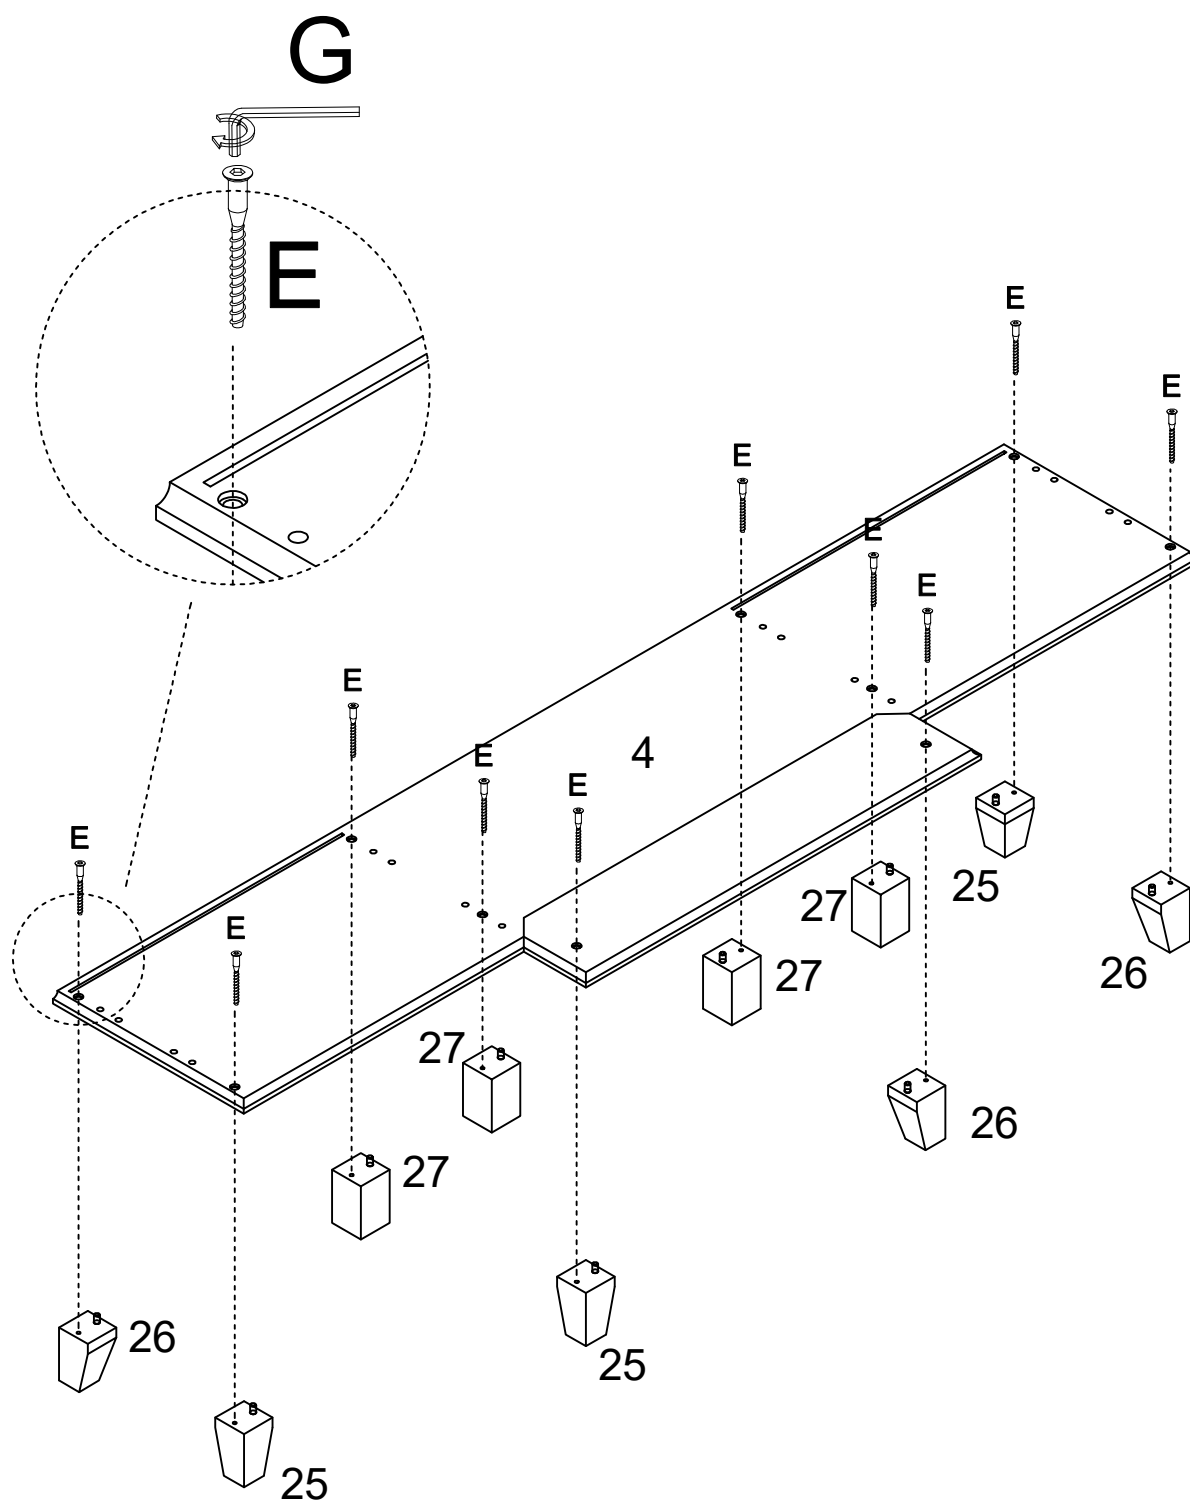Step 9




G	E
	
X1	X10

Step 10

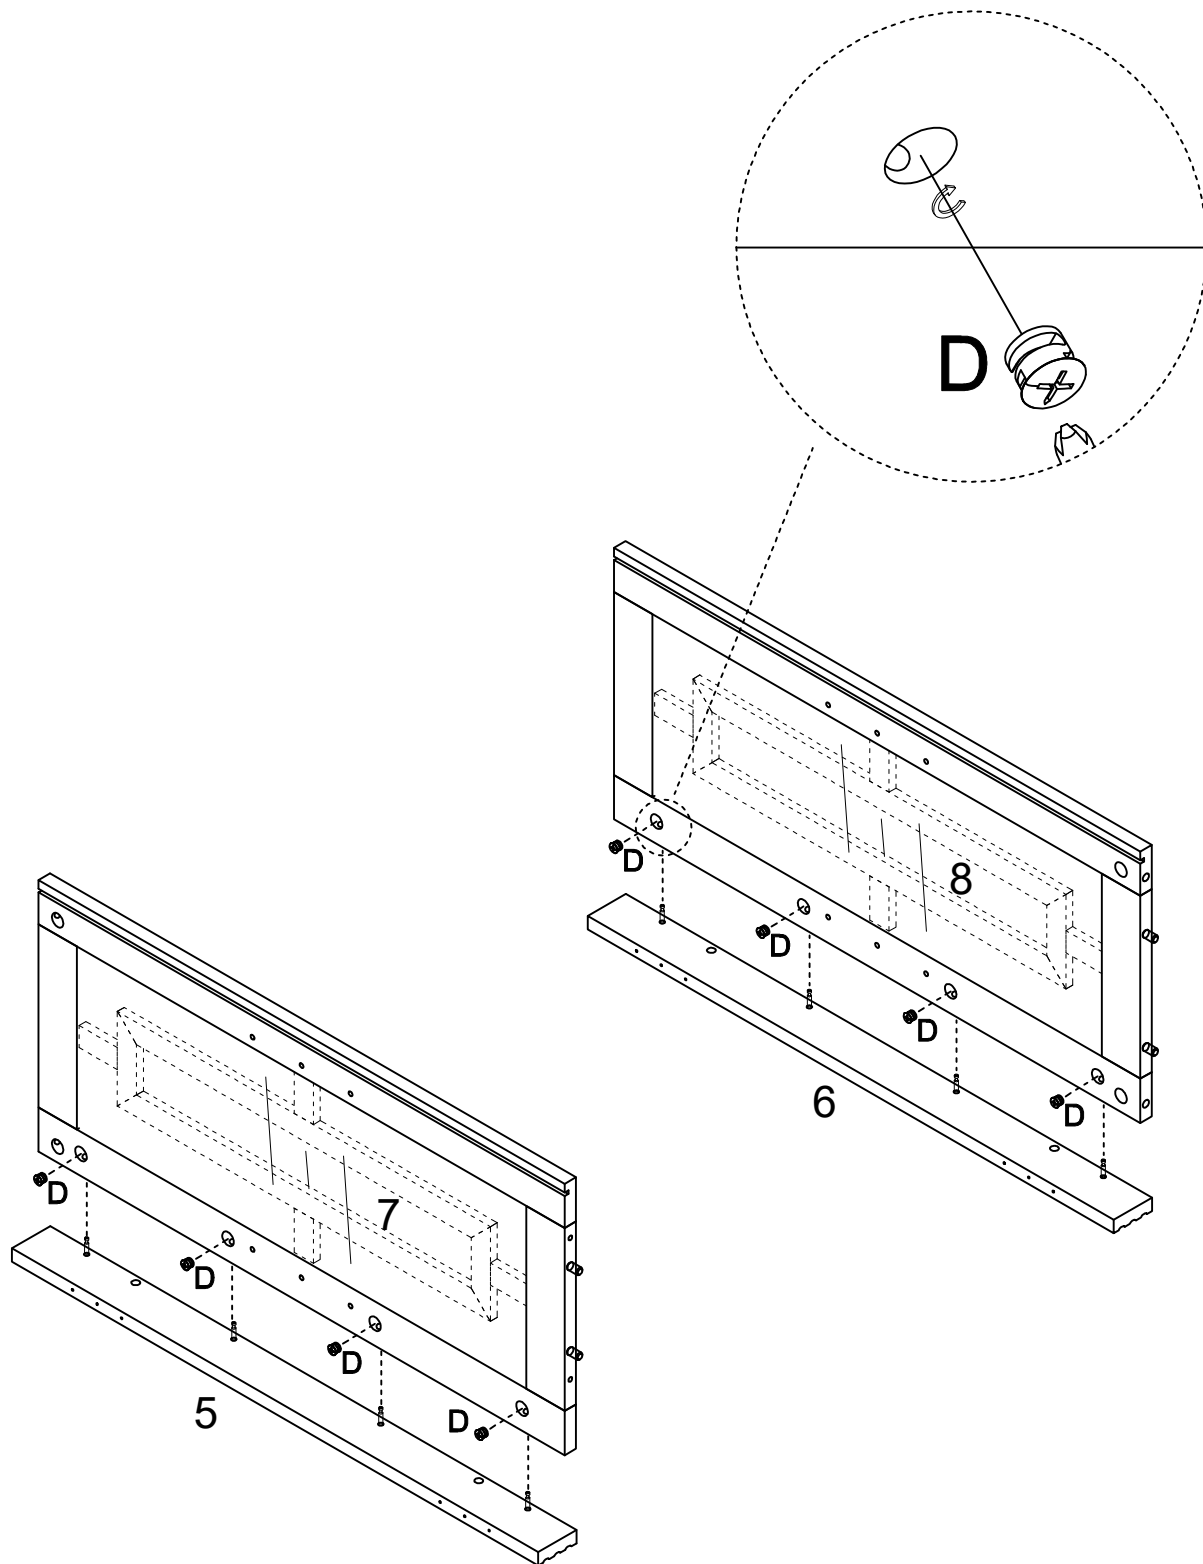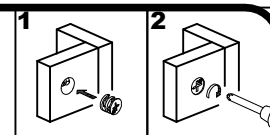


D
X8

Step 11

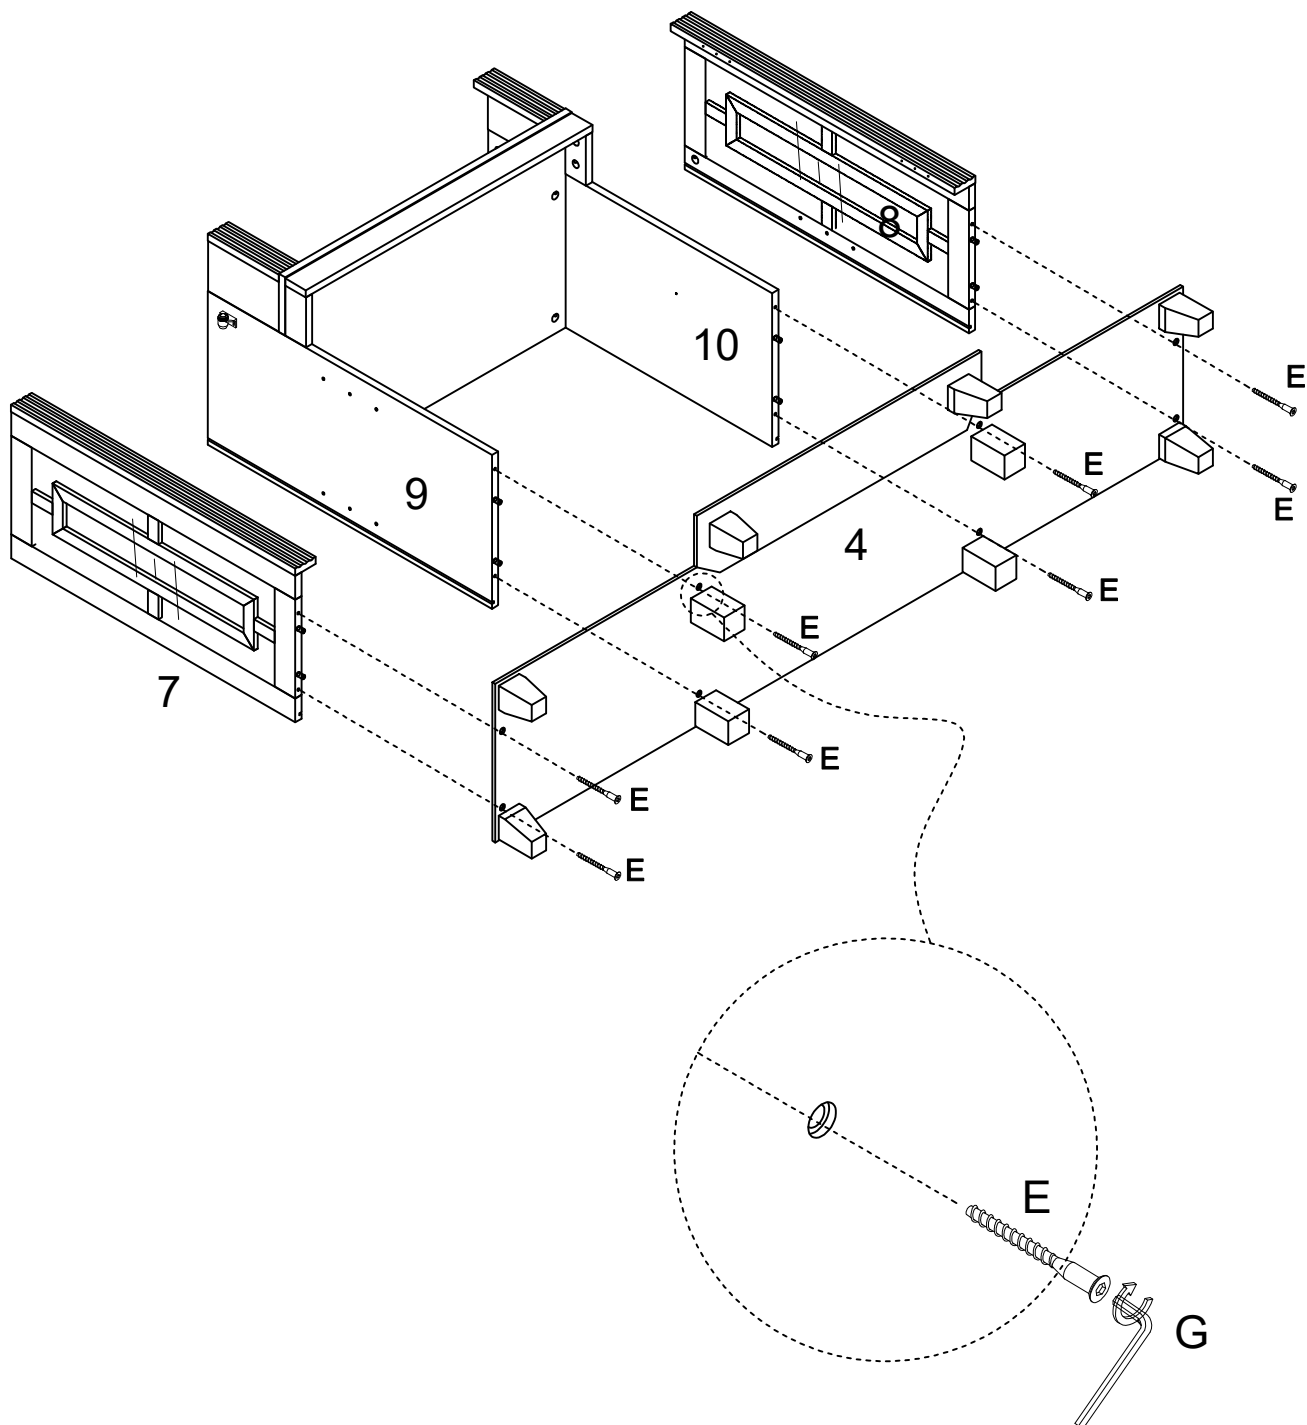




G	E
X1	X8

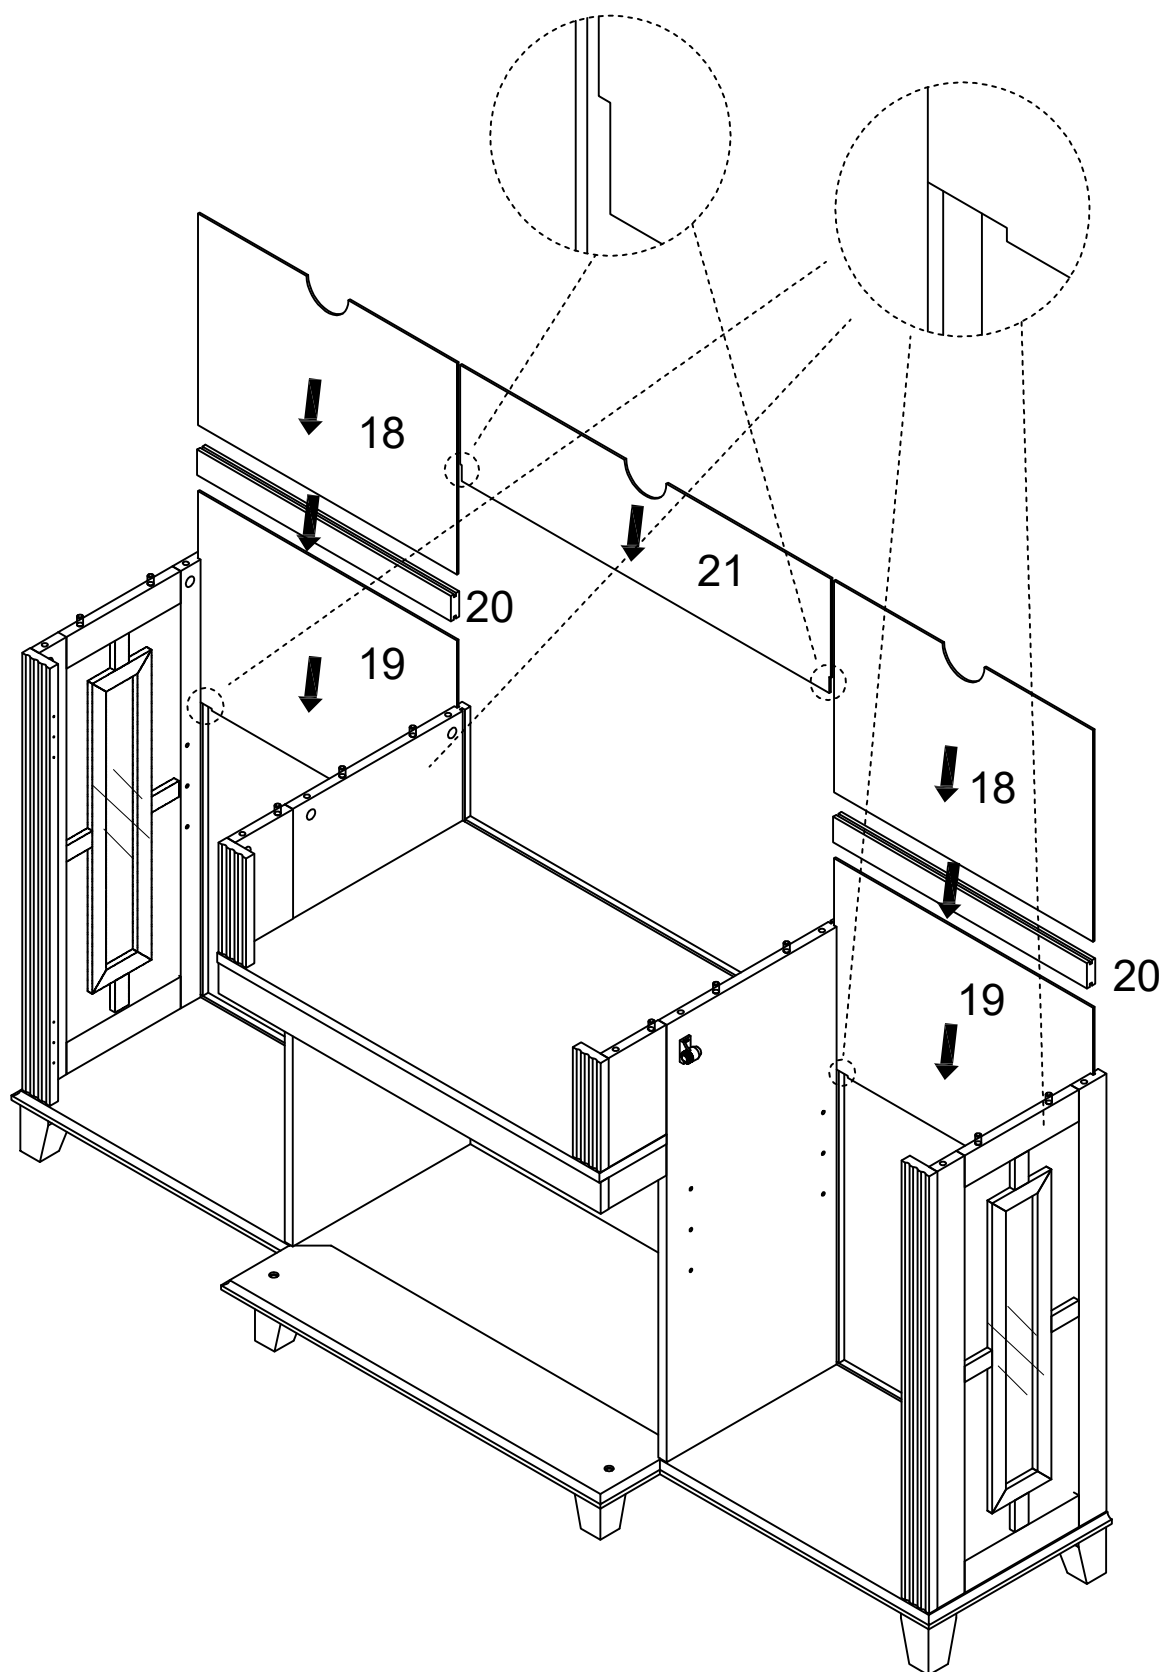Step 12


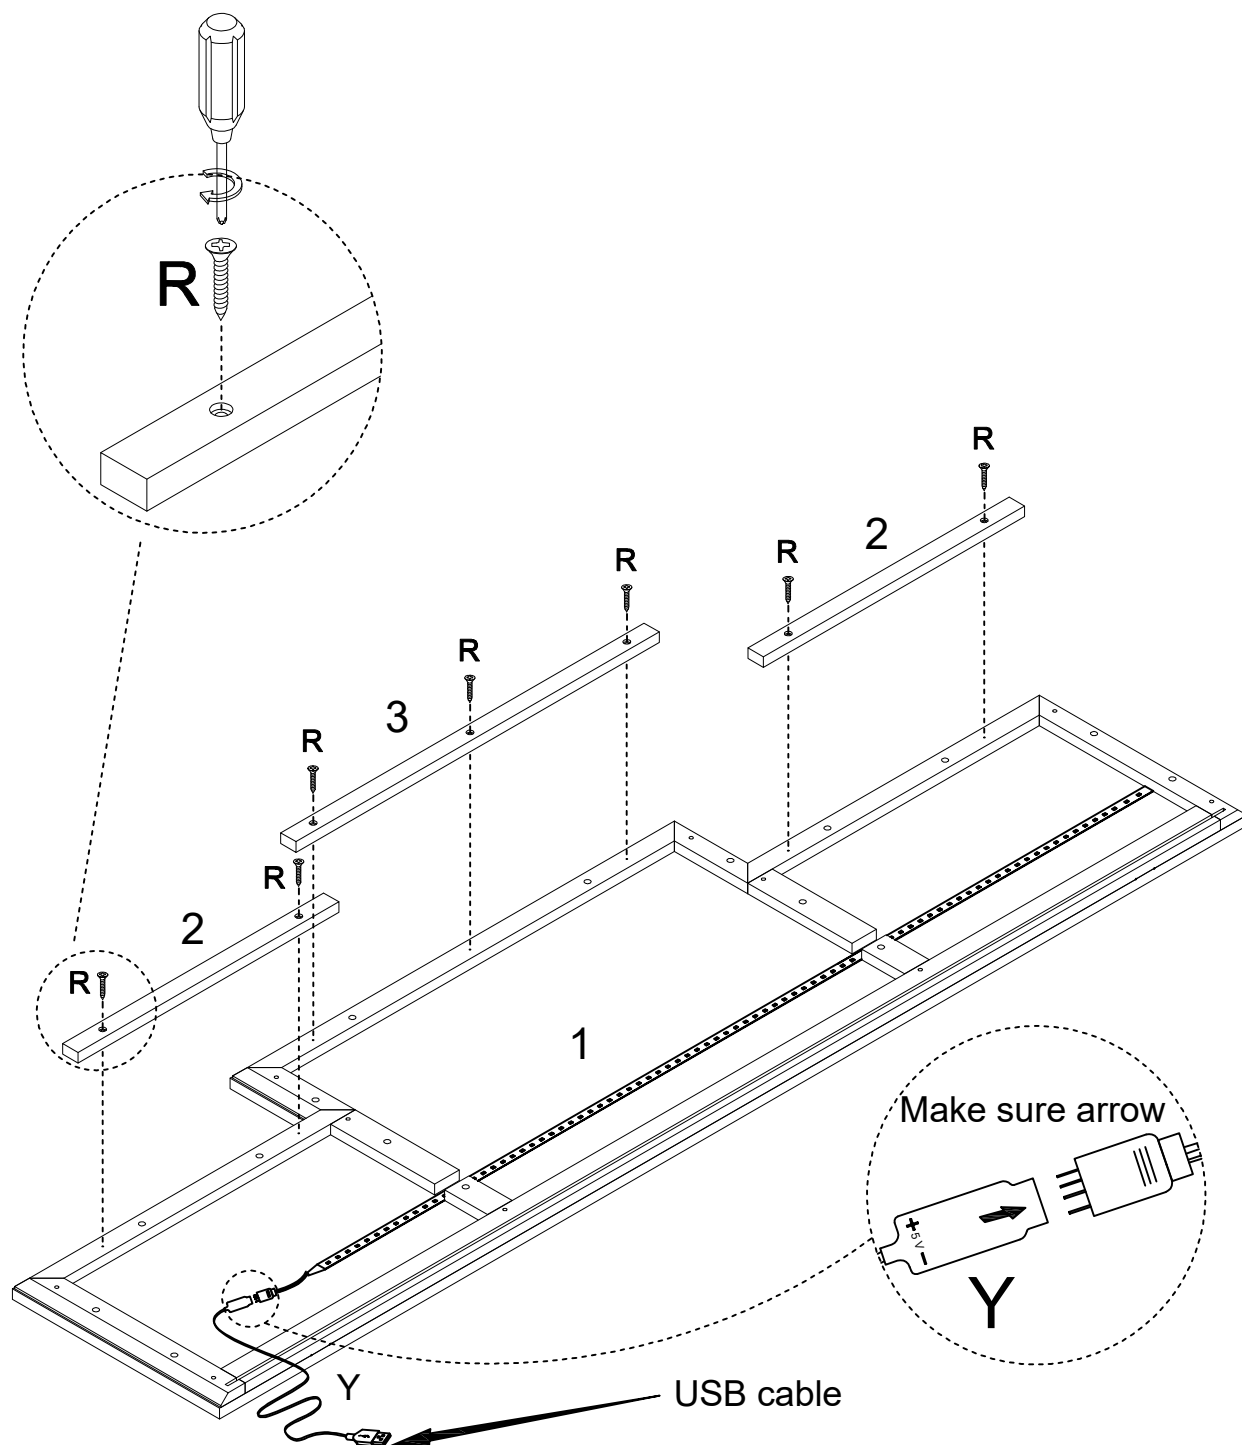



Step 13




Y	R
	
X1	X7

Step 14

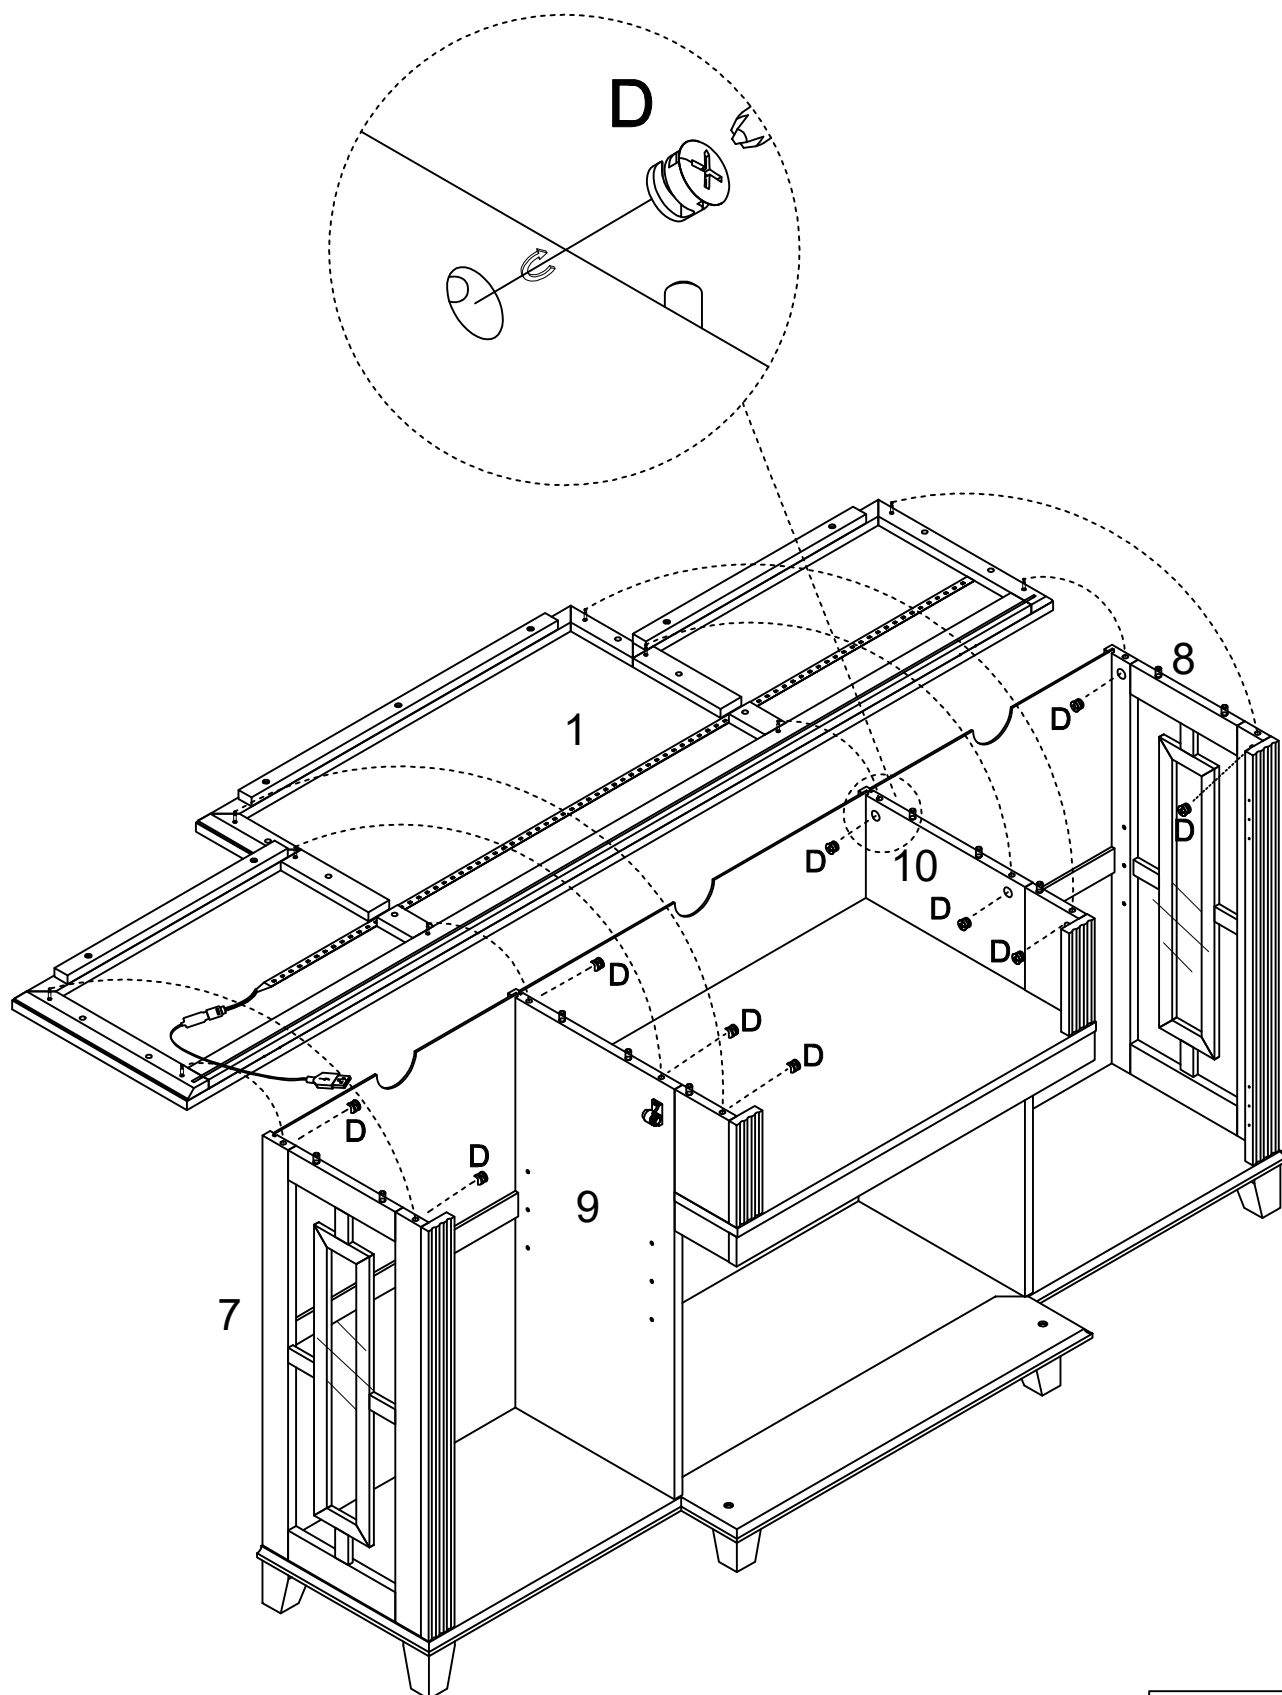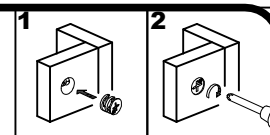


D

X10

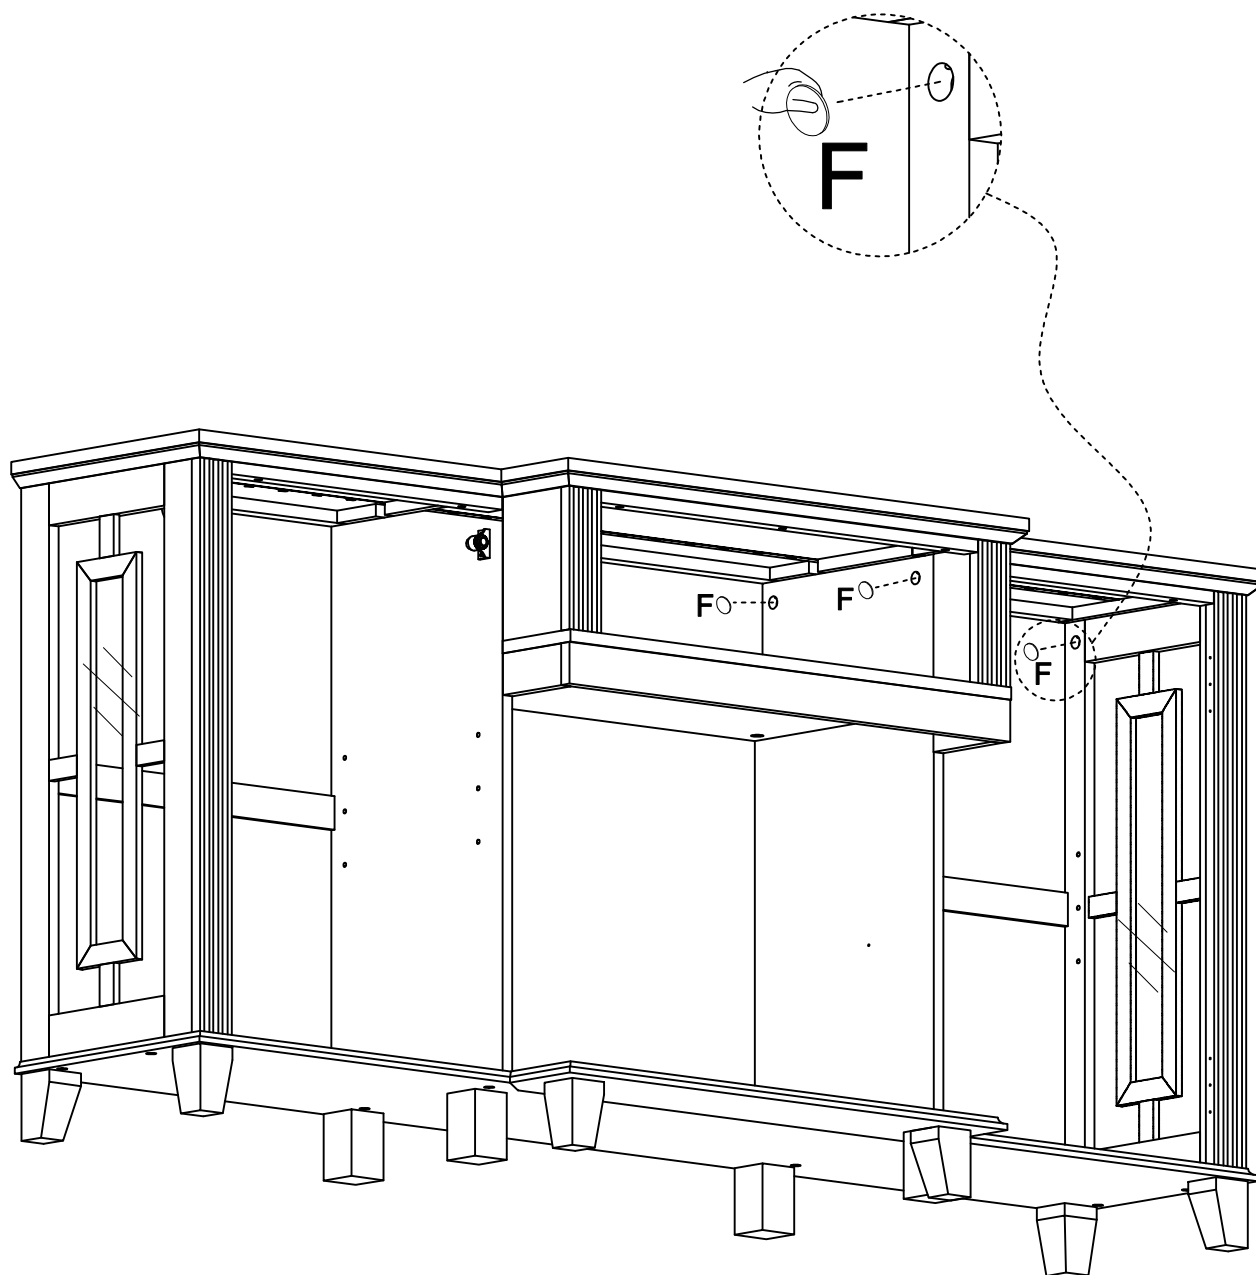
Step 15




F
O
X32

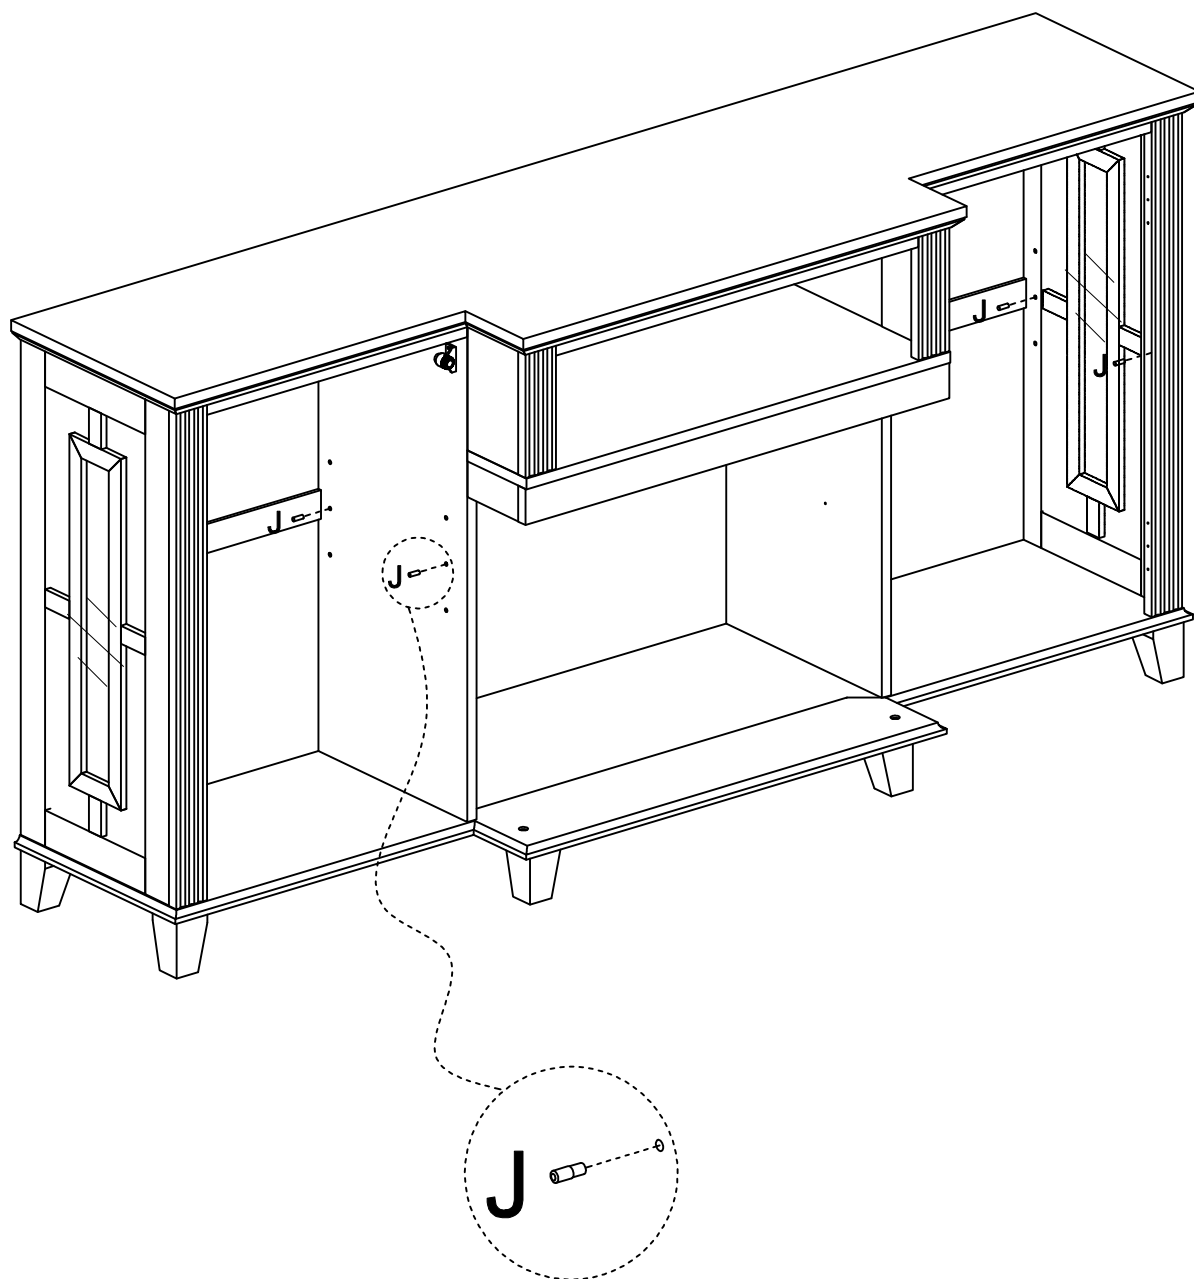Step 16






J

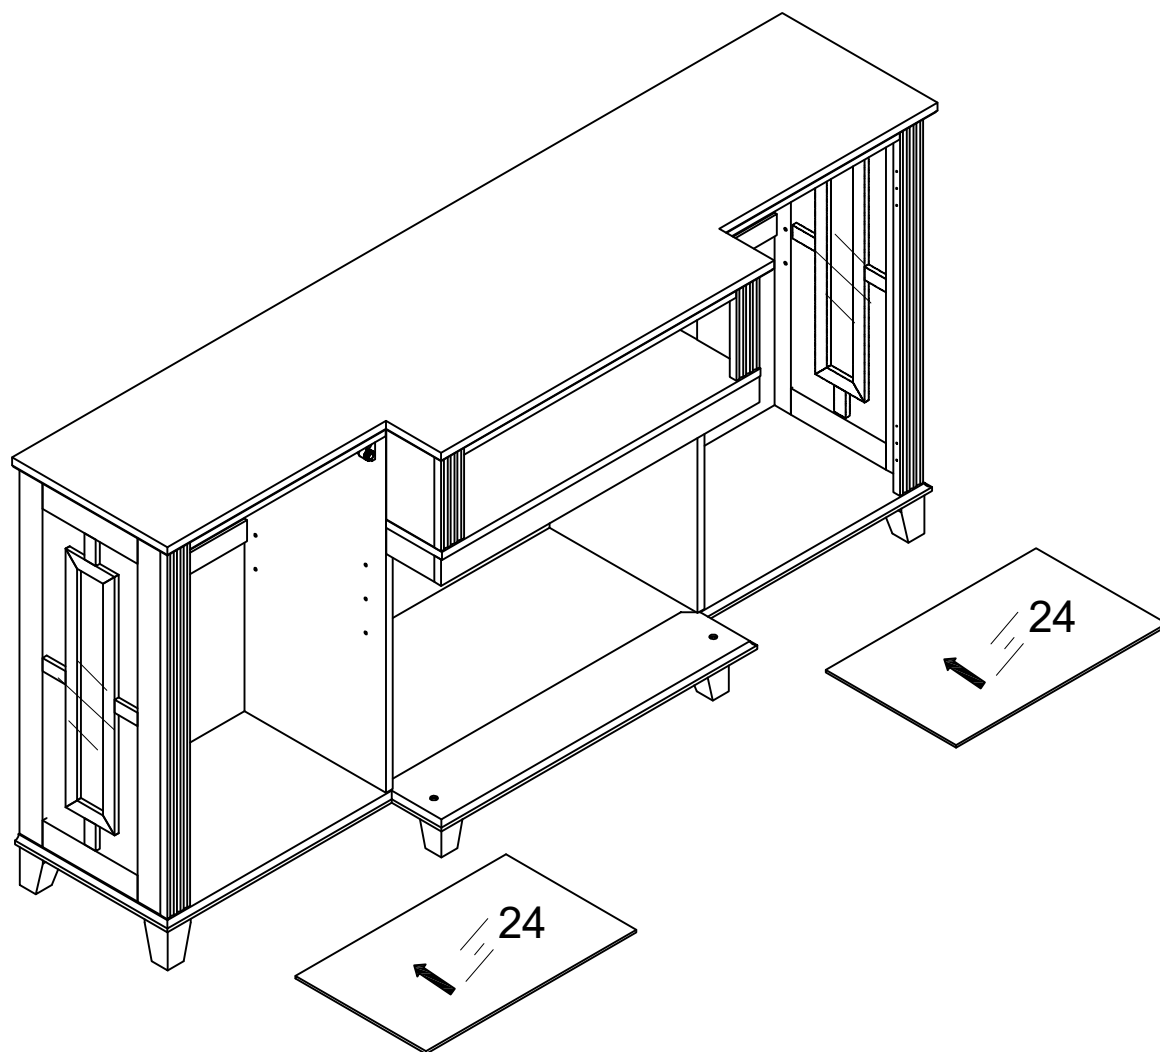X8

Step 17

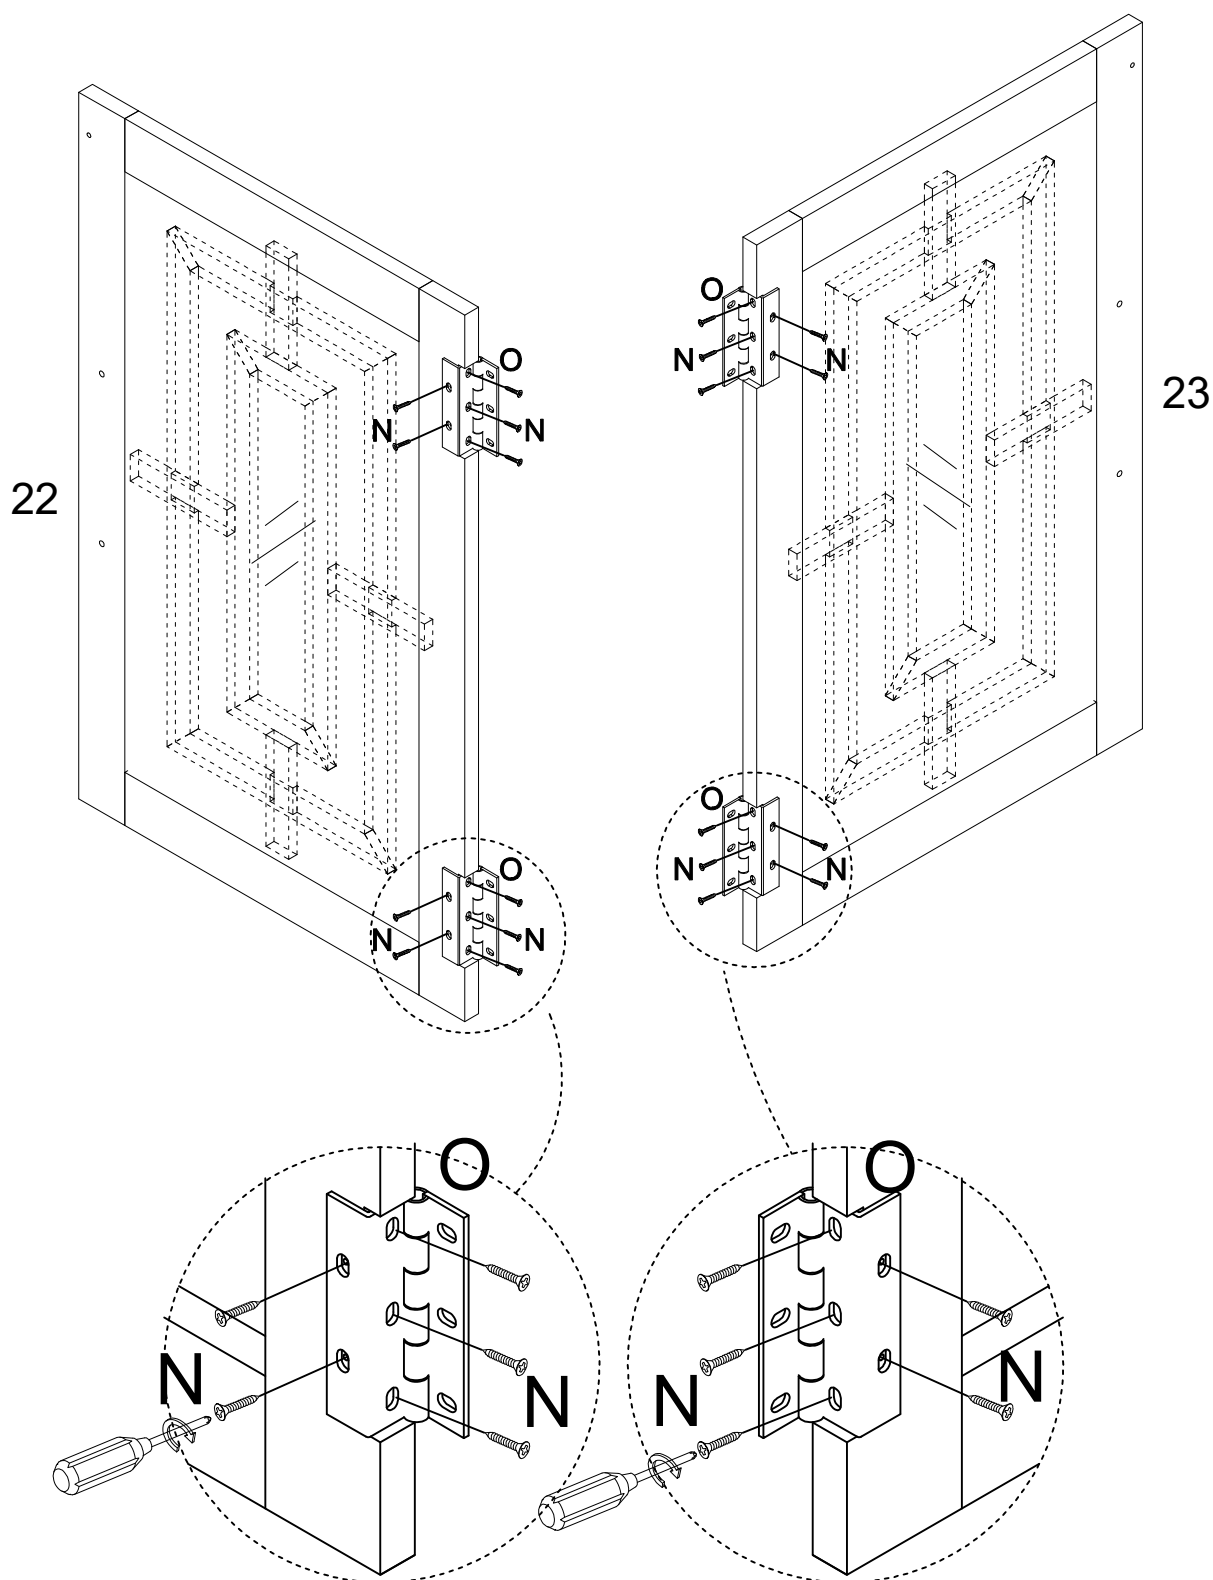





Step 18




O	N
	
X4	X20

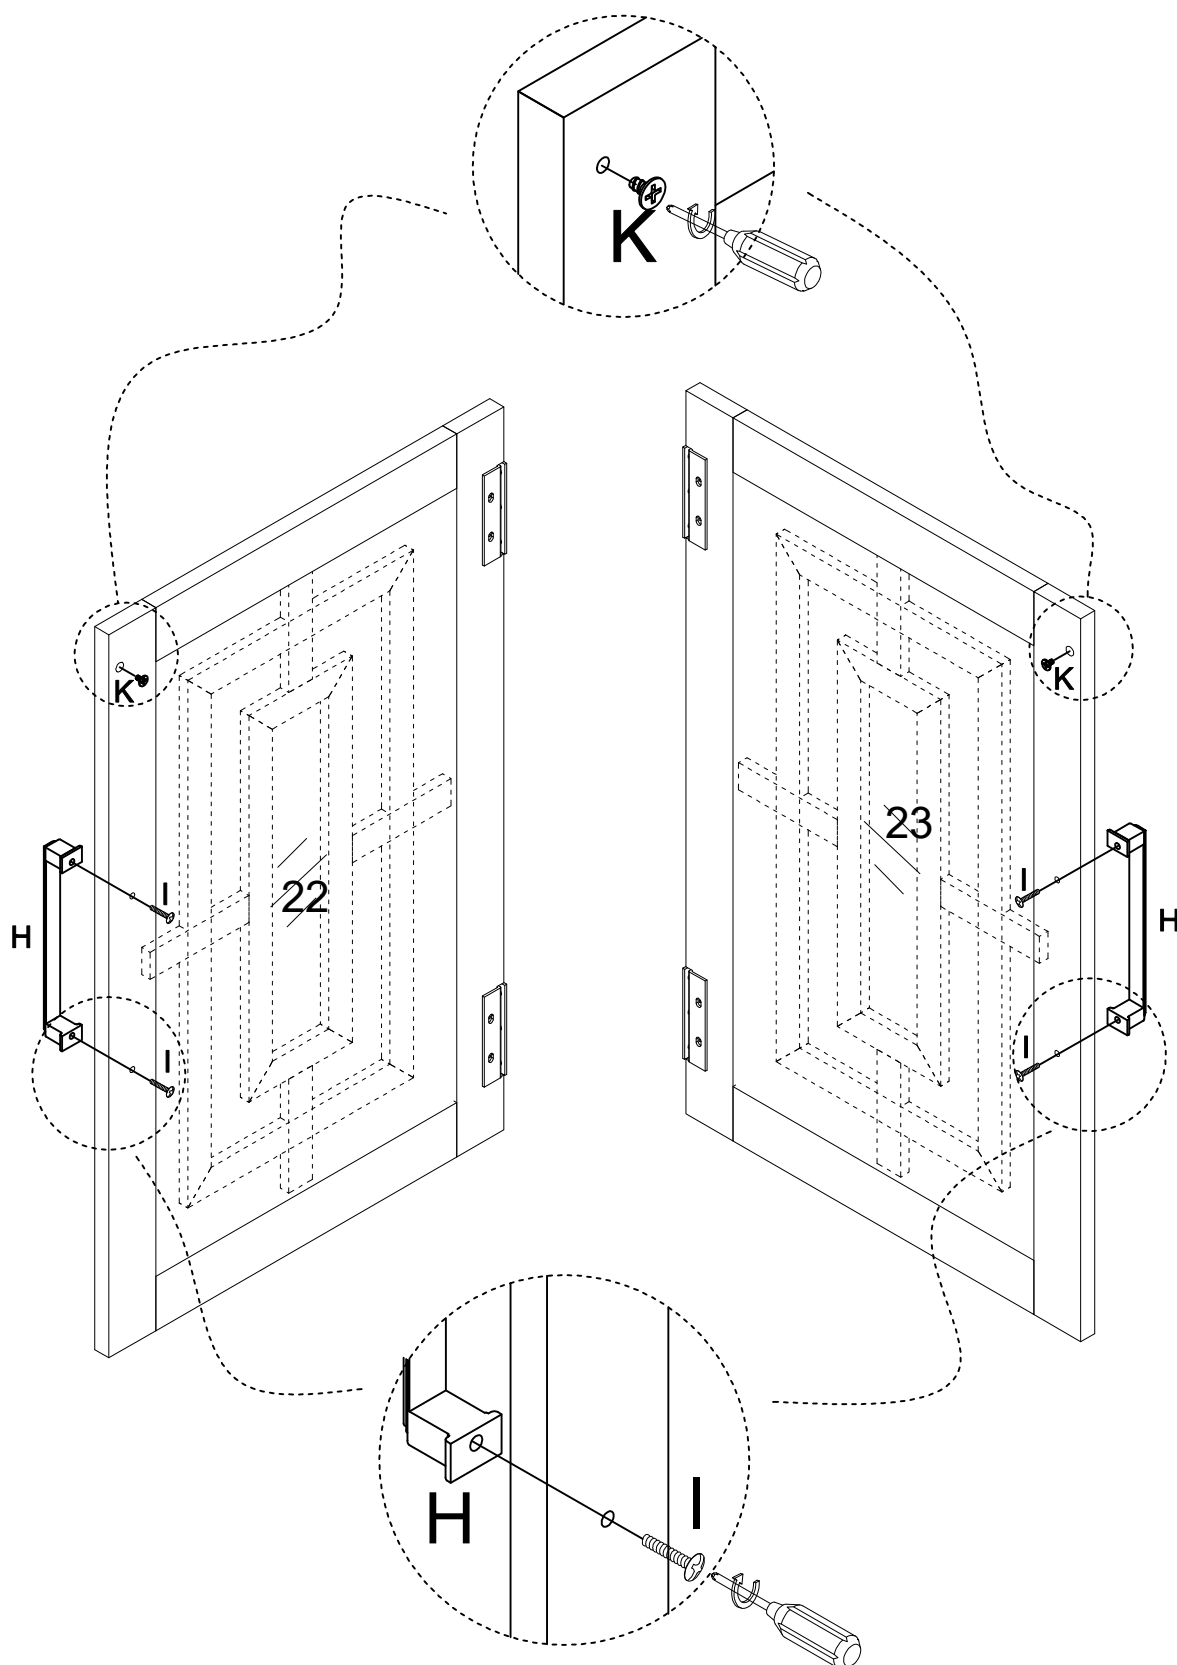
Step 19




K	I	H
		
X2	X4	X2


Step 20

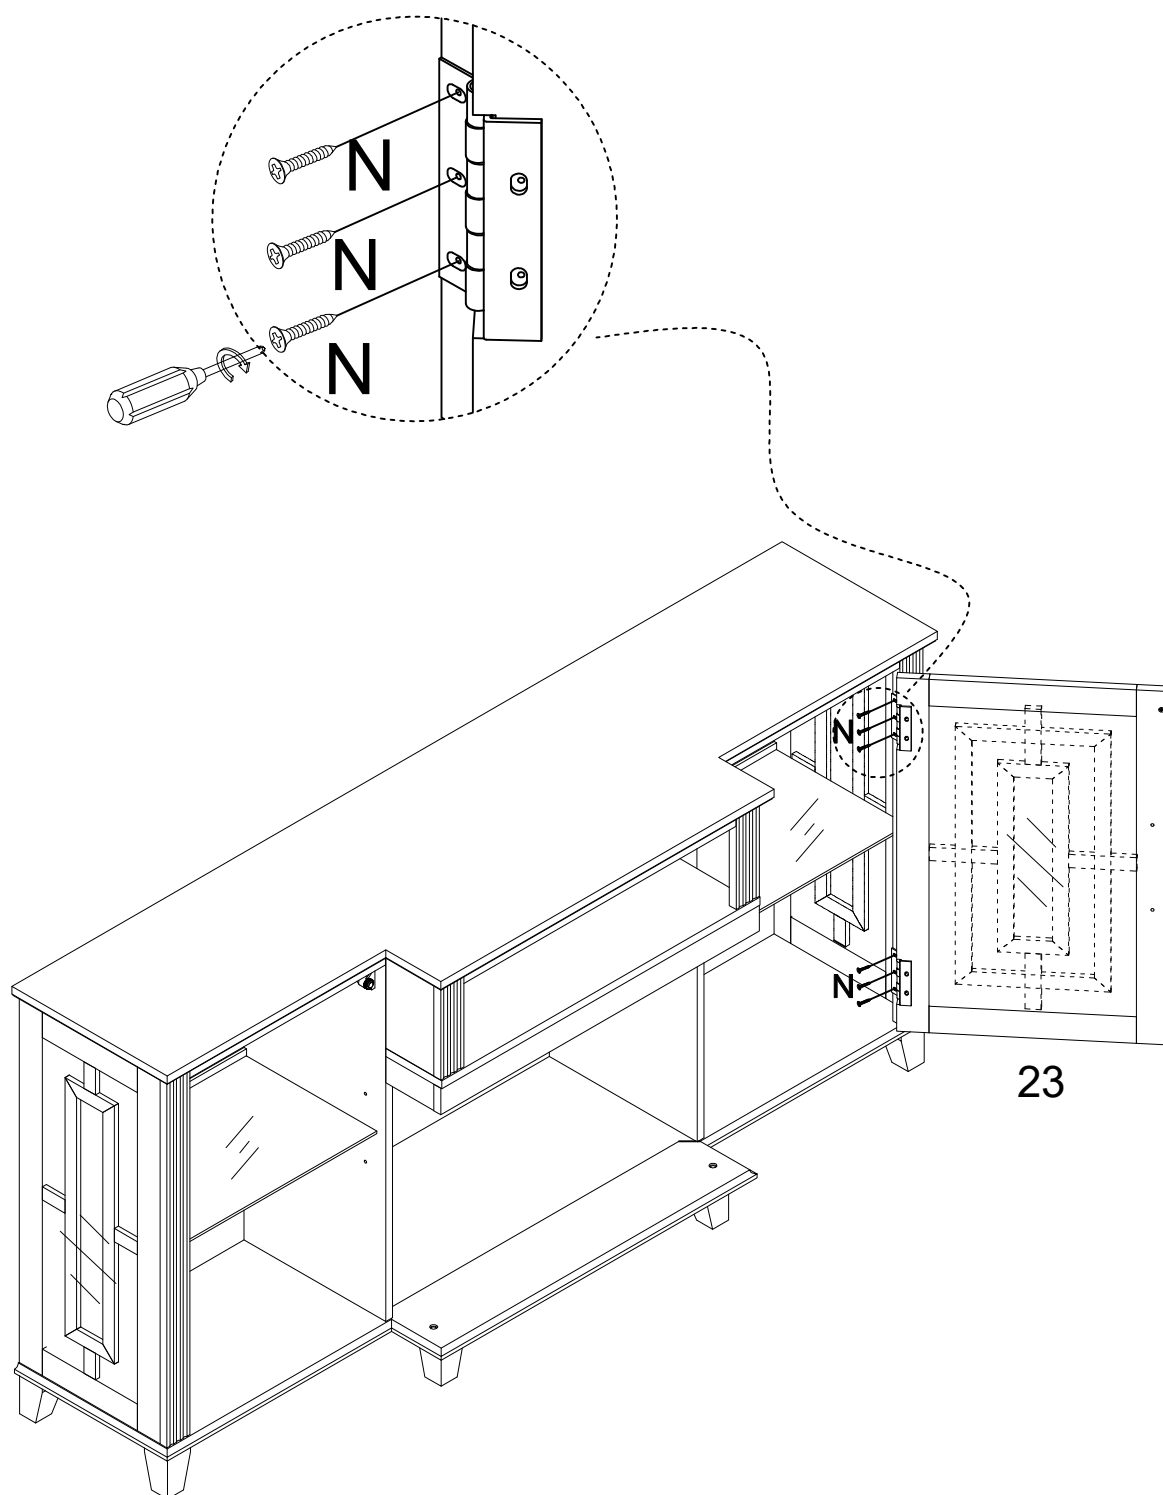


N

X6

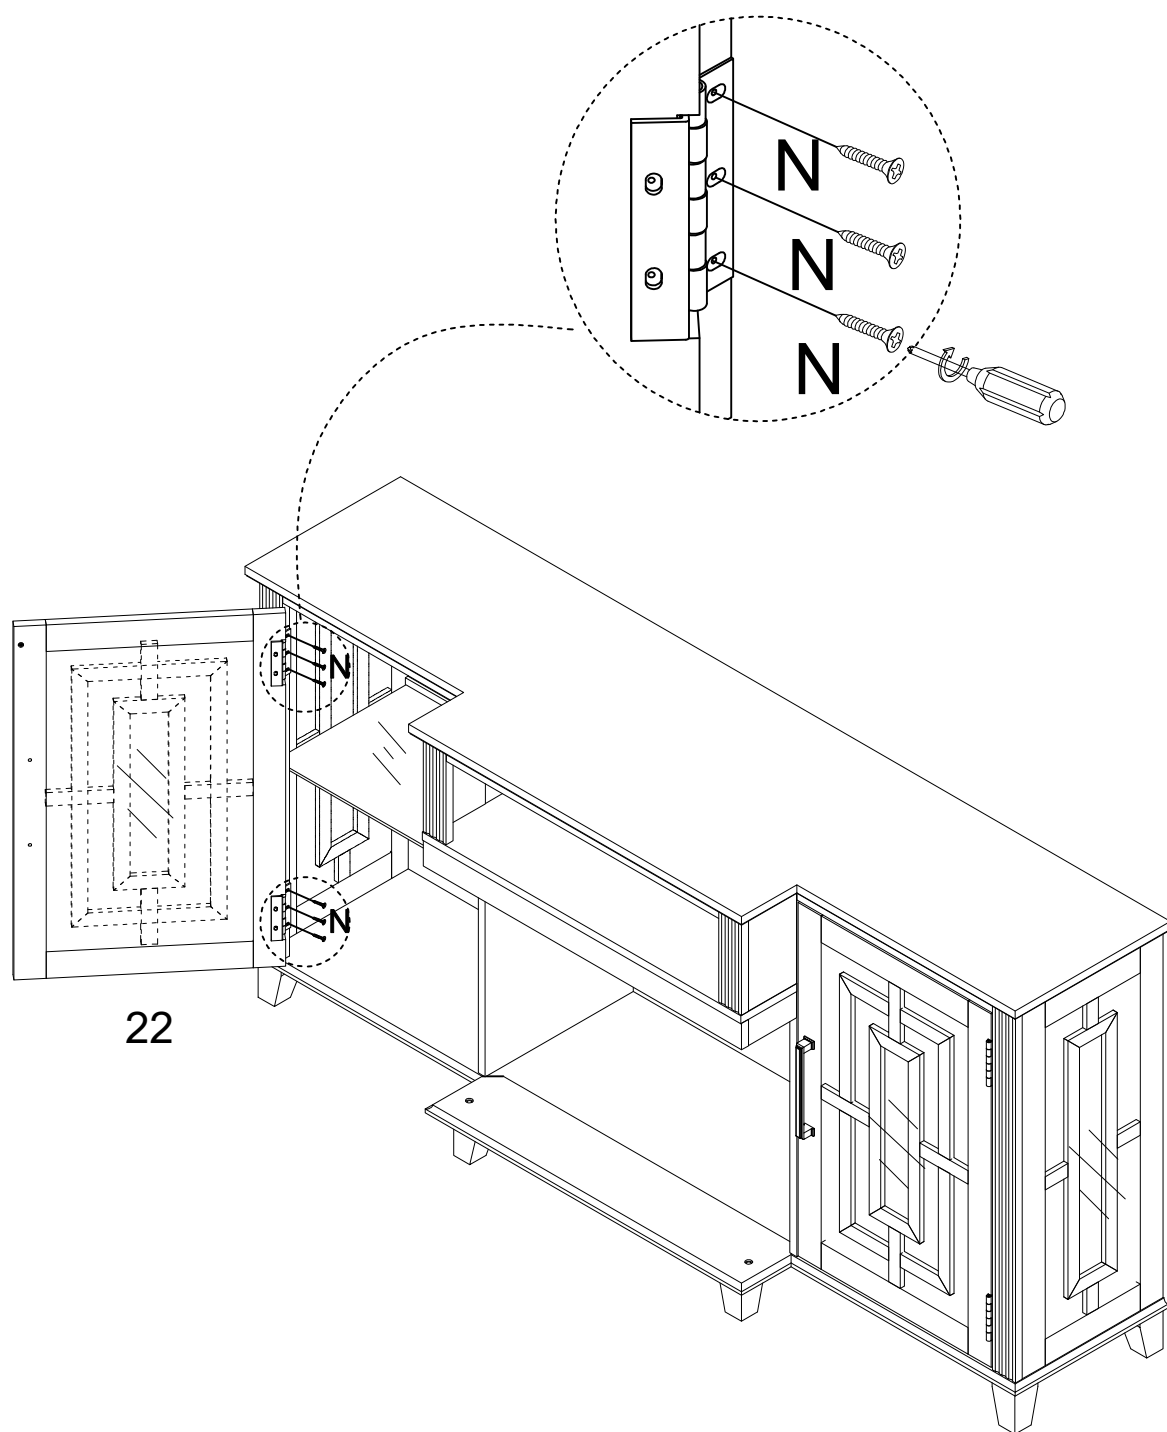

Step 21




N

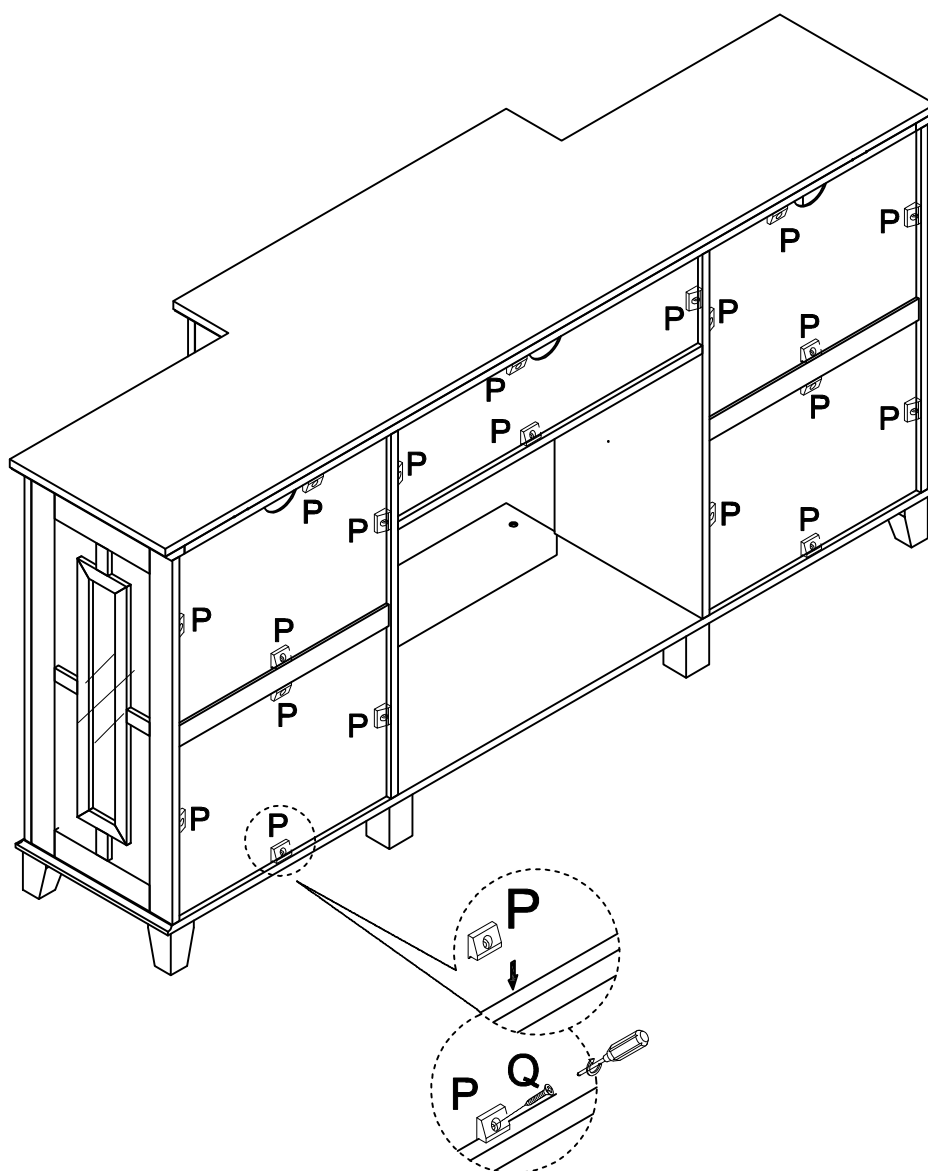X6



Step 22

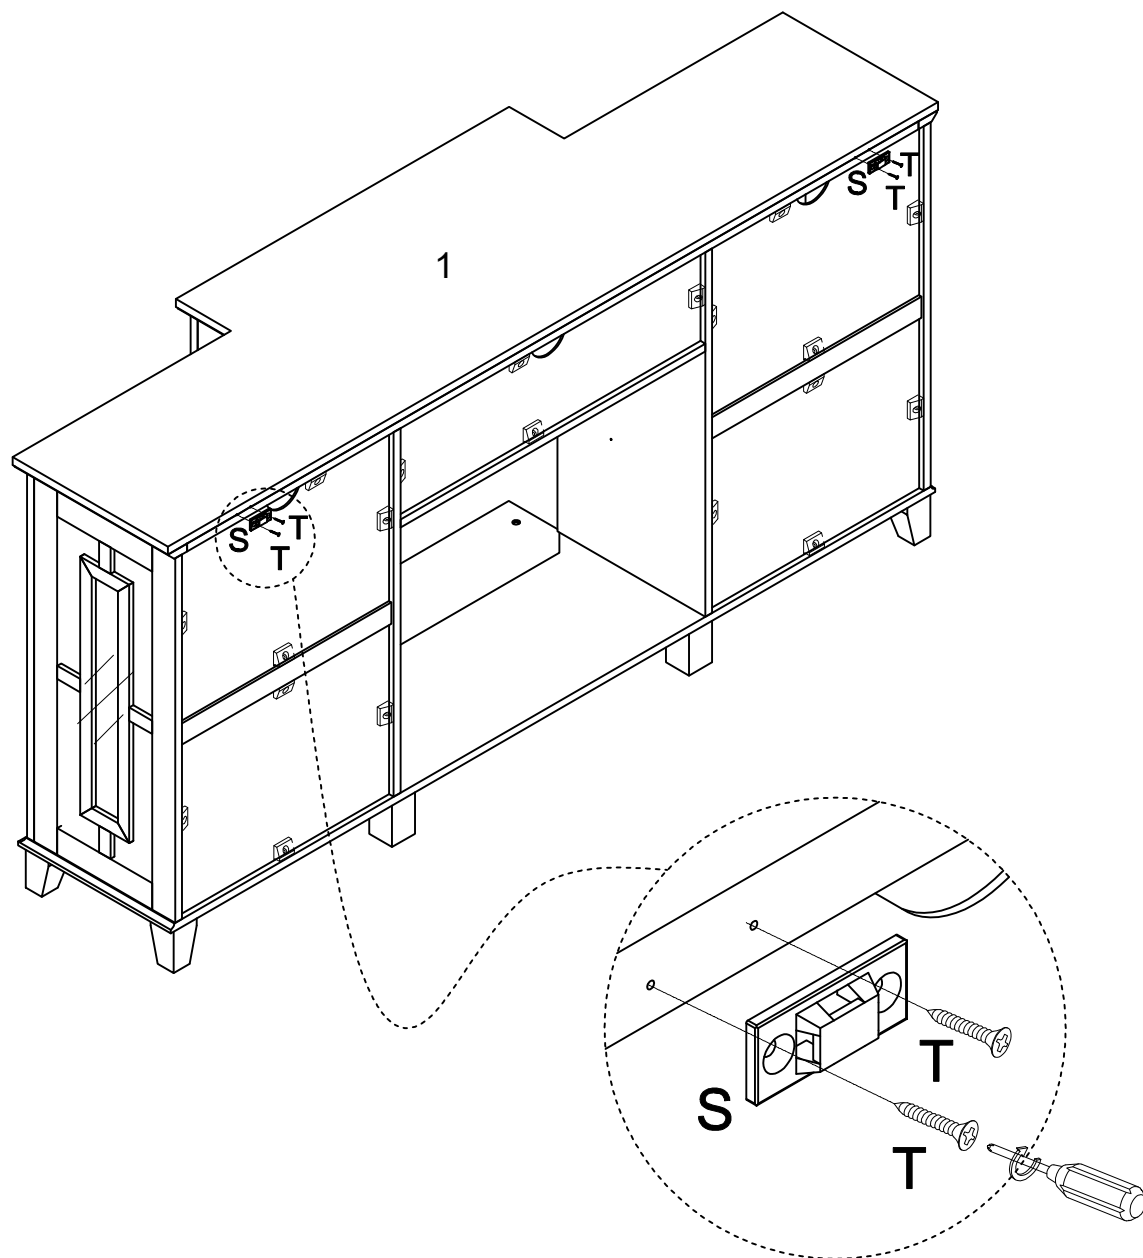


Q	P
	
X20	X20


Step 23





T	S
	
X4	X2

Step 24

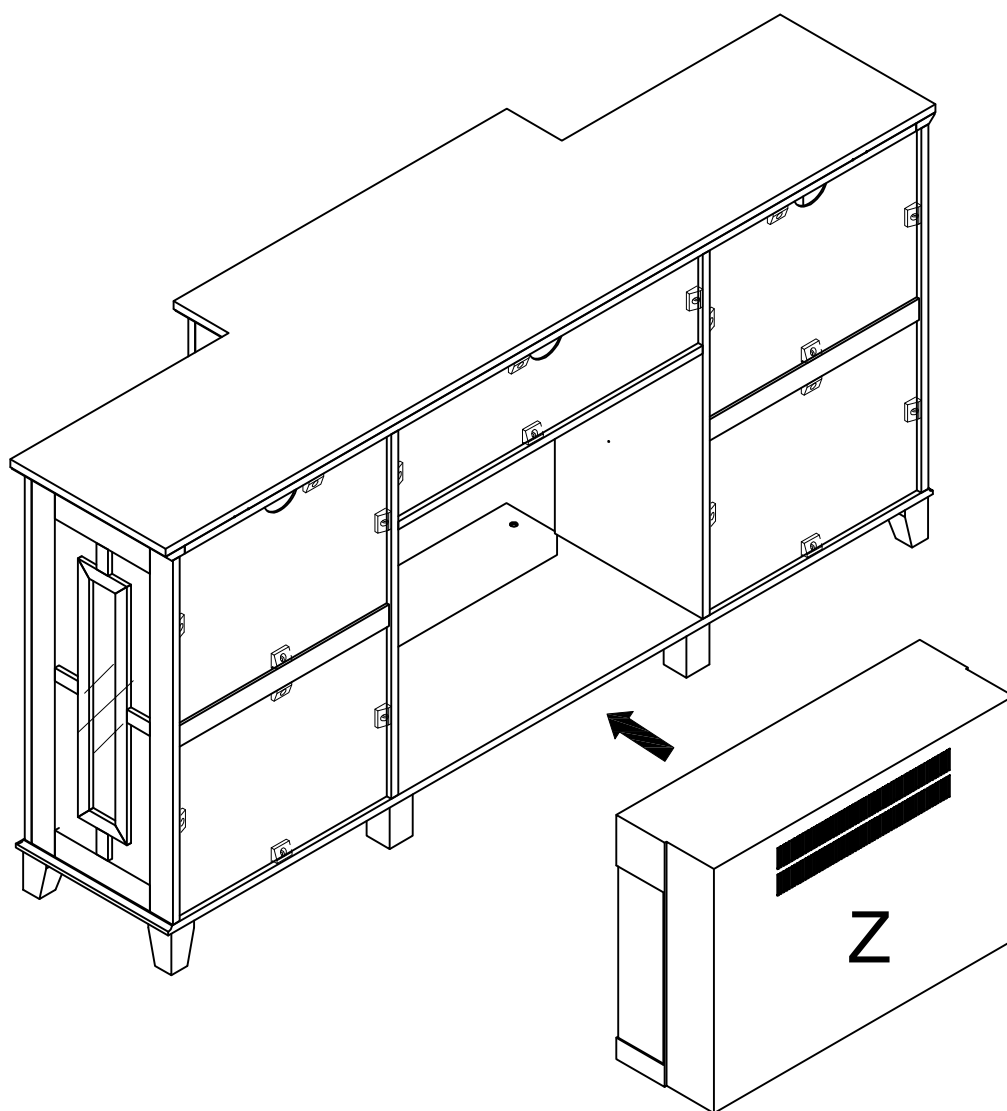






Z

X1

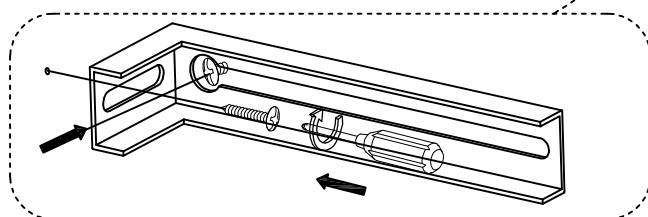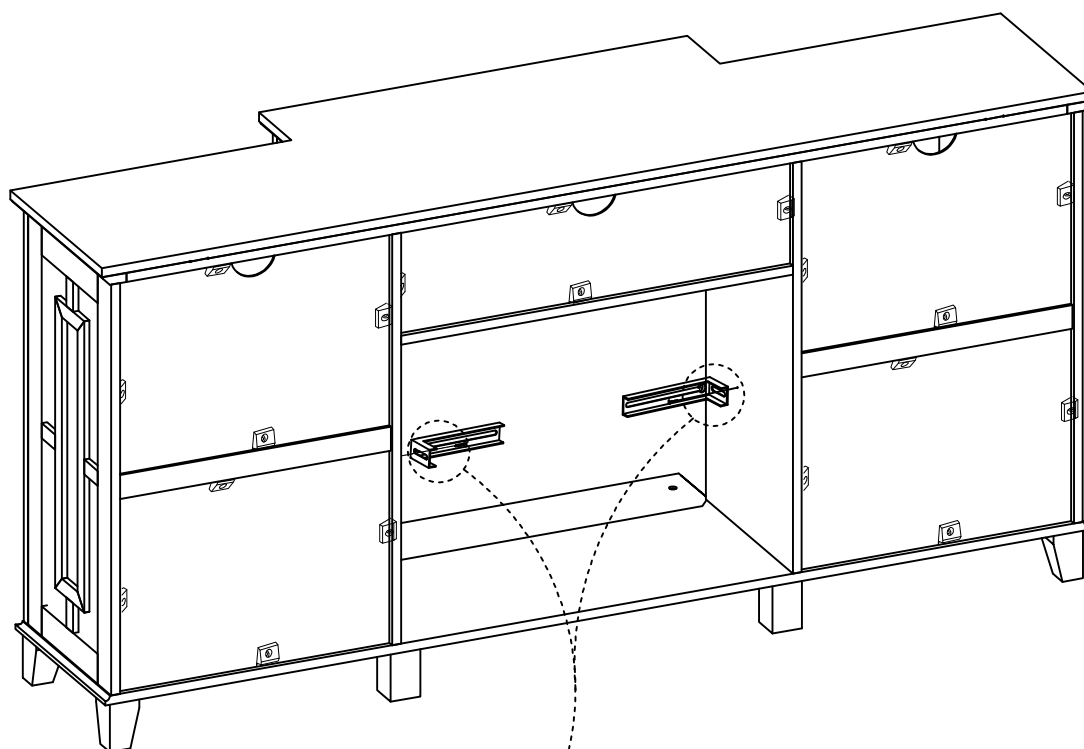Step 25




The fireplace blocking parts are in the B packing box, please refer to the fireplace installation instructions for installation steps

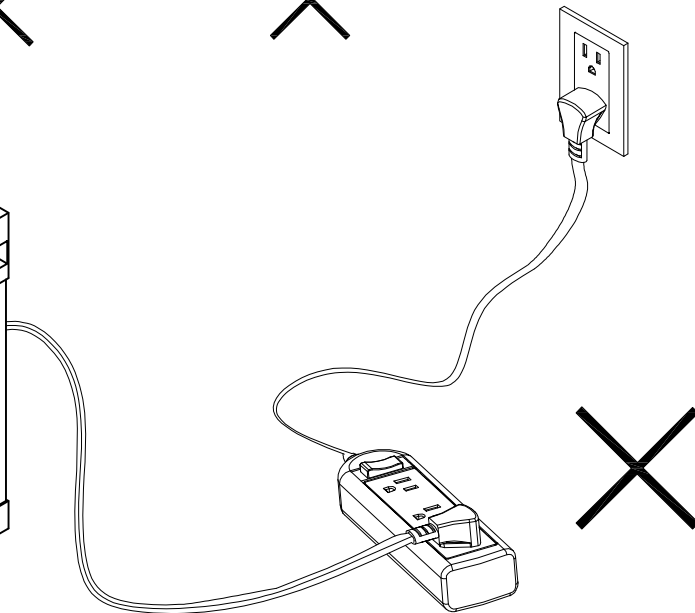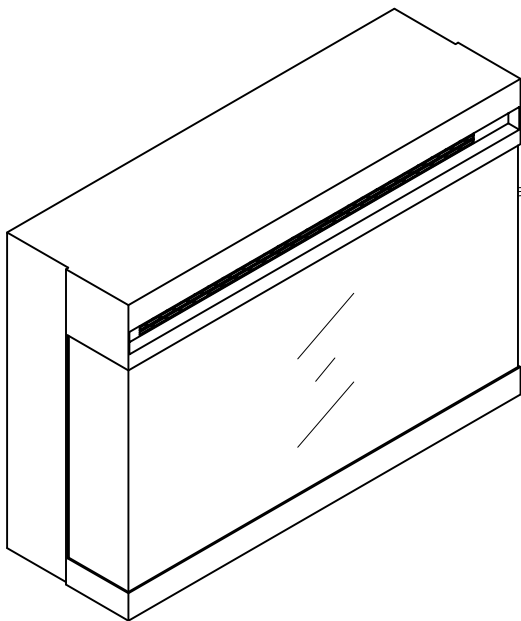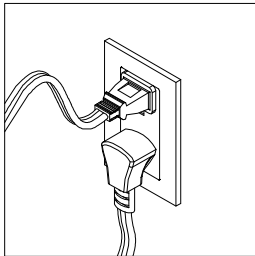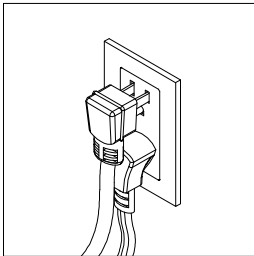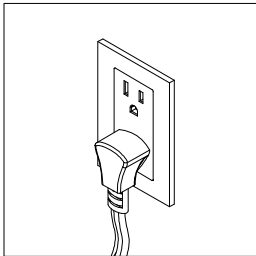Step 26





Step 27

Make Four holes 45MM deep

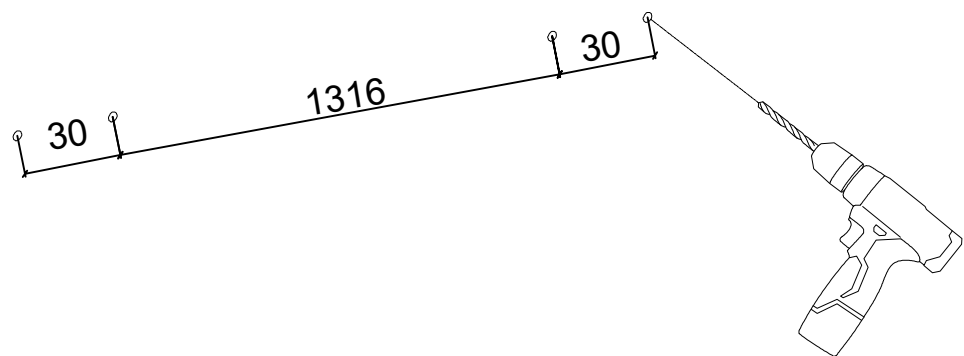




Step 28

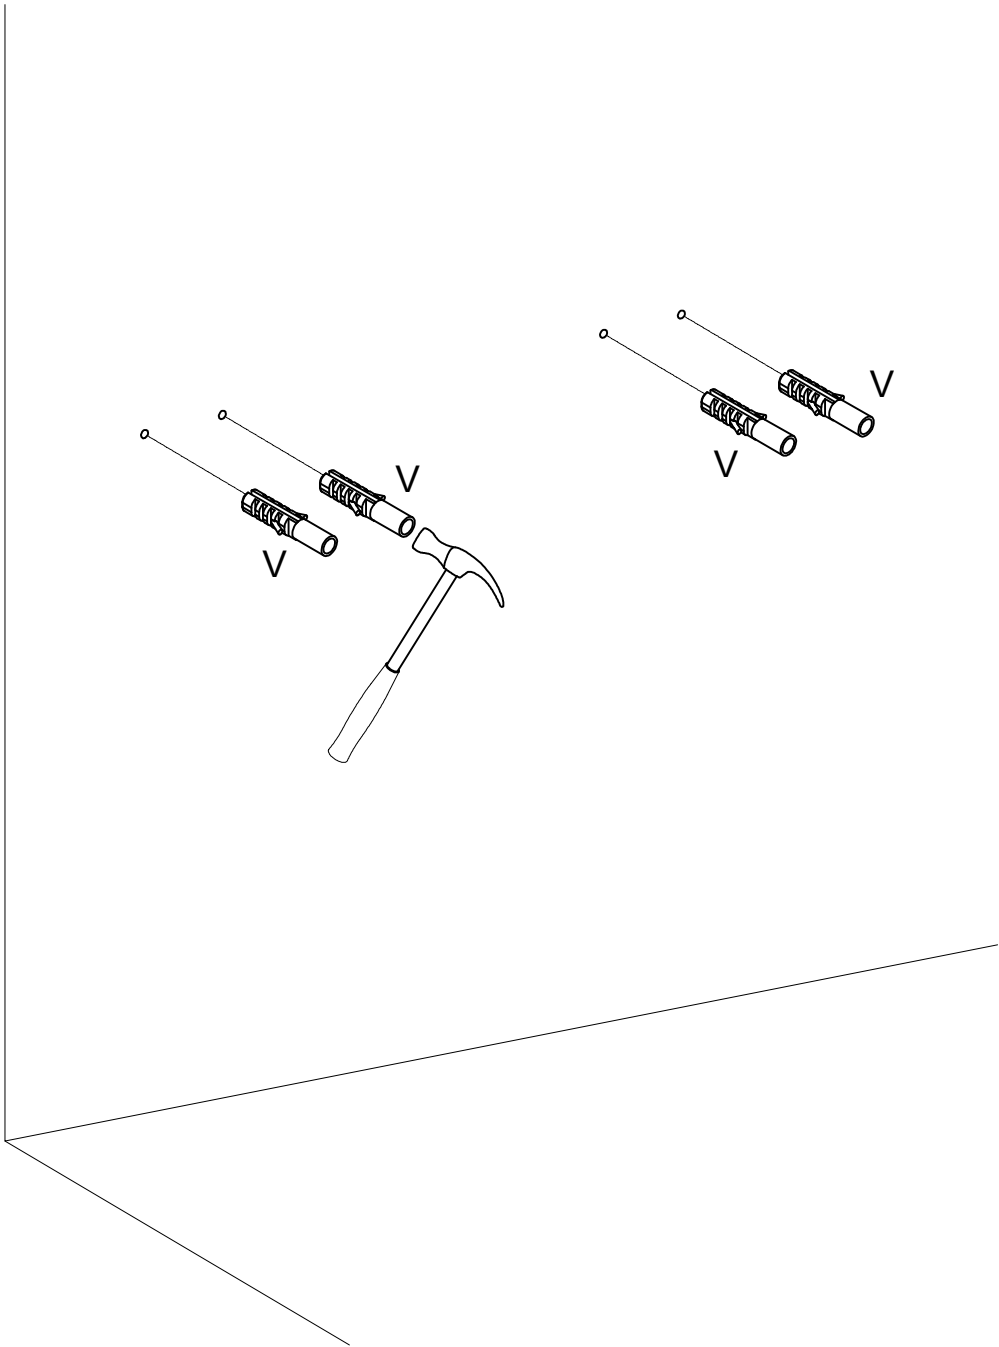


V

X4

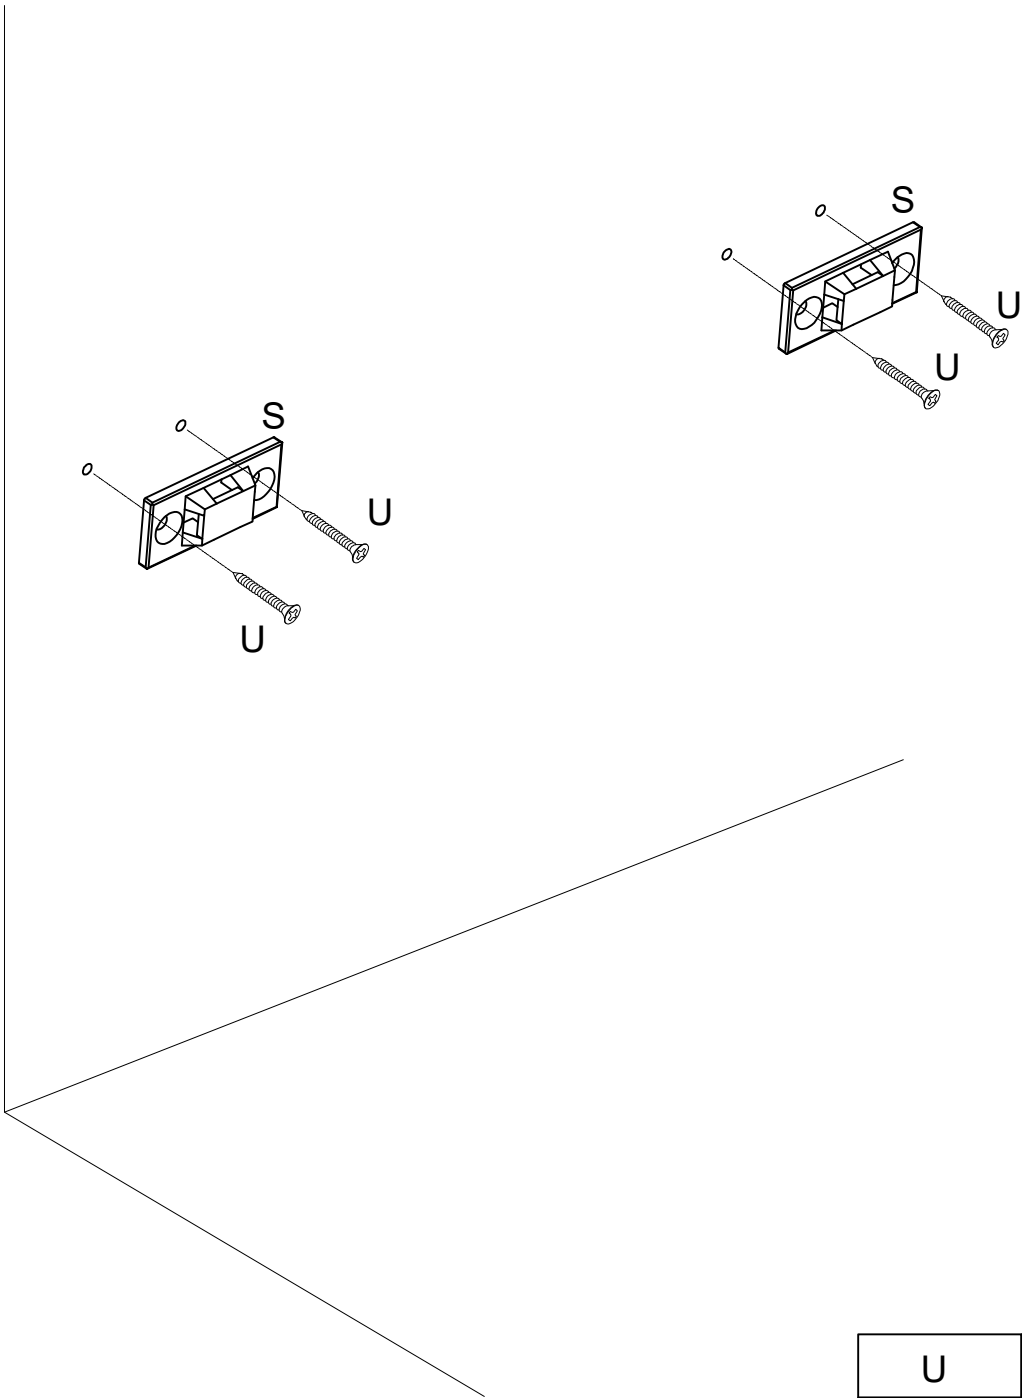
Step 29



U	S
	
X4	X2

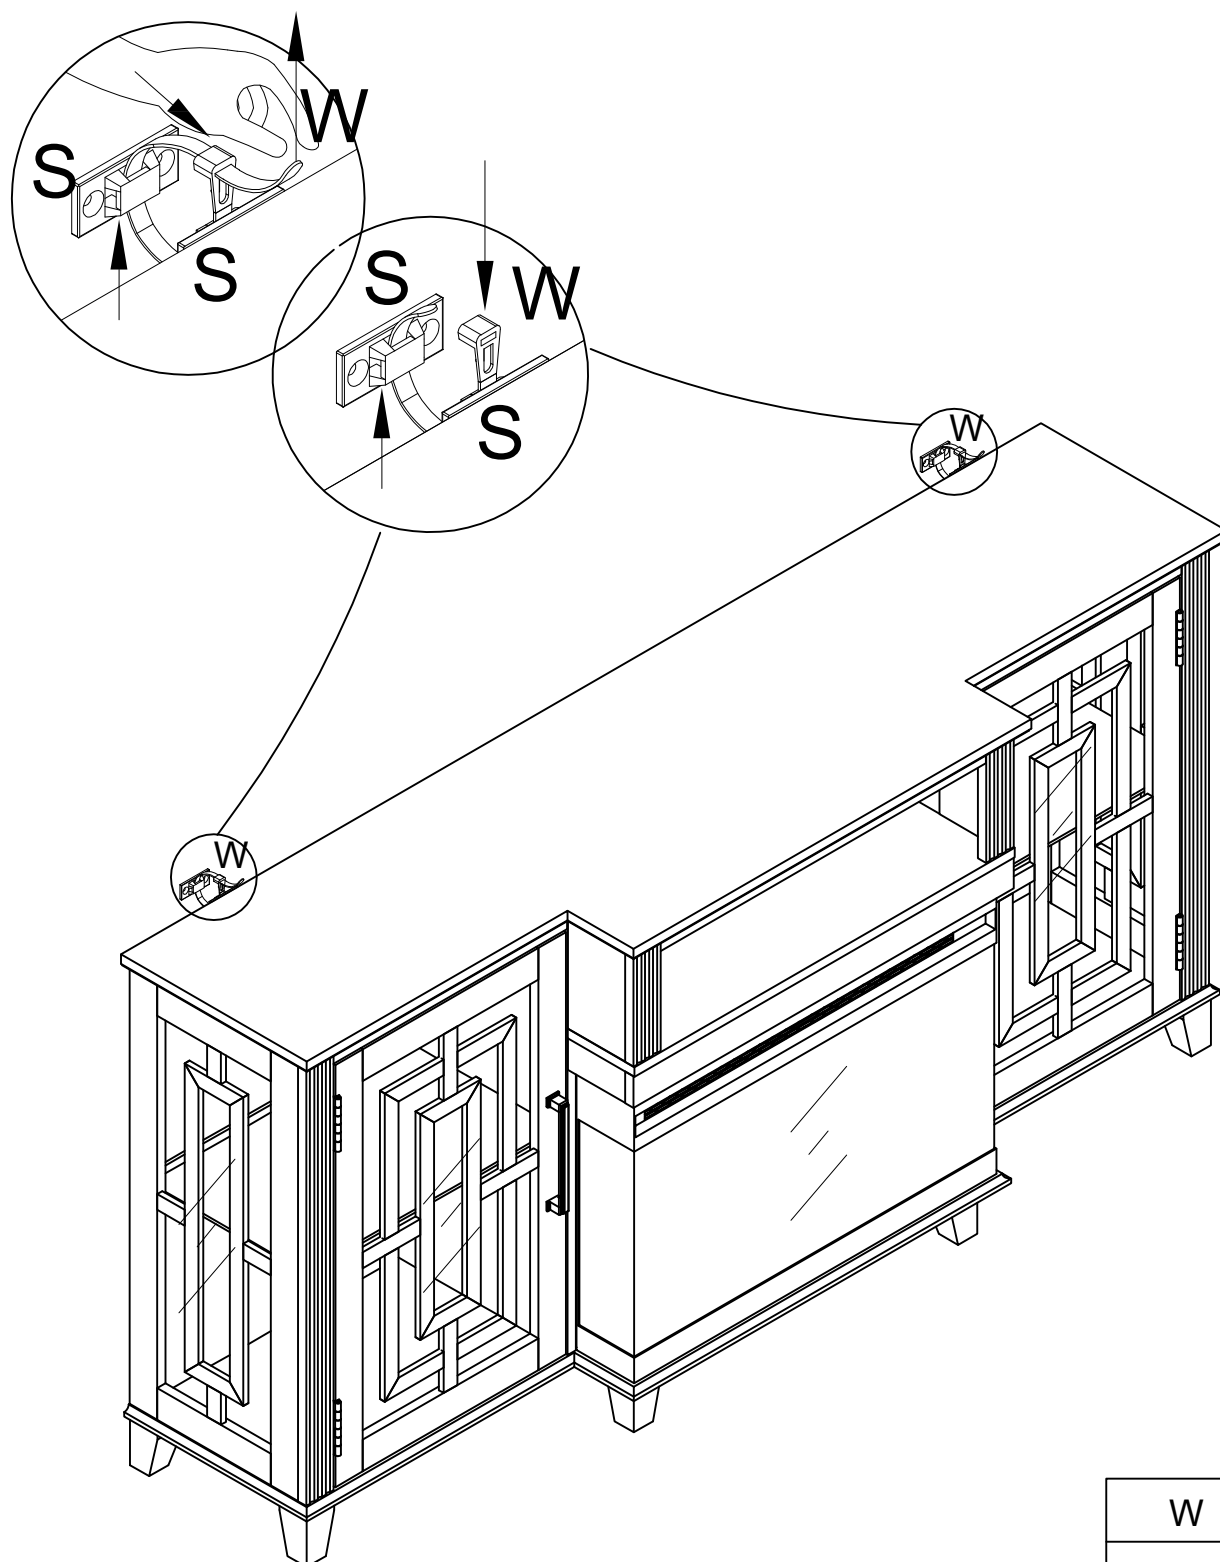Step 30



W

X2

Step 31

