


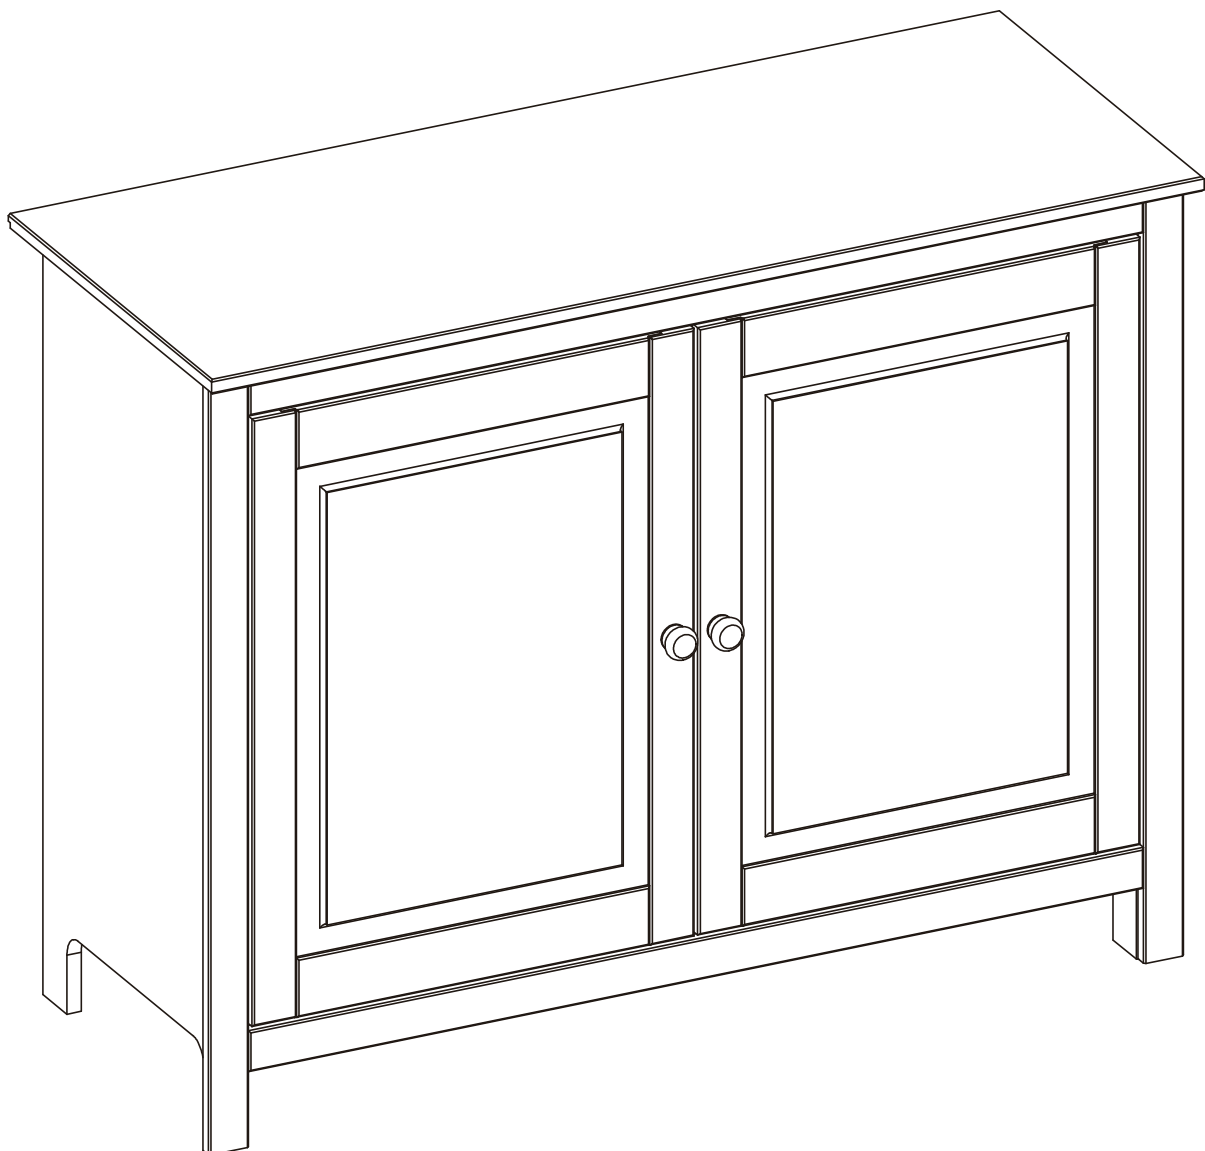
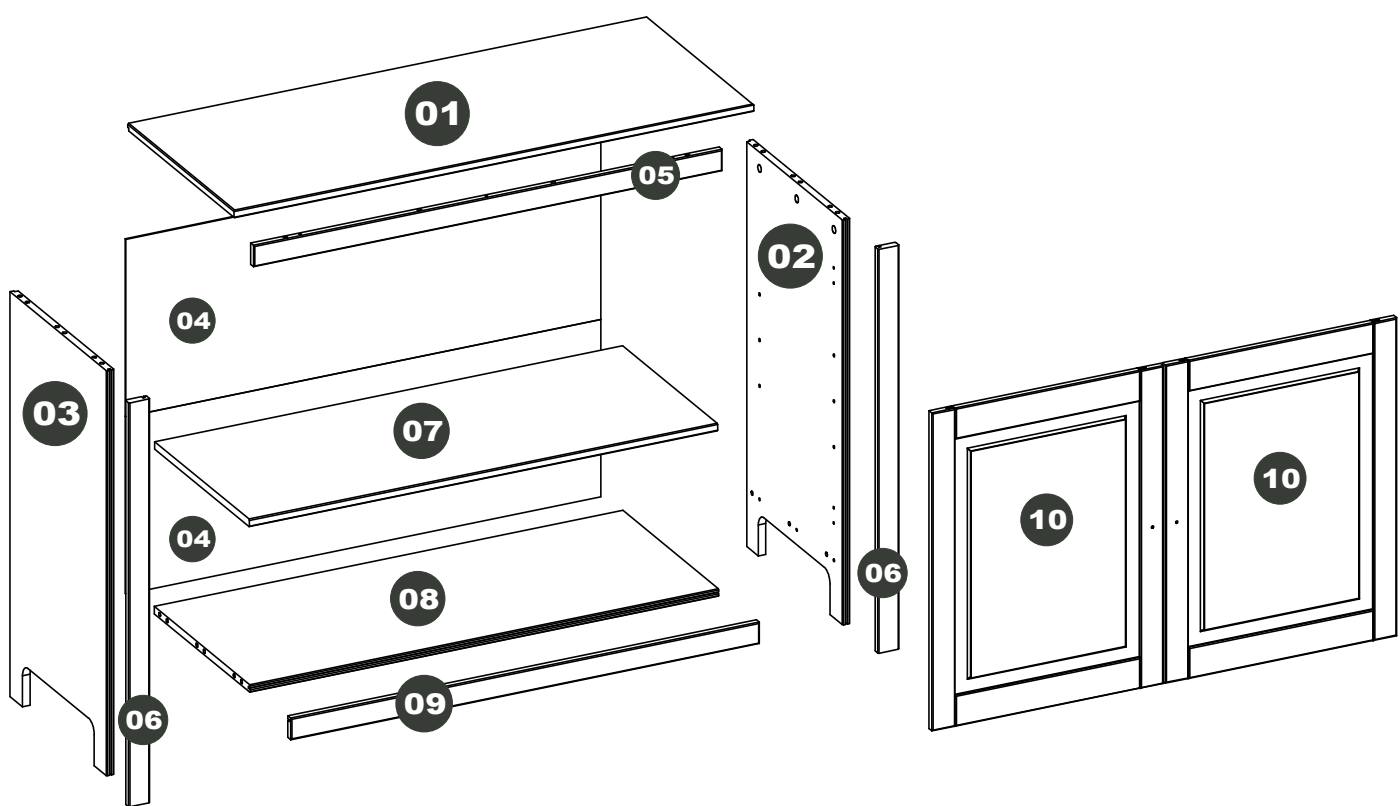



NEW 2 DOOR SIDEBOARD

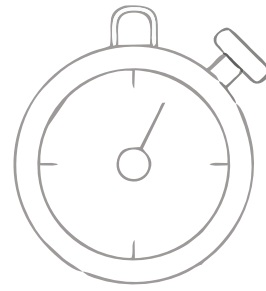


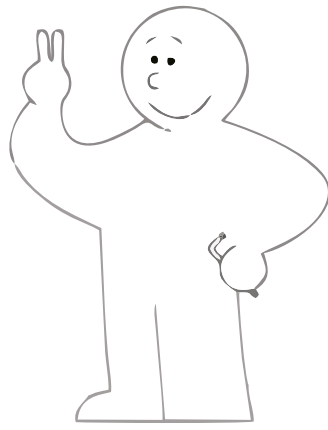


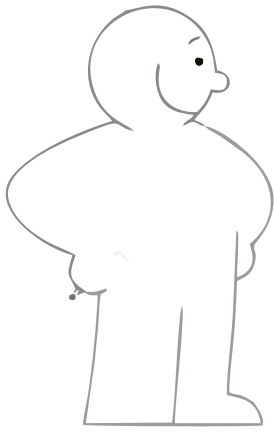


35 Min

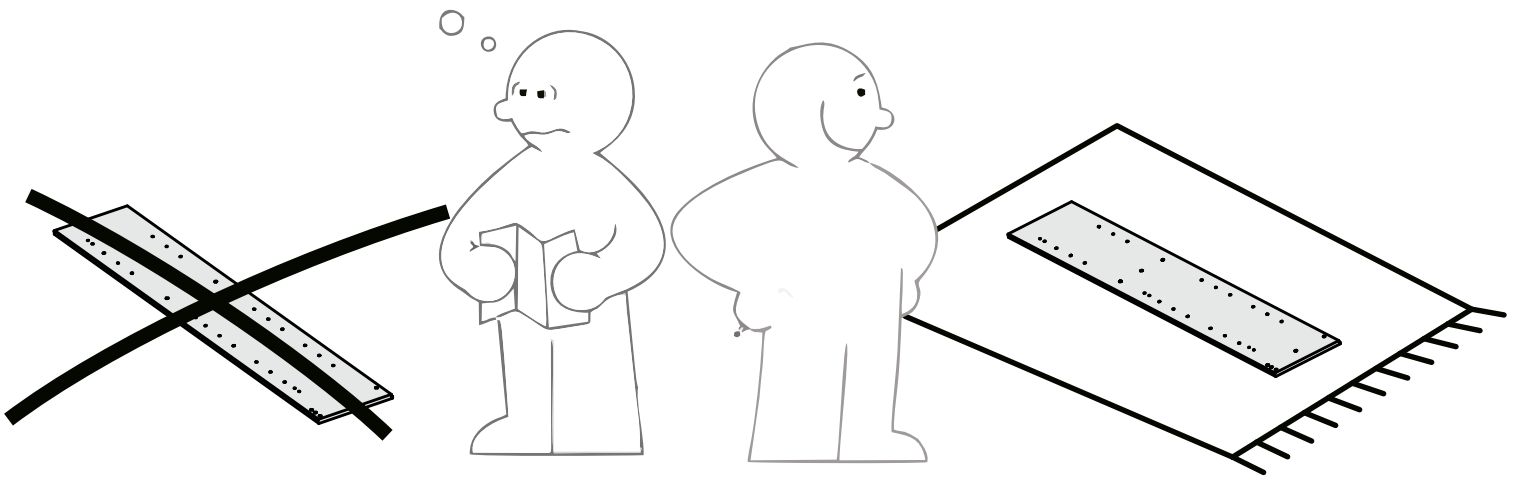

Tools required

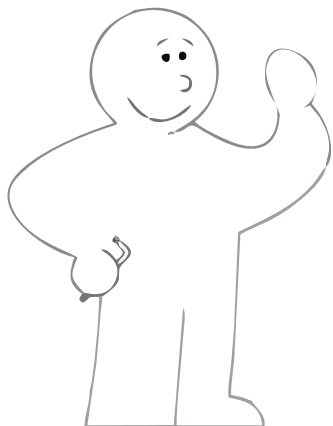


Phillips screwdriver
(medium & large)

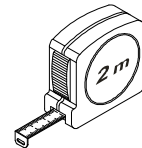















Ruler/tape
measure




Small
hammer




Eye protection
(when using a
hammer or glue)


A	 8x30mm	16	B	 4,0x40mm	06
C		01	D		09
E	 4,0x16mm	17	F		26
G		04	H		02
I		04	J		04
L		01	K		02
M		12	N		12



Ruler - Use this ruler to help correctly identify the screws

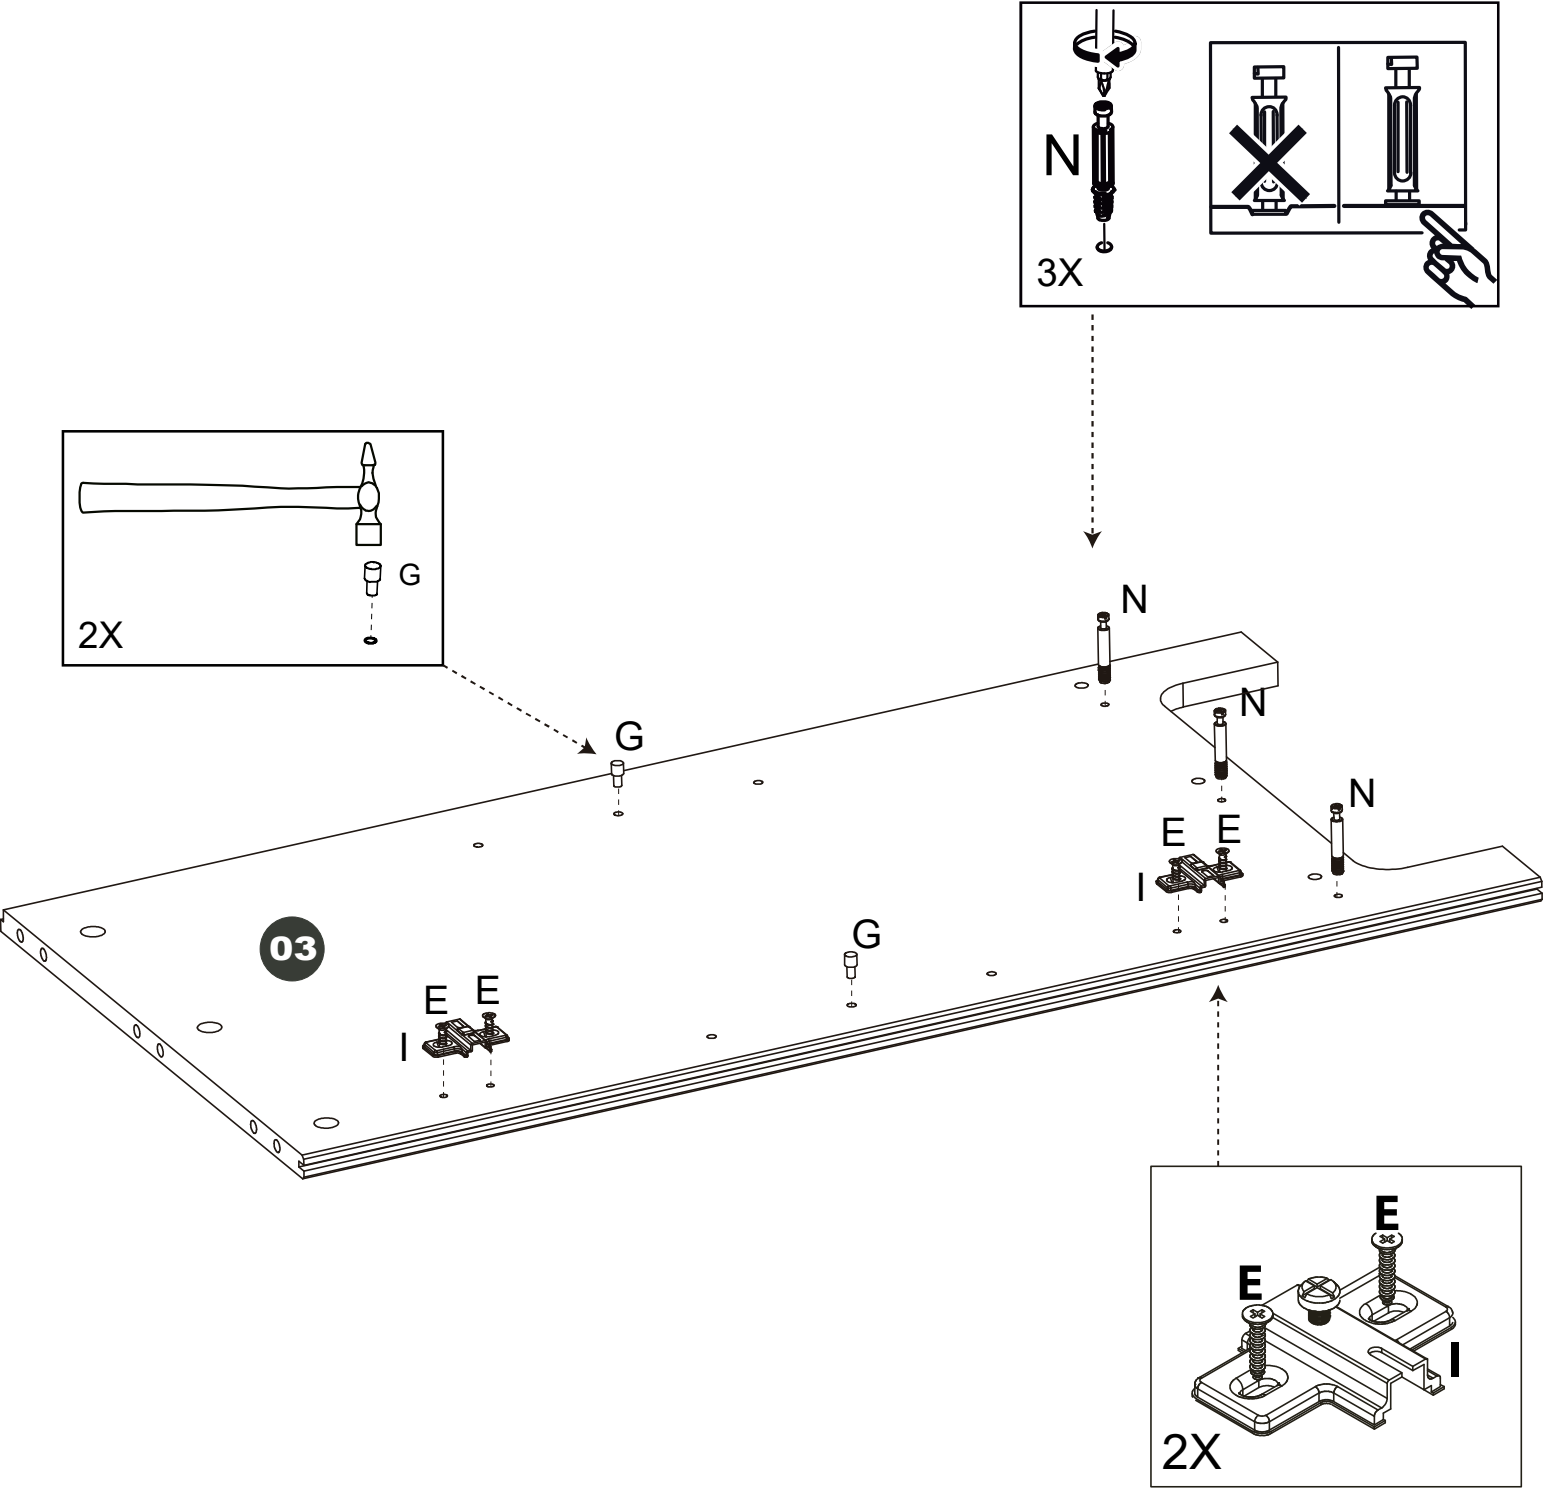






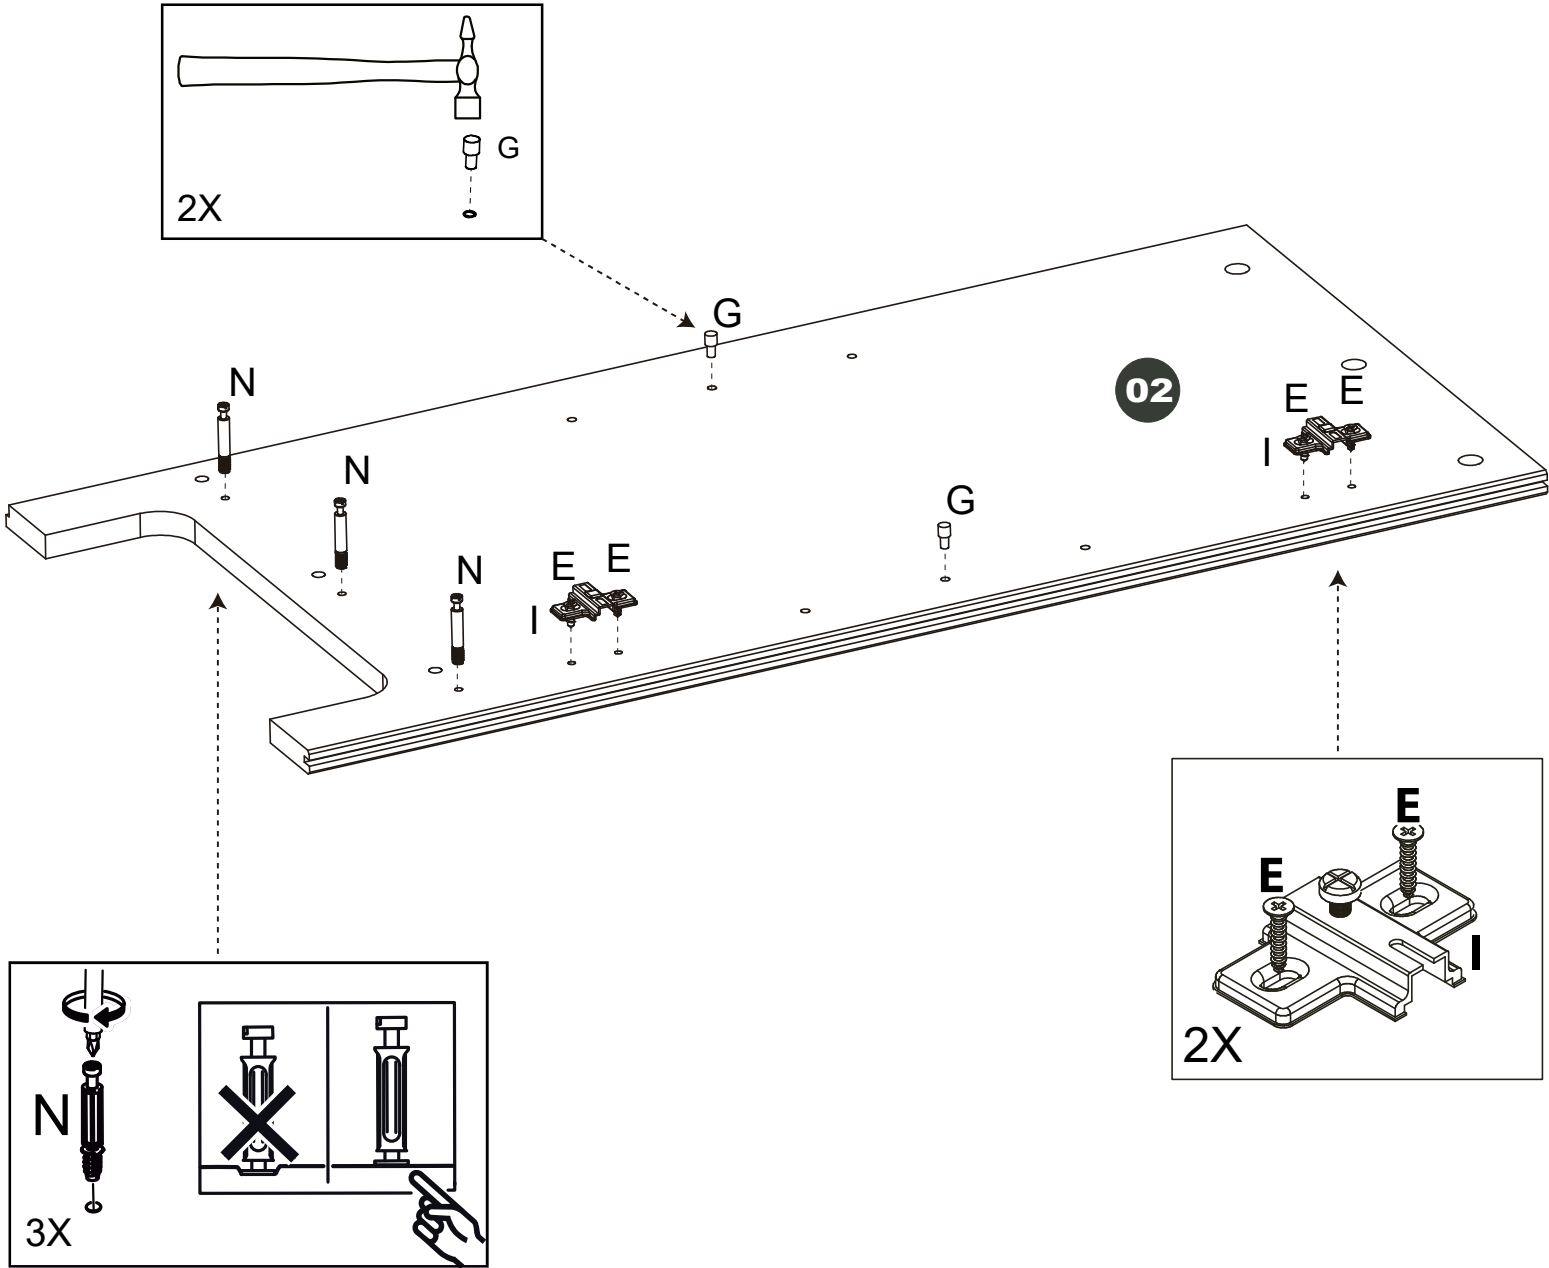

N		03	E		4,0x16mm	04	G		02	I		02
---	---	----	---	---	----------	----	---	---	----	---	---	----






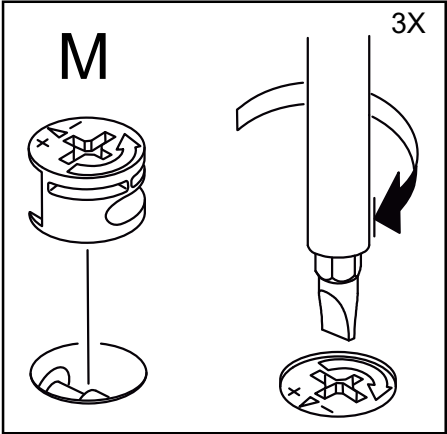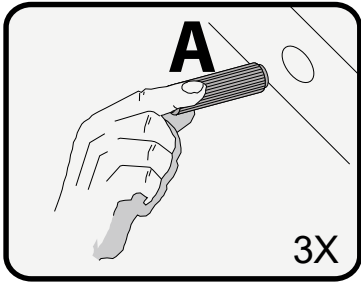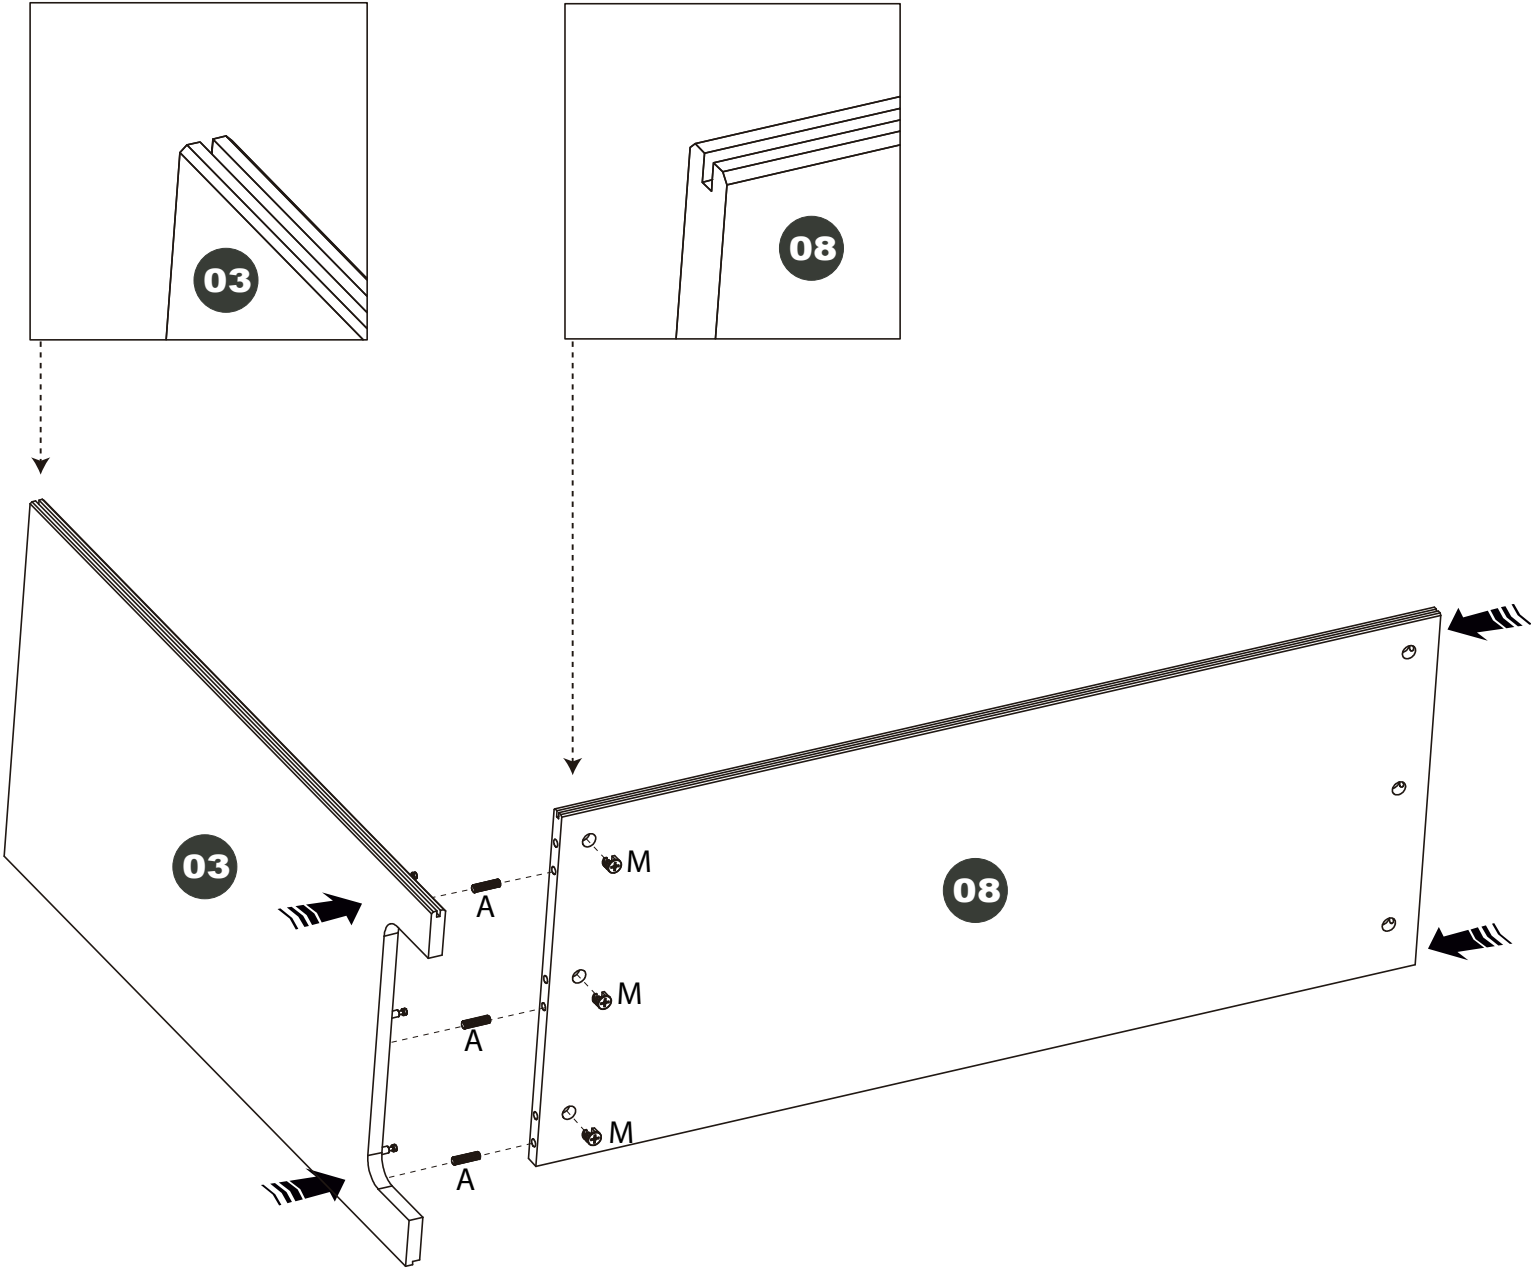

N		03	E		04	G		02	I		02
					4,0x16mm						

03

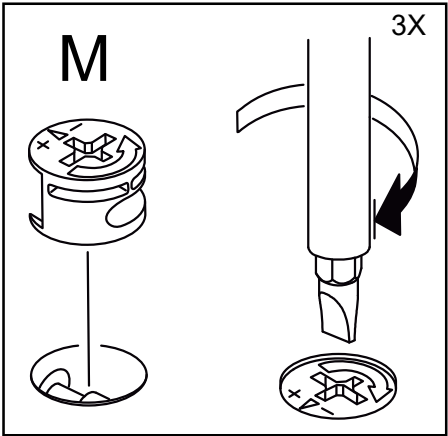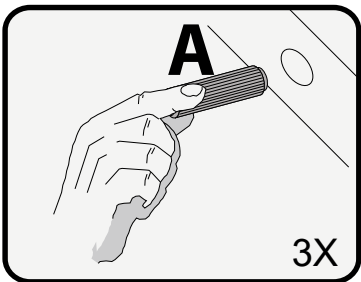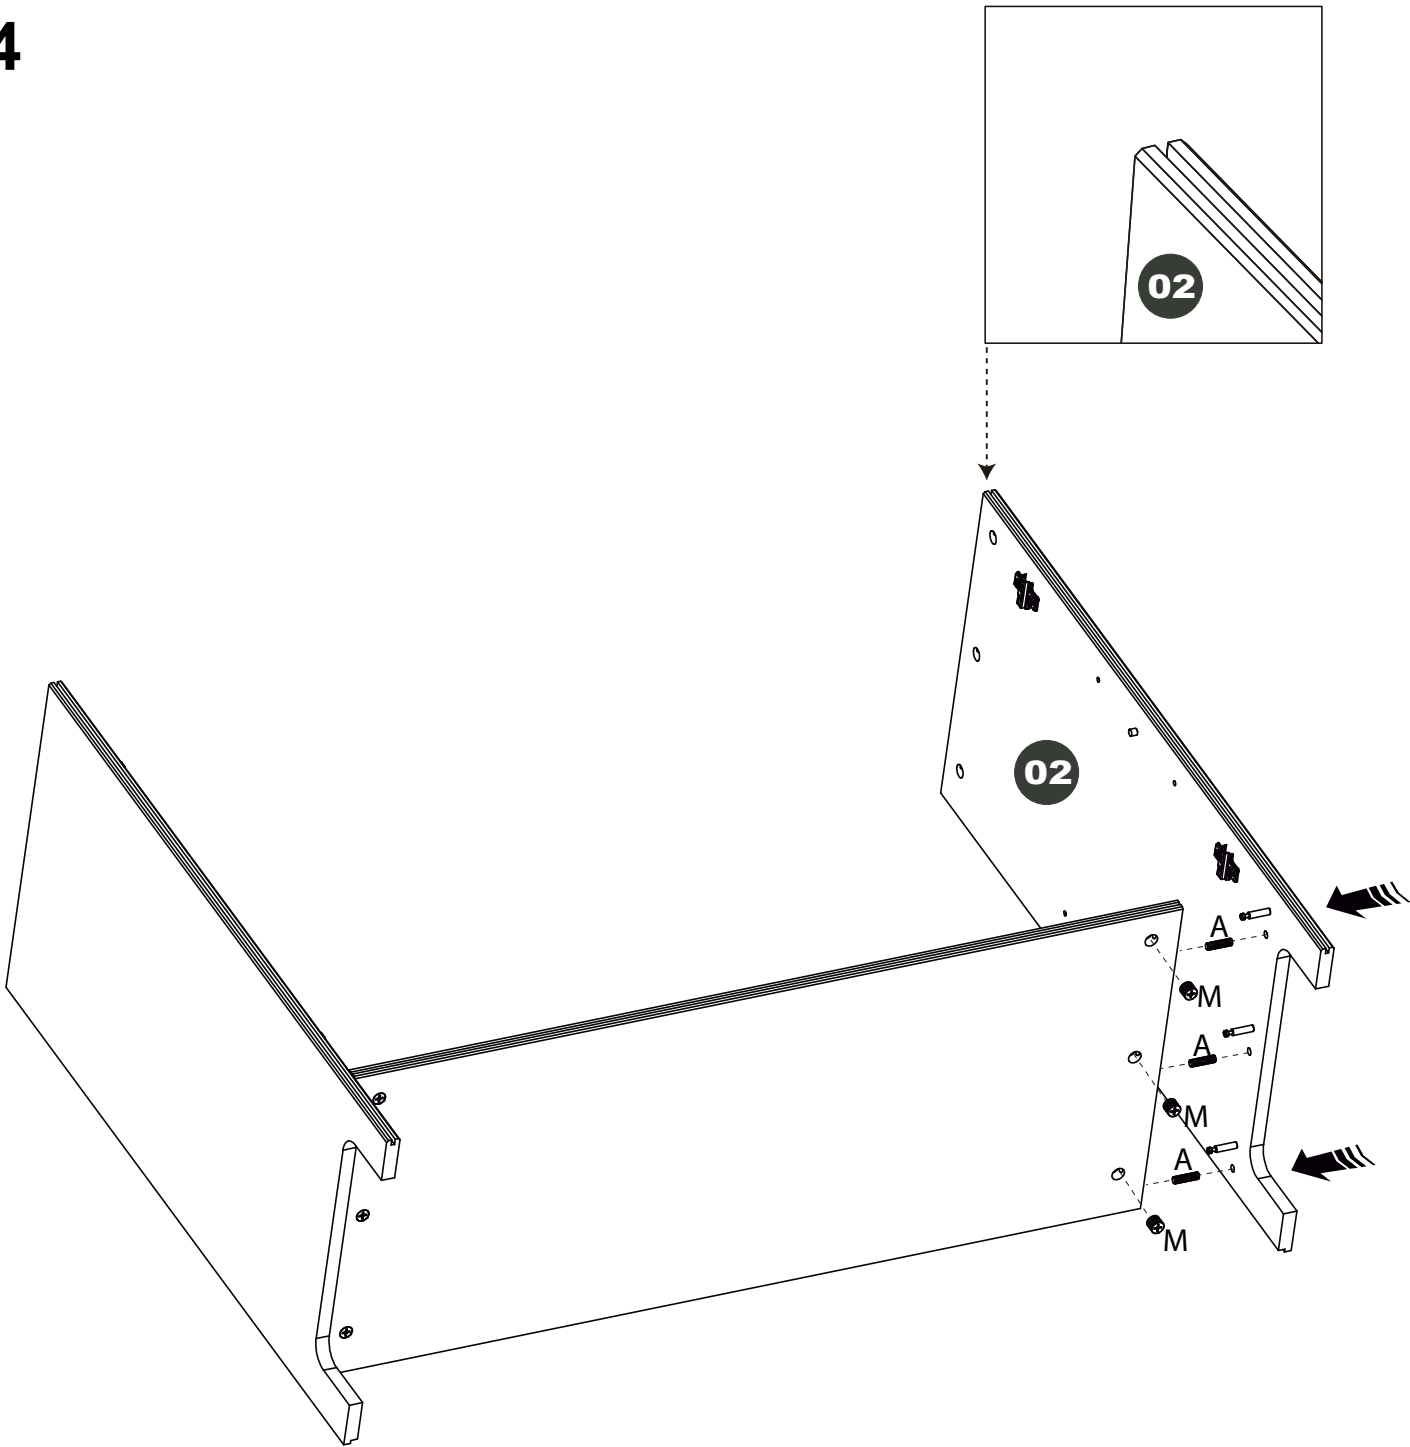



M		03	A		03
---	---	----	---	---	----




M		03	A		03
---	---	----	---	---	----


8x30mm

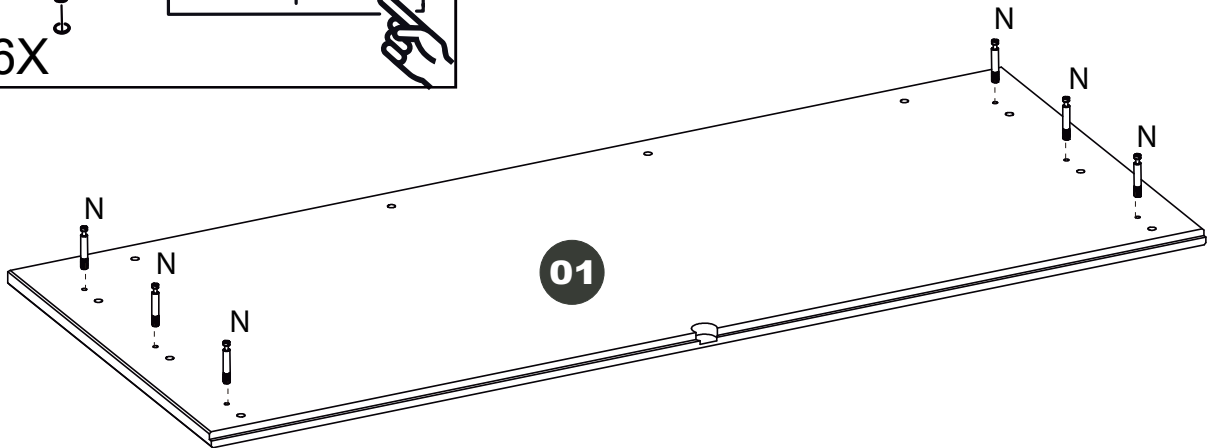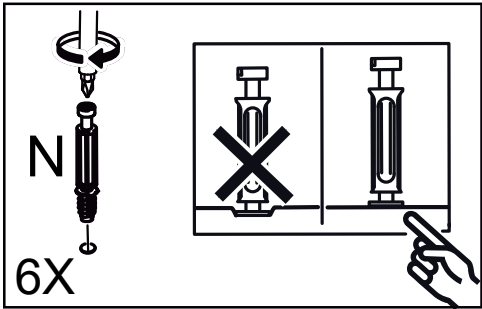

05







N		06
---	---	----

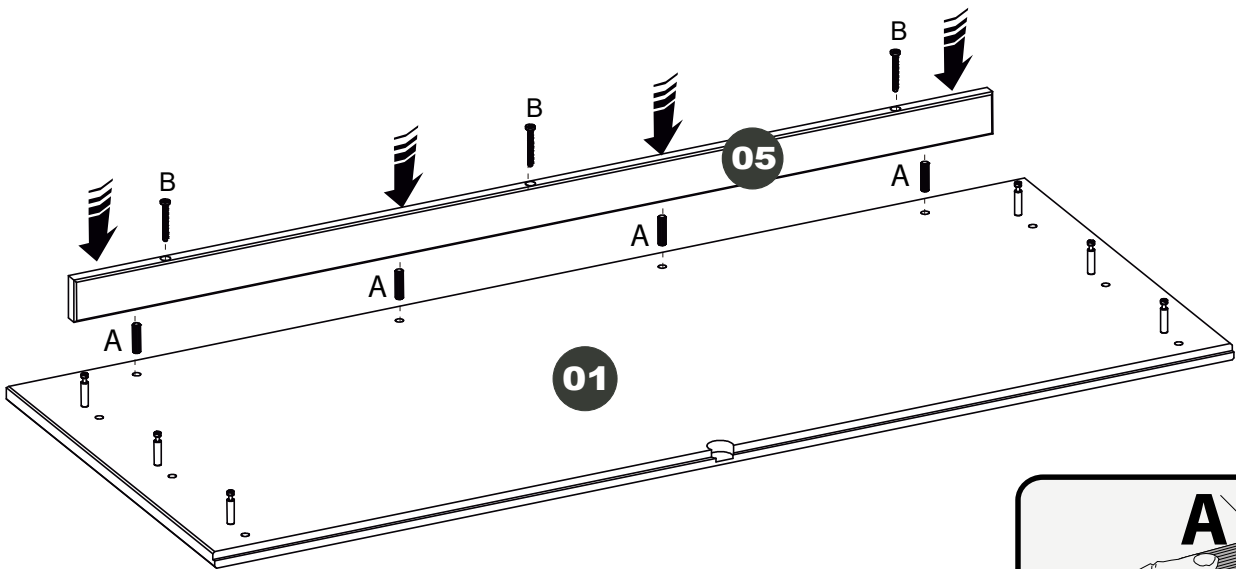

06

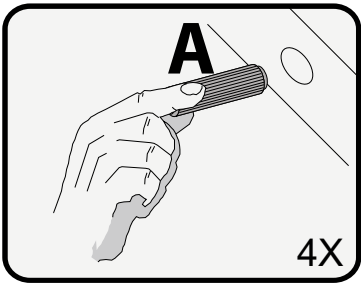




A		04	B		03
8x30mm			4,0x40mm		

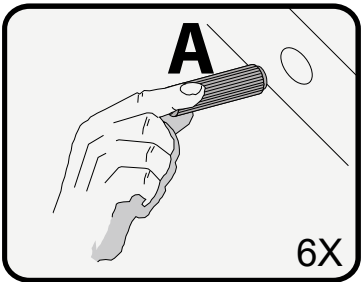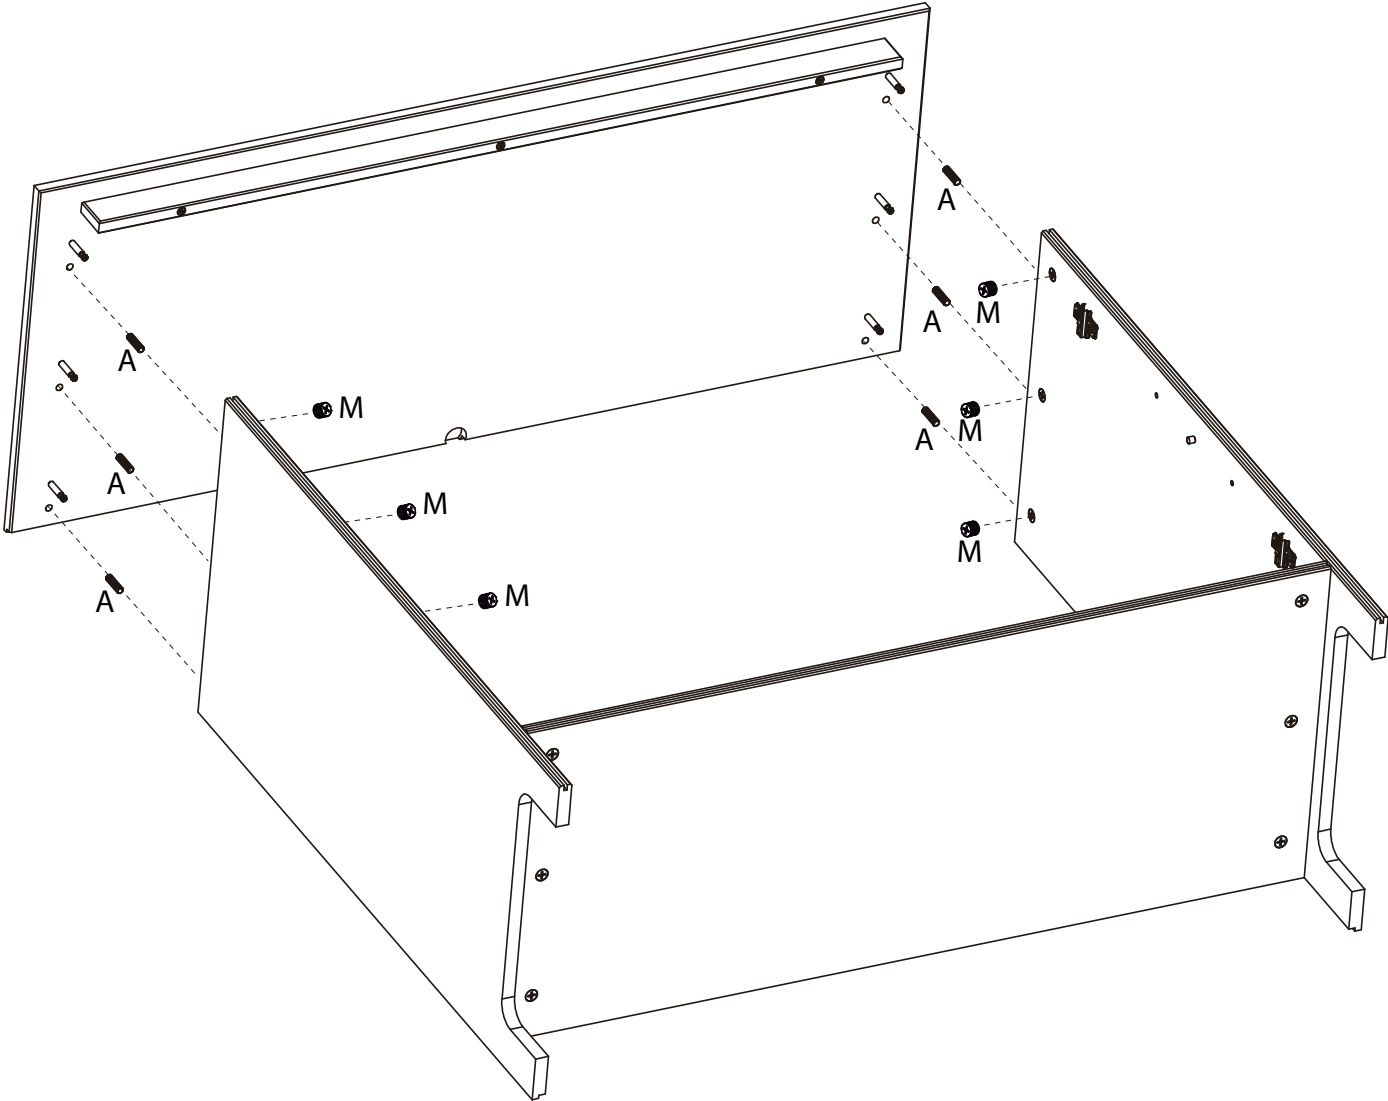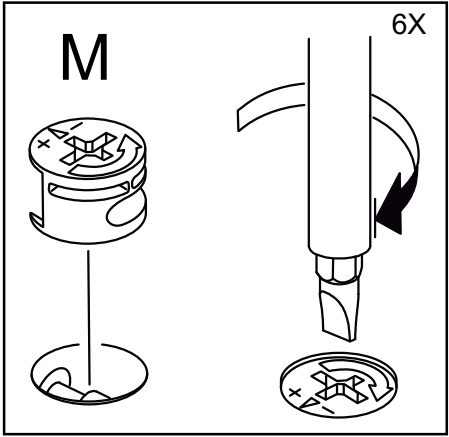






M		06	A		06
<small>8x30mm</small>					

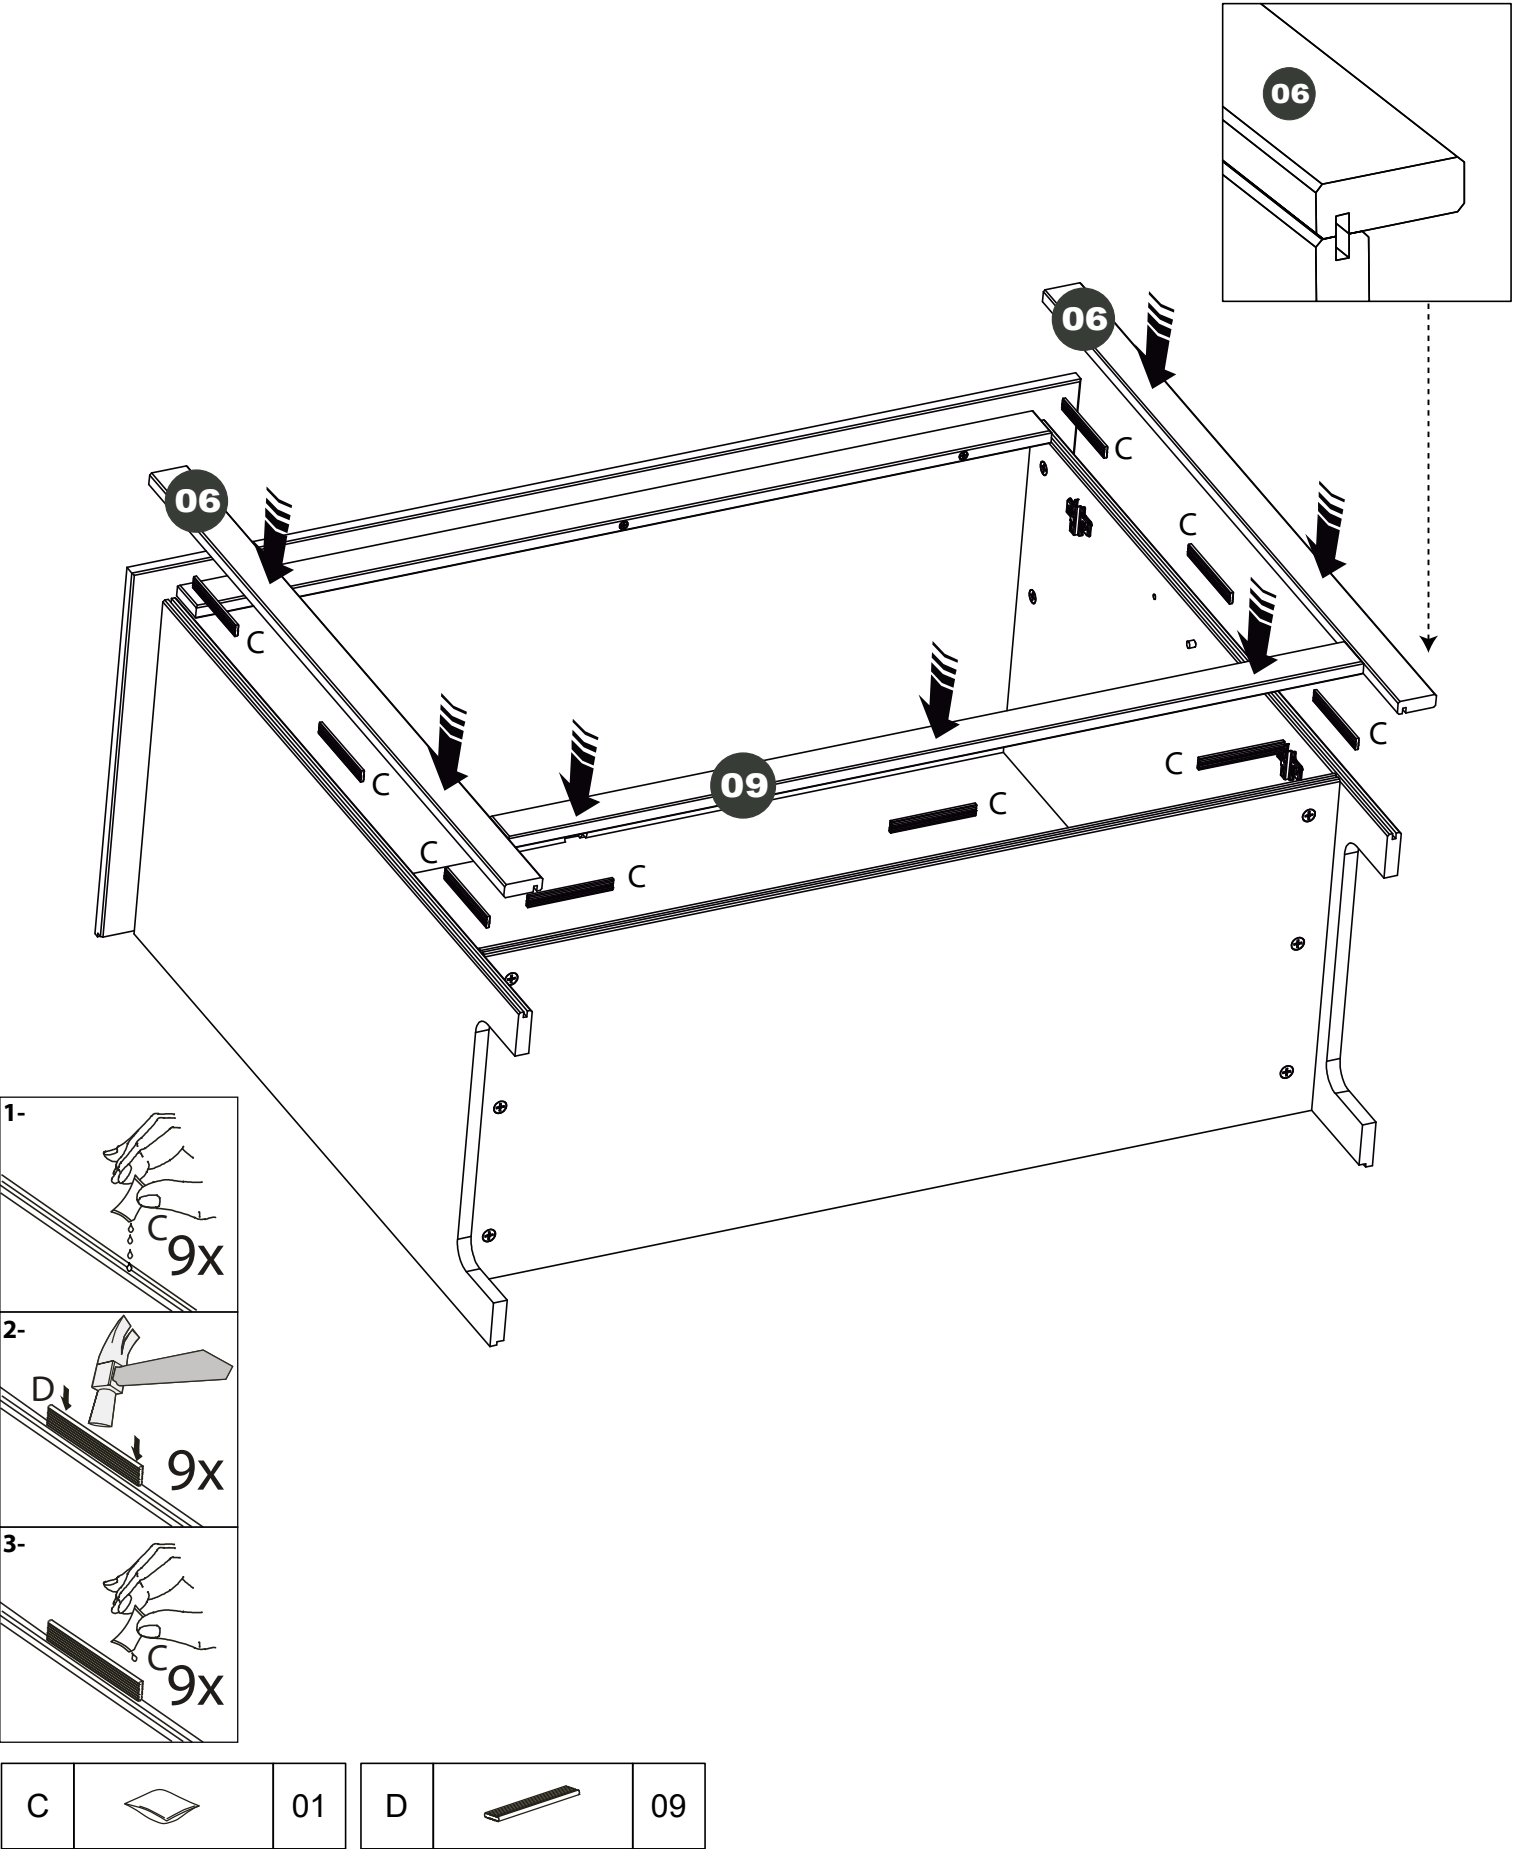

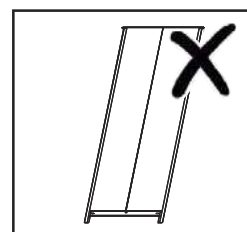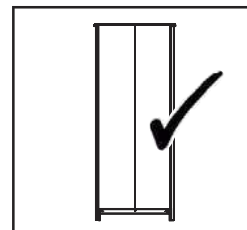

Important: Cabinet **MUST** be 'square' when back panel is attached.

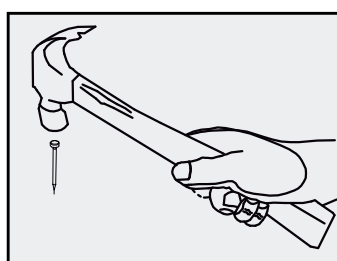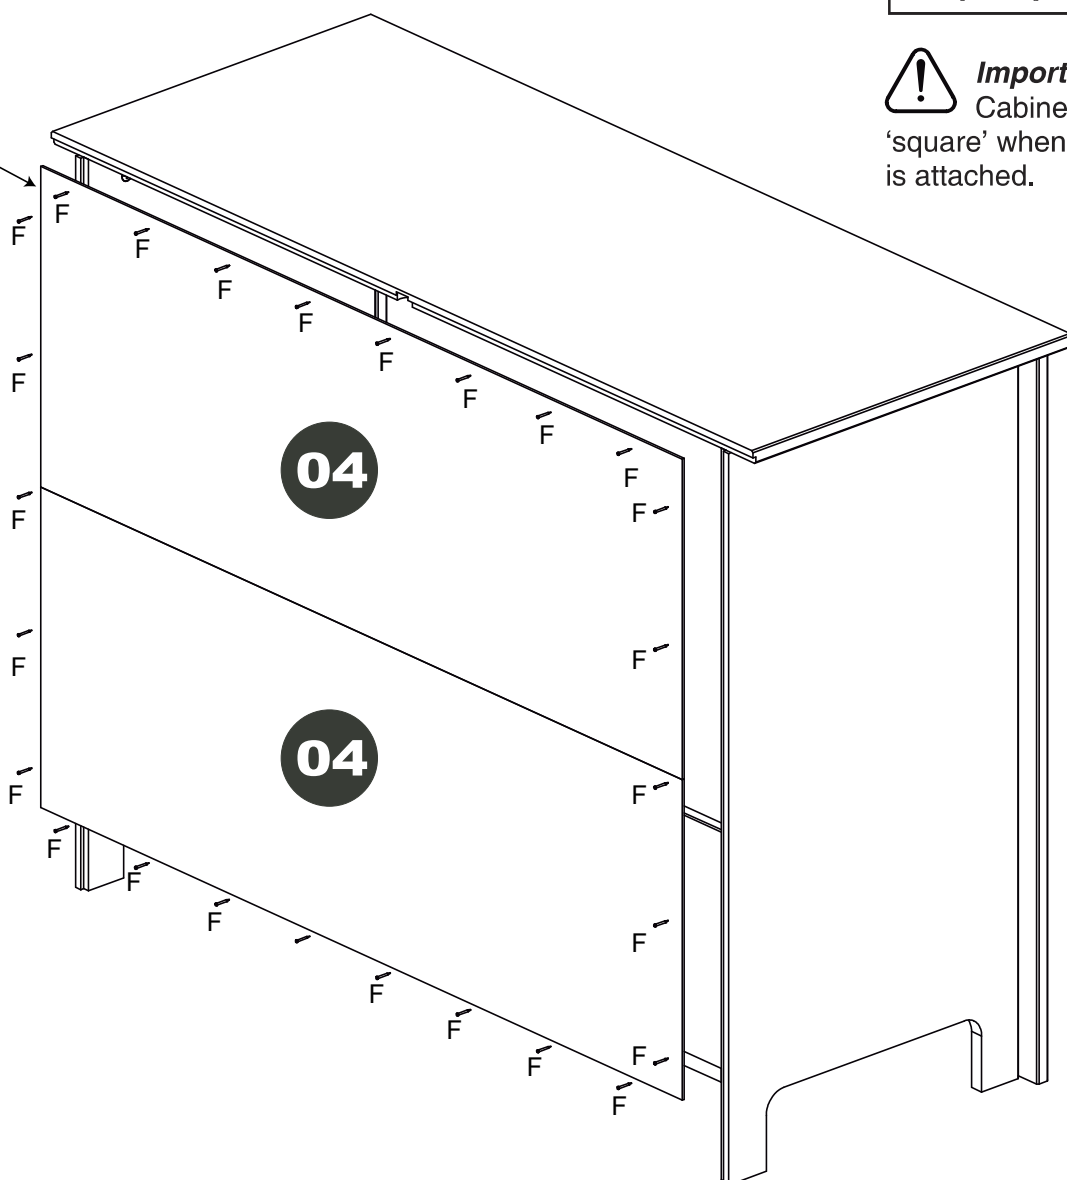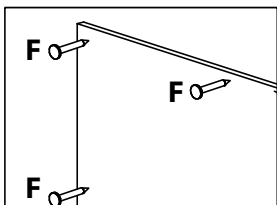



Use all back panels nails. Evenly spaced, they help make the unit strong.

F		26
---	--	----


10



Position the furniture into place and make a mark to the wall, as shown.

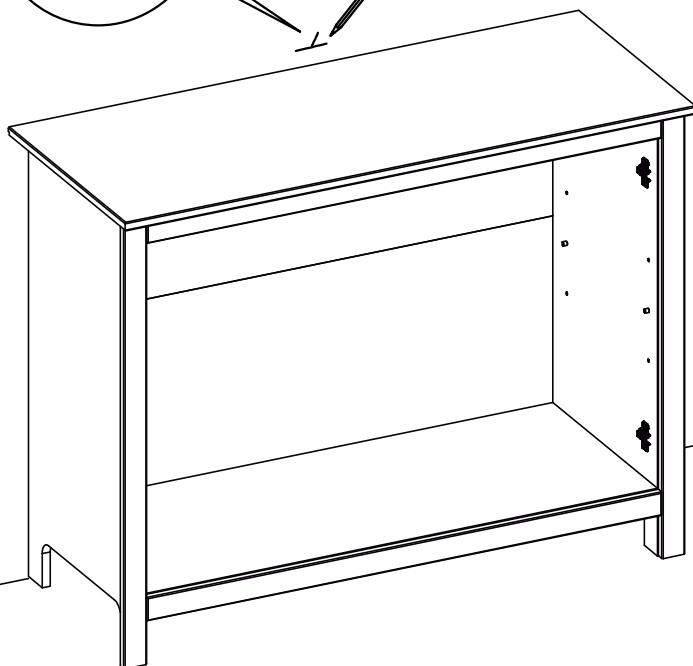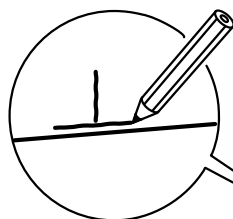

11

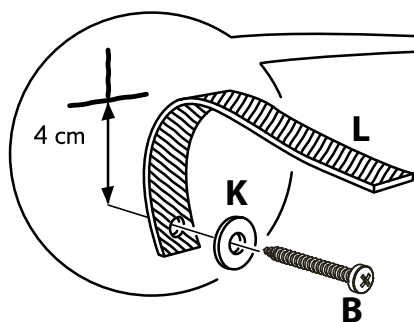


With help, carefully move the furniture away to access the mark in the wall.

Drill hole on wall 4cm below the mark, as shown in the diagram.



Before drilling, check wall for hidden pipes and cables.

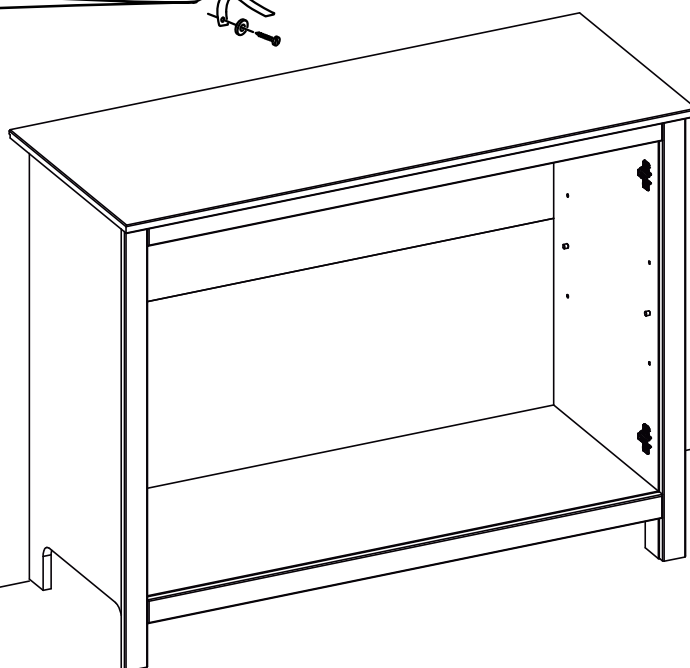



K		01	L		01	B		01
---	--	----	---	--	----	---	--	----

4.0x40mm

12





With help, carefully move the furniture back to position and insert wall strap into slot on top panel, as shown.

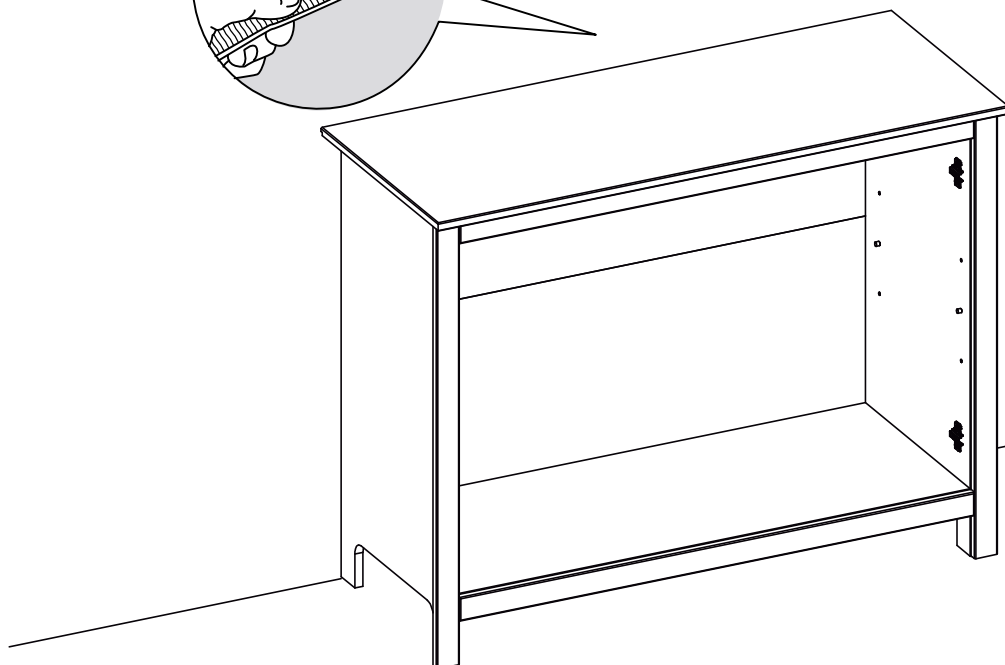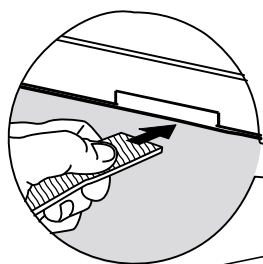



13

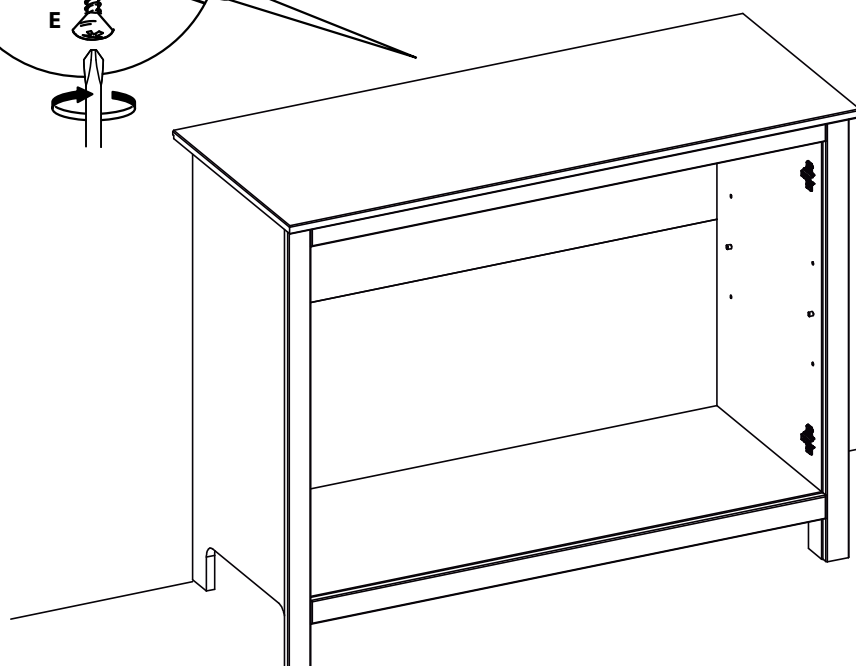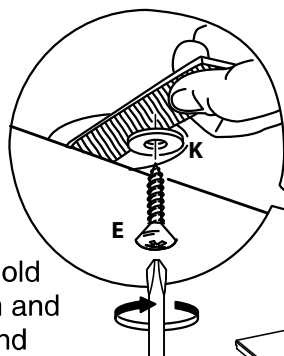

Inside the cabinet, hold wall strap in position and fix it using washer and screw, as shown.




K		01
---	---	----


E		01
---	---	----



4,0x16mm

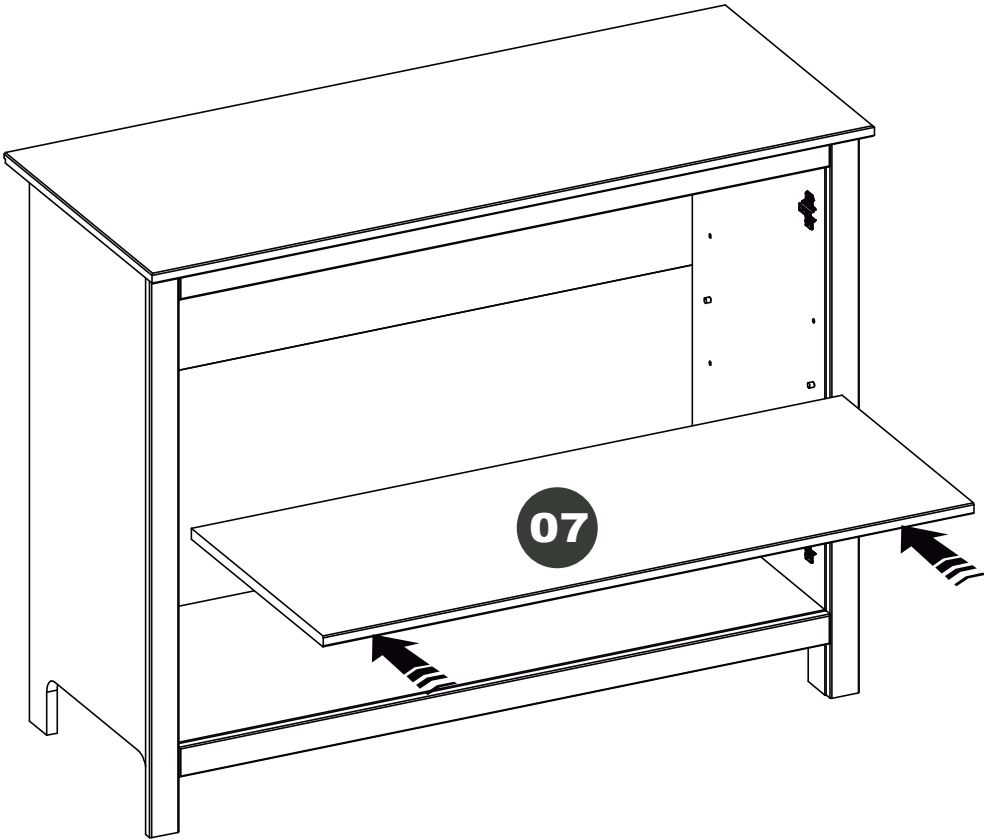14

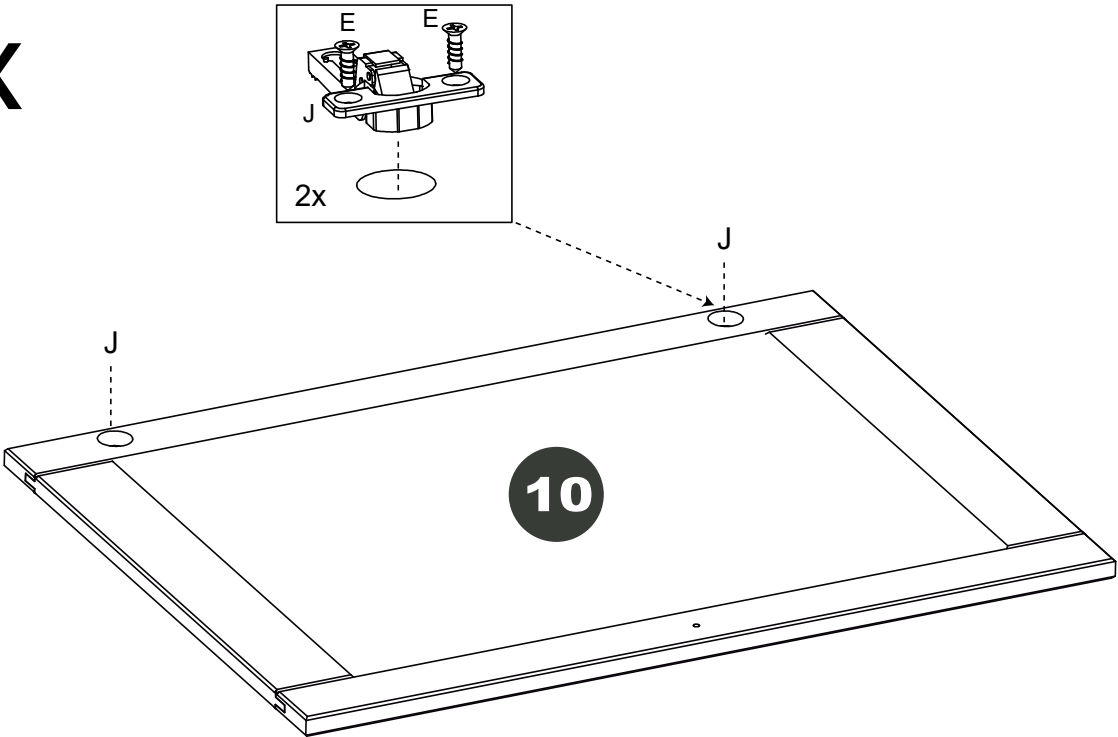

15
2x



J		04	E		08
4,0x16mm					

