

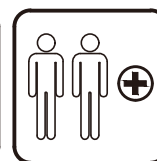
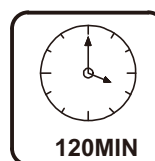
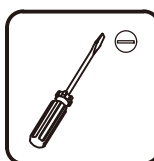



Installation & Assembly

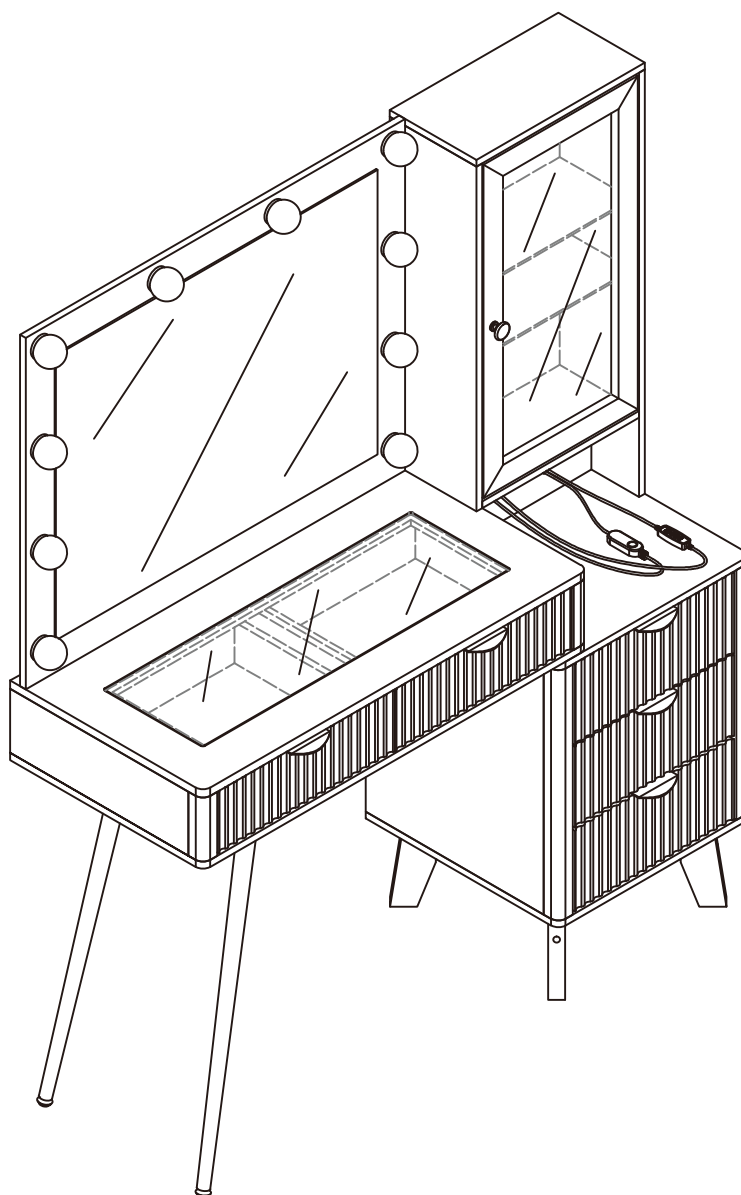


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

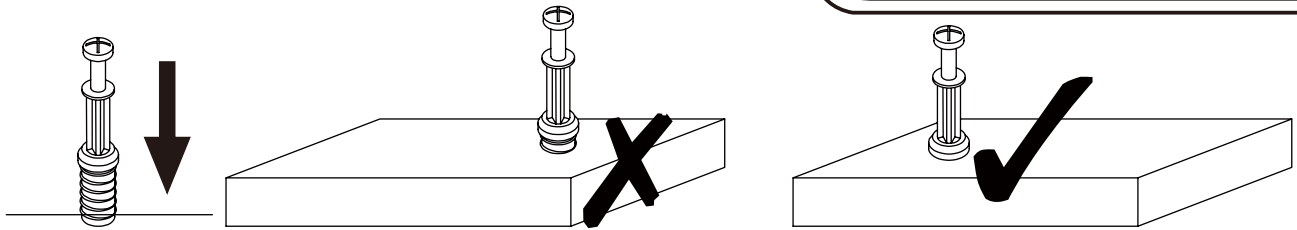


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

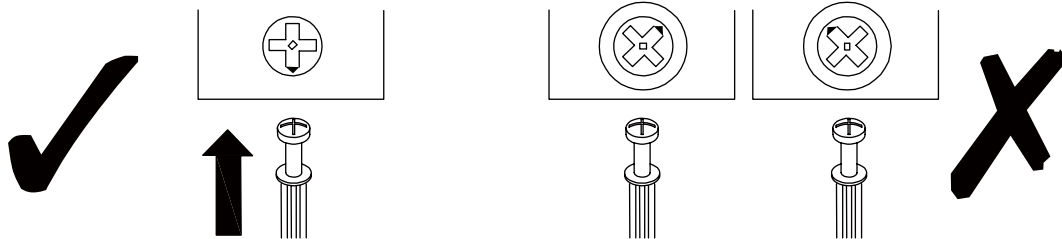











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










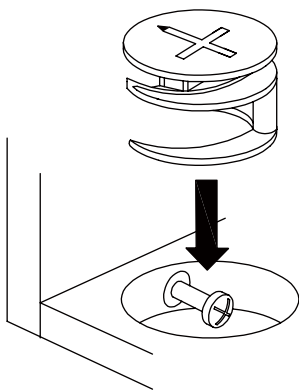












EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.






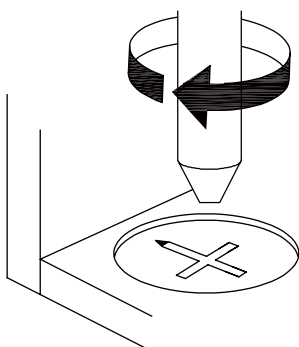






EN_Turn cam lock clockwise to tighten.

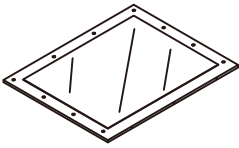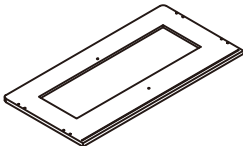
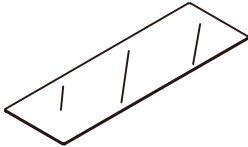
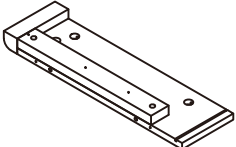
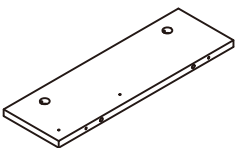
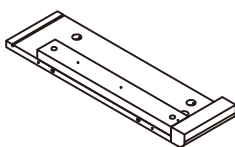
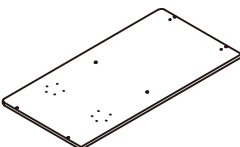
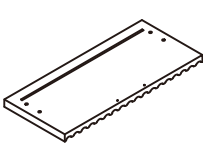
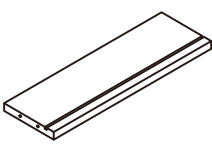
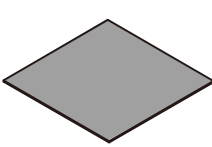
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x3	
⑨		x3	
⑩		x3	

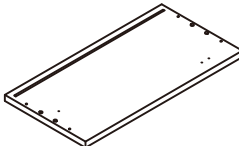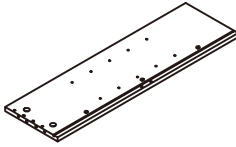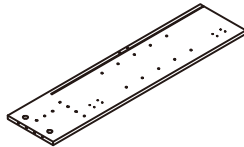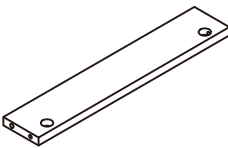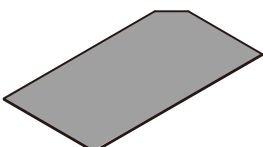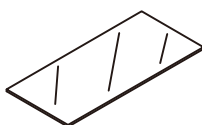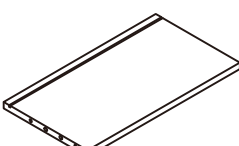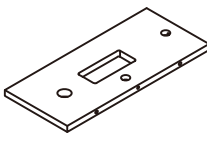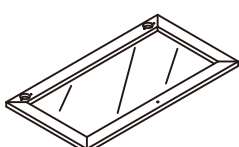
NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x2	
⑱		x1	
⑲		x1	
⑳		x1	

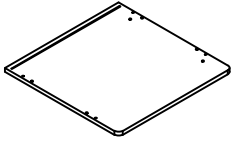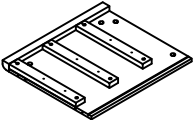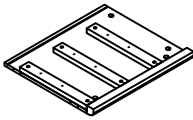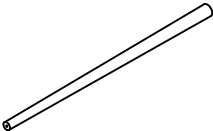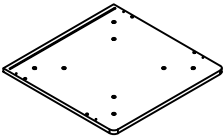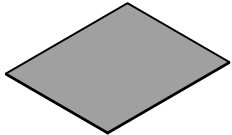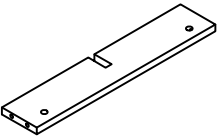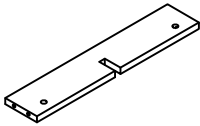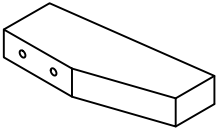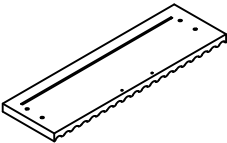NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
23		x1	
24		x2	
25		x1	
26		x1	
27		x1	
28		x1	
29		x4	
30		x1	

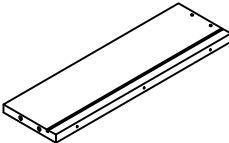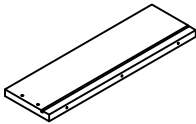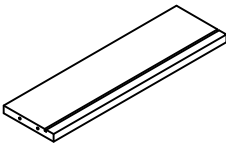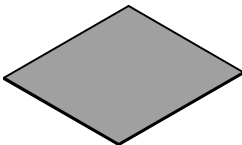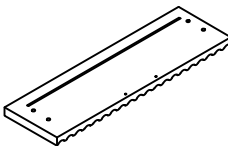
NO.	PARTS	QTY	SPARE
31		x5	
32		x5	
33		x2	
34		x2	
35		x1	
	 Hardware Kit	x1	

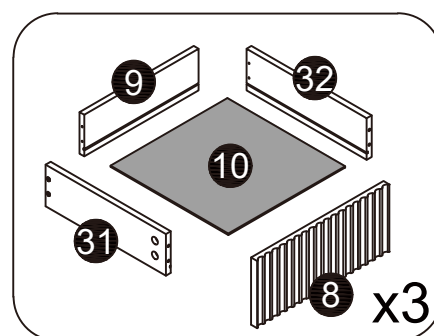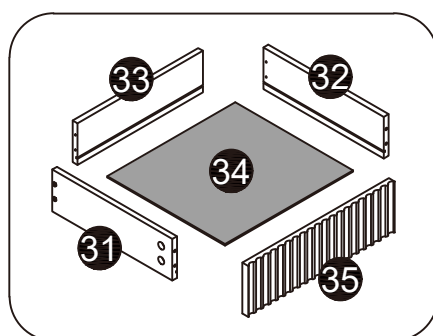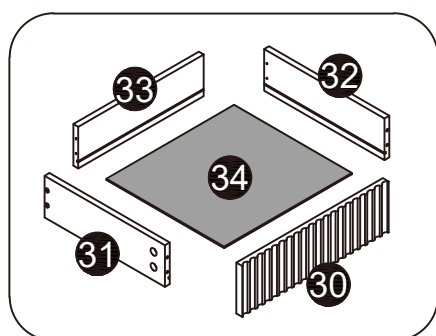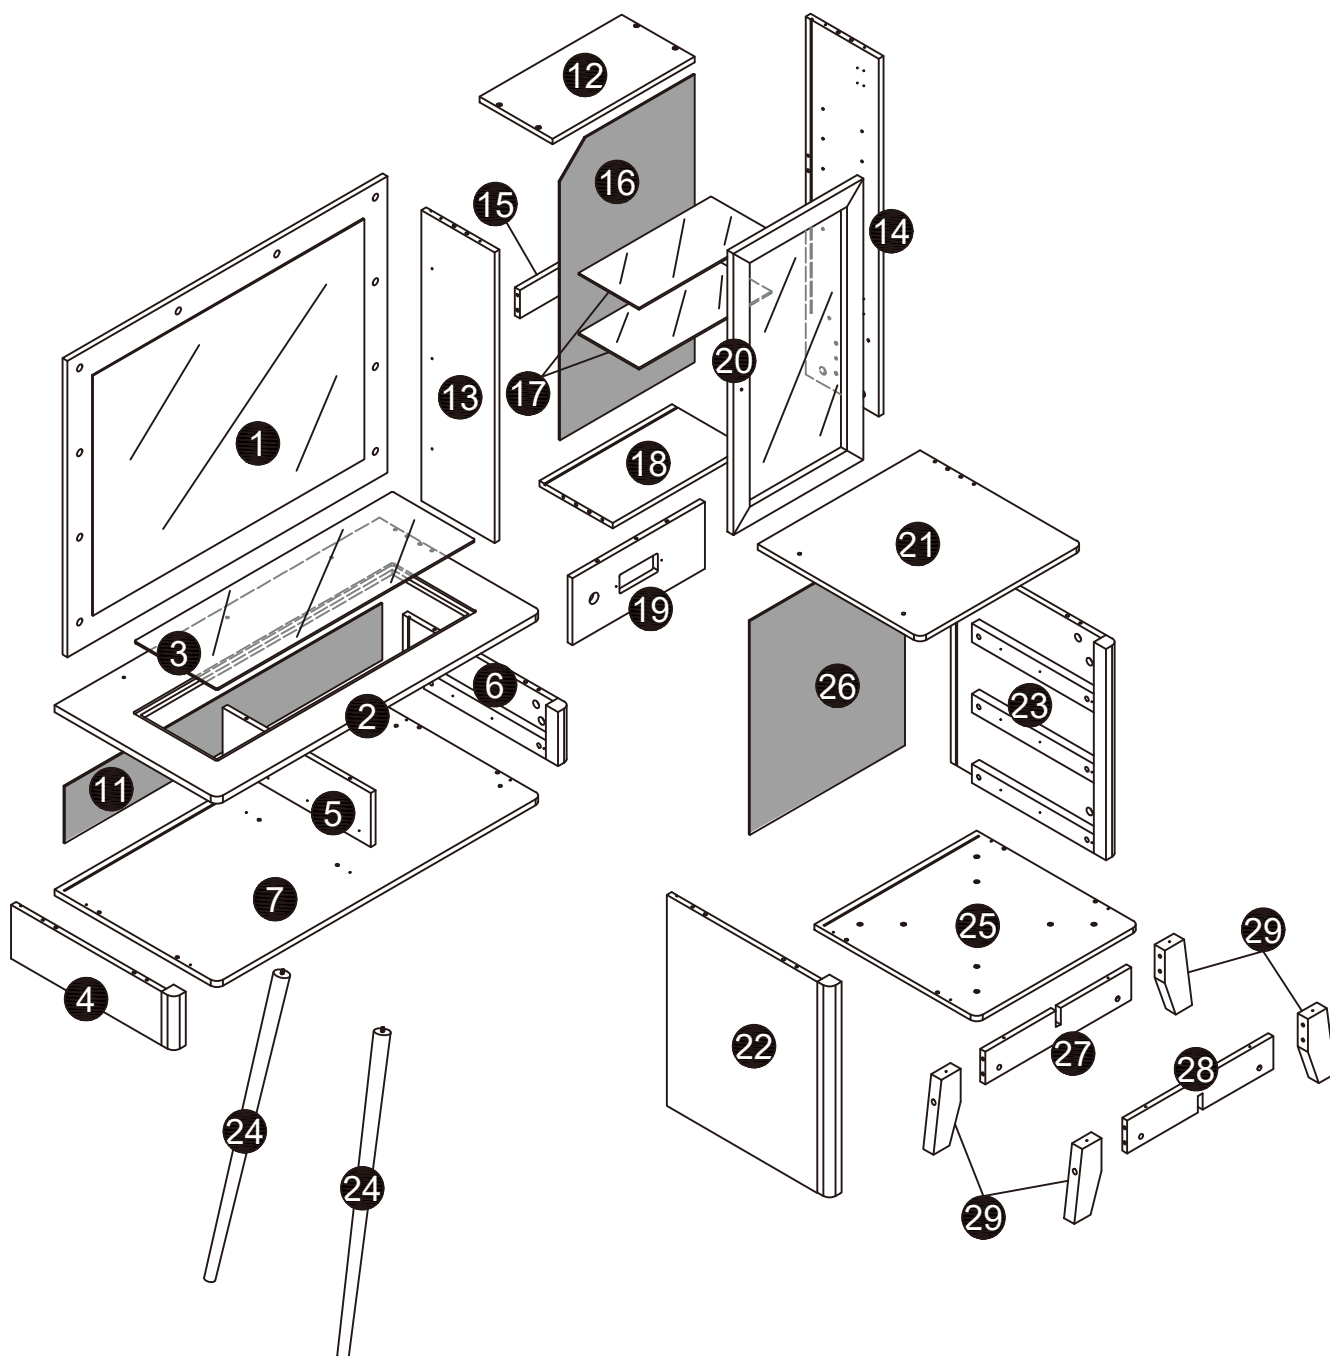

 A x45 Ø6x35mm +3(spare)	 B x45 Ø15x10mm +3(spare)	 C x40 Ø6x30mm +4(spare)	 D x39 Ø4x35mm +3(spare)	 E x84 Ø3.5x12mm +5(spare)	 F x7
 G x5	 H-1  H-2	 I x2 Ø6x30mm	 J x4 Ø6x70mm	 K x4	 L x1 M4
 M x8 Ø5x40mm	 N x4	 O-1  O-2  O-3 Ø6x25mm	 P x2	 Q x12 Ø4x12mm +1(spare)	 R x2
 S x1	 T-1  T-2 Ø3x10mm	 U x1	 V x8	 W x2	 X x1
 Y x2	 Z-1  Z-2 Ø3x16mm +1(spare)	 AA-1  AA-2 Ø4x14mm	 BB-1 x10  BB-2 x10  BB-3 x1  BB-4 x1		
 CL x5 L300mm	 CR x5 L300mm	 DL x5 L300mm	 DR x5 L300mm		

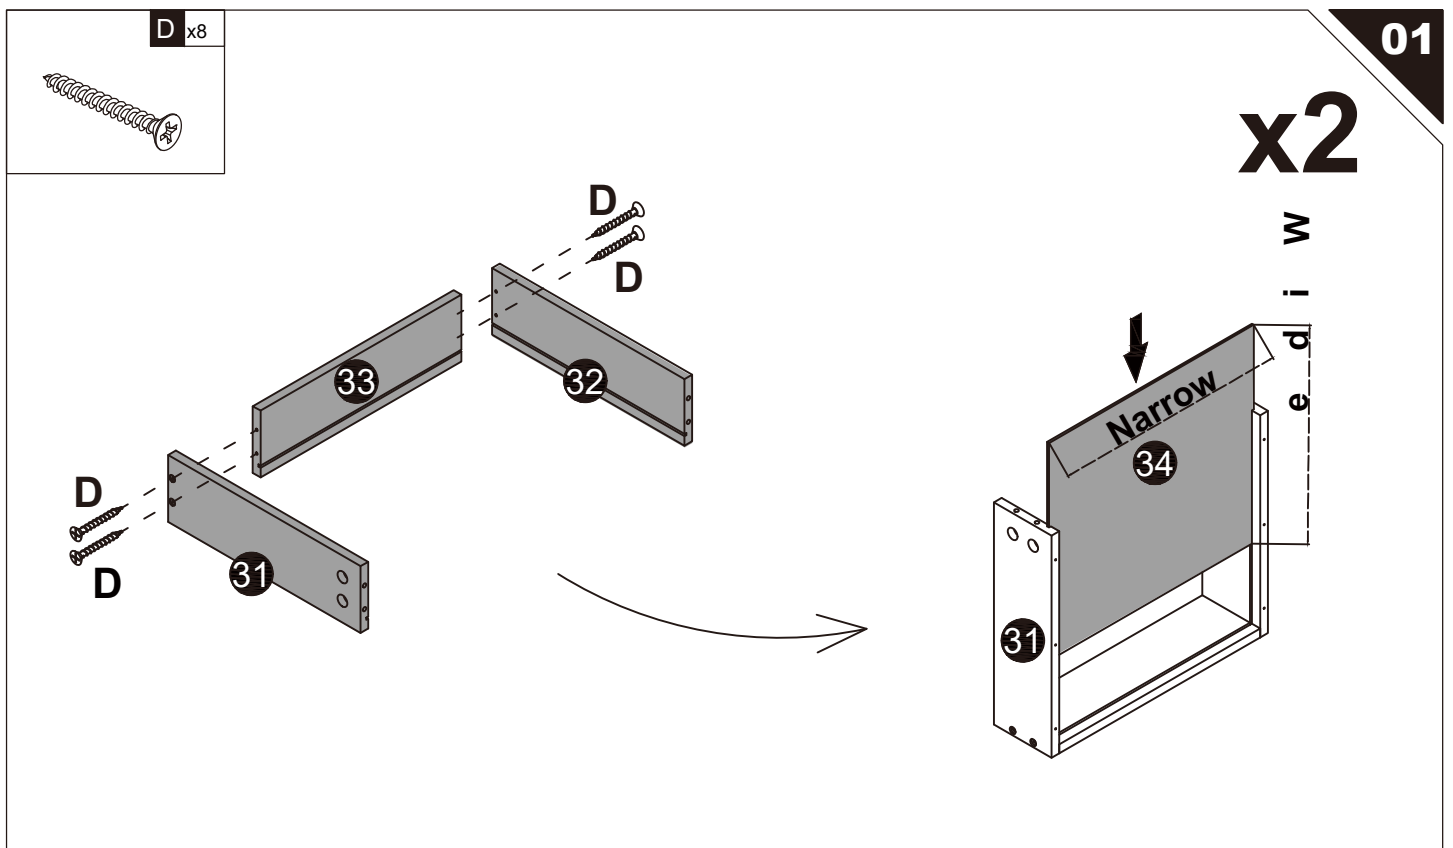

A x8



B x8




E x16









G x2



DL x2



DR x2

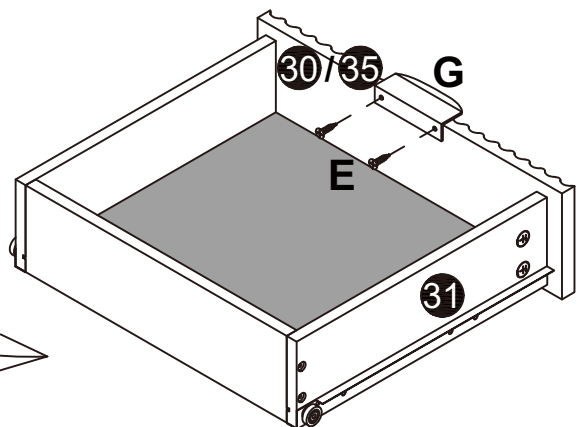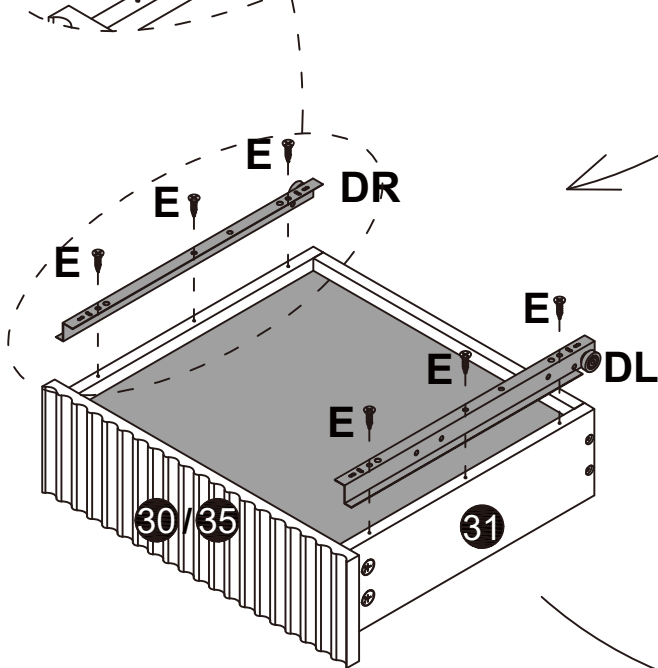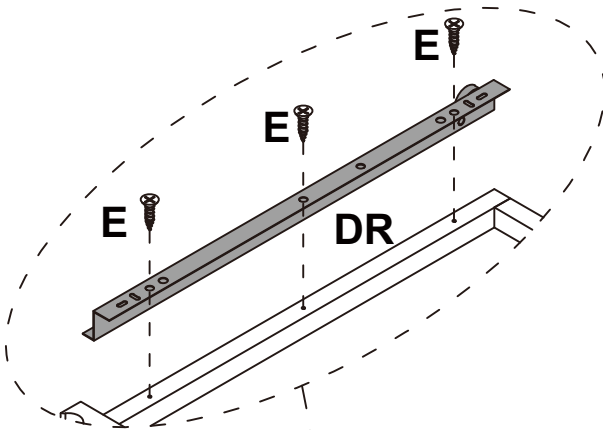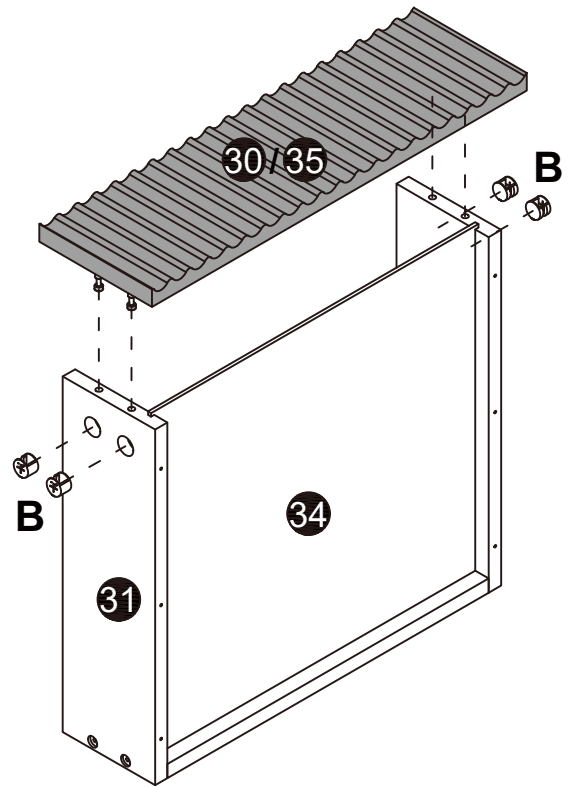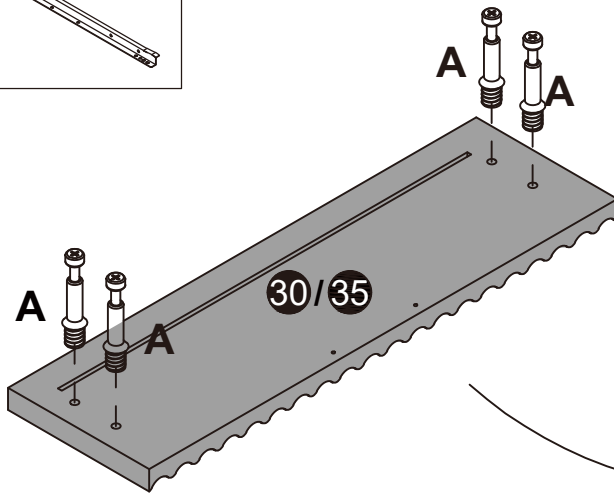


A x12

B x12

D x12

03

x3

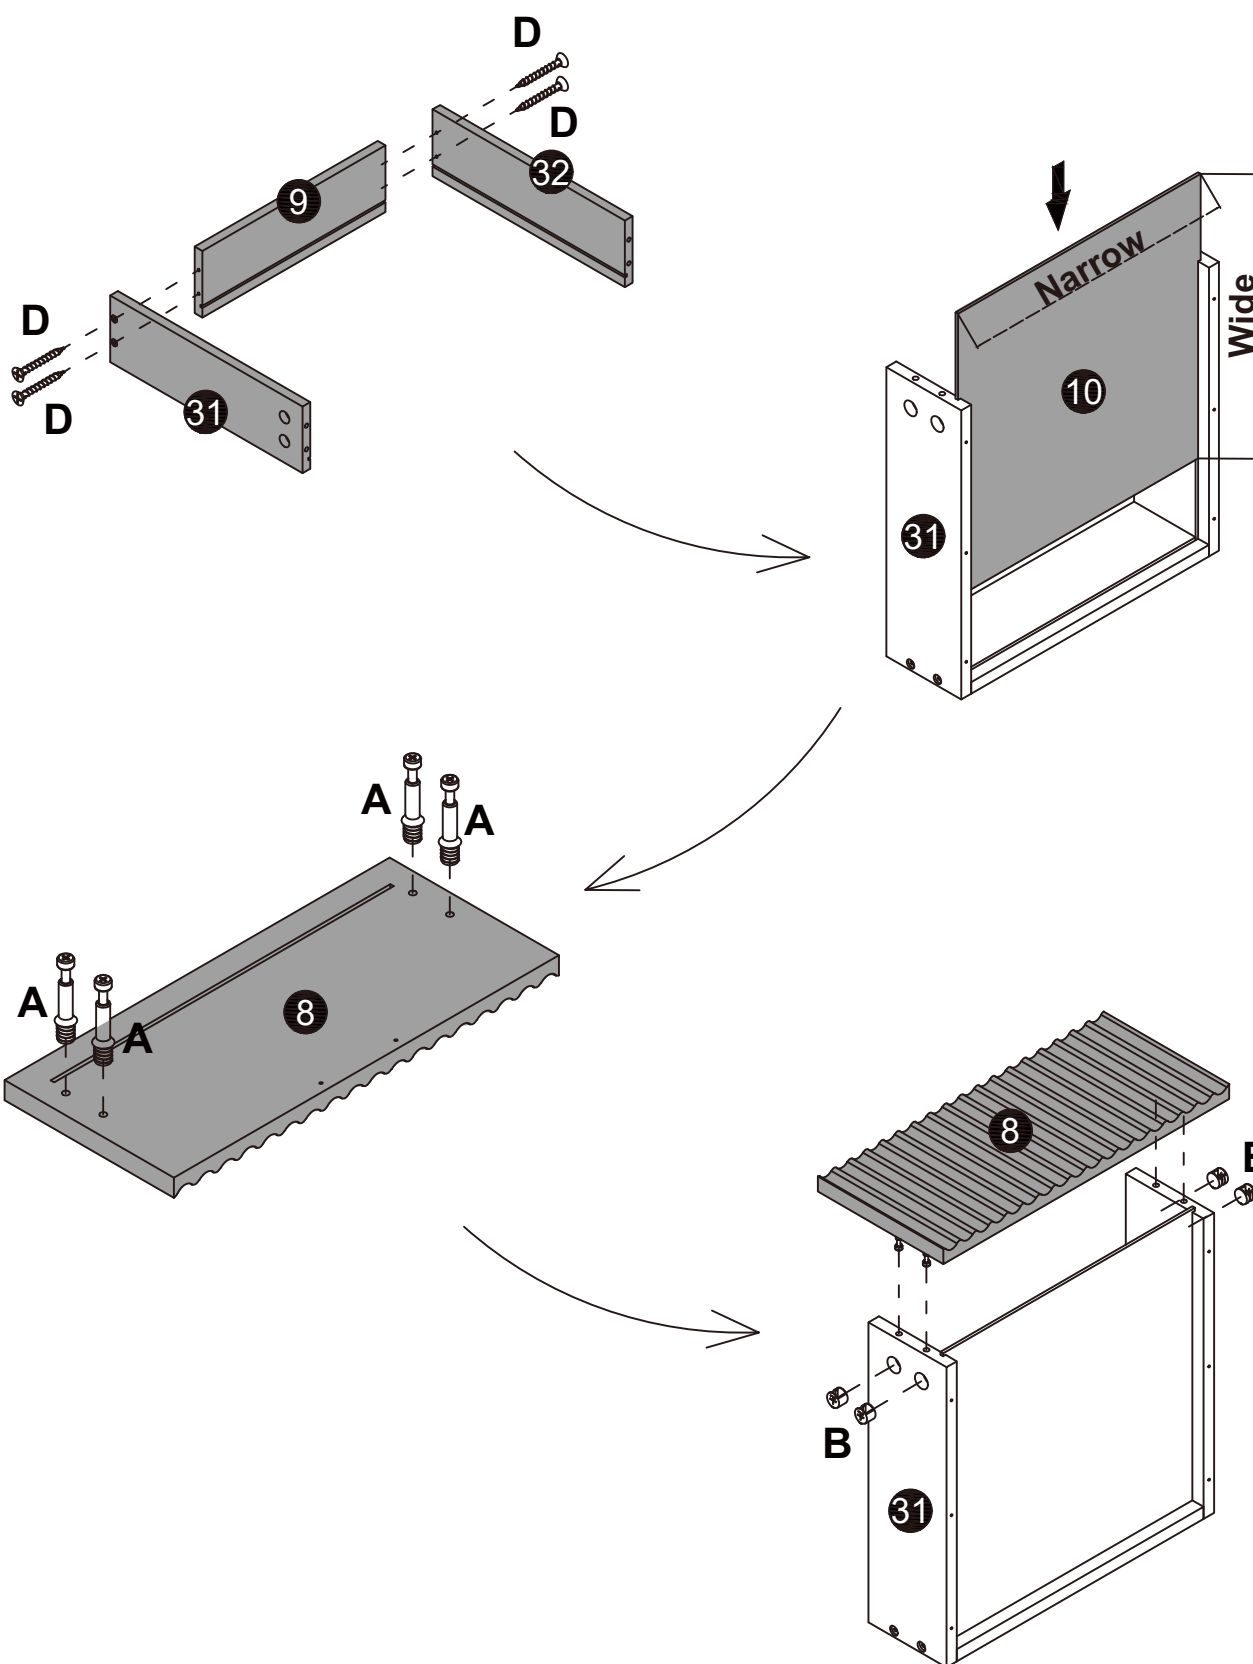

E x24


G x3

DL x3

DR x3

04

x3





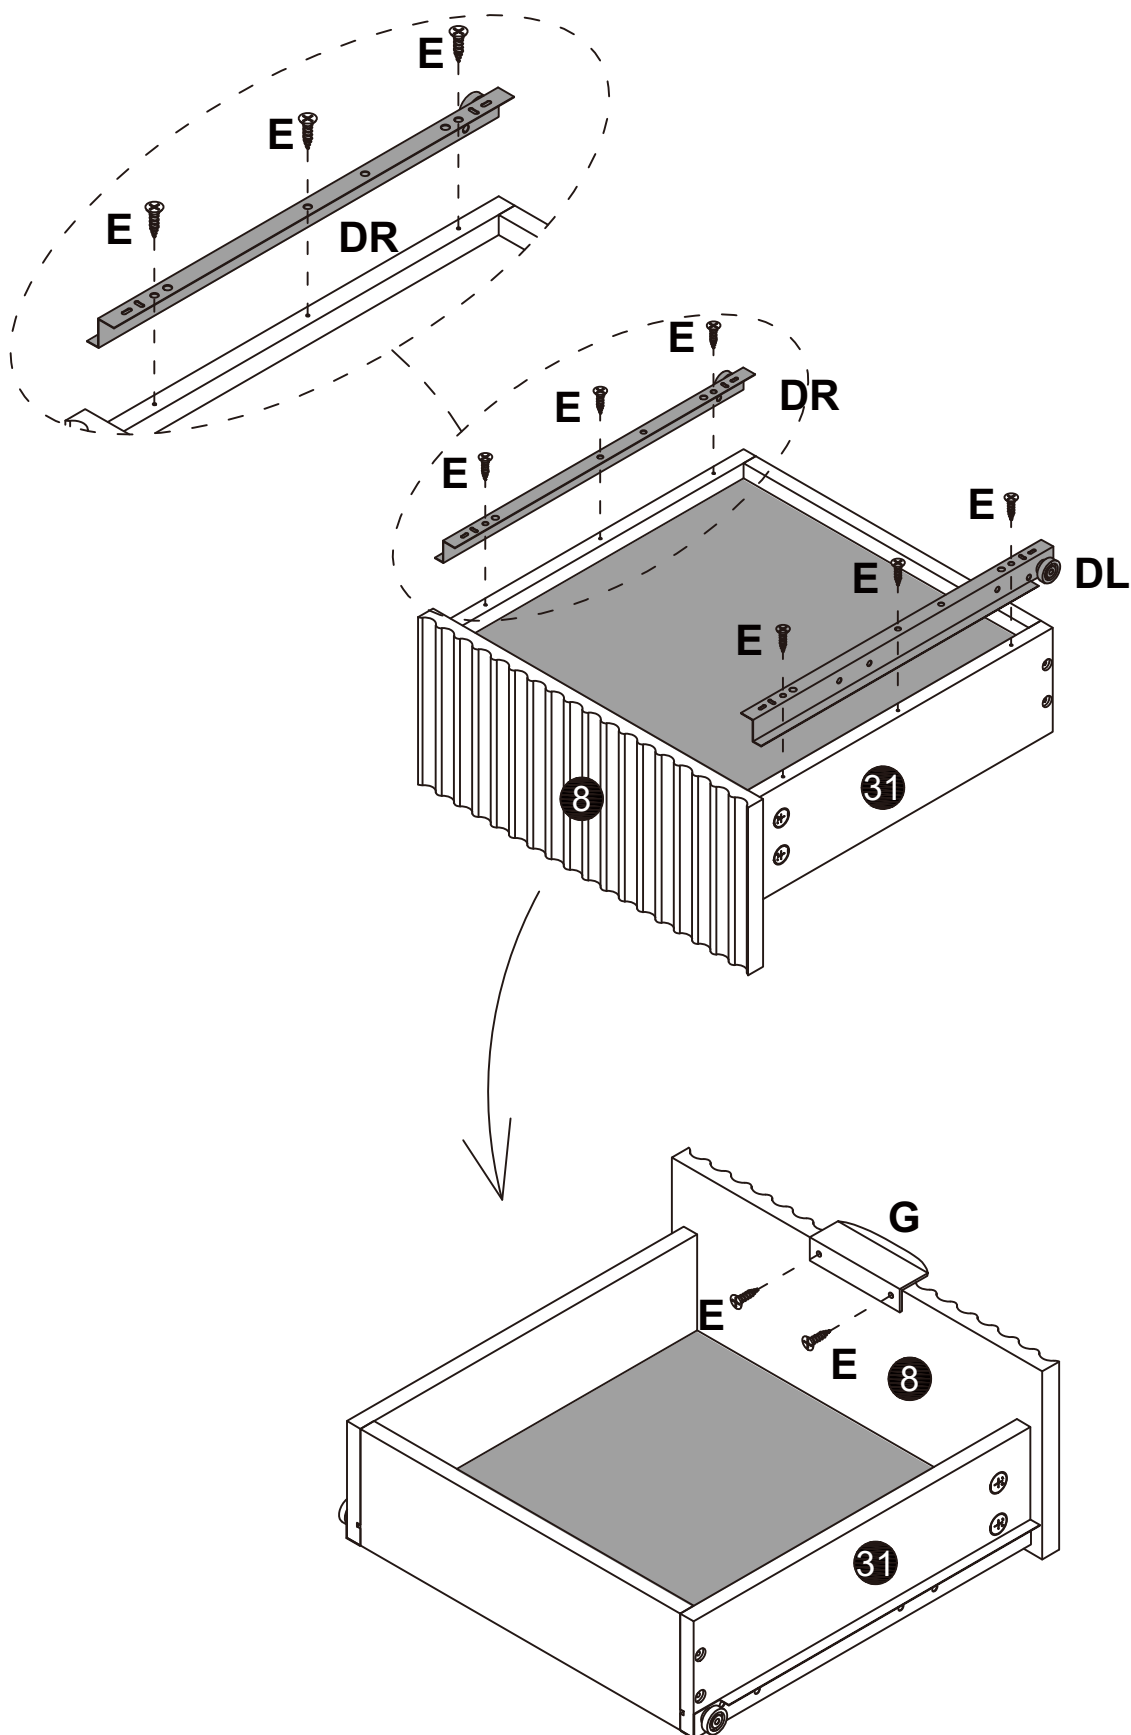


E x18

CL x3

CR x3

05

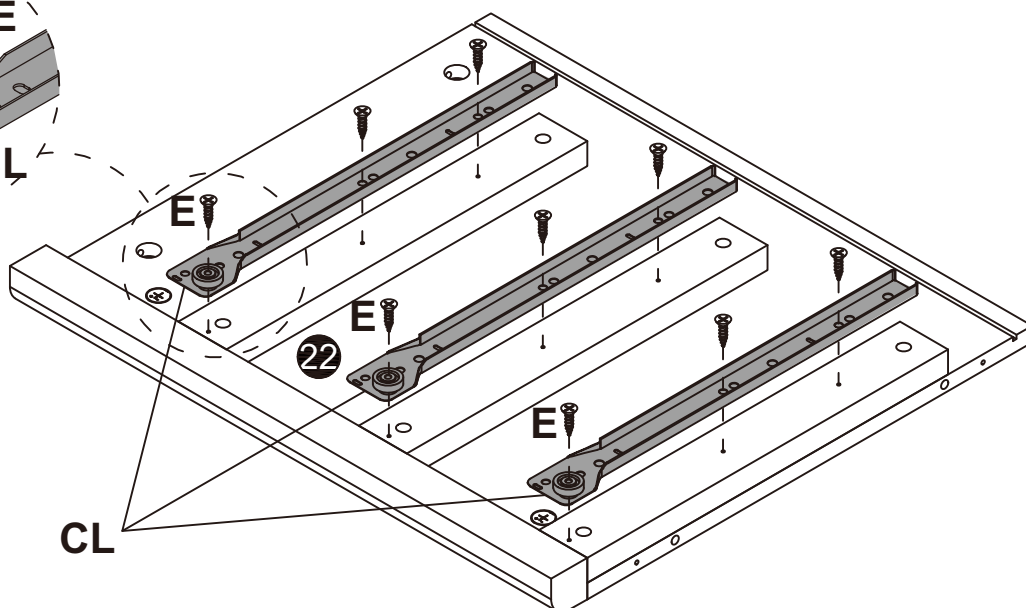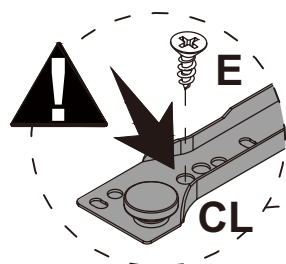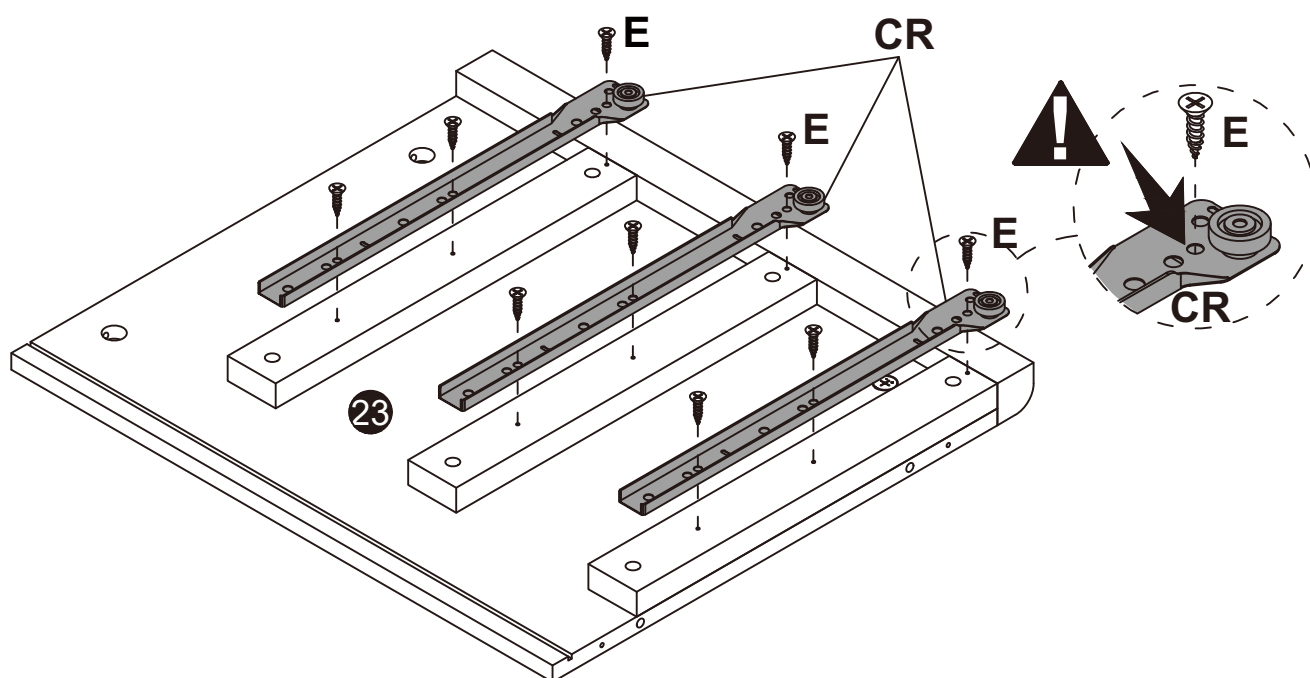




C x4

J x4

K x4



L x1

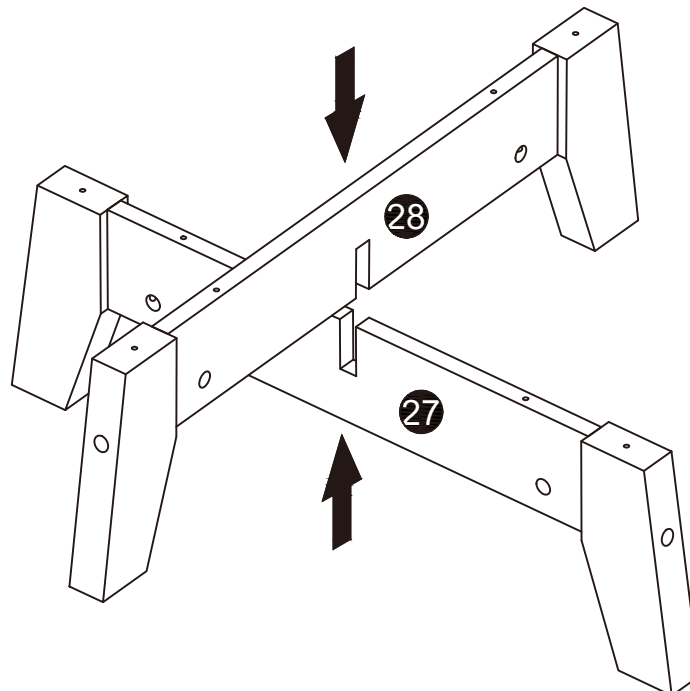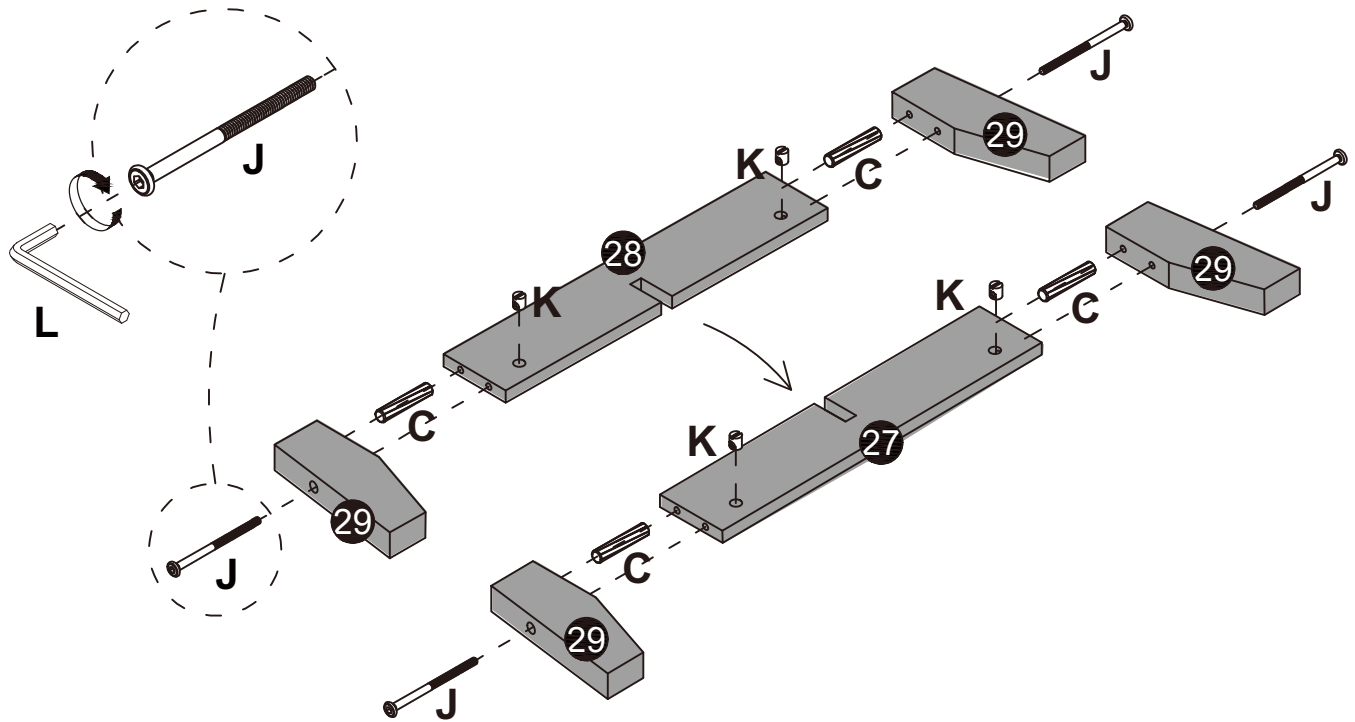

M x8




L x1

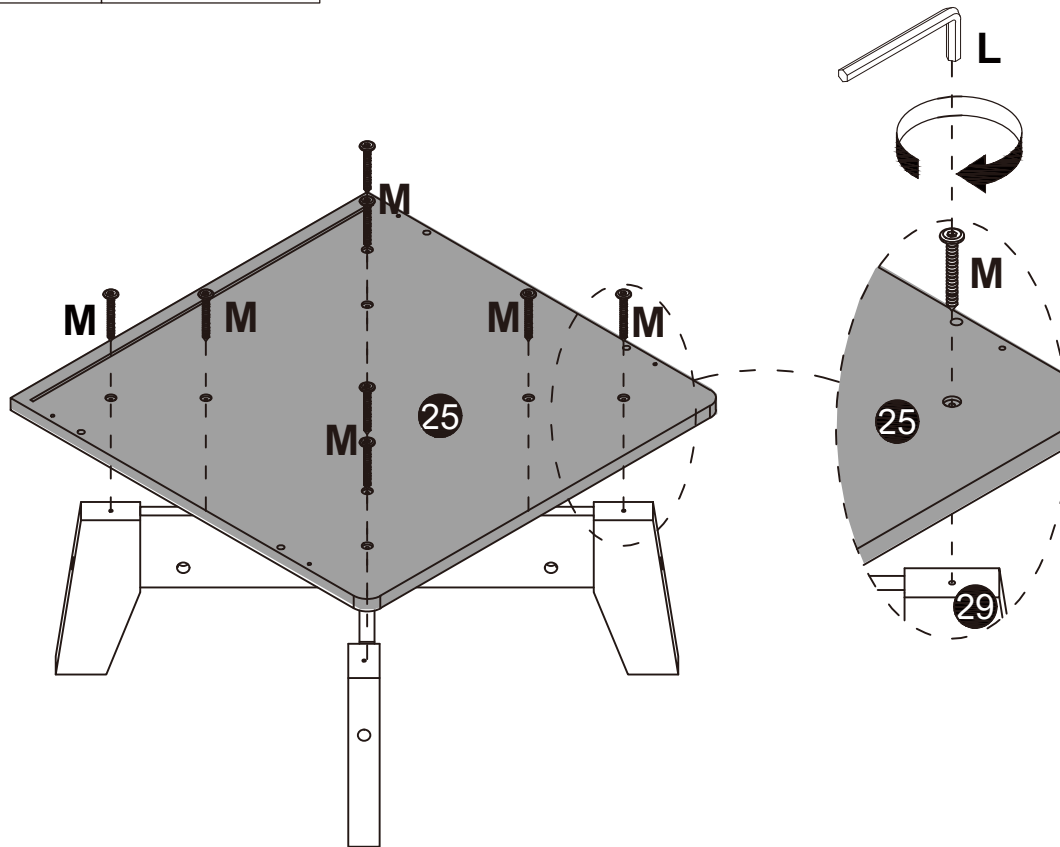


C x4




D x4

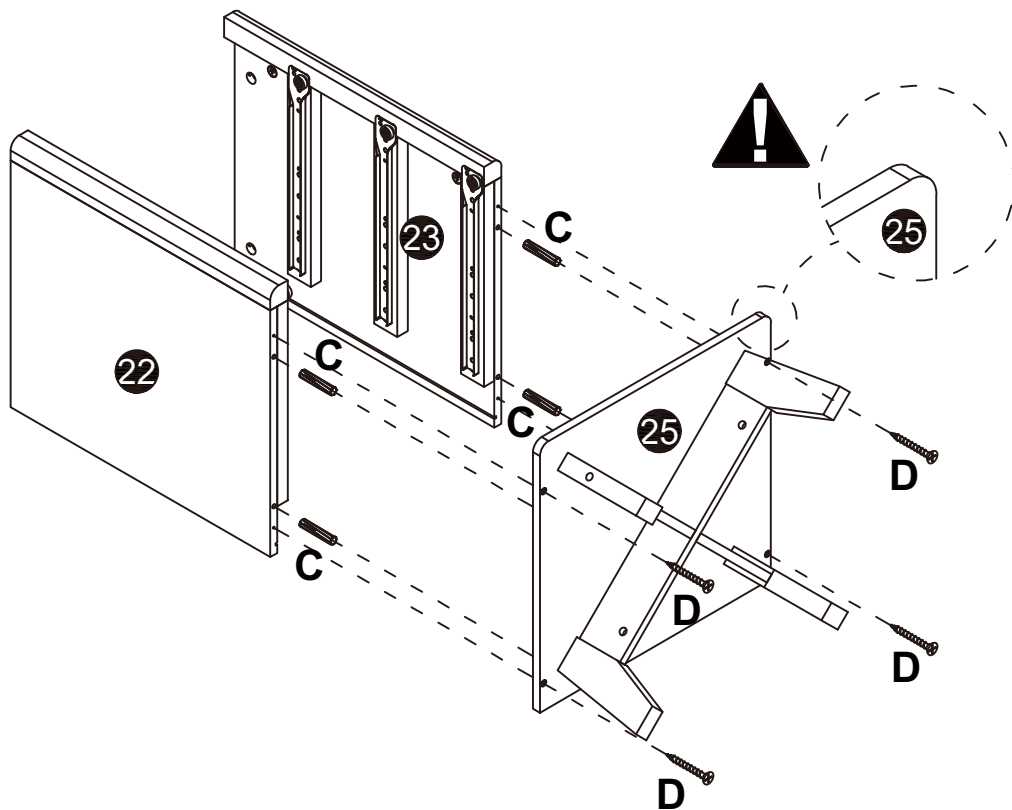


N x4




10

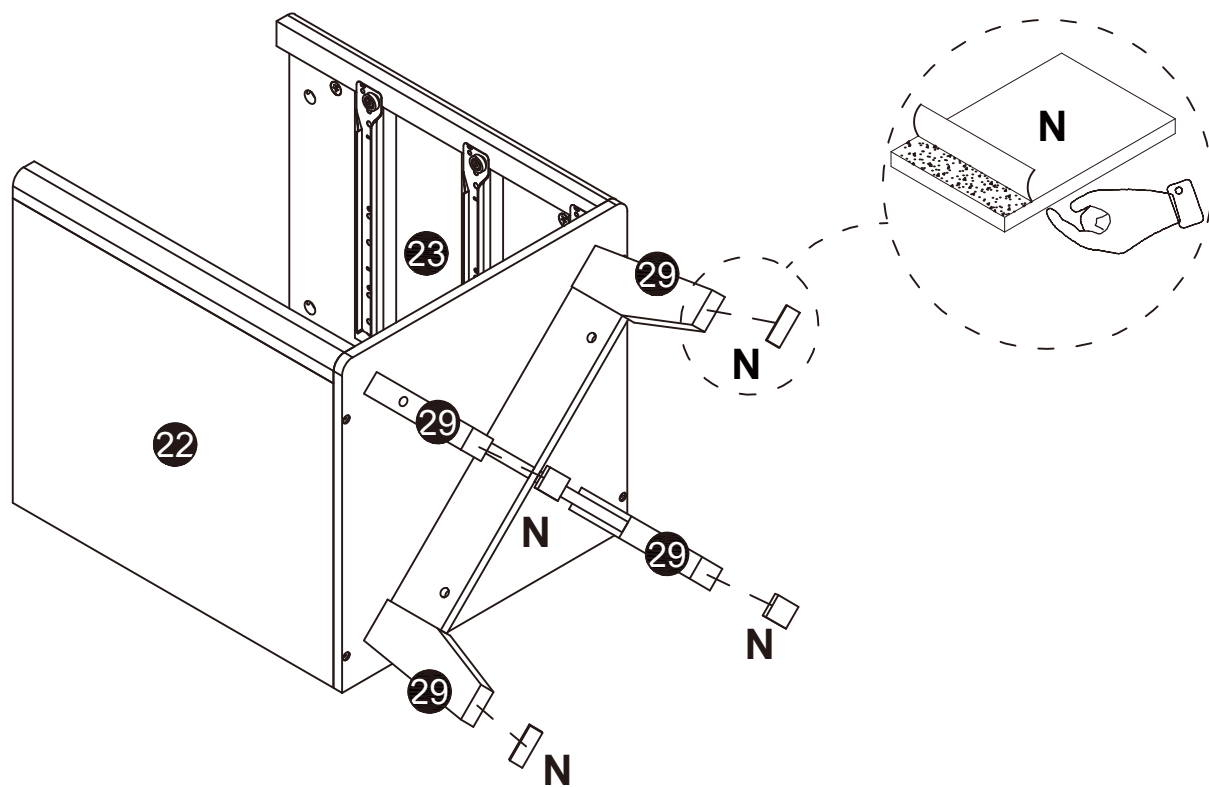

11

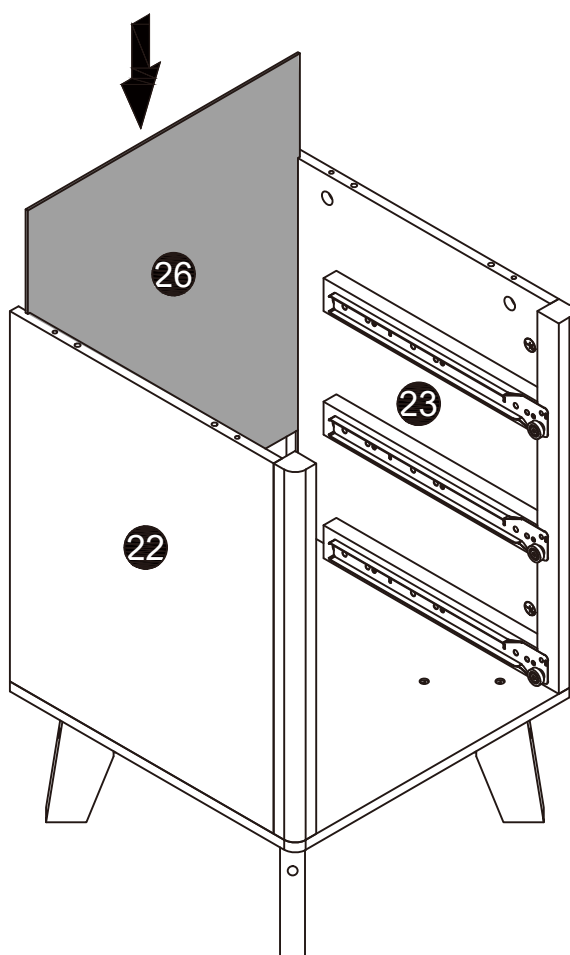




A x4



B x4




C x4

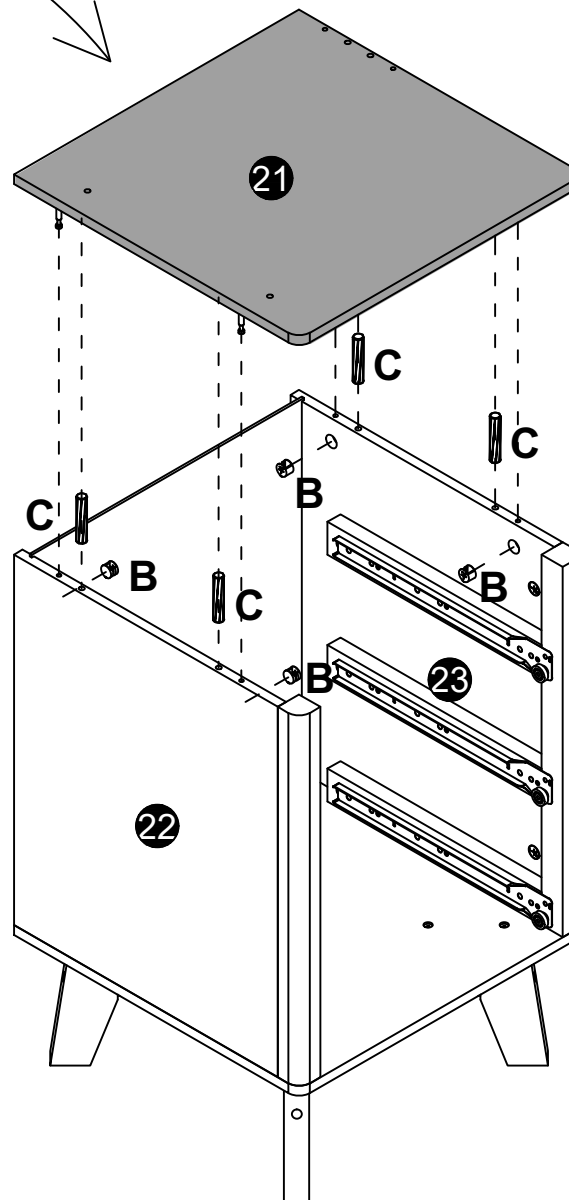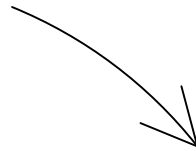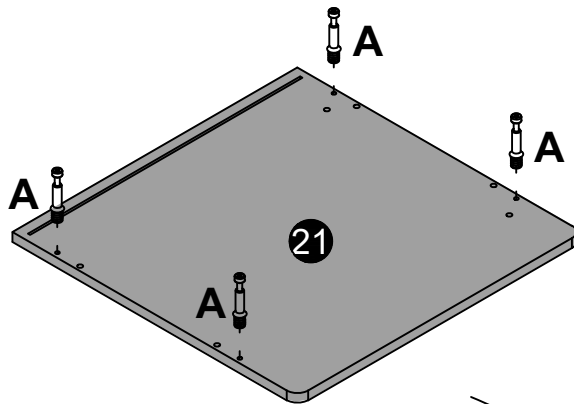










E x12



CL x2



CR x2

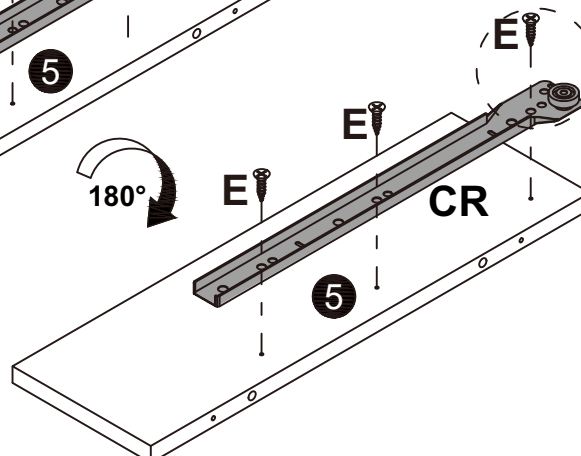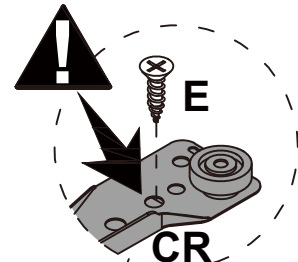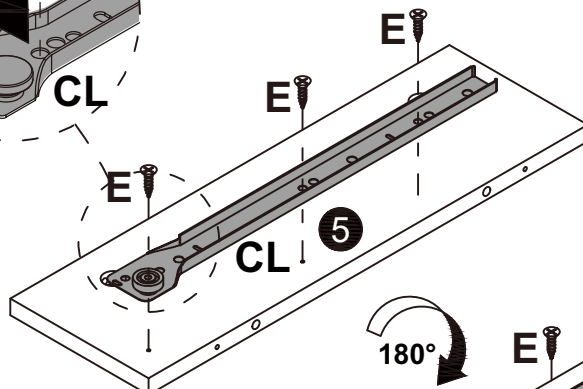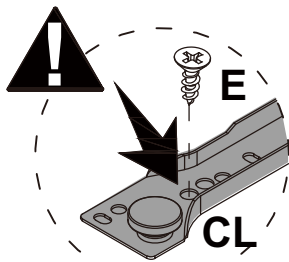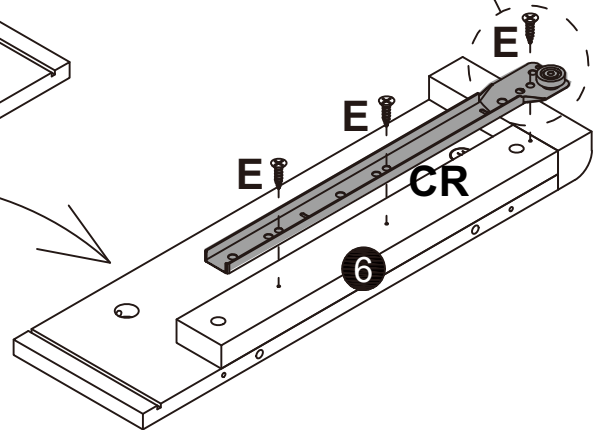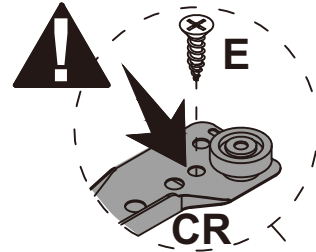
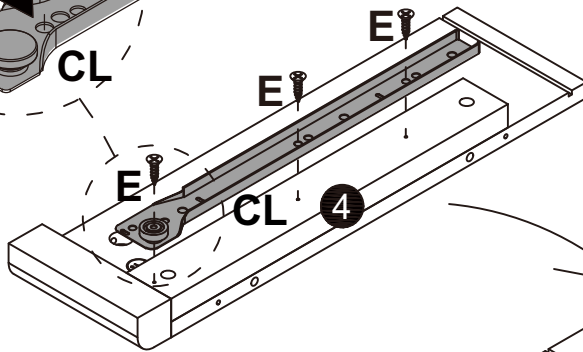
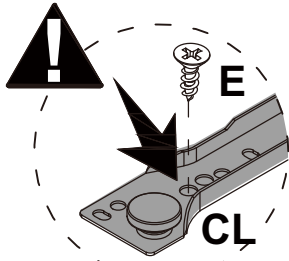




C x6

D x6

P x2

Q x10

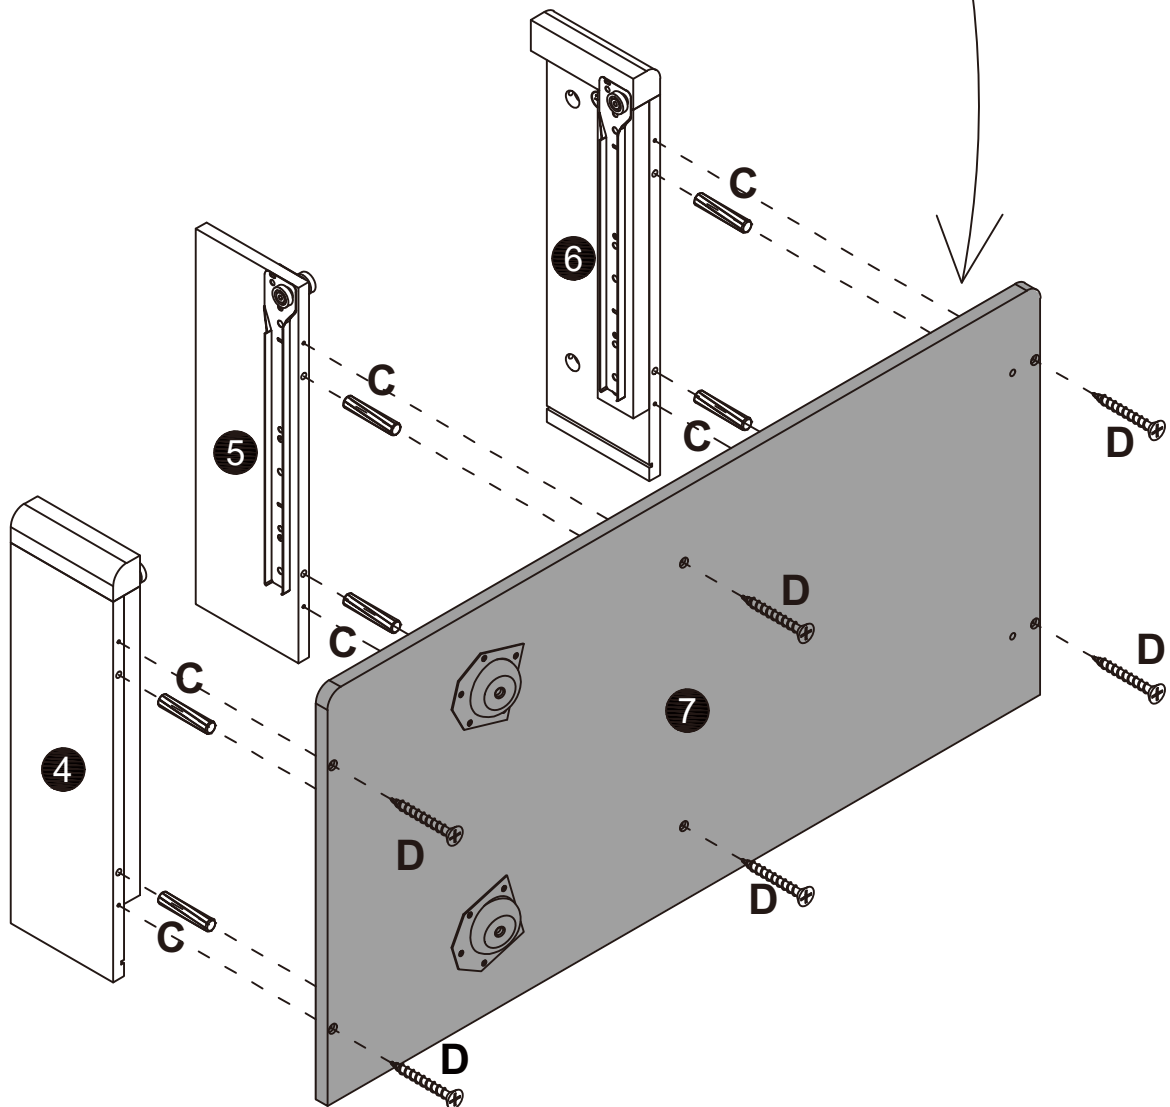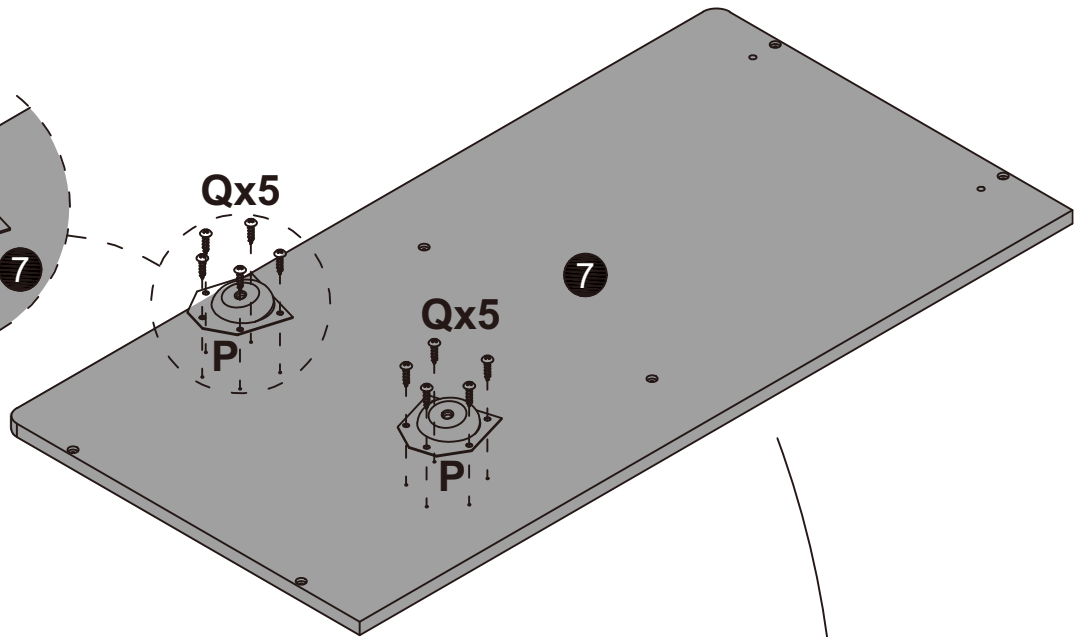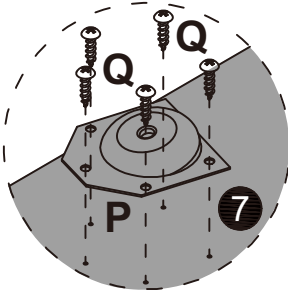


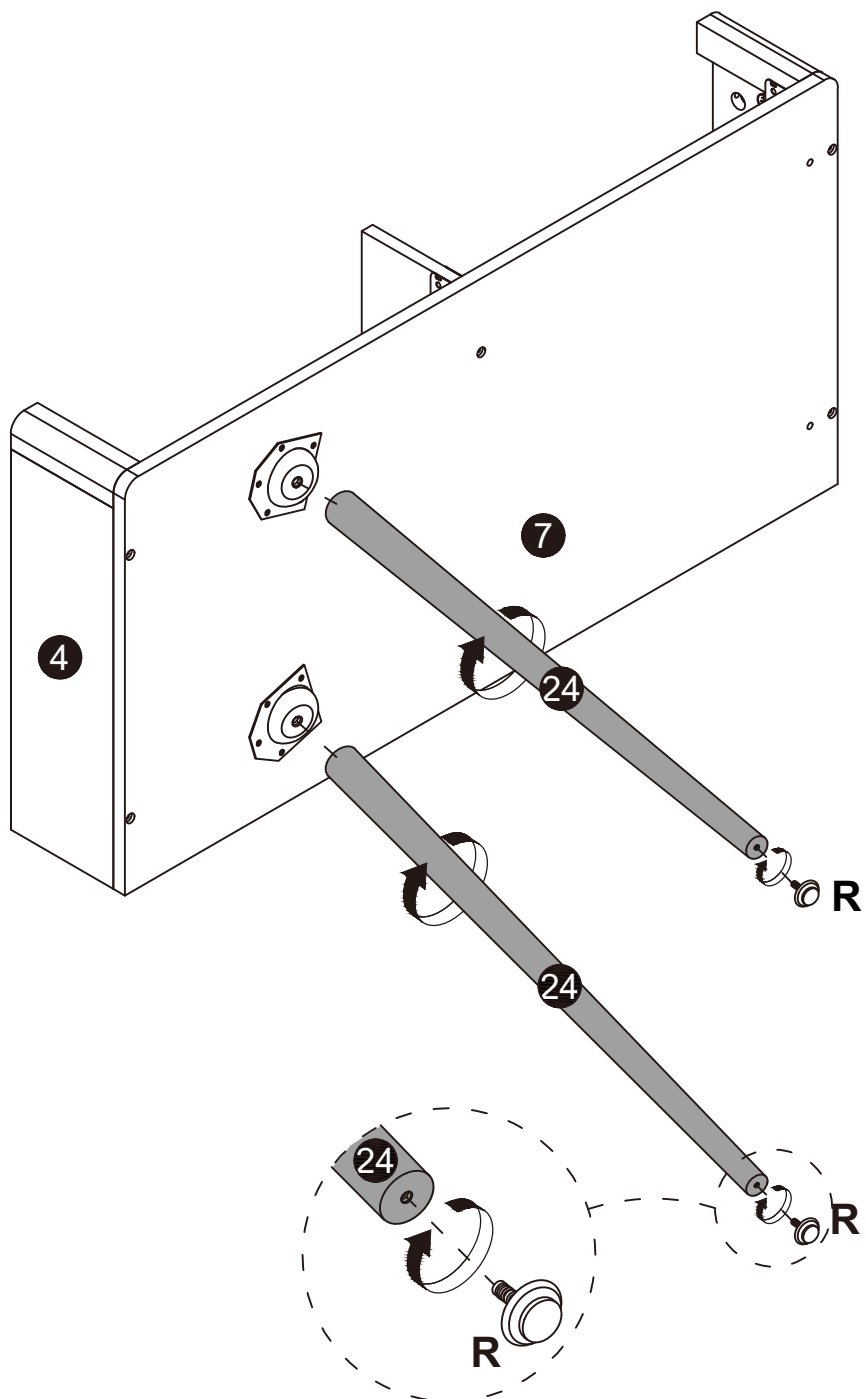


O x2




O-1 O-2 O-3

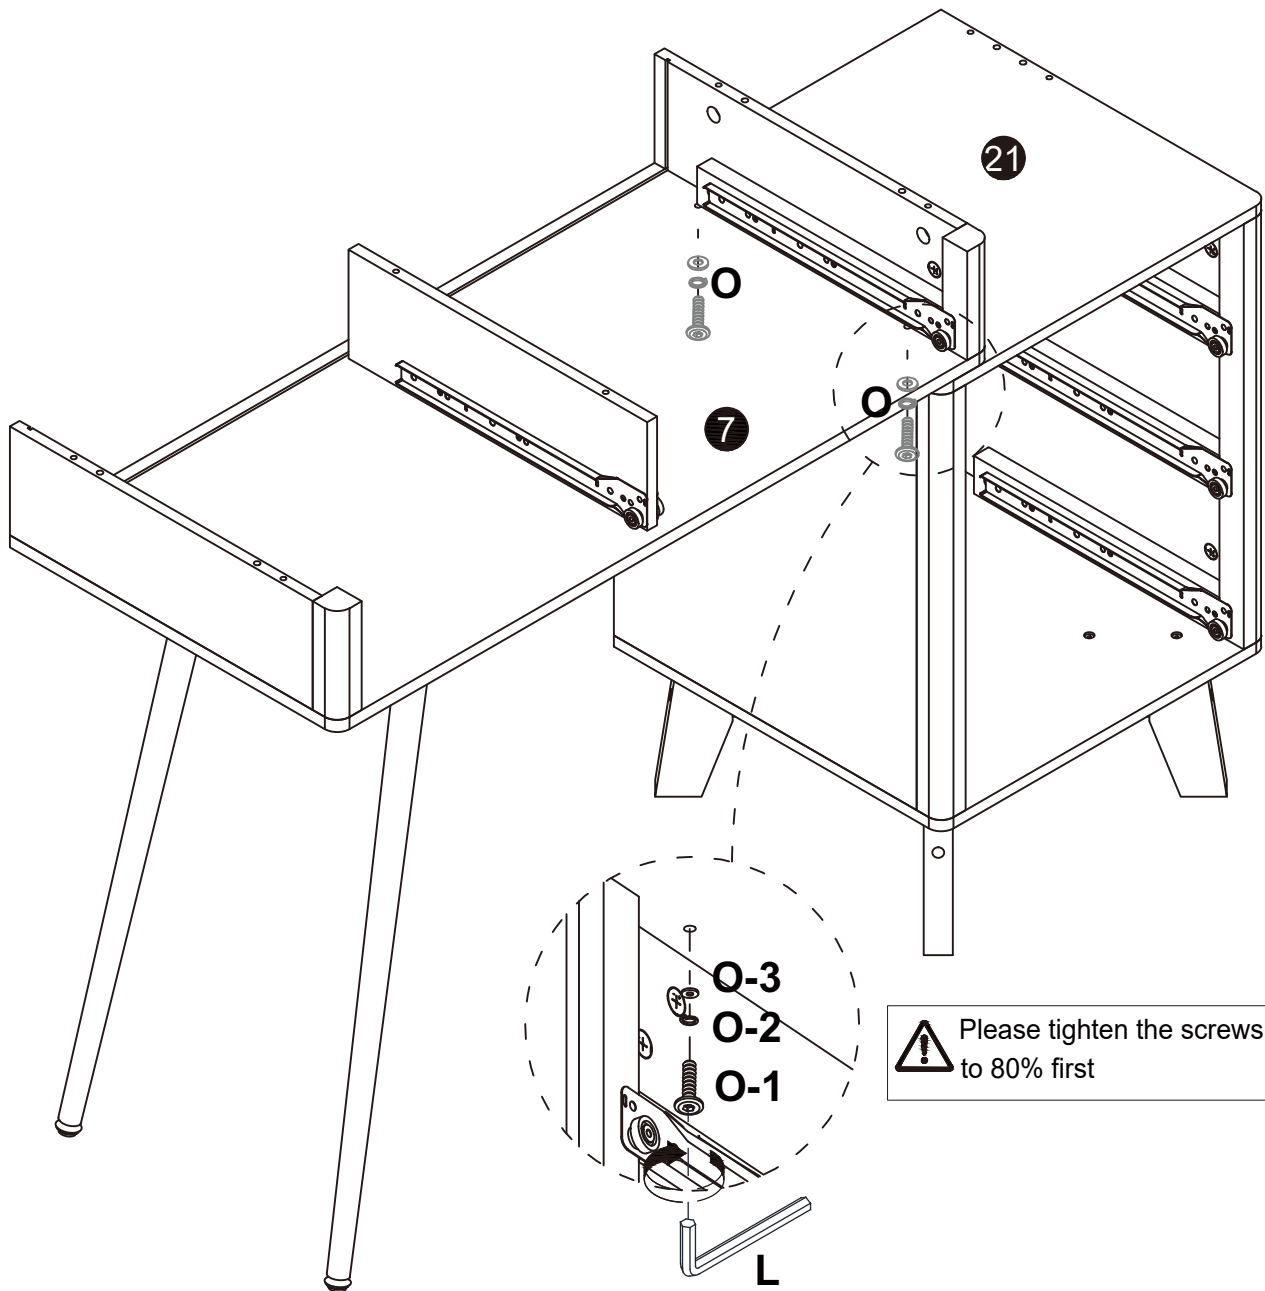


 Please tighten the screws
to 80% first

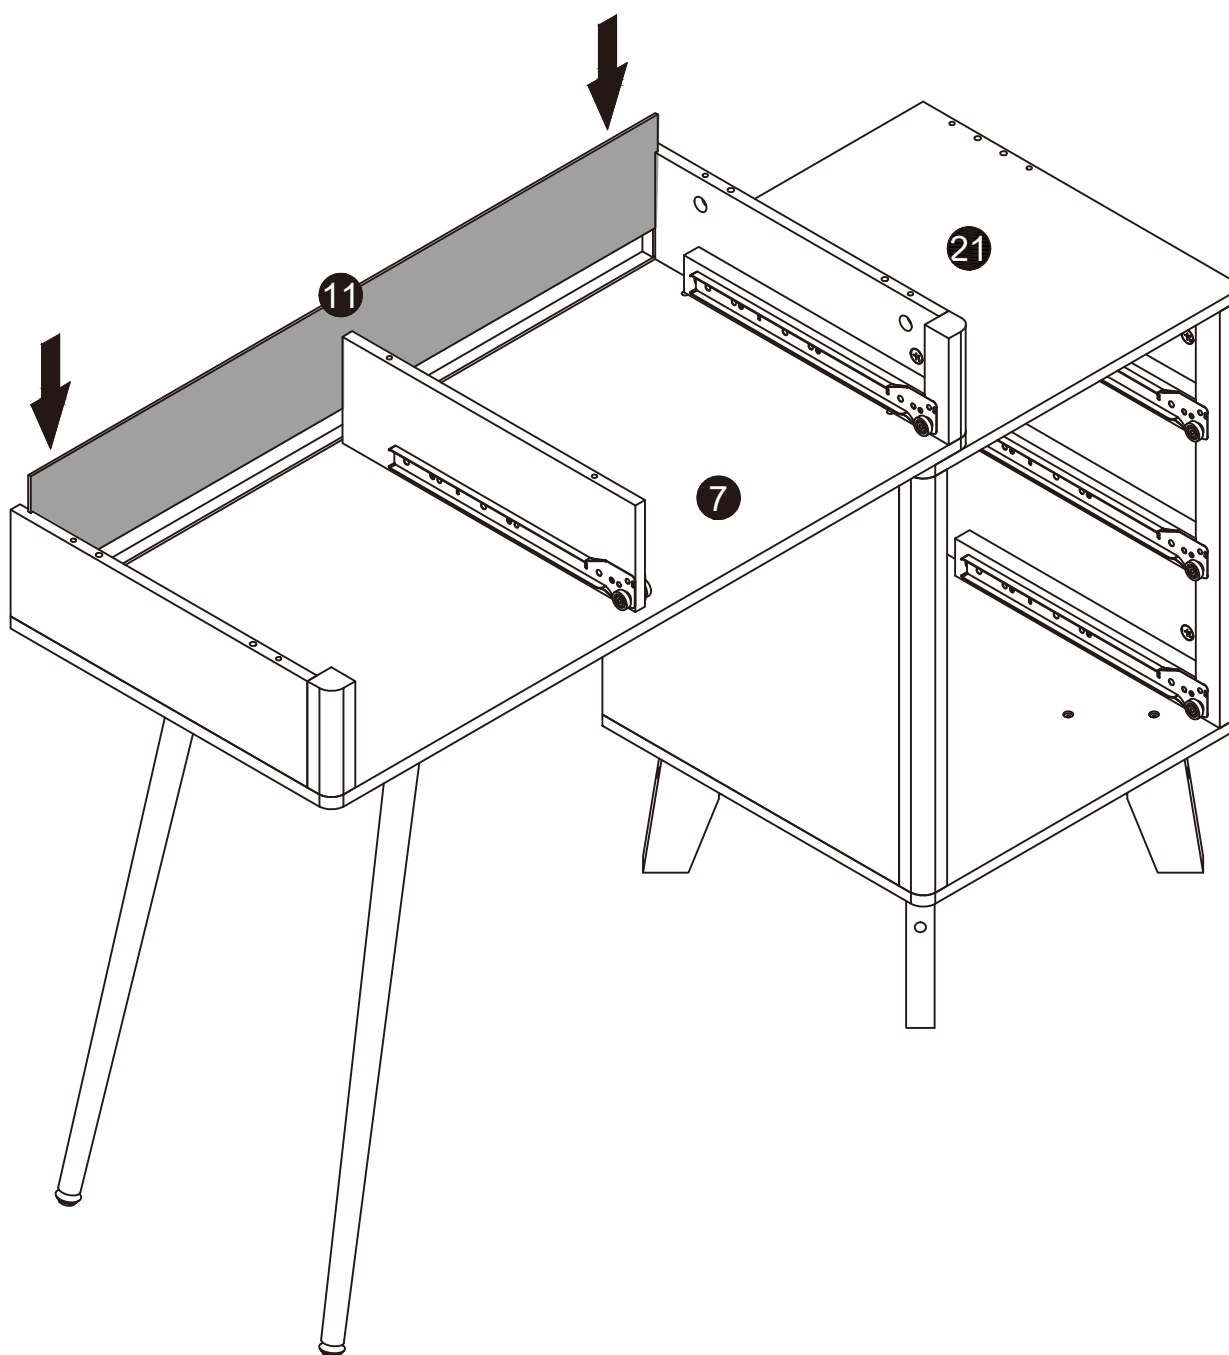

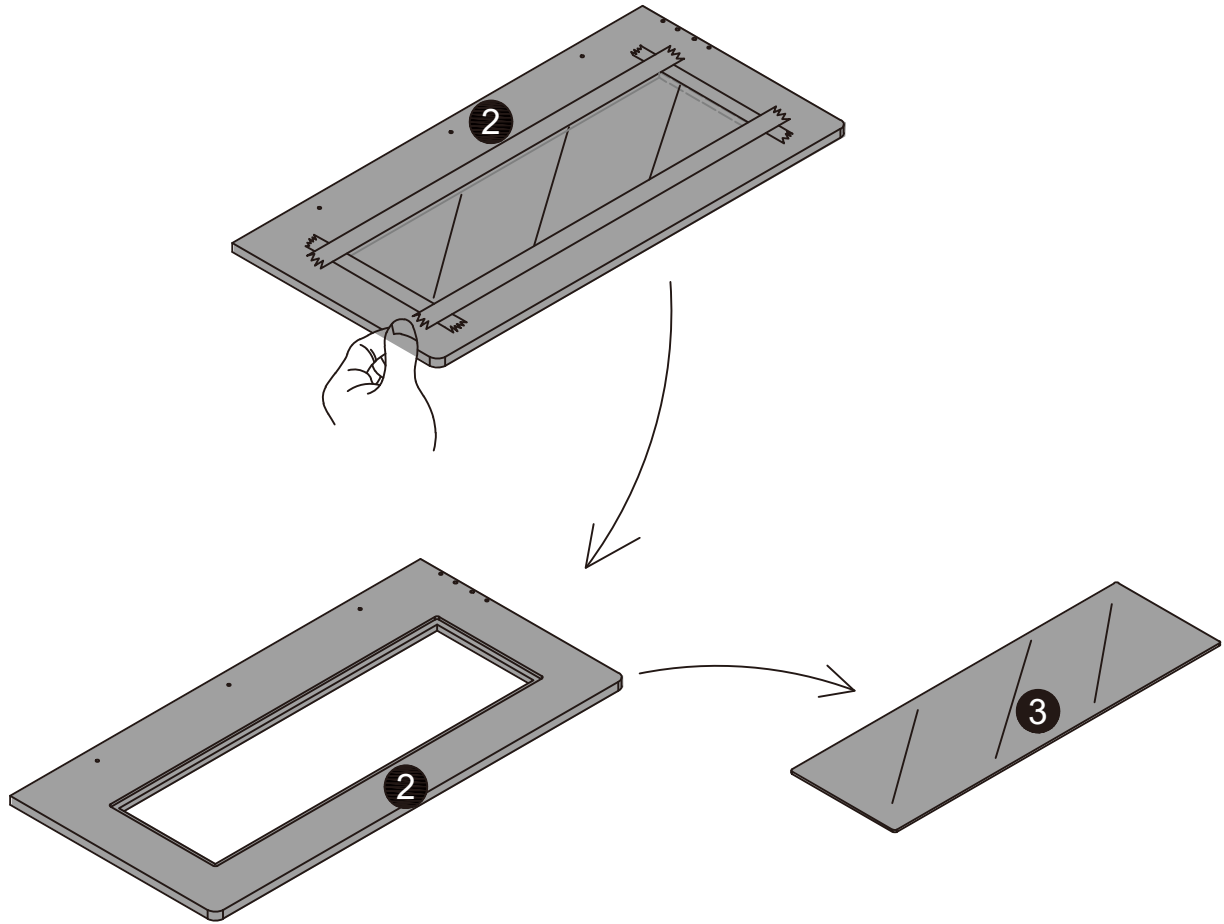



A x6





B x6




C x4

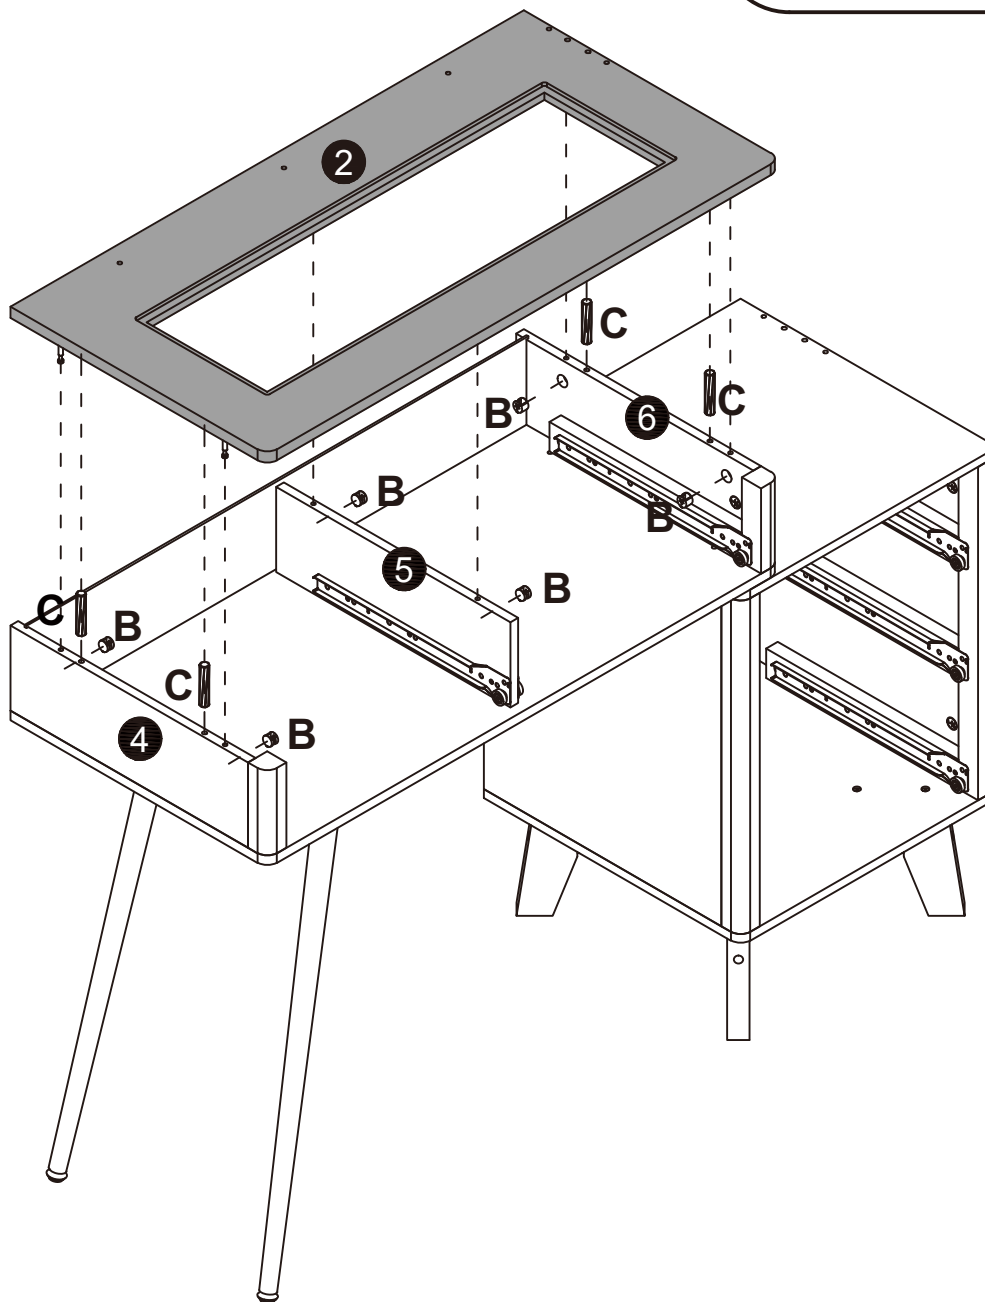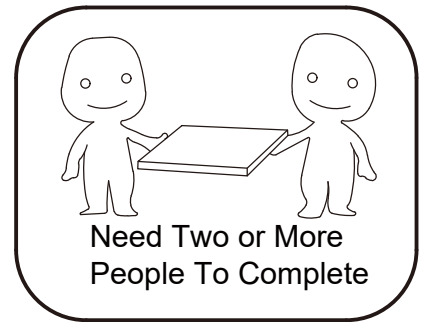

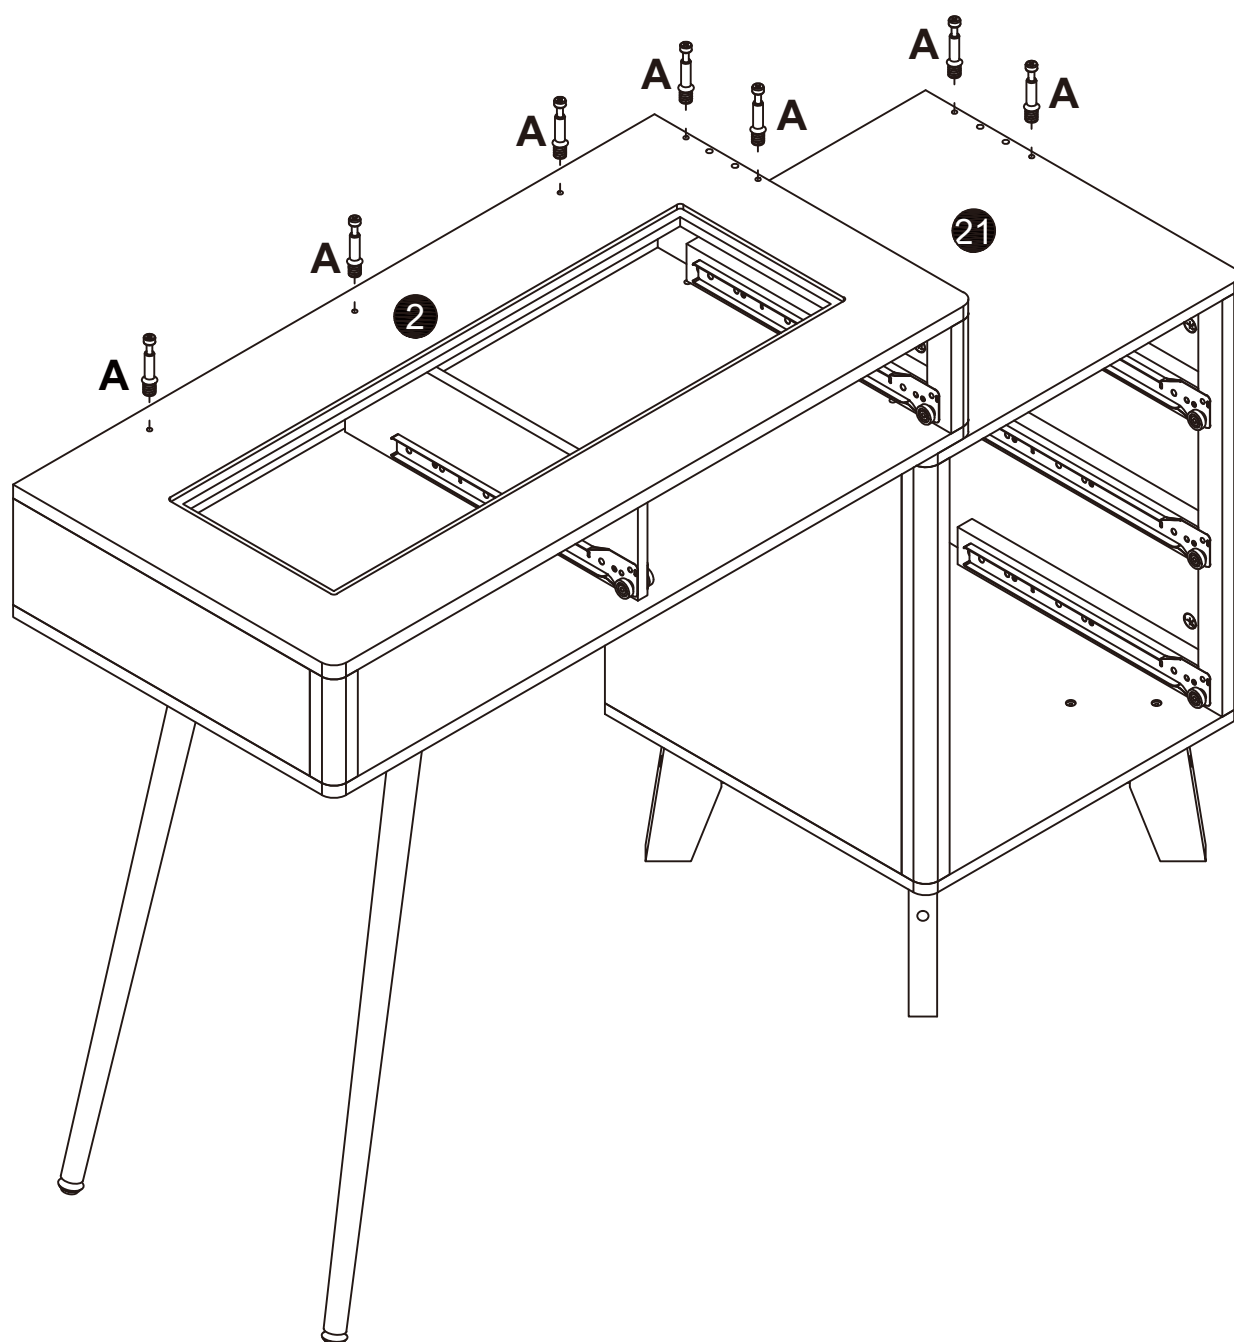


A x1





B x1



C x2

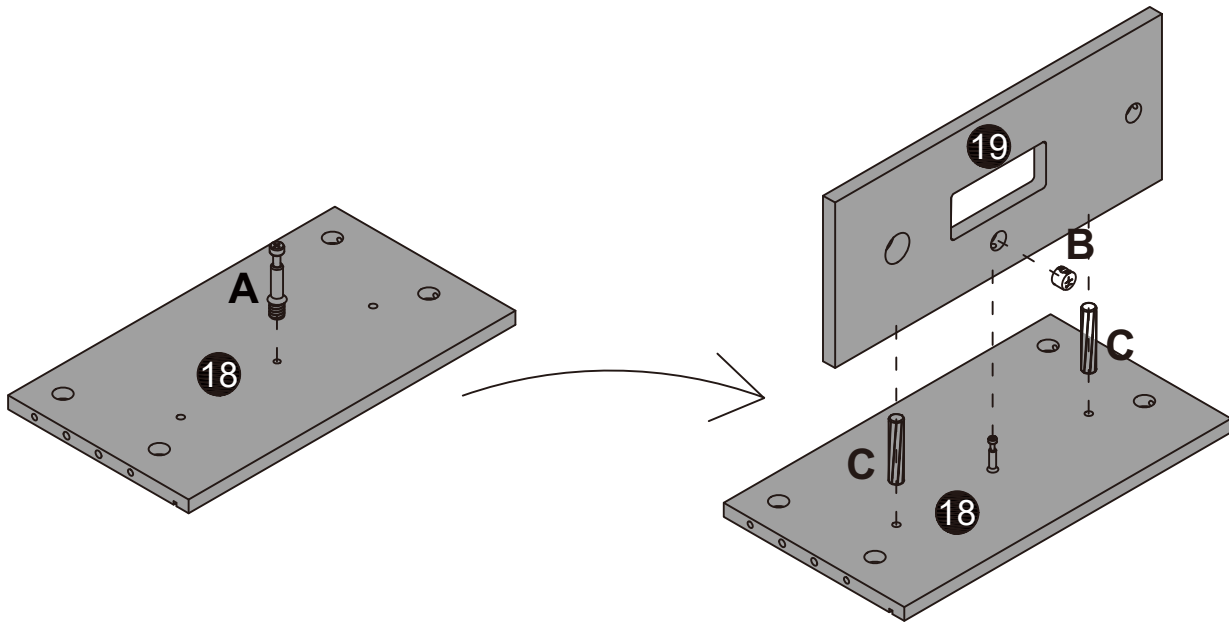


A x4

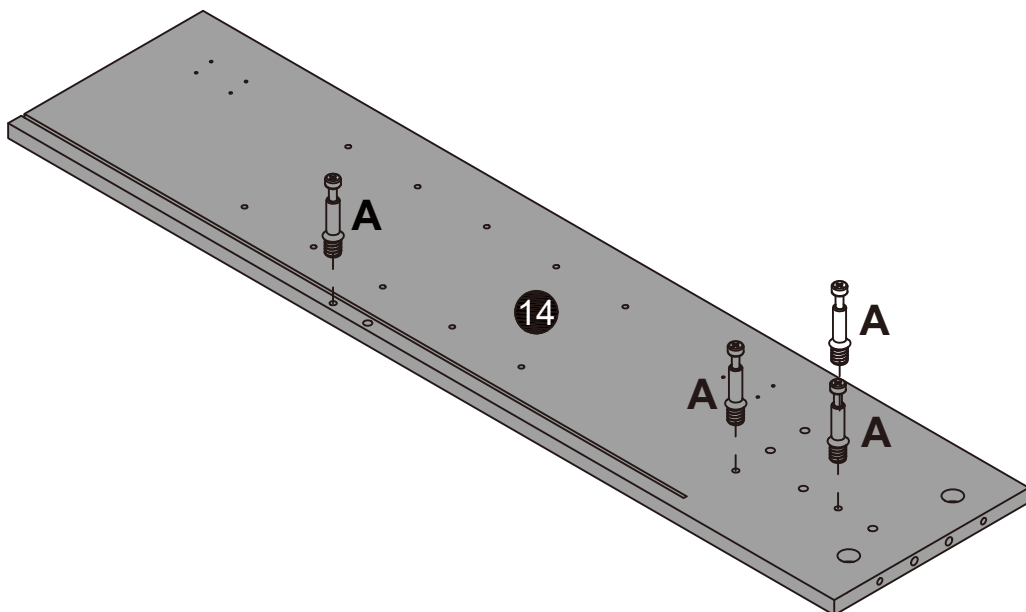



B x4



C x5

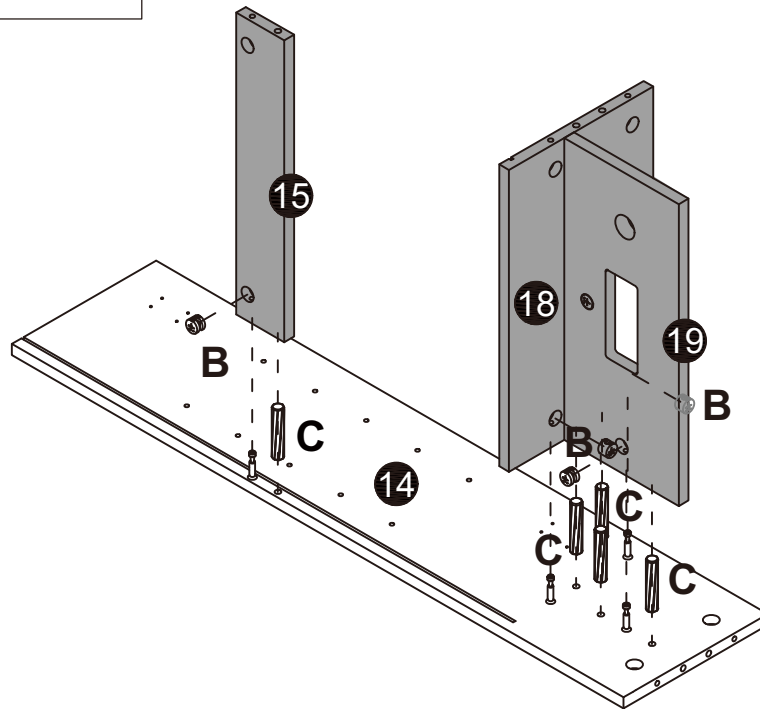


A x3

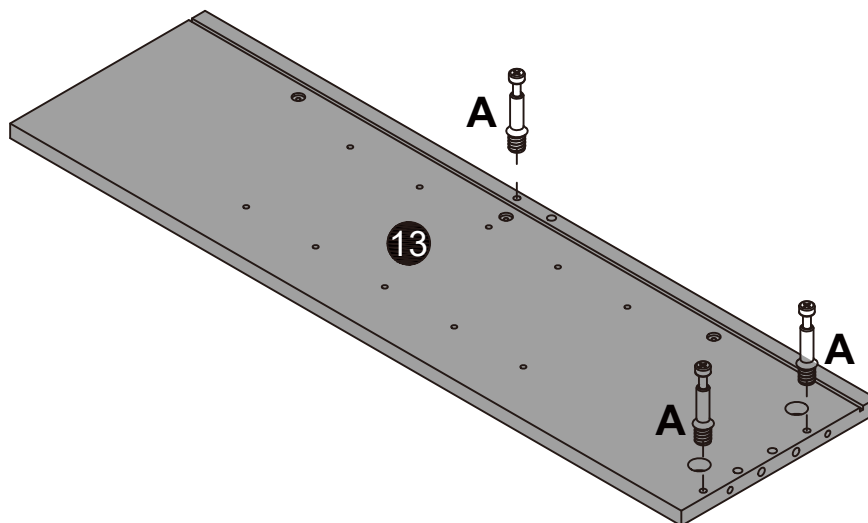

B x3

C x3


26

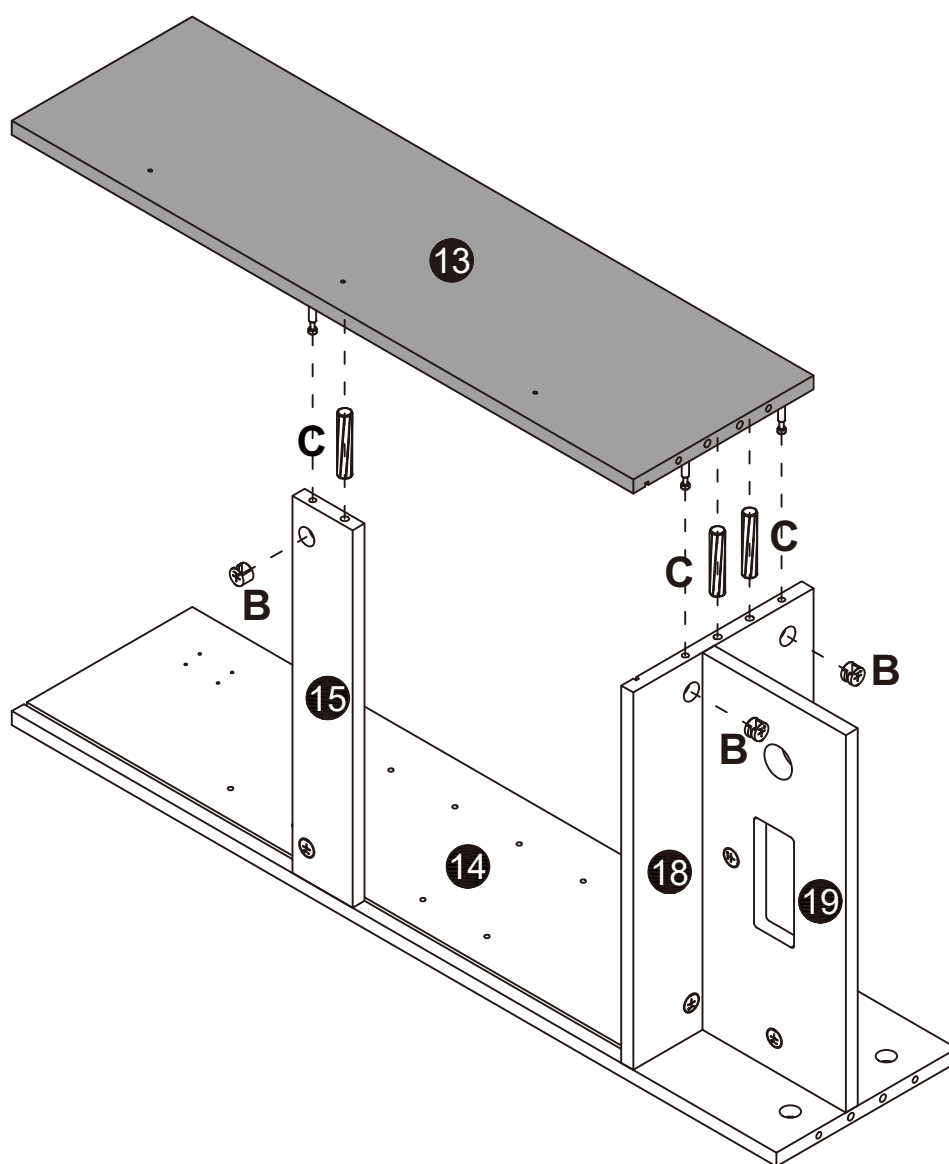


B x4




C x4

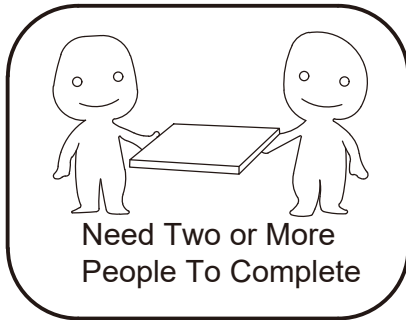



! Finally, tighten the hardware
O screws to 100%

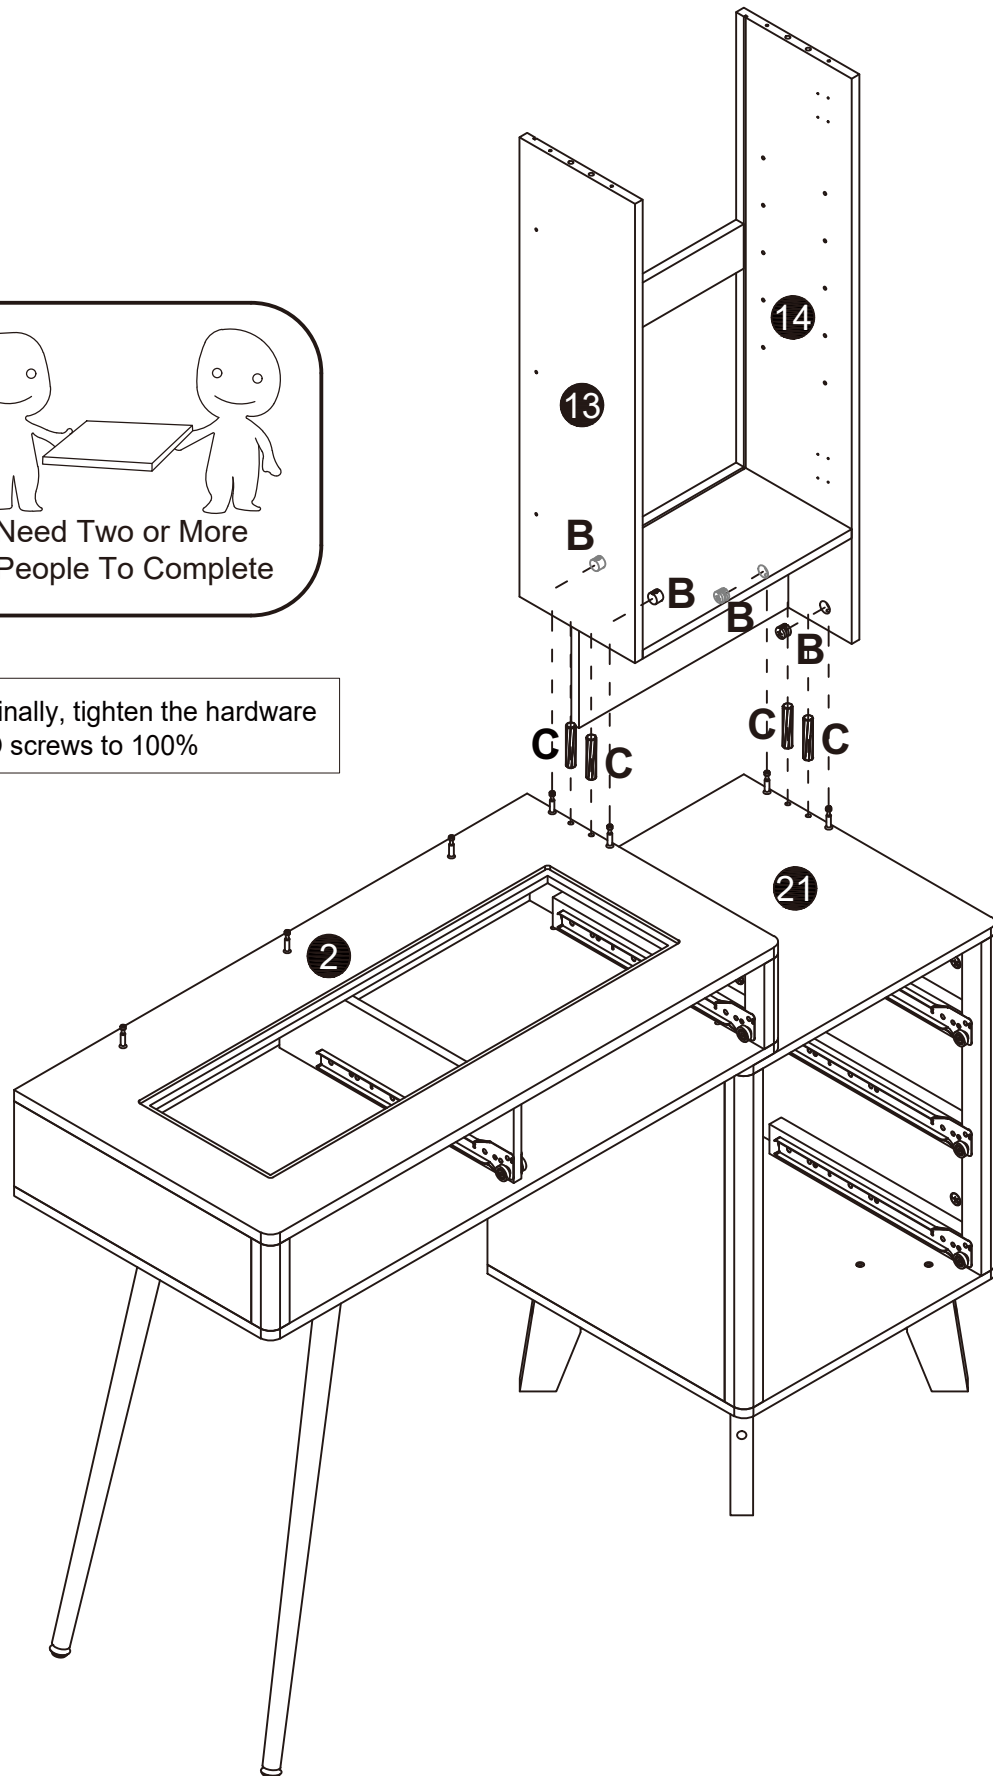


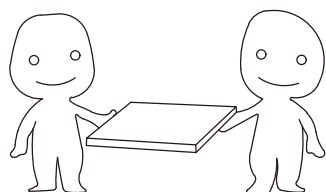

Need Two or More
People To Complete

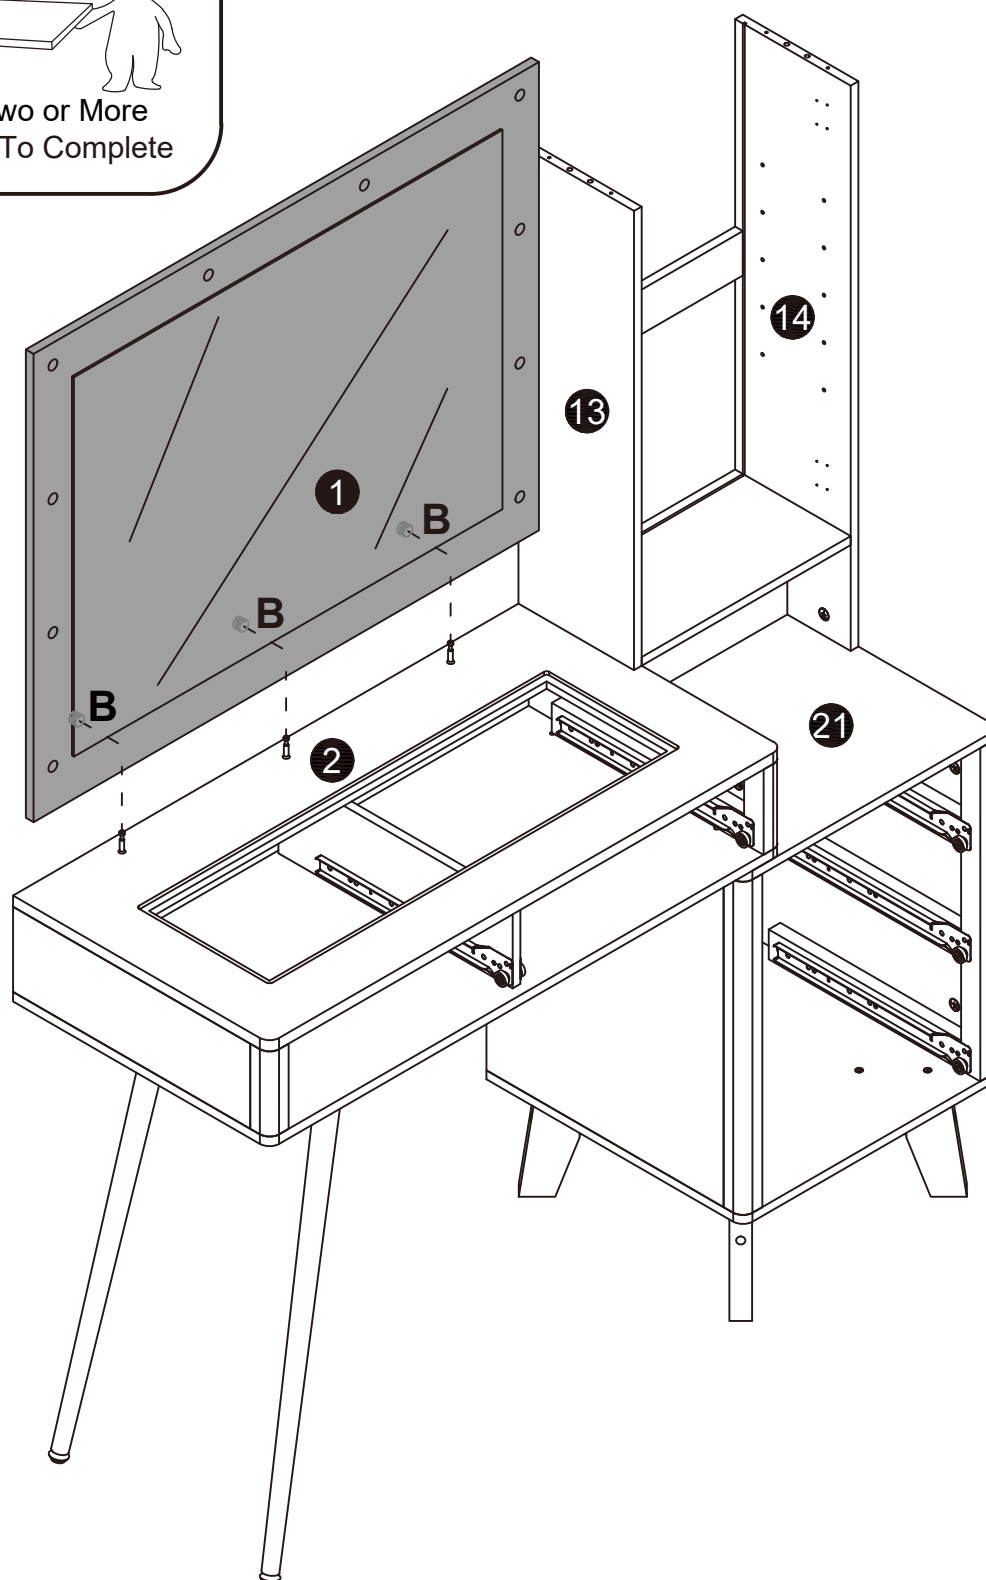

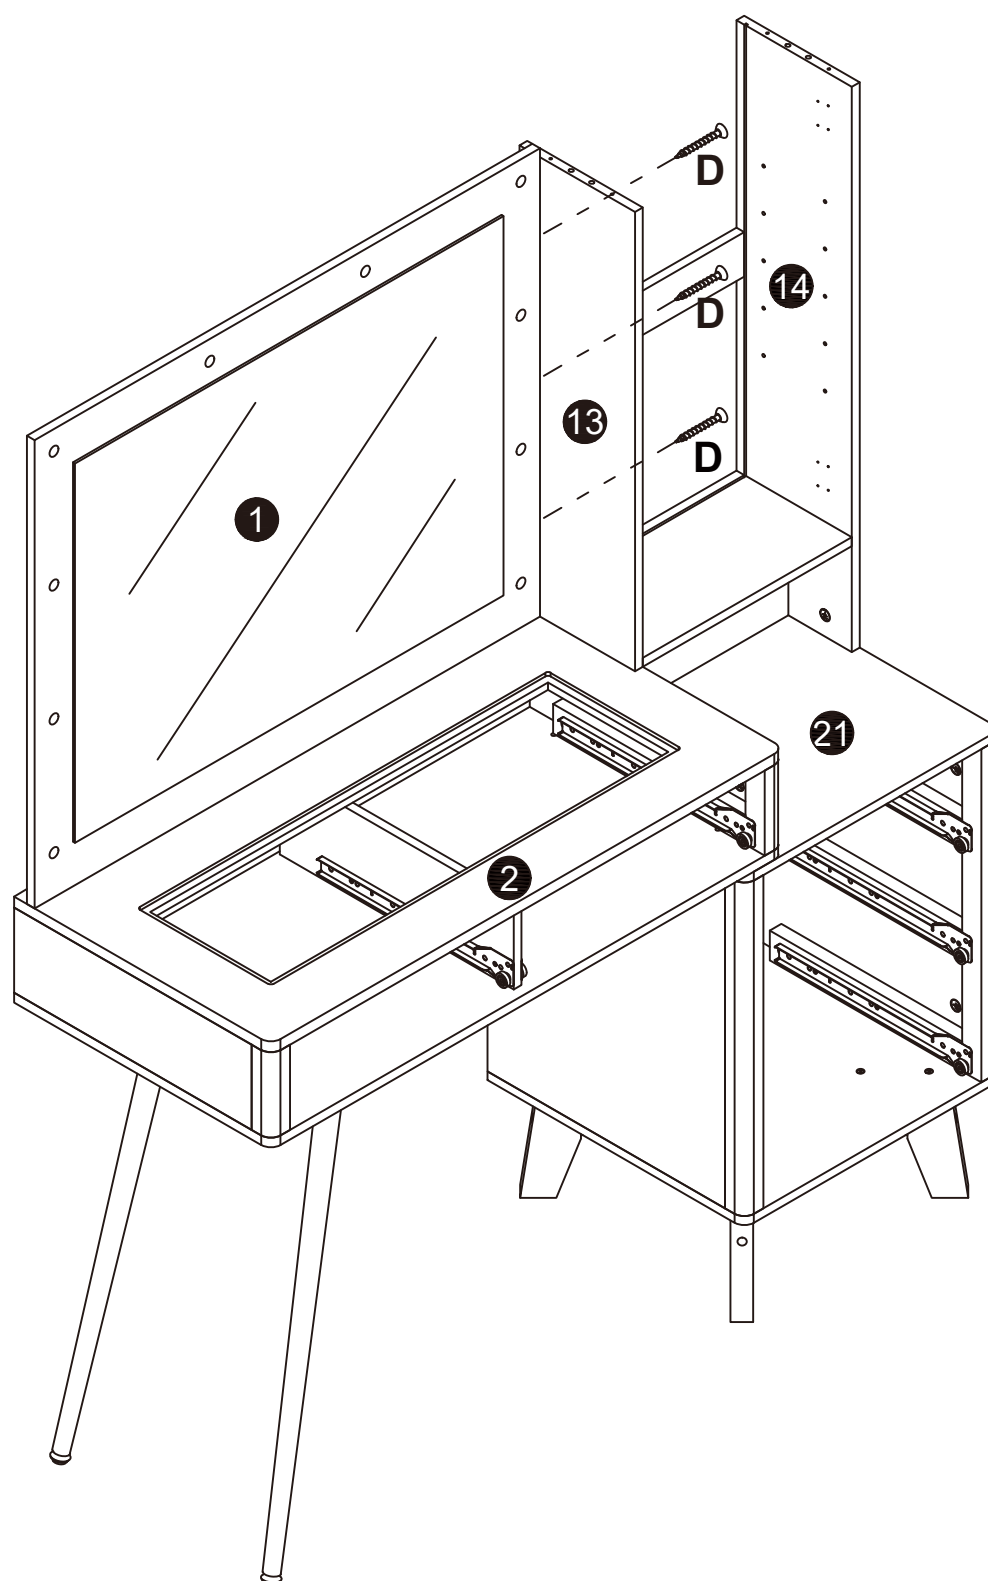

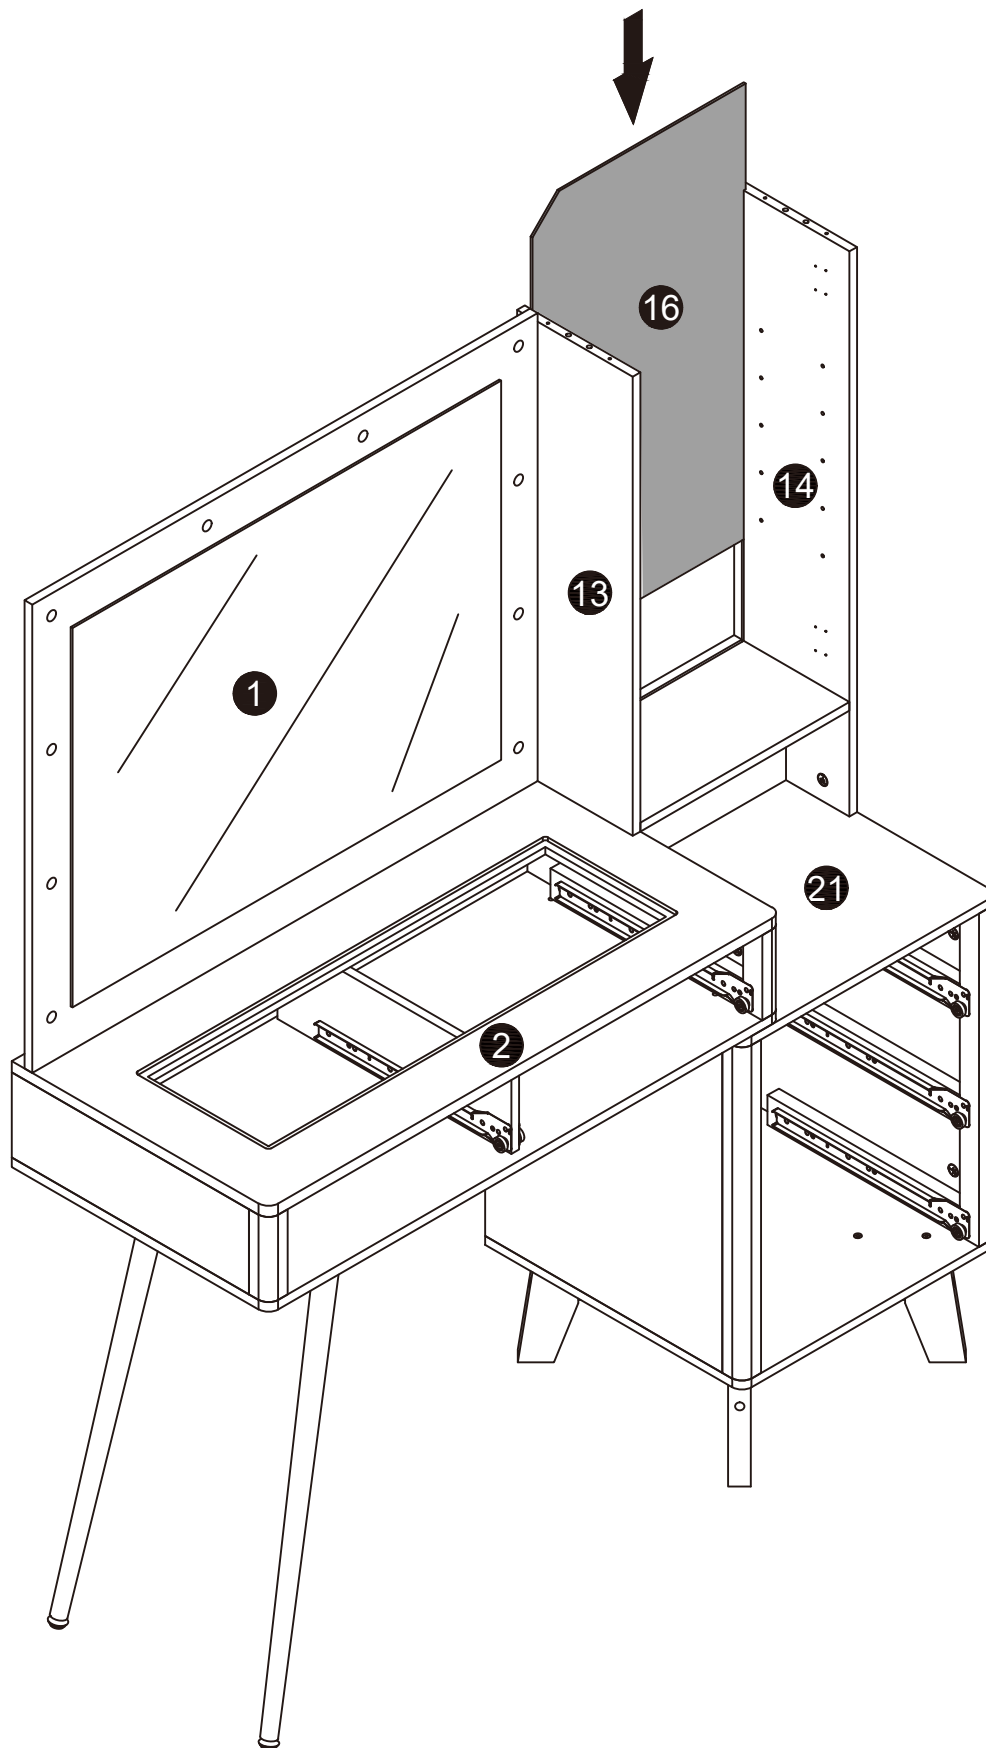

E x2



S x1



T x1



T-1






T-2

U x1






Tear off the back
glue of the light strip

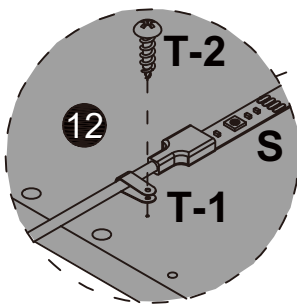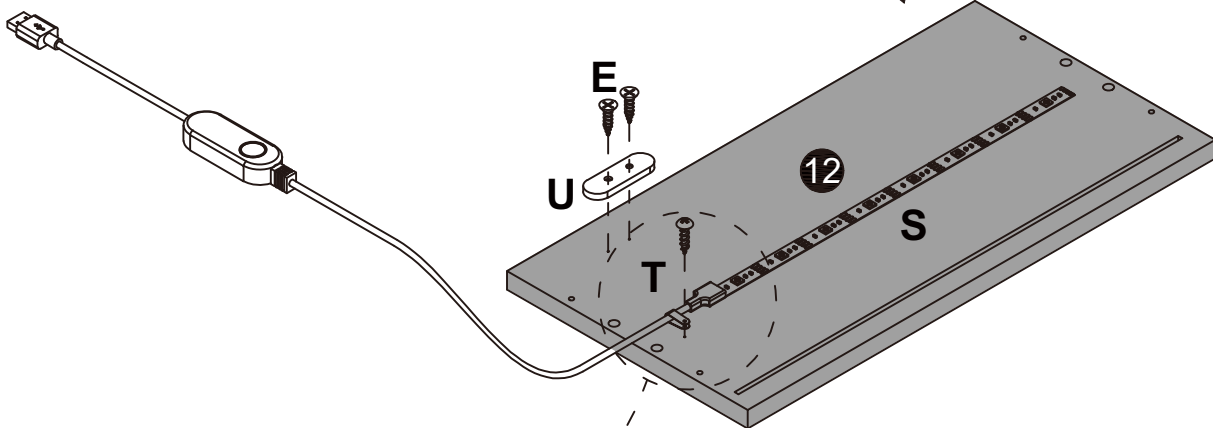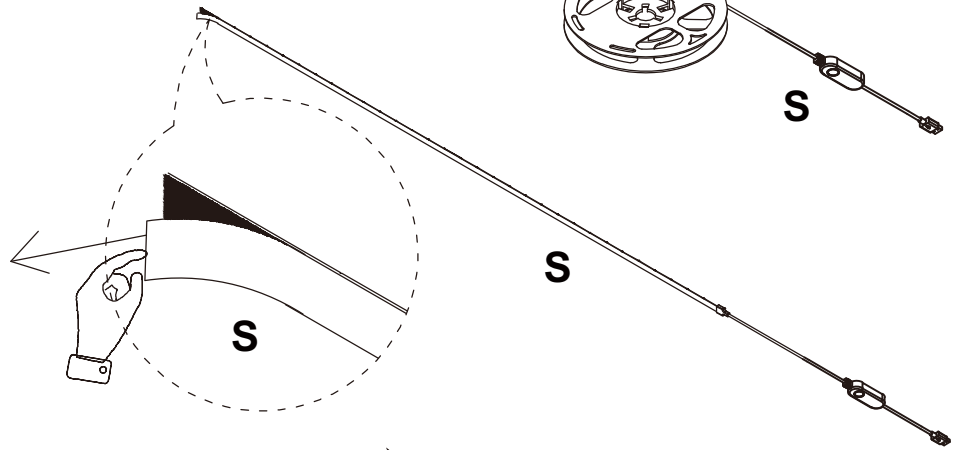


C x4

D x4

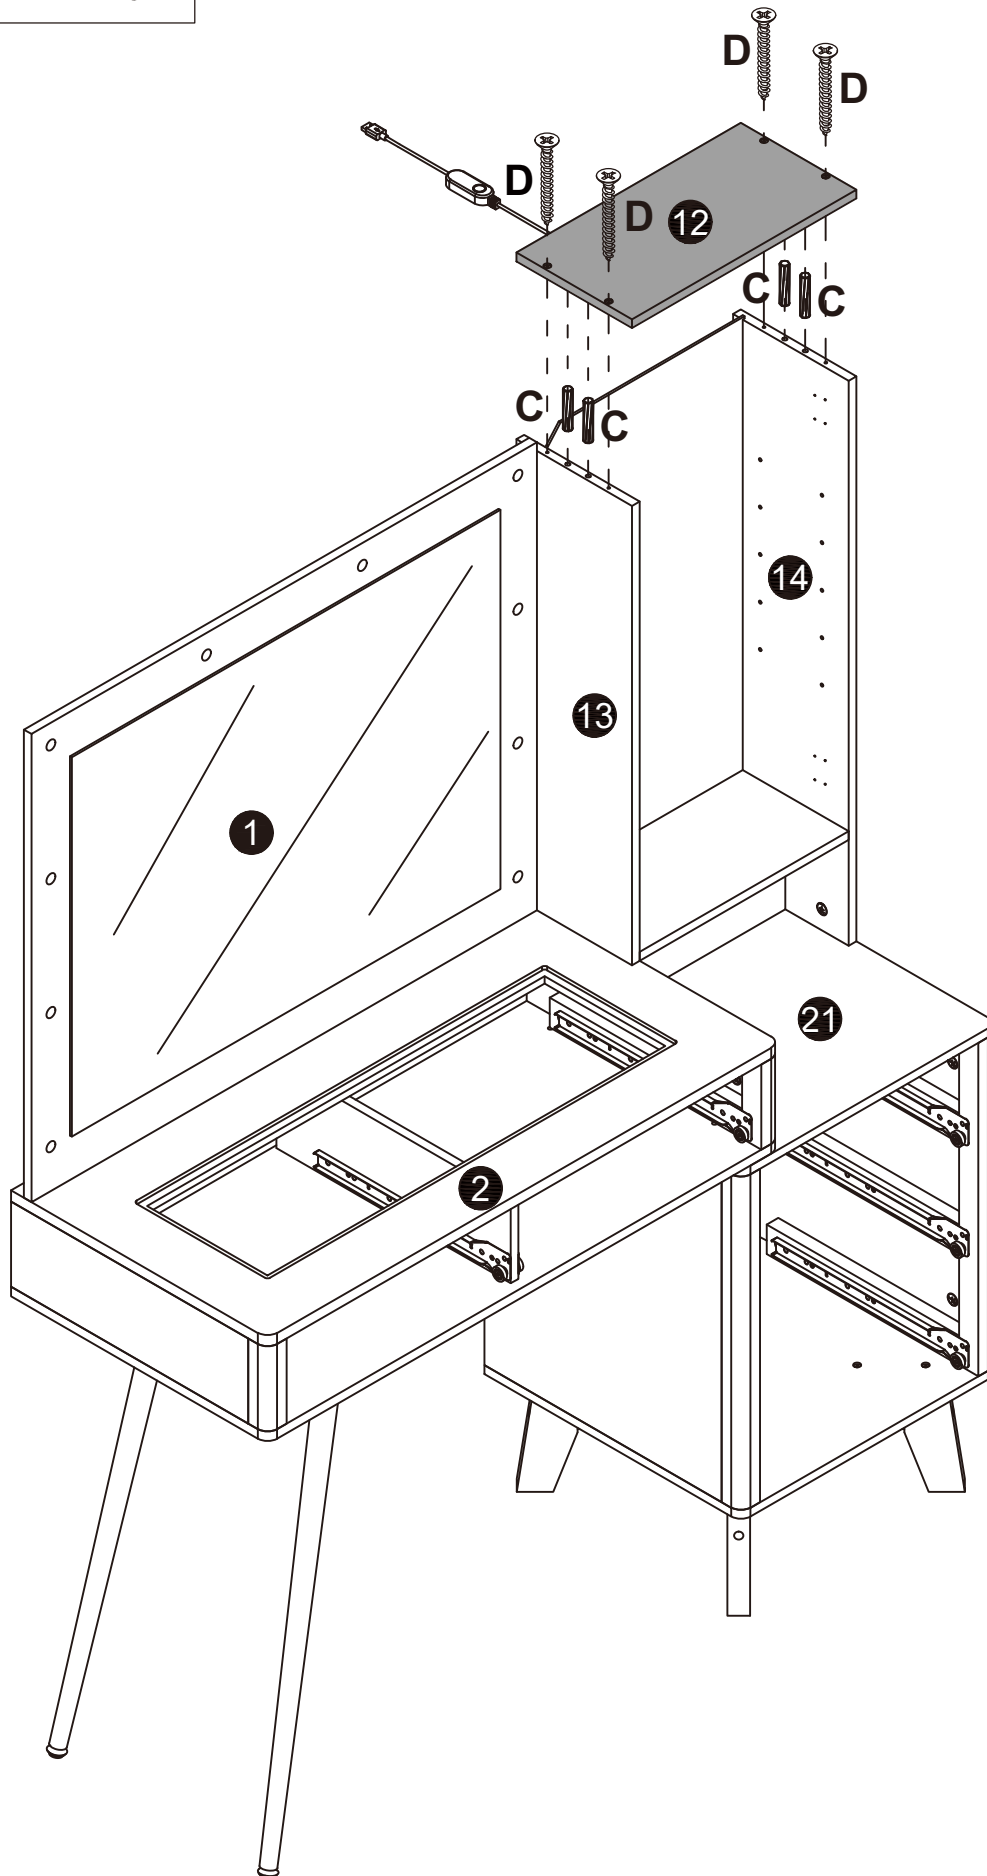

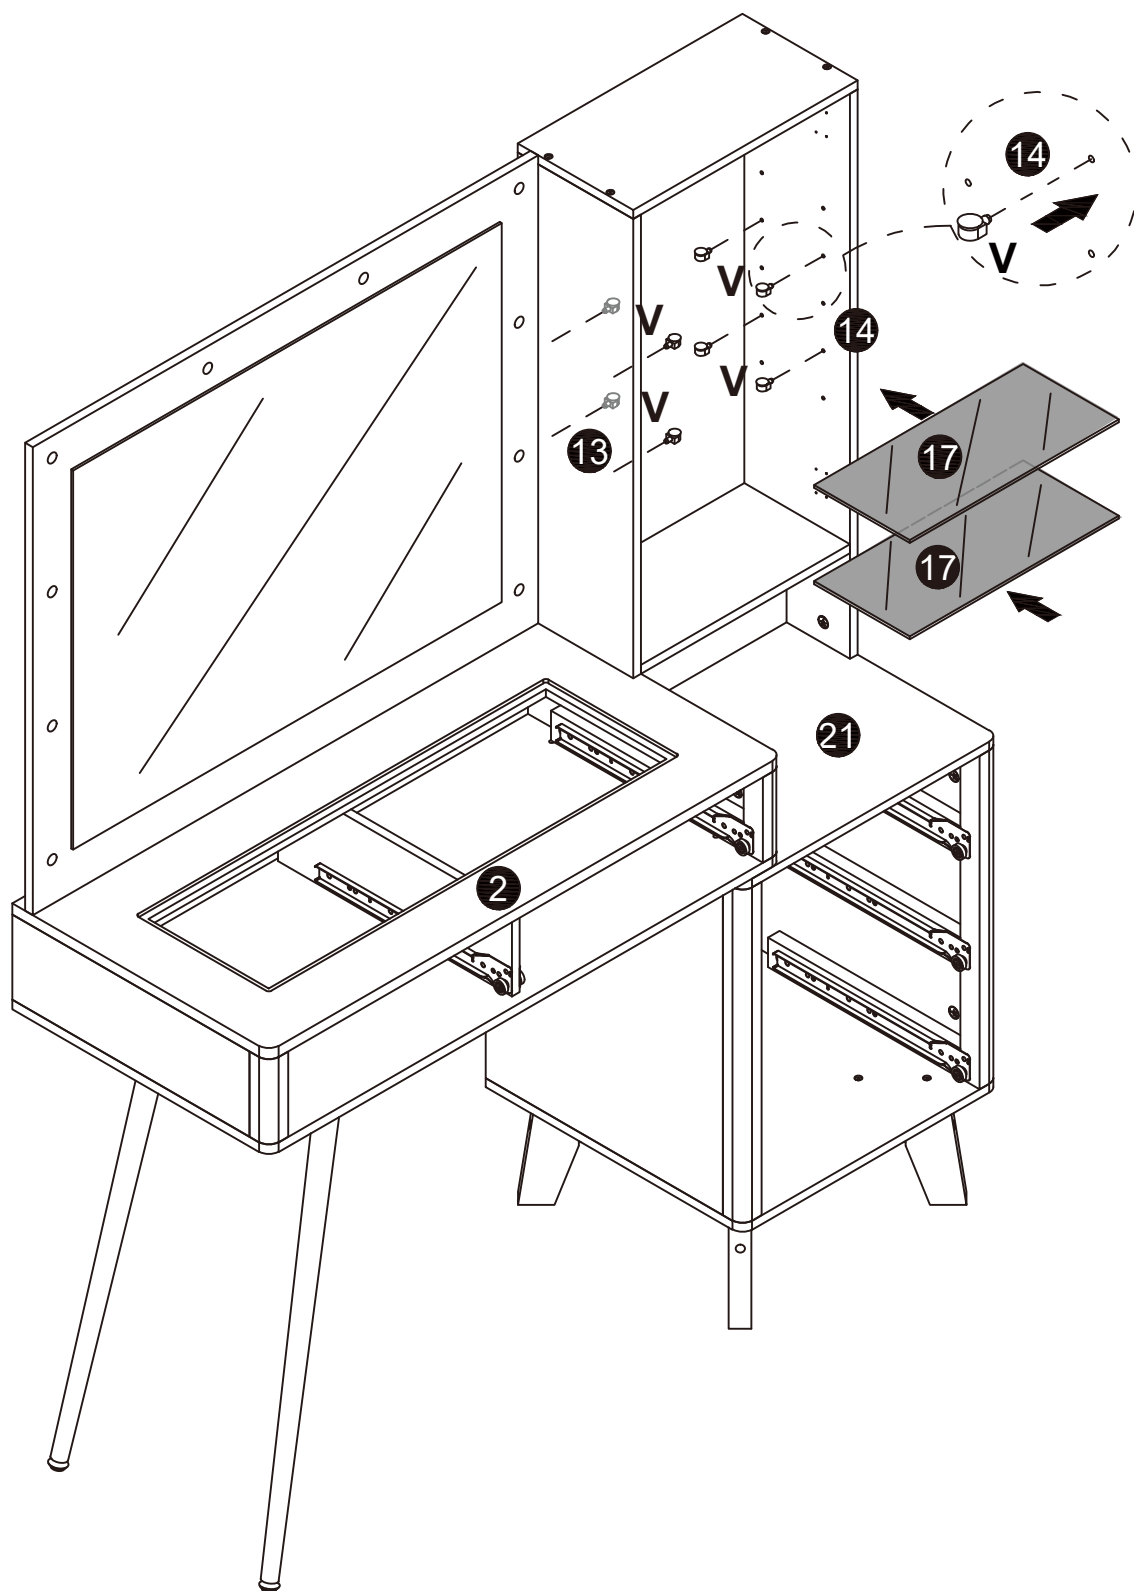

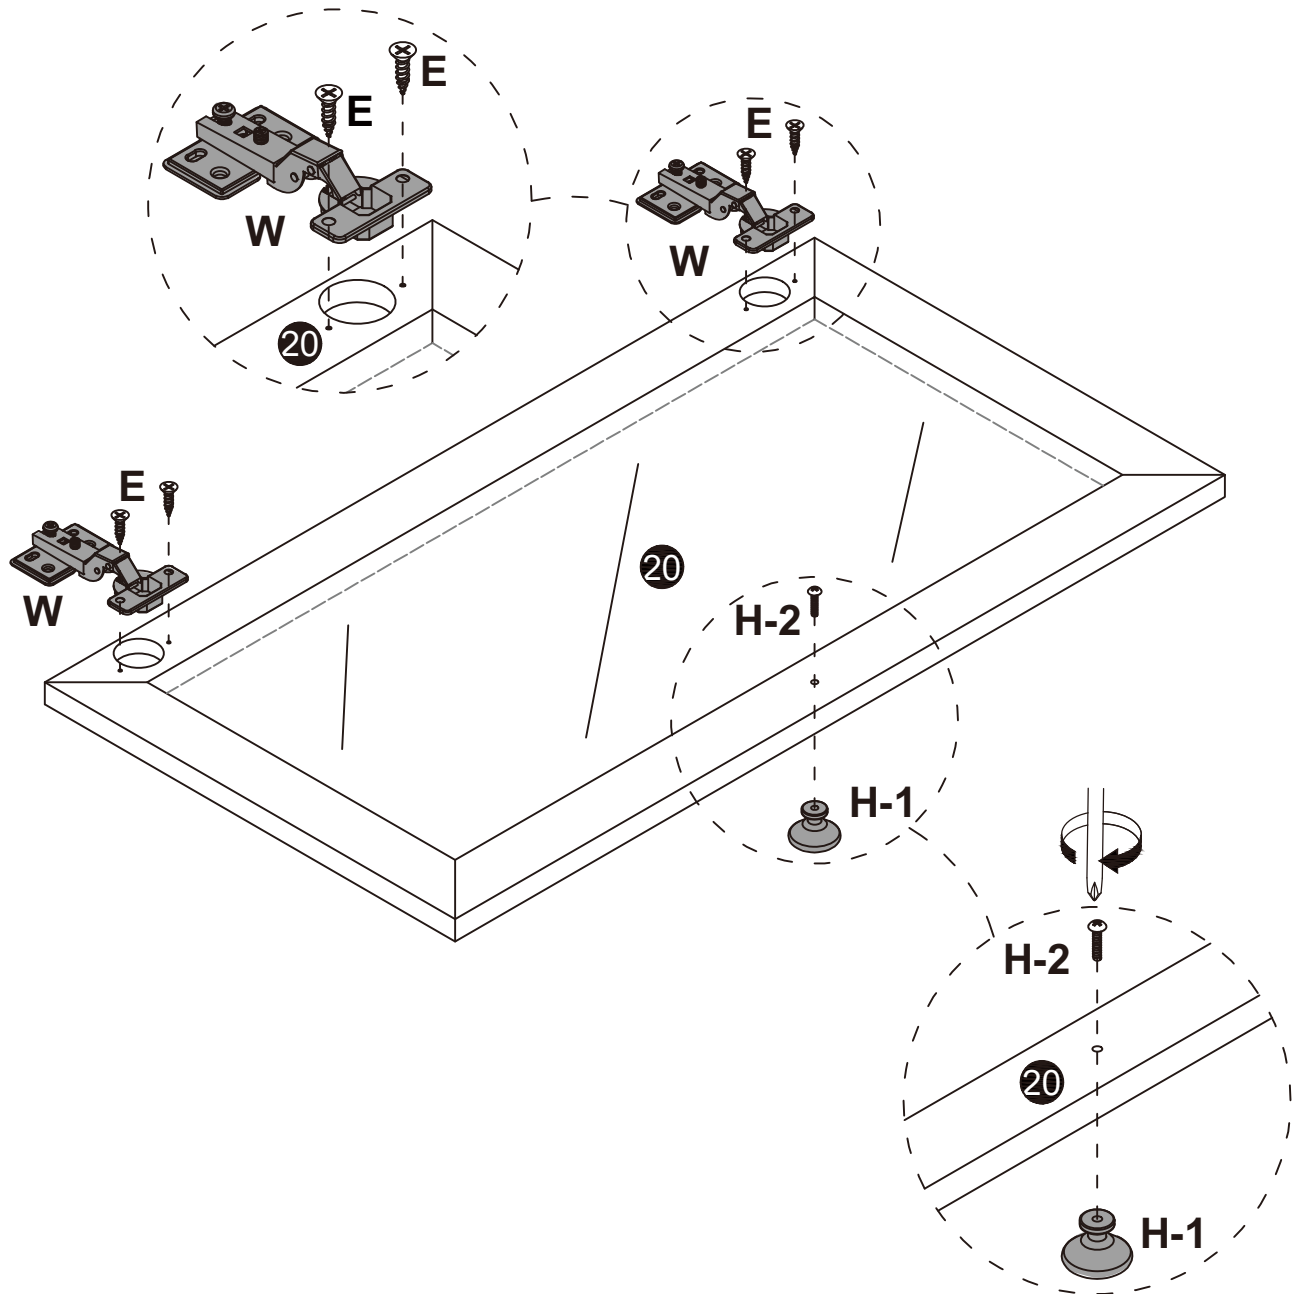


E x8






X x1





Y x2

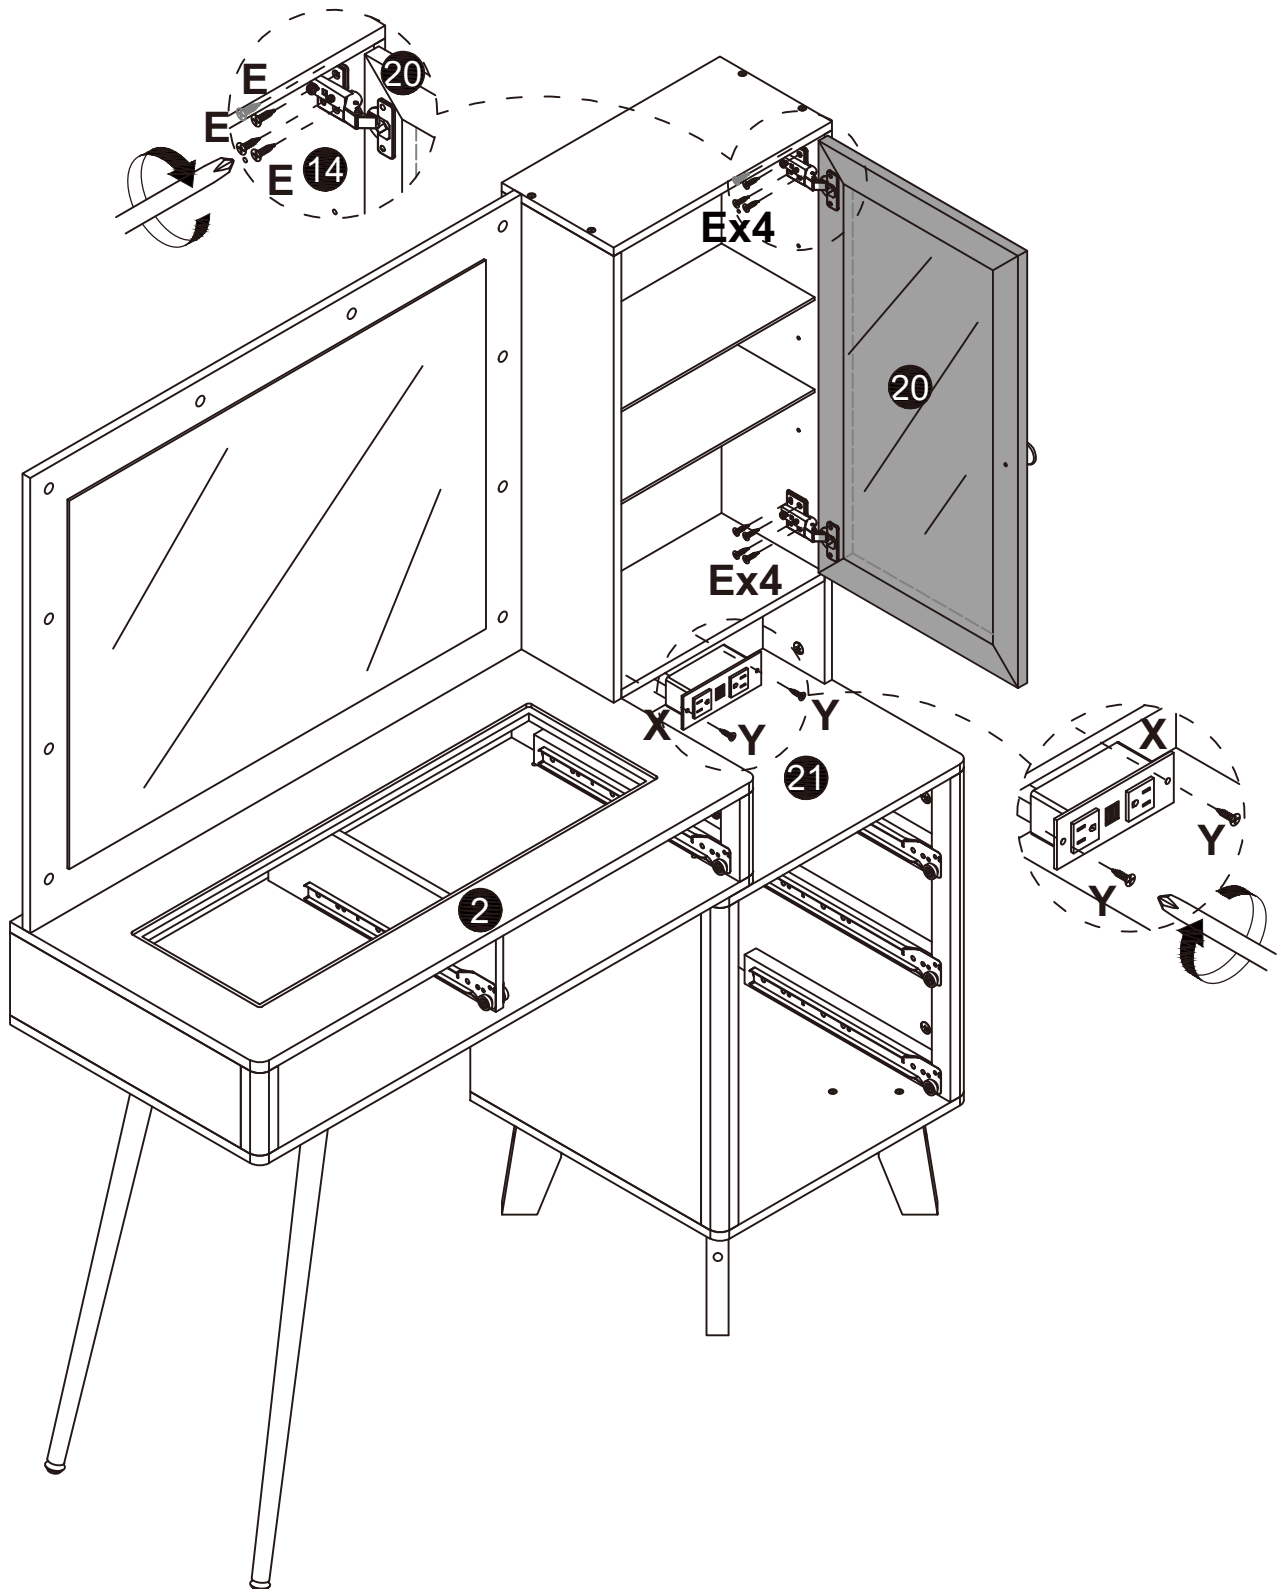

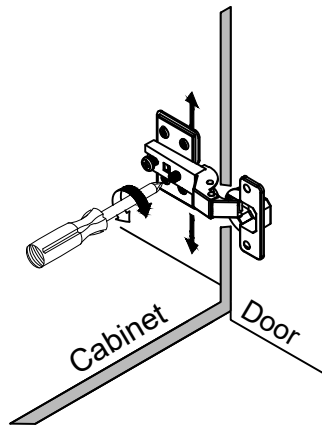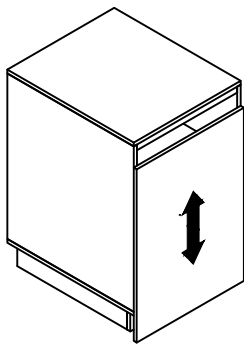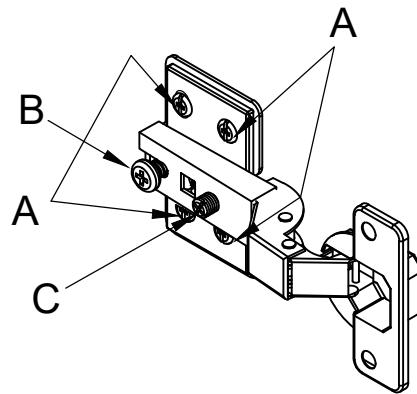



To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

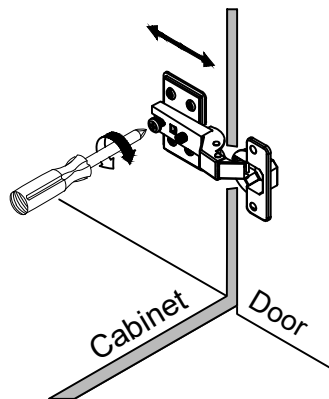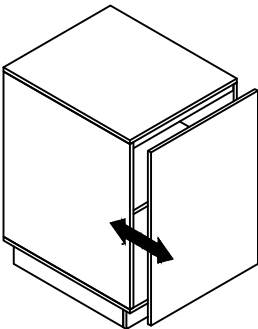

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".



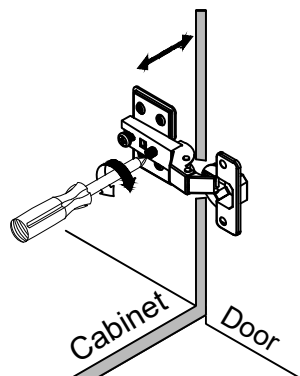
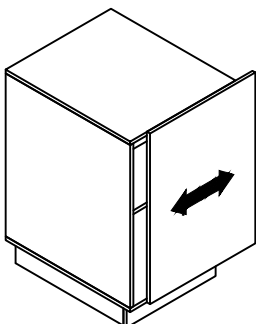


To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

x10
BB-1

BBx1
x10
BB-2

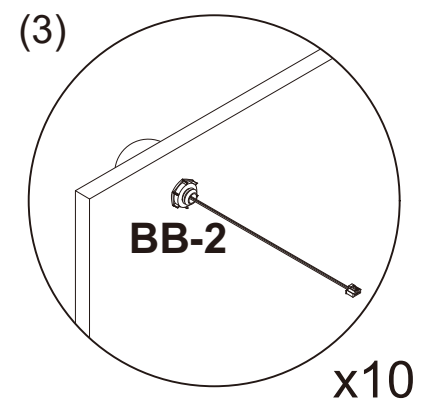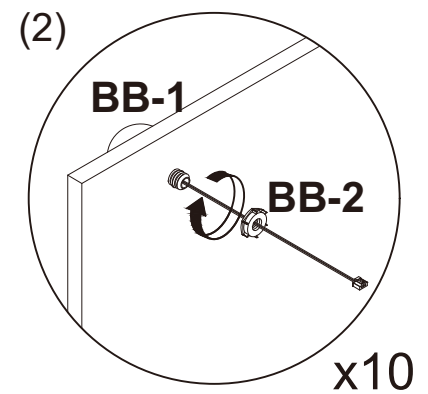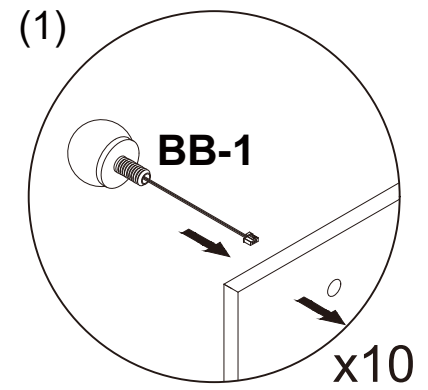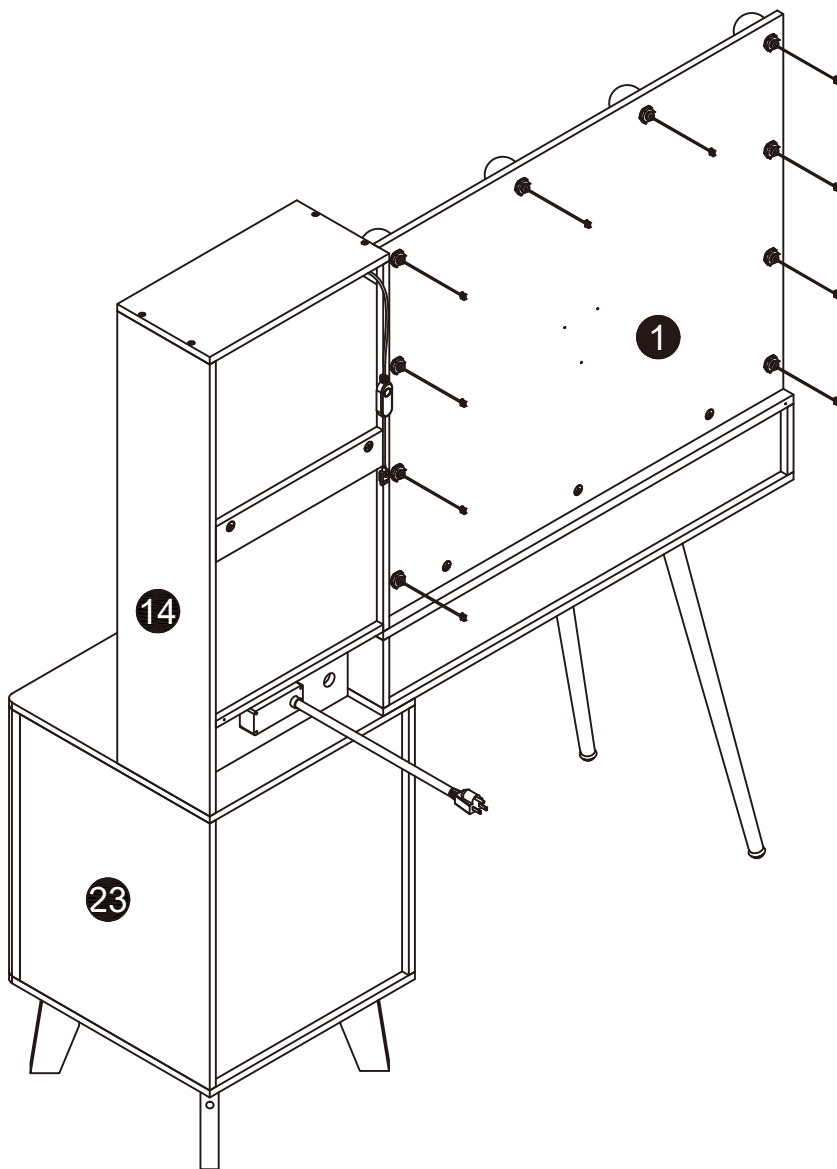

T x1

Q x2

BB x1




T-1




T-2




BB-3




BB-4

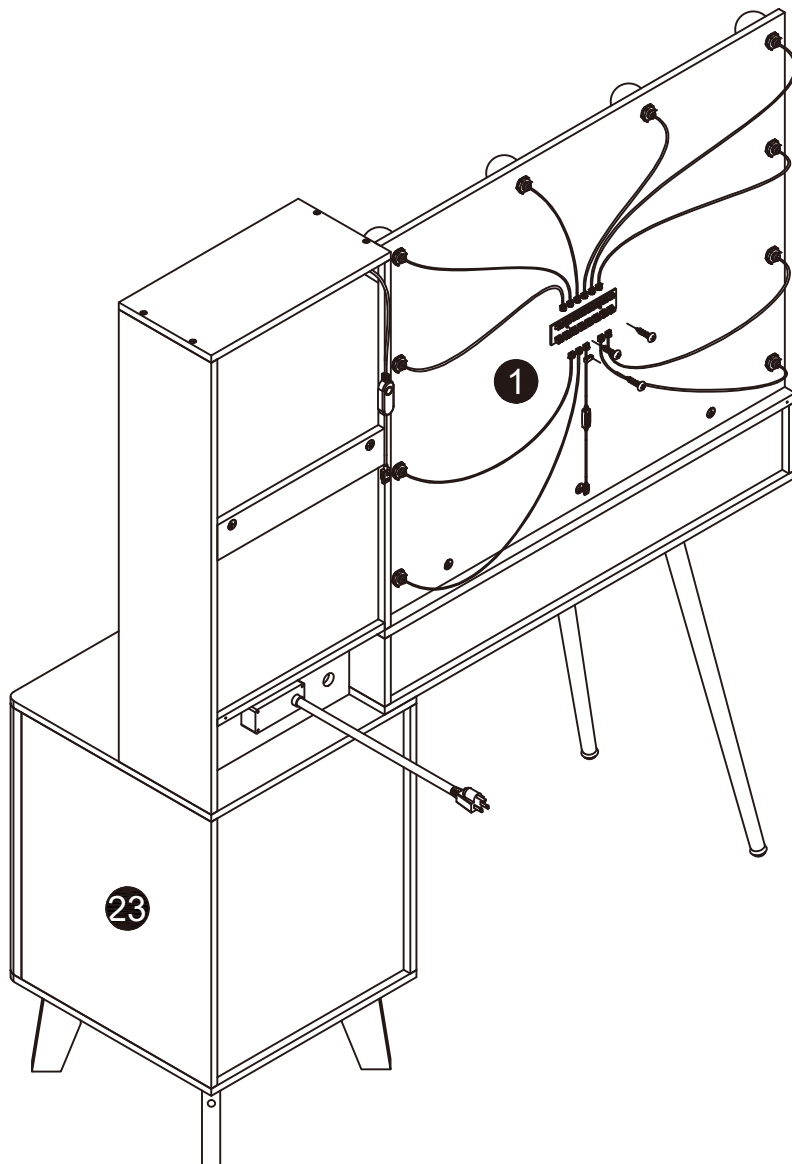


(1)

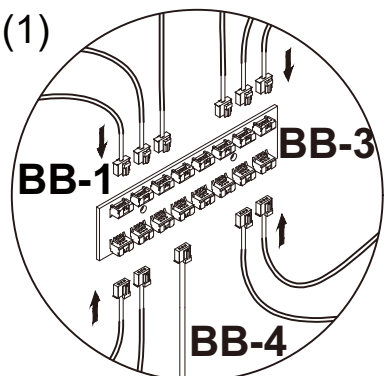


(2)

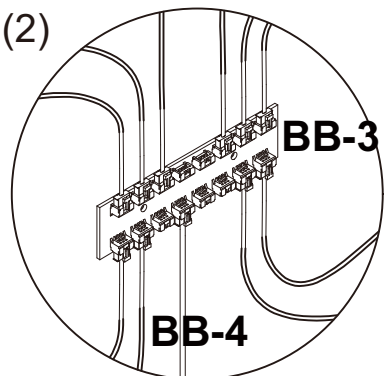

(3)

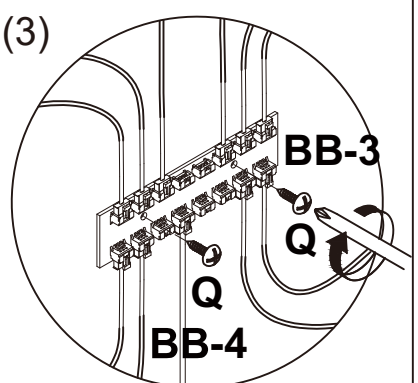

(4)

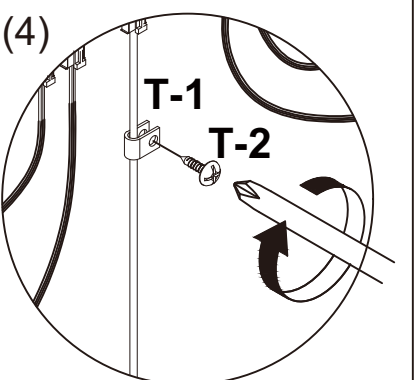


Z x12




Z-1




Z-2



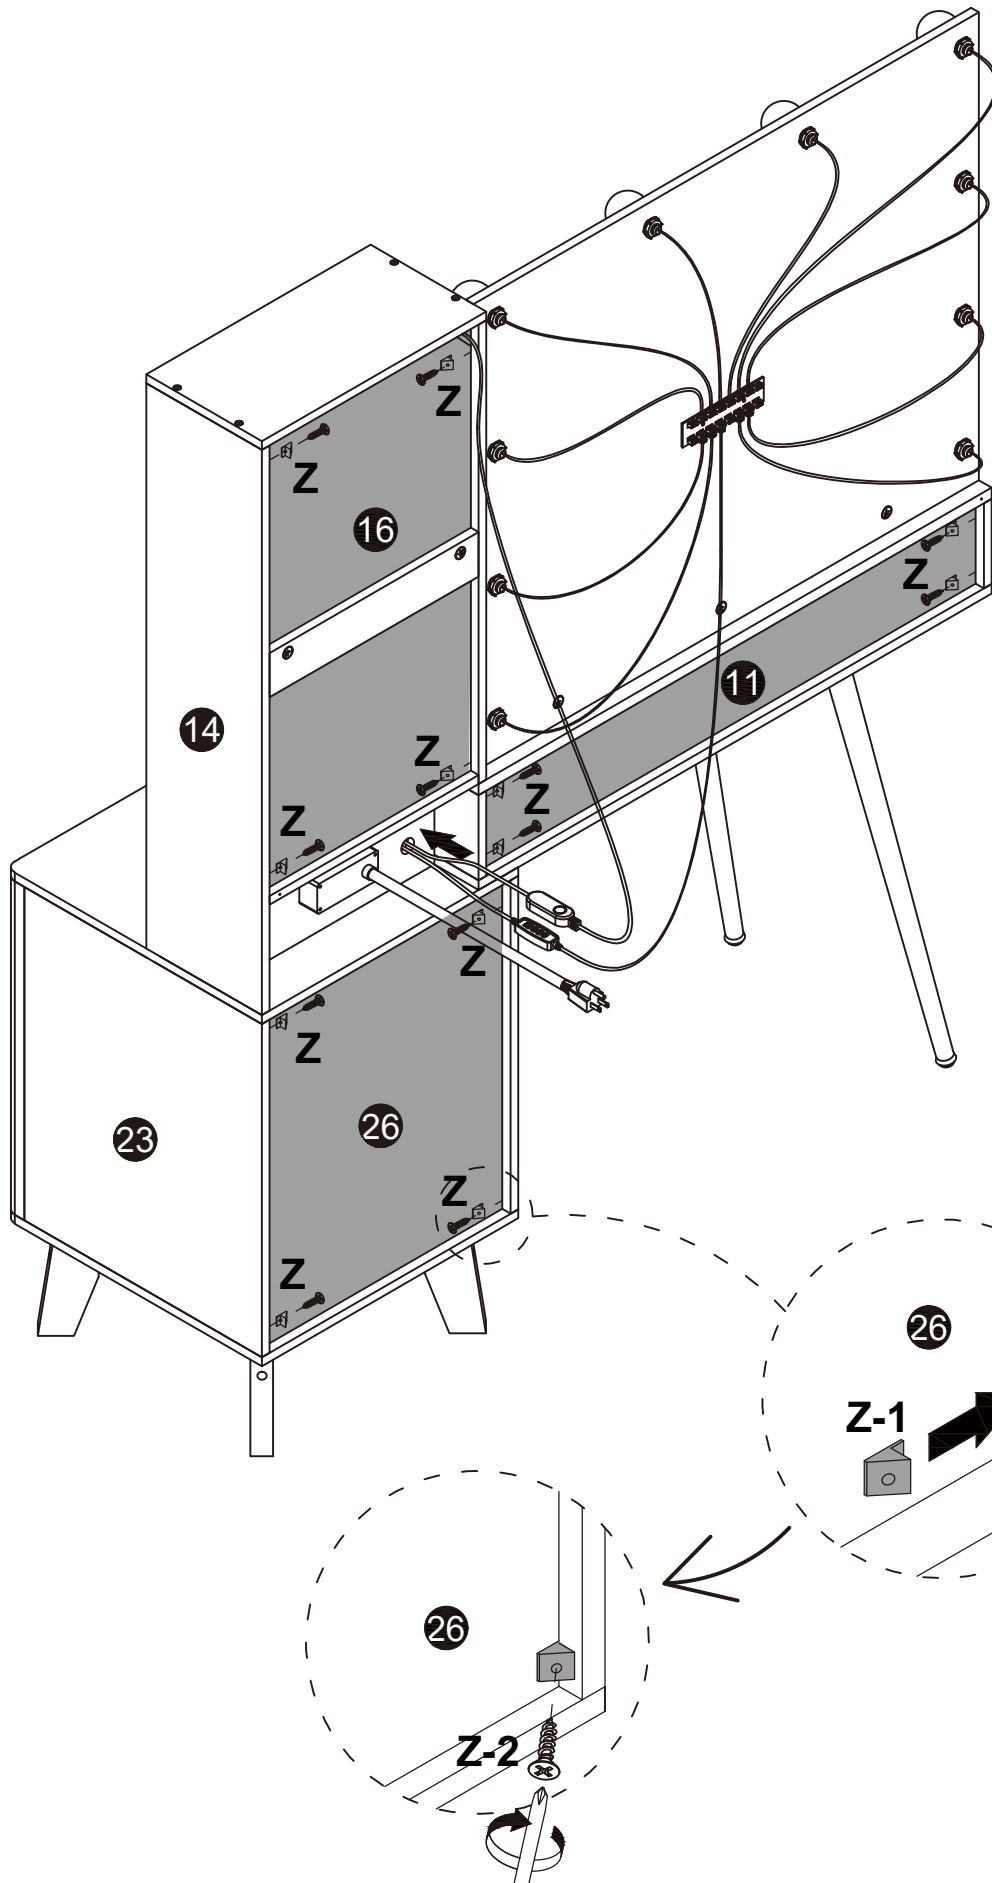


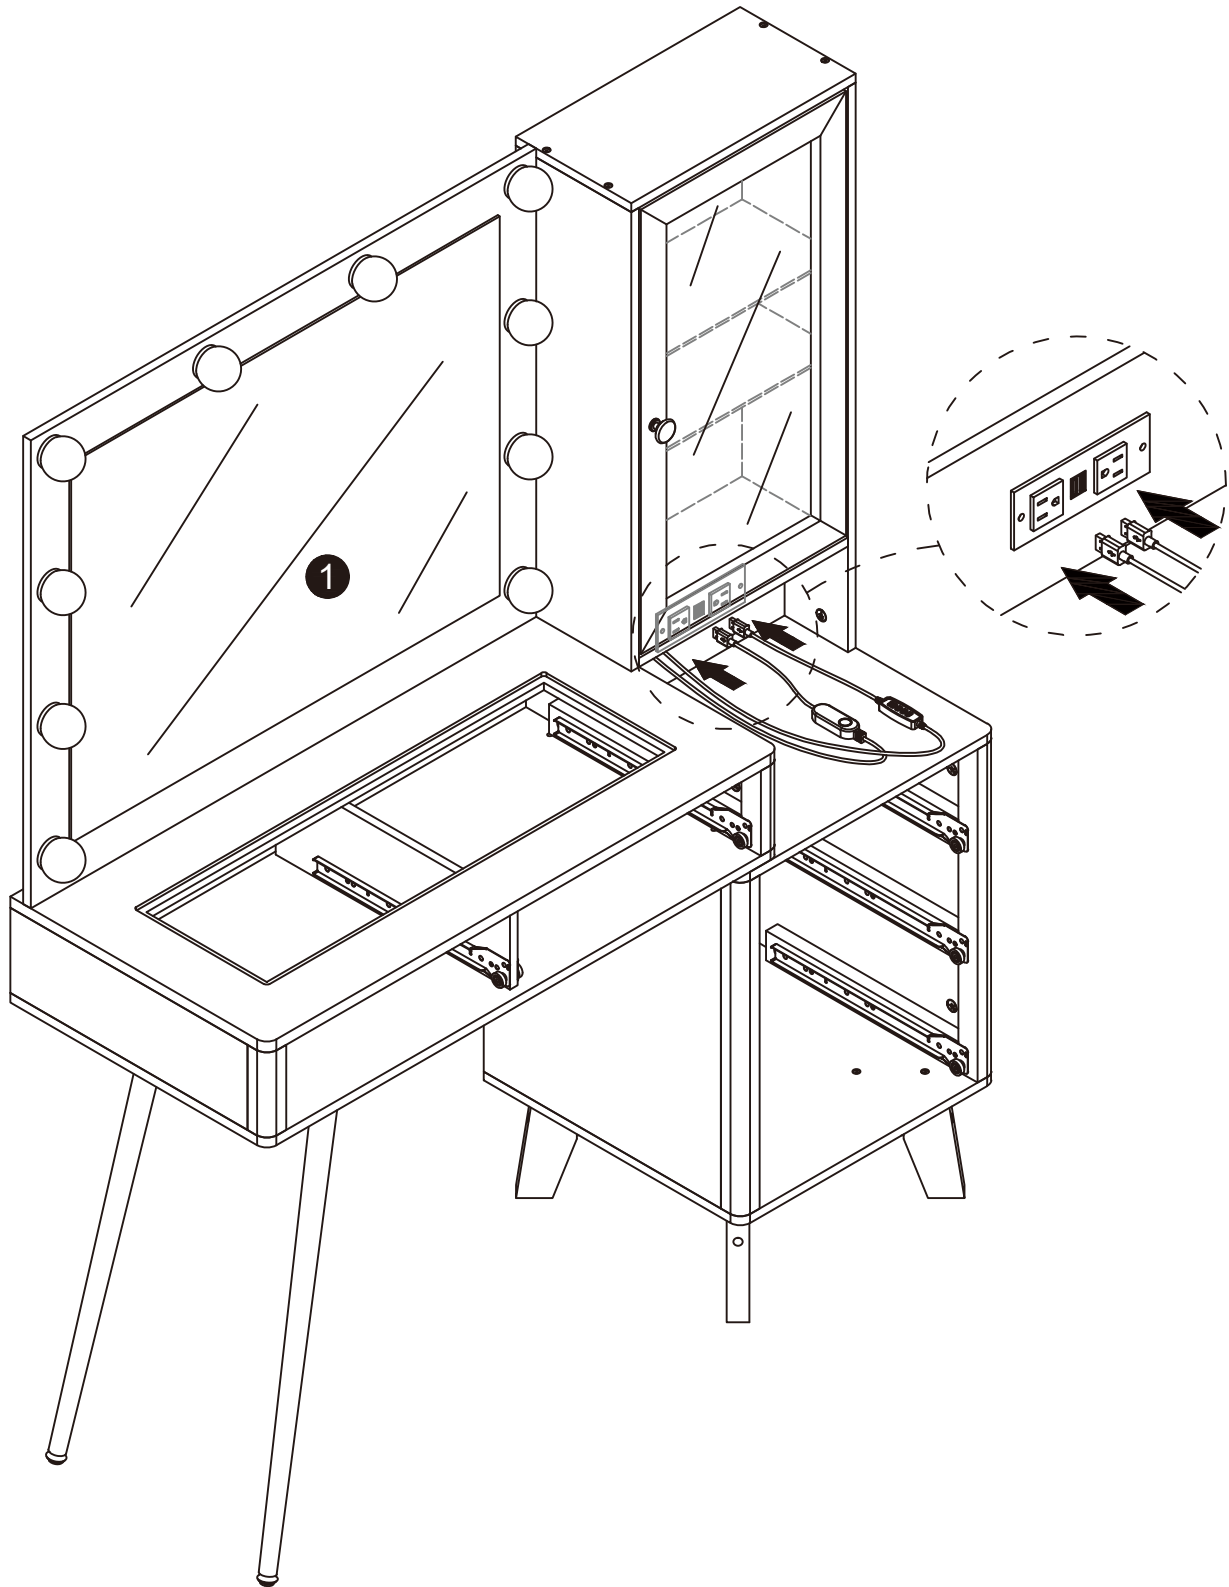



(1)

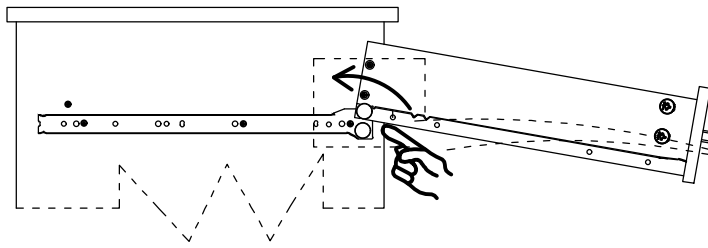

(2)

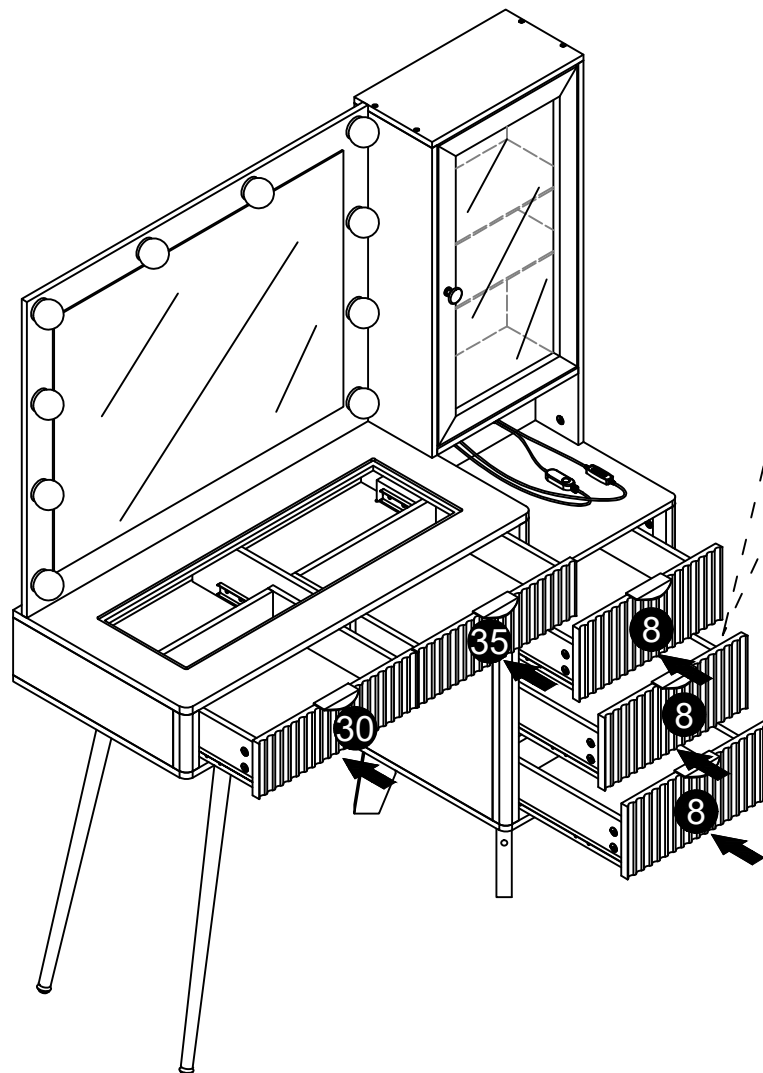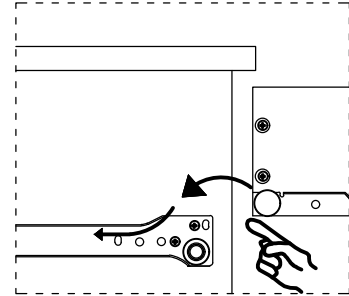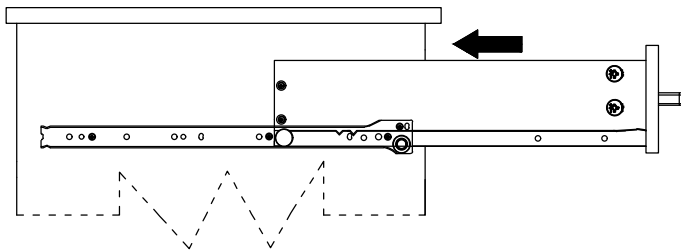

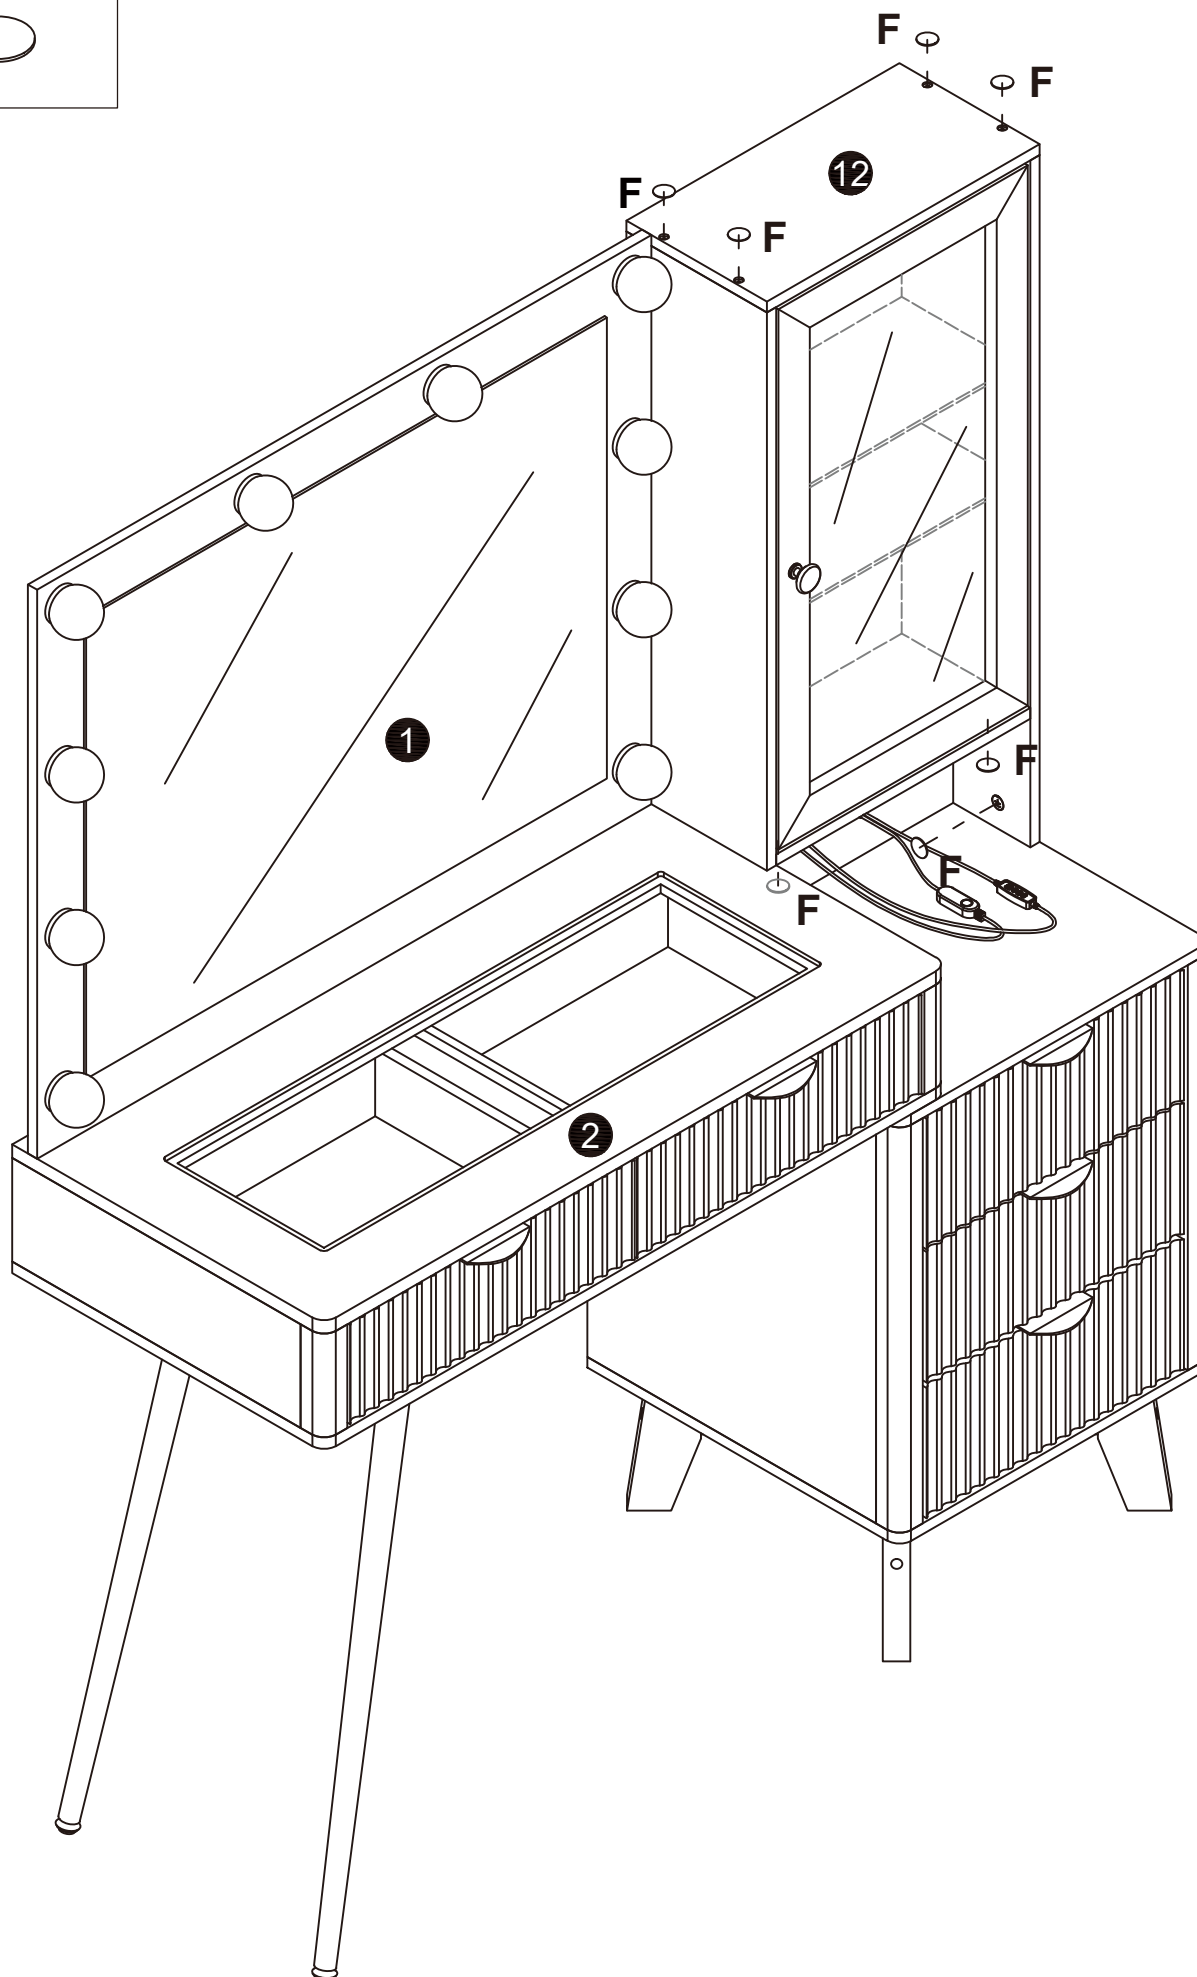

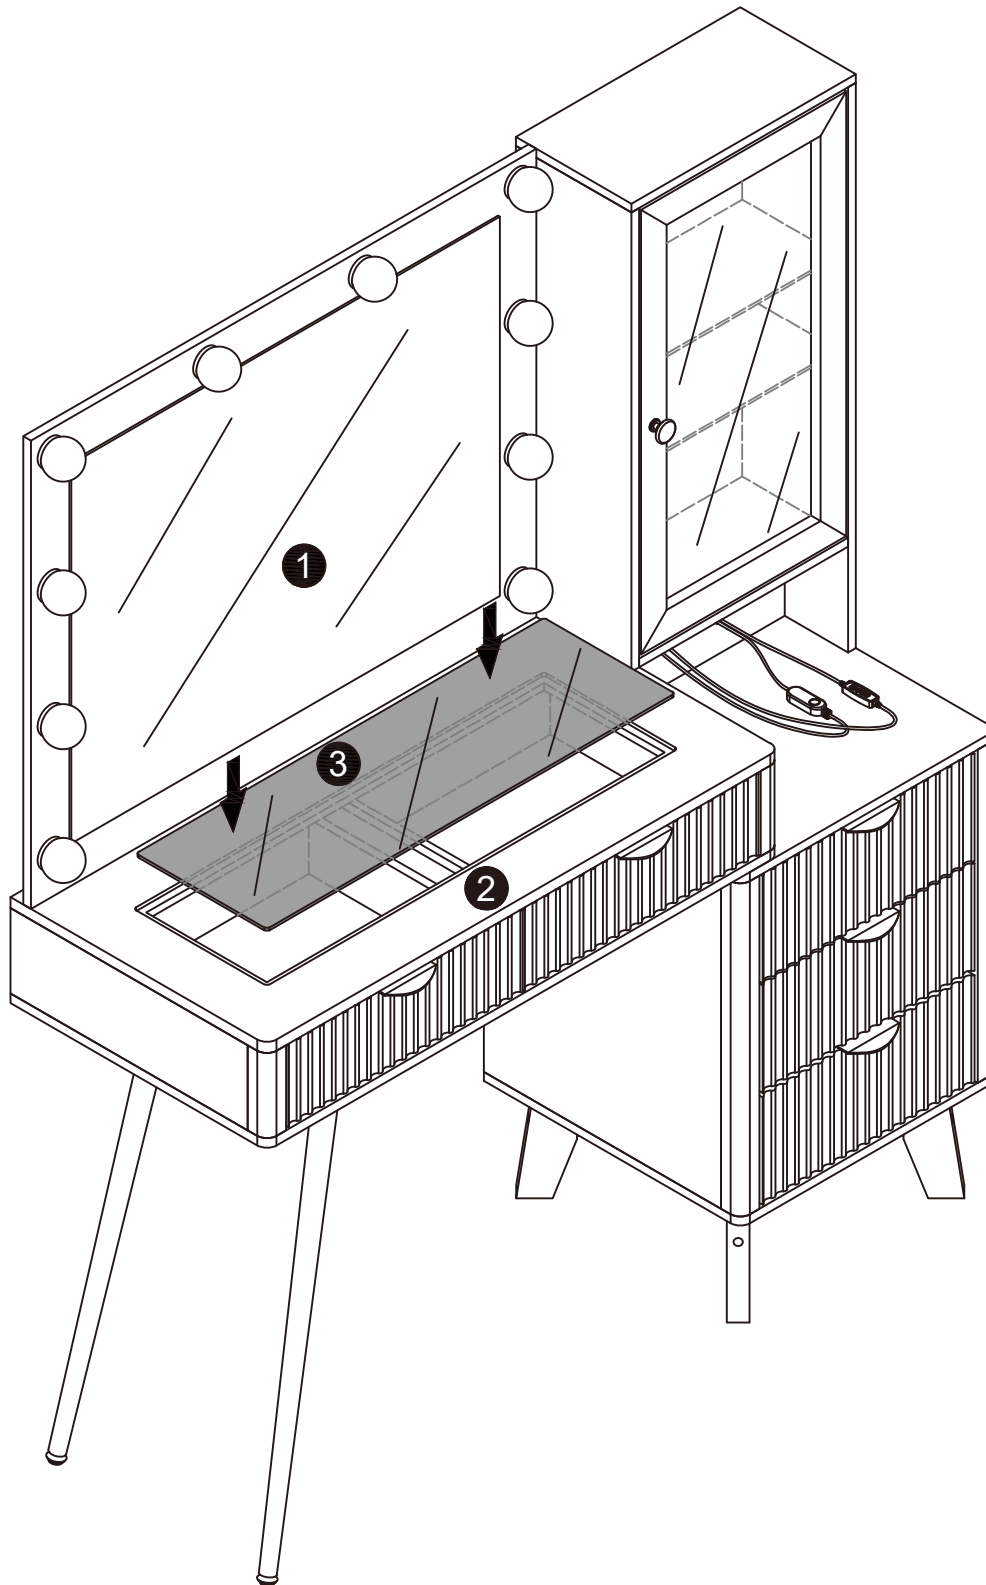

D x2



AA x2





AA-1




AA-2

I x2

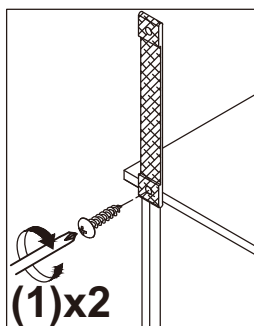


(1)x2

First fix the anti-rewind screw in the reserved hole of the product.

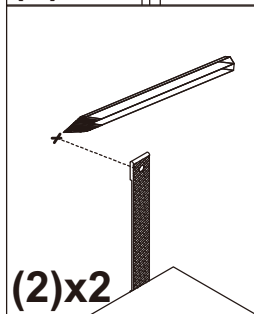


(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

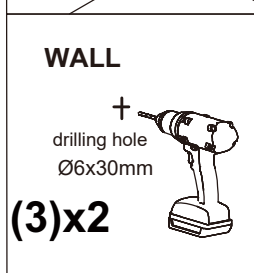


(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

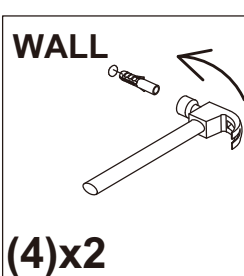


(4)x2

Then, put the expansion bolt into the hole


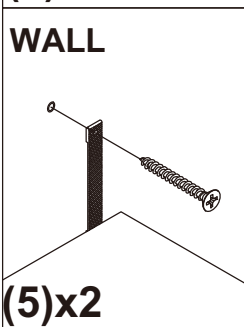


(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

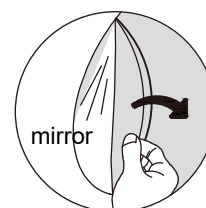

Please tear off the film on the outside of the mirror.

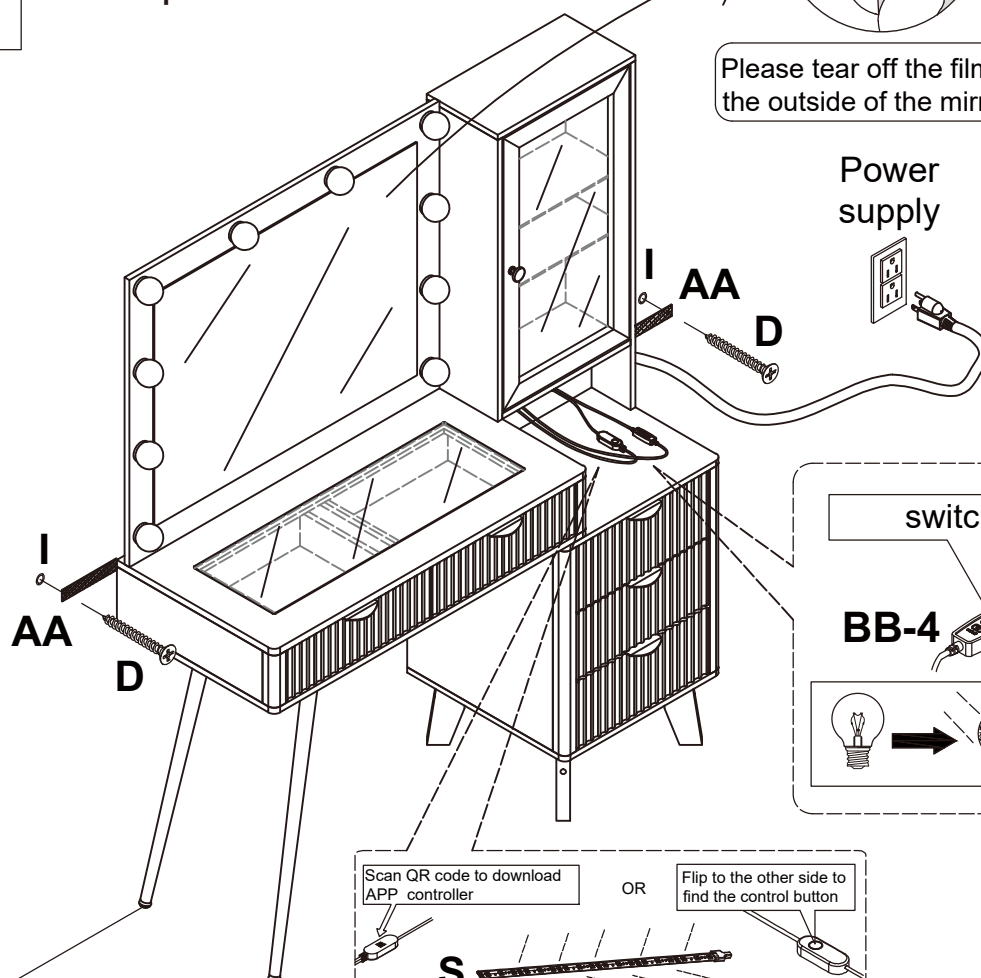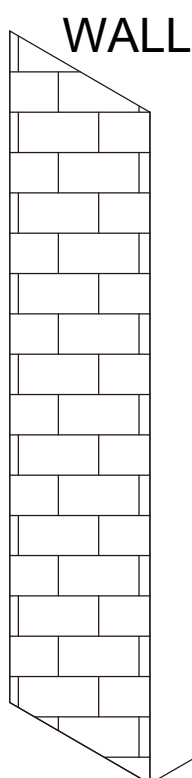

Power supply

switch

BB-4

Scan QR code to download APP controller

OR

Flip to the other side to find the control button

S