


Drawers Dresser

Product ID. 7AXQA

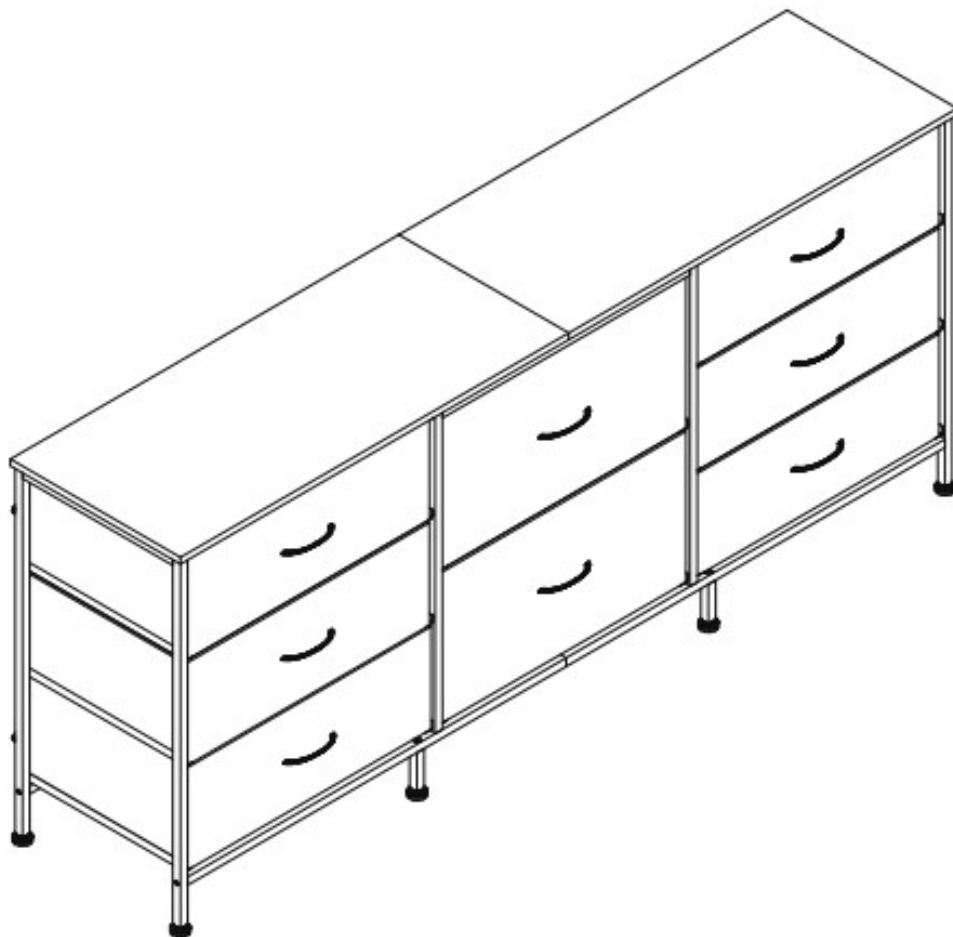


Scan for Support
support@garvee.com




Distributed by
GARVEE.com











V260530ZBE5

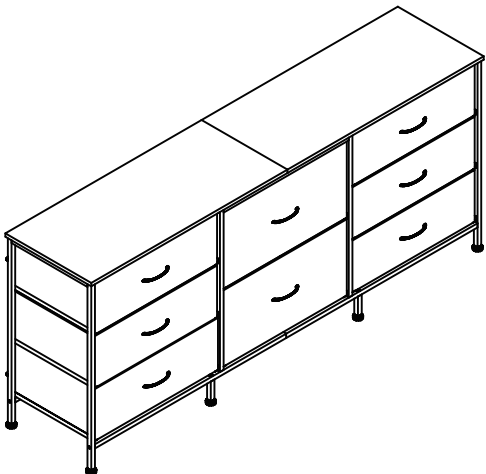○ Disassembly Diagram	02
○ Accessories	03-04
○ Assembly Instructions	05-13
	
○ Problems You May Encounter	14












Disassembly Diagram

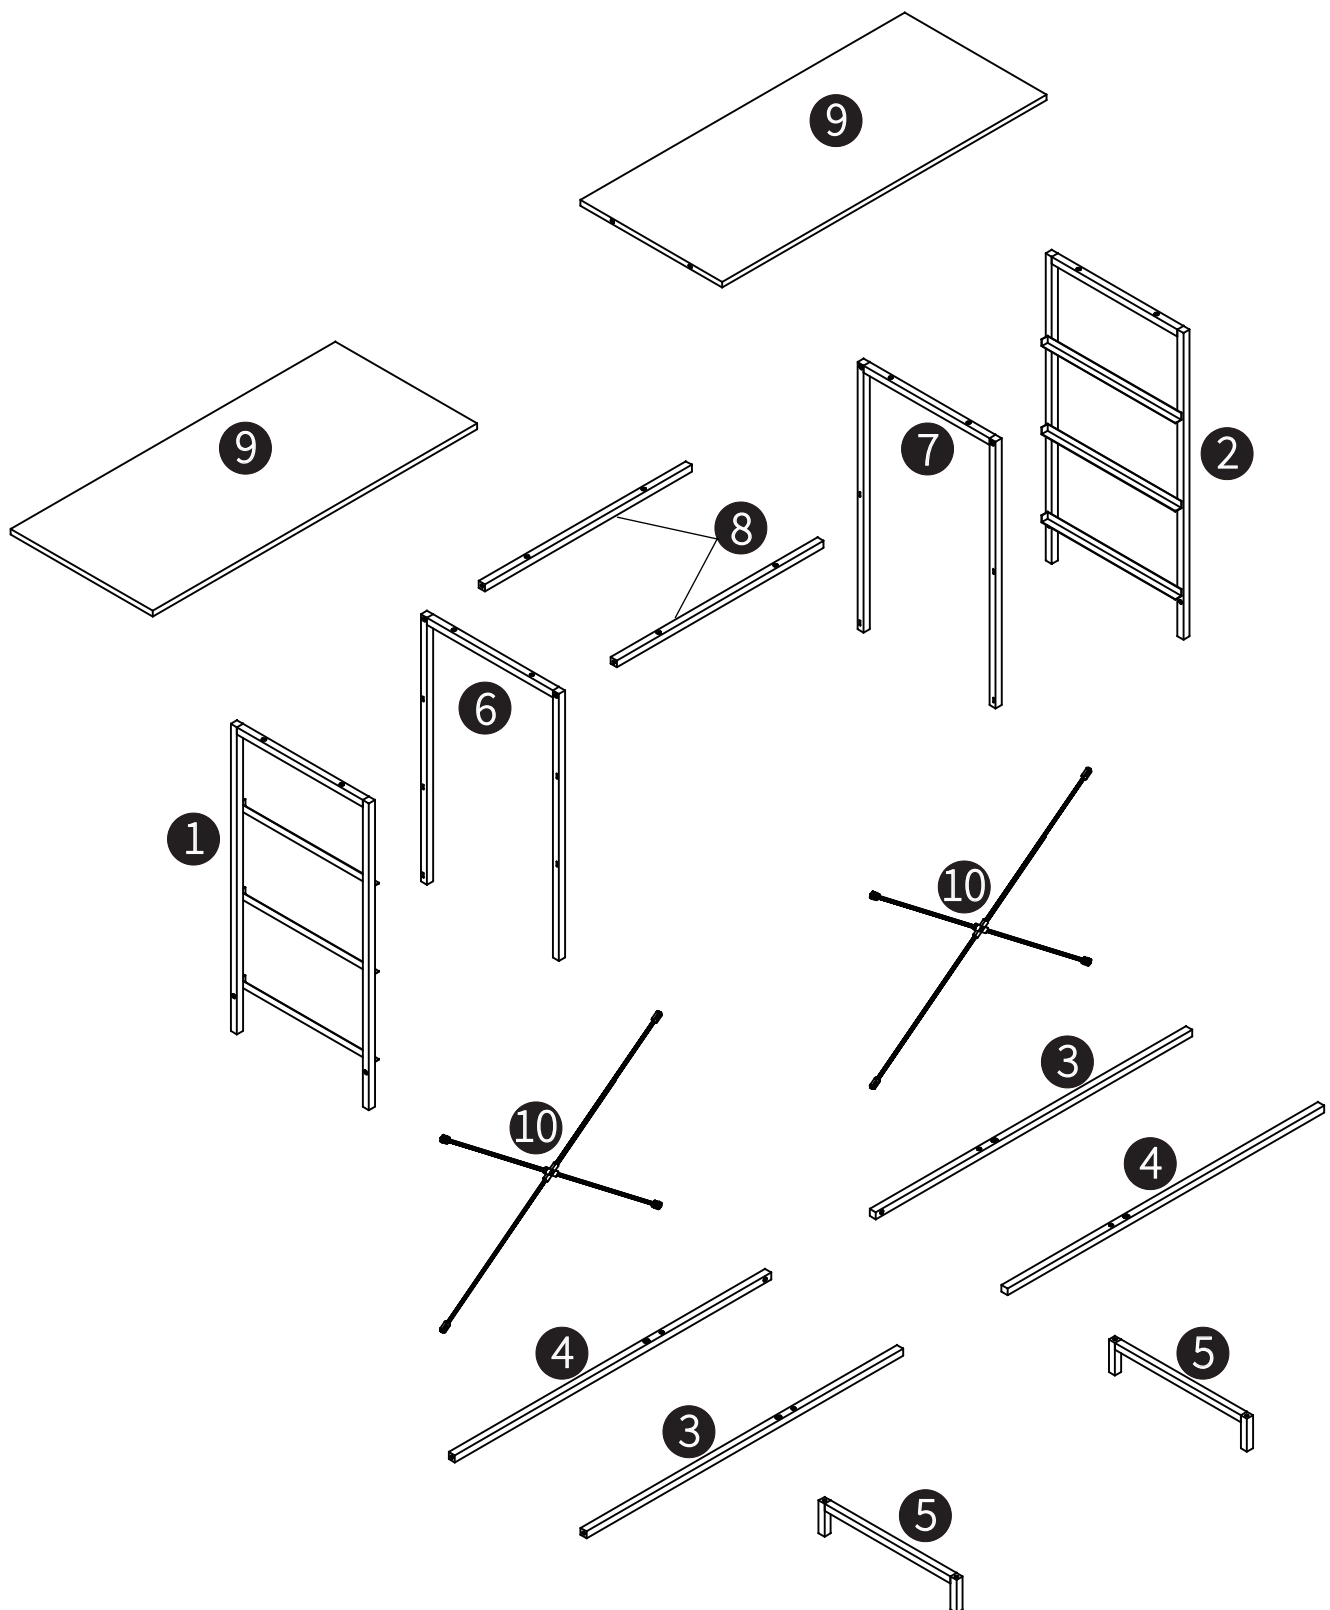

Accessories

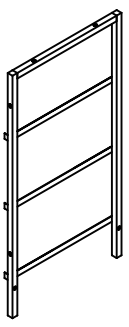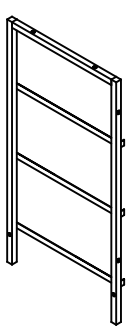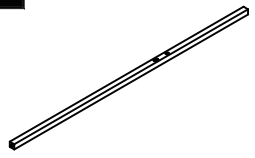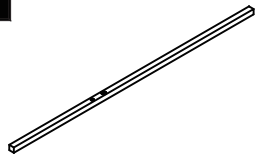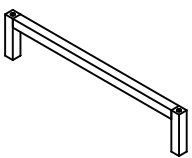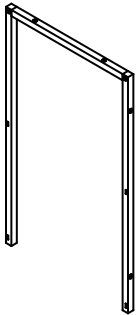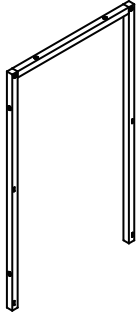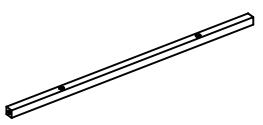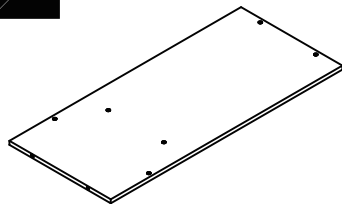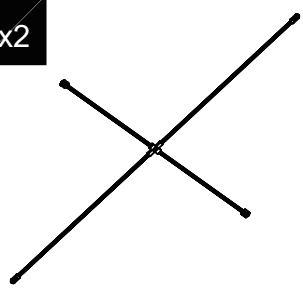
① x1 	② x1 	③ x2 	④ x2 
⑤ x2 	⑥ x1 	⑦ x1 	⑧ x2 
⑨ x2 	⑩ x2 		

Accessories

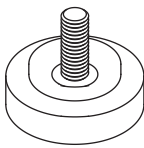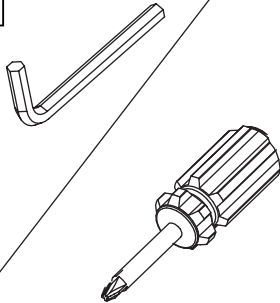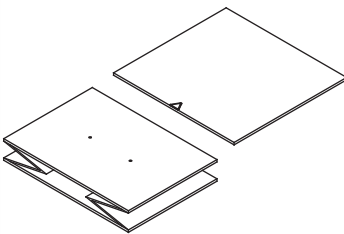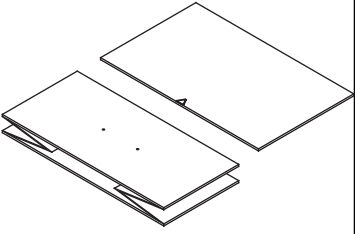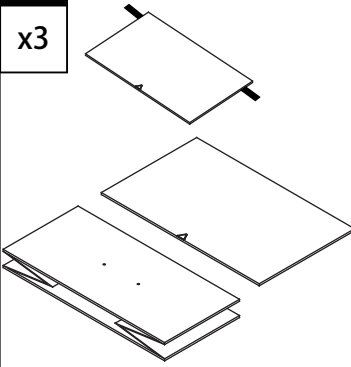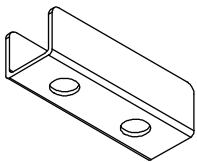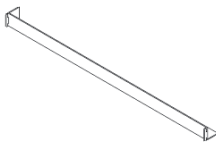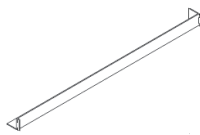
A x30  M6x23mm	B x14  M6x10mm	C x18  M4x12mm	D x4  M6
E x1 	F x9 	G x5 	H x1 
I x3 	J x2 	L x6 	R x6 
M x2 	N x1  a x2 b x2 c x2 M4*30		

Assembly Instructions

Step1: Fix Connector **J** between metal bar **3** and **4**



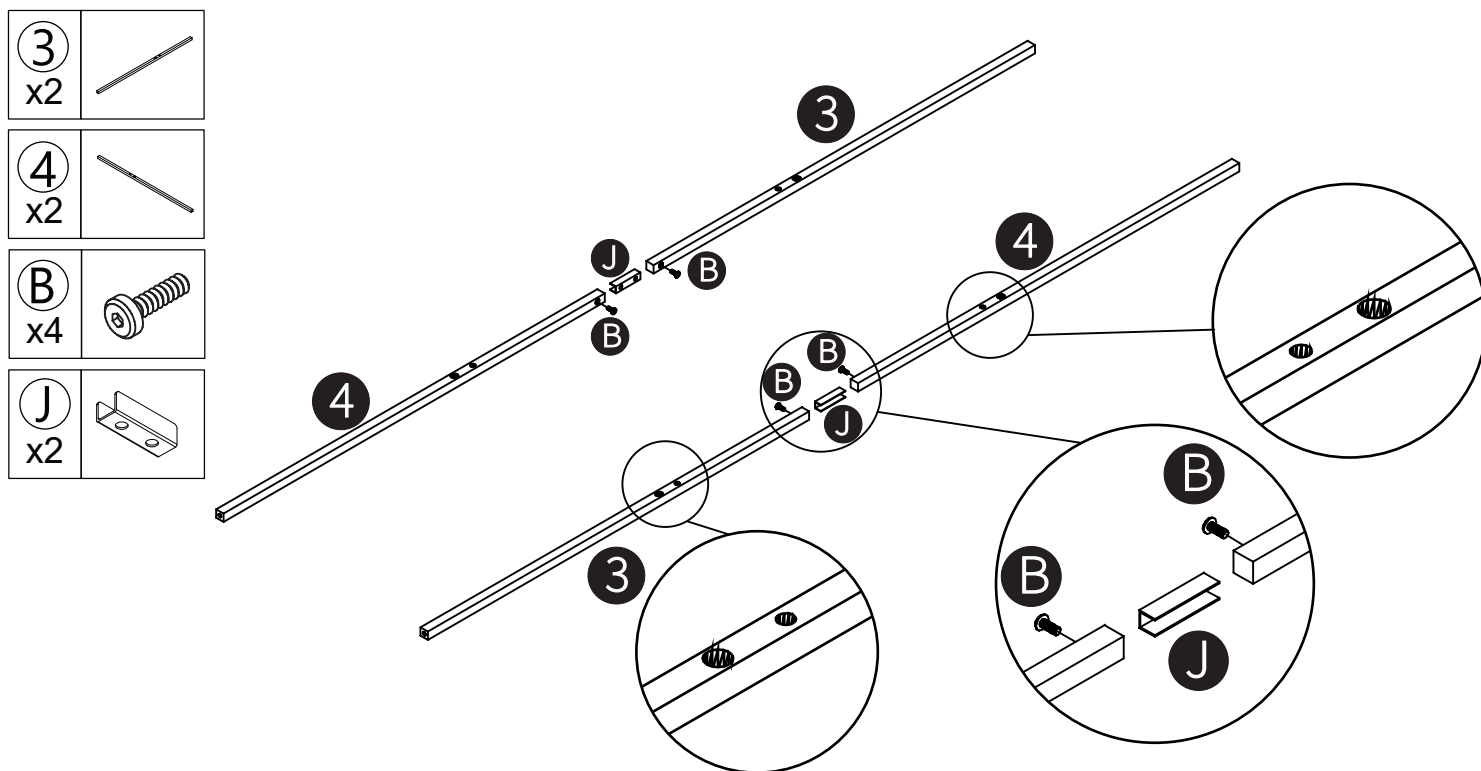


Step2: Install the frame **1**、**2** and metal bar with screw **A**.




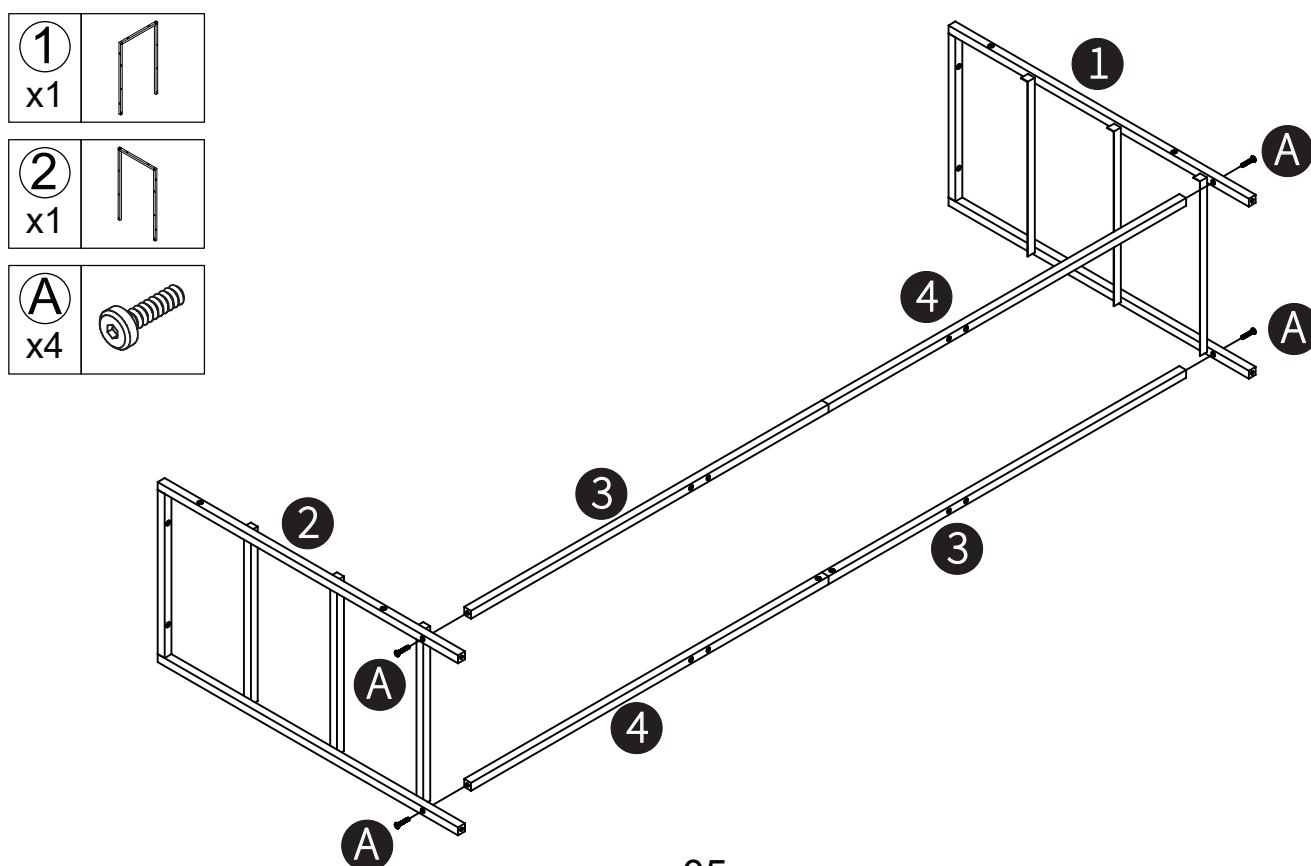


Assembly Instructions

Step3: Install the frame **5** and metal bar with screw **A**.

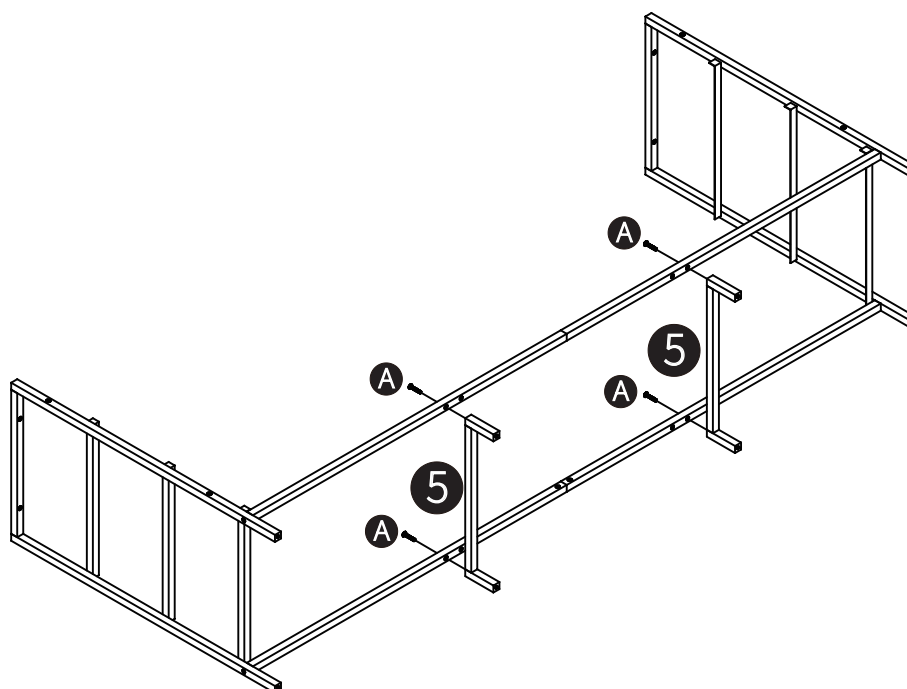



Step4: Install the frame **6**、**7** and metal bar with screw **A**.

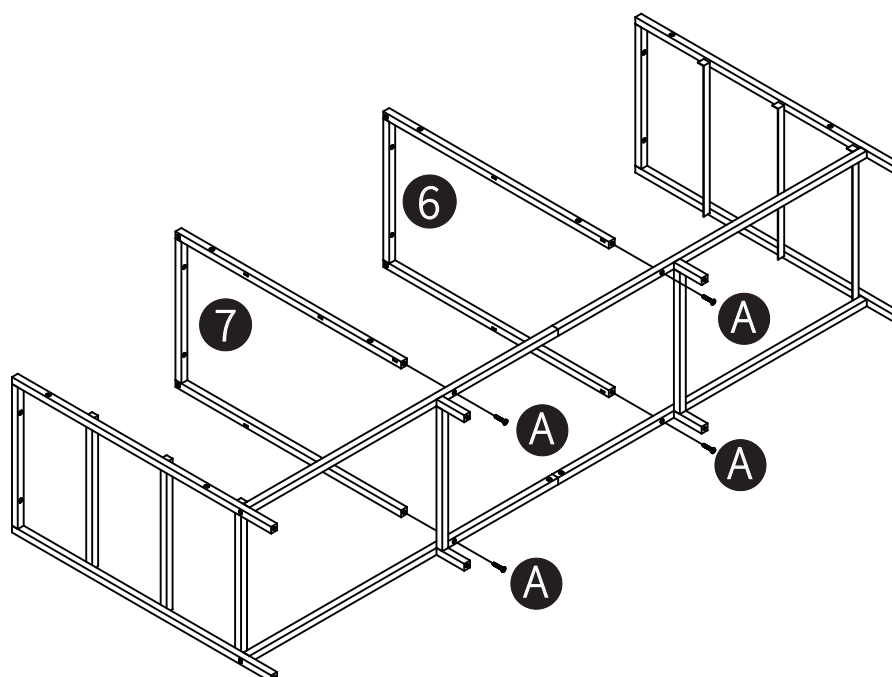



Assembly Instructions


Step5: Use foot pad **D** to screw in frame.

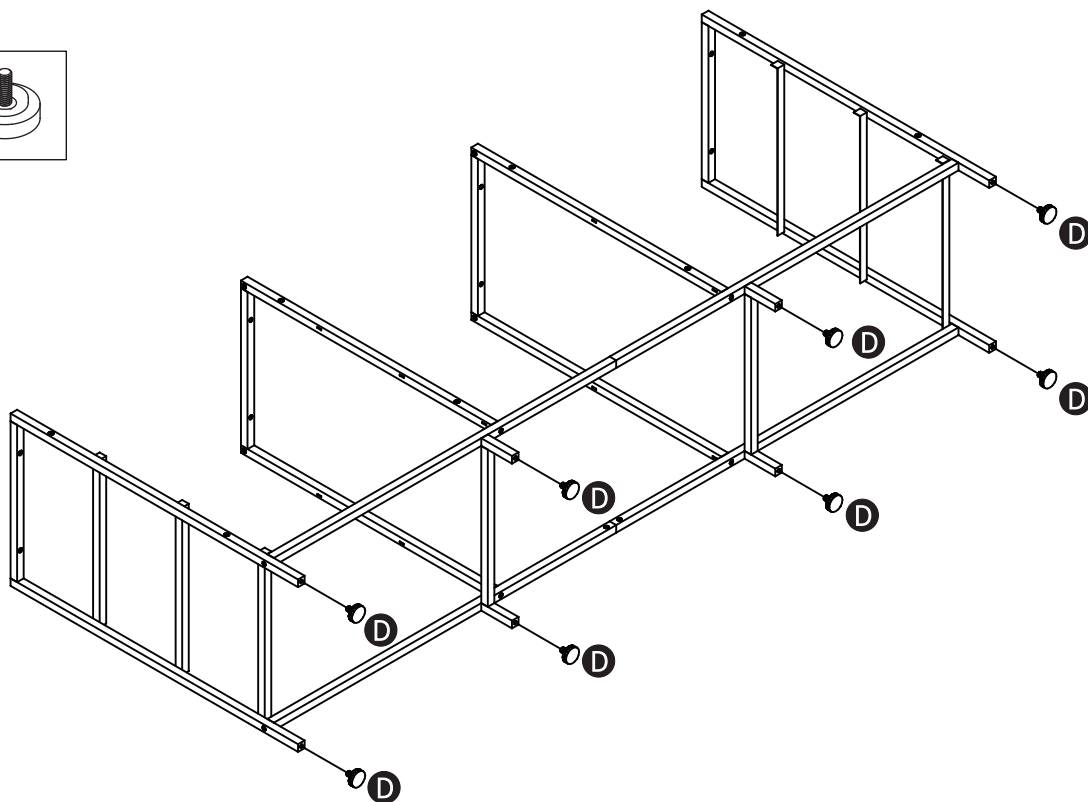

Step6: Install the metal bar **8** with screw **A**.








Small hole facing up,
large hole facing down

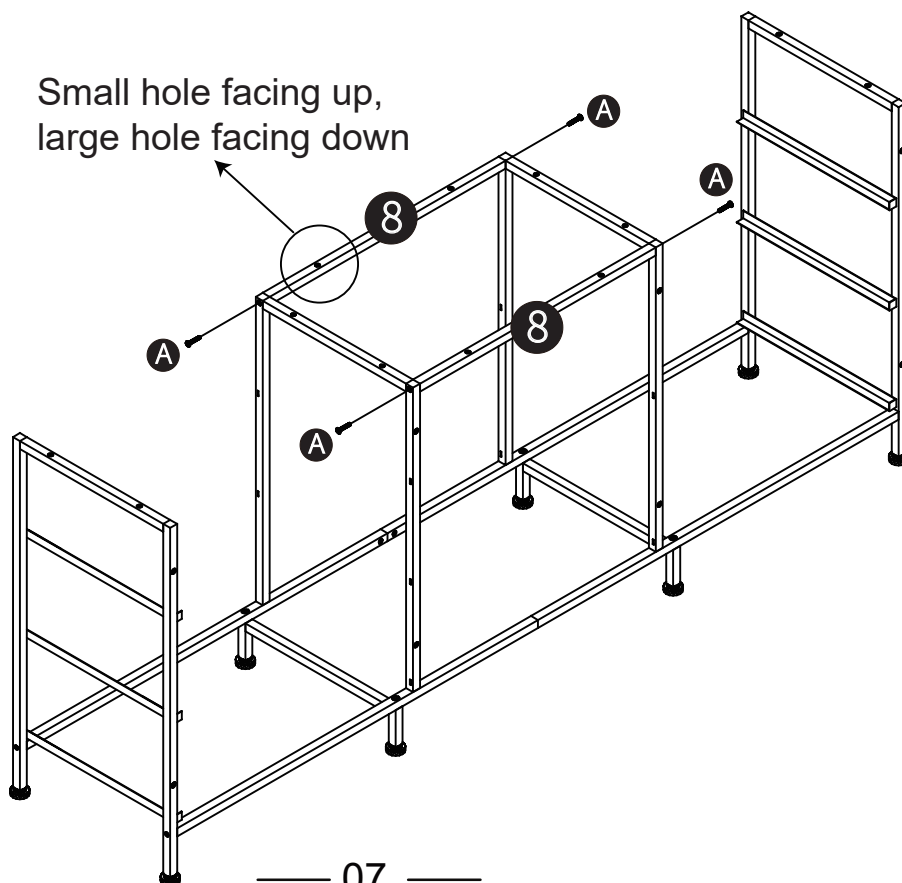




Assembly Instructions

Step 7: Install drawer supports **L** and **R** on **6** and **7**.

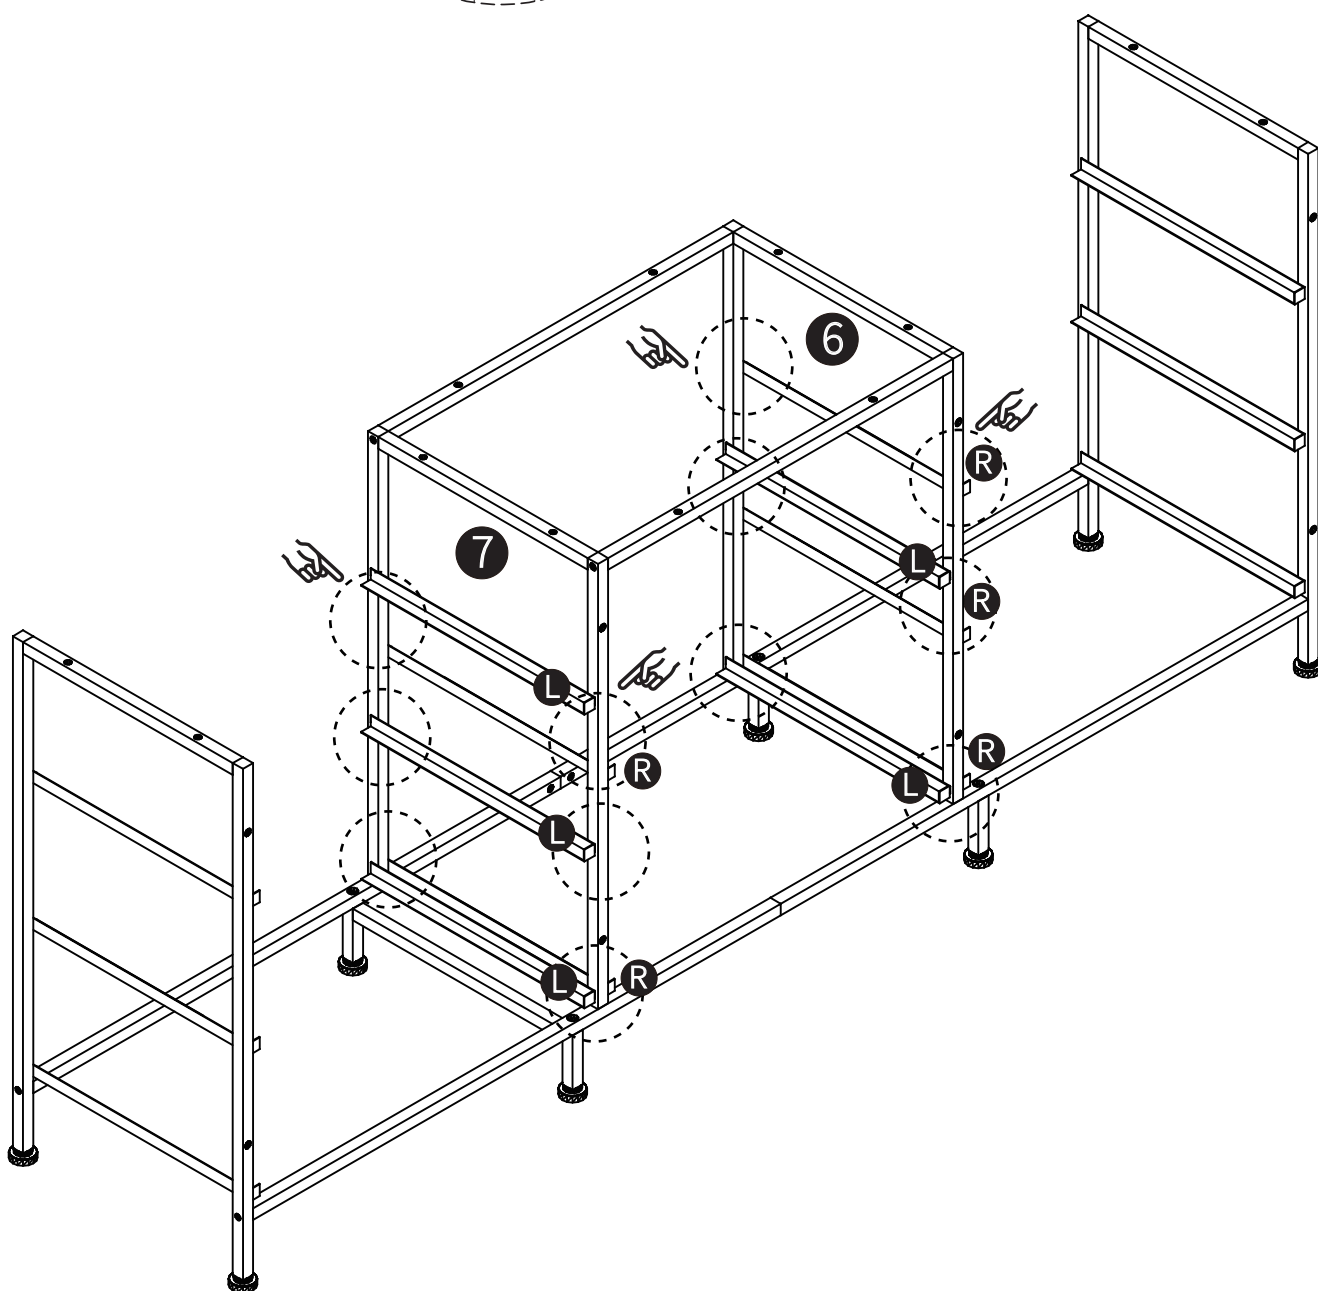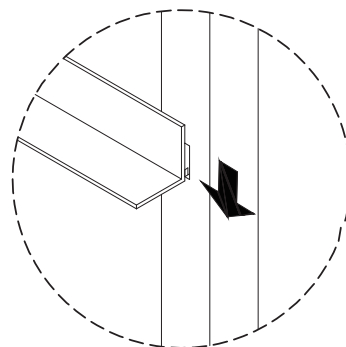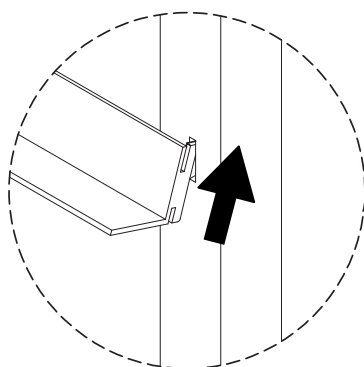



Assembly Instructions

Step8: Wooden tip **M** connects to wooden board **9**.

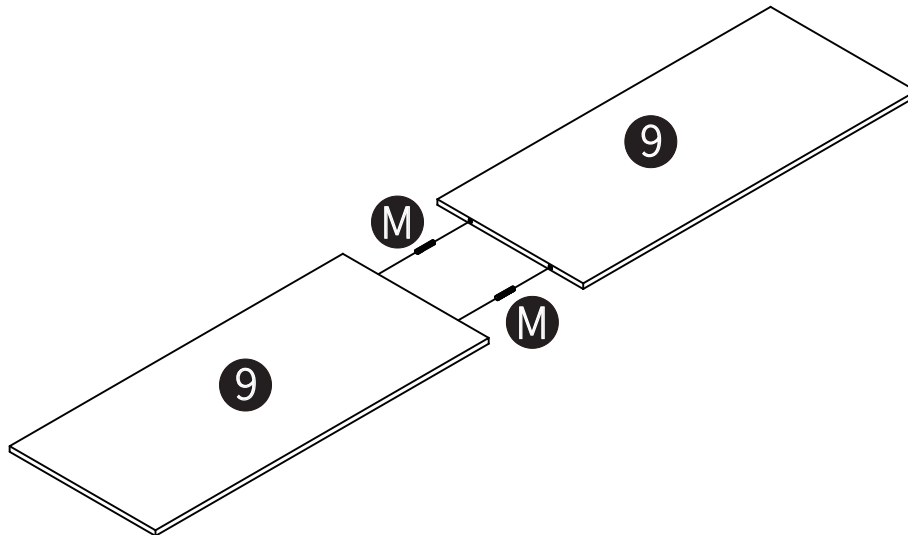




Step8: Install the other frame on the board **9** with screw **A**.

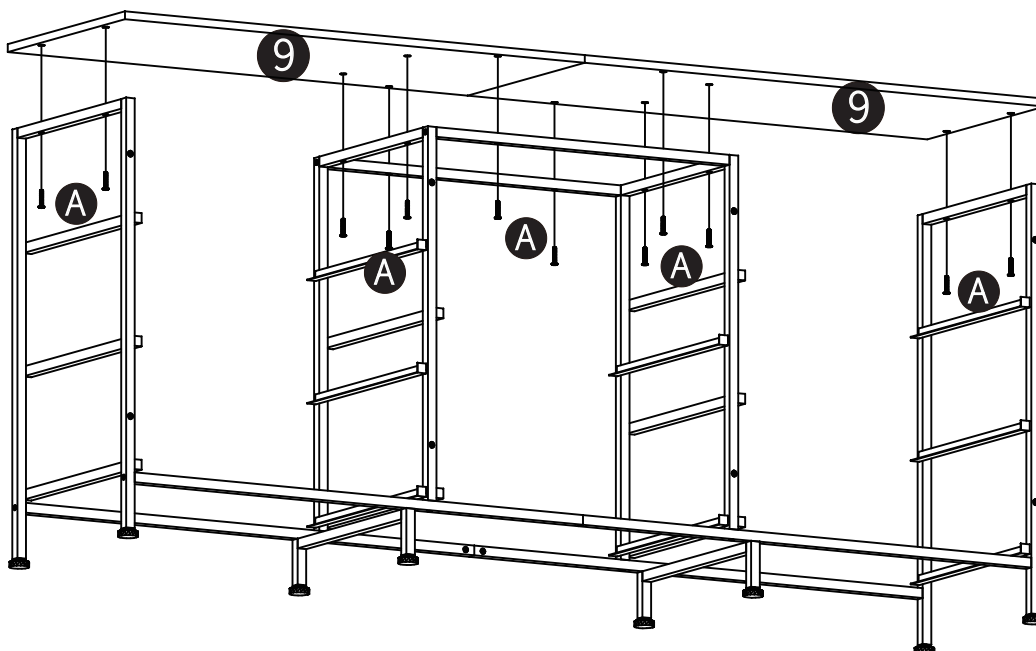


Assembly Instructions


Step9: Pull the rib **10** and screw it in with a screw **B**.

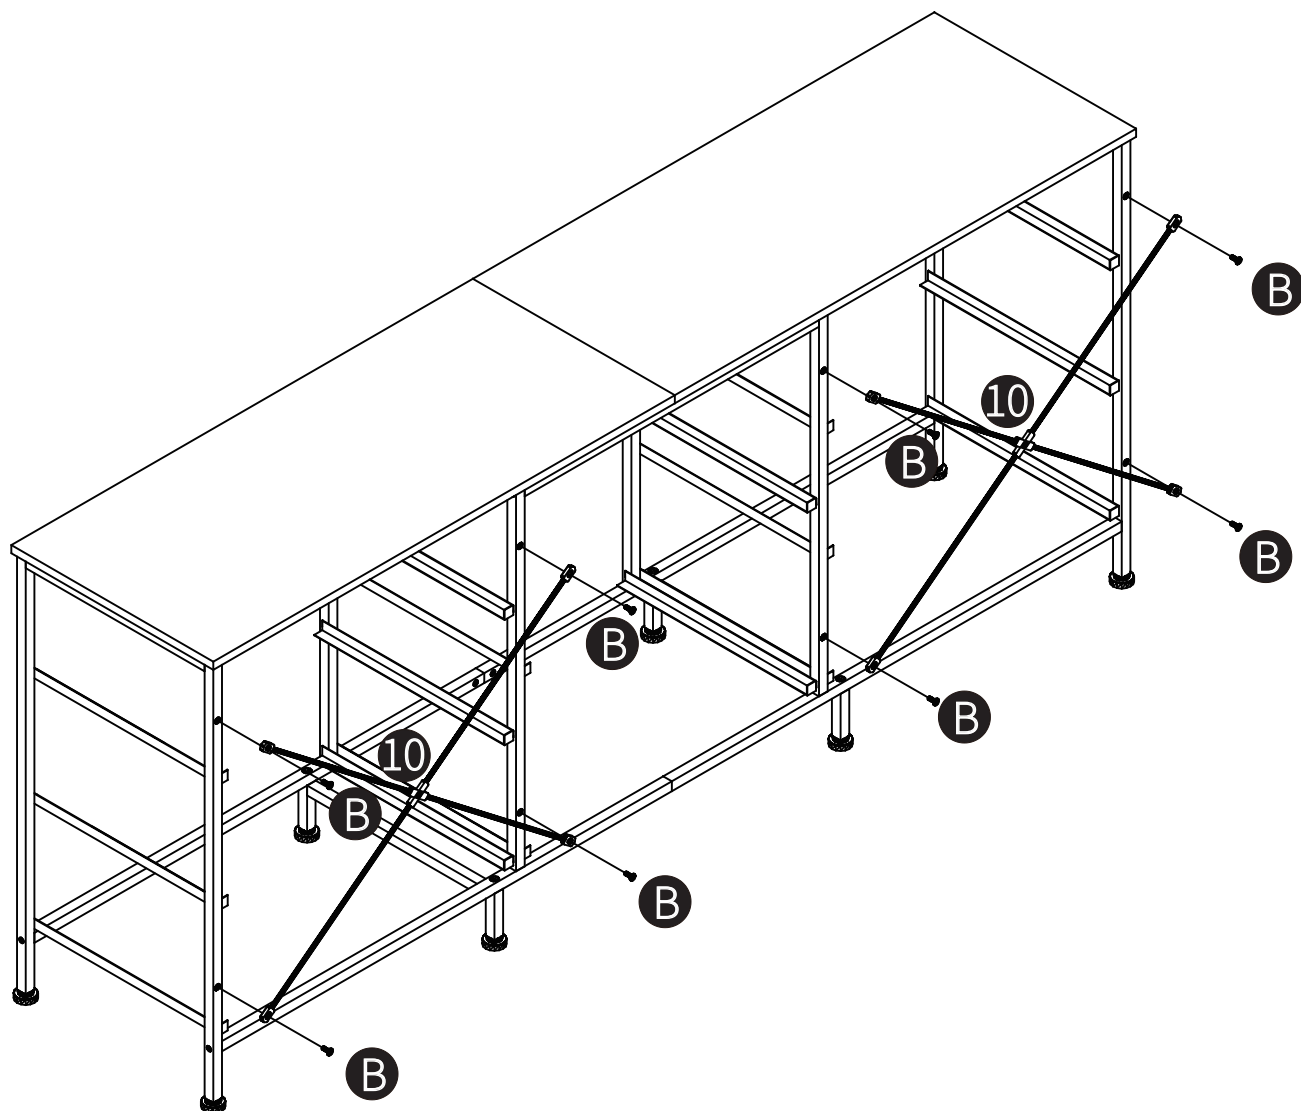


Assembly Instructions


Step10: Fix the handle**C**to Drawer**G**.

C x8	
F x4	
G x4	

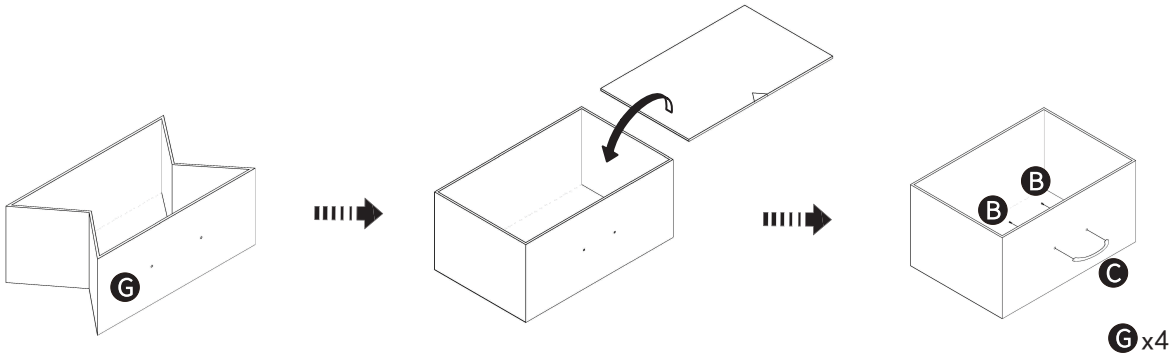



Step11: Fix the handle**C**to Drawer**H**.

C x4	
F x2	
H x2	

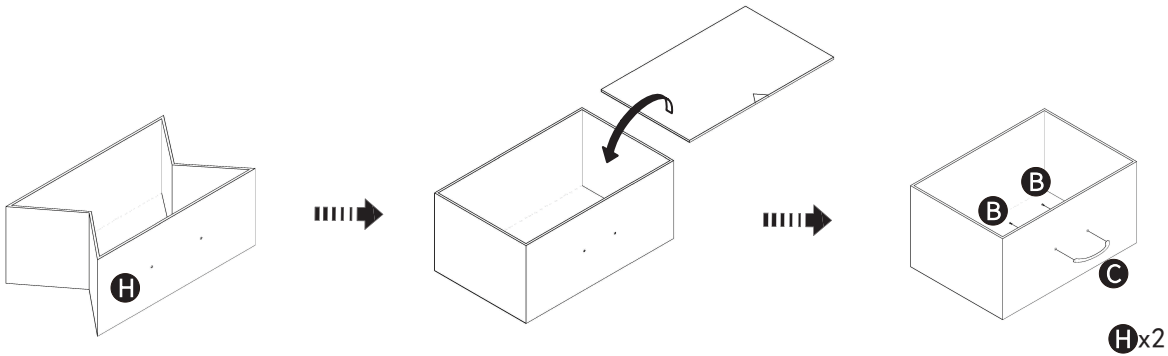


Step12: Fix the handle**C**to Drawer**I**.

C x4	
F x2	
H x2	

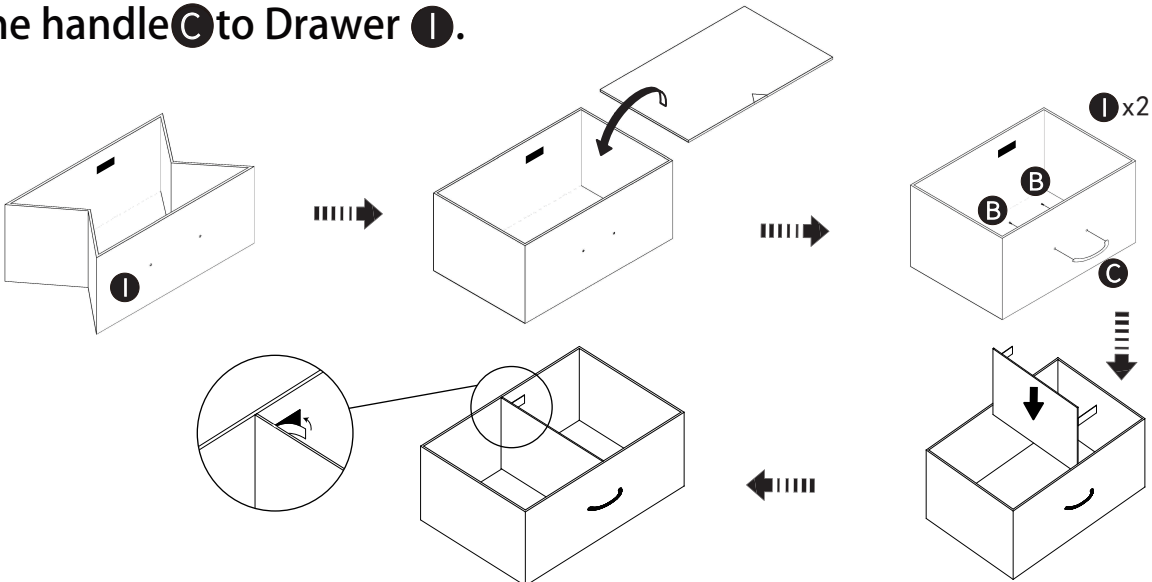




Assembly Instructions

Step13: Put the drawer **G** & **H** & **I** inside.

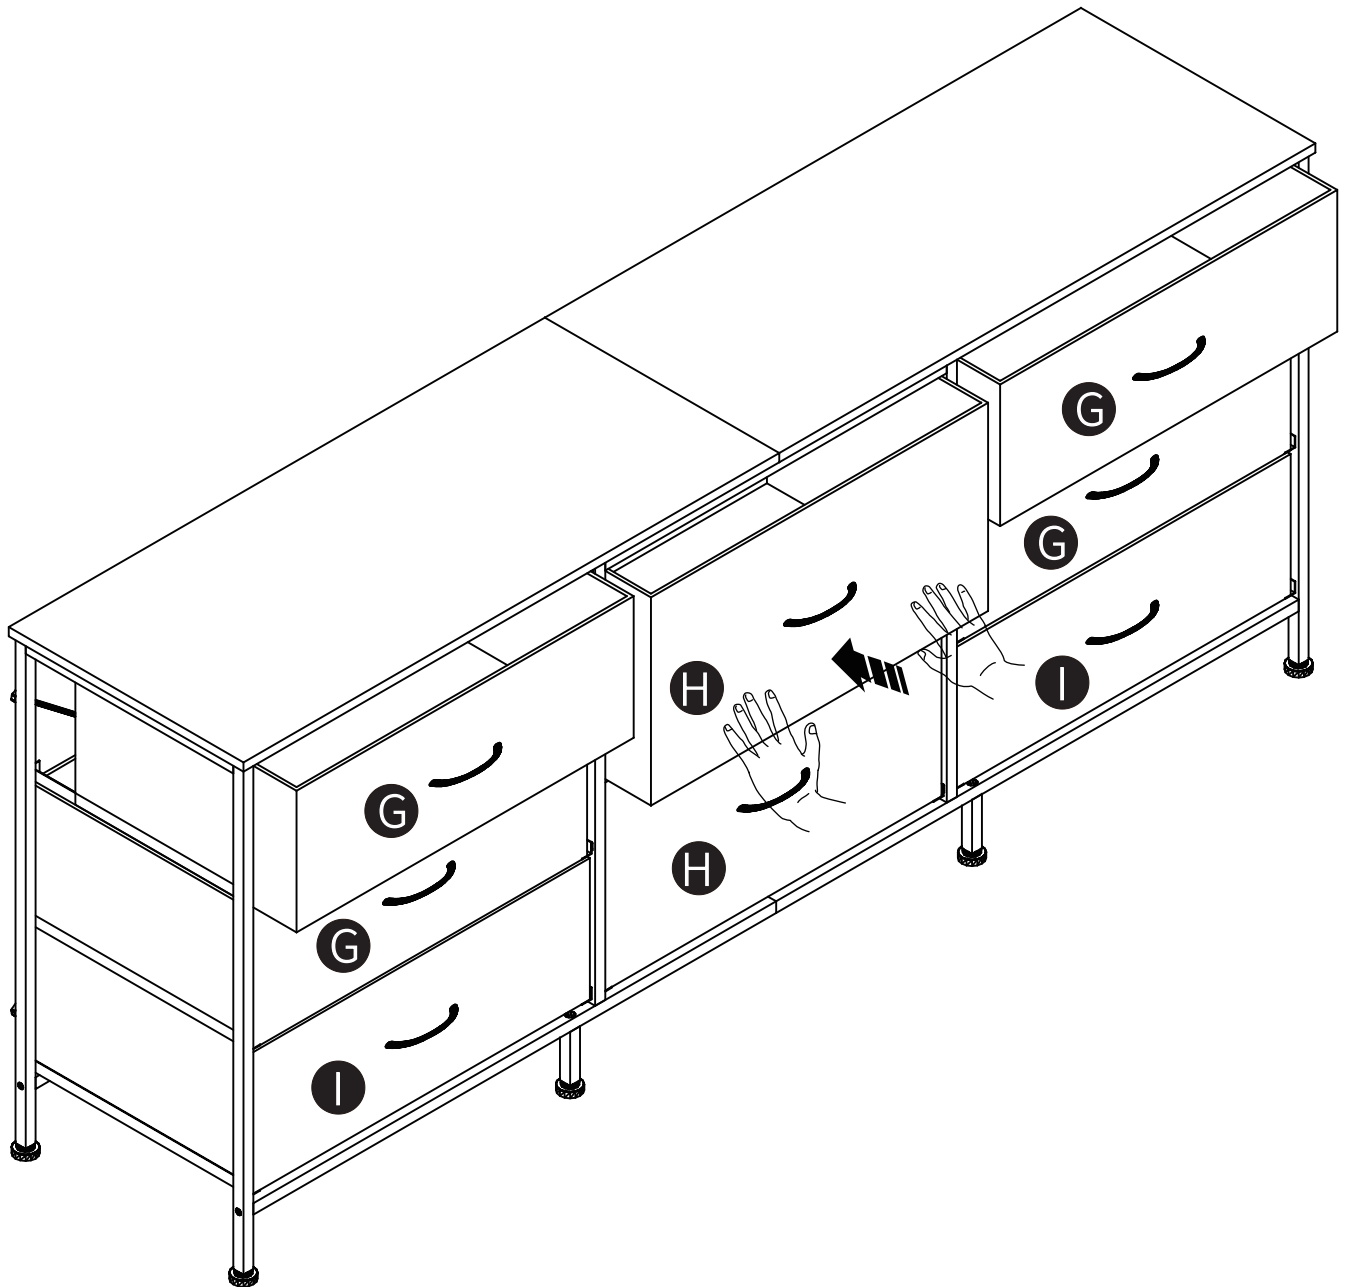

Assembly Instructions

Step 14: For safety, install anti-tip kit **N**.

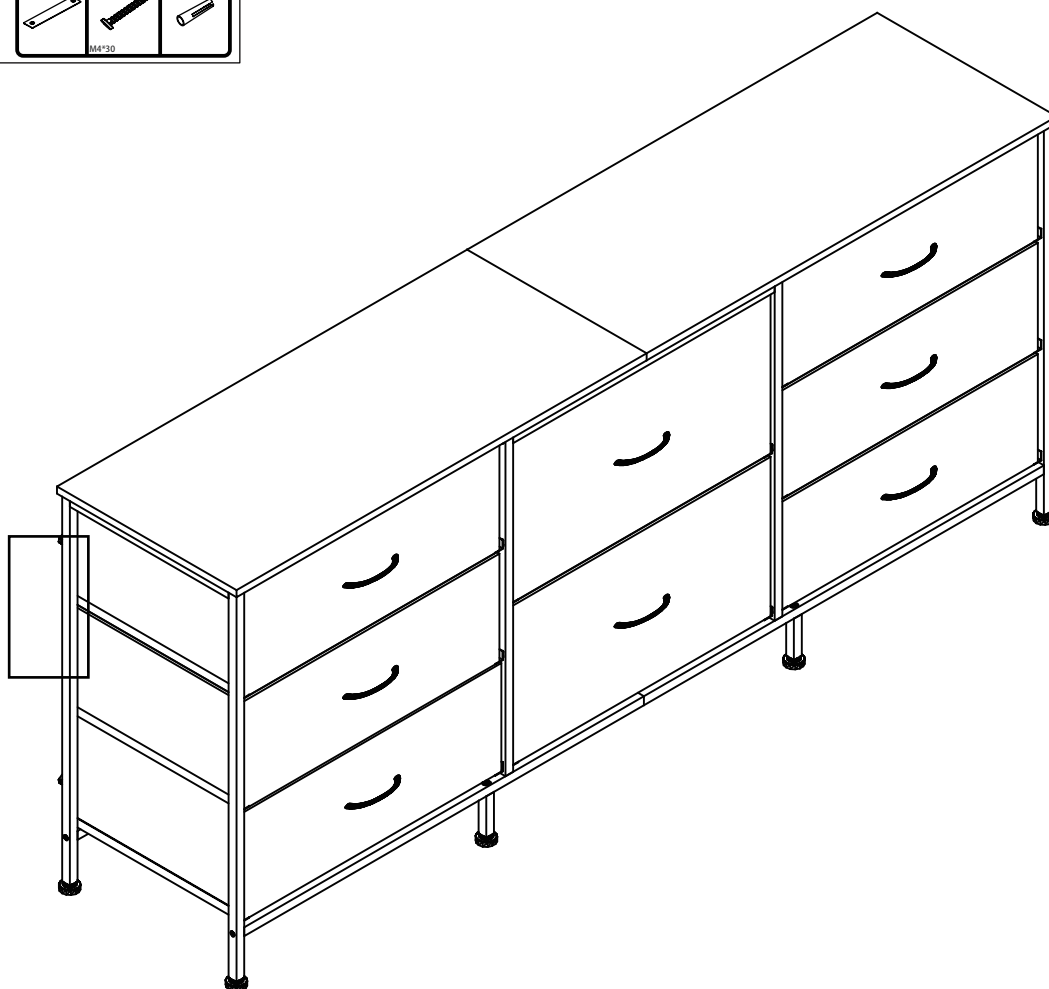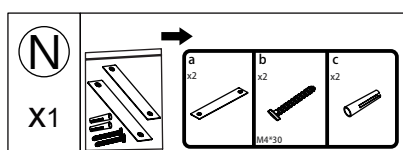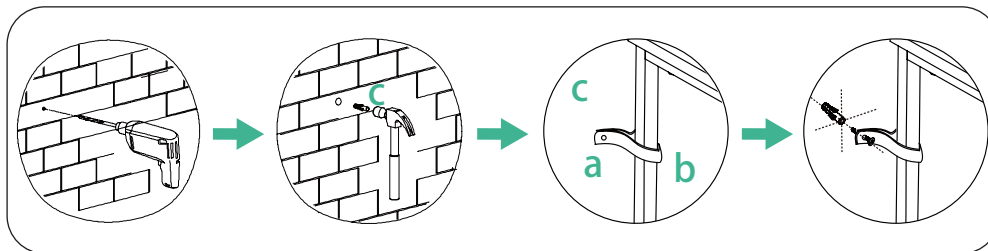

Problems You May Encounter

GARVEE
support@garvee.com