

# DRAPERY ROD SET INSTALLATION INSTRUCTIONS

## 7/8" Diameter Rod Length 48"- 84"

### Safety Information



**CAUTION:** Before installing brackets, always check there are no hidden wires or pipes.





**WARNING:** Product failure due to using incorrect fixings is responsibility of the installer.

### Pre-Installation

**NOTICE:** The finials shown are for illustration purposes only. It may not represent the style of finial purchased. For larger width windows, two people may be required for easier installation.

### PACKAGE CONTENTS

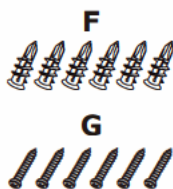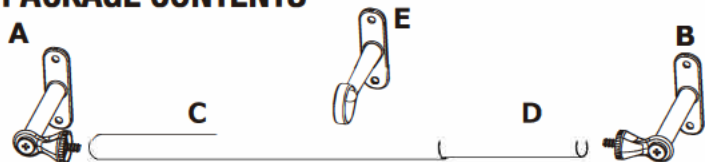

| Part | Description                  | Quantity | Part | Description                  | Quantity |
|------|------------------------------|----------|------|------------------------------|----------|
| A    | Large side bracket           | 1        | D    | Inner rod (smaller diameter) | 1        |
| B    | Small side bracket           | 1        | E    | Center bracket               | 1        |
| C    | Outer rods (larger diameter) | 1        | F    | Screw-in anchors             | 6        |
|      |                              |          | G    | Screws                       | 6        |


### CARE AND CLEANING

To remove dust, use a vacuum cleaner with a brush attachment end or gently rub the rod using a water-dampened cloth with a mild detergent only.

### INSTALLATION


#### 1 Before bracket installation

Unscrew side brackets (A & B). Place brackets (A & B) against wall to confirm desired locations. Use tape measure and level to make sure marked screw holes are horizontal to each other.

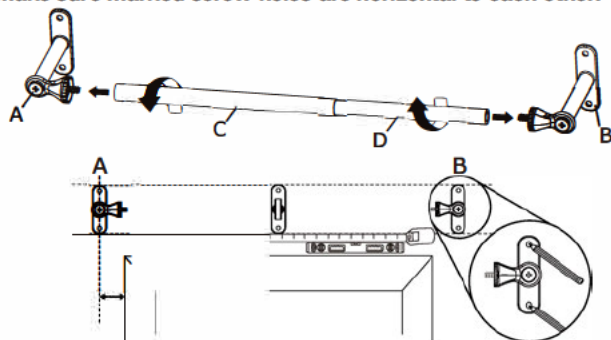


#### 2A Mounting to drywall or paneling

Pre-drill two pilot holes per bracket base using a 1/4 in. bit. Drill horizontally without forcing the drill or enlarging the hole. To install bracket bases, screw anchors (F) into the pilot holes and then attach the bracket bases to the wall using the screws (G).

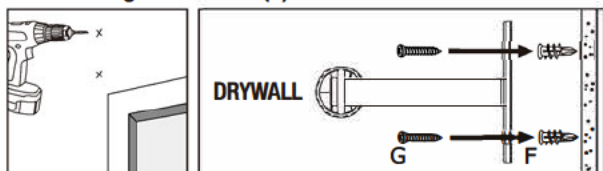



#### 2B Mounting directly to wood or studs

Pre-drill two pilot holes per bracket base using a 3/32 in. bit. Drill horizontally without forcing the drill or enlarging the hole. To install bracket bases, fasten the screws (G) into the pilot holes.

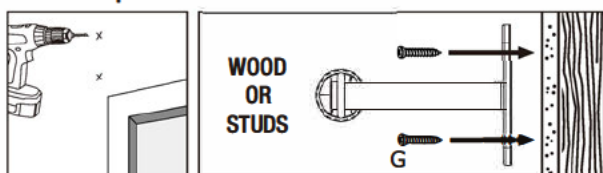


#### 3 Curtain Rod Assembly

Feed one panel onto outer rods (C), and slide rod into center bracket (E). Screw rod back into bracket (A).

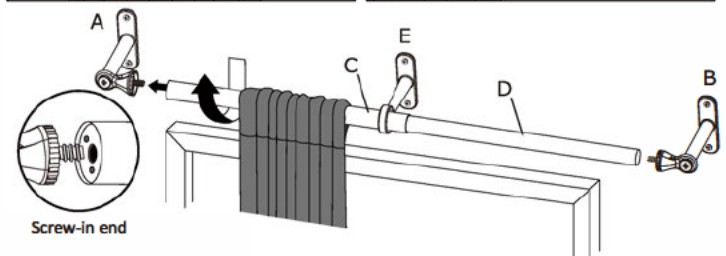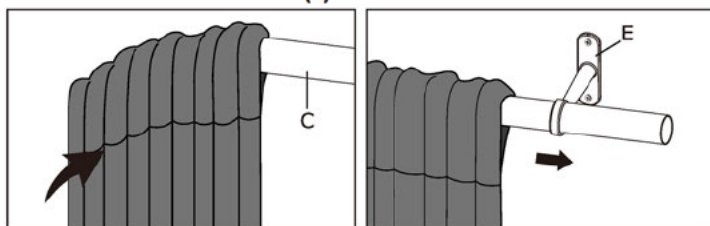


Feed another panel onto inner rod (D). Screw rod back into bracket (B).

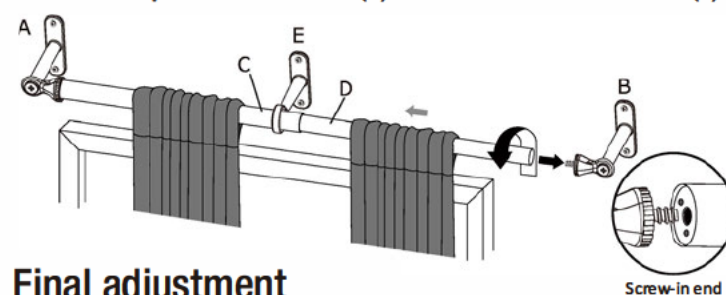

#### 4 Final adjustment

Adjust draperies to desired positions.

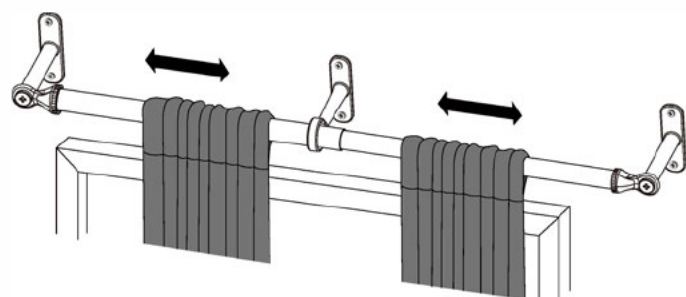

Retain this manual for future use.