

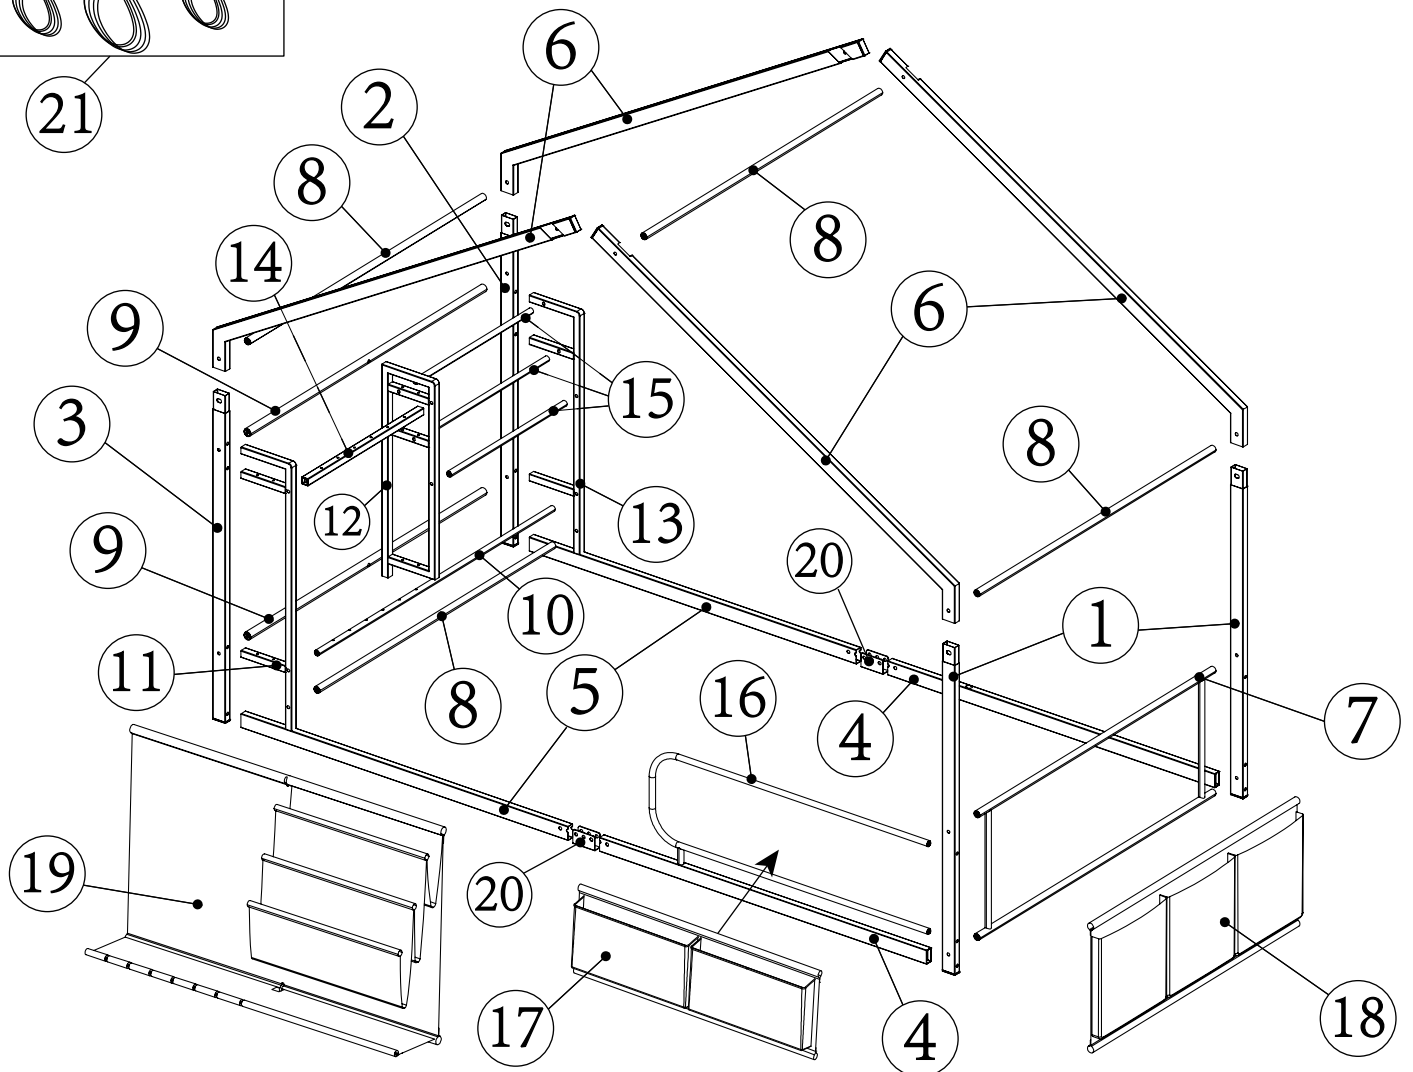
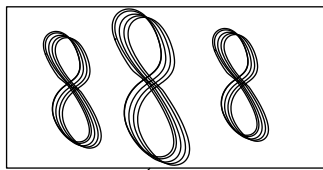


Assembly Instruction

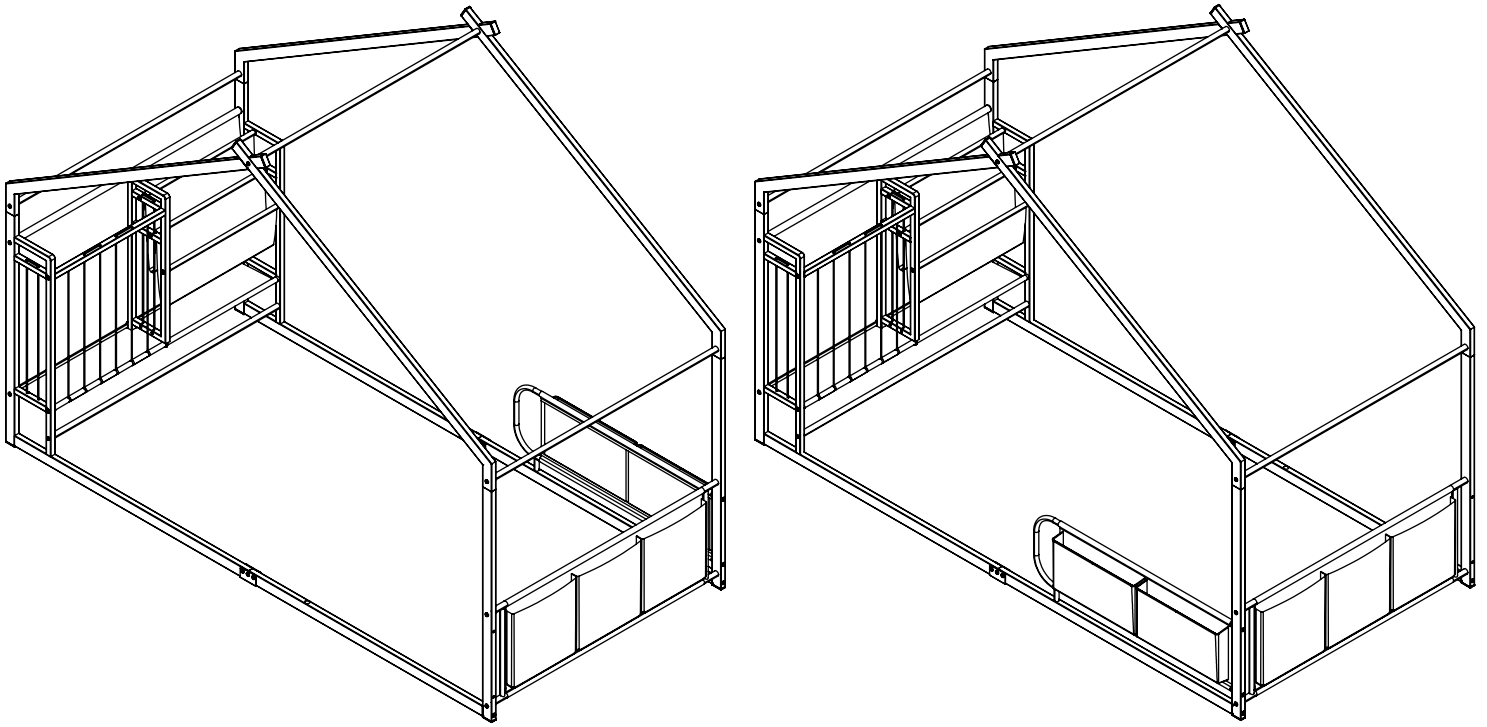


① X2	② X1	③ X1
④ X2	⑤ X2	⑥ X4
⑦ X1	⑧ X4	⑨ X2
⑩ X1	⑪ X1	⑫ X1
⑬ X1	⑭ X1	⑮ X3
⑯ X1	⑰ X1	⑱ X1
⑲ X1	⑳ X2	㉑ X1
Ⓐ X14	Ⓑ X29	Ⓒ X7
Ⓓ X6	Ⓔ X2	
		X2


Difference screws display(1:1)




M6X60



M6X35




M6X20




M6X15

M6:Screw outer diameter 6mm


Step 1

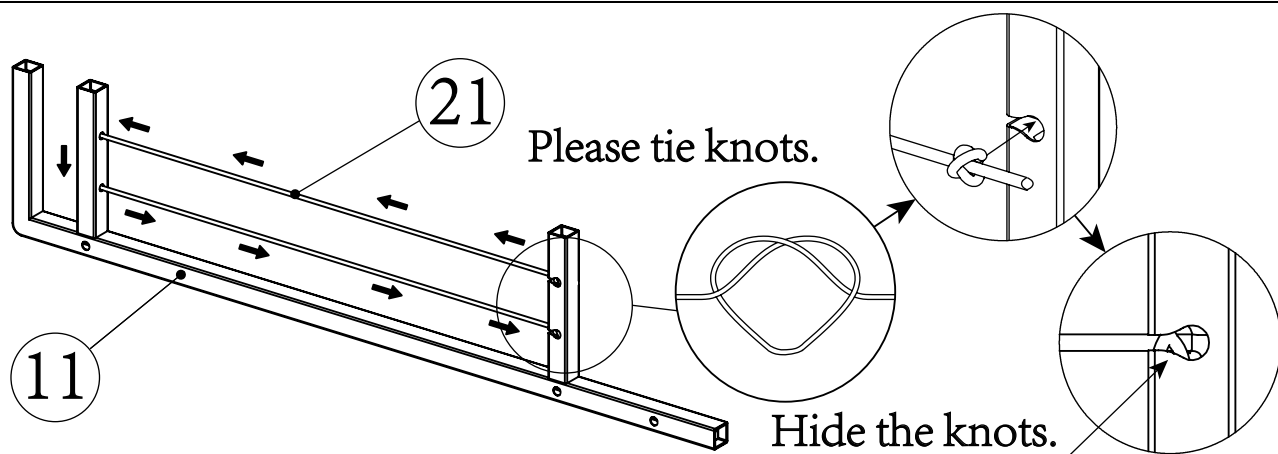

Step 2

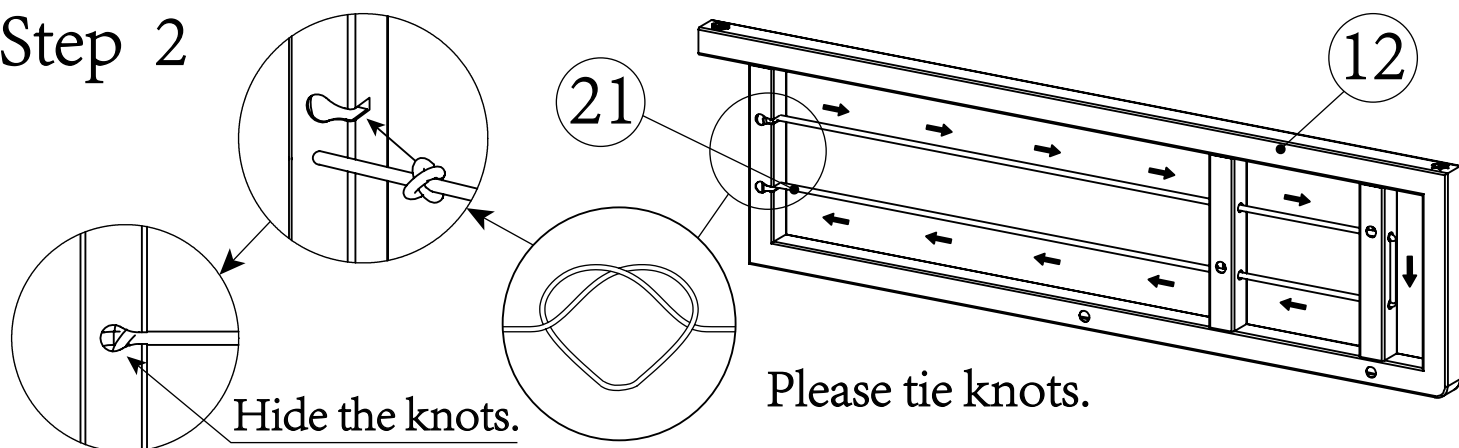


Step 3

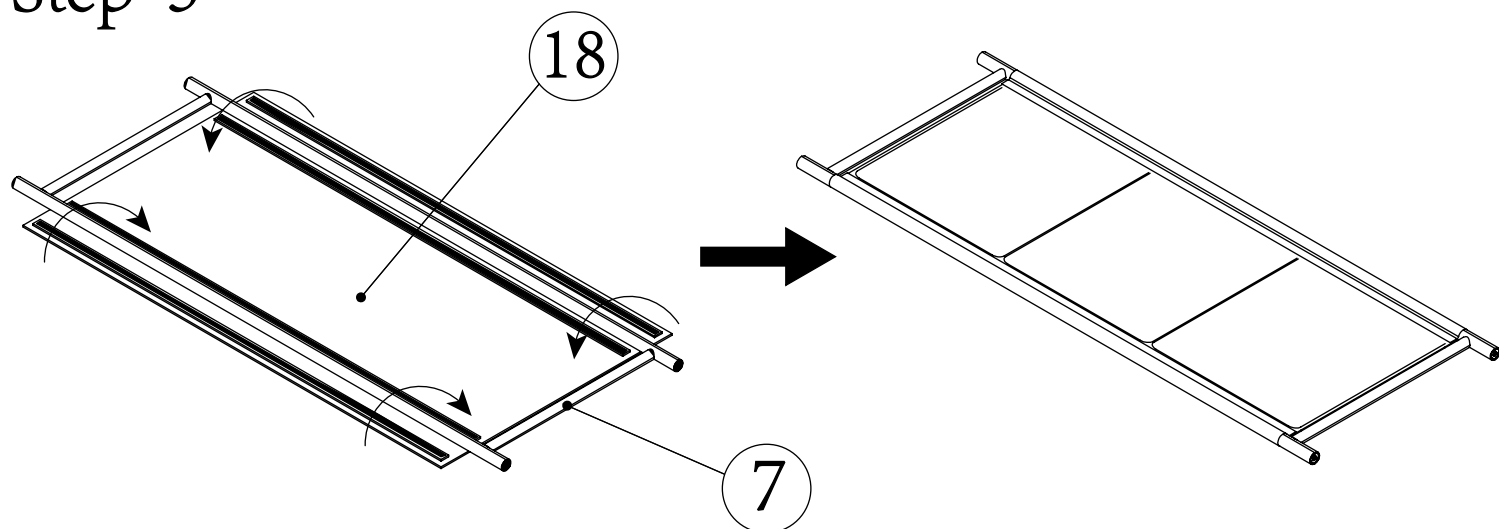

Step 4

A	M6X60	5
---	-------	---


Check hole direction.

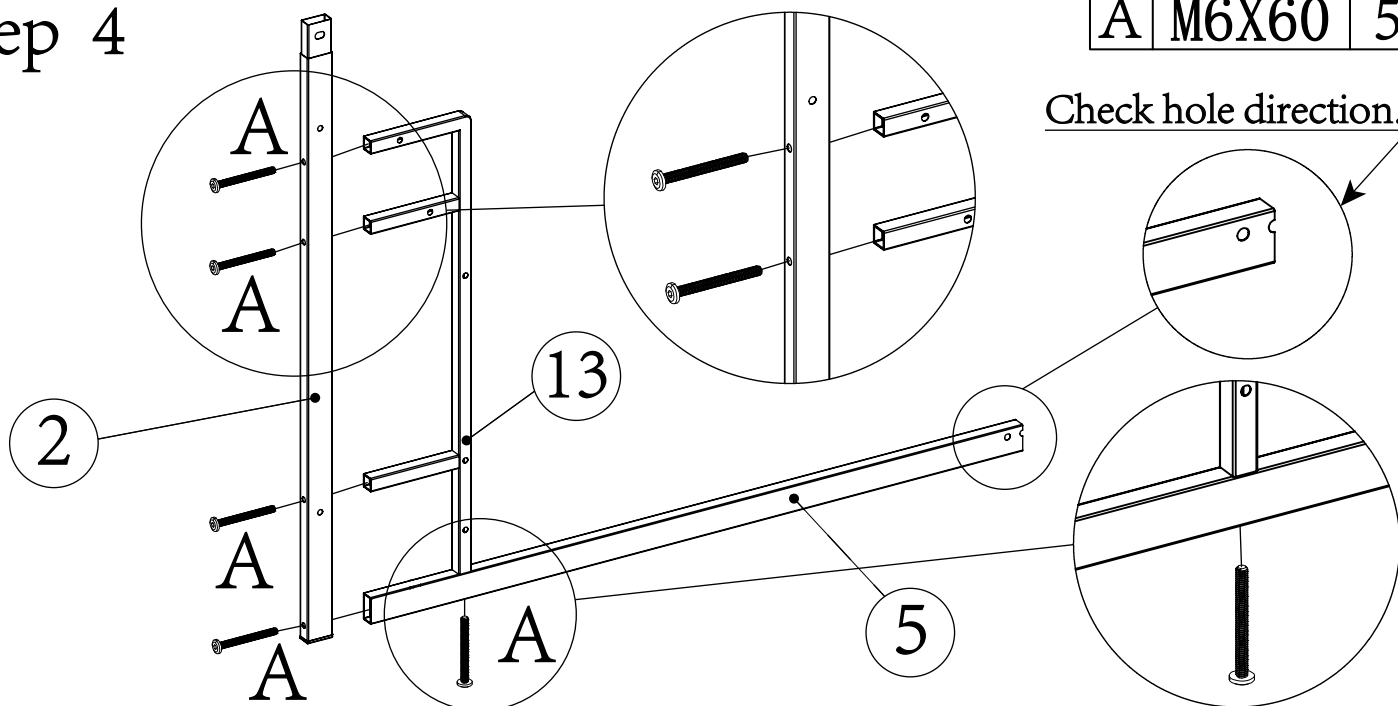


Step 5

A	M6X60	5
---	-------	---

Check hole direction.

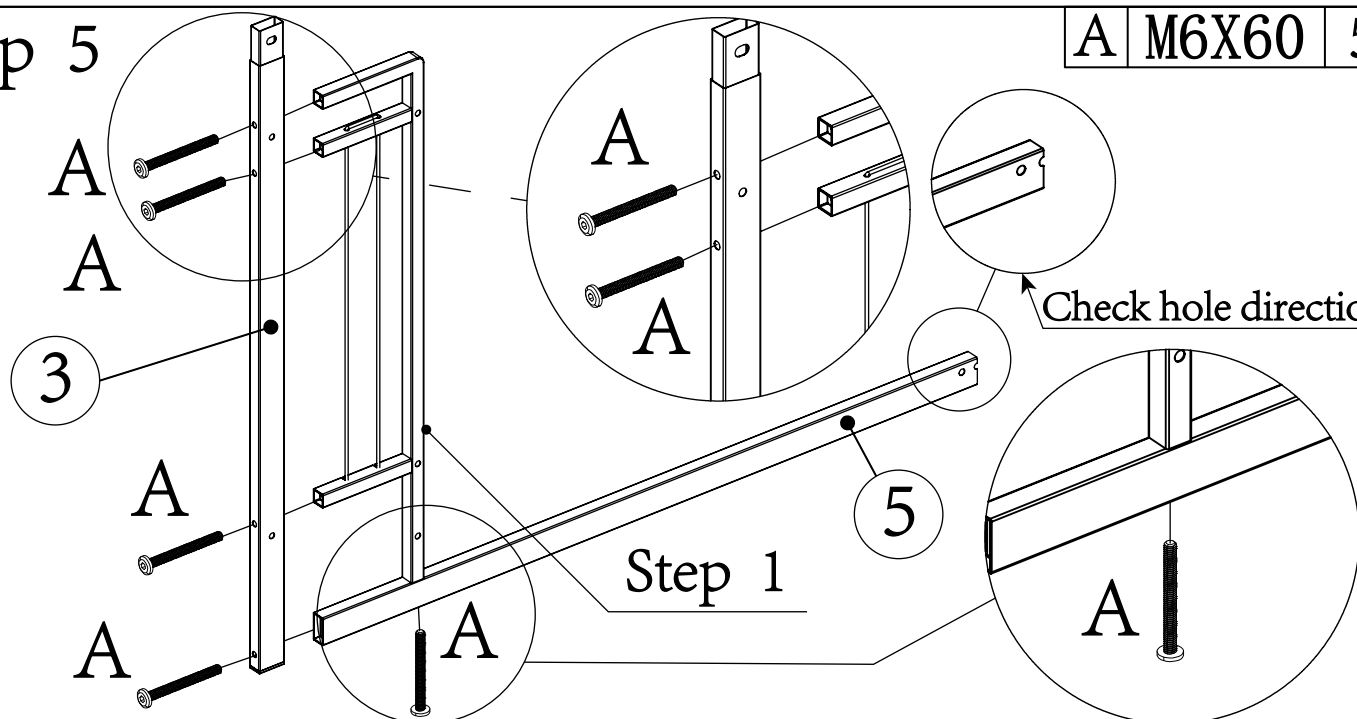


Step 6

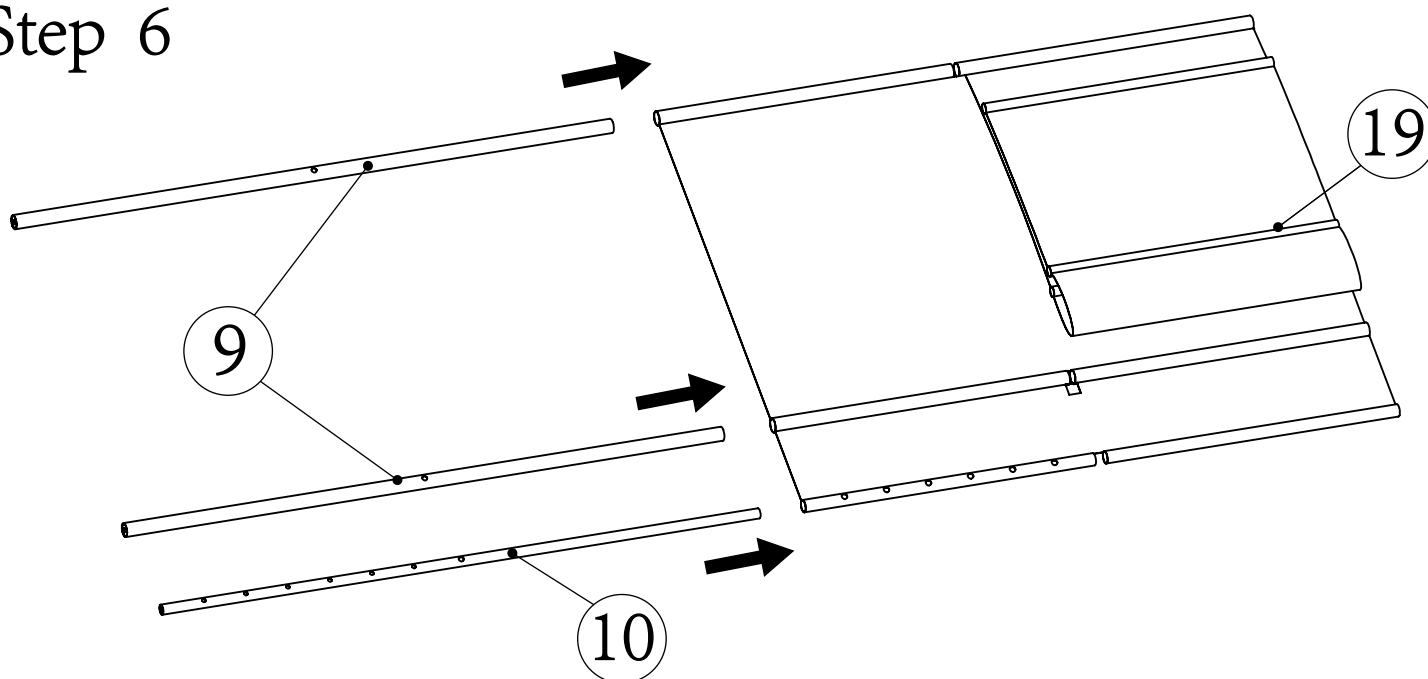

Starting from Step 7, do not fully tighten the screws—tighten them to 80% only.


Step 7

B	M6X35	6
---	-------	---

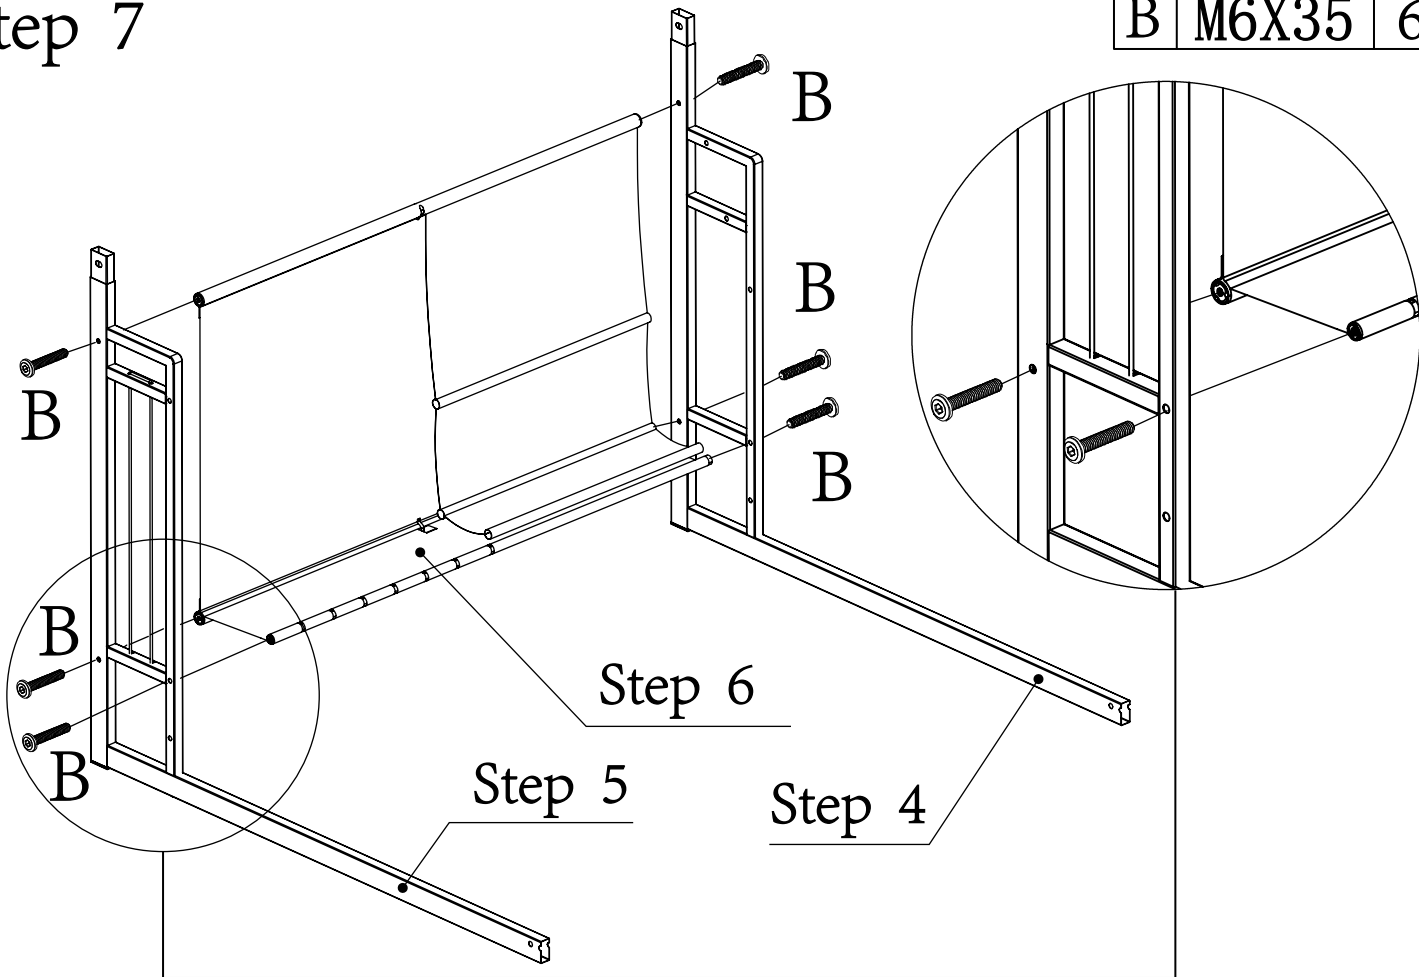


Step 8

B	M6X35	3
---	-------	---

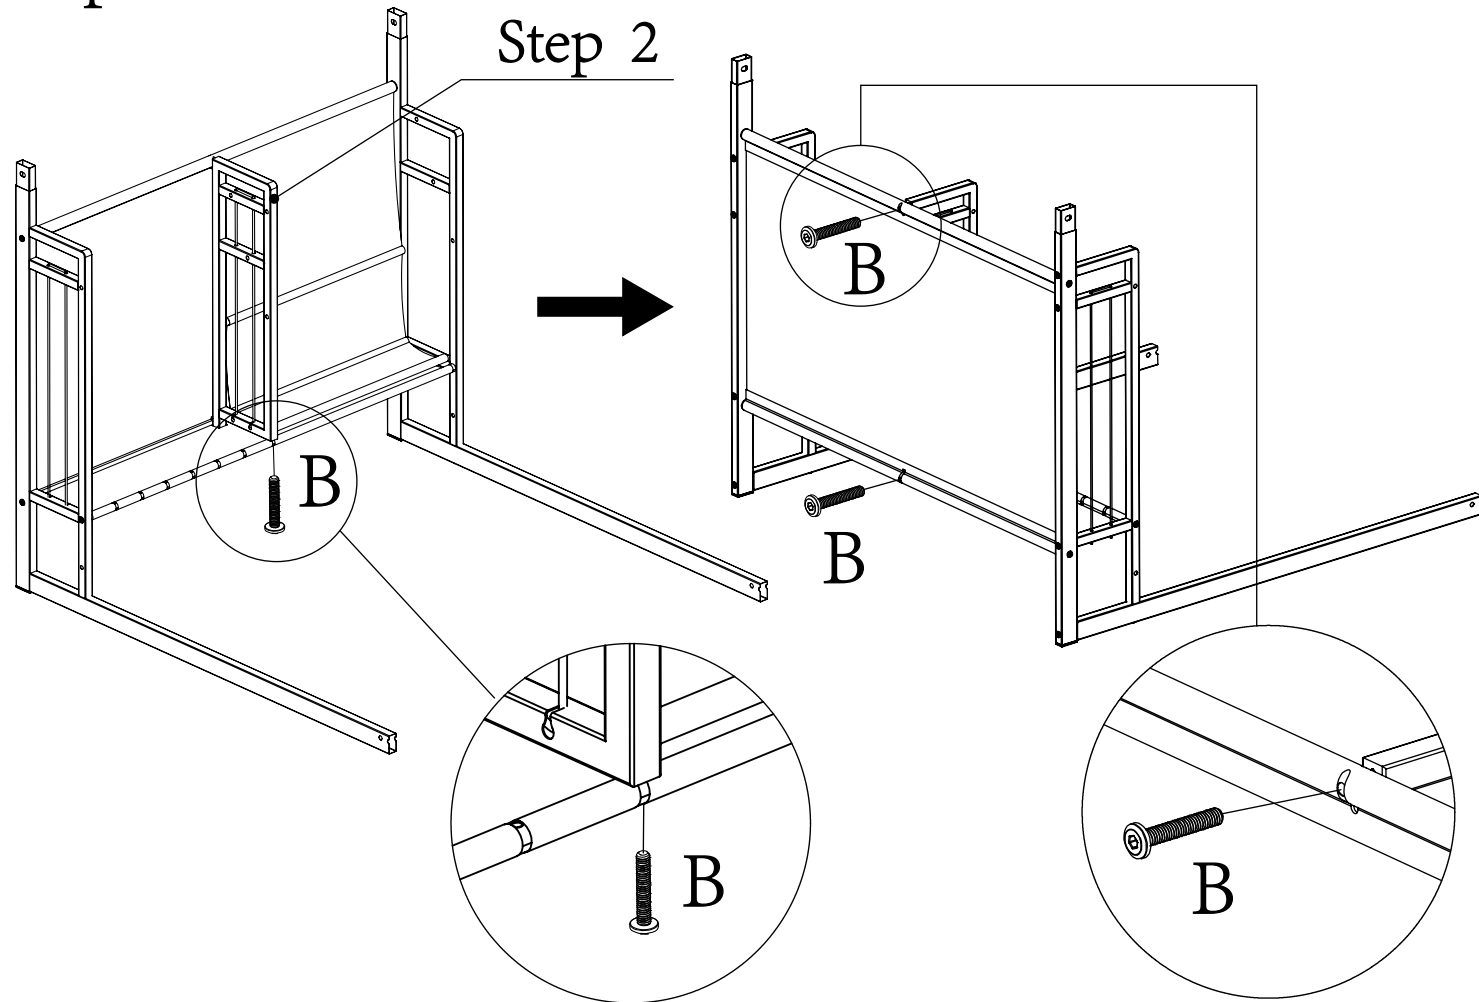

Step 9


B	M6X35	6
---	-------	---

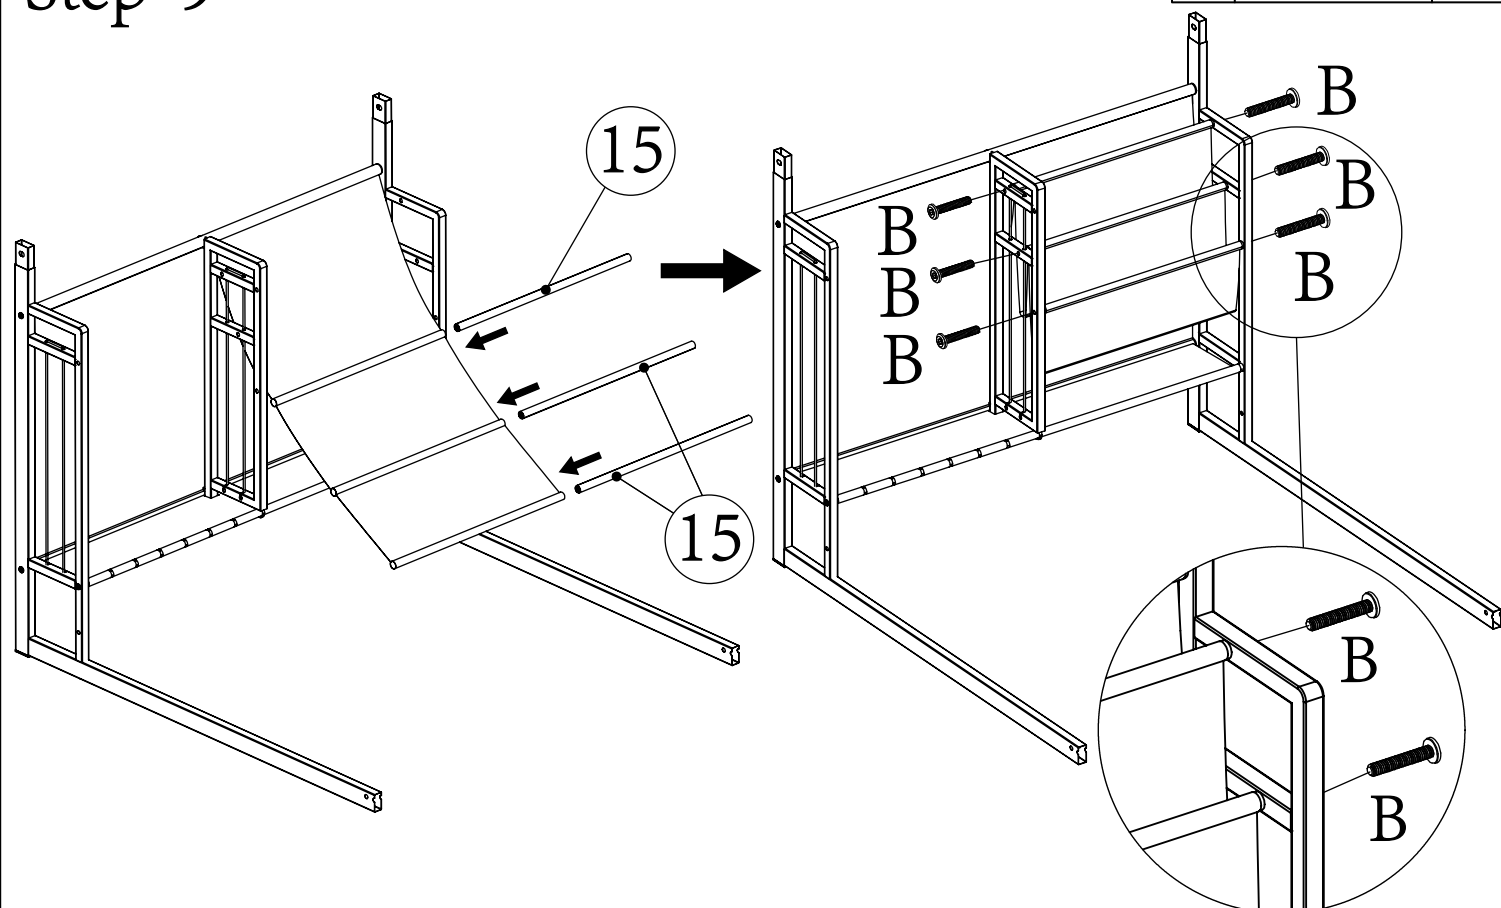

After completing Step 10, fully tighten all screws from Steps 7 – 10 before proceeding with further assembly.


Step 10

B	M6X35	4
---	-------	---

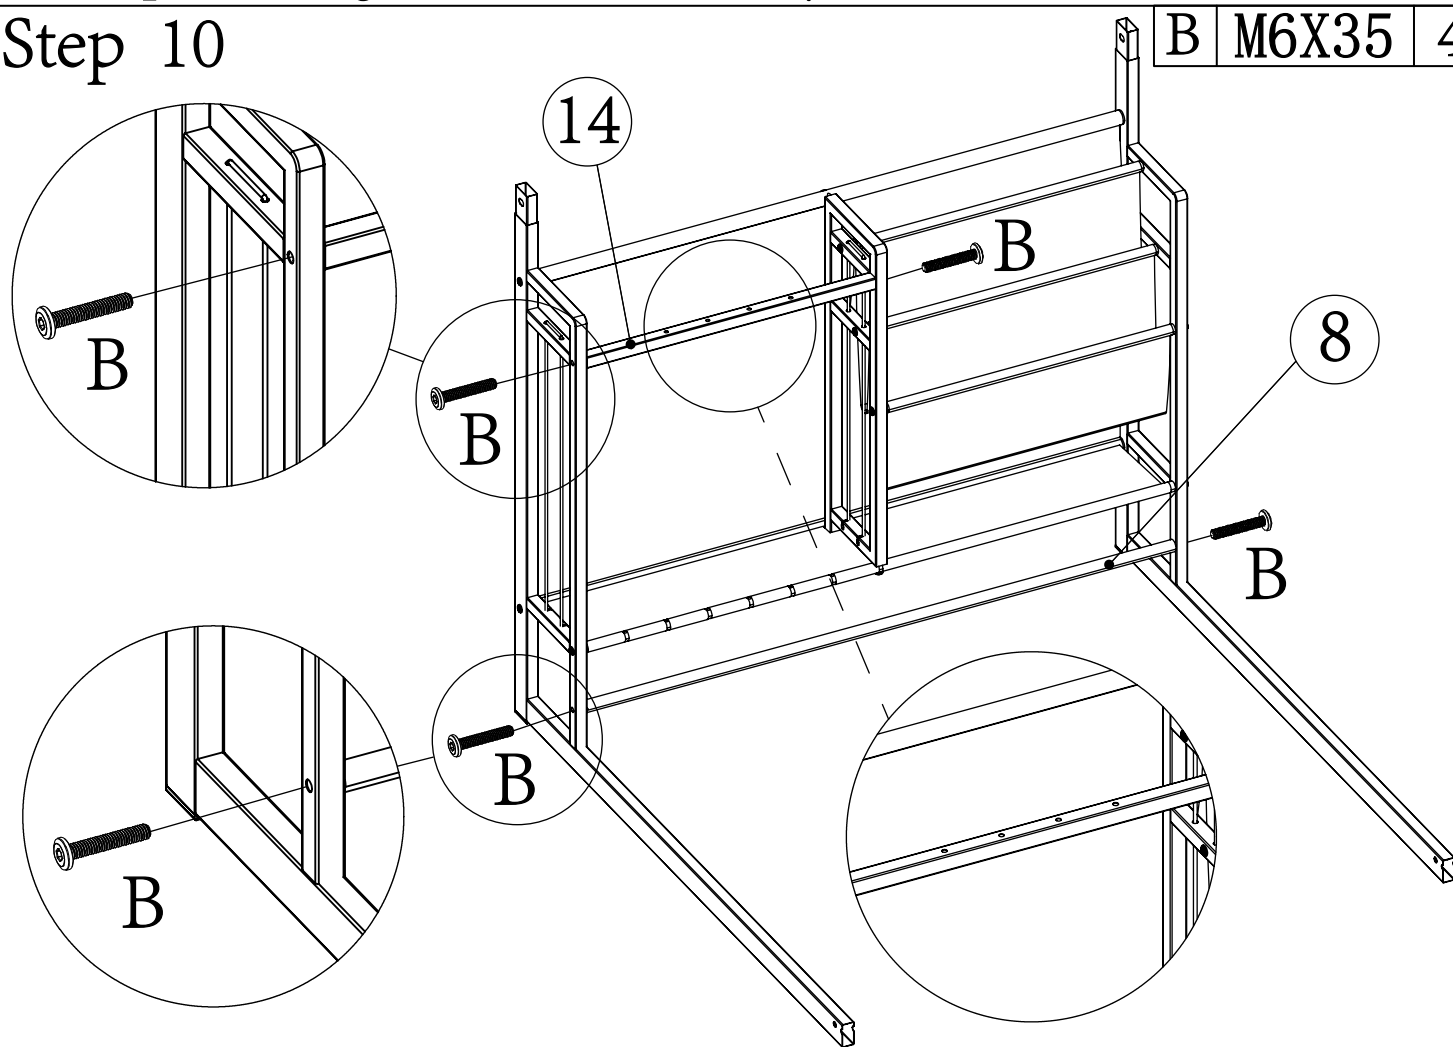


Step 11

Begin threading the rope at this hole.

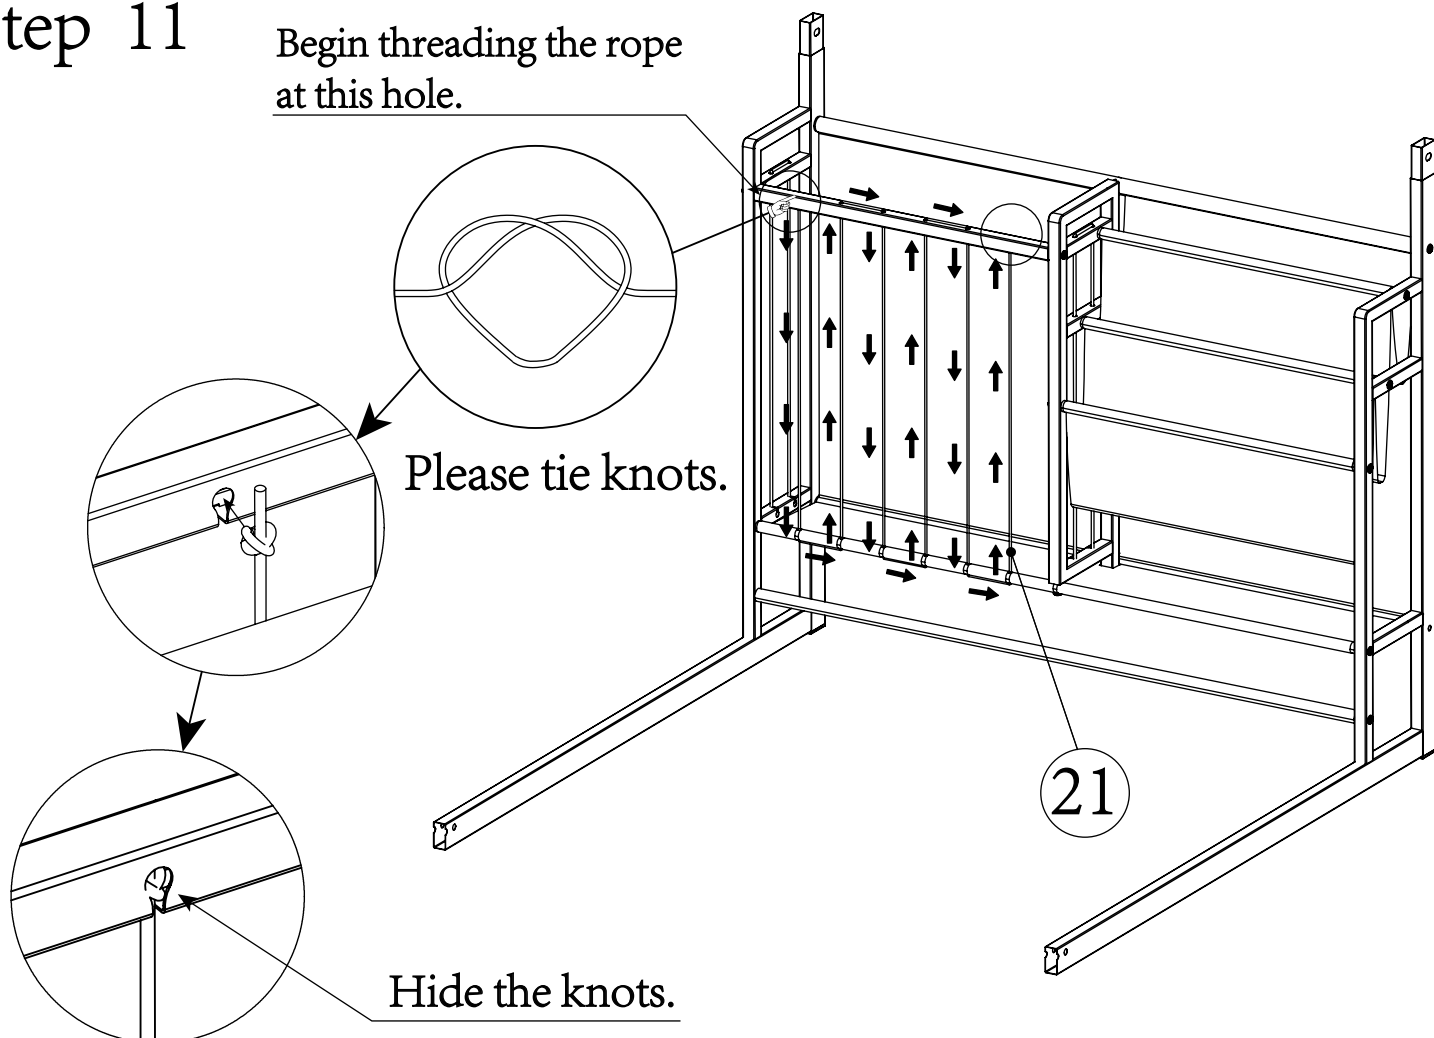


Step 12

B	M6X35	4
---	-------	---

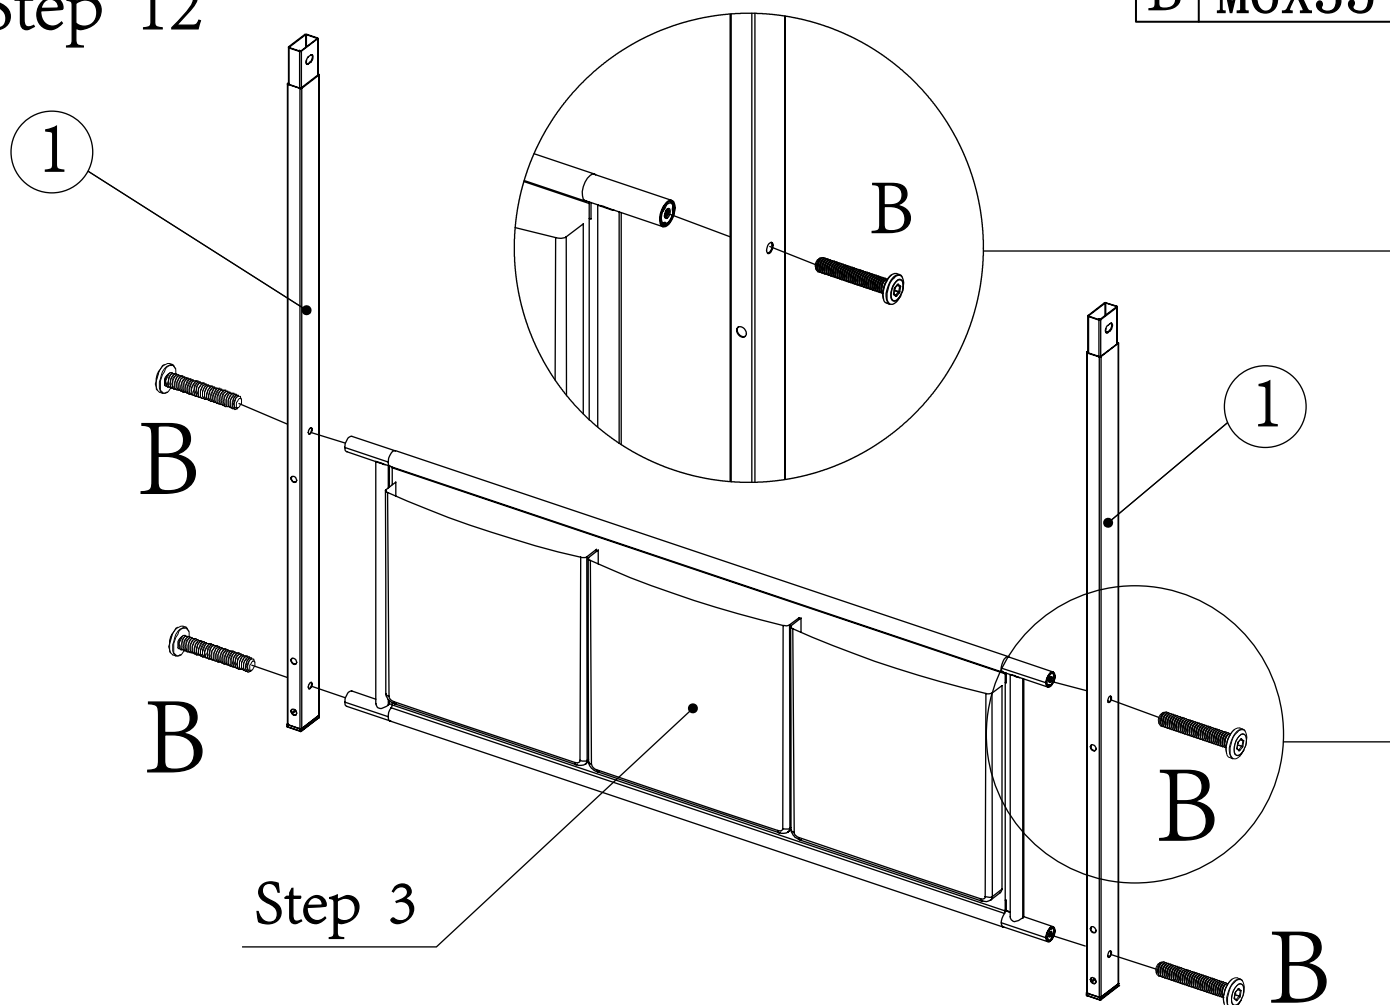


Step 13

A	M6X60	2
---	-------	---

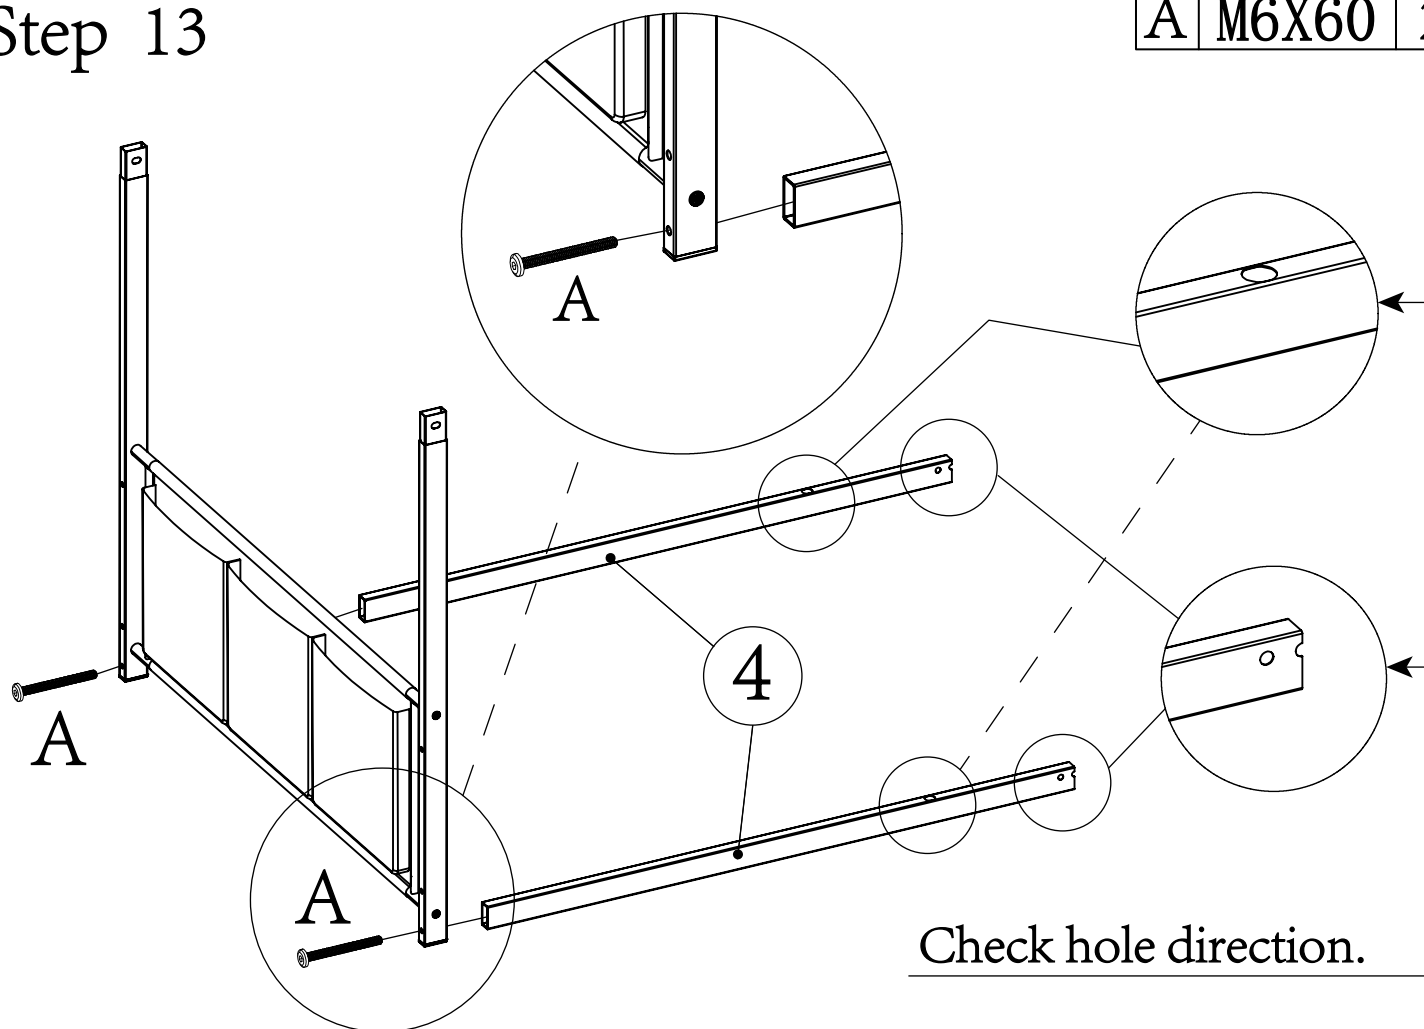


Step 14

C	M6X20	6	D	M6X15	6	E		2
---	-------	---	---	-------	---	---	--	---

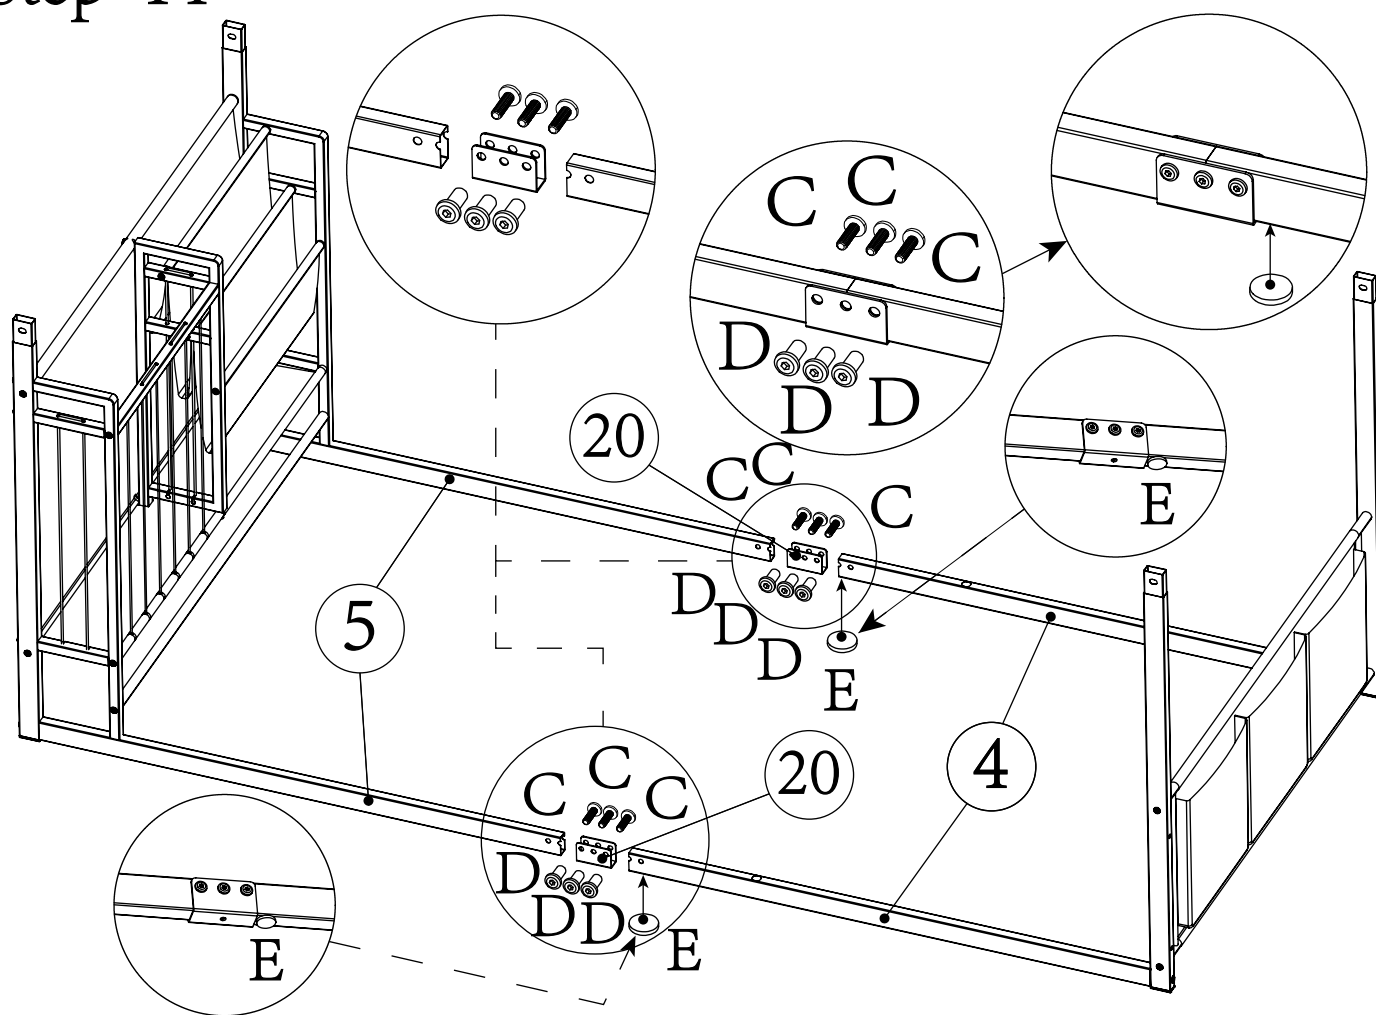


Step 15

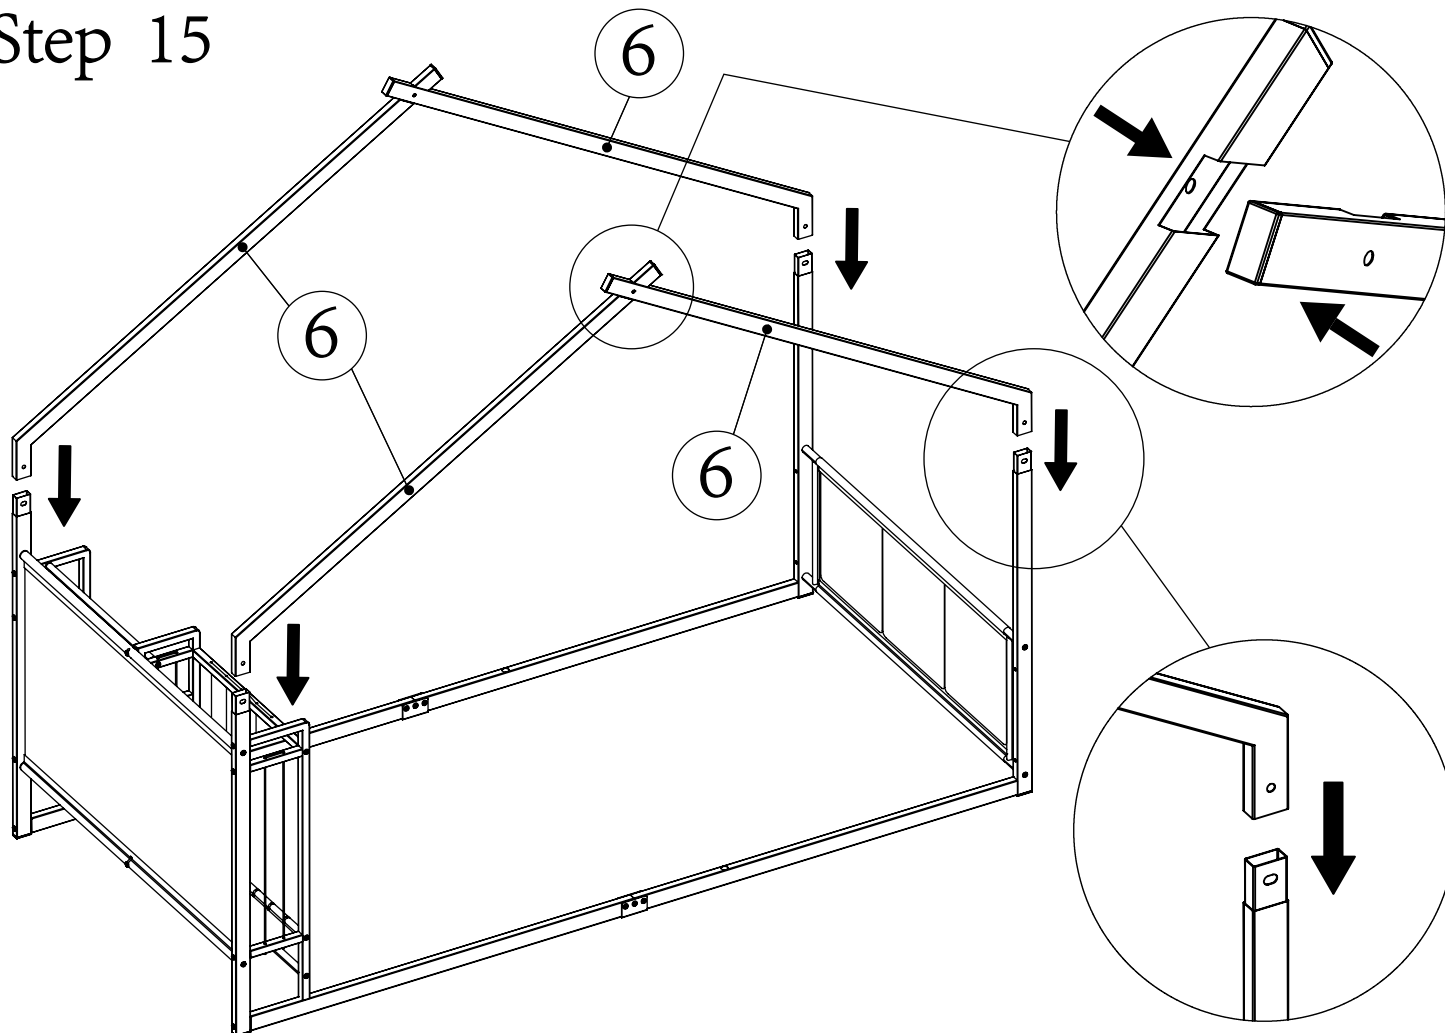

Step 16


B	M6X35	6
---	-------	---

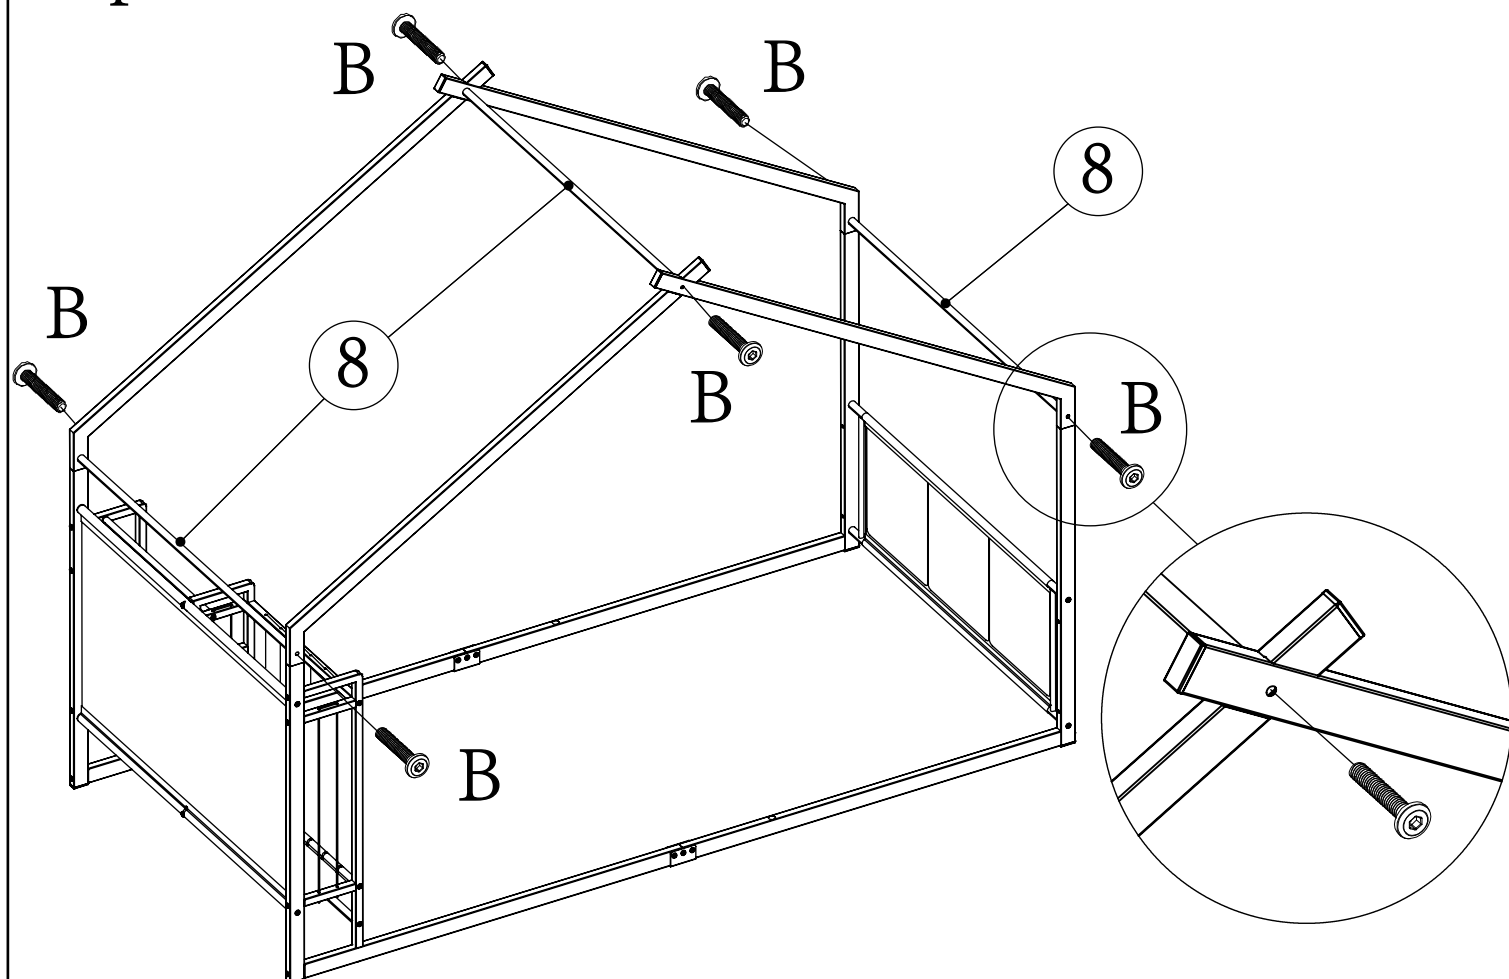

Install the guard rails as needed. Two installation methods are provided.

Type-A

A	M6X60	2
C	M6X20	1

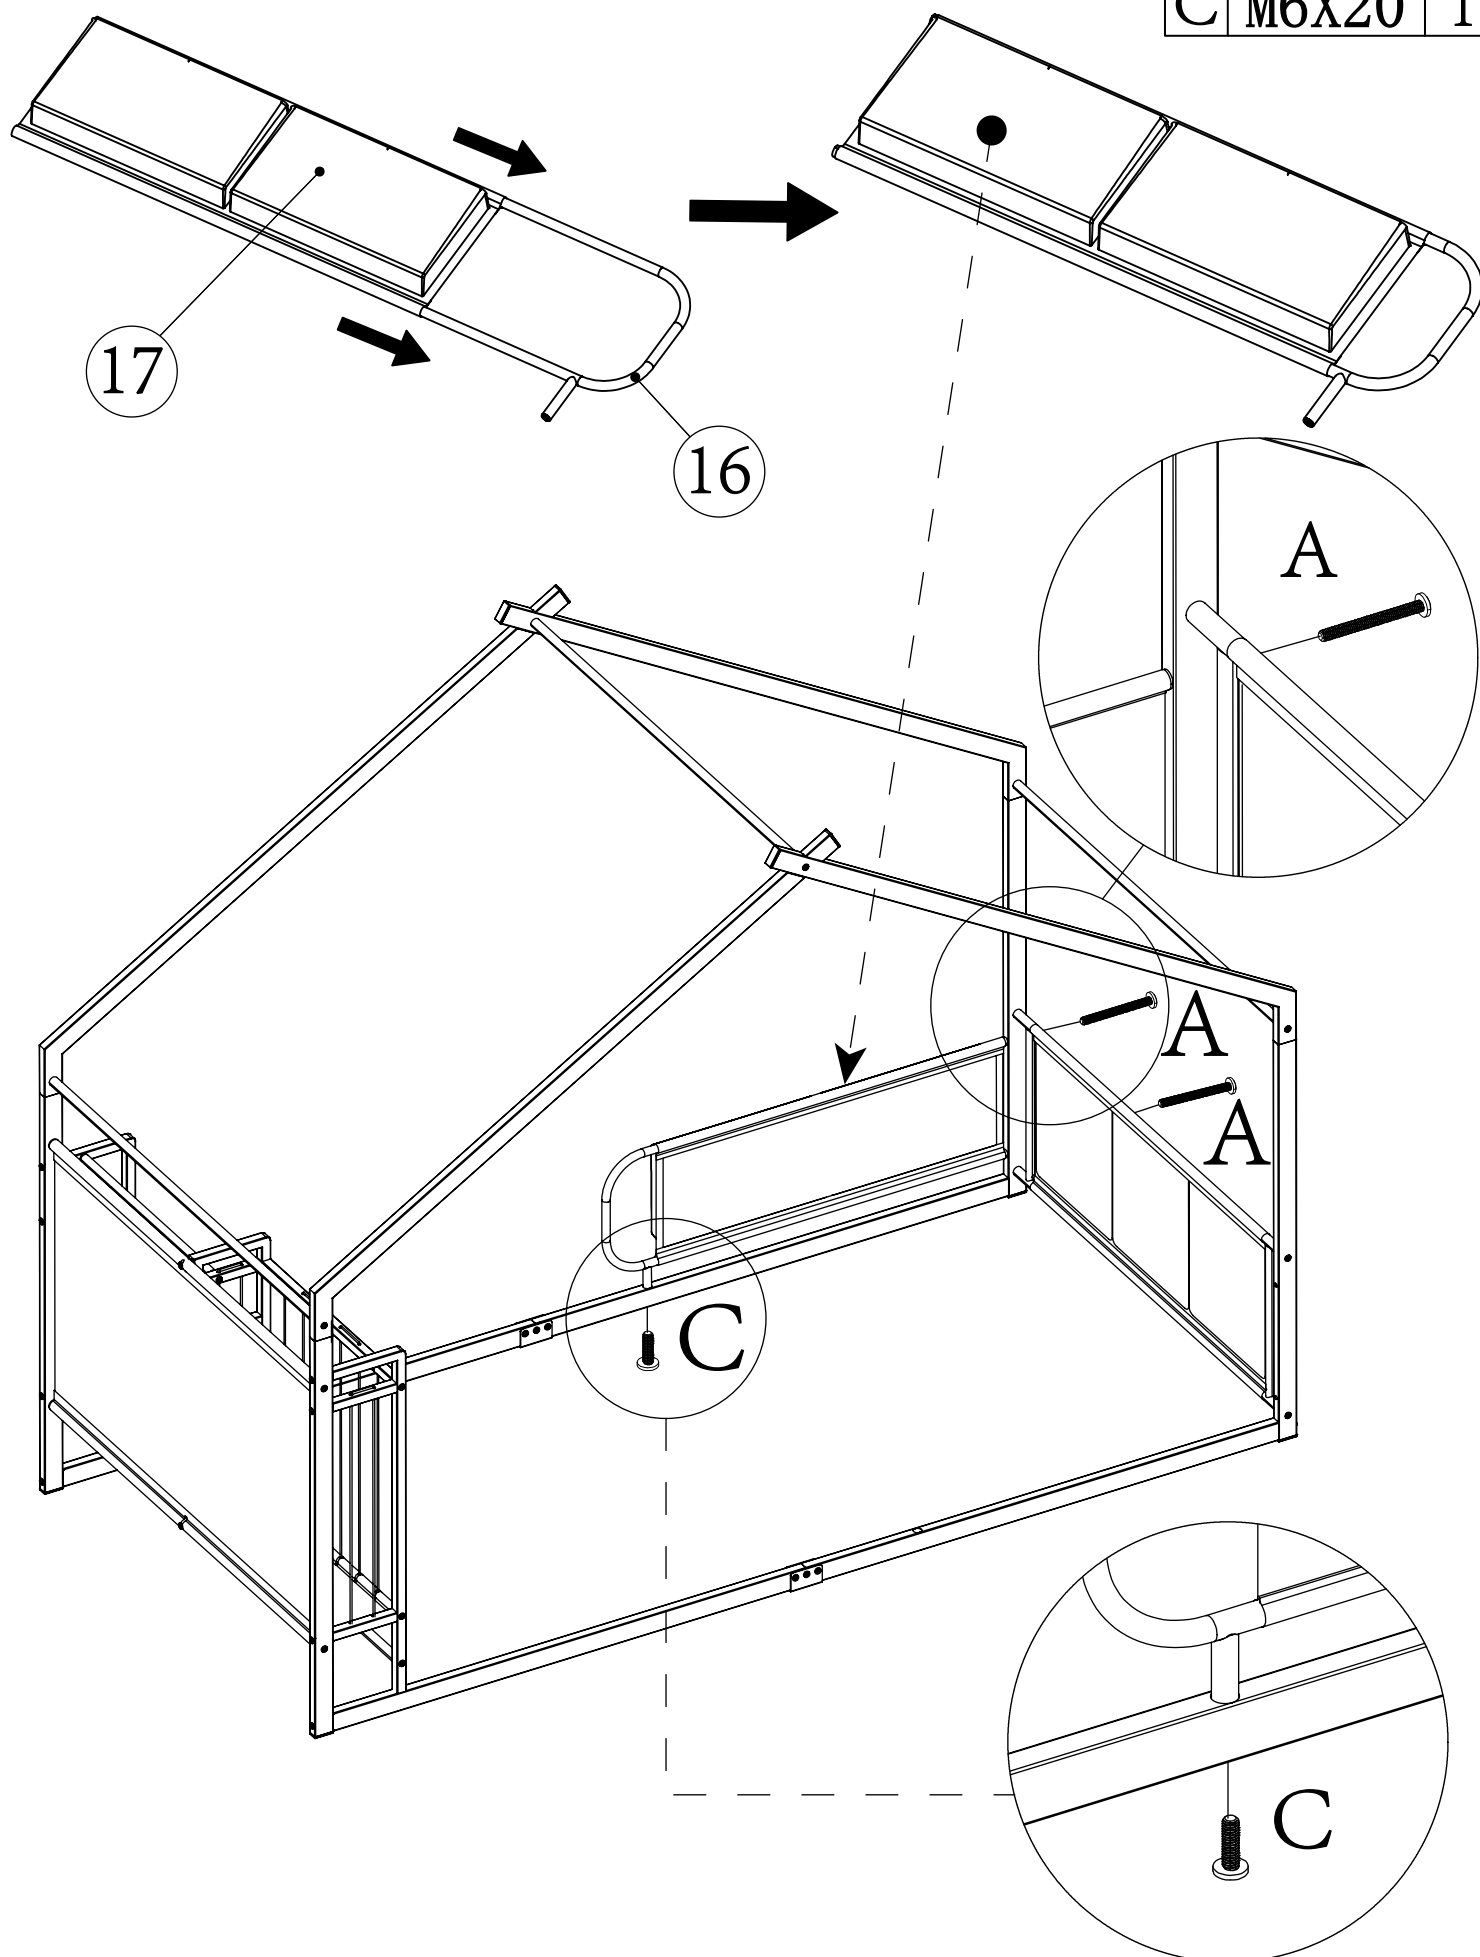

Type-B

A	M6X60	2
C	M6X20	1

