


Installation instruction

List of accessories:



Start installation

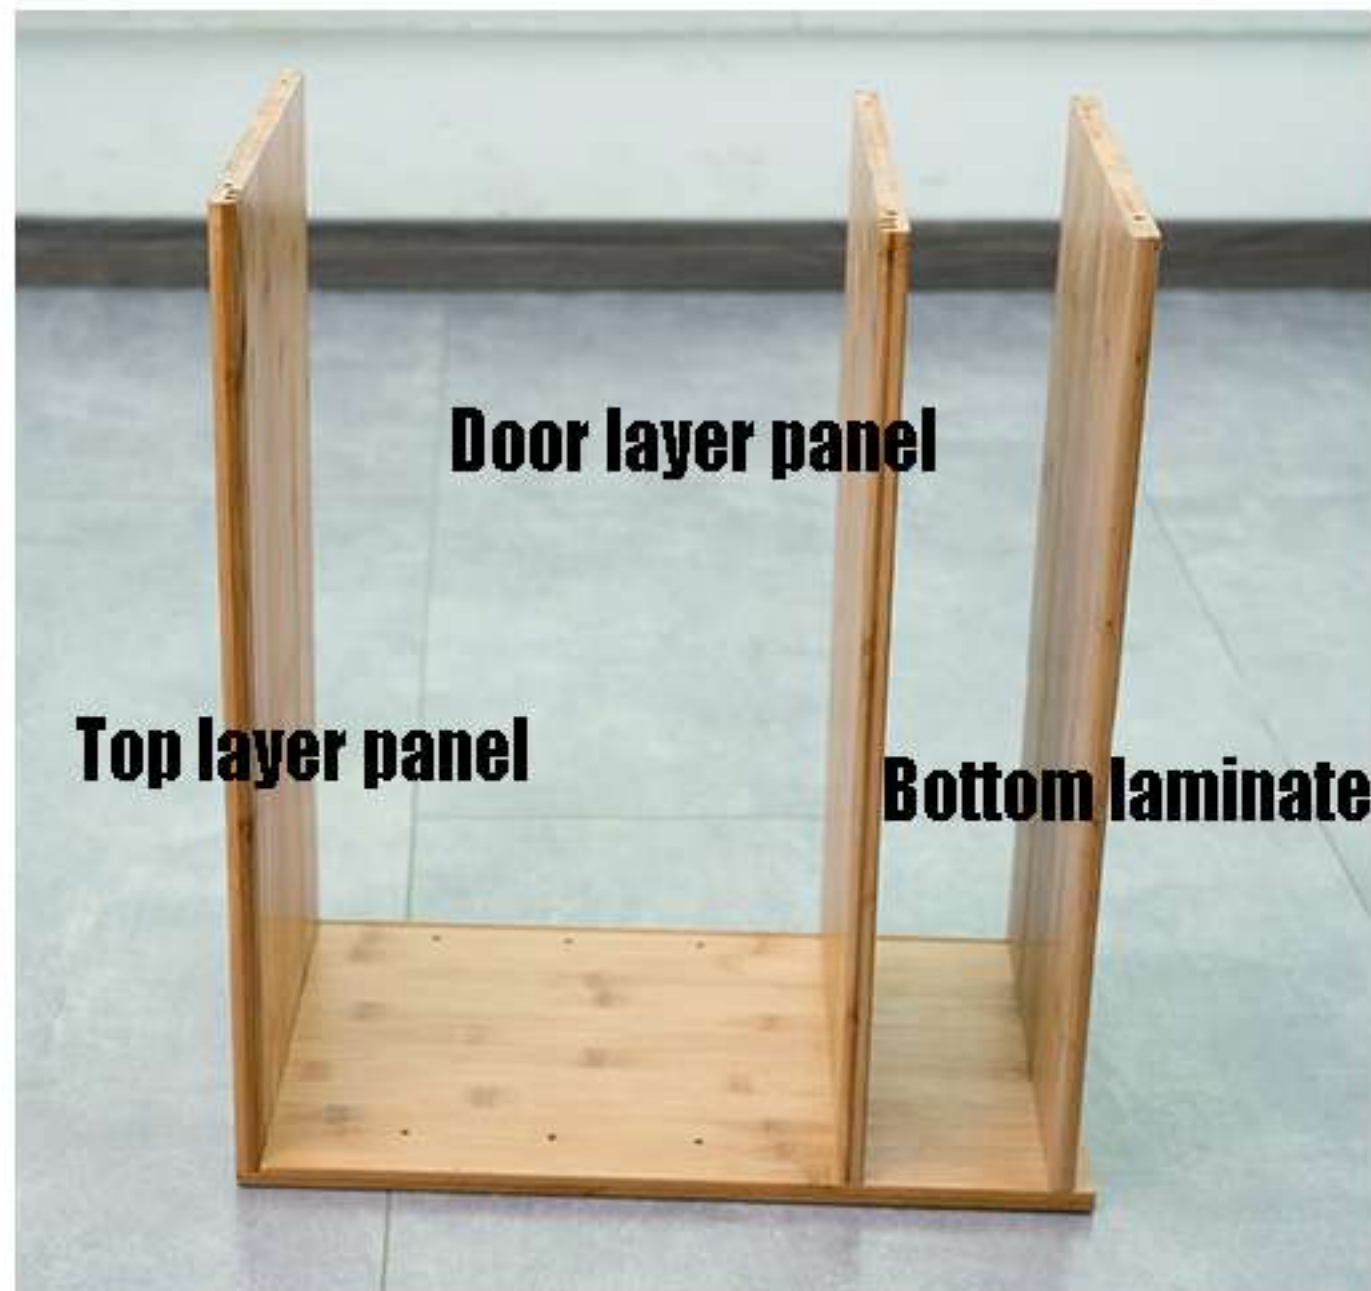

1. Take out the bottom laminate, door layer panel, top layer panel and side bracket left and install with long screws (pay attention to the ply and bracket single notch alignment).



2. Remove the small back plate and insert it along the groove.



3. Take out the large backplane and backboard bar insert them along the grooves.



4. Take out the door panel and the handle and install it with short screws.



5. Take out the door panel and insert the door panel along the top laminate and door laminate double groove respectively.



6. Put in the ordinary laminate.



7. Take out the side bracket right and install it with long screws.



8. Take out the metal pin and insert them into the corresponding holes of the side brackets.



9. Finally, just put the ordinary laminate on the metal pin.