












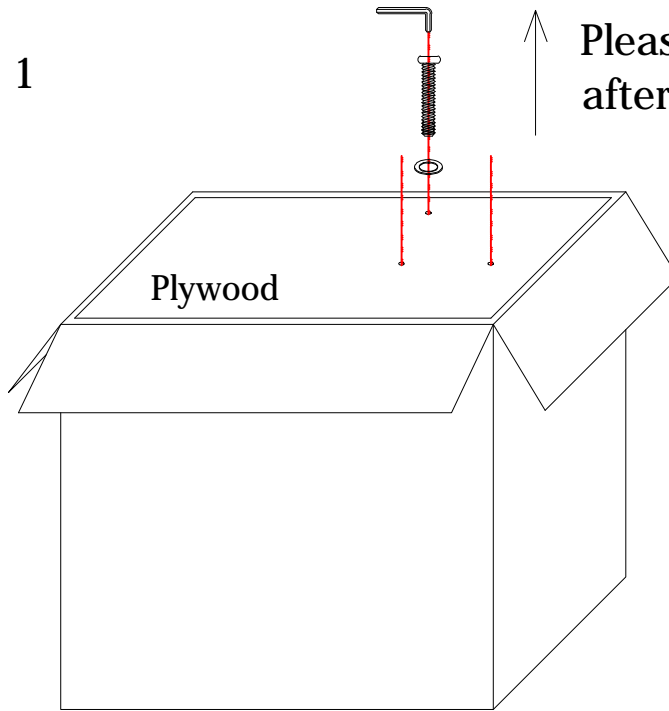





A  x1	B  x2	C  x1	D  x4	1  M8*20MM x24	2  M8*80MM x3
3  x27	4  x29	5  x1	6  M8*90MM x2	7  x2	8  x2
9  x1					

STEP 1



Please unscrew the bolts
after open the box

STEP 2

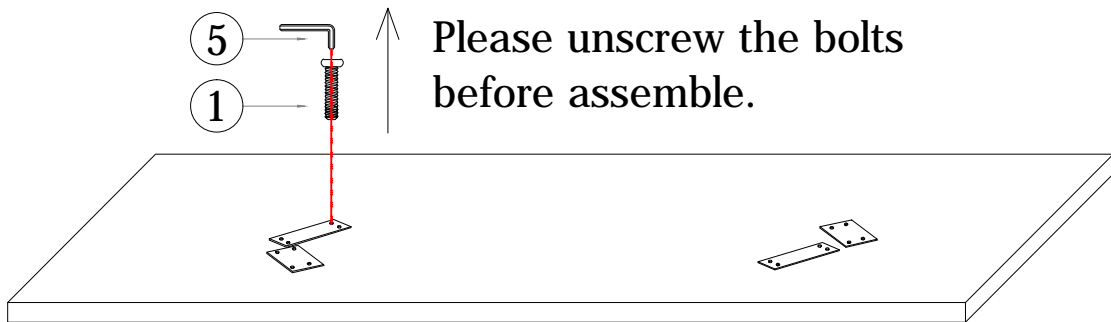


Please unscrew the bolts
before assemble.




A x1	B x2	C x1	D x4	1 M8*20MM x24	2 M8*80MM x3
3 x27	4 x29	5 x1	6 M8*90MM x2	7 x2	8 x2
9 x1					

STEP 3

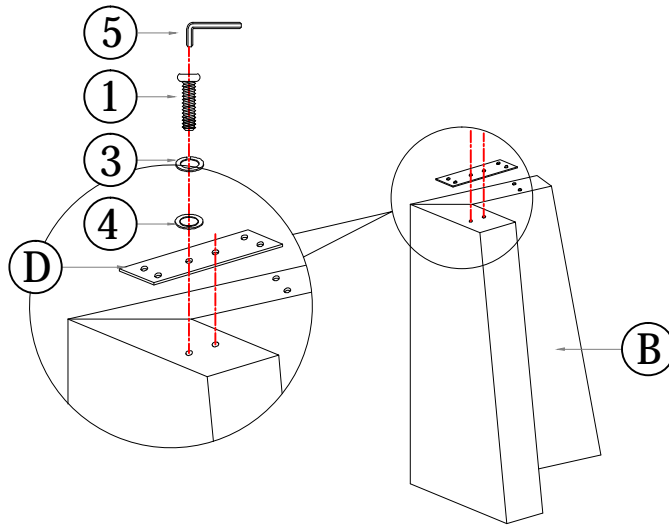


STEP 4

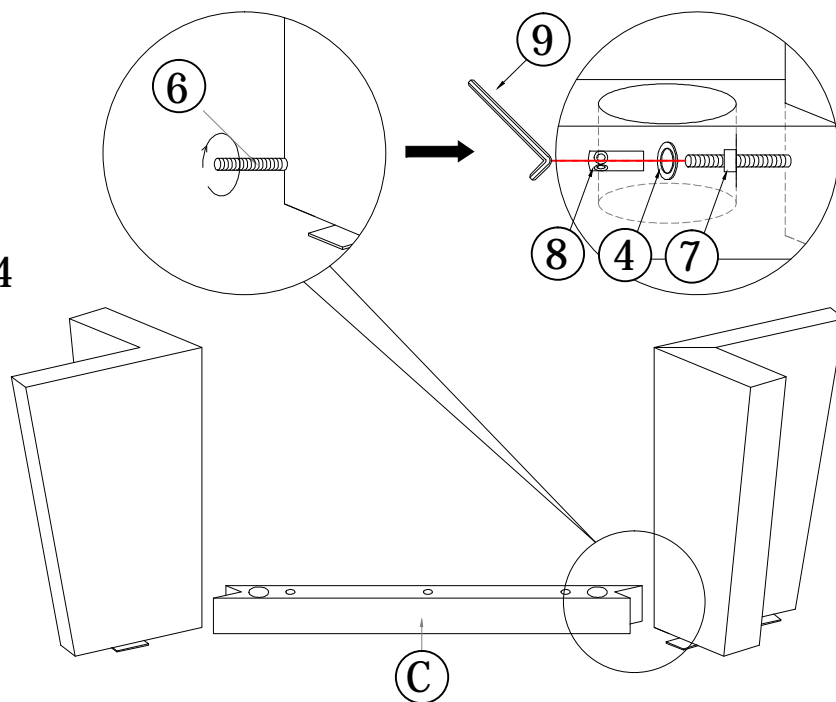



A x1	B x2	C x1	D x4	1 M8*20MM x24	2 M8*80MM x3
3 x27	4 x29	5 x1	6 M8*90MM x2	7 x2	8 x2
9 x1					

STEP 5

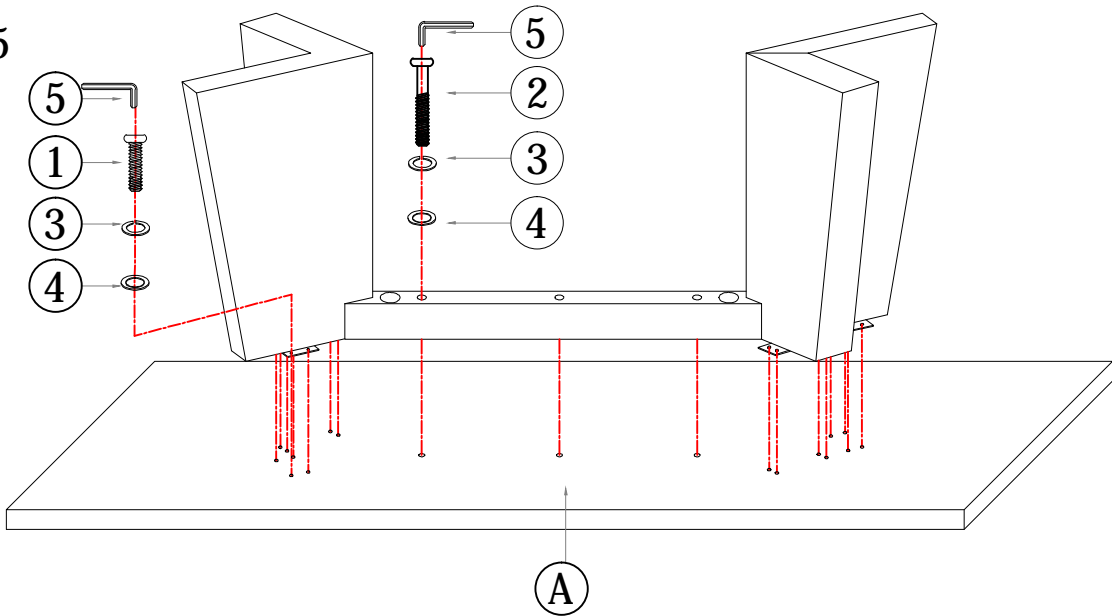

STEP 6

