

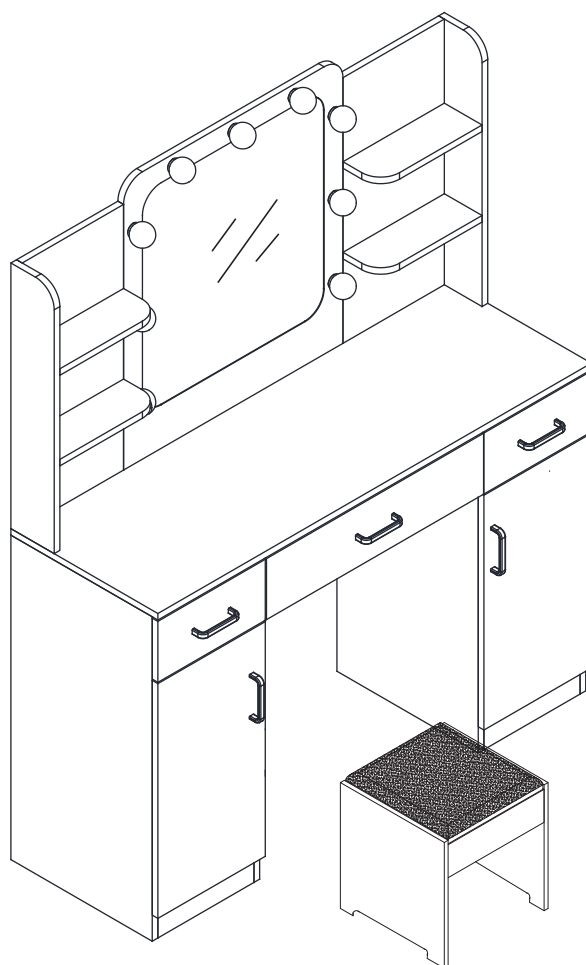
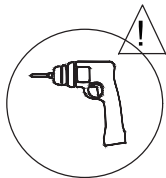


CAUTION:When tightening the screws,tighten sequentially.Do not tighten any screws fully and then towards the next one.When every part is OK, then tighten all the screws.

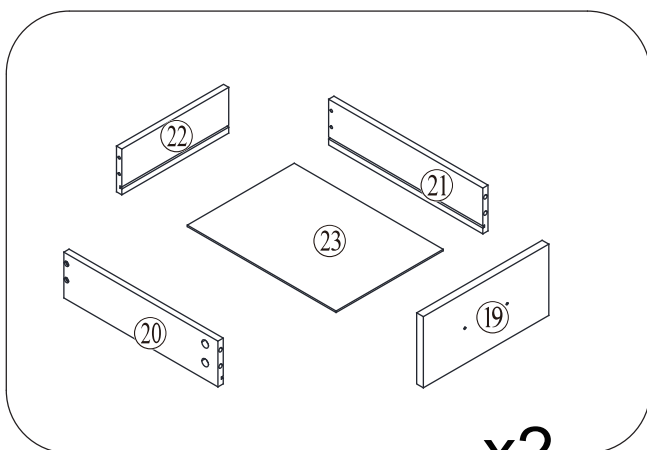


































PLEASE BE CAREFUL DO NOT DAMAGE THE
HOLE POSITION WHEN YOU USE POWER TOOLS !




If there are any missing parts, please contact us and we will send you the corresponding replacement part. We also offer an exclusive one-month service where we provide product replacements without the need for repairs, as long as the damage is not caused by human error.

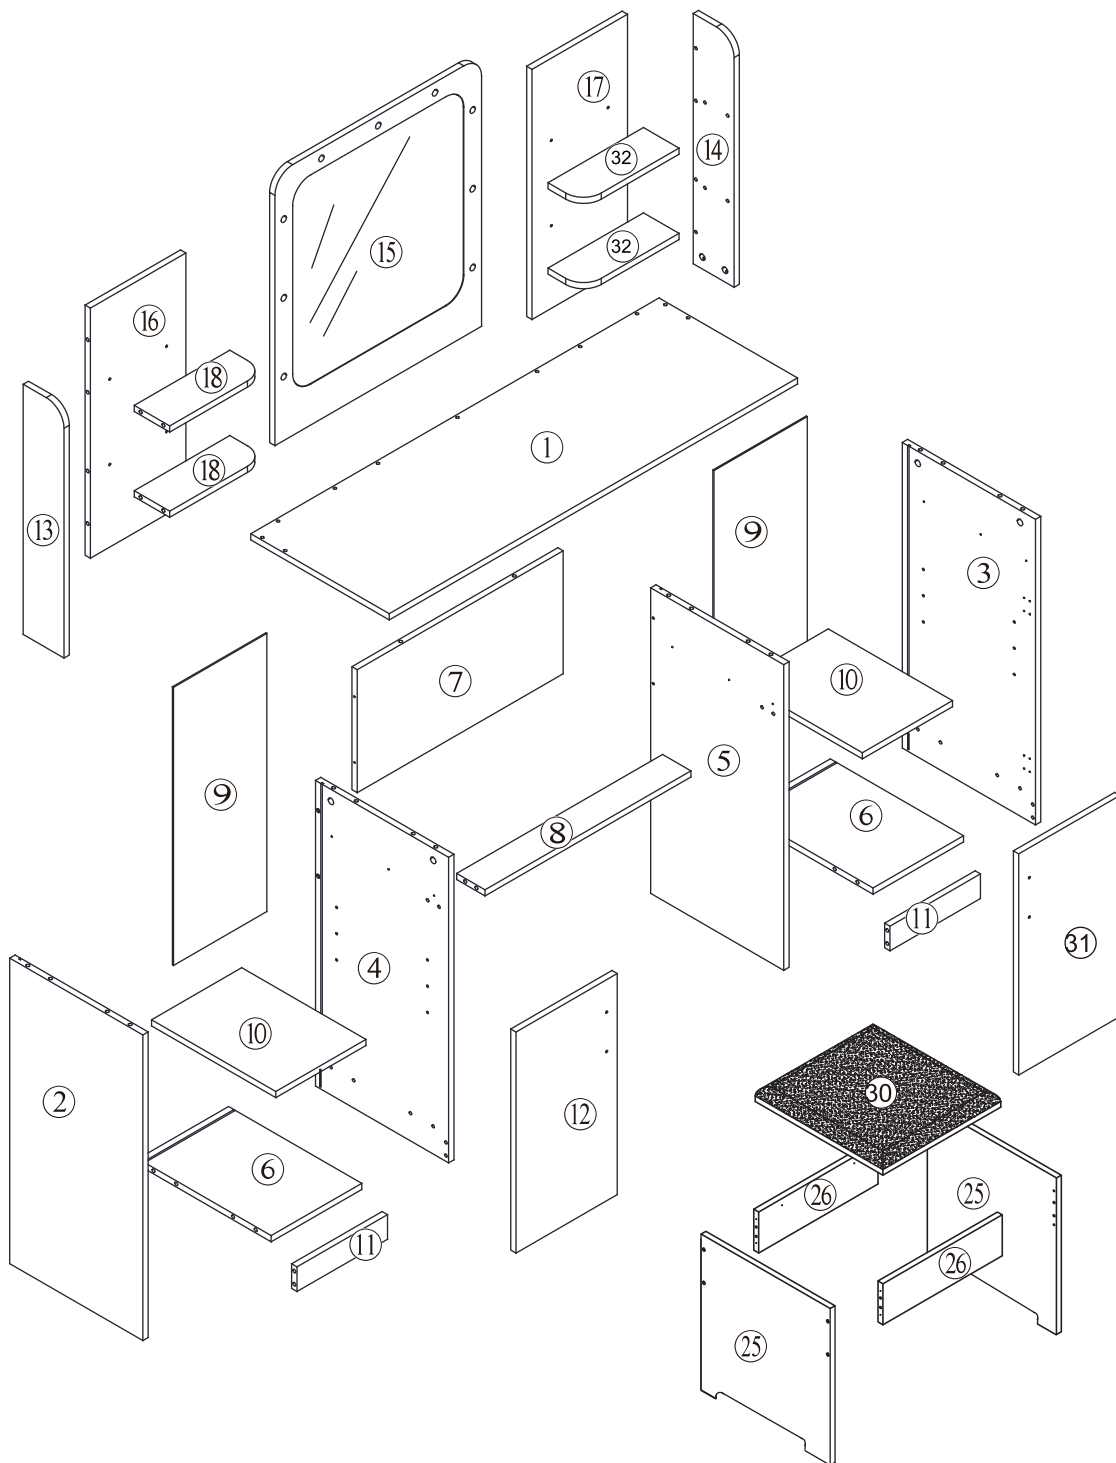

x2


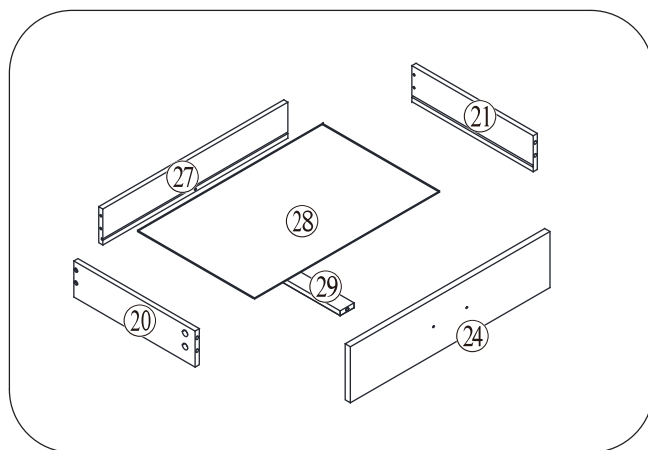


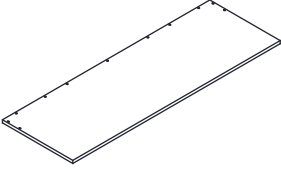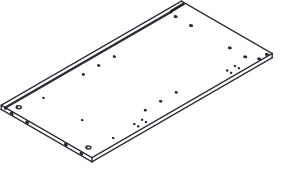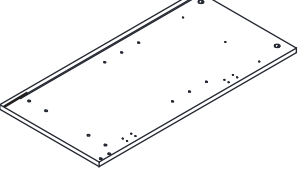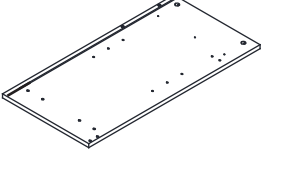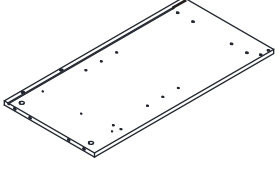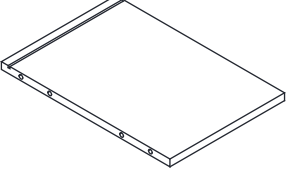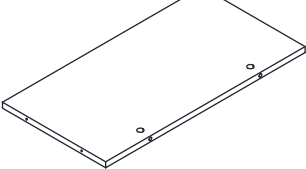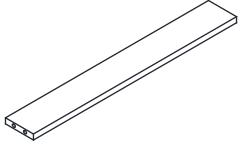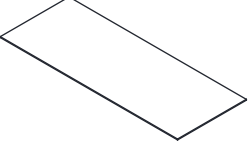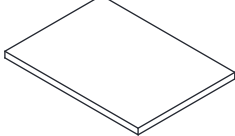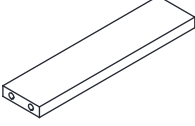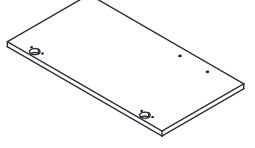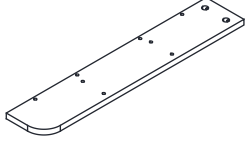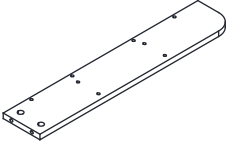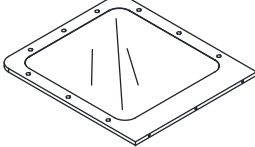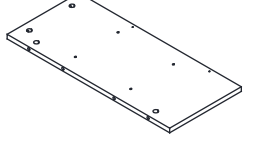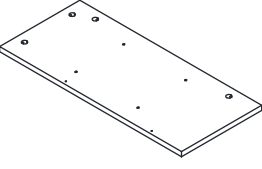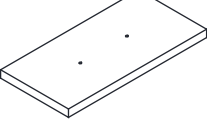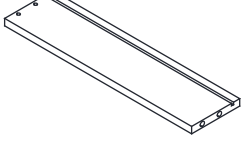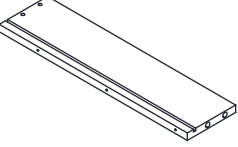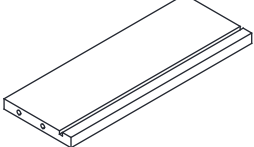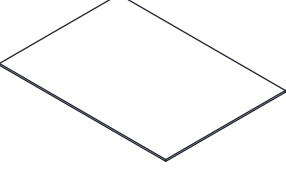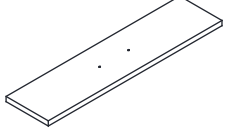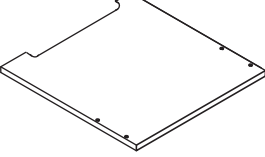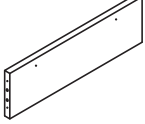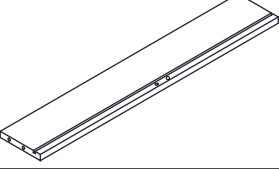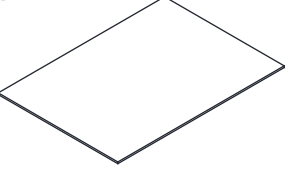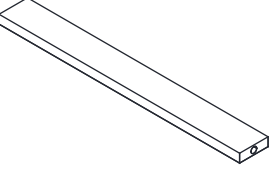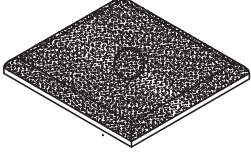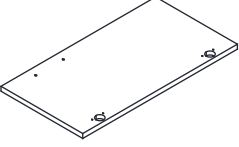① x1 	② x1 	③ x1 	④ x1 
⑤ x1 	⑥ x2 	⑦ x1 	⑧ x1 
⑨ x2 	⑩ x2 	⑪ x2 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x1 	⑯ x1 
⑰ x1 	⑱ x2 	⑲ x2 	⑳ x3 
㉑ x3 	㉒ x2 	㉓ x2 	㉔ x1 
㉕ x2 	㉖ x2 	㉗ x1 	㉘ x1 
㉙ x1 	㉚ x1 	㉛ x1 	㉜ x2 

A X50(+2)  Ø6x35mm	B X50(+2)  Ø15x10mm	C X40(+2)  Ø6x30mm	D X40(+2)  Ø4x35mm	E X 36(+2)  Ø3.5x10mm
F X4 	G X10  Ø4x14mm	H X1 	I X5 	J X8  Ø3x16mm
K X4 	L X4 	M X 32(+2)  Ø3.5x12mm	N x1 	
O X 3  Ø4x10mm	P X 2  Ø6x30mm	Q X8 	R X2 	S x 12 (+1) 
T x8 	CL X3  L350mm	CR X3  L350mm	DL X3  L350mm	DR X3  L350mm


SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE

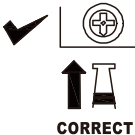
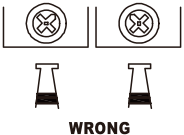
CORRECT **WRONG**

CAM-LOCK

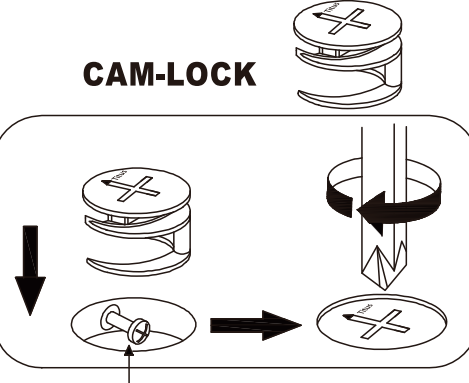


Quickfit head needs to be in centre

QUICKFIT
Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)


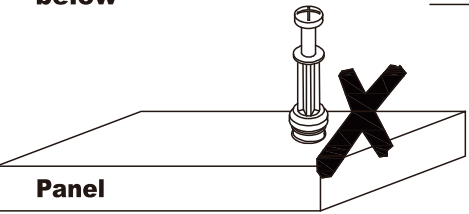
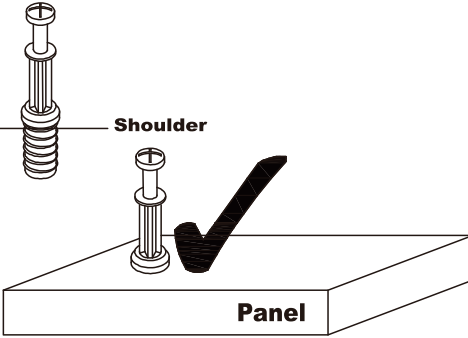



Panel **Panel**



Shoulder

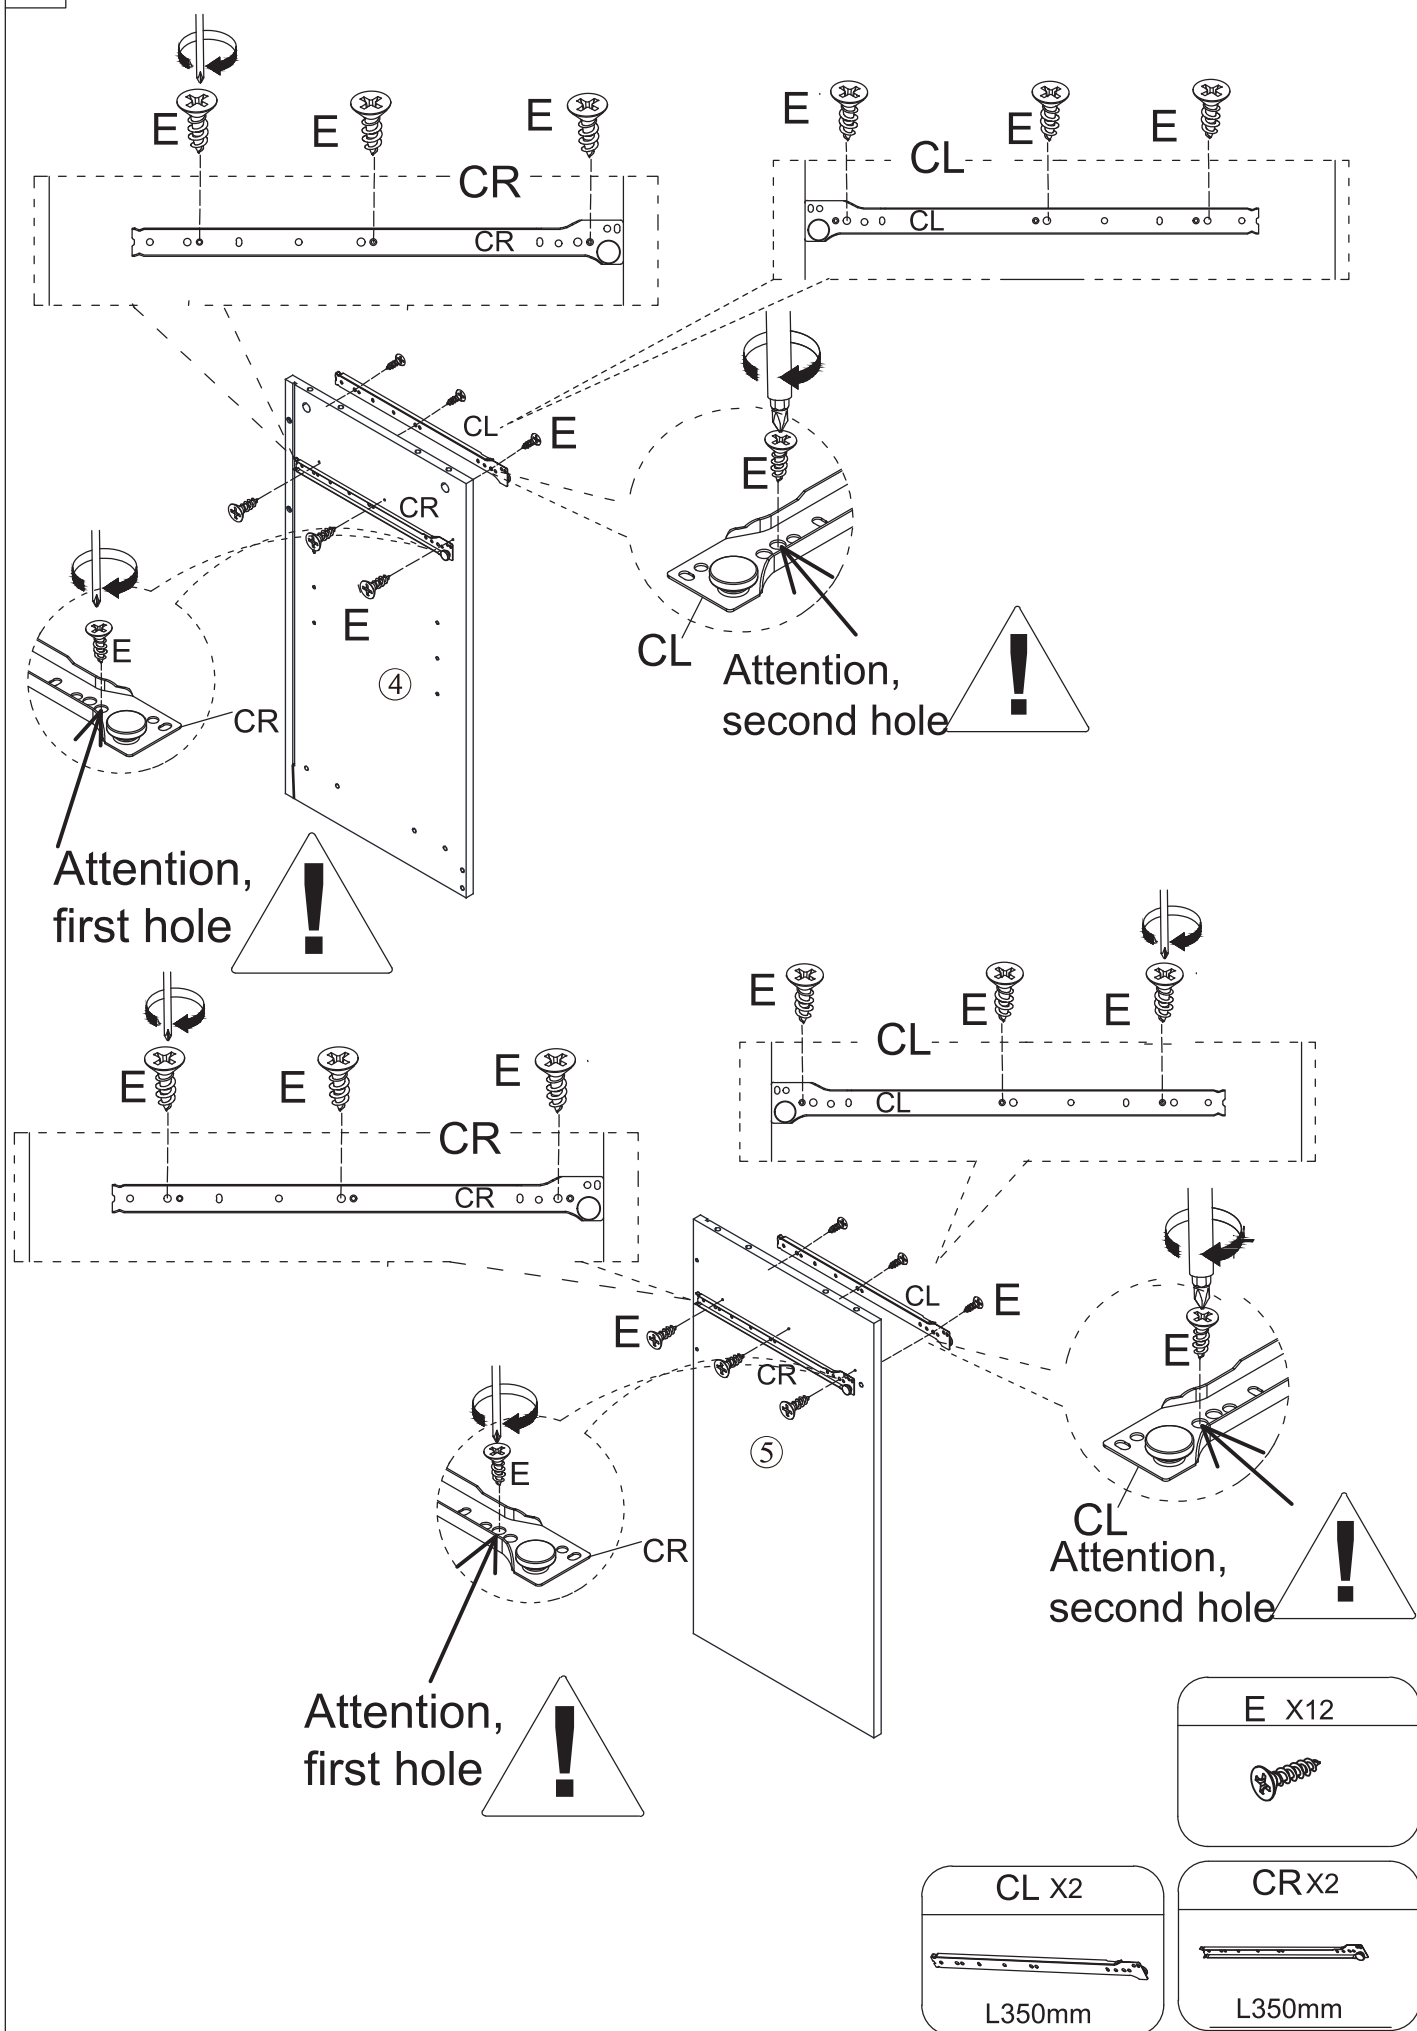





2

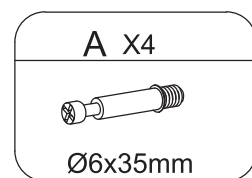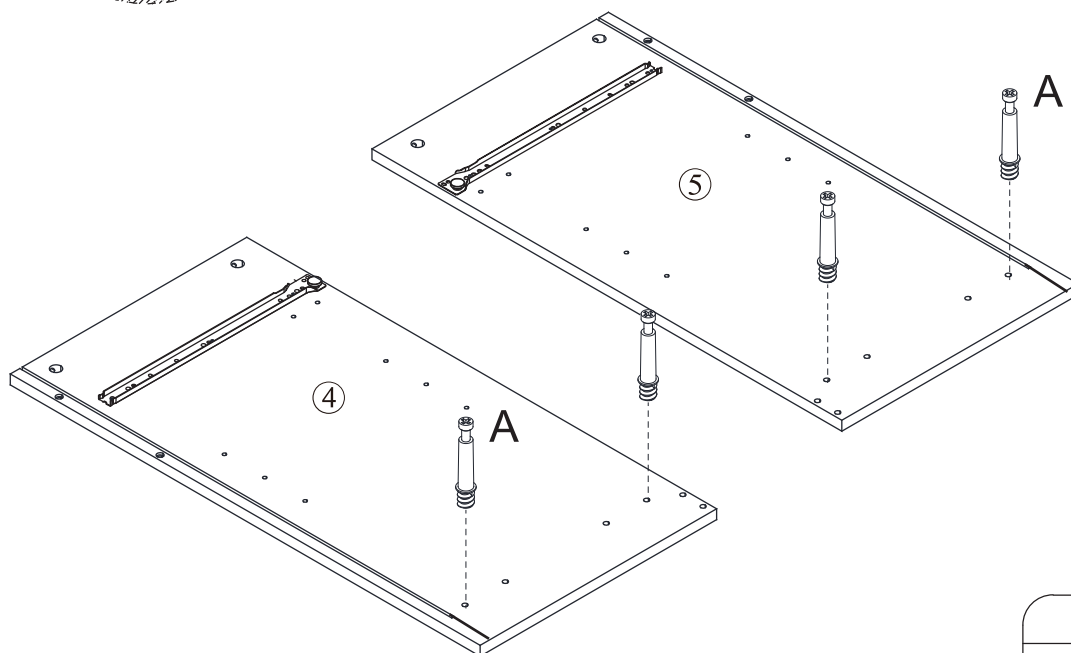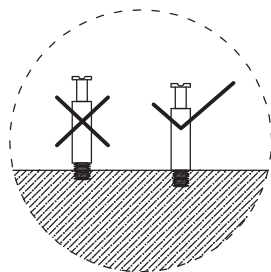






3

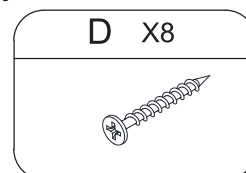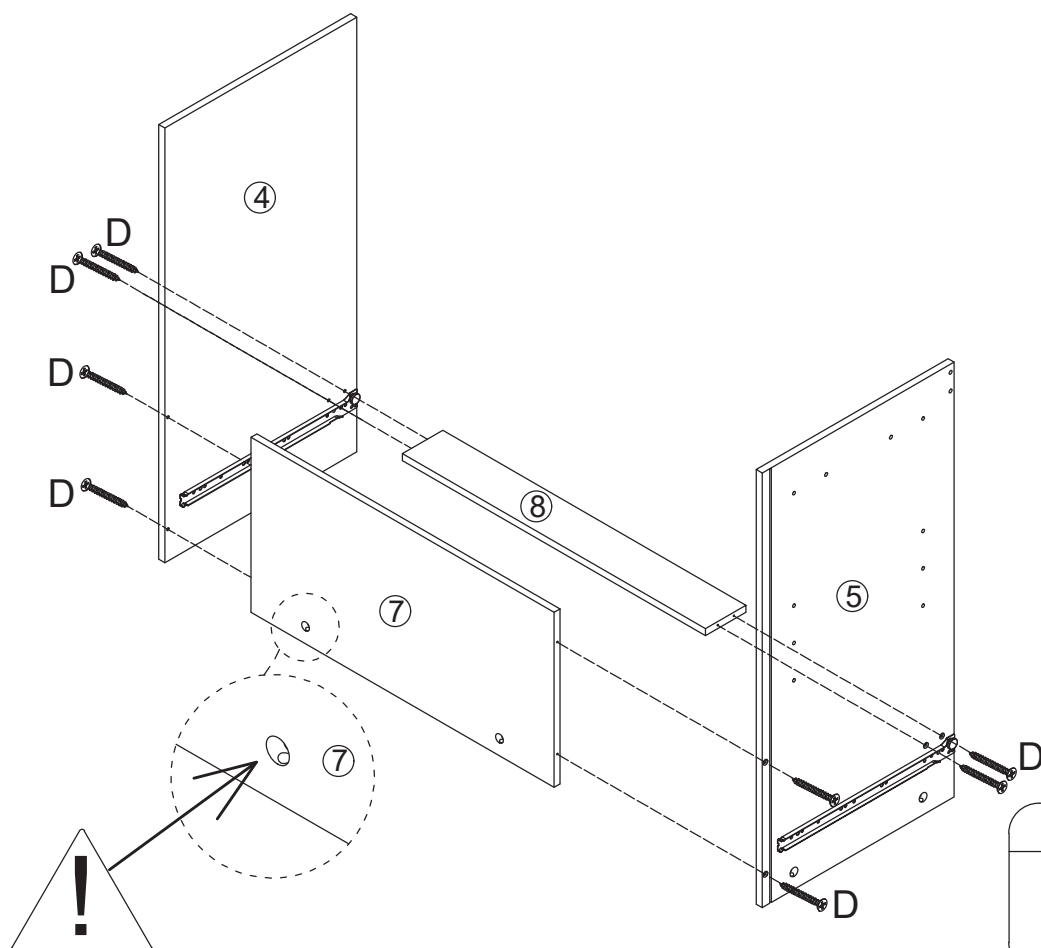



4

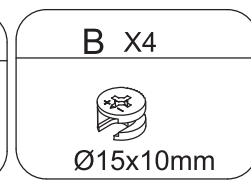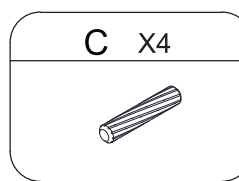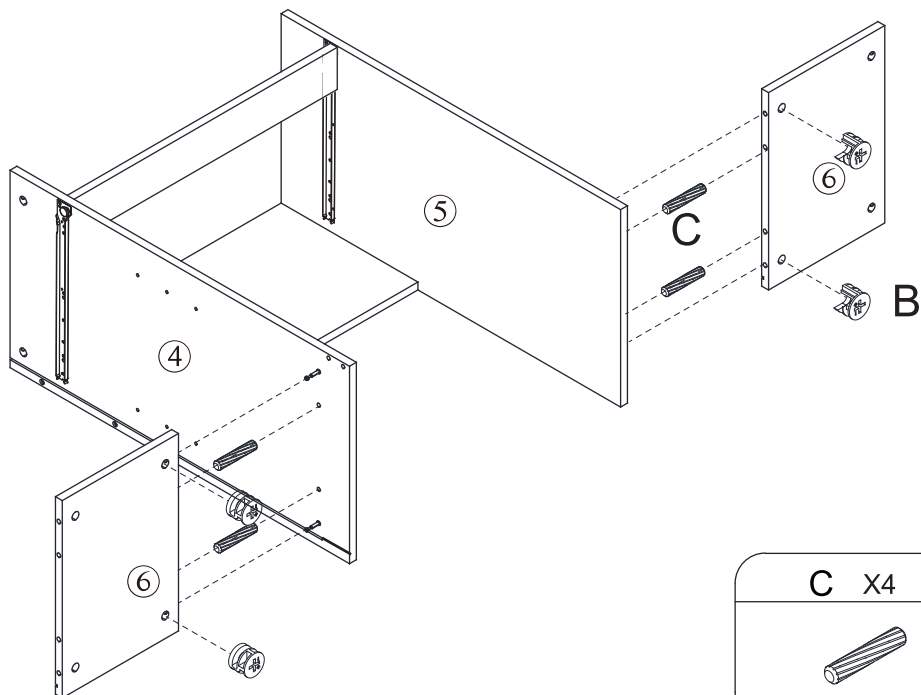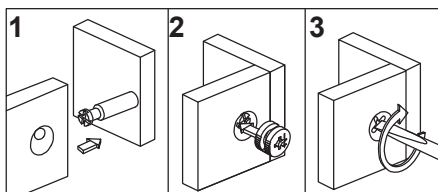


5

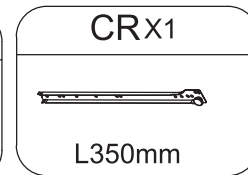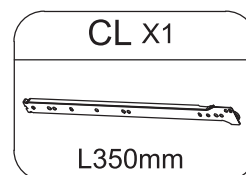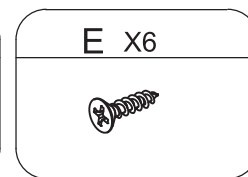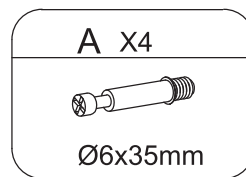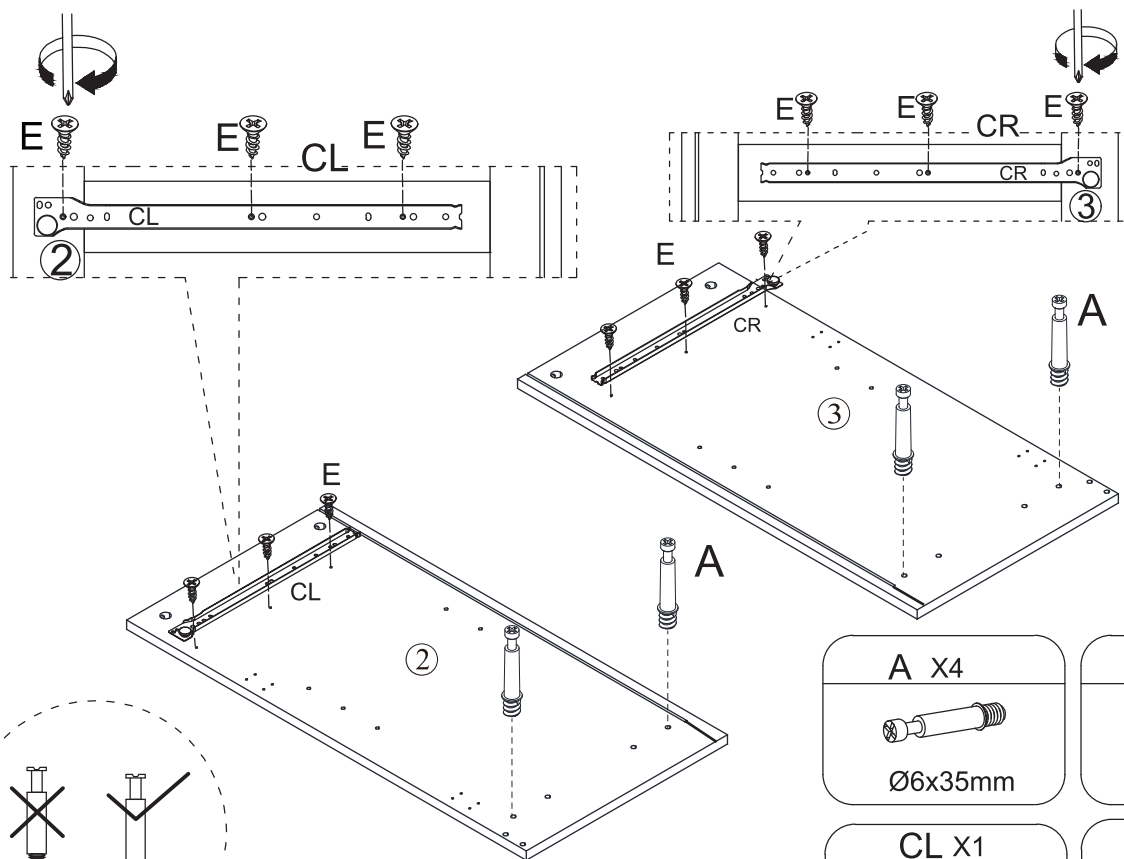



6

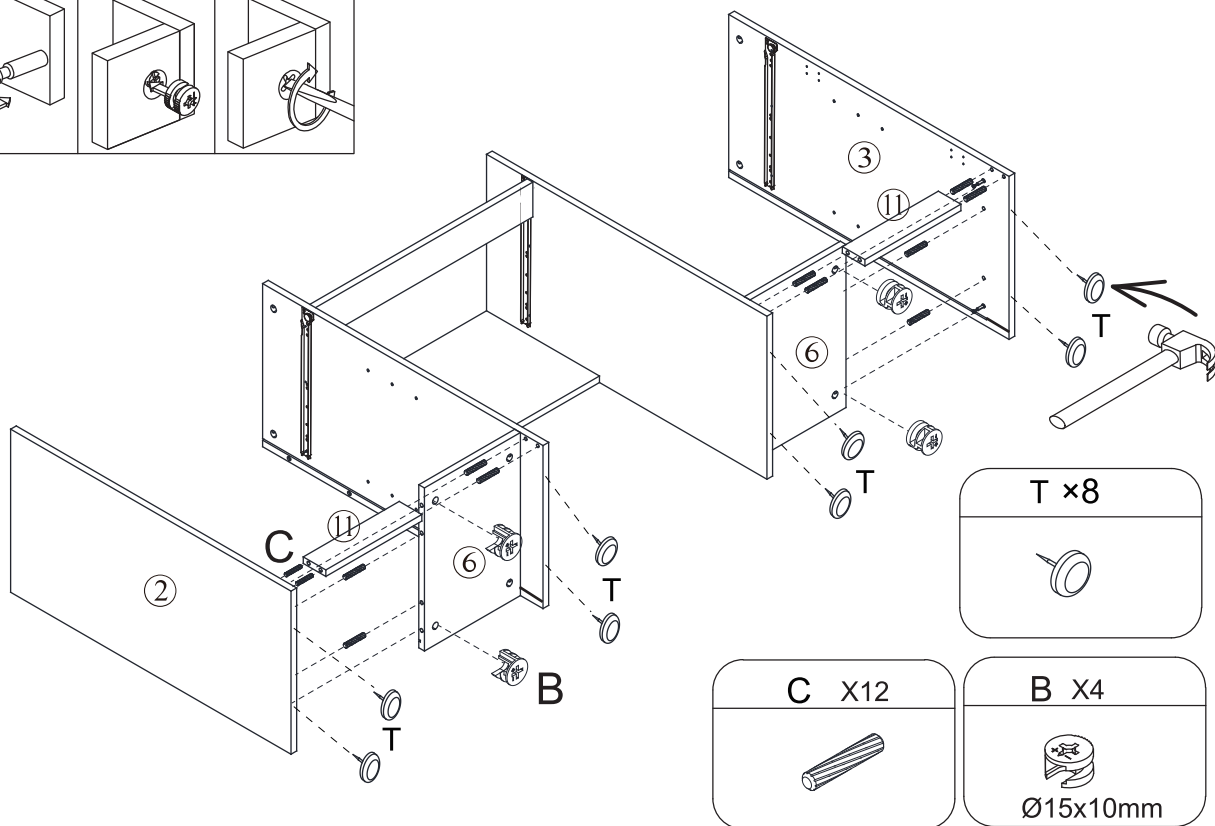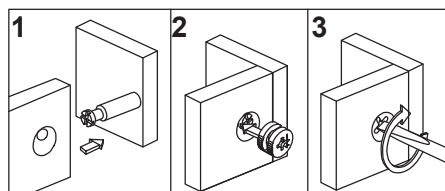


7

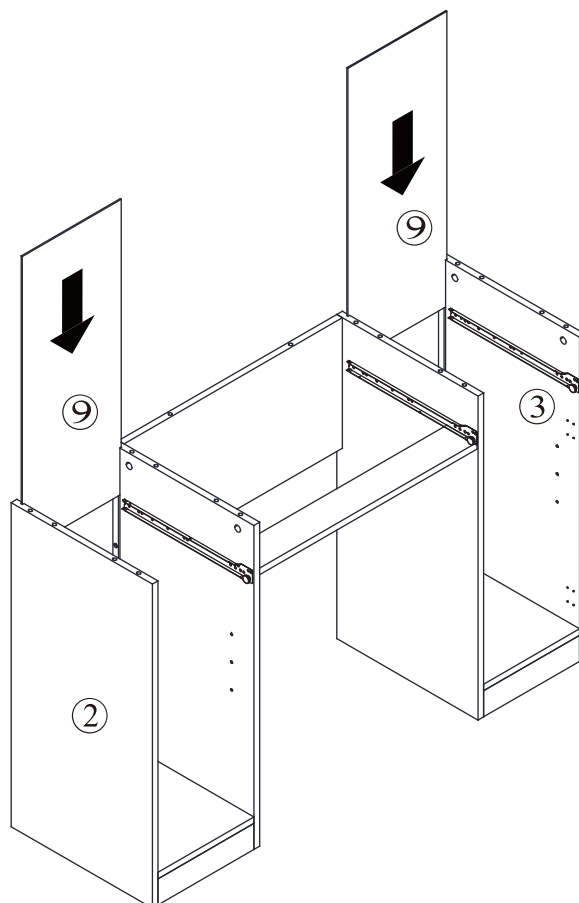

8

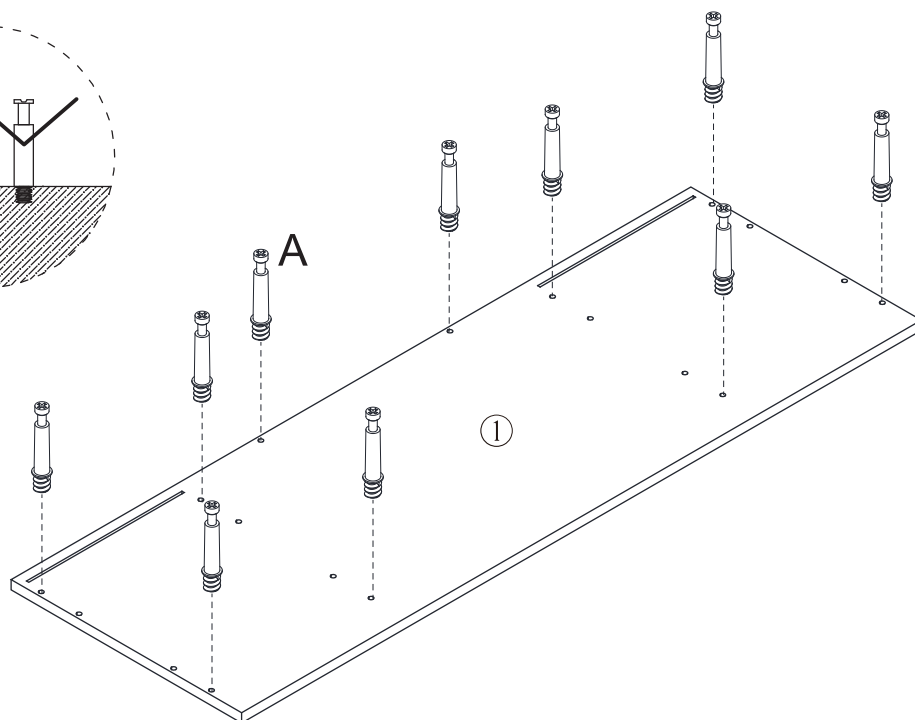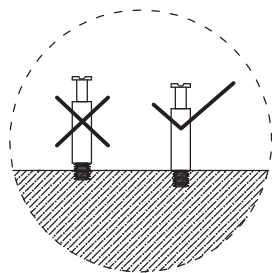


A X10



Ø6x35mm

9

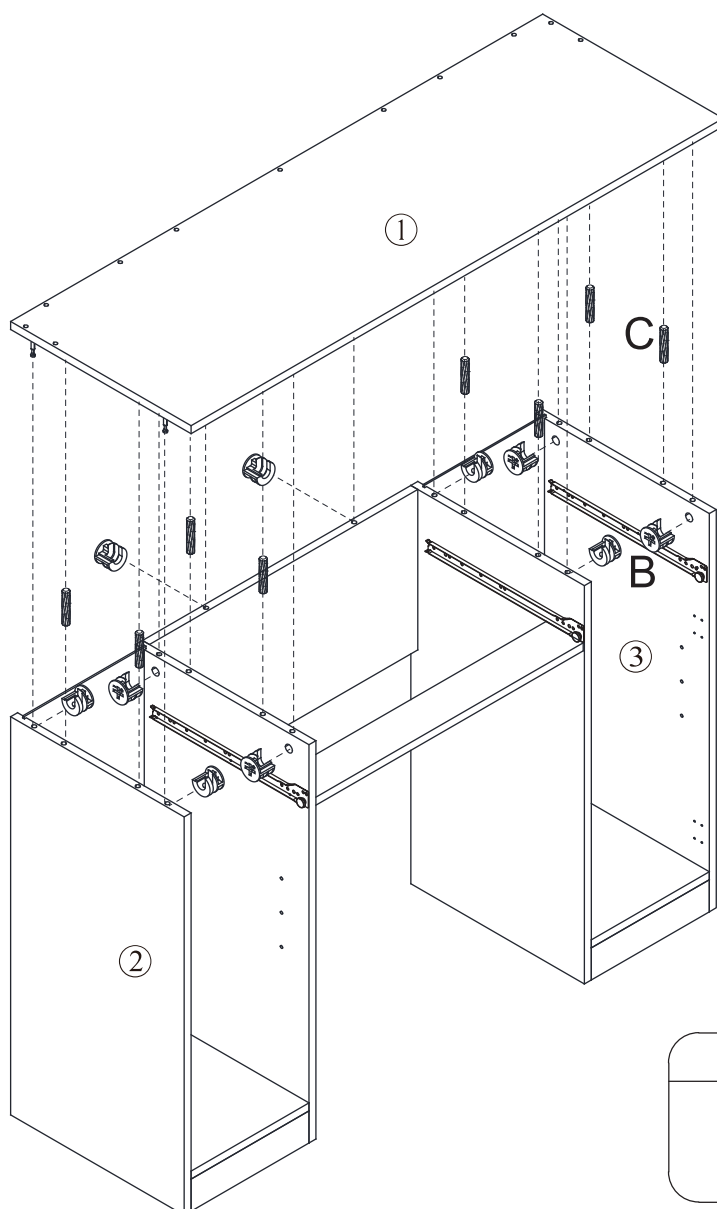

B X10





Ø15x10mm


C X8



10

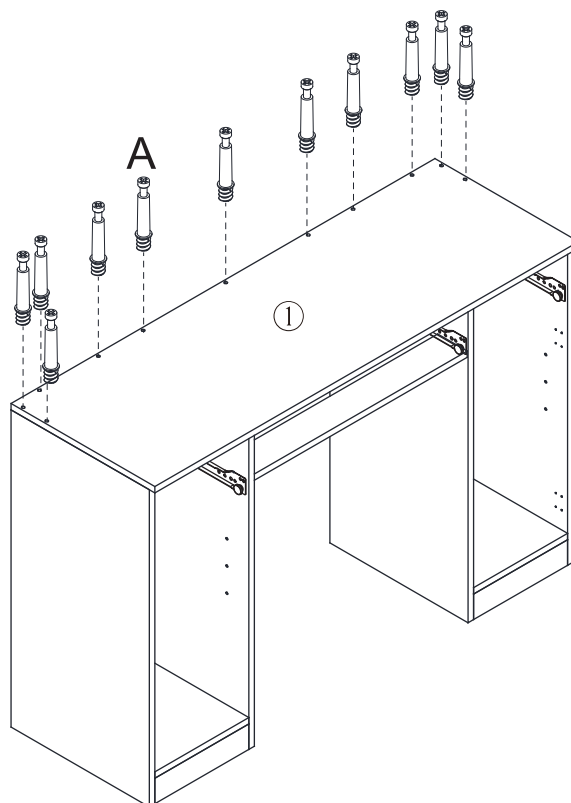
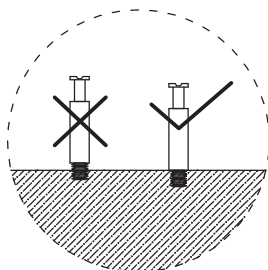


A X11



Ø6x35mm

11

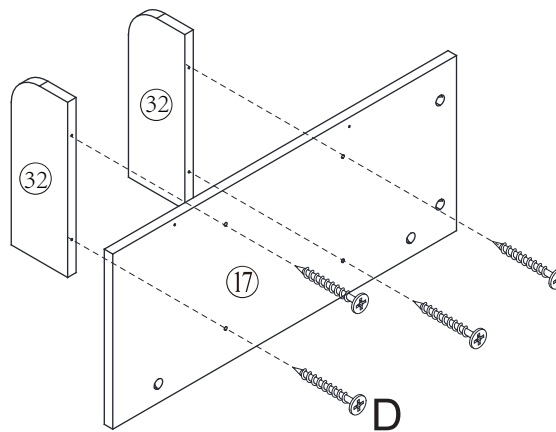
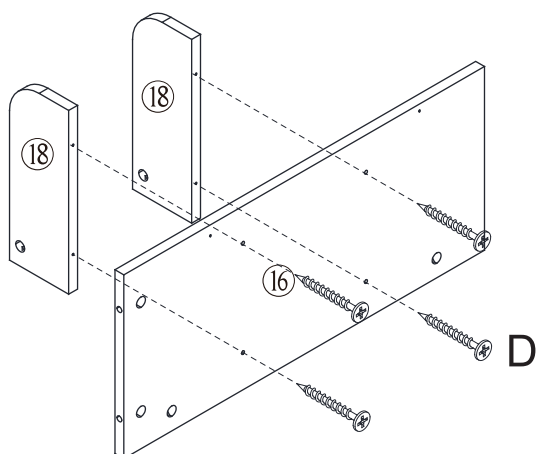


D X8




Ø4x35mm

12


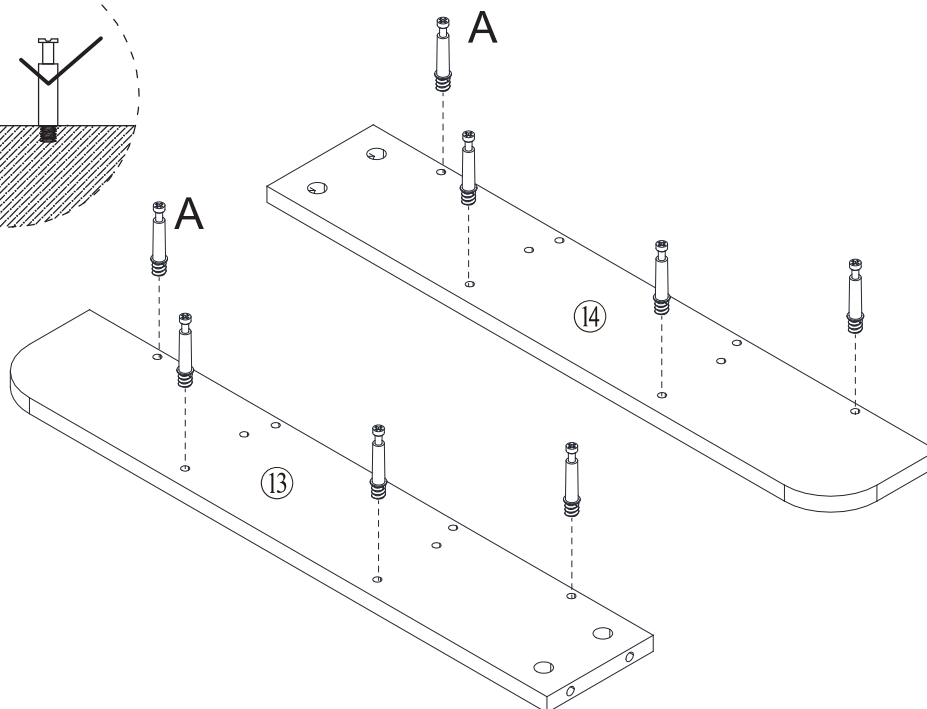
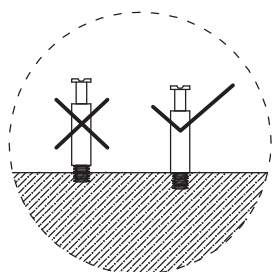


A X8



Ø6x35mm

13

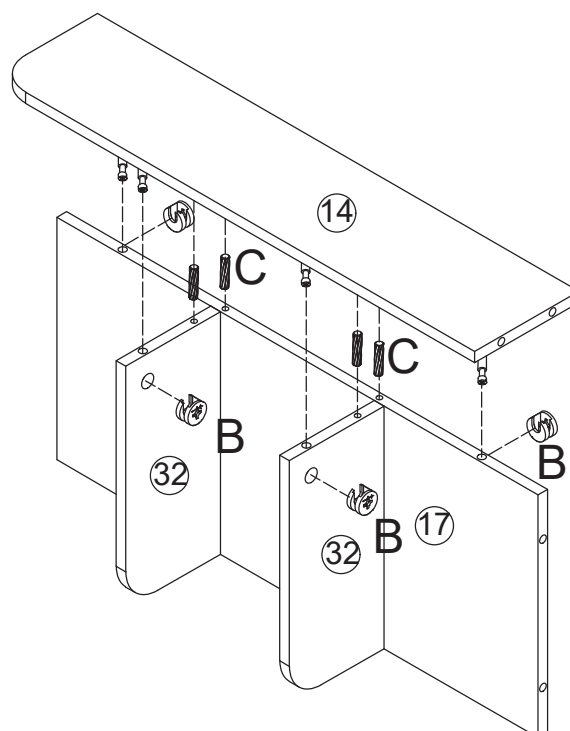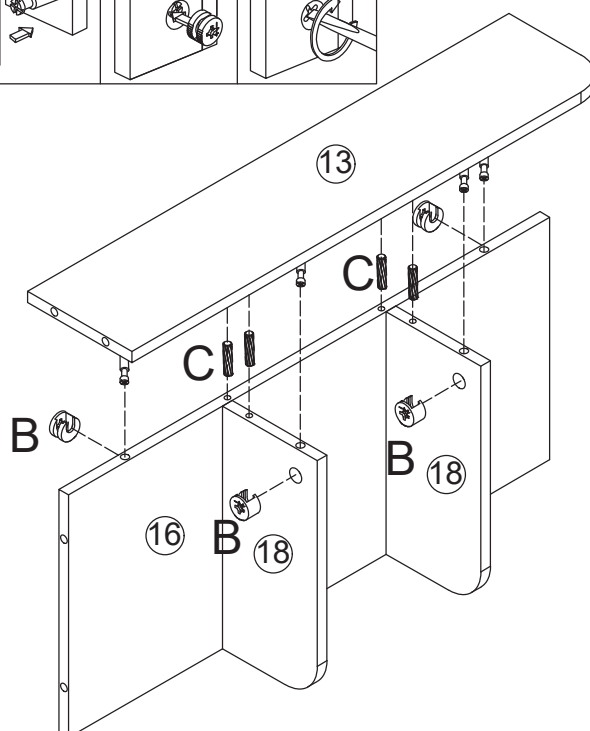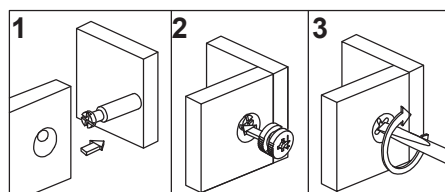

B X8






Ø15x10mm







C X8




14

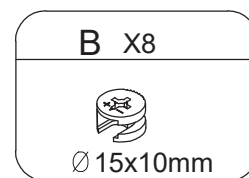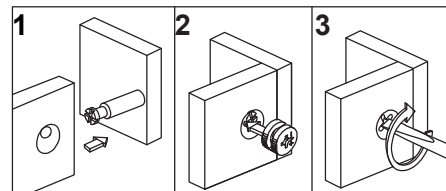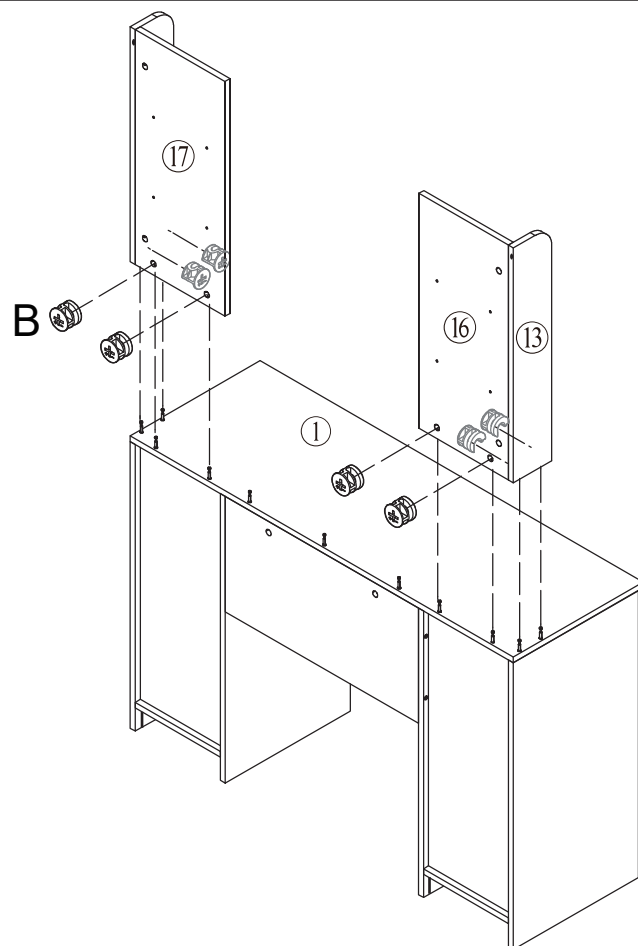

15

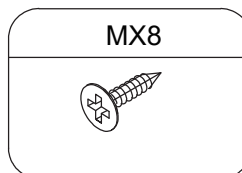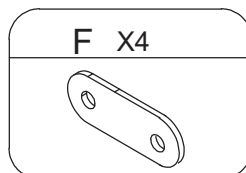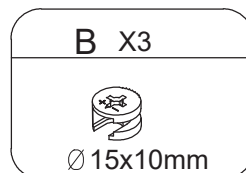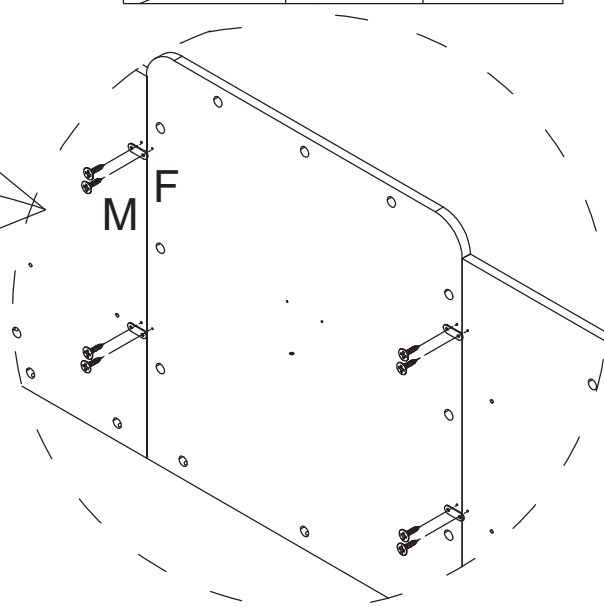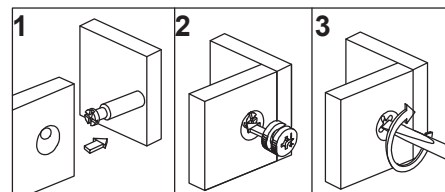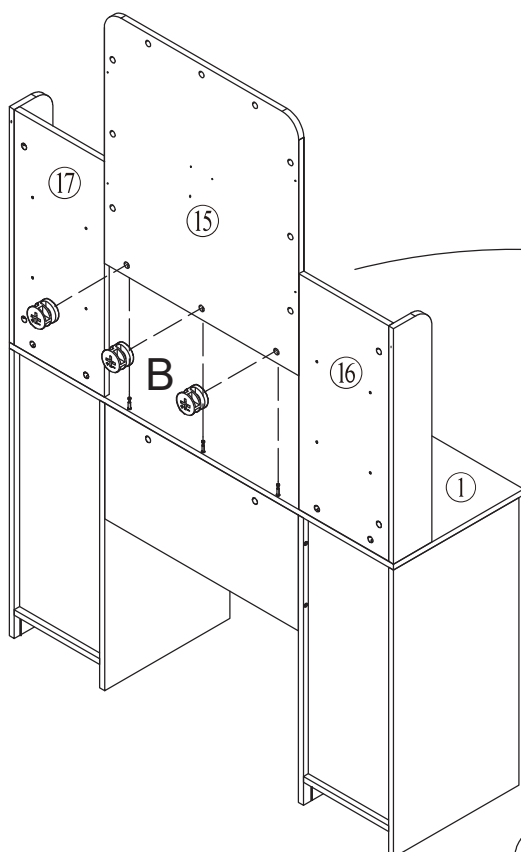


16

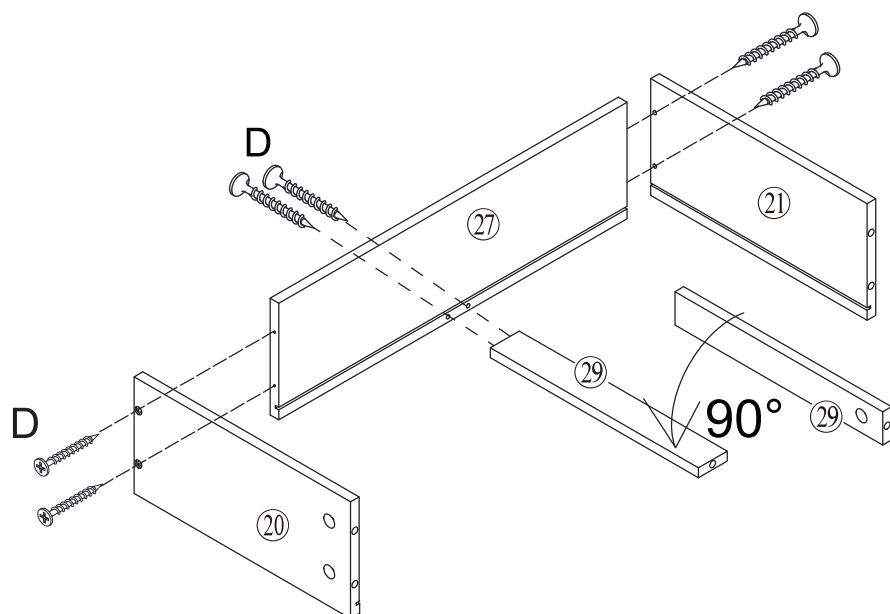


D X6




17

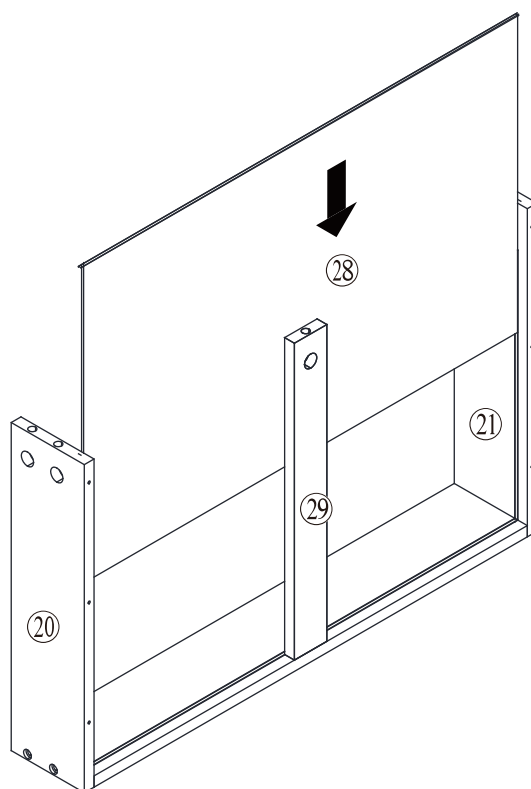


18

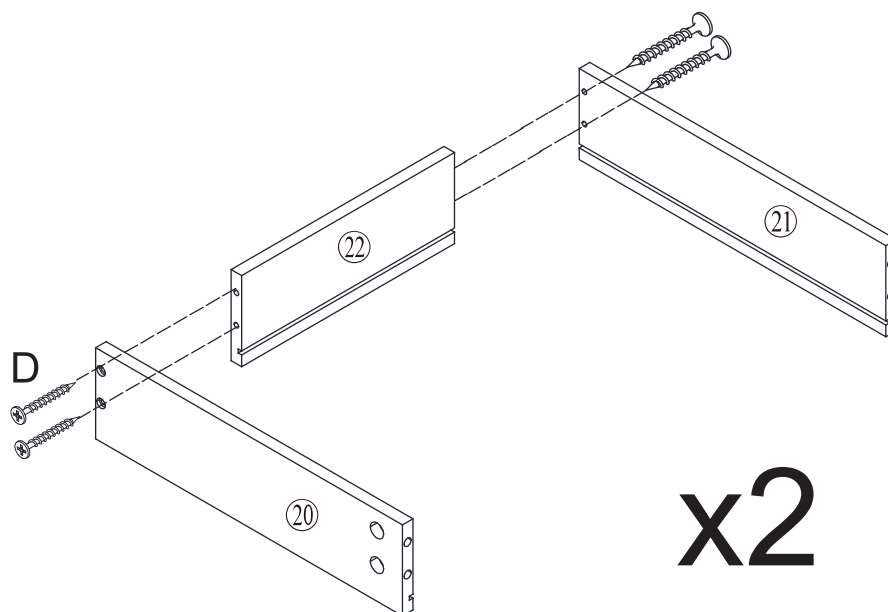

x2


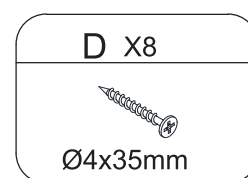


19

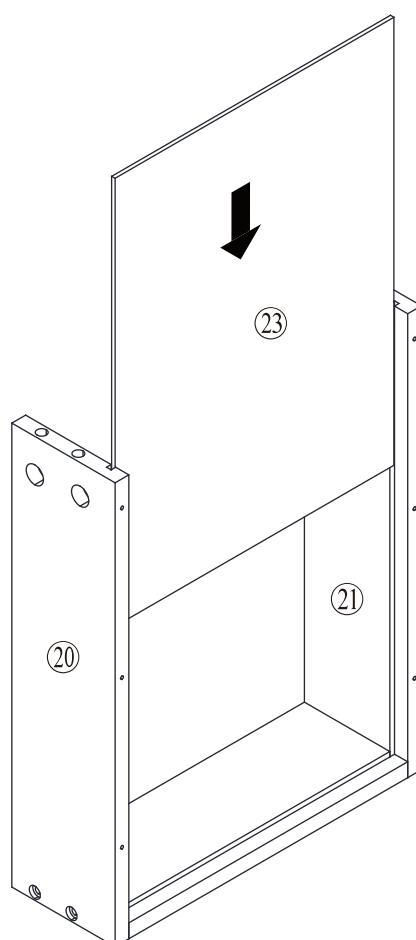

x2

20

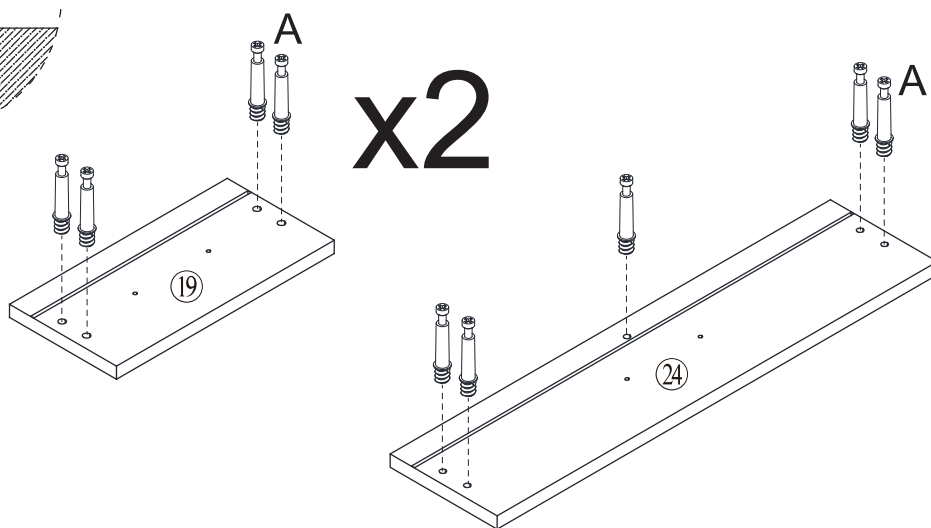
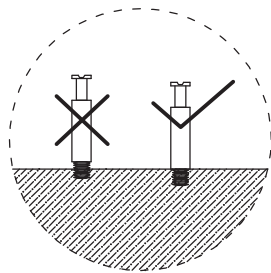


A X13



Ø6x35mm

21

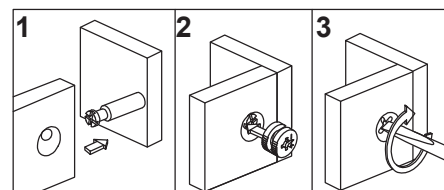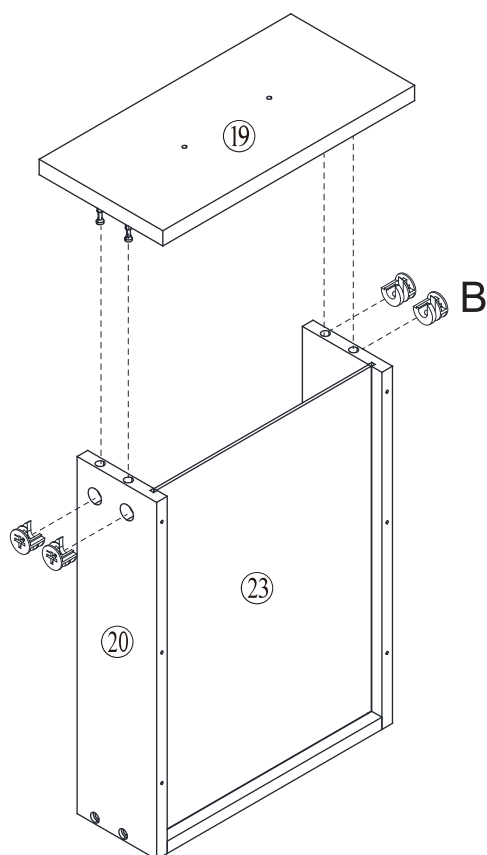


B X8



Ø15x10mm

22

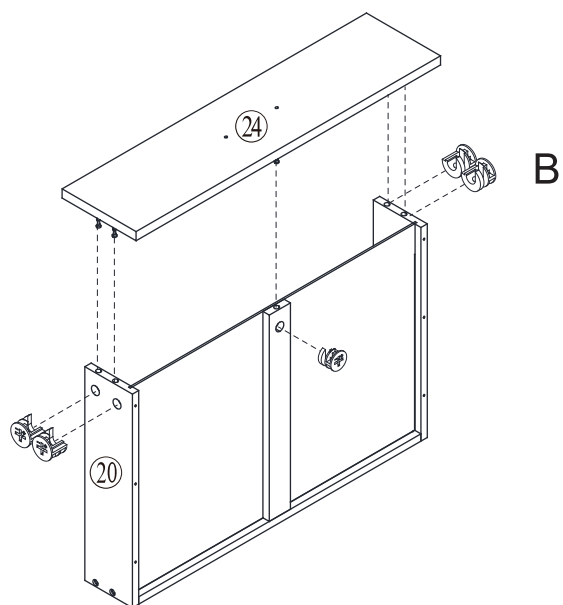


B X5




Ø15x10mm


23

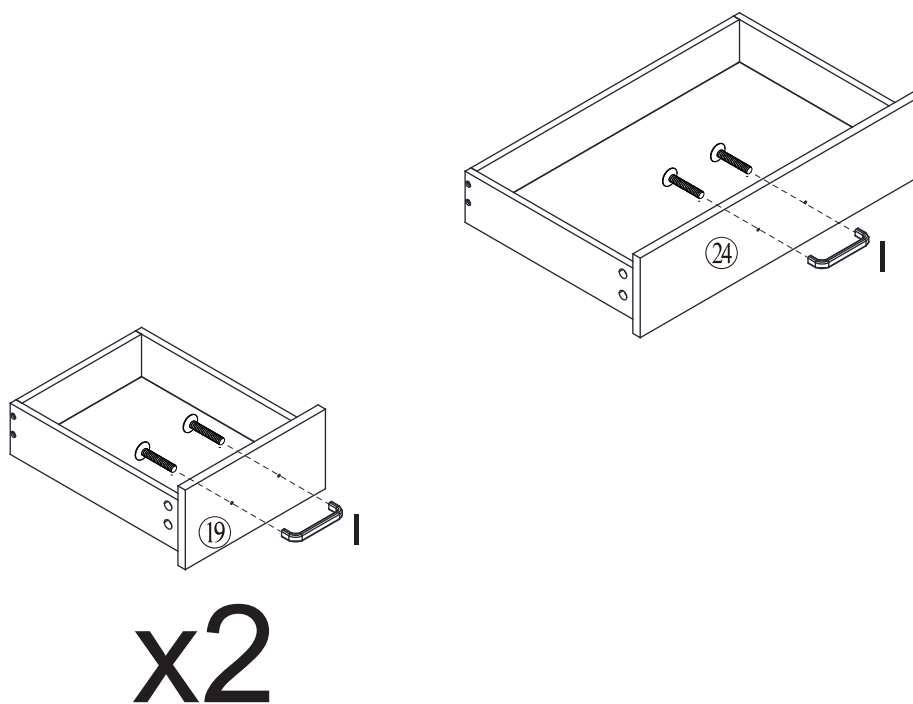


I X3




24

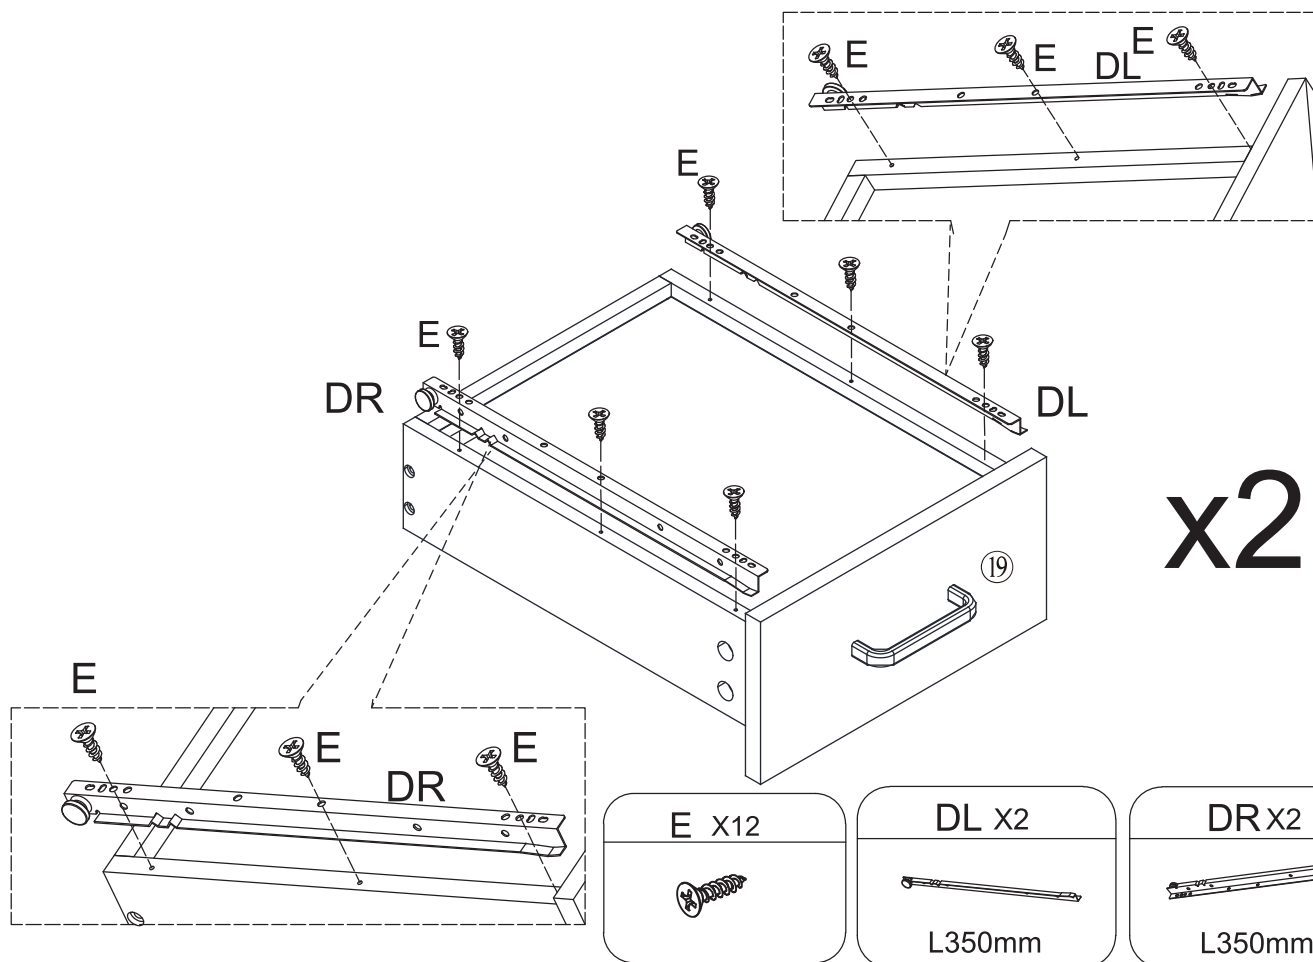



25

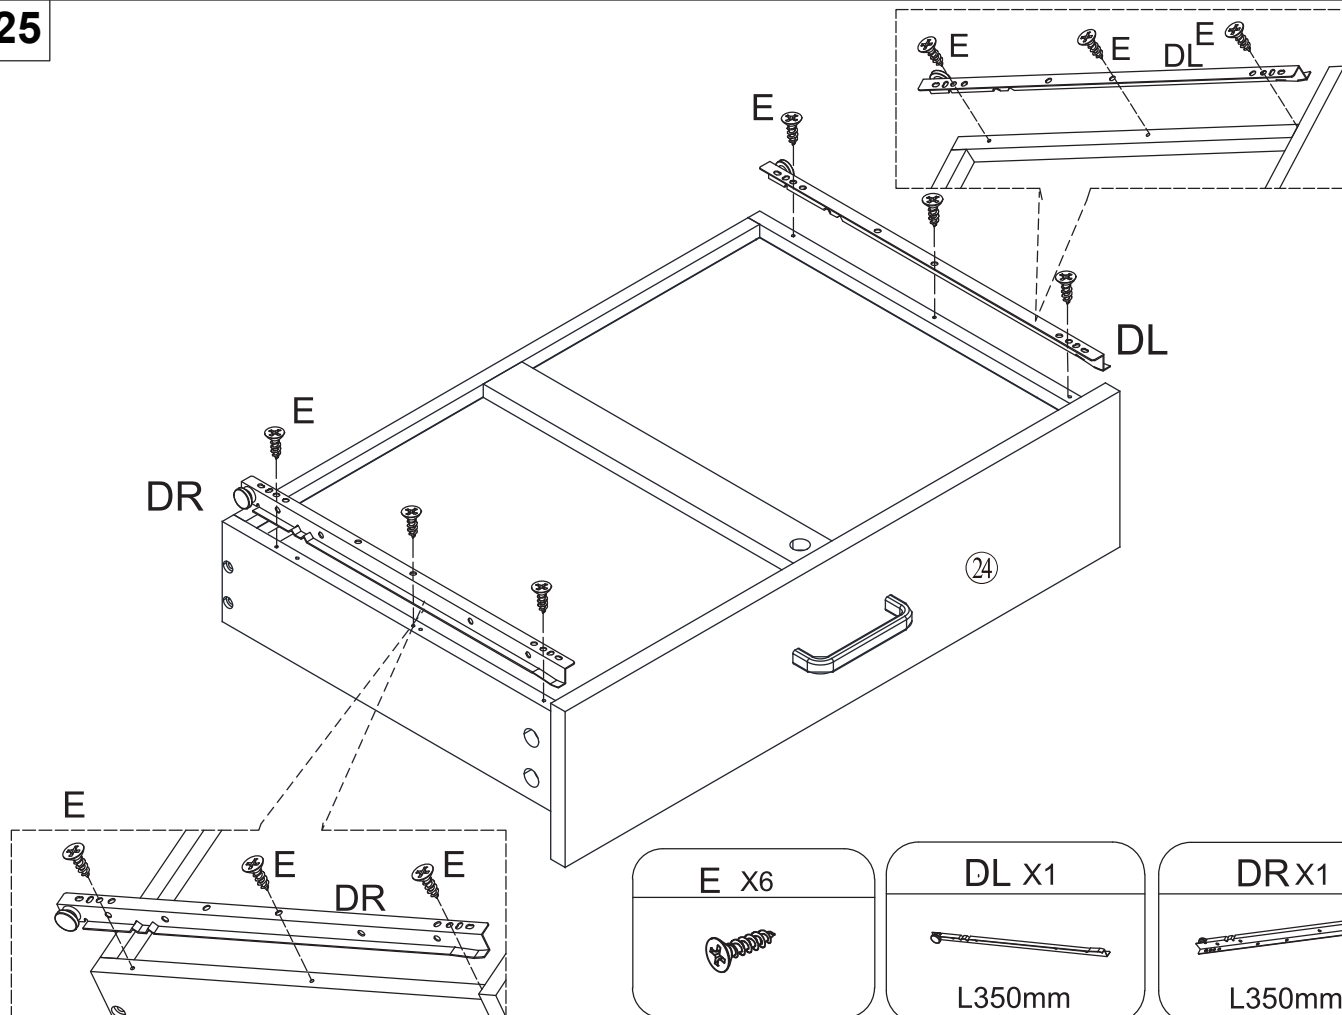


(1)

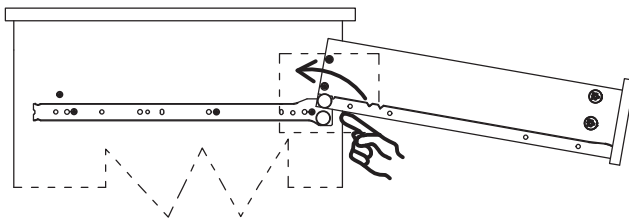


(2)

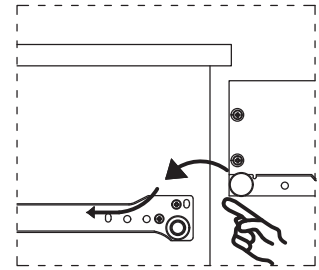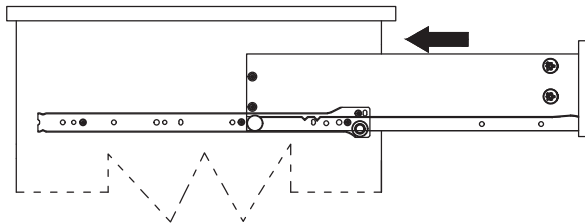


x3

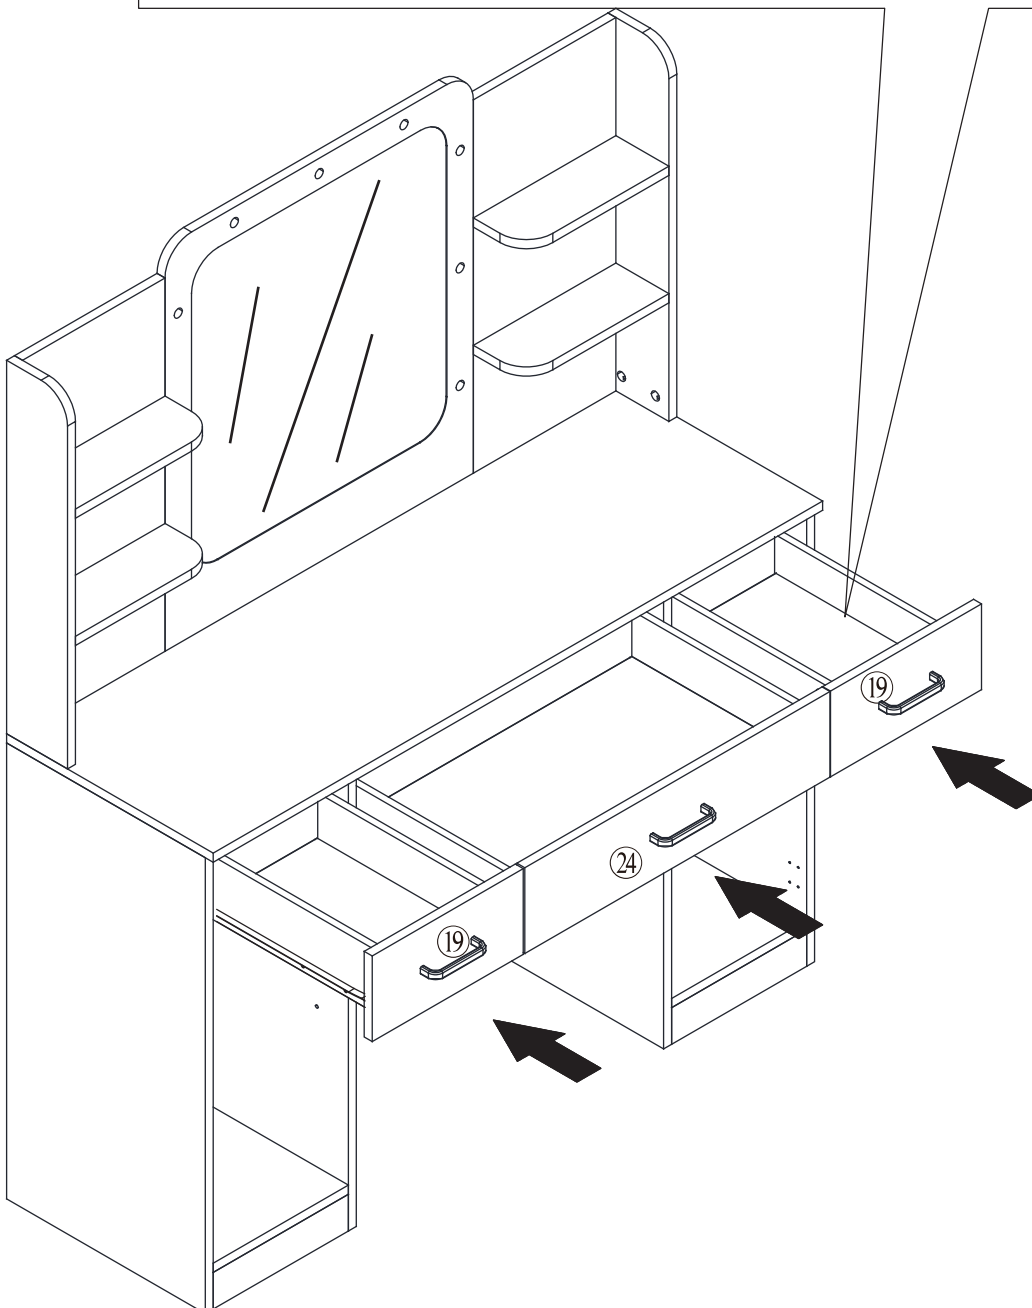


27

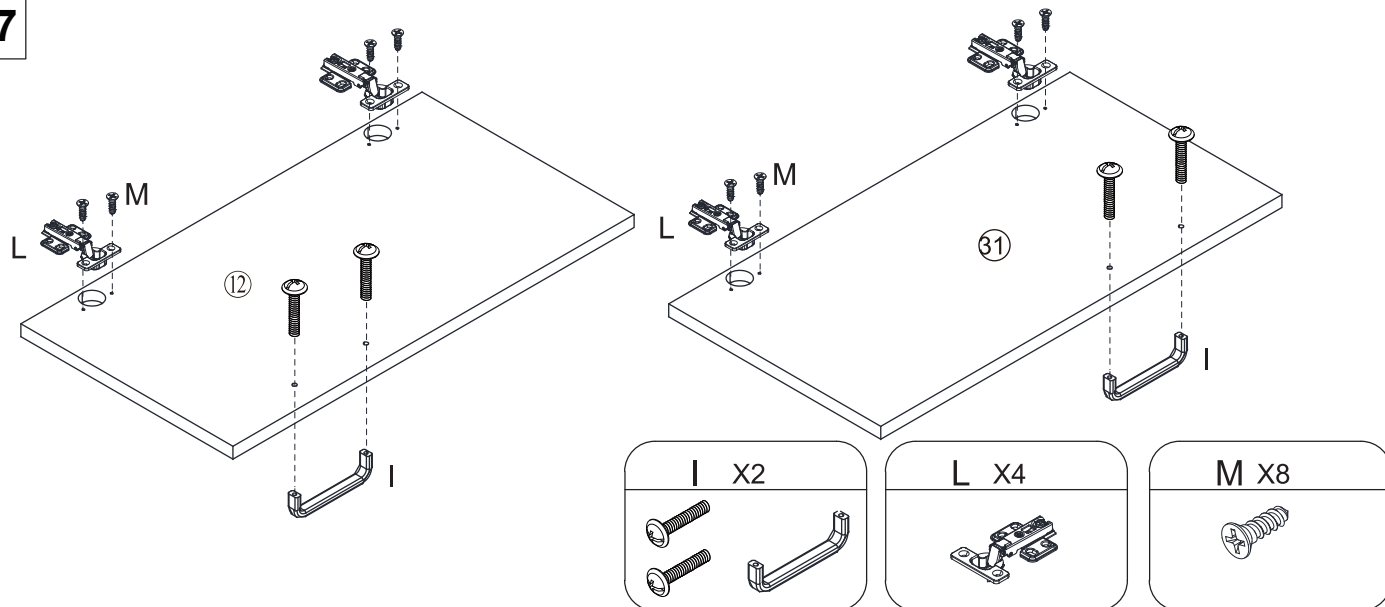


28

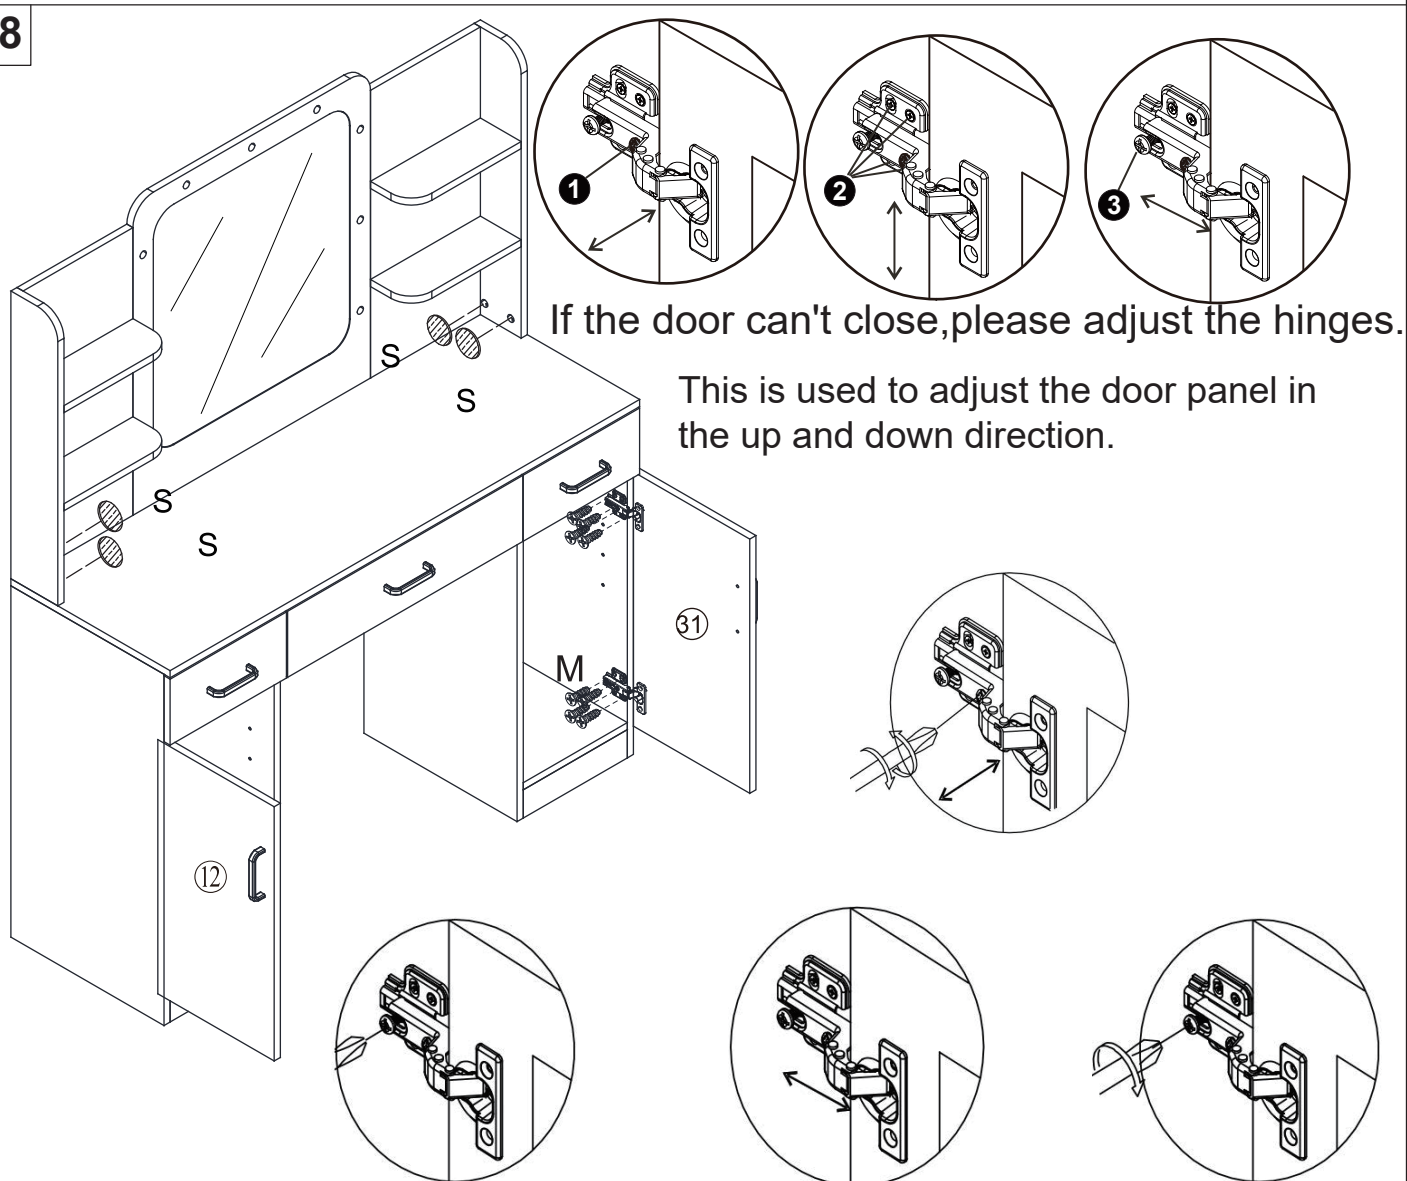





This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.

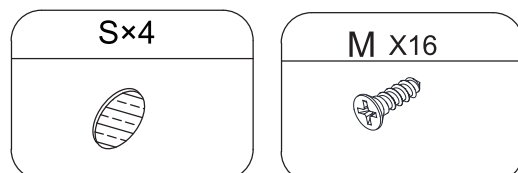






29

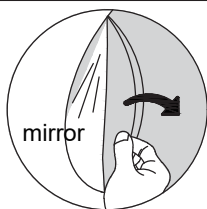








Please tear off the film on the outside of the mirror

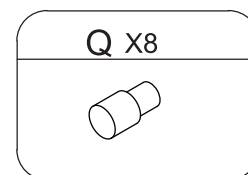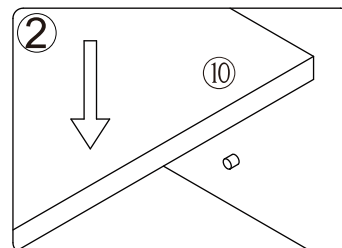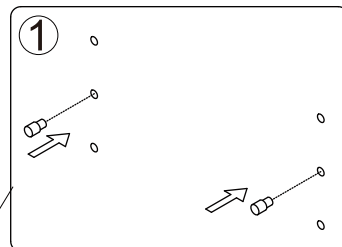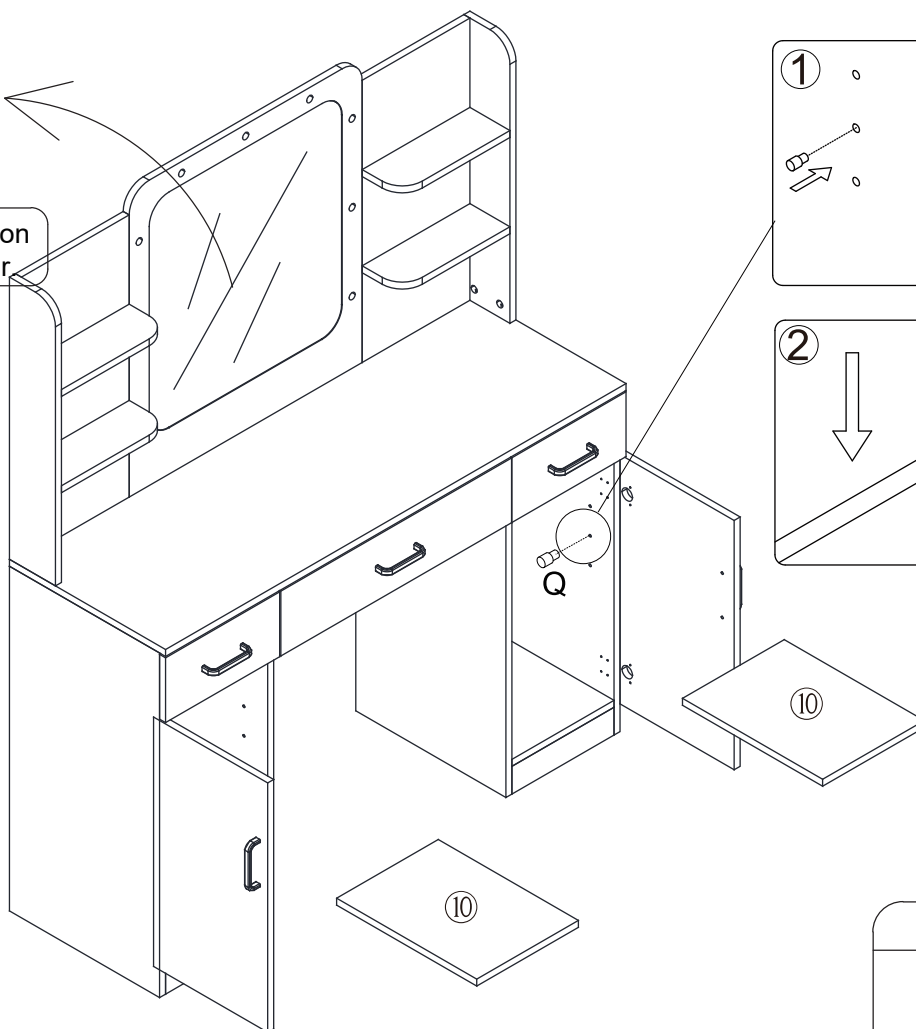


30

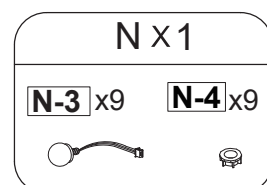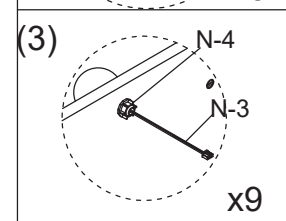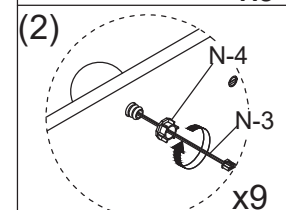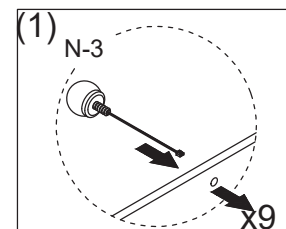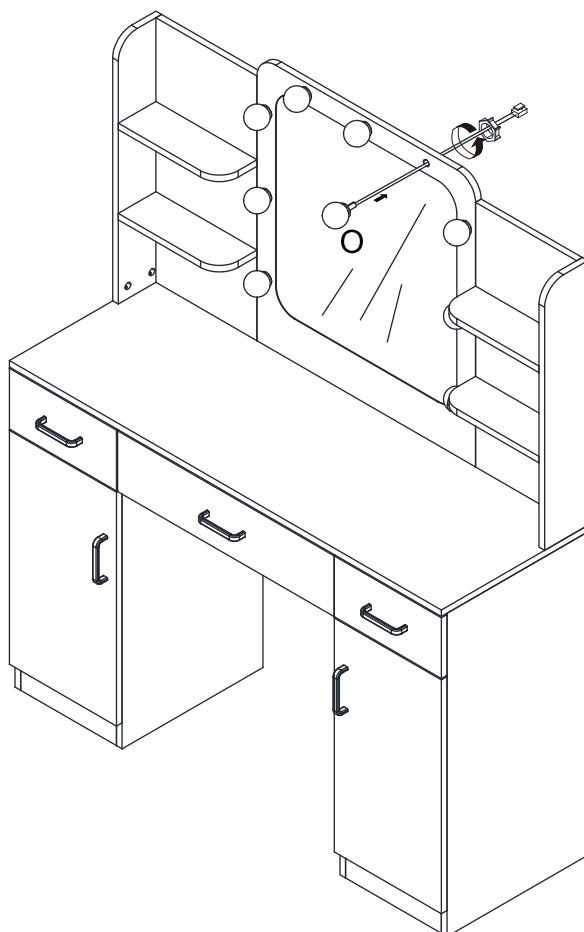

The location of the N-2 N-3 can be determined by your needs

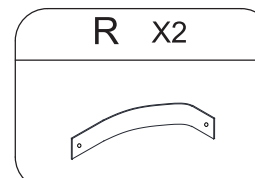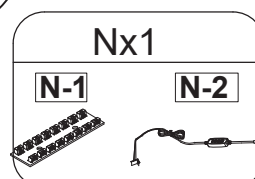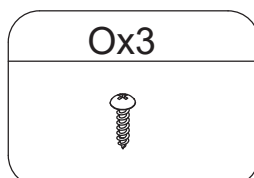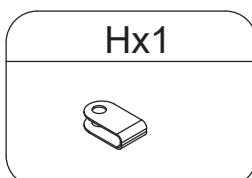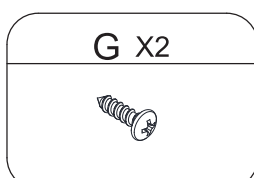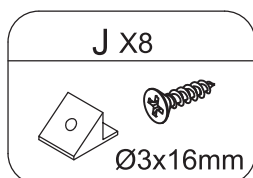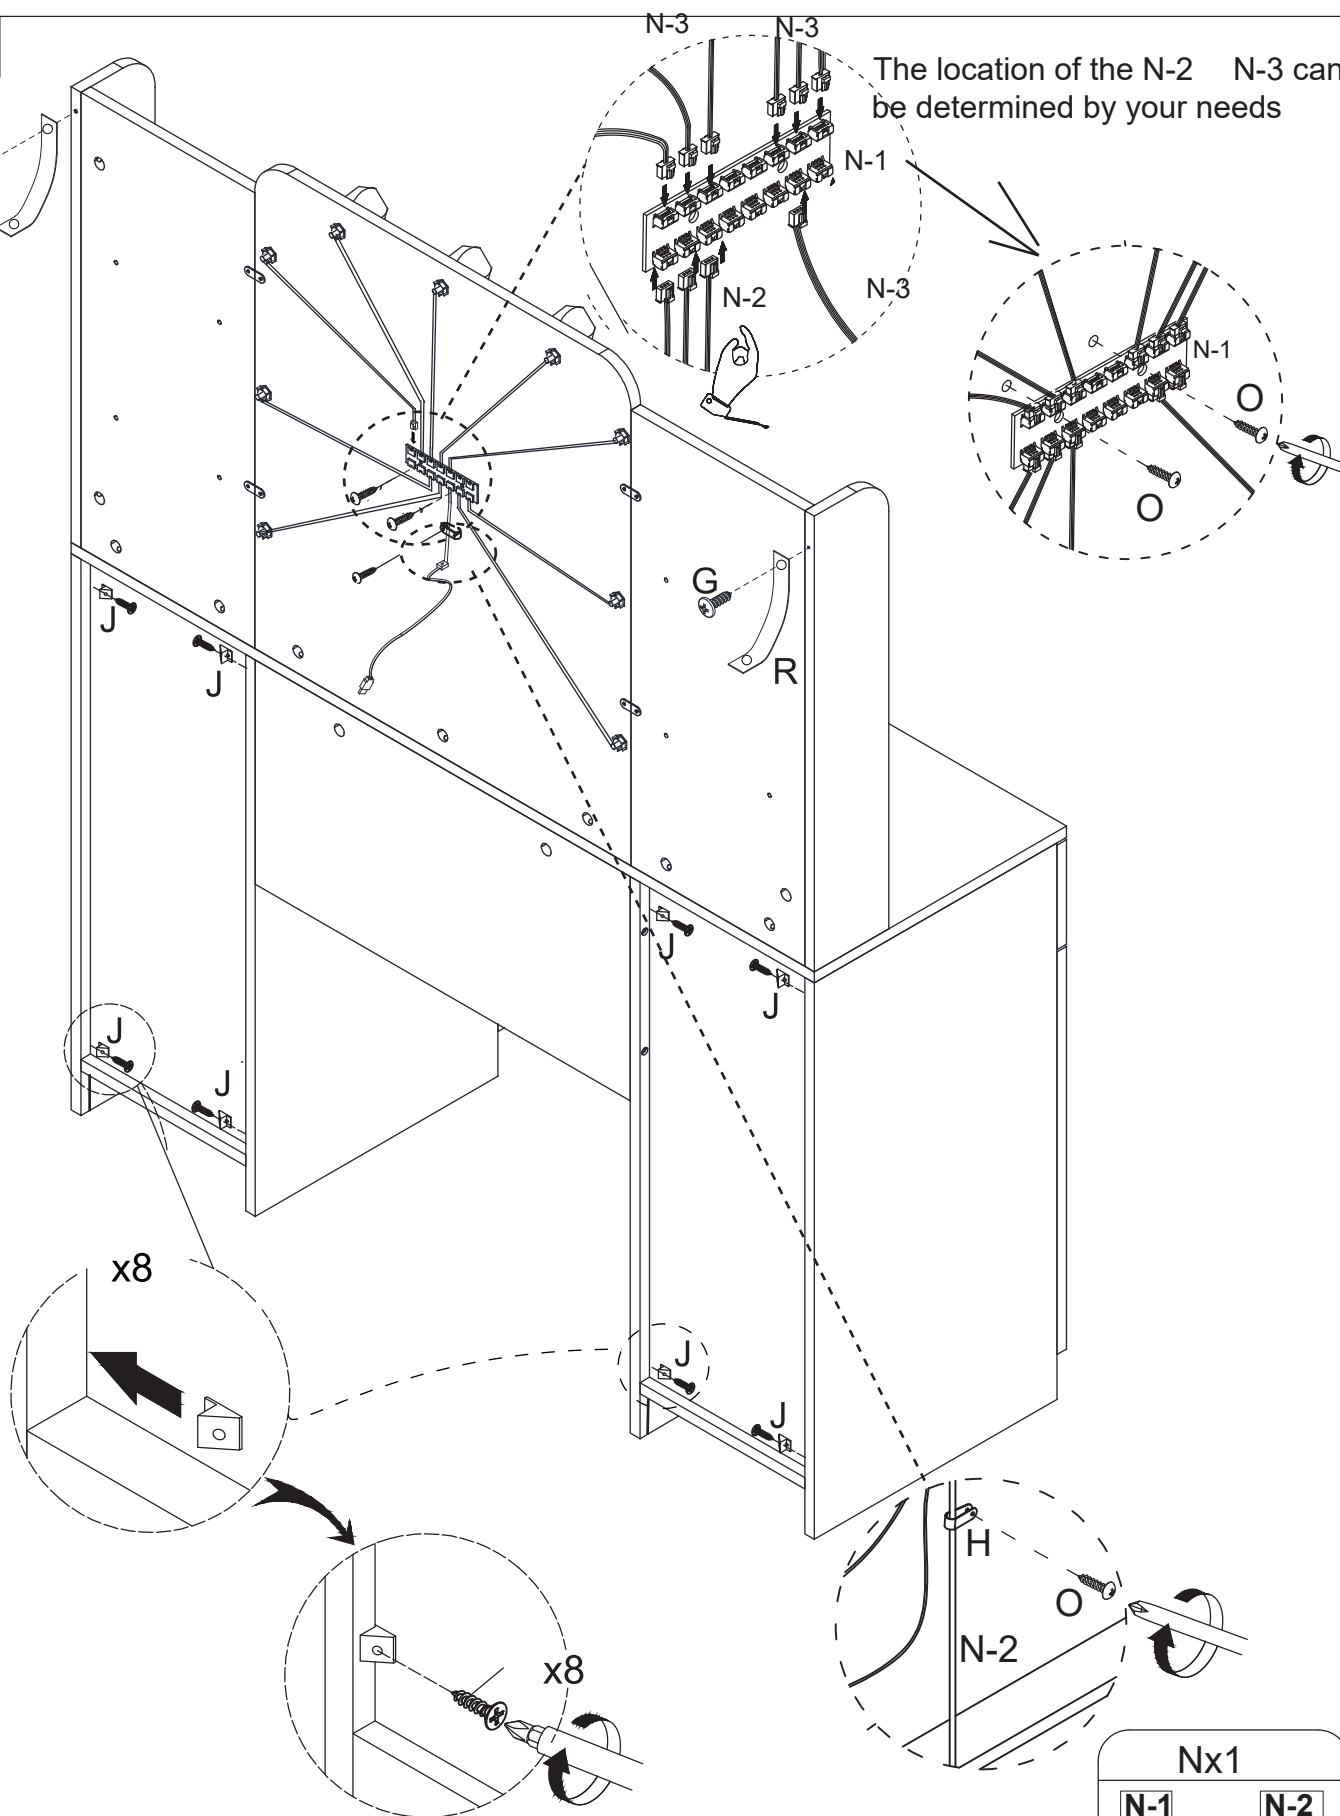

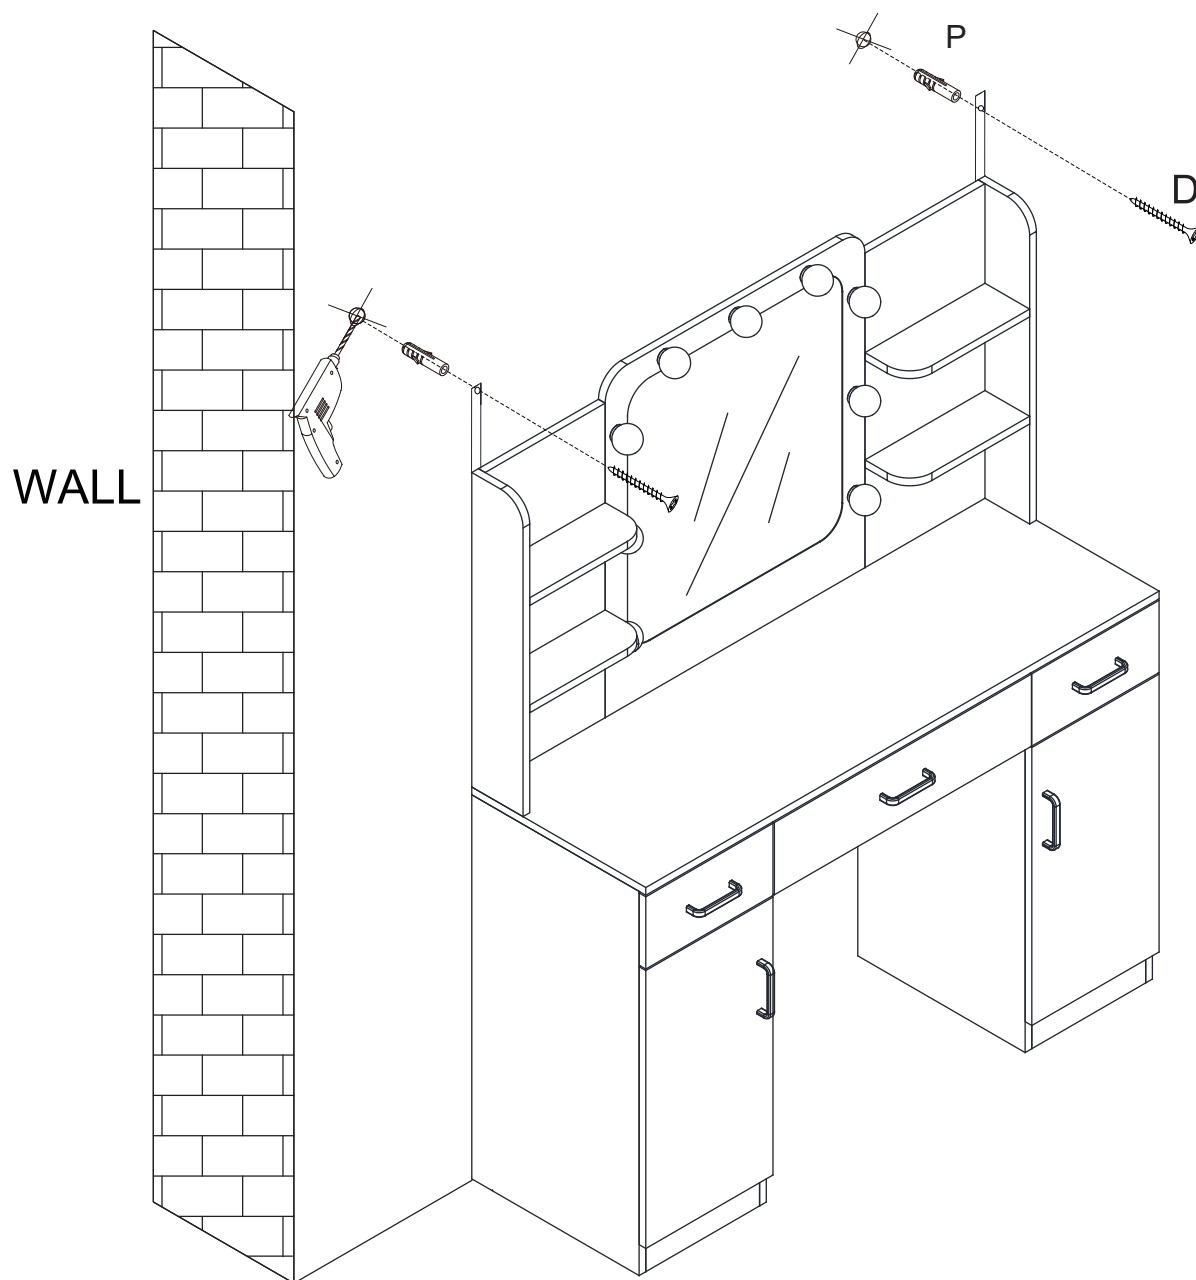

D X2




Ø4x35mm

P X2



Ø6x30mm

33

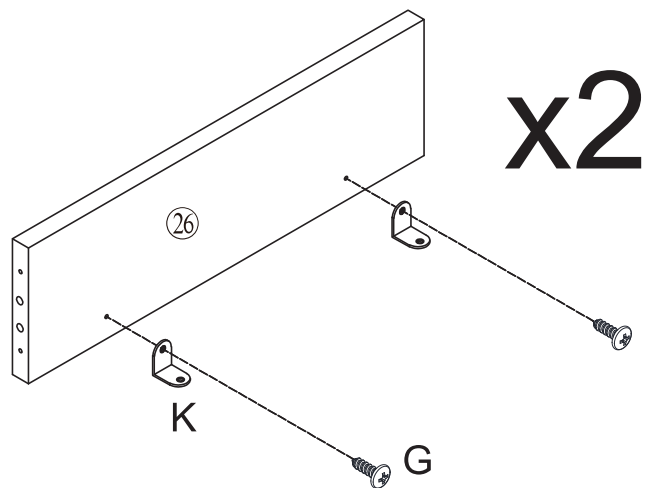


G X4



K X4



34

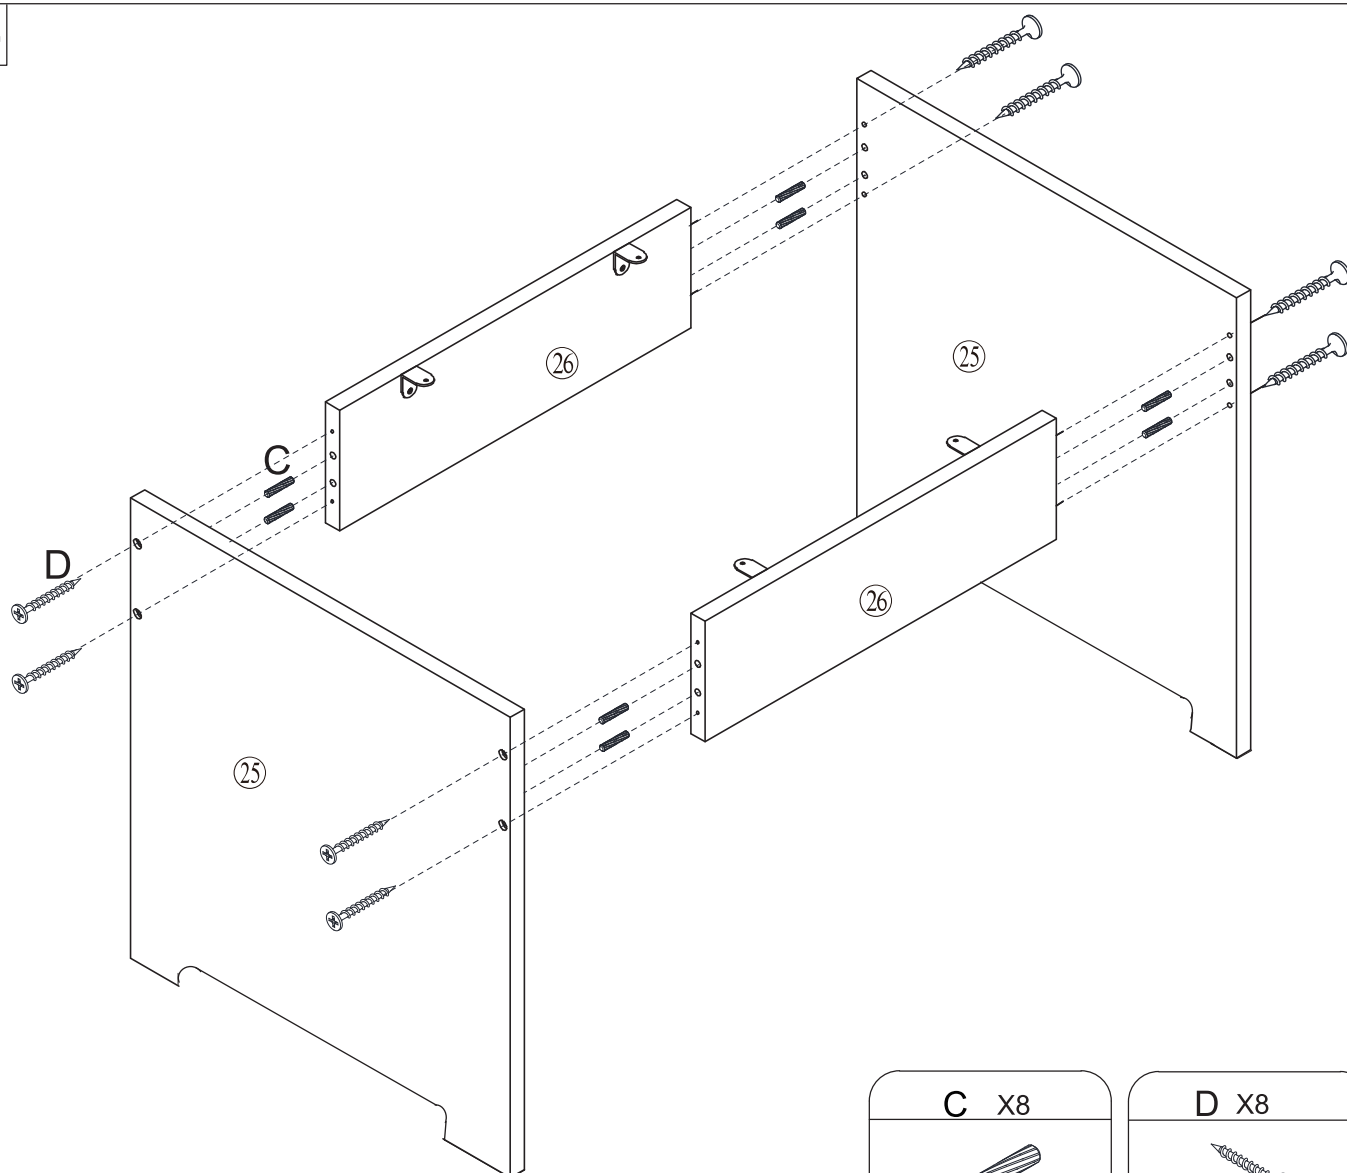


C X8



D X8



Ø4x35mm

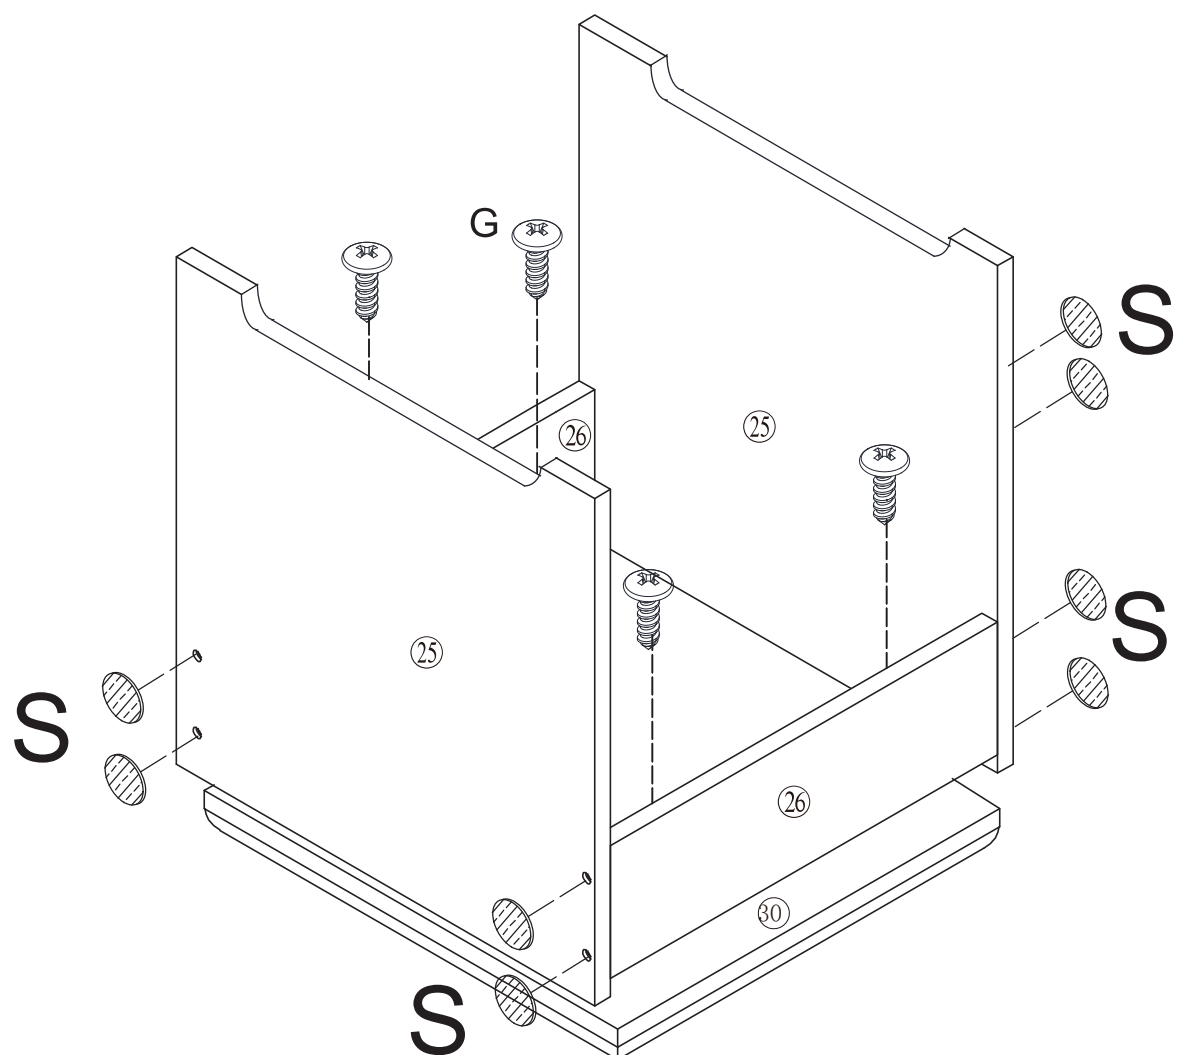


S×8



G X4



36

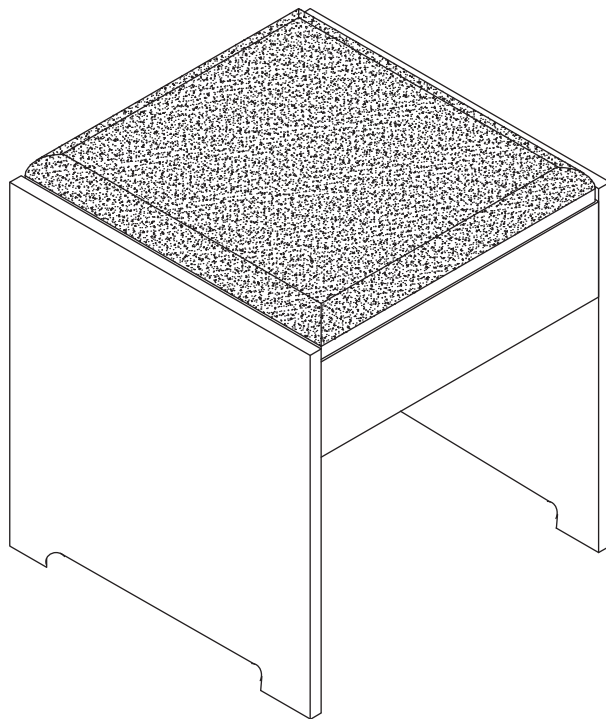

37

